

and components of both the yaw flight control and comm/nav systems are attached to the tail boom.

7.2.6 **Landing Gear**

The landing gear is of the fixed tubular skid-type comprised of two aluminum cross tubes passing transverse through the fuselage structure and to which aluminum longitudinal skid tubes are attached.

7.3 **COCKPIT ARRANGEMENT** (see Fig. 7-2)

7.3.1 **Instrument Panel and Console Layout** (see Fig. 7-3 thru 7-5)

The cockpit-mounted controls, indicators and annunciators shown in Figs. 7-3 thru 7-5 will be discussed later with their associated systems. Annunciator lights and their fault indications are summarized under lighting equipment. Electrical fuses referred to in this section are normally located on a fuse panel discussed later under the electrical system.

7.3.2 **Crew Member Seats**

Both pilot and copilot seats are adjustable fore-aft and fitted with lap safety belts.

7.4 **EMERGENCY EQUIPMENT**

7.4.1 **Engine Overheat and Fire Detection**

Two heat-sensitive detectors are located on each engine. When the ambient temperature in either engine compartment increases beyond limits, the detector contacts open and, via a control unit, energize the respective F warning light located on the instrument panel. Each system is powered from the Main Bus via a fuse.

7.4.2 **Portable Fire Extinguisher**

A portable fire extinguisher is normally mounted on a quick-release support on the forward edge of the pilot's seat. The fire extinguishing agent is released by a hand-operated lever on top of the extinguisher. Inadvertent discharge is prevented by a safety-pin on the actuating lever. Operating instructions are printed on the extinguisher.

7.4.3 **First Aid Kit**

A first aid kit is located either in a mount on the cabin floor or in a retaining net secured on the inside of the cargo compartment RH clamshell door.

EFFECTIVITY *For IAC-AR registered helicopters only*

7.4.4 **Emergency VHF Radio**

An emergency VHF radio, P/N 105-897936 located in the cockpit beneath the pilot's collective lever, shall be operated in accordance with its appropriate instructions.

EFFECTIVITY *ALL*

BO5 - 7 AAM,0


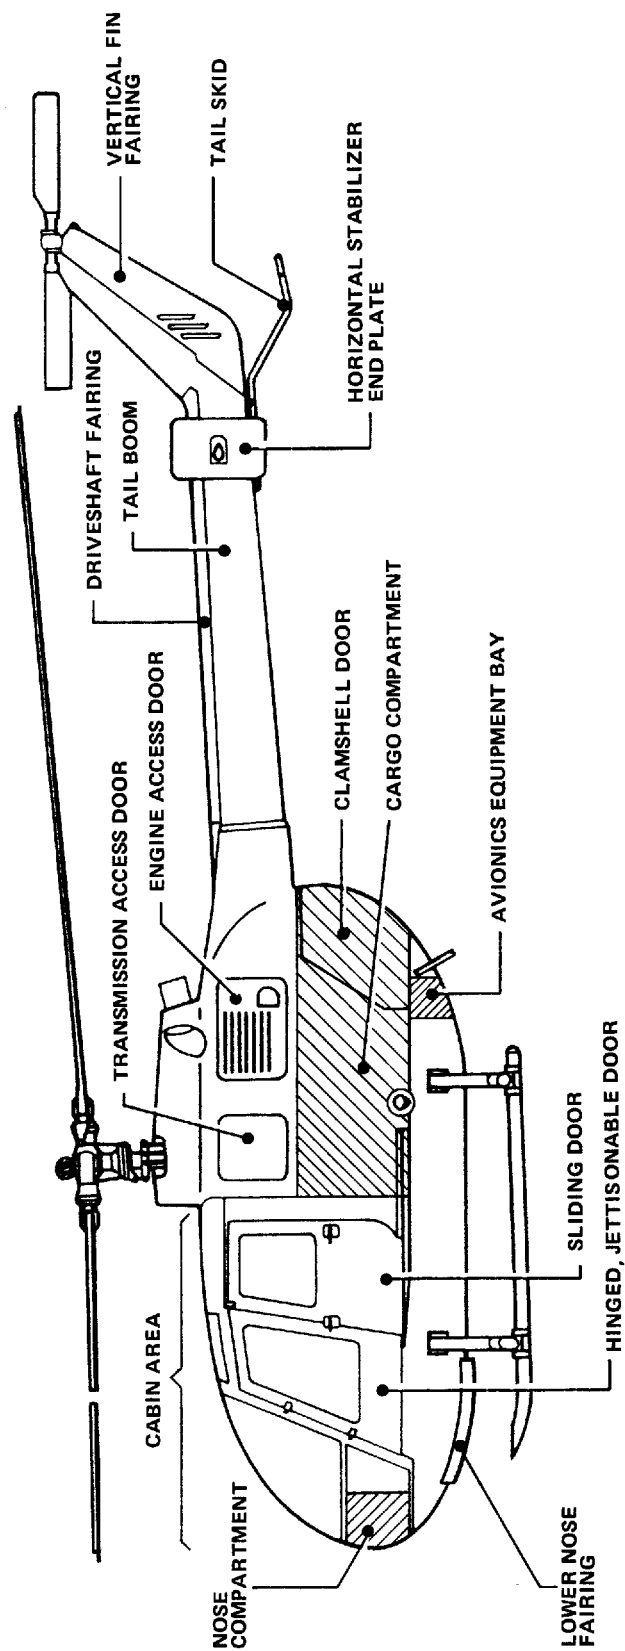


Fig. 7-1 Location Areas and Access

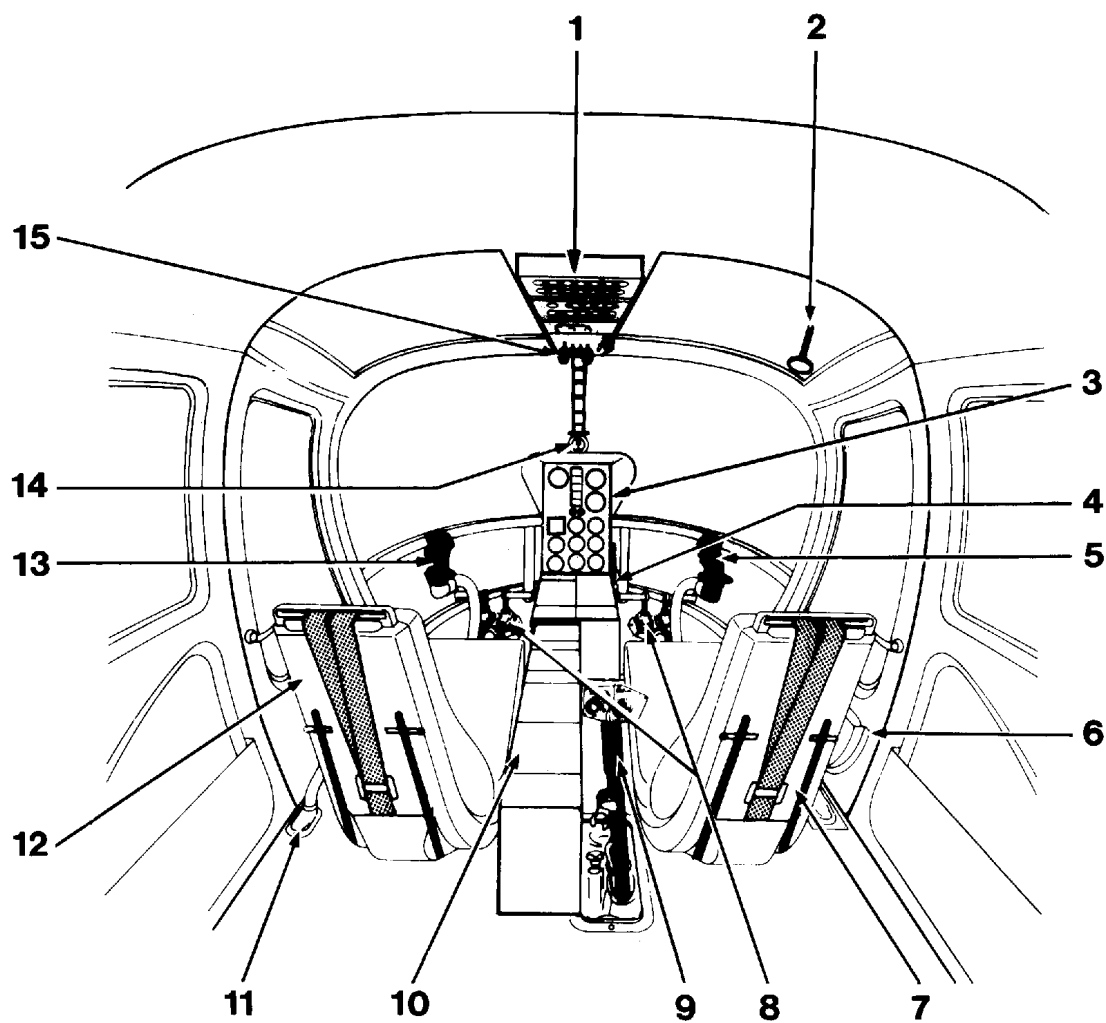

BO5-7 ACM,0

- | | | |
|-----------------------|-------------------------------|------------------------------|
| 1. OVERHEAD CONSOLE | 6. MAP POCKET | 11. COPILOT COLLECTIVE LEVER |
| 2. OAT INDICATOR | 7. PILOT SEAT | 12. COPILOT SEAT |
| 3. INSTRUMENT PANEL | 8. DIRECTIONAL CONTROL PEDALS | 13. COPILOT CYCLIC STICK |
| 4. SWITCH PANEL | 9. PILOT COLLECTIVE LEVER | 14. STANDBY MAGNETIC COMPASS |
| 5. PILOT CYCLIC STICK | 10. CENTER CONSOLE | 15. POWER LEVERS |

Fig. 7-2 Typical Cockpit Layout

BO5-7 ABM,0


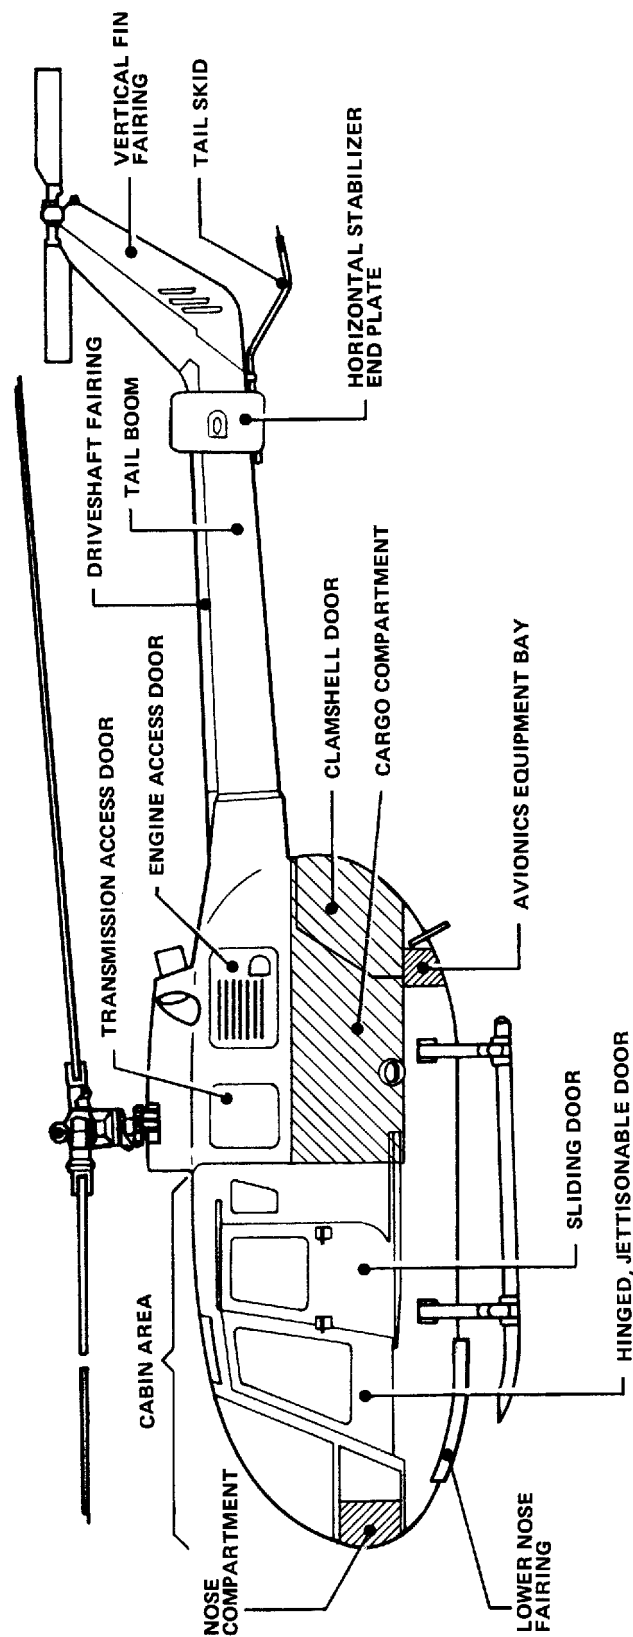


Fig. 7-1 Location Areas and Access

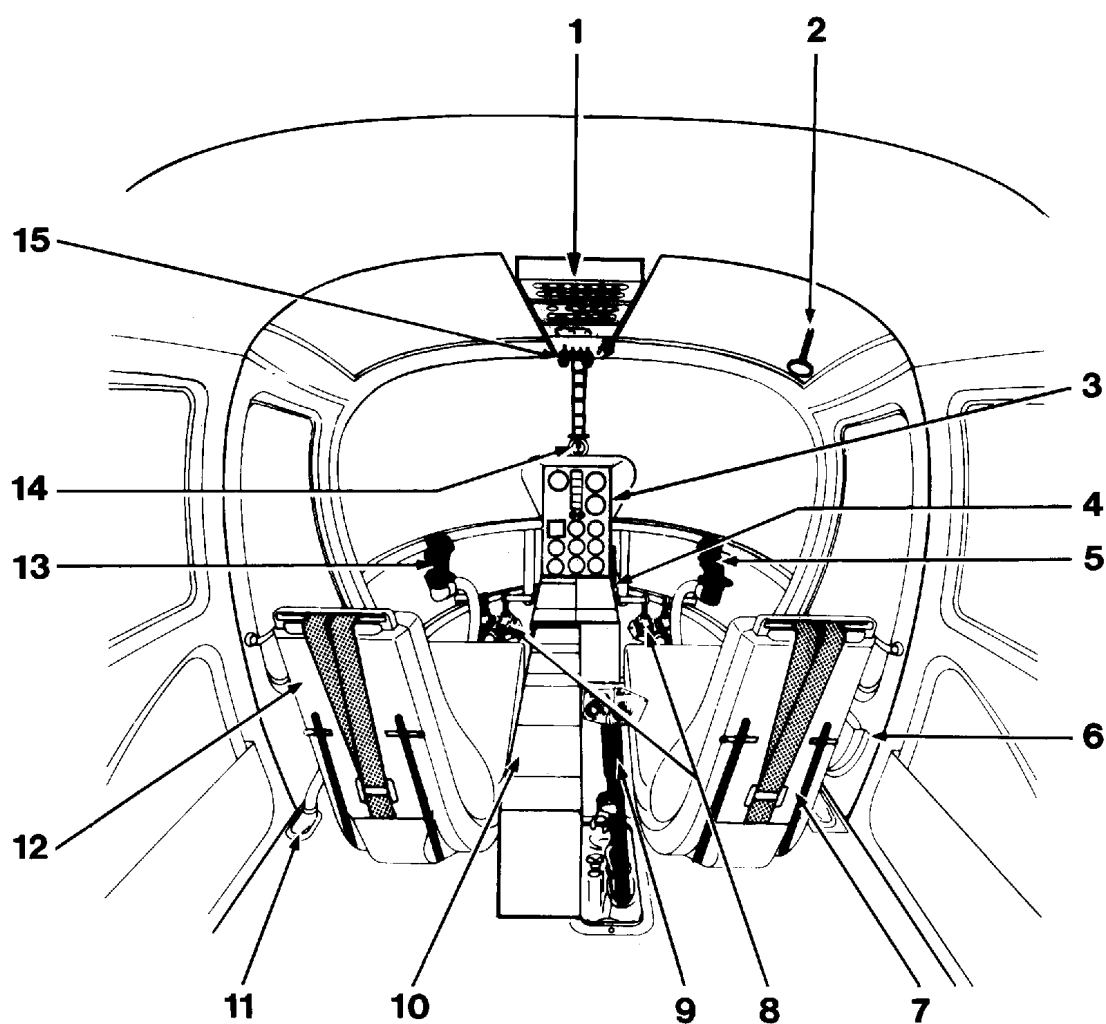


BO5-7 ACM,0

- | | | |
|-----------------------|-------------------------------|------------------------------|
| 1. OVERHEAD CONSOLE | 6. MAP POCKET | 11. COPILOT COLLECTIVE LEVER |
| 2. OAT INDICATOR | 7. PILOT SEAT | 12. COPILOT SEAT |
| 3. INSTRUMENT PANEL | 8. DIRECTIONAL CONTROL PEDALS | 13. COPILOT CYCLIC STICK |
| 4. SWITCH PANEL | 9. PILOT COLLECTIVE LEVER | 14. STANDBY MAGNETIC COMPASS |
| 5. PILOT CYCLIC STICK | 10. CENTER CONSOLE | 15. POWER LEVERS |

Fig. 7-2 Typical Cockpit Layout

BO5-7 AEM,0

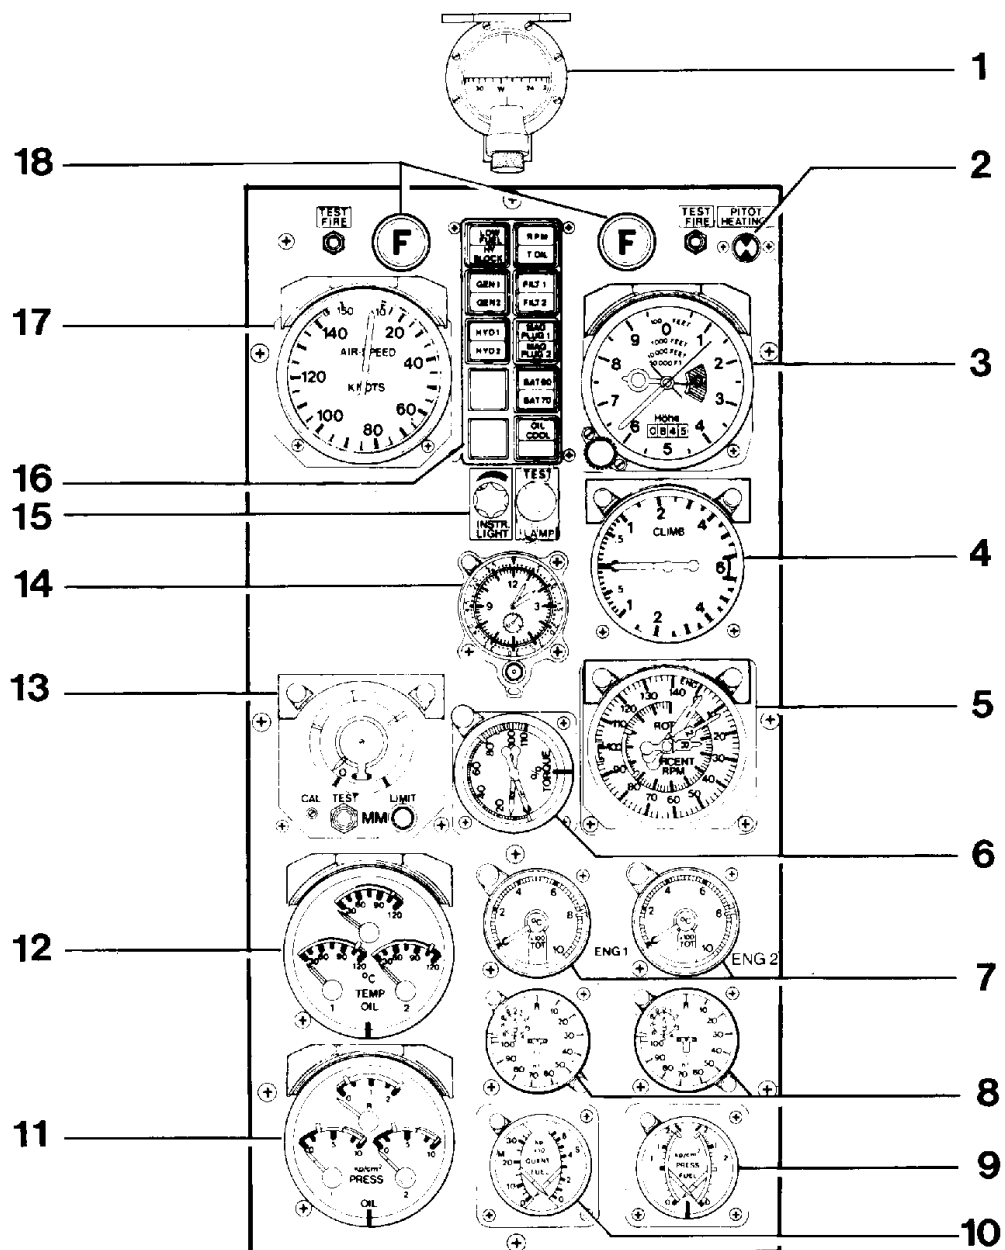

- | | | |
|-----------------------------|--------------------------------------|--|
| 1. STANDBY MAGNETIC COMPASS | 8. ENGINE N ₁ INDICATORS | 14. CLOCK |
| 2. PITOT HEAT INDICATOR | 9. FUEL PRESSURE INDICATOR | 15. INSTRUMENT LIGHT RHEOSTAT AND ANNUNCIATOR LIGHT LAMP TEST PUSHBUTTON |
| 3. ALTIMETER | 10. FUEL QUANTITY INDICATOR | 16. WARNING LIGHT SEGMENTS |
| 4. VERTICAL SPEED INDICATOR | 11. TRIPLE OIL PRESSURE INDICATOR | 17. AIRSPEED INDICATOR |
| 5. TRIPLE TACHOMETER | 12. TRIPLE OIL TEMPERATURE INDICATOR | 18. ENGINE FIRE WARNING LIGHTS WITH TEST FIRE PUSHBUTTONS |
| 6. DUAL TORQUE INDICATOR | 13. MAST MOMENT INDICATOR | |
| 7. ENGINE TOT INDICATORS | | |

Fig. 7-3 Typical Instrument Panel


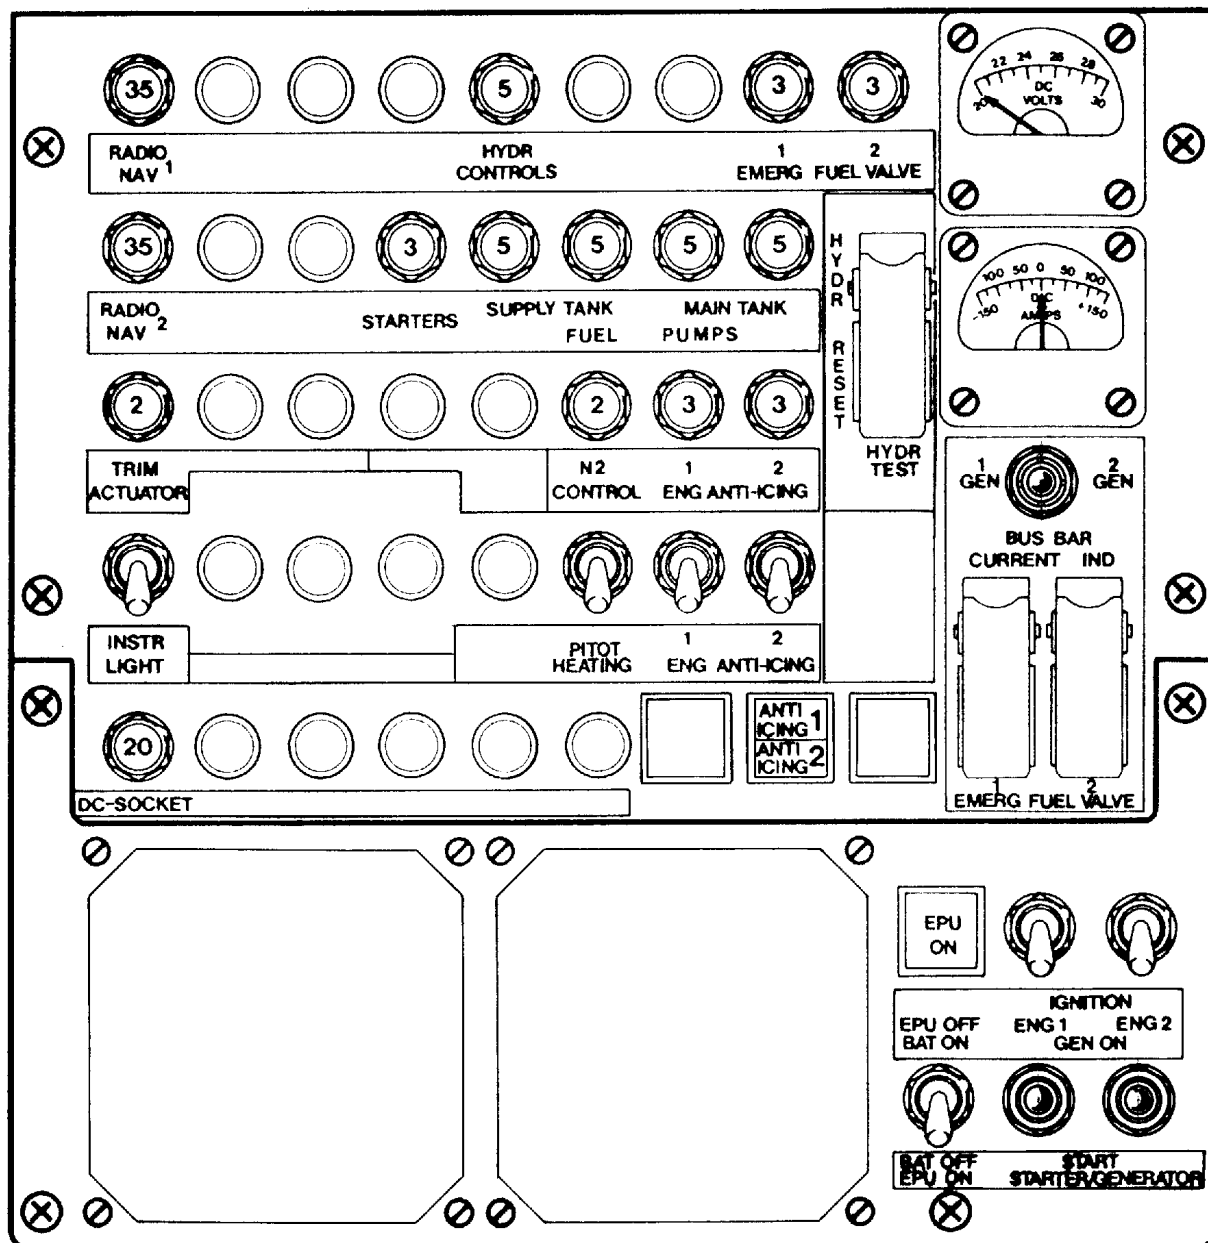


Fig. 7-4 Typical Center Console Switch Panel

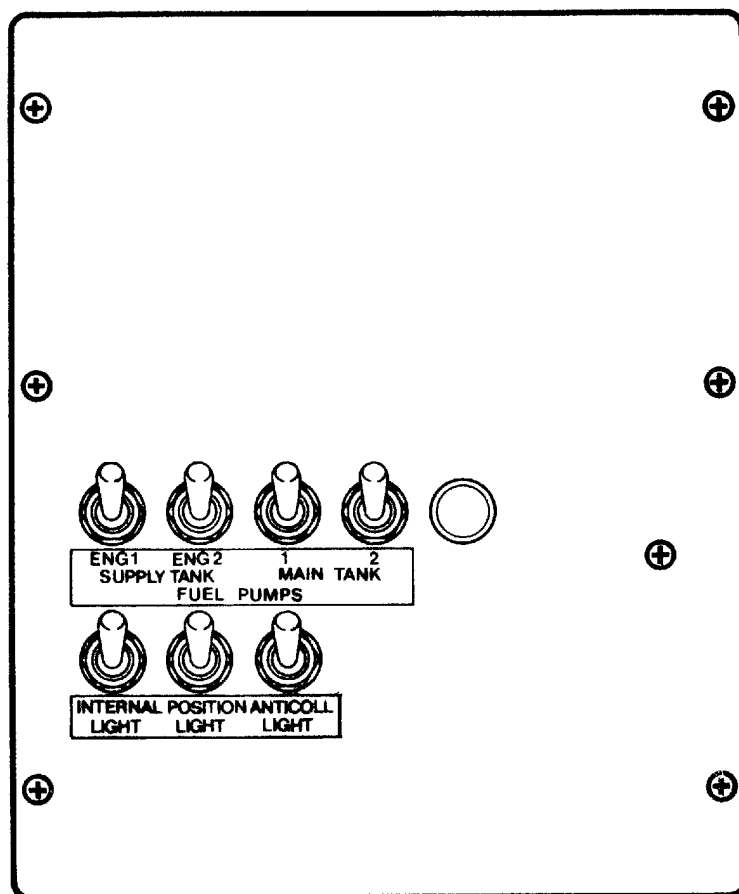

B05-7 AJM,0

Fig. 7-5 Typical Overhead Console