

SECTION 8

HANDLING, SERVICING, AND MAINTENANCE

8.1 GENERAL

This section describes ways an operator can ensure that the necessary handling, servicing and maintenance of the helicopter are accomplished.

NOTE It is the operator's responsibility to ensure that all airworthiness directives are complied with and that the handling, servicing and maintenance of the helicopter are accomplished when required and in accordance with the applicable Federal Aviation Regulations.

In order to meet the above requirements, the helicopter operator should establish contact with the helicopter manufacturer or certified service station for service and information; and that all correspondence regarding the helicopter include the helicopter serial number found on the data plate secured to the RH fuselage structure. Helicopter and component maintenance manuals, and parts catalogs are available from the helicopter manufacturer.

For definition of terms, abbreviations and symbols used in this section, refer to Section 1.

8.2 GROUND HANDLING

8.2.1 Towing (see Fig. 8-1)

CAUTION TO AVOID DAMAGING GYRO INSTRUMENTS, DO NOT MOVE HELICOPTER DURING THE TIME SPAN OF 10 TO 30 MINUTES AFTER SWITCHING OFF INSTRUMENT ELECTRICAL POWER.

1. Position ground handling wheels onto skid tubes making certain that lugs on skid tubes engage with flanges on wheel units.
2. Push downwards on latch lever and check that latches are locked over lugs.
3. Stabilize helicopter during raising/lowering and towing operations by grasping tail skid.
4. Close hydraulic jack valve and, using pump handle, raise helicopter.

NOTE On jacks fitted with a safety stop, lower safety stop against jack housing then slowly open jack valve.

CAUTION HANDLE HELICOPTER USING ONLY THE FOLLOWING AUTHORIZED HARD POINTS:

- TAIL SKID
- REAR EDGE OF CABIN CEILING (BELOW TAIL BOOM)
- WINDSHIELD FRAME (ABOVE BATTERY ACCESS DOOR)

5. Maneuver helicopter into desired position.

NOTE To ease handling, maneuver helicopter in a rearward direction.

CAUTION TOW HELICOPTER AT SPEEDS LESS THAN 10 KM/HOUR. MINIMUM TURNING RADIUS WHEN TOWING IS 10 METERS.

6. Secure towbar to forward end of each skid tube and using guide, tow helicopter as required.

7. Upon reaching desired area, remove towbar.

8. Slowly open jack valve and lower helicopter to ground.

NOTE On jacks fitted with a safety stop, close jack valve and, using pump handle, release safety stop. Raise safety stop then slowly open jack valve to lower helicopter to ground.

9. Pull latch lever and remove ground handling wheels.

8.2.2 Parking

NOTE For parking periods over 3 hours or when winds are above 15 kt, main and tail rotors should be secured as a minimum.


1. Connect electrical grounding cable.
2. Make certain that all electrical power is switched off.

NOTE Disconnect and, if necessary, remove battery when helicopter is to be parked for long periods.

3. Secure main and tail rotors using tie-downs provided.
4. Install engine inlet, exhaust and pitot tube protective covers.

NOTE Tie-downs and protective covers are part of the helicopter flyaway kit.

5. Make certain that all doors and windows are closed and that all access panels and cowlings are secured.

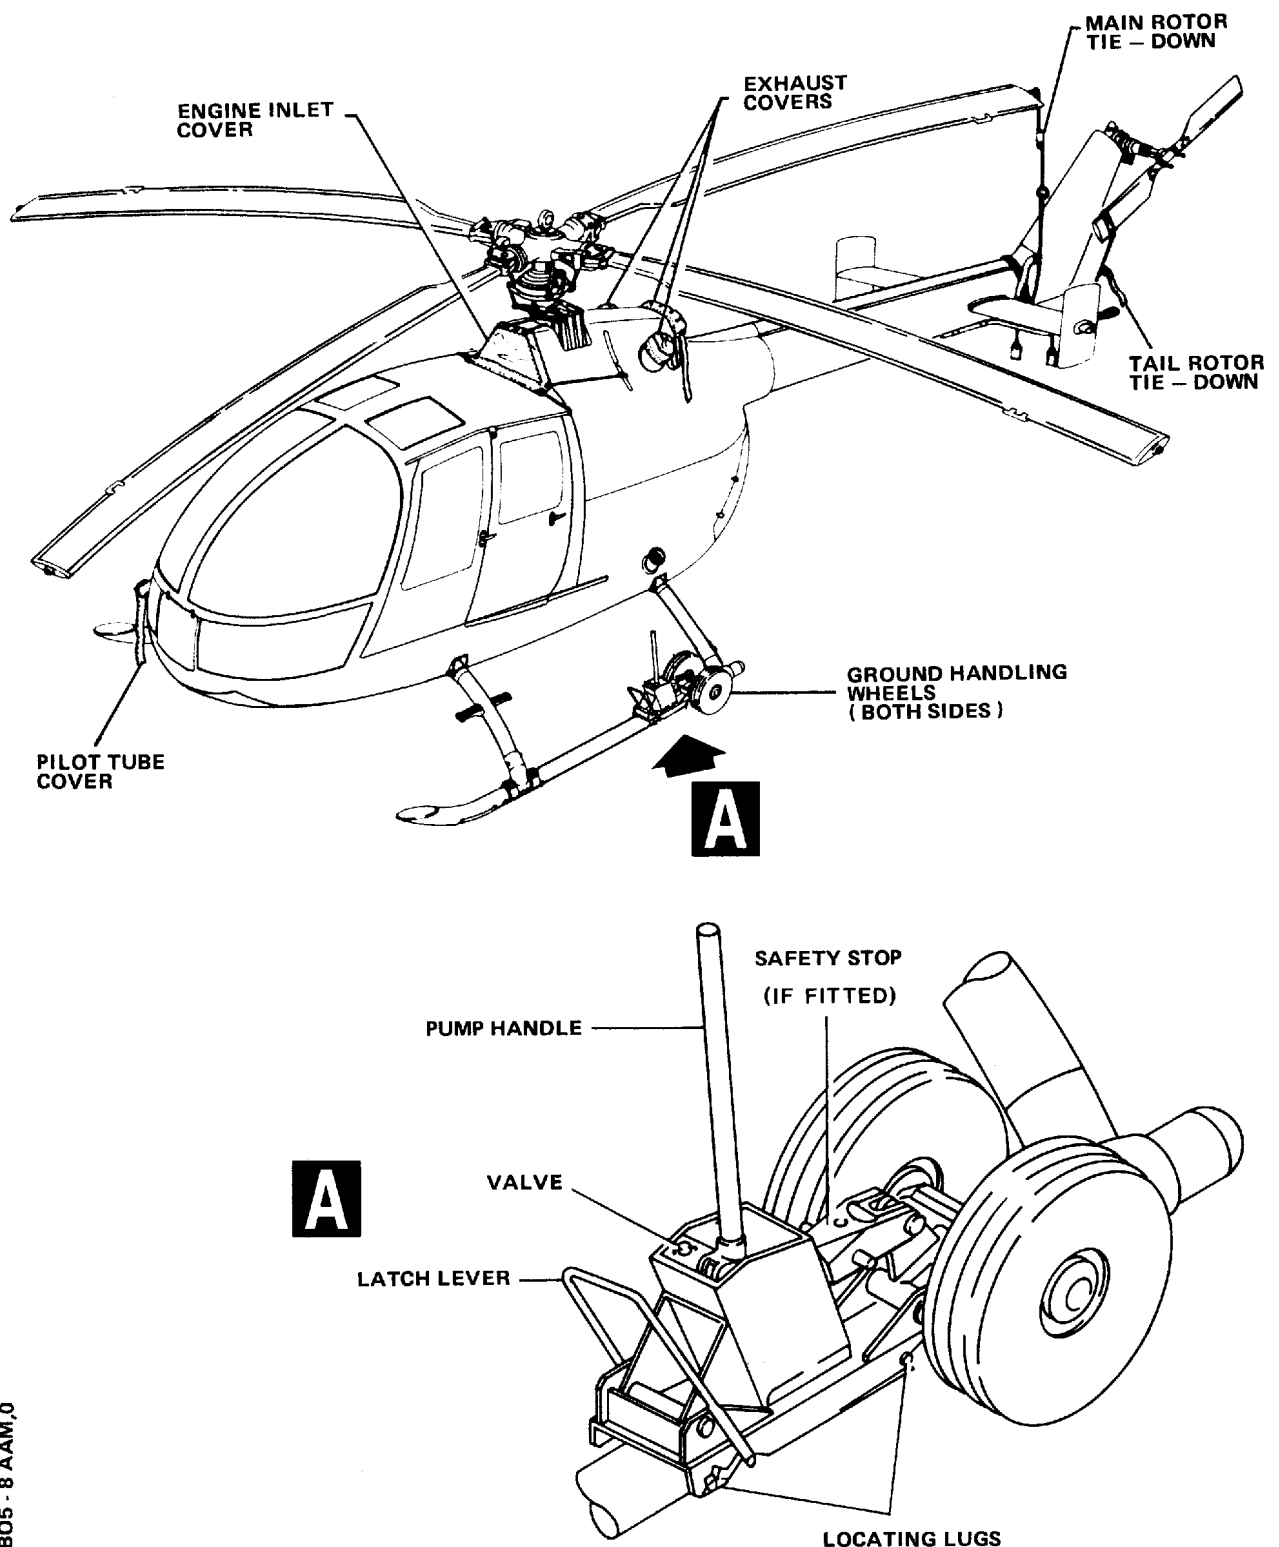

BO5 - 8 AAM,0

Fig. 8-1 Ground Handling