


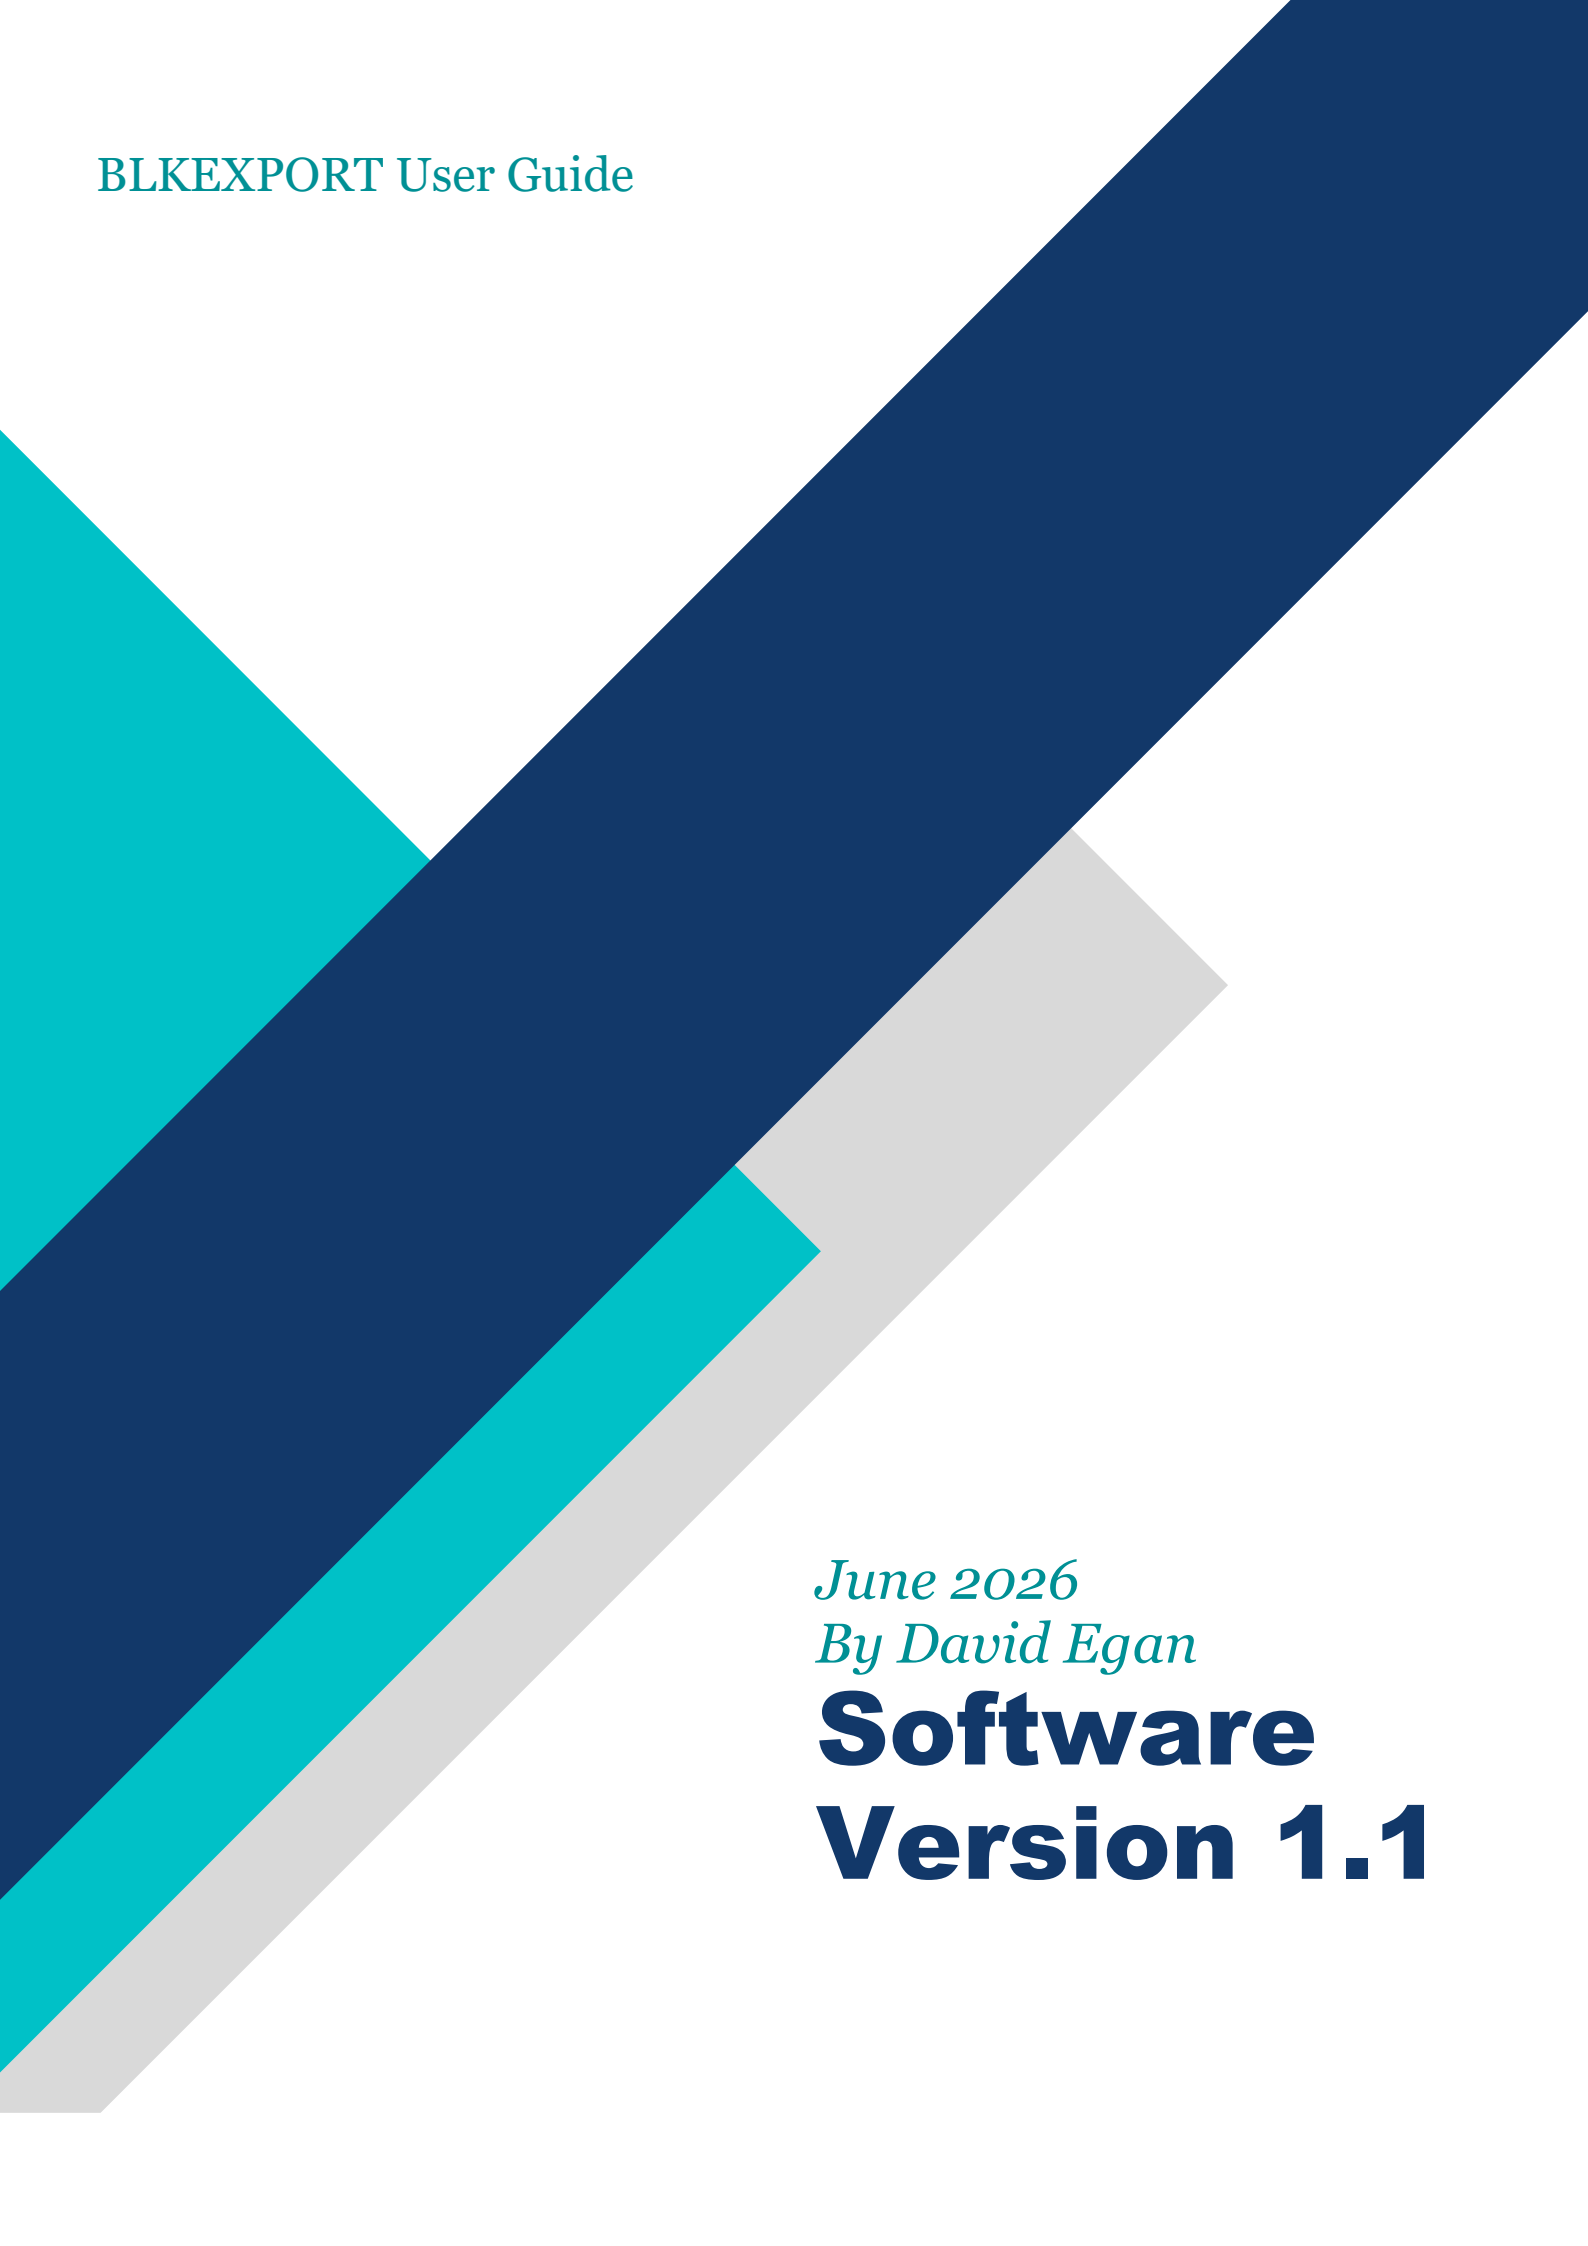

BLKEXPORT User Guide

June 2026

By David Egan

**Software
Version 1.1**

1. Overview

BLKEXPORT is a desktop utility designed to process DXF drawings and identify block insertions. The application categorises blocks into Anonymous Blocks, Non-Attributed Blocks, and Attributed Blocks, then allows the results to be exported to CSV files. It also provides a BOM (Bill of Materials) export.

2. Software Interface

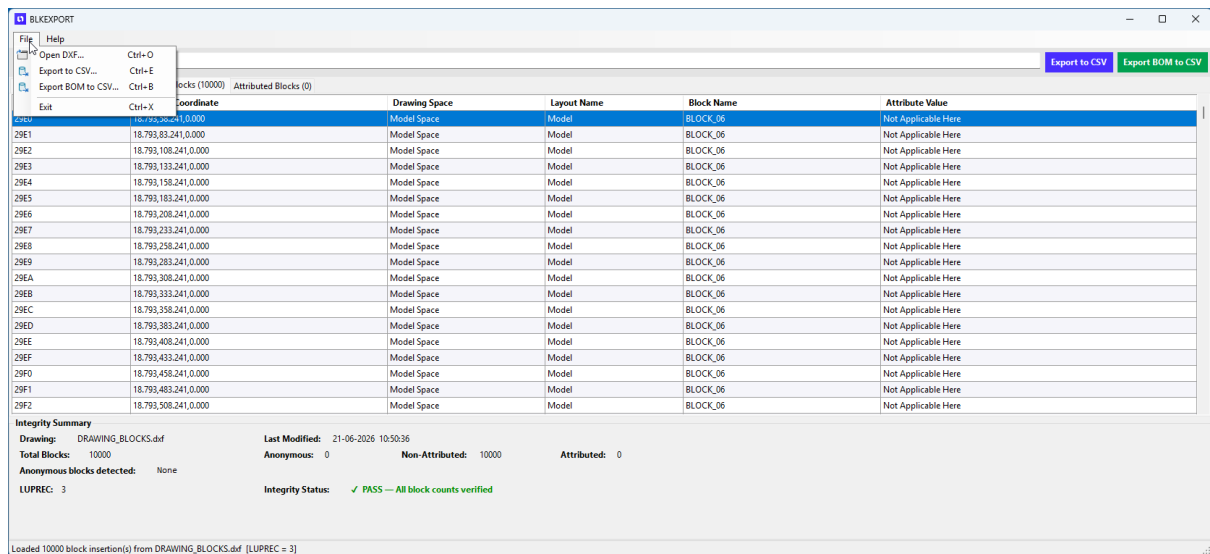


Figure 1

The main window displays the selected DXF file, categorized block tabs, export options, and an integrity summary showing validation results.

3. Menu Commands

File Menu:

- Open DXF (Ctrl+O) – Open and process a DXF drawing.
- Export to CSV (Ctrl+E) – Export detailed block data.
- Export BOM to CSV (Ctrl+B) – Export a summarized Bill of Materials.
- Exit (Ctrl+X) – Close the application.

Help Menu:

- About – Displays application version and registration information.

4. Loading a DXF File

1. Select File > Open DXF or press Ctrl+O.
2. Browse to the required DXF file.
3. The application processes the drawing and populates the block tables.
4. Review the Integrity Summary to confirm successful processing.

5. Block Categories

Anonymous Blocks – Displays anonymous block references detected in the drawing.

Non-Attributed Blocks – Lists blocks without attributes.

Attributed Blocks – Lists blocks containing attribute values.

6. Data Columns

Typical columns include:

- Handle – Unique entity handle.
- Insertion Coordinate – Block insertion point.
- Drawing Space – Model Space or Paper Space.
- Layout Name – Associated layout.
- Block Name – Name of the inserted block.
- Attribute Value – Attribute content when applicable.

7. Exporting Data

Export to CSV:

1. Load a DXF file.
2. Click Export to CSV or press Ctrl+E.
3. Choose a save location.
4. Open the generated CSV in Excel or another spreadsheet application.

Export BOM to CSV:

1. Click Export BOM to CSV or press Ctrl+B.
2. Select a destination folder.
3. The generated file contains a summarised block count/BOM report.

8. Integrity Summary

The Integrity Summary section provides:

- Drawing name and modification date.
- Total block count.
- Anonymous, attributed, and non-attributed block counts.
- LUPREC value used for coordinate precision.
- PASS/FAIL status confirming that detected block counts have been verified.

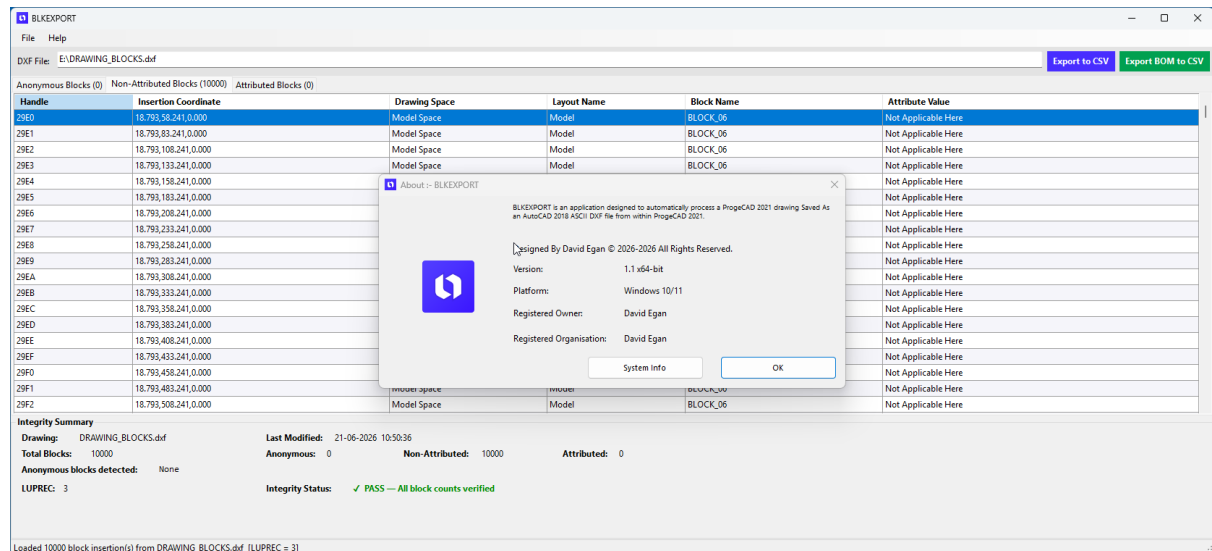


Figure 2

The About dialog displays version information, platform support, registration details, and access to system information.

10. Troubleshooting

No data displayed:

- Verify the selected file is a valid DXF.
- Ensure the drawing contains block insertions.

Export unavailable:

- Load and process a DXF file first.
- Verify you have write permission to the target folder.

Integrity check failure:

- Re-save the drawing as a supported DXF format and reload it.

11. Keyboard Shortcuts

Ctrl+O – Open DXF

Ctrl+E – Export to CSV

Ctrl+B – Export BOM to CSV

Ctrl+X – Exit

