

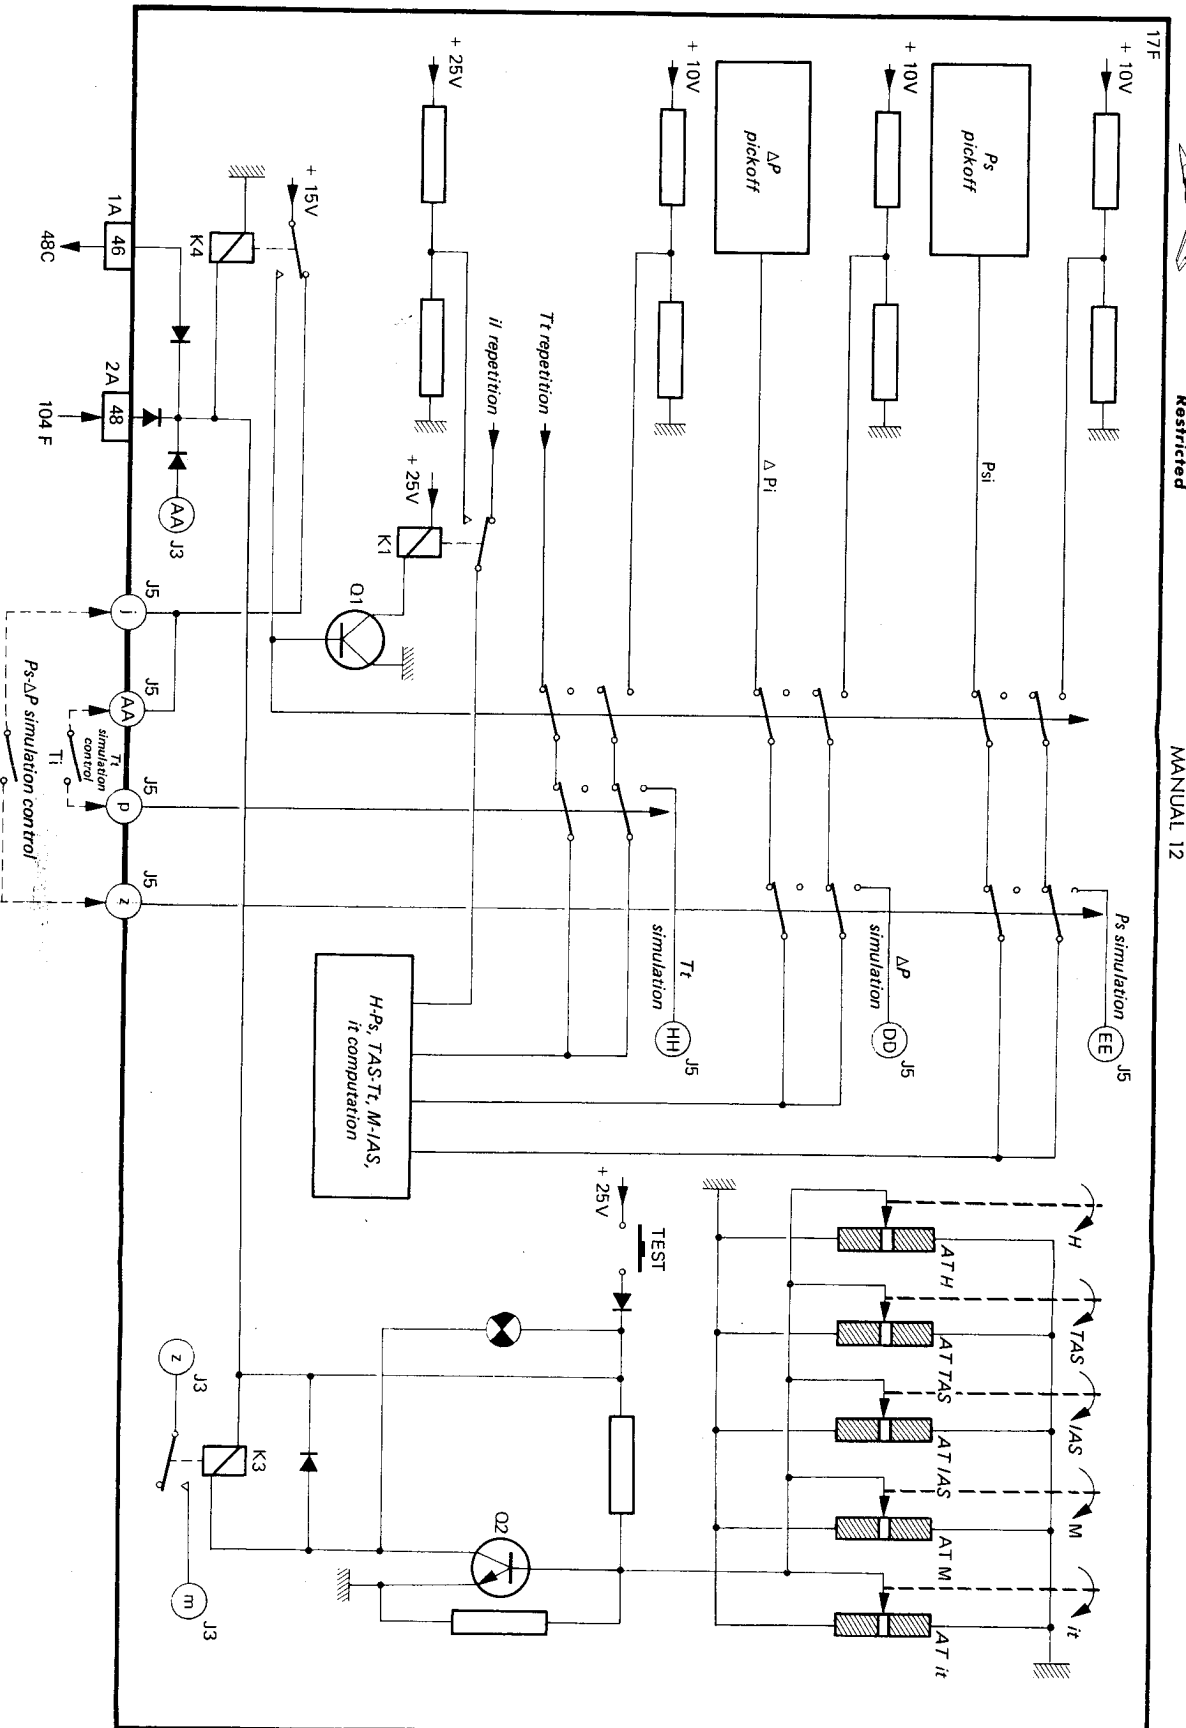


FIGURE 11 - SELF-TEST



Restricted


# MIRAGE F

MANUAL 12

|        | Symbol 3S<br>(altitude coder<br>output)           | Radar                                                                      | Symbol<br>generator<br>box 35A                       | Harmonization<br>unit<br>5Y | Autopilot 39C                                                      | Flying<br>aids amplifier<br>48C                 | Main<br>computer<br>104F                                       | Engine                           | Aircraft                                                                                                                                                                                                         |
|--------|---------------------------------------------------|----------------------------------------------------------------------------|------------------------------------------------------|-----------------------------|--------------------------------------------------------------------|-------------------------------------------------|----------------------------------------------------------------|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| H      | ICAO coder                                        | 1 linear pot. H4*<br>1 contact C2* :<br>H > 12,000 m<br>1 air density pot. | 1 linear pot. H5*<br>1 pot. H fine 2*                | 1 linear pot. H2*           |                                                                    | 1 synchro-<br>transmitter<br>BCX1<br>(H coarse) | 1 pot. H6 coarse<br>1 synchro-<br>transmitter<br>BCX2 * H fine | 1 contact C1* :<br>H > 8 400 m   |                                                                                                                                                                                                                  |
| Ps     |                                                   | 1 linear pot. Ps2<br>for M < 1,1<br>and M < 1,5                            |                                                      |                             | 1 linear pot. Ps1*                                                 |                                                 |                                                                |                                  |                                                                                                                                                                                                                  |
| ΔP     |                                                   | 1 linear pot. ΔP1<br>for M < 1,1<br>and M > 1,5                            | 1 linear pot. IAS2*                                  |                             |                                                                    |                                                 |                                                                | 1 contact C7 :<br>IAS < 470 km/h | 5 IAS contacts :<br>C3* IAS 685 km/h → 170Δ<br>C4* IAS < 400 km/h → (U/C)<br>C5* IAS > 415 km/h → (flaps)<br>C6* IAS > 445 km/h → (U/C)<br>C8 IAS < 815 km/h → (slats)<br>1 linear pot. IAS1*<br>Flap servo unit |
| M      |                                                   |                                                                            | 1 linear pot. M2*                                    |                             | 1 linear pot. M1*<br>2 contacts* :<br>C10 M > 0.96<br>C11 M > 1.07 | 1 synchro-trans-<br>mitter BCX1*                |                                                                | 1 contact C9*<br>M > 1,4         |                                                                                                                                                                                                                  |
| TAS    |                                                   | 1 linear pot. TAS1*<br>1 linear pot. TAS2*                                 | 1 linear pot. TAS5*                                  |                             |                                                                    |                                                 | 1 linear pot. TAS4*                                            |                                  |                                                                                                                                                                                                                  |
| Tt     |                                                   |                                                                            |                                                      |                             |                                                                    |                                                 |                                                                |                                  | 1 contact C12* :<br>Tt > 135° C → warning horn<br>7W and limit warning<br>light 11W                                                                                                                              |
| it     |                                                   | 2 synchro-<br>transmitters<br>BRX1 - BRX2                                  |                                                      |                             |                                                                    |                                                 |                                                                |                                  |                                                                                                                                                                                                                  |
| Alarms | 1 contact C15* :<br>H reliability<br>Coder common |                                                                            | 4 contacts* :<br>C 14 H - C16 IAS<br>C17 M - C18 TAS |                             | 1 contact C21* :<br>master alarm                                   |                                                 | 1 contact C19* : TAS<br>1 contact C13* : H                     |                                  | 1 contact C22 : master<br>alarm → «ADC»<br>warning light of 1W                                                                                                                                                   |

\* Information tested at air data computer test connectors

FIGURE 12. AIR DATA DISTRIBUTION



## TROUBLE SHOOTING IN AIR DATA SYSTEM

### 1 – SCOPE

This operation is intended to locate a failed component, using the aircraft equipment.  
For any symptom reported by the pilot, the mechanic shall confirm the trouble (brief check) by attempting to restore flight conditions :

A – If the symptoms reported by the pilot cannot be reproduced, use the SDAP (See 10-1) complying with the programme specified in the following charts.

B – If the symptoms reported by the pilot are reproduced, follow the procedure described in the following charts.

### 2 – TROUBLE SHOOTING PROCEDURE

The trouble shooting procedure is described in the following charts.


**NOTE :** In the case where the SDAP is to be used for detecting a trouble, the applicable programme number is specified in the charts (See 10-1 for preparation and operating procedure).



Restricted

# MIRAGE F

MANUAL 12

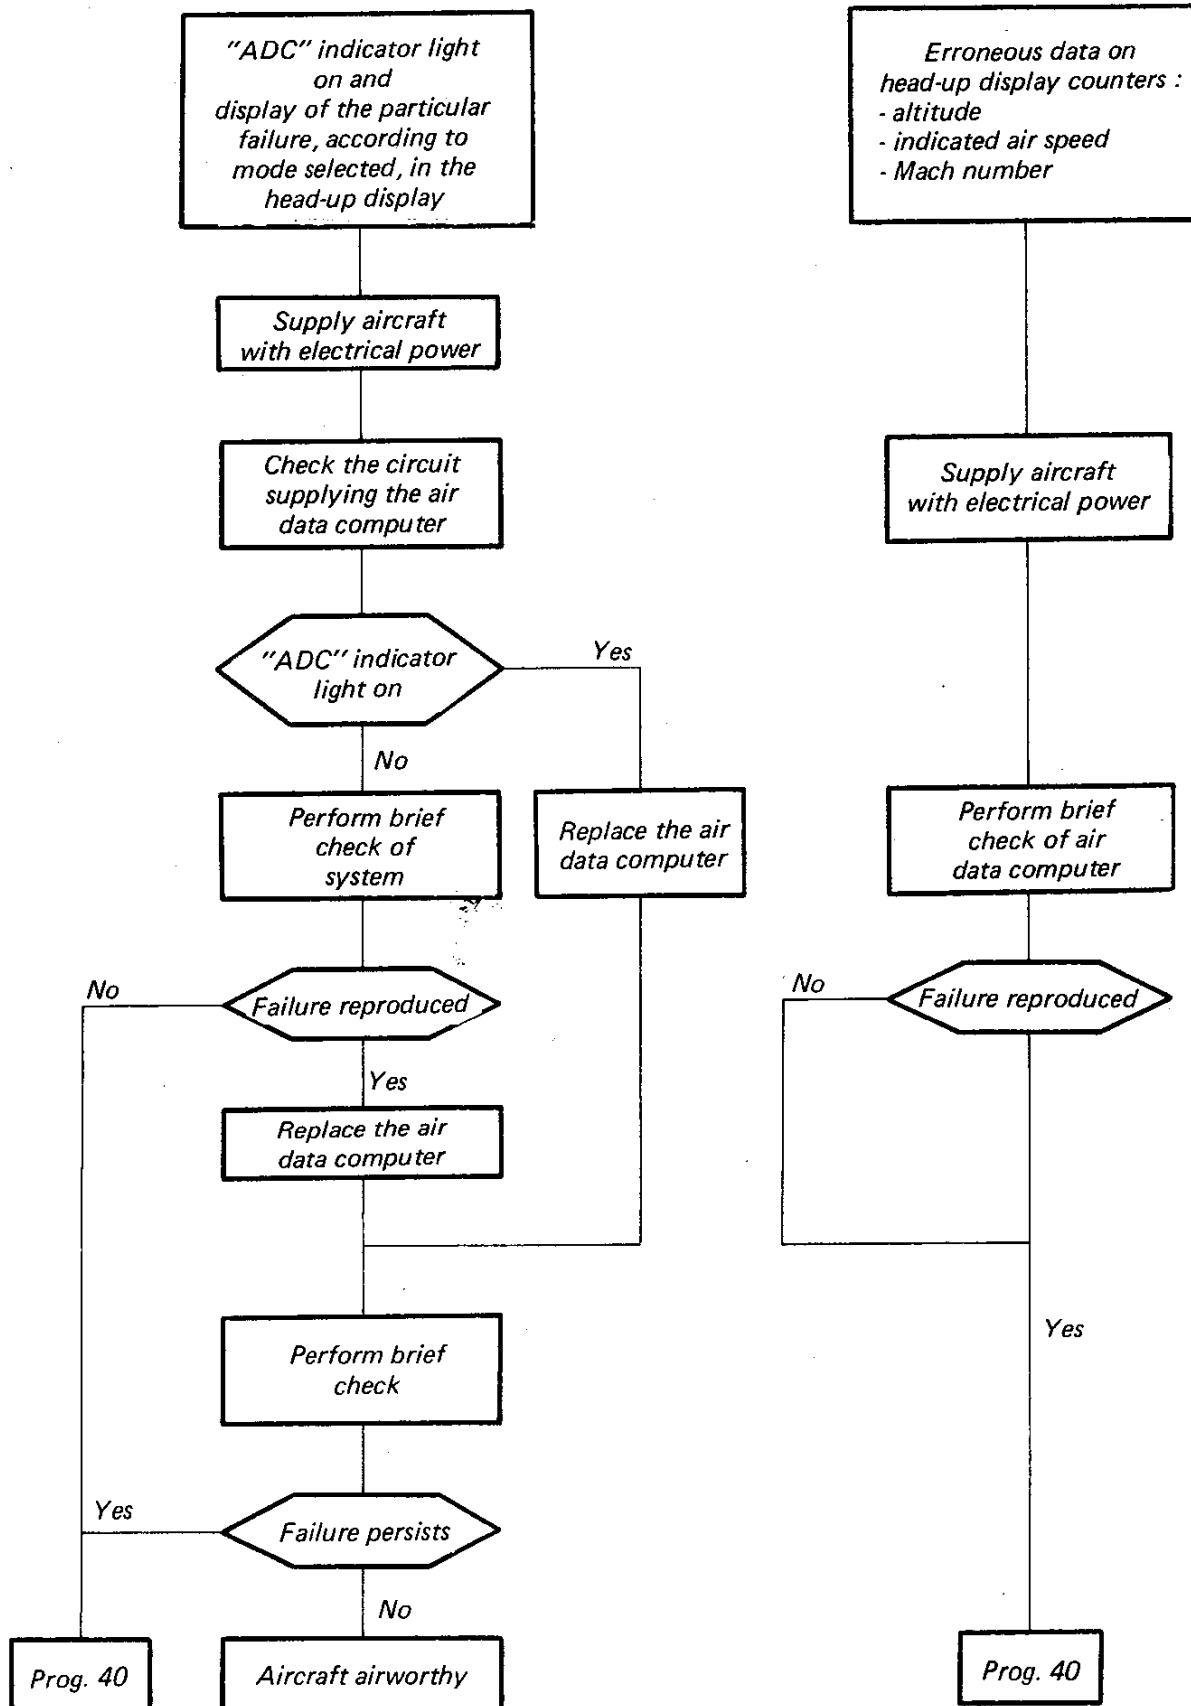

SECTION 3

ATTITUDE AND HEADING SYSTEM

TABLE OF CONTENTS

|                                                   | Page  |
|---------------------------------------------------|-------|
| 3-0 GENERAL                                       |       |
| - Principle of attitude and heading system. ....  | 3-001 |
| 3-1 DESCRIPTION - OPERATION                       |       |
| - Table of components. ....                       | 3-101 |
| - Vertical reference channel. ....                | 3-111 |
| - Normal heading channel. ....                    | 3-116 |
| - Emergency heading channel. ....                 | 3-121 |
| - Monitoring of attitude and heading system. .... | 3-125 |

LIST OF ILLUSTRATIONS

| Figure No. |                                                        | Page   |
|------------|--------------------------------------------------------|--------|
| 1          | SCHEMATIC DIAGRAM OF ATTITUDE AND HEADING SYSTEM. .... | 3-002  |
| 2          | GENERAL LAYOUT. ....                                   | 3-109  |
| 3          | LAYOUT IN COCKPIT. ....                                | 3-110  |
| 3P         | CONDITIONING. ....                                     | 3-112  |
| 4          | ROLL CHANNEL. ....                                     | 3-114  |
| 5          | PITCH CHANNEL. ....                                    | 3-115  |
| 6          | NORMAL HEADING CHANNEL. ....                           | 3-120  |
| 7          | EMERGENCY HEADING CHANNEL. ....                        | 3-123  |
| 8          | POWER SUPPLIES. ....                                   | 3-125P |
| 9          | MONITORING. ....                                       | 3-126  |
| 10         | ROLL, PITCH AND HEADING DATA DISTRIBUTION. ....        | 3-128  |