| | | | |
|---|---|---|---|
| wilmar | **WORKING INSTRUCTION** | WI/MNASRG-E&I-19-213 | |
| | **DELTA V DCS BATTERY UNIT CHECKING** | Dept. | ENGINEERING |
| | | Section | E&I |
| | | Revision | 0 |
| | | Effective Date | 01-Sep-19 |
| **PT. MNA SERANG** | | Page | 1 of 1 |

**Memeriksa Unit Baterai /** *Checking battery Unit*


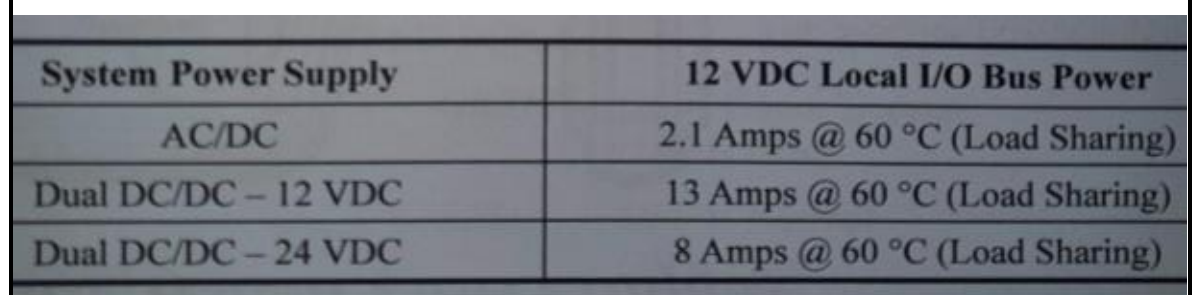

| System Power Supply | 12 VDC Local I/O Bus Power |
|---|---|
| AC/DC | 2.1 Amps @ 60 °C (Load Sharing) |
| Dual DC/DC – 12 VDC | 13 Amps @ 60 °C (Load Sharing) |
| Dual DC/DC – 24 VDC | 8 Amps @ 60 °C (Load Sharing) |

Periksa indikasi error pada Dioda (*Check the error indication on Diode* )

Check nominal Arus & tegangan ( *Check the Voltage & Current Nominal* )


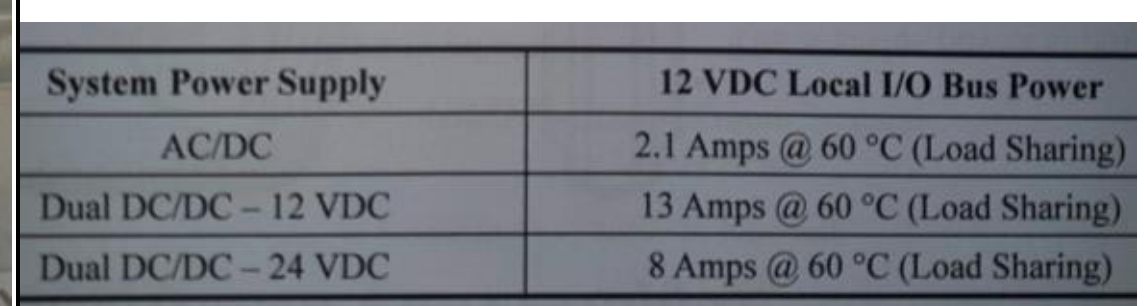

| System Power Supply | 12 VDC Local I/O Bus Power |
|---|---|
| AC/DC | 2.1 Amps @ 60 °C (Load Sharing) |
| Dual DC/DC – 12 VDC | 13 Amps @ 60 °C (Load Sharing) |
| Dual DC/DC – 24 VDC | 8 Amps @ 60 °C (Load Sharing) |

Periksa indikasi error pada AC-DC Power supply (*Check the error indication on AC-DC power supply* )

Check nominal Arus & tegangan ( *Check the Voltage & Current Nominal* )

Turunkan breaker pada salah satu PSU (*Lower the breaker on one of the PSUr* )

Check if the system still running or not a ( *Check if the system still running or not* )

Turunkan breaker pada PSU yang satunya (*Lower the breaker on the other one of the PSUr* )

Check if the system still running or not a ( *Check if the system still running or not* )

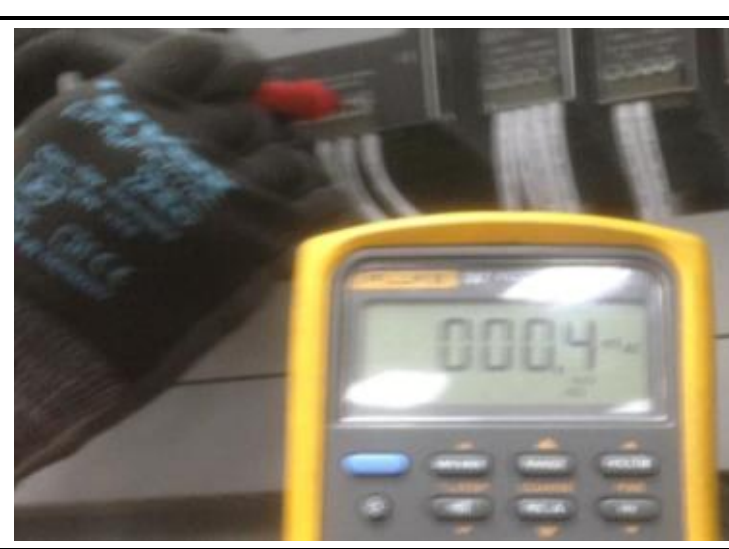


Catat Nominal Tegangan & lakukan penggantiaan jika tegangan jatuh > 10% (*Note the Voltage Nominal & do replacement if Drop Voltage > 10%* )