

Doc.No	Date	Rev	DCS - SOFTWARE	Created by	Approved by	wilmar
WI/DCS/S/001	20/07/2021	0	CHANGE MAPPING IO ADDRESS	Robby K N	M. Yazid	

Information




This document was created and purposed as a work instruction in programming in DCS, the programming that will be carried out here is to change the address of the IO mapping.

Example :

Module Name : TX0_FT3001
DST Tag : TF1-FT3001
IO Address : TF1-001/S1/CH03

Open DeltaV Explorer


- 1.1 Click edit tab and select find
- 1.2 Type **FT3001** and click **Find Now**
- 1.3 Double click on Control Module

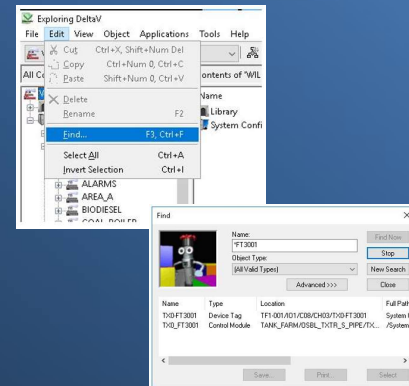

Enable IO Channel

- 2.1 On DeltaV Explorer go to **IO Network**
- 2.2 Go to **RIO TF1-001** IO Card 1 Channel 3
- 2.3 Right click on channel 3 and select **Property**
- 2.4 **Chk** sign on Enable
- 2.5 Type **TF1-FT3001** on Device Tag then click **Ok**


2

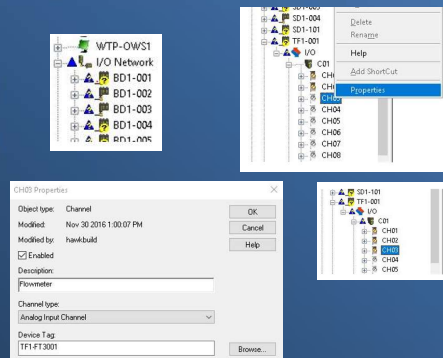

Download IO Card

- 3.1 Go to **RIO TF1-001**
- 3.2 Right Click on IO card **C01** select download
- 3.3 On Confirm Download Partial click **Ok**
- 3.4 Wait until download completed
- 3.5 Click **Close**


3

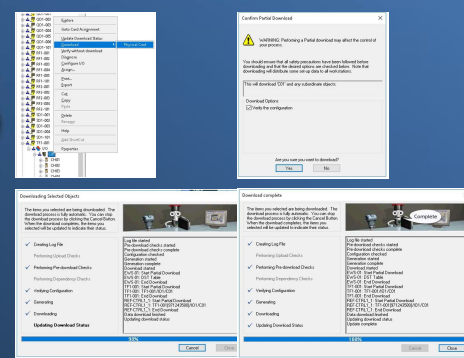

Download Control Module

- 4.1 On left window, right click **TX0_FT3001**
- 4.2 Select download control module
- 4.3 On window confirm partial download click **Yes**
- 4.4 Waiting download completed
- 4.5 After download completed click **Close**

4

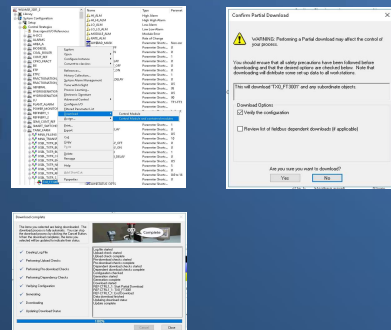

Final Check

- 5.1 Open **Diagnostic Tool**
- 5.2 Check IO Field Connected or not

5

