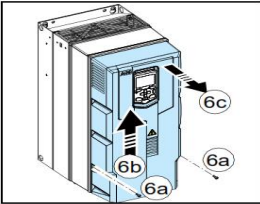
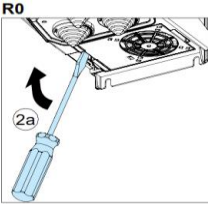
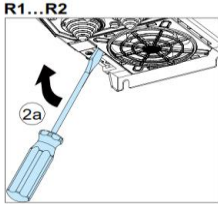
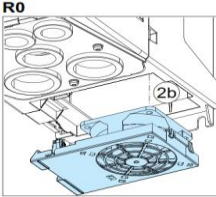
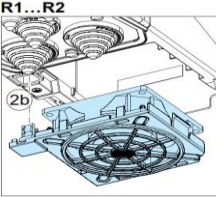
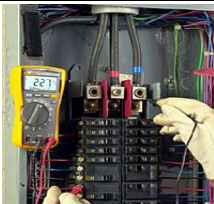


 PT. MNA SERANG	WORKING INSTRUCTION	W/MNASRG-E&I-19-013
	PM VFD	Dept. ENGINEERING
		Section E&I
		Revision 0
		Effective Date 01-Sep-19
		Page 1 of 1

Menyimpan Parameter Tuning / Saving Tuning Parameter		
		
Check nominal Arus & tegangan (<i>Check the Voltage & Current Nominal</i>)	Catat Nominal Tegangan & lakukan penggantian Dioda jika tegangan jatuh > 10% (<i>Note the Voltage Nominal & do diode replacement if Drop Voltage > 10%</i>)	
		
Buka CB, & kunci dengan LOTO (<i>Open CB, & lock it with LOTO</i>)	Tunggu 5 menit & pastikan tegangan < 1V (<i>Wait for five minutes & make sure that Voltage</i>)	
	 	
Lepaskan penutup luar VFD; lepaskan sekrup pengikat (a), geser penutup ke atas (b) dan kemudian tarik keluar (<i>Remove the front cover of the drive; remove the fastening screws (a), move the cover to the top side (b) and then up (c).</i>)	Lepaskan kipas pendingin utama (<i>Remove the main cooling fan</i>)	
 		
Lepaskan kipas pendingin tambahan (<i>Remove the auxiliary cooling fan</i>)	Bersihkan VFD Dengan Blower (<i>Clean the VFD with Blower</i>)	
		
Bersihkan local control dengan pembersih contact & kain lembut (<i>Clean the local control panel with contact cleaner & soft Cloth</i>)	Pasang kembali kipas pendingin utama dan kipas pendingin tambahan, lalu pasang kembali tutup luar VFD. (<i>Reinstall the main cooling fan and auxiliary cooling fan, then reinstall the front cover.</i>)	
		
Catat parameter pada VFD (<i>Note the parameter on VFD Display</i>)	Nyalakan VFD & cek arus keluaran ke motor (<i>Turn on the VFD & check the output current from VFD to motor</i>)	