


IDENTIFICATION - CONTROLLER

How to identification controller in system health (software) is good or not?

1 Identification Controller on DCS Display

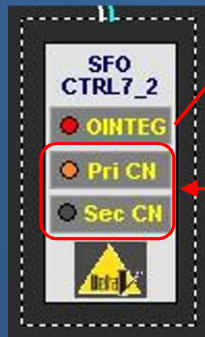


LED RED ON = BAD Integrity


Possibility :
Communication Problem

Check Communication Status
LED PRI CN blink (Yellow):
Communication is connected
LED SEC CN not blink :
Communication is disconnect

2 Identification Controller using Diagnostic

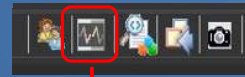

Click this Symbol to open diagnostic page

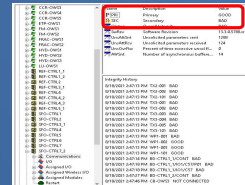

Click on communication and check status on primary and secondary

How to identification Controller in system health (hardware) is good or not?



LED correct operating condition	Fault Indication	Probable cause and corrective action
Power-On (green)	Off	System power is not supplied to unit. Check power supply and input power connections.
Error-Off (red)	On (continuous)	Internal fault. Contact technical support.
On for one second followed by all LEDs on for five seconds.	Flashing	Unit went through a reset due to an unrecoverable software error. Contact technical support.
Primary control network-flashing (yellow)	Off	The 502 is decommissioned. Commission the 502 .
Secondary control network-flashing (yellow)	Off	502 lacks active Ethernet communications on the primary control network. Check the primary control network's fiber and cable connections.
		502 lacks active Ethernet communications on the secondary control network. Check the secondary control network's fiber and cable connections.

IDENTIFICATION - REMOTE INTERFACE

How to identification remote interface in system health (software) is good or not?


1 Identification Remote Interface on DCS Display




LED GREEN ON = Good Integrity
LED RED ON = BAD Integrity

Possibility :
IO Card is bad integrity

2 Identification Remote Interface using Diagnostic

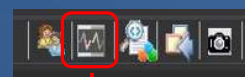

Click this Symbol to open diagnostic page

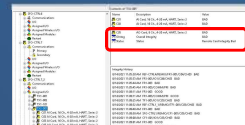

Click on remote interface and check ointeg status

How to identification Remote Interface in system health (hardware) is good or not?



LED	Correct Operating Condition	Fault Indication	Probable Cause	Corrective Action
Green - Power	On	Off	1. System power is not supplied to unit. Possible line power problem. 2. Internal fault.	1. Check supply power and connections. 2. Contact technical support
Red - Error	Off	On (continuous)	Internal fault.	Contact technical support
		On for one second followed by all LEDs on for five seconds.	Unit went through RESET due to an unrecoverable software error.	Contact customer support.
Green - Active	On	Off	The Remote Interface Unit is decommissioned.	Commission the Remote Interface Unit.
		Flashing	1. Remote Interface Unit is not commissioned. 2. Internal fault.	1. Commission the Remote Interface Unit. 2. Contact technical support.
Green - Standby	Off (Redundancy not supported)	Flashing	Remote Interface Unit is not configured.	Download configuration.
Yellow - Pri. CN	Communication attempted and indicator flashing	Off - Communication attempted and indicator not flashing.	Remote Interface Unit lacks active Ethernet Communication on primary Control Network connection.	Check primary network cable connections and hub connections.
Yellow - Sec. CN	Communication attempted and indicator flashing	Off - Communication attempted and indicator not flashing.	Remote Interface Unit lacks active Ethernet Communication on secondary Control Network connection.	Check secondary network cable connections and hub connections.