

 PT. MNA SERANG	WORKING INSTRUCTION	WI/MNASRG-E&I-19-104	
		Dept.	ENGINEERING
	FAILURE MEASUREMENT & CONNECTION PRESSURE TRANSMITTER	Section	E&I
		Revision	0
		Effective Date	
		Page	1 of 1 page


Instruksi / <i>Instruction</i> Identifikasi/ <i>Identification</i>



Siapkan peralatan dan APD (*Prepare equipment and APD*)




1. Cek indikasi pressure transmitter pada layar HMI apakah menunjukan indikasi OFF atau tidak. (*Check pressure transmitter indication on HMI display if showing OFF or not*)

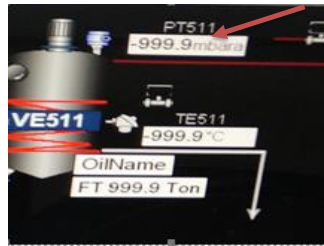

2. Cek indikasi kegagalan pengukuran oleh pressure (*Check measurement failure indication*)

Pemasangan Alat / <i>Tool Installation</i>

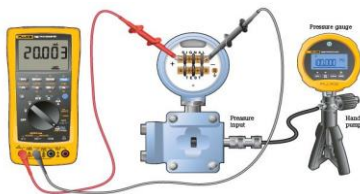

3. Cek tegangan dengan multimeter pada terminal pressure transmitter (*Check voltage by using multimeter on power output terminal RIO*)



4. Lakukan pergantian kabel instrument pada jalur terminal output power RIO ke pressure transmitter (*Replace instrument cable on line of output terminal power RIO to related pressure transmitter*)



5. Lakukan pengecekan dan pergantian modul AI RIO terkait jika perlu (*Do a checking and replacing on related AI RIO module if necessary*)



Jika pengukuran oleh pressure transmitter masih bermasalah, lakukan pergantian pressure transmitter baru.. (*If measurement from pressure transmitter is still troubled, replace pressure transmitter with a new one*)