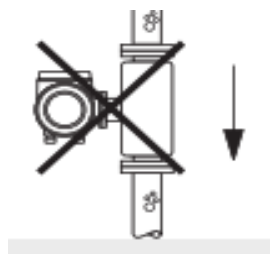
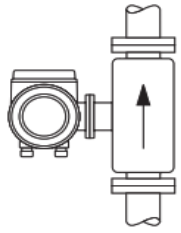
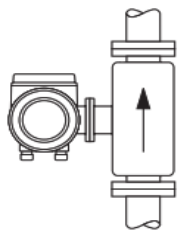
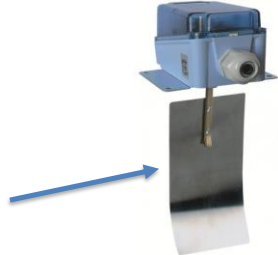


 PT. MNA SERANG	WORKING INSTRUCTION Flow Switch Reactive Maintenance	WI/MNASRG-E&I-19-109	
		Dept.	ENGINEERING
		Section	E&I
		Revision	0
		Effective Date	
		Page	1 of 1 page

Instruksi / <i>Instruction</i>	
Persiapan Alignment / <i>Prepare of Alignment Process</i>	
	
Siapkan peralatan dan APD (<i>Prepare equipment and APD</i>)	Identification: Switch gagal untuk kembali ke posisi semula <i>Switch fails to return to the no-flow position.</i>
Pengecekan Elemen Sensor / <i>Sensor Element Checking</i>	
	
1. Switch mungkin diatur lebih rendah dari pengaturan pabrik. Tambah pengaturan <i>The switch may be set lower than the factory setting. Increase the setting.</i>	2. Pada pipa vertikal, pastikan arah aliran naik <i>On vertical pipes, ensure that the direction of flow is up.</i>
	
3. Panah di kandang saklar harus menunjuk ke arah aliran. <i>The arrow on the switch enclosure must point in the direction of the flow.</i>	4. Bersihkan seluruh bagian flow switch <i>Clean all flow switch area</i>
	
5. Pastikan koneksi pneumatik dibuat dengan benar. <i>Ensure pneumatic connections are made properly.</i>	6. Periksa dayung yang retak atau rusak. Ganti dayung, jika perlu. <i>Check for a cracked or broken paddle. Replace the paddle, if necessary.</i>