
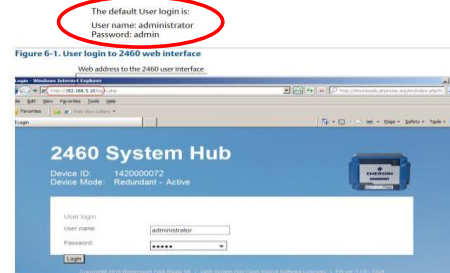


 PT. MNA SERANG	WORKING INSTRUCTION	WI/MNASRG-E&I-19-114	
		Dept.	ENGINEERING
	SYSTEM HUB CHECKING	Section	E&I
		Revision	0
		Effective Date	
		Page	2 of 2

Menggunakan Web Interface / Using Web Interface

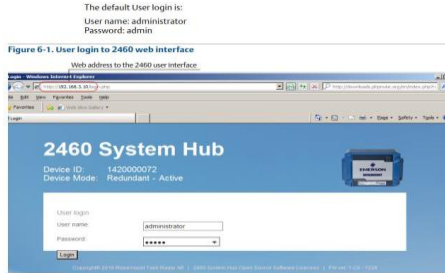


Buka web browser. Masukkan alamat IP 192.18.3.10 ke kolom pencarian
(Open the web browser, input the IP address 192.168.3.10)

Masukan user name & password. (Fill the user name & password with the default user login)

Port	Type	Protocol	HP/FP	Address	I-Reg map	Baud Rate	Stop Bits	Parity	Rx Msgs	Tx Msgs	Status
1	TRL2	Modbus	FP	---	---	4800	1	NONE	10308	10309	✓
2	TRL2	Modbus	FP	---	---	4800	1	NONE	12870	12876	✓
3	TRL2	Modbus	FP	---	---	4800	1	NONE	4935	4935	✓
4	BPM	Enraf GPU	FP	---	---	1200	1	ODD	4086	4087	✓
5	None	---	FP	---	---	---	---	---	---	---	✓
6	None	---	FP	---	---	---	---	---	---	---	✓
7	TRL2	Modbus	HP	230	2460	4800	1	NONE	4209	4070	✓
8	None	---	HP	230	2460	---	---	---	---	---	✓

Copyright © 2015 Rosemount Tank Radar AB | 2460 System Hub Open Source Software License | FW ver: 1.00 - 6891

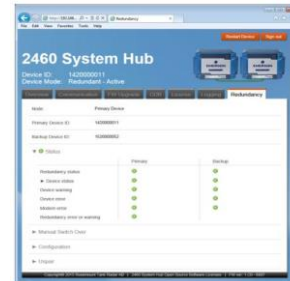

Pergi ke tabel komunikasi. Cek status dari semua port. (Go to Communication tab. Check the status of all field ports)

Pergi ke tabel (Go to Redundancy tab.)



Buka list status untuk melihat status dari device utama dan cadangan. (Open status drop-down list to view the status for the Primary dan Backup devices)