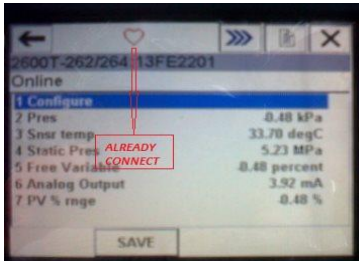


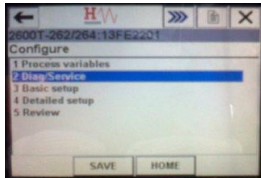
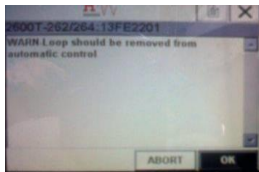
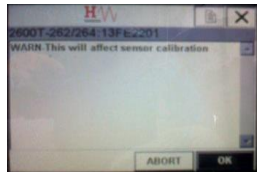
 PT. MNA SERANG	WORKING INSTRUCTION	WI-MNA-E&I-19-115	
		Dept.	ENGINEERING
	TRANSMITTER CALIBRATION	Section	E&I
		Revision	0
		Effective Date	
		Page	1 of 1

Instruksi / <i>Instruction</i>	
Persiapan Reactive Maintenance / <i>Prepare the Reactive Maintenance Process</i>	
	Identifikasi/ <i>Identification</i> : Kalibrasi Transmitter/ <i>Transmitter Calibration</i>
Siapkan peralatan dan APD (<i>Prepare equipment and APD</i>)	

Pengecekan Alat / *Tool Checking*

	
---	--

1. Buka penutup box dan hubungkan transmitter dengan HART (*unboxing transmitter cover and connect to HART Communicator*)
2. Lakukan pengecekan fungsional transmitter (*check function the transmitter*)

 	 
---	--

3. Pilih 'Configure' dan kemudian pada window tersebut pilih 'Diag/Service'. (*Select 'Configure', followed by selecting 'Diag/Service'*)
4. tekan 'OK' pada window loop dan calibration (*Push OK in window loop and calibration*)

	
---	--

5. Pilih OK pada perintah input 0 ke sensor (*Select 'OK' to 'Apply 0 input to sensor'*)
6. Lepaskan HART Communicator dan pastikan baut terpasang kencang (*Remove the HART Communicator, and make sure that all of the screw tightened*)