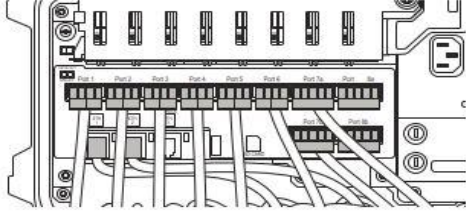
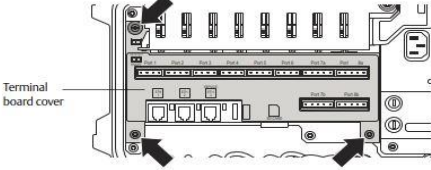
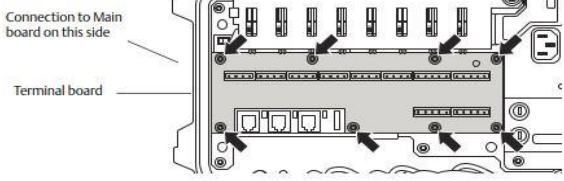
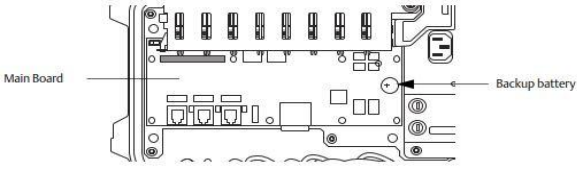


 PT. MNA SERANG	WORKING INSTRUCTION	WI/MNASRG-E&I-19-118	
	SYSTEM HUB BACKUP BATTERY REPLACEMENT	Dept.	ENGINEERING
		Section	E&I
		Revision	0
		Effective Date	01-Sep-19
		Page	1 of 2

Penggantian Backup Battery / Backup Battery Replacement			
			
Matikan power supply dengan memutuskan switch eksternal. Longgarkan sekrup pengunci, buka tutup blok System Hub. (<i>Turn off power supply by</i>		Lepaskan kabel yang terhubung ke terminal board (<i>Unplug cables connected to the Terminal Board</i>)	
			
Lepaskan 3 sekrup dan lepaskan cover terminal board (<i>Remove the 3 screws and remove the Terminal board cover</i>)		Lepaskan sekrup terminal board (8 Sekrup) & lepaskan dari main board. (<i>Unscrews the Terminal board (8 screws) & remove it from the main board</i>)	
			
Ganti baterai dengan baterai tipe 3V CR1632 Lithium. (<i>Replace the battery with a button battery type 3V CR1632 Lithium</i>)		Pastikan baterai terpasang dengan sisi + menghadap ke atas (<i>Ensure the battery is placed with the + side facing up</i>)	
Pasang terminal board, kencangkan sekrup. Pasang cover terminal board, kencangkan sekrup. (<i>Attach the terminal board, tighten the screws. Attach</i>		Hubungkan kabel ke terminal board. Pasangkan cover System Hub. Atur waktu & tanggal (<i>Plug the cable to the terminal board. Attach the lid. Set</i>	