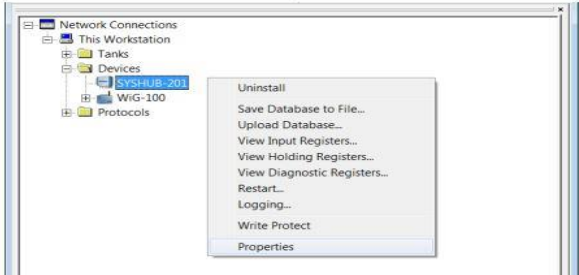
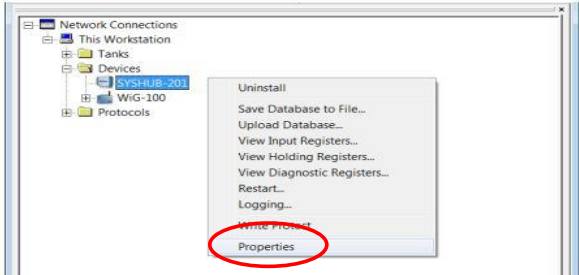
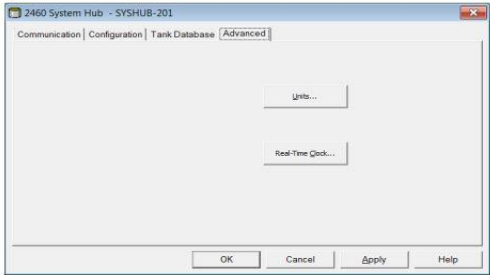


 PT. MNA SERANG	WORKING INSTRUCTION	WI/MNASRG-E&I-19-119	
		Dept.	ENGINEERING
	SYSTEM HUB SETTING DATE&TIME	Section	E&I
		Revision	0
		Effective Date	
		Page	2 of 2


Pengaturan Tanggal & Waktu / <i>Setting Date & Time</i>
--

	
--	--

Buka aplikasi TankMaster WinSetup. (<i>Open TankMaster WinSetup workspace.</i>)	Klik kanan tombol mouse pada ikon SystemHub 2460 (<i>Click the right mouse button on the 2460 System Hub Icon</i>)
---	--

	
--	---

Klik opsi "Properties" (<i>Click Properties option</i>)	Pilih tab "Advance" lalu klik tombol "Real Time Clock" (<i>Select the advance tab and click the Real Time Clock button.</i>)
---	--

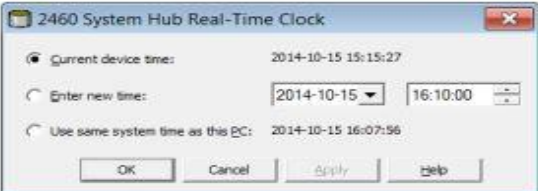 <i>Enter new time lets you specify the time manually.</i> <i>Use some system time ... lets you synchronize the 2460 clock with the TankMaster PC.</i>	
---	--

Pilih pengaturan "Real Time Clock" yang paling sesuai (<i>Choose the appropriate option for the Real-Time Clock</i>)	Klik OK untuk menyimpan pengaturan dan tutup jendela aplikasi. (<i>Click OK to save the configuration and close the window</i>)
--	---