


URV & LRV Range Settings Pressure Transmitter


First step:
Open the Pressure Transmitter Cover counterclockwise



Second step:
Hook up AMS trex connection to instrument

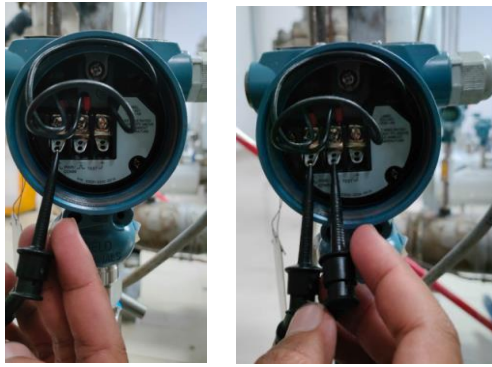


Third step:
Select HART terminal on AMS Trex

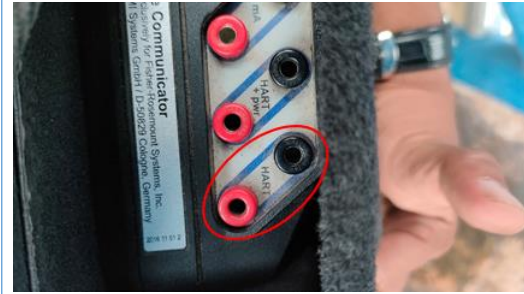

Fourth step:
Turn on AMS Trex and wait a while




Fifth step:
Select the field communicator menu to initiate AMS Trex communication with the Temperature transmitter

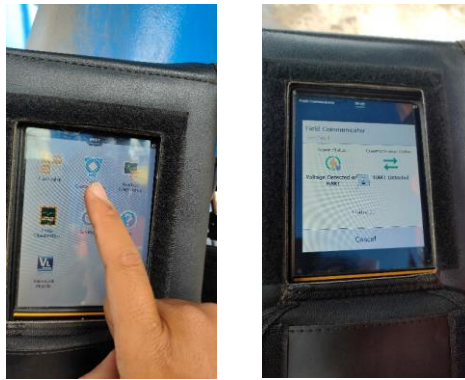


Sixth step:
Select the Configure menu




Seventh step:
Select the Manual Setup

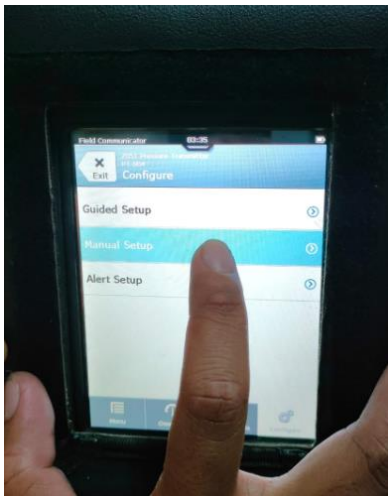


Eighth step:
Select the Analog Output menu

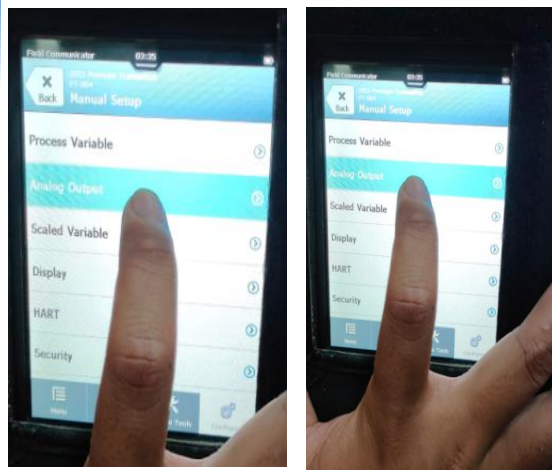


The Ninth step :
Select the Set Range Points menu

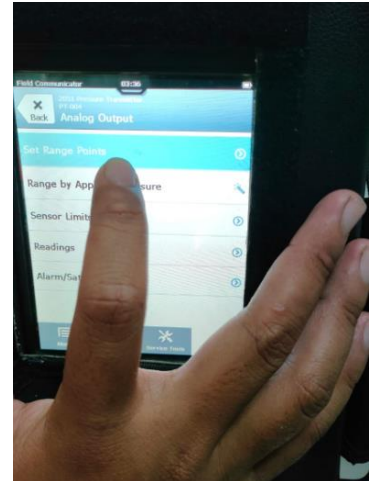


Ten step:
Enter the LRV value according to the range

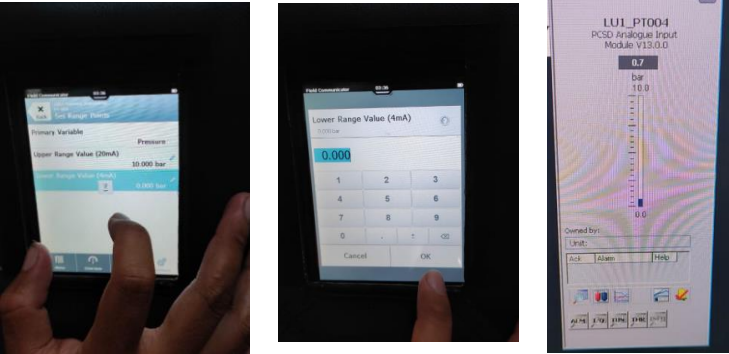

Eleven step:
Enter the LRV value according to the range on the PLC or DCS

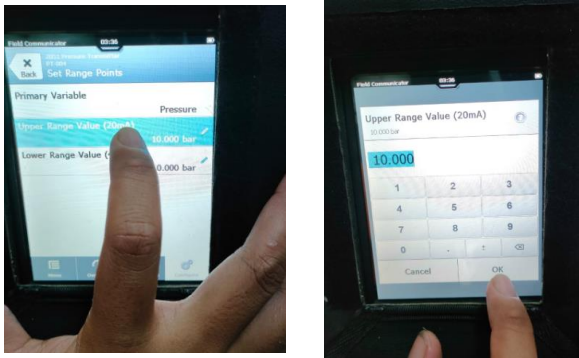

Twelve step:
When you have made enough changes, disconnect the AMS trex with the transmitter by clicking the menu

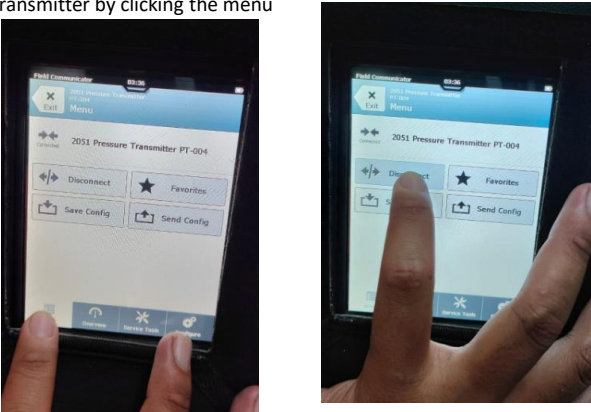

Thirteen step:
Remove all holders and steel straps



File: WI-URV & LRV Range Settings Pressure Transmitter	Signer: Muhammad Chorihuddin	Date of issue: 30 Juni 2022	version: 1.0
---	---	------------------------------------	--------------