

URV & LRV Range Settings Temperature Transmitter

First step:
Unscrew the Thermowell Temperature Transmitter



Second step:
Link AMS trex connection to instrument



Third step:
Select HART terminal on AMS Trex




Fourth step:
Turn on AMS Trex and wait a while




Fifth step:
Select the field communicator menu to initiate AMS Trex communication with the Temperature transmitter





Sixth step:
Select the Matrix Parameters menu

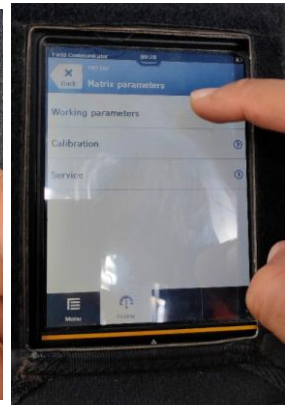


Seventh step:
Next select the Calibration menu

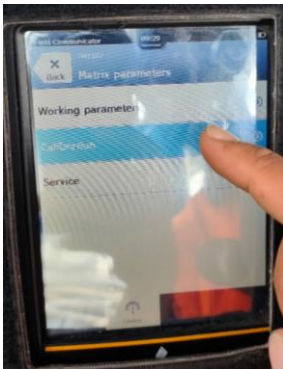


Eighth step:
To make LRV changes, select the min measurm range menu

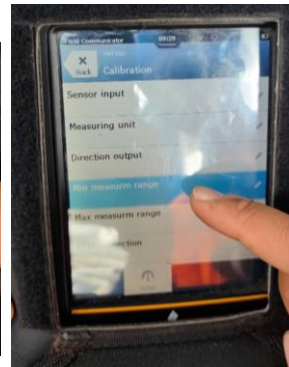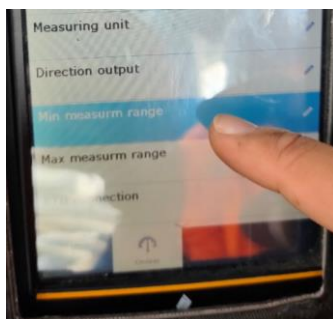


The Ninth step :
Enter the LRV value according to the range on the PLC or DCS

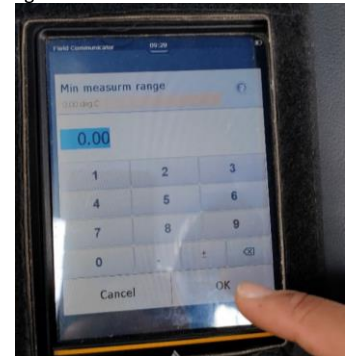

Ten step:
Click the Send menu to make changes to the transmitter

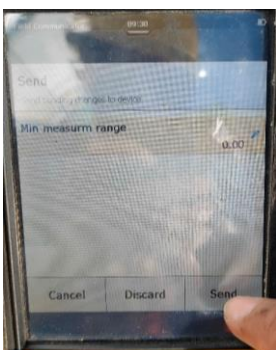


Eleven step:
If you want to make changes to the URV, select the max measurm range

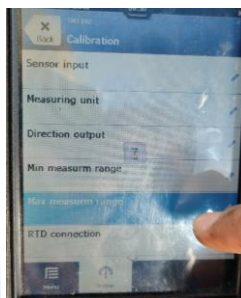


Twelve step :
Enter the URV value according to the range on the PLC or DCS




Thirteen step:
Click the Send menu to make changes to the transmitter

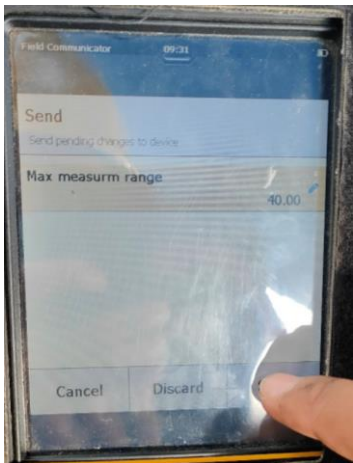

Fourteen step:
When you have made enough changes, disconnect the AMS trex with the transmitter by clicking the menu

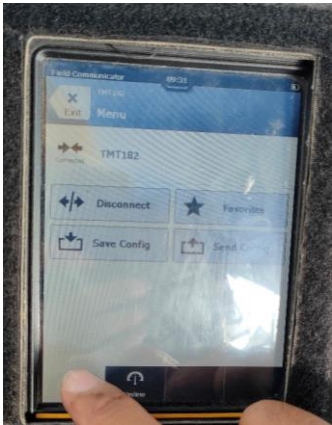

Fifteen step:
Then press the disconnect menu

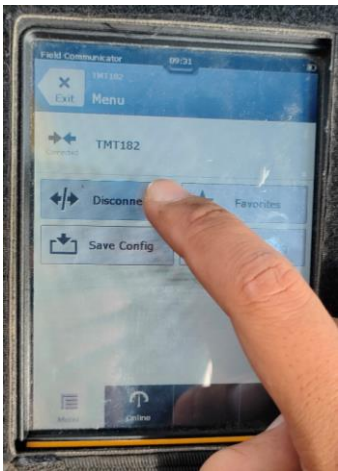

File: URV-LRV Range Settings Temperature Transmitter	Signer: Muhammad Chorihuddin	Date of issue: 30 Juni 2022	version: 1.0
---	---	------------------------------------	--------------