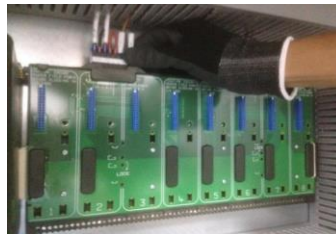
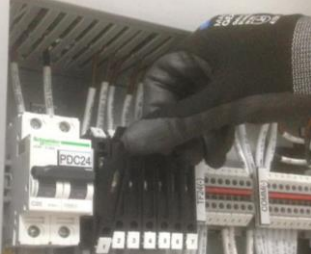
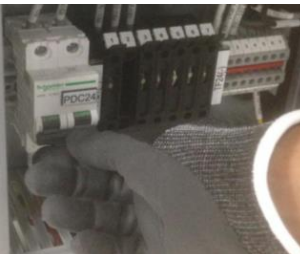
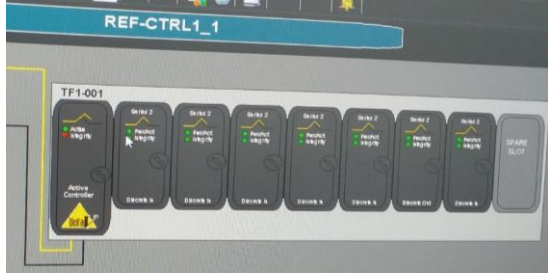


 PT. MNA SERANG	WORKING INSTRUCTION	WI/MNASRG-E&I-19-203	
		Dept.	ENGINEERING
	DELTA V DCS BACKPLATE RM	Section	E&I
		Revision	0
		Effective Date	01-Sep-19
		Page	1 of 2

Identifikasi / Identification	
	
LED Integrity pada layer Diagnostic berwarna merah (<i>Integrity LED on Diagnostic screen turns red</i>)	LED dari Modul I/O tidak menyala (<i>No LED module lit</i>)
Reset Modul / Modul Reset	
 	 
Lepaskan relay fuse & turunkan breaker DC (<i>Disconnect The fuse relay and lower the DC Breaker.</i>)	Lepaskan kabel power yang terhubung ke backplate, sambungkan kembali sekitar 10 detik kemudian(<i>Unplug the power cable which connected to the backplate, re-plug it in approximately 10 seconds later</i>)
 	
Sambungkan relay fuse & naikan breaker DC (<i>Re-connect the fuse relay and rise the DC Breaker.</i>)	Check modul HMI(<i>Check the HMI Modul</i>)