

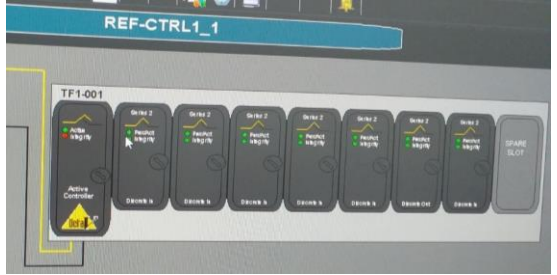
 PT. MNA SERANG	WORKING INSTRUCTION DELTA V DCS RIO INTERFACE RM	WI/MNASRG-E&I-19-206	
		Dept.	ENGINEERING
		Section	E&I
		Revision	0
		Effective Date	01-Sep-19
		Page	1 of 2

Identifikasi / Identification

	
LED Integrity pada layer Diagnostic berwarna merah (<i>Integrity LED on Diagnostic screen turns red</i>)	LED Error dari Controller berwarna merah (<i>Controller Error LED module turns red</i>)

Reset Modul / Modul Reset

 	 
Kendurkan Sekrup dan check secara manual (<i>Loosen the screw and check Manually</i>)	Lepaskan Modul & pastikan tidak ada pin yang rusak(<i>Unplug the modul & make sure no pin(s) bended</i>)

 	
Kencangkan Sekrup dan check secara manual (<i>Tighten the screw and check manually</i>)	Pasang kembali controller & Check modul HMI(<i>Re-Plug the controller & Check the HMI Modul</i>)