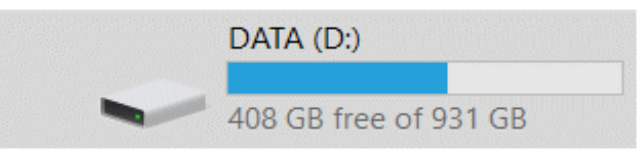
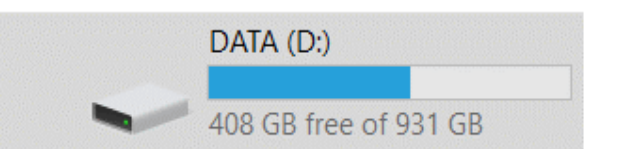


 PT. MNA SERANG	WORKING INSTRUCTION		WI/MNASRG-E&I-19-207	
	DELTA V DCS SERVER CHECK		Dept.	ENGINEERING
			Section	E&I
			Revision	0
			Effective Date	01-Sep-19
			Page	1 of 1

Memeriksa Unit Baterai / *Checking battery Unit*

	
---	--


Periksa indikasi error pada Panel server utama (<i>Check the error indication on main Server Panel</i>)	Check .kapasitas spare dari System, > 20% (<i>Check the Spare capacity, >20%</i>)
---	--

	
--	--

Periksa indikasi error pada Panel server Kedua (<i>Check the error indication on secondary Server Panel</i>)	Check .kapasitas spare dari System, > 20% (<i>Check the Spare capacity, >20%</i>)
--	--

	
---	--

Turunkan breaker pada salah satu panel Server (<i>Lower the breaker on one of the Server Panel</i>)	Check if the system still running or not (redundant) (<i>Check if the system still running or not (redundant)</i>)
---	--

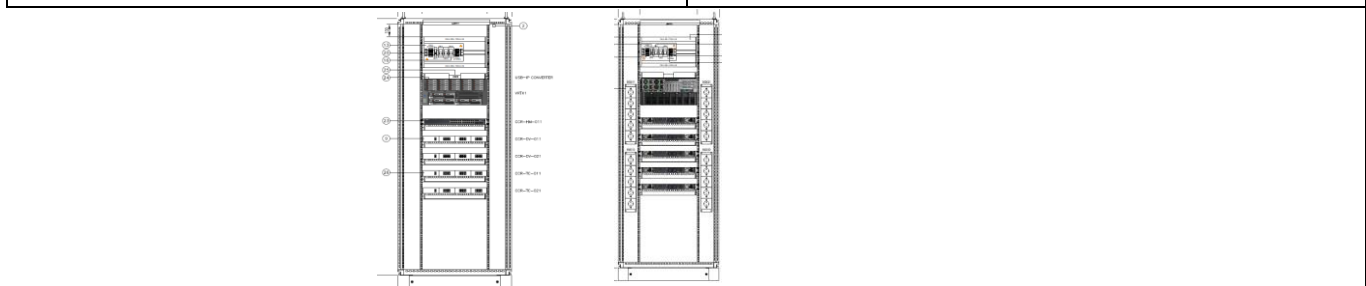

Bersihkan Panel dari debu & kotoran (<i>Clean the panel from dirt & dust</i>)
