



Menyimpan Parameter Tuning / Saving Tuning Parameter



First step: Klik 2 kali Ikon pada Layar HMI (*Double Click the designated Icon on the HMI Screen*)

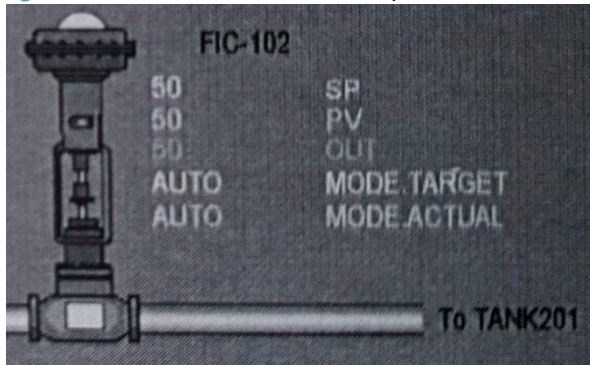


Second step: Klik tombol "Detail Faceplate) (*Click the "Detail Faceplate Button"*)

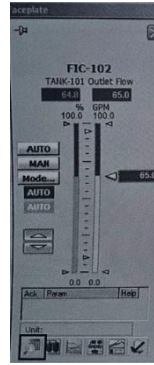


Third step: Atur parameter sesuai dengan seharusnya (*Set the Tuning Parameter accordingly*)

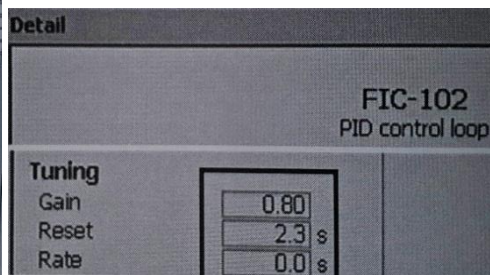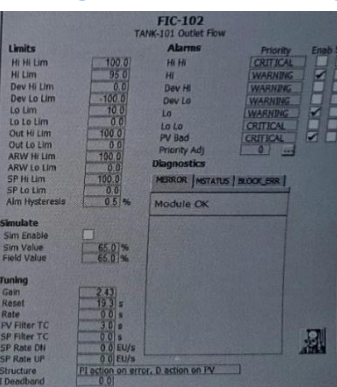

Fourth step : Pilih Parameter yang akan di simpan, dan klik OK (*Choose the parameter, and click OK*)

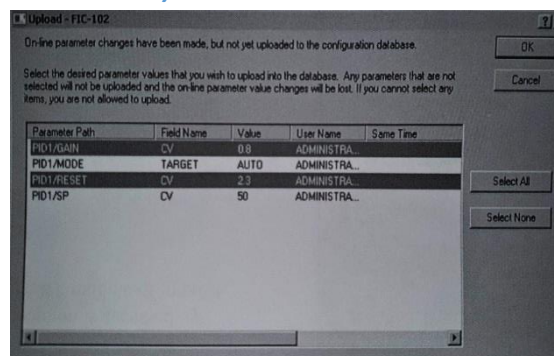

Fifth step: Tunggu hingga upload selesai (*Wait until The Upload Complete*)

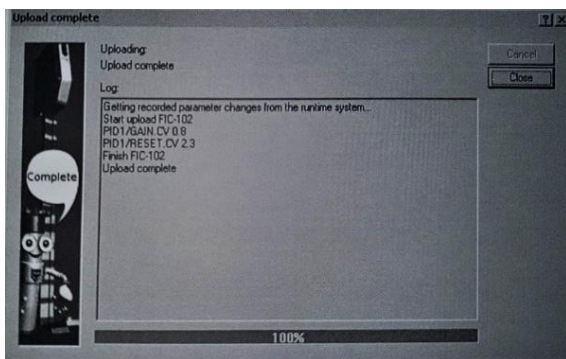

Last step: Koordinasi dengan tim operasional (*Coordination with operational team*)

