

Preventive Maintenance Cleaning VFD

First step:

Inform the workshop operation content, inform the operation purpose, and sign the work ticket.




Second step: Open the main circuit breaker at the MCC panel that supply power to drive, then do the LOTO




Third step: Wait about 5 minutes to let capacitors discharge before continue, the measure between the input power terminal (R,S,T) and grounding terminal (PE) is close to 0 V



Fourth step: Remove the front cover of the drive; remove the fastening screws (a), move the cover to the top side (b) and then up (c)

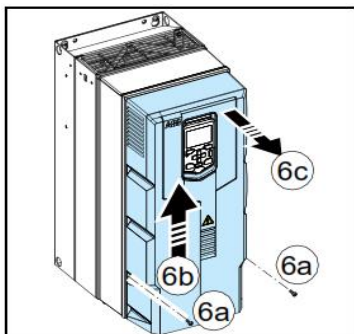

Fifth step: Remove the main cooling fan and the auxiliary cooling fan

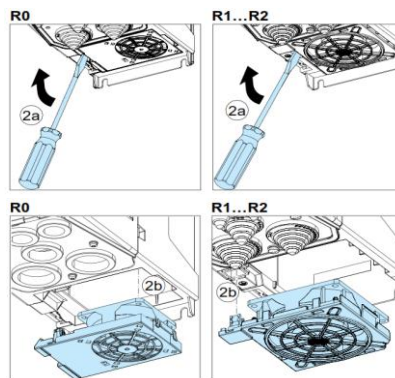

The sixth step: Blow clean, dry and oil free compressed air from bottom to top and simultaneously use a vacuum cleaner at the air outlet to trap the dust



Seventh step: Spray the contact cleaner to control panel and circuit board, then use a soft damp cloth to clean, avoid harsh cleaners which could scratch the display window



Eighth step: Reinstall the main cooling fan and auxiliary cooling fan, then reinstall the front cover.

