

Calibration Pressure with Pneumatic Pump

First step:

Inform the workshop operation content, inform the operation purpose, and sign the work ticket.



Second step:

Close the needle valve until it is completely closed and then take the pressure gauge from the needle valve



Third step:

Prepare the additel 916A Pneumatic Pressure tool



Fourth step:

Open the adjustable valve not to full, so you can increase and decrease the pressure on a small scale



Fifth step:

Select mode P or V to specify, calibrate using pressure or vacuum



Sixth step:

Install the additel 681 master gauge calibrator




Seventh step:

Install the Filter gauge so that no fluid falls into the calibrator



Eighth step:

Install the gauge to be calibrated (UUT) with the gauge filter

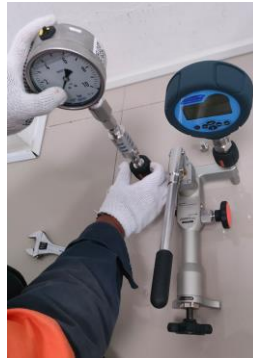

Nineth step:

Turn on the master gauge calibrator additel 681



Ten step:

Press the pump to increase the pressure to 1 bar



Eleven step:

Press the pump to increase the pressure to 10 barg



Twelve step:
Reinstall the pressure gauge



Thirteen step:
Make sure the needle valve is in the open position



fourteen step:
Put a calibration label on the gauge



File: WI-Calibration Pressure with
Pneumatic Pump

Signer: **Muhammad
Chorihuddin**

Date of issue: **31 July 2022**

version: 1.0