


Cimplicity

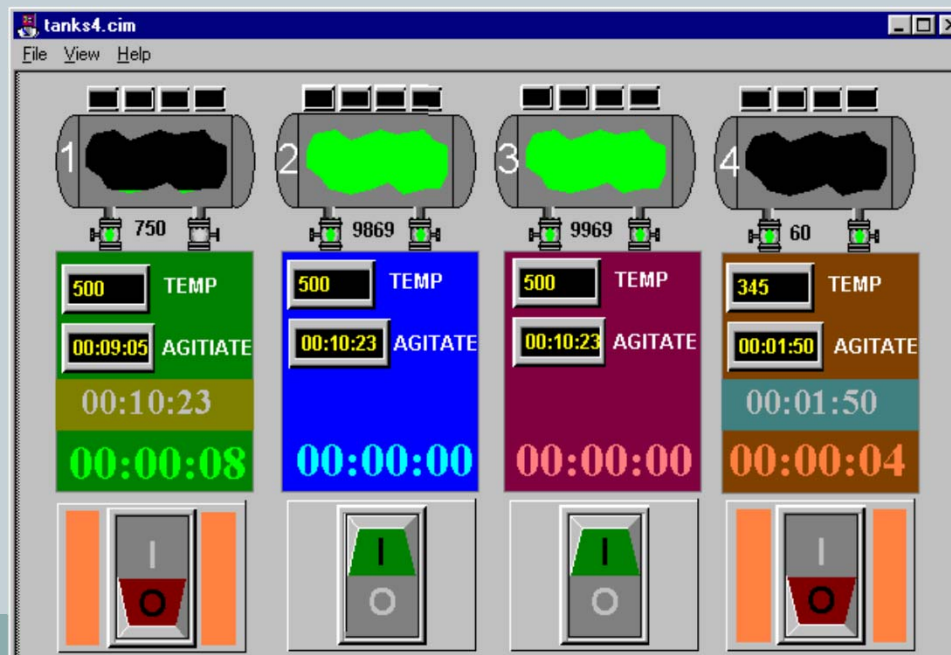

M. YAZID
13 AGUSTUS 2011



Materi




- Building a Screen
- Creating a Linked Object
- Logging
- Trending Logged Data
- Modifying and Linking Screens
- WebView

Introduction



● Start Demo

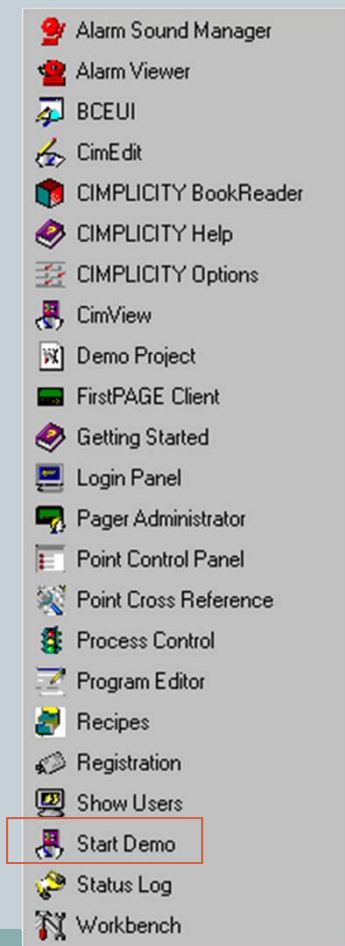

- Tekan Start, kemudian Programs, Kemudian CIMPLICITY, kemudian HMI, then Start Demo

Introduction



Introduction

Melihat plant dengan memilih Tab-tab : Process, Discrete, Packaging, dan Facilities di atas halaman.



Introduction





Klik tab Process, maka akan keluar halaman berikut :

Untuk melihat cara kerjanya cukup tekan gambar tanda tanya di pojok kanan bawah dan bisa didengarkan suaranya juga dengan speaker.




Introduction

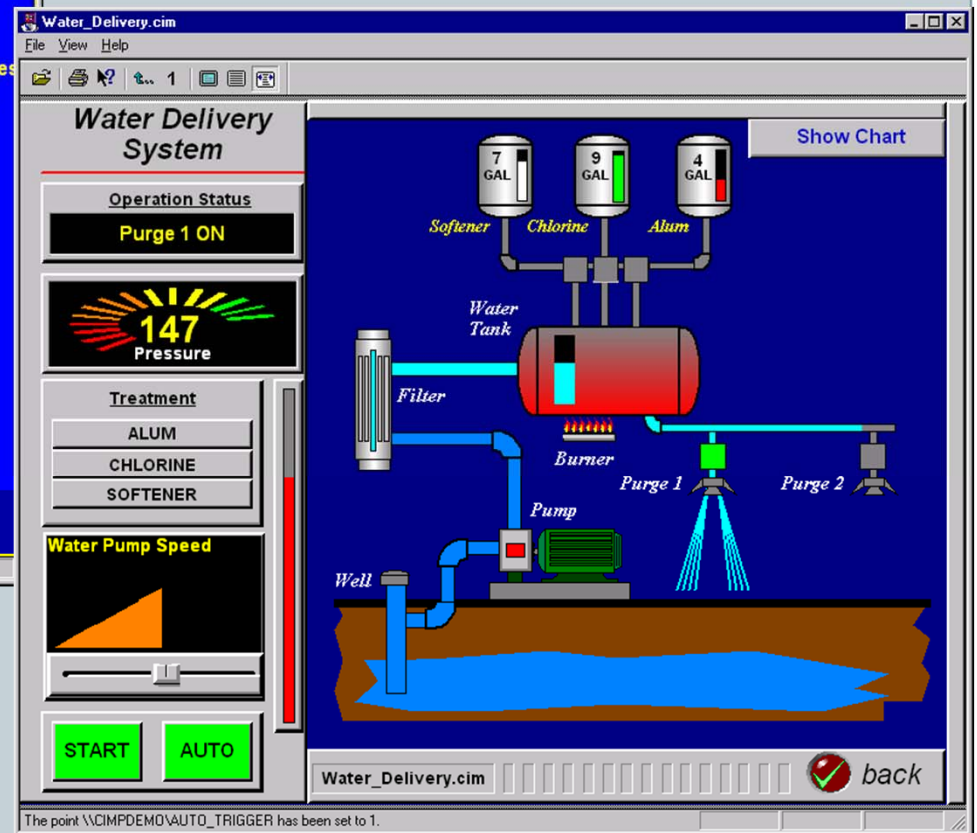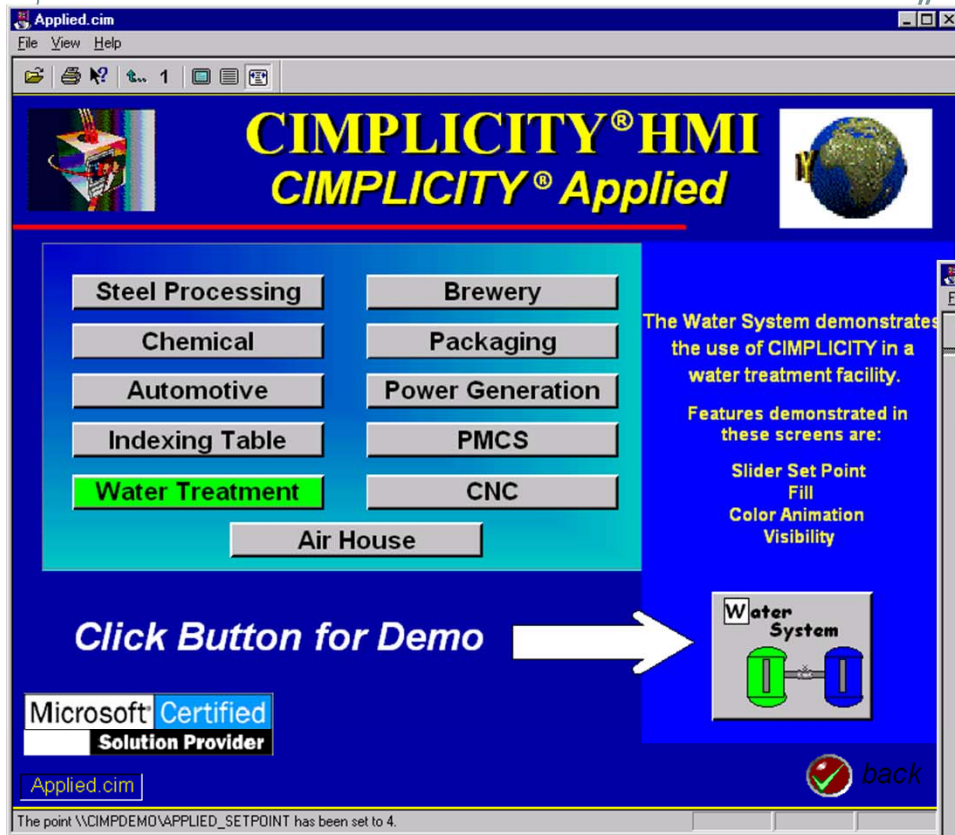

Creating a New Point

1. Buka Cimplicity Workbench dan Open project CimDemo.cfg

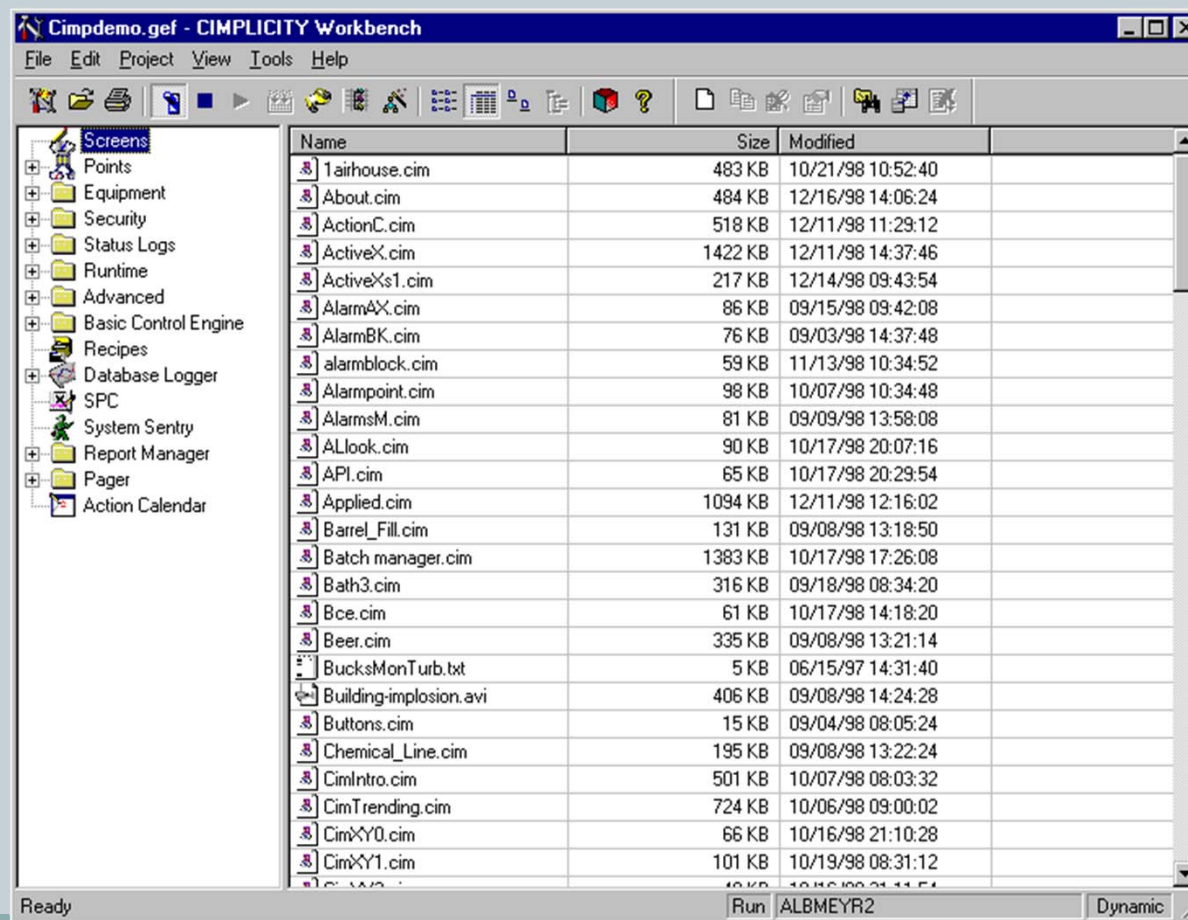

Creating a New Point



Let's start by defining a new point that will measure temperature. Click on "Points" in the left hand pane of the Workbench – all points in the project will be displayed in the right hand pane. Now, click on the "New" button in the toolbar to start creating a new point.

Enter T1 in the Point ID field. This will be the name of our point. Now, click on Virtual since we are not connected to a PLC, and be sure to select Analog. When you have entered all this information, click on OK.

A screenshot of a software dialog box titled "New Point". The dialog box has a blue title bar with a close button (X) in the top right corner. Inside the dialog, there is a "Point ID:" label followed by a text input field containing "T1". To the right of this field are "OK" and "Cancel" buttons. Below the "Point ID" field is a "Type" section with two radio buttons: "Device" and "Virtual". The "Virtual" radio button is selected. Next to the "Device" radio button is a text field containing "@MASTER" and two small buttons, one with three dots and one with a right arrow. Below the "Type" section is a "Class" section with three radio buttons: "Analog", "Boolean", and "Text". The "Analog" radio button is selected.

Creating a New Point

Point Properties - T1

General Virtual Alarm

Description:

Data Type: Elements: ☐ Read Only

Advanced >>

Point Properties - T1

General Virtual Alarm

Definition

Alarm Message: >

Alarm Limits



Hi-2:	90
Hi-1:	80
Lo-1:	20
Lo-2:	10

Advanced >>


OK Cancel Apply Help

Open CimEdit

Open Wizard Library, Copy Object

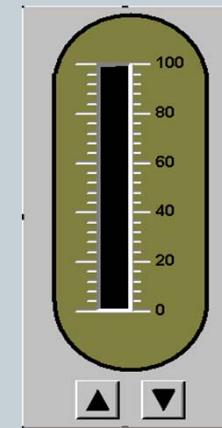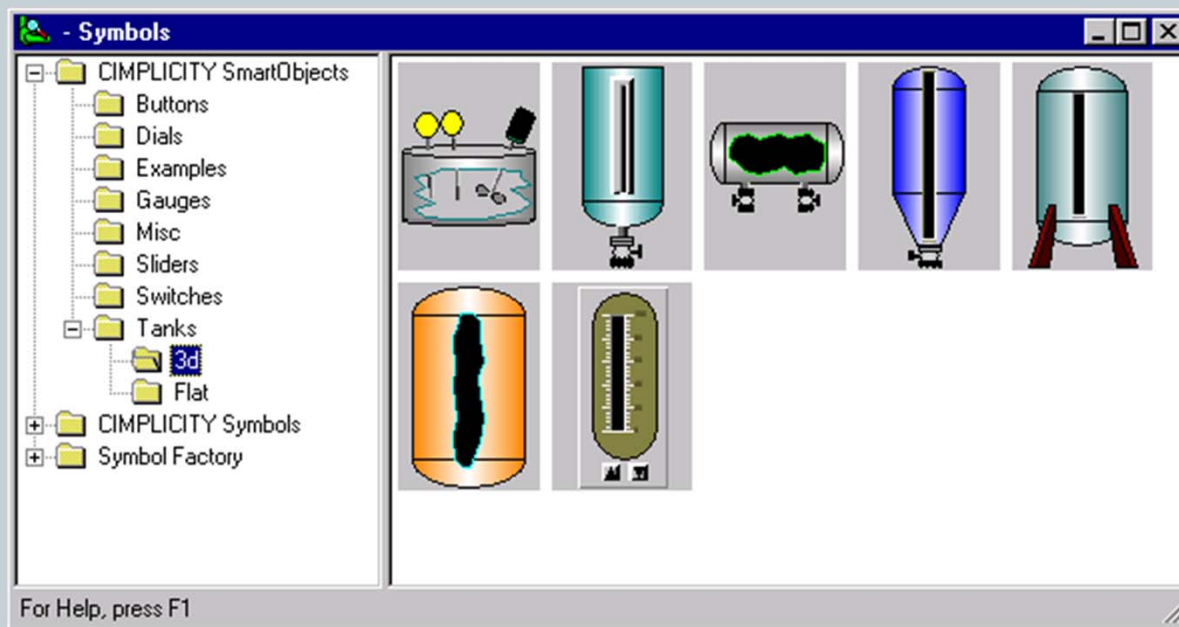

Open CimEdit

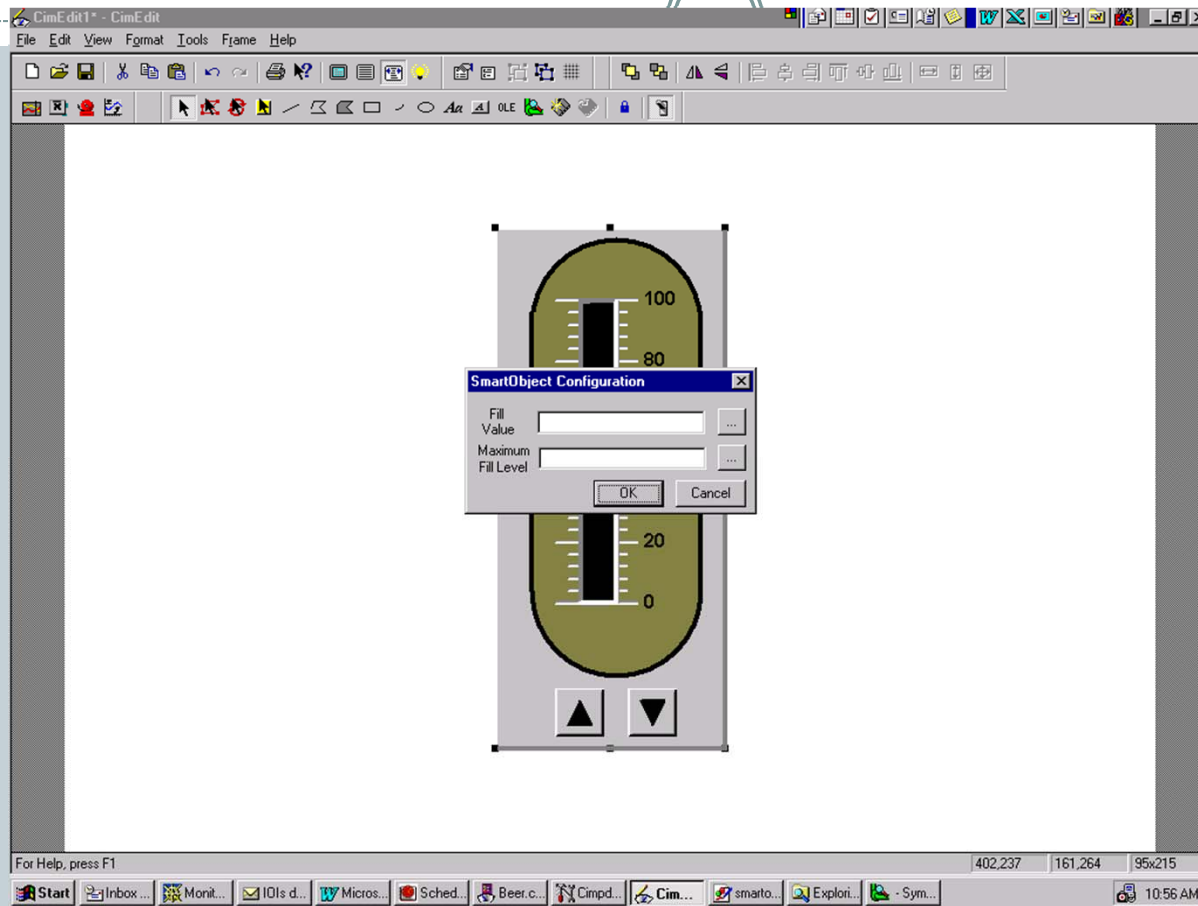

Open CimEdit

Select a Point

File View

Project : CIMPDEMO

Point ID *

Device ID ...

Resource ...

Point Type ...

Description

OK

Cancel

Browse

Point ID	Device ID	Resol
SYM_ANALOG	\$GLOBAL	\$SYS
SYM_DIGITAL	\$GLOBAL	\$SYS
SYSPTSCR1	\$GLOBAL	\$MAC
SYSTEM_DATE	\$GLOBAL	FACT
SYSTEM_TIME	\$GLOBAL	FACT
T1	\$GLOBAL	90-30

Records Retrieved : 368

SmartObject Configuration

Fill Value \\CIMPDEMO\T1


Maximum Fill Level 100

OK


Cancel

Test Screen


Klik

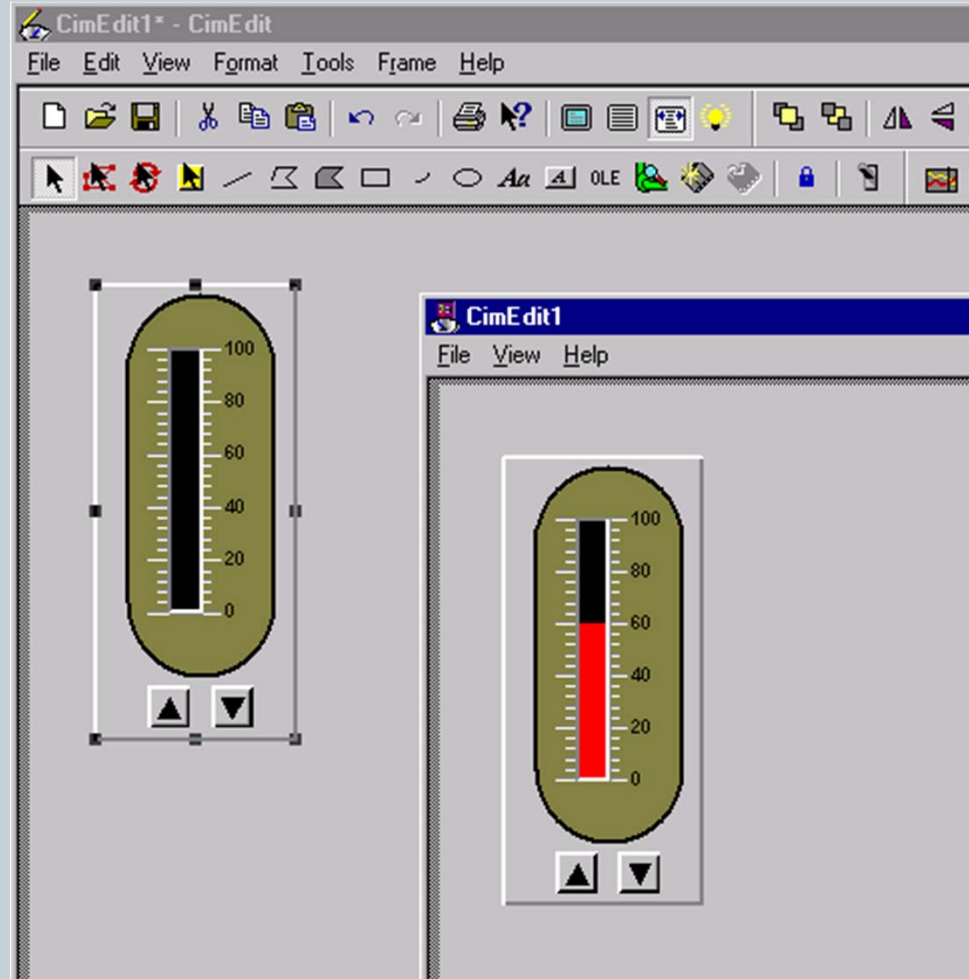

Slider Object

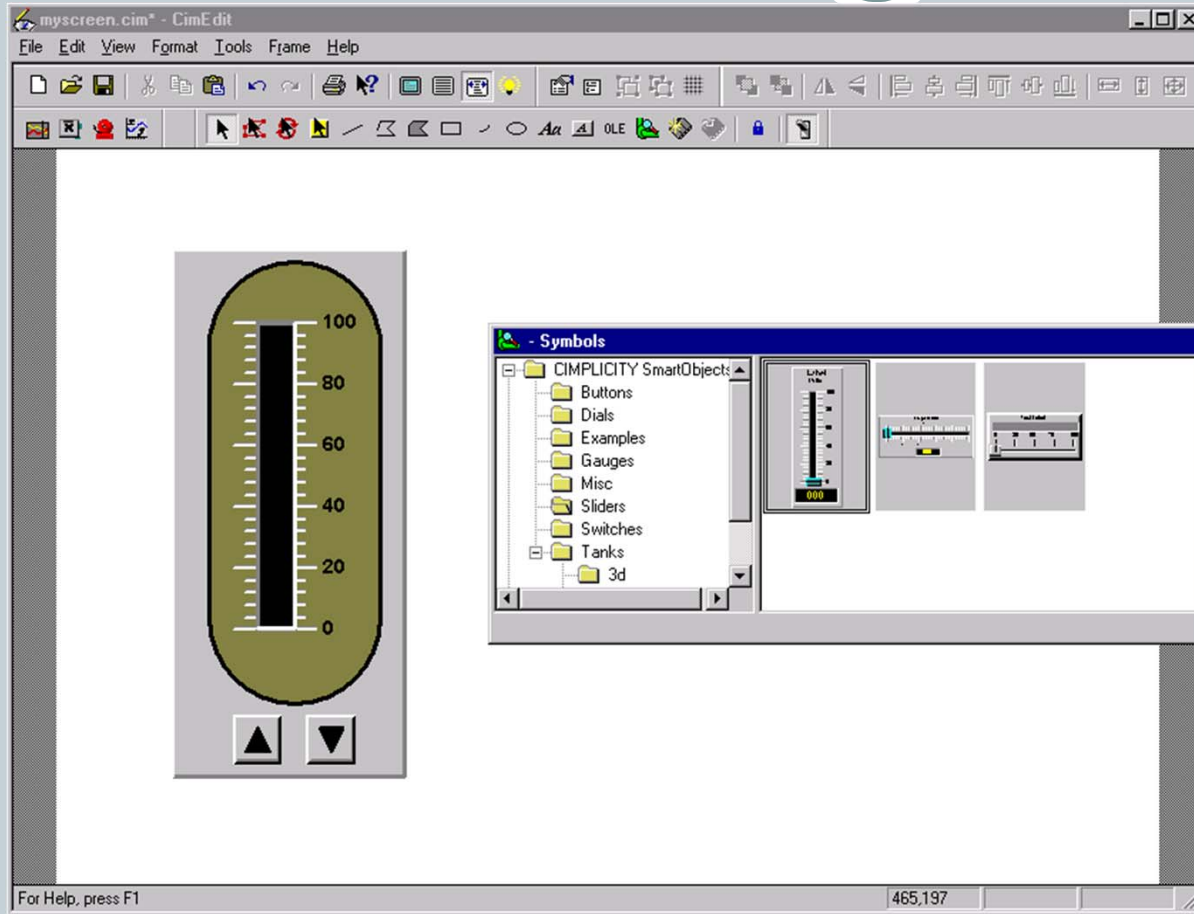

Slider Object

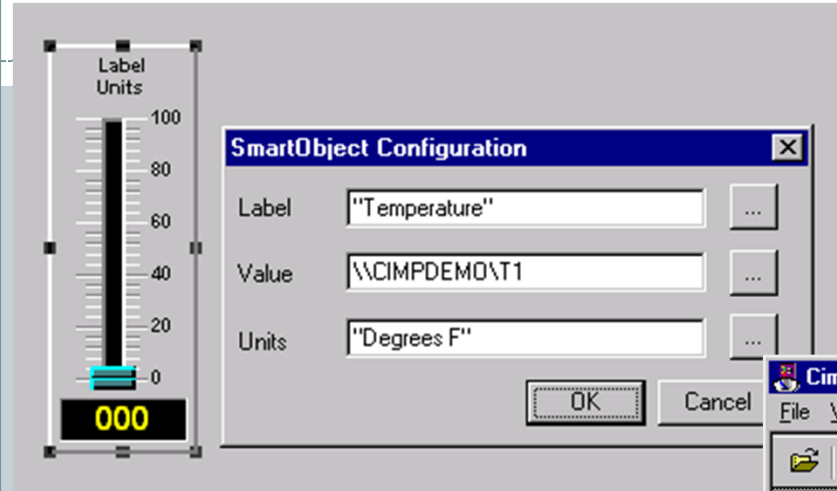

TEST !

