


ATMega328P

Assembly Programming

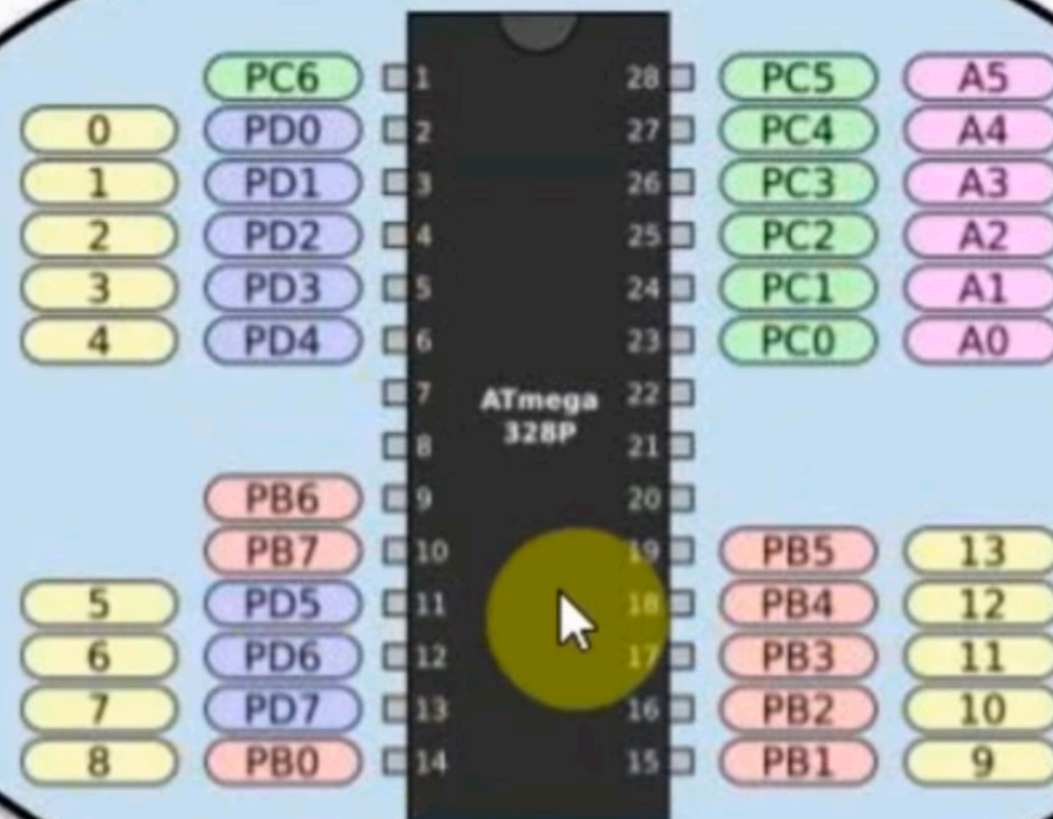

Instruction Set

ADD	SUB	AND	OR	MUL
JMP	RCALL	RET	CPI	BREQ
MOV	IN	OUT	LDI	STS
ROL	CBI	CLC	SWAP	ROR
BREAK	NOP	SLEEP	WDR	