


## INSPECTION

### 1. Connector connected:

#### INSPECT COMBINATION METER CIRCUIT

Connect the connector "A" and "B" to the combination meter and inspect the wire harness side connectors from the back side as shown in the table.

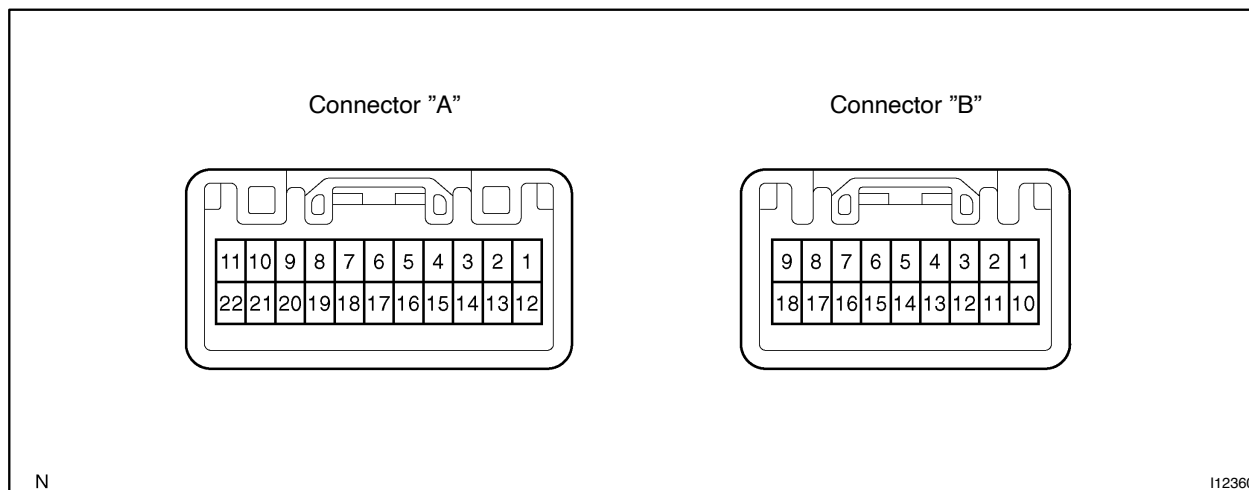

| Tester connection | Condition                                                            | Specified condition      |
|-------------------|----------------------------------------------------------------------|--------------------------|
| A1 - Ground       | Constant                                                             | Battery positive voltage |
| A2 - Ground       | Ignition switch OFF                                                  | No voltage               |
| A2 - Ground       | Ignition switch ON                                                   | Battery positive voltage |
| A3 - Ground       | Ignition switch ON and O/D off switch ON                             | No voltage               |
| A3 - Ground       | Ignition switch ON and O/D off switch OFF                            | Battery positive voltage |
| A4 - Ground       | Light control switch OFF                                             | No voltage               |
| A4 - Ground       | Light control switch HI                                              | Battery positive voltage |
| A5 - Ground       | Ignition switch OFF, LOCK or ACC                                     | No voltage               |
| A5 - Ground       | Ignition switch ST                                                   | Battery positive voltage |
| A6 - Ground       | Ignition switch ON and turn signal switch OFF or LEFT                | No voltage               |
| A6 - Ground       | Ignition switch ON and turn signal switch RIGHT                      | Battery positive voltage |
| A9 - Ground       | Ignition switch ON and window washer level warning switch float DOWN | No voltage               |
| A9 - Ground       | Ignition switch ON and window washer level warning switch float UP   | Battery positive voltage |
| A11 - Ground      | Ignition switch ON and driver's seat belt is unfastened              | No voltage               |
| A11 - Ground      | Ignition switch ON and driver's seat belt is fasted                  | Battery positive voltage |
| A12 - Ground      | Ignition switch ON and driver door is opened                         | No voltage               |
| A12 - Ground      | Ignition switch ON and driver door is closed                         | Battery positive voltage |

## BODY ELECTRICAL - COMBINATION METER

|              |                                                                                                     |                          |
|--------------|-----------------------------------------------------------------------------------------------------|--------------------------|
| A13 - Ground | Ignition switch ON and passenger door is opened                                                     | No voltage               |
| A13 - Ground | Ignition switch ON and passenger door is closed                                                     | Battery positive voltage |
| A14 - Ground | Constant                                                                                            | Continuity               |
| A17 - Ground | Constant                                                                                            | Continuity               |
| A18 - Ground | Ignition switch ON and fuel sender gauge float UP                                                   | 0.3 - 0.6 V              |
| A18 - Ground | Ignition switch ON and fuel sender gauge float DOWN                                                 | 4.9 - 6.9 V              |
| A19 - Ground | Ignition switch ON and slowly move the wheel                                                        | 4.5 - 5.5 V              |
| A20 - Ground | Ignition switch ON and slowly move the wheel                                                        | Battery positive voltage |
| A21 - Ground | Key unlock warning switch ON (Key is inserted)                                                      | No voltage               |
| A21 - Ground | Key unlock warning switch OFF (Key is removed)                                                      | Battery positive voltage |
| A22 - Ground | Ignition switch ON and passenger's seat belt is unfastened                                          | No voltage               |
| A22 - Ground | Ignition switch ON and passenger's seat belt is fastened                                            | Battery positive voltage |
| B2 - Ground  | Ignition switch ON and rheostat light control volume CANCEL position                                | No voltage               |
| B2 - Ground  | Ignition switch ON and rheostat light control volume maximum                                        | Battery positive voltage |
| B4 - Ground  | Light control switch OFF                                                                            | No voltage               |
| B4 - Ground  | Light control switch TAIL or HEAD                                                                   | Battery positive voltage |
| B5 - Ground  | Ignition switch ON and engine coolant temperature HOT (Red) warning light light up                  | No voltage               |
| B5 - Ground  | Ignition switch ON and engine coolant temperature HOT (Red) warning light does not light up         | Battery positive voltage |
| B6 - Ground  | Ignition switch ON and engine coolant temperature COOL (Blue) warning light light up                | No voltage               |
| B6 - Ground  | Ignition switch ON and engine coolant temperature COOL (Blue) warning light does not light up       | Battery positive voltage |
| B7 - Ground  | Ignition switch ON and engine oil level warning light up                                            | No voltage               |
| B7 - Ground  | Ignition switch ON and engine oil level warning does not light up                                   | Battery positive voltage |
| B8 - Ground  | Ignition switch ON and engine is stopped                                                            | No voltage               |
| B8 - Ground  | Ignition switch ON and engine is running                                                            | Battery positive voltage |
| B11 - Ground | Constant                                                                                            | Continuity               |
| B12 - Ground | Ignition switch OFF                                                                                 | No voltage               |
| B12 - Ground | Ignition switch ON                                                                                  | Battery positive voltage |
| B13 - Ground | Ignition switch ON and engine is stopping                                                           | No voltage               |
| B13 - Ground | Ignition switch ON and engine is running                                                            | Battery positive voltage |
| B14 - Ground | Ignition switch ON and SRS indicator light light up                                                 | No voltage               |
| B14 - Ground | Ignition switch ON and SRS indicator does not light up                                              | Battery positive voltage |
| B15 - Ground | Ignition switch ON, parking brake lever is released and brake fluid level warning switch float DOWN | No voltage               |

**BODY ELECTRICAL - COMBINATION METER**

|              |                                                                                                         |                          |
|--------------|---------------------------------------------------------------------------------------------------------|--------------------------|
| B15 - Ground | Ignition switch ON,<br>parking brake lever is released and<br>brake fluid level warning switch float UP | Battery positive voltage |
| B16 - Ground | Ignition switch ON and<br>turn signal switch OFF or RIGHT                                               | No voltage               |
| B16 - Ground | Ignition switch ON and<br>turn signal switch LEFT                                                       | Battery positive voltage |
| B17 - Ground | Ignition switch ON and ABS is error                                                                     | No voltage               |
| B17 - Ground | Ignition switch ON and ABS is normal                                                                    | Battery positive voltage |
| B18 - Ground | Ignition switch ON and<br>passenger's seat belt warning light up                                        | No voltage               |
| B18 - Ground | Ignition switch ON and<br>passenger's seat belt warning does not light up                               | Battery positive voltage |

If circuit is not as specified, wiring diagram and inspect the circuits connected to other parts.

**2. INSPECT SPEEDOMETER ON-VEHICLE**

Using a speedometer tester, inspect the speedometer for allowable indication error and check the operation of the odometer.

HINT:

Tire wear and tire over or under inflation will increase the indication error.

| USA (mph)           |                 | CANADA (km/h)       |                 |
|---------------------|-----------------|---------------------|-----------------|
| Standard indication | Allowable range | Standard indication | Allowable range |
| 20                  | 18 - 24         | 20                  | 17 - 24         |
| 40                  | 38 - 44         | 40                  | 38 - 46         |
| 60                  | 58 - 66         | 60                  | 57.5 - 67       |
| 80                  | 78 - 88         | 80                  | 77 - 88         |
| 100                 | 98 - 110        | 100                 | 96 - 109        |
|                     |                 | 120                 | 115 - 130       |
|                     |                 | 140                 | 134 - 151.5     |
|                     |                 | 160                 | 153 - 173       |

If error is excessive, replace the speedometer.