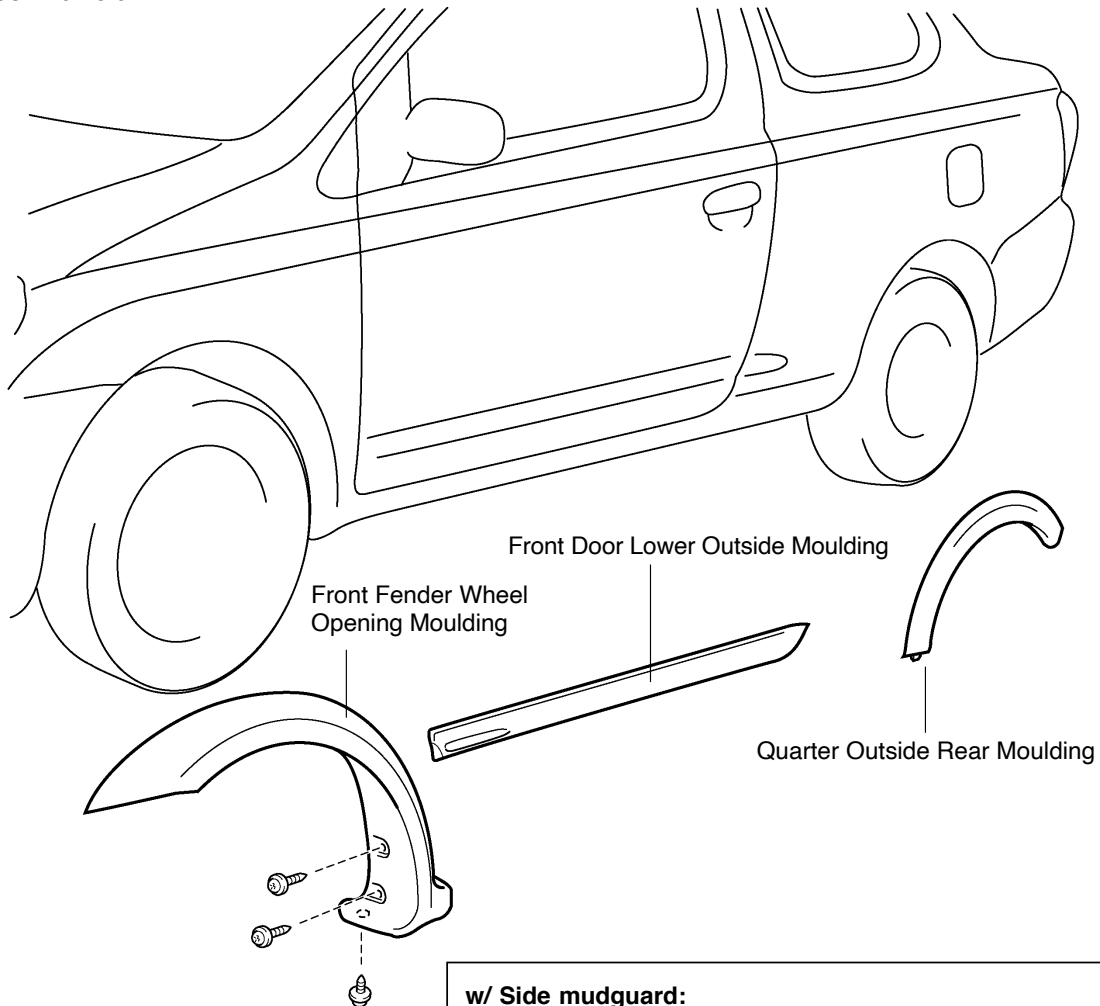
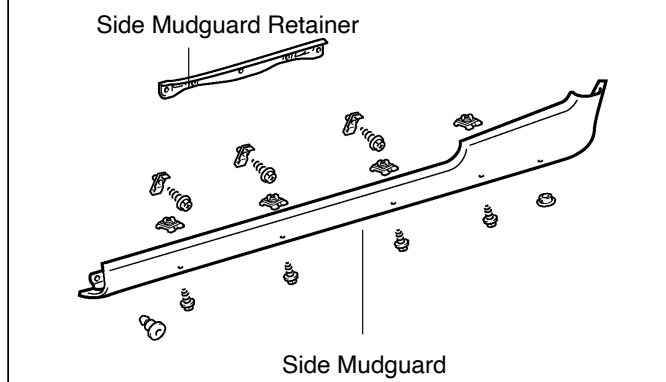


BODY OUTSIDE MOULDING COMPONENTS


BO2U9-01

2-Door vehicle:**w/ Side mudguard:**


T

H12711

4-Door vehicle:

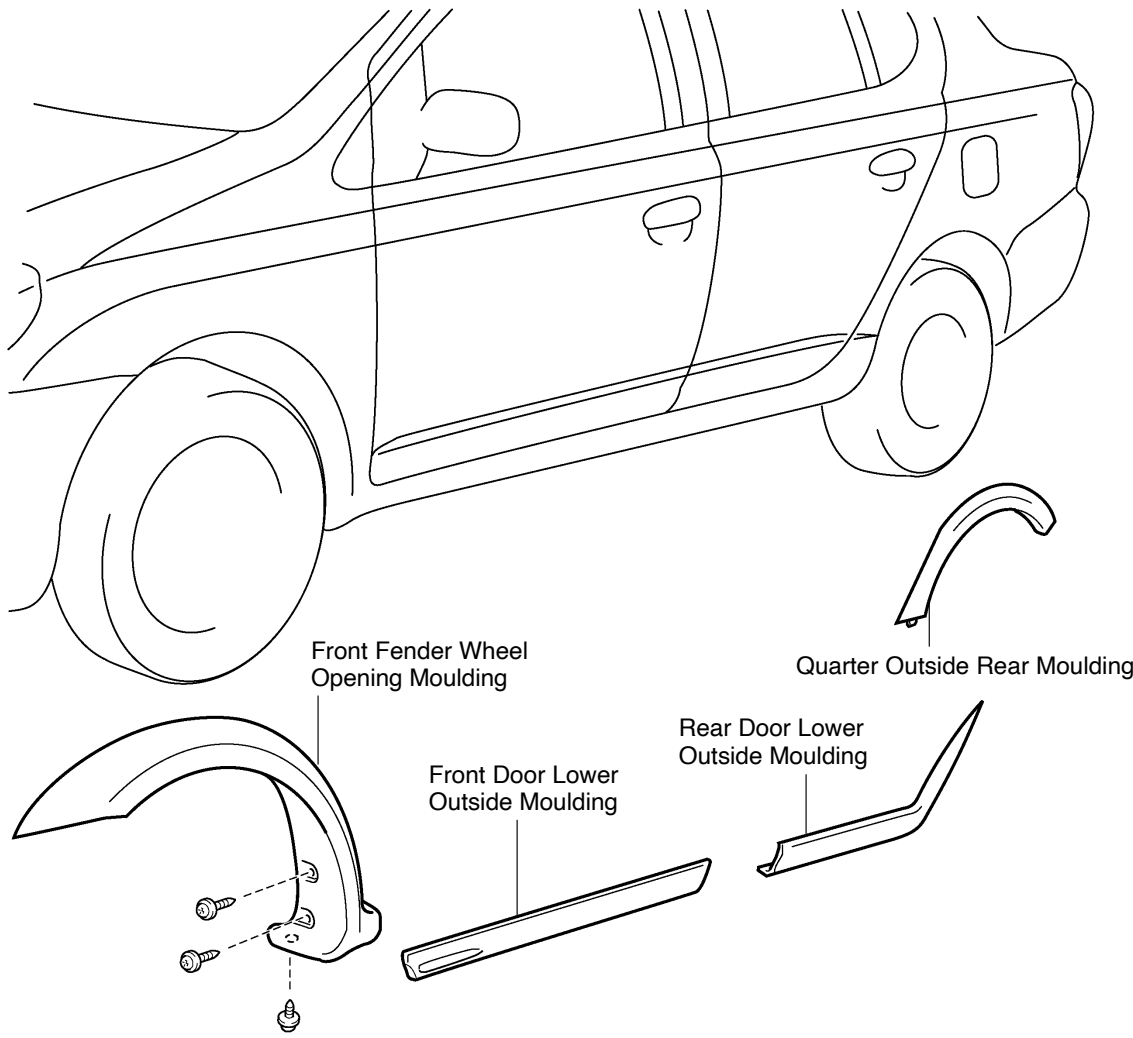

w/ Side mudguard:

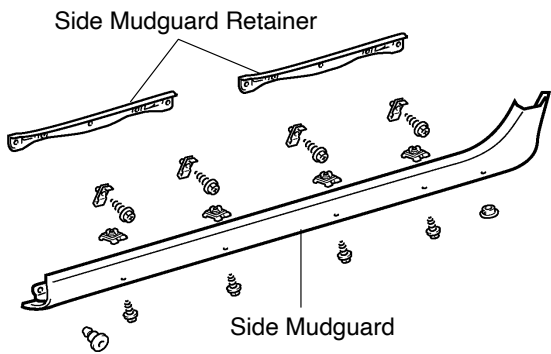

T


H12712

REMOVAL

1. w/ Front spoiler:

REMOVE FRONT SPOILER (See page [BO-4](#))

- (a) Remove the fender liner.
- (b) Remove the 3 nuts, screw and front bumper extension.

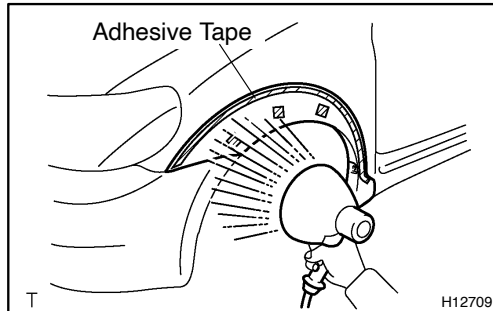

2. REMOVE FRONT FENDER WHEEL OPENING MOULDING

- (a) Remove the fender liner.
- (b) Remove the bolt and 3 screws.
- (c) Using a heat light, heat the moulding to 20 - 30°C (68 - 86°F).

NOTICE:


Do not heat the moulding excessively.

- (d) Cut the adhesive tape with a knife.

NOTICE:

Do not damage the body.

- (e) Remove the moulding.

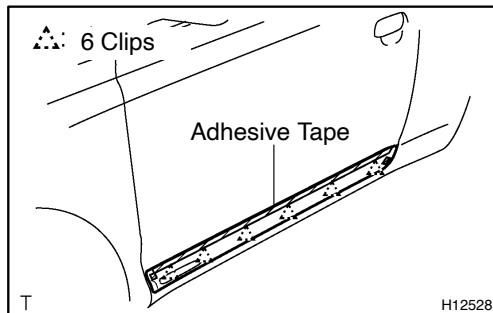

3. 2-Door vehicle:

REMOVE FRONT DOOR LOWER OUTSIDE MOULDING

- (a) Using a heat light, heat the moulding to 20 - 30°C (68 - 86°F).


NOTICE:

Do not heat the moulding excessively.

- (b) Cut the adhesive tape with a knife.

NOTICE:

- If reusing the moulding, take care not to damage the moulding.
 - Do not damage the body.
- (c) Remove the moulding.

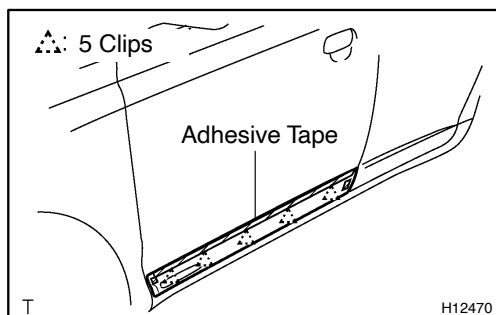

4. 4-Door vehicle:
REMOVE FRONT DOOR LOWER OUTSIDE MOULDING

- (a) Using a heat light, heat the moulding to 20 - 30°C (68 - 86°F).


NOTICE:

Do not heat the moulding excessively.

- (b) Cut the adhesive tape with a knife.

NOTICE:

- **If reusing the moulding, take care not to damage the moulding.**
 - **Do not damage the body.**
- (c) Remove the moulding.

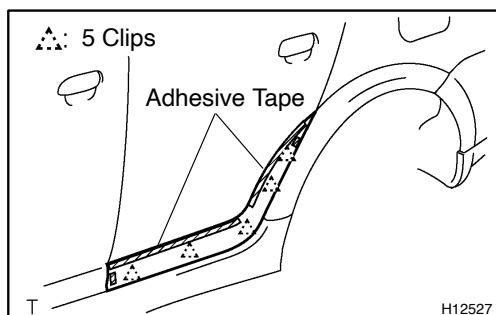

5. 4-Door vehicle:
REMOVE REAR DOOR LOWER OUTSIDE MOULDING

- (a) Using a heat light, heat the moulding to 20 - 30°C (68 - 86°F).

NOTICE:


Do not heat the moulding excessively.

- (b) Cut the adhesive tape with a knife.

NOTICE:

Do not damage the body.

- (c) Remove the moulding.

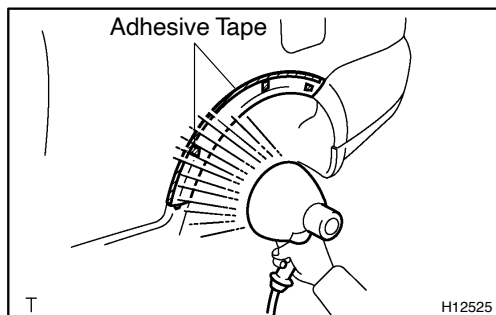

6. 2-Door vehicle:
REMOVE QUARTER OUTSIDE REAR MOULDING

- (a) Using a heat light, heat the moulding to 20 - 30°C (68 - 86°F).

NOTICE:


Do not heat the moulding excessively.

- (b) Cut the adhesive tape with a knife.

NOTICE:

Do not damage the body.

- (c) Remove the moulding.

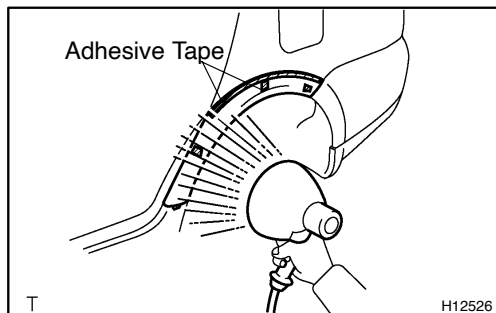

7. 4-Door vehicle:
REMOVE QUARTER OUTSIDE REAR MOULDING

- (a) Using a heat light, heat the moulding to 20 - 30°C (68 - 86°F).

NOTICE:

Do not heat the moulding excessively.

- (b) Cut the adhesive tape with a knife.

NOTICE:

Do not damage the body.

- (c) Remove the moulding.

8. w/ Side mudguard:**REMOVE SIDE MUDGUARD**

- (a) Remove the 4 bolts and side mudguard No. 2 retainer.
- (b) Remove the 3 bolts and screw.
- (c) 2-Door vehicle:
Using a heat light, heat the moulding to 20 - 30°C (68 - 86°F).

NOTICE:**Do not heat the moulding excessively.**

- (d) 2-Door vehicle:
Cut the adhesive tape with a knife.

NOTICE:**Do not damage the body.**

- (e) Remove the moulding.

INSTALLATION

1. w/ Side mudguard:

INSTALL SIDE MUDGUARD

- (a) 2-Door vehicle:
Clean the body mounting surface.
 - (1) Using a heat light, heat the body mounting surface to 40 - 60°C (104 - 140°F).
 - (2) Remove the adhesive tape from the body.
 - (3) Wipe off stains with cleaner.
- (b) Install the 4 bolts and side mudguard No. 2 retainer.
- (c) Install the side mudguard.
 - (1) 2-Door vehicle:
Using a heat light, heat the body and moulding.

Body: 40 - 60°C (104 - 140°F)

Moulding: 20 - 30°C (68 - 86°F)

NOTICE:

Do not heat the moulding excessively.

- (2) 2-Door vehicle:
Lift the moulding release sheet from face of moulding.

NOTICE:

When the moulding release sheet is removed, make sure that no dirt or dust can get onto the uncoated area.

- (3) Install the 3 bolts and screw.
- (4) Align the bosses with their corresponding holes in the body and press firmly on the moulding.


NOTICE:

Do not apply excessive force onto the moulding, but steady pressure with your thumbs.

2. 4-Door vehicle:

INSTALL QUARTER OUTSIDE REAR MOULDING

- (a) Clean the body mounting surface.
 - (1) Using a heat light, heat the body mounting surface to 40 - 60°C (104 - 140°F).
 - (2) Remove the adhesive tape from the body.
 - (3) Wipe off stains with cleaner.

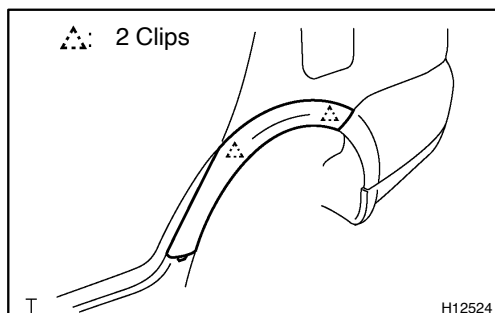

- (b) Install the quarter outside rear moulding.
 - (1) Using a heat light, heat the body and moulding.

Body: 40 - 60°C (104 - 140°F)
Moulding: 20 - 30°C (68 - 86°F)

NOTICE:

Do not heat the moulding excessively.

- (2) Lift the moulding release sheet from face of moulding.

NOTICE:

When the moulding release sheet is removed, make sure that no dirt or dust can get onto the uncoated area.


- (3) Align the bosses with their corresponding holes in the body and press firmly on the moulding.

NOTICE:

Do not apply excessive force onto the moulding, but steady pressure with your thumbs.

3. 2-Door vehicle:**INSTALL QUARTER OUTSIDE REAR MOULDING**

- (a) Clean the body mounting surface.
 - (1) Using a heat light, heat the body mounting surface to 40 - 60°C (104 - 140°F).
 - (2) Remove the adhesive tape from the body.
 - (3) Wipe off stains with cleaner.

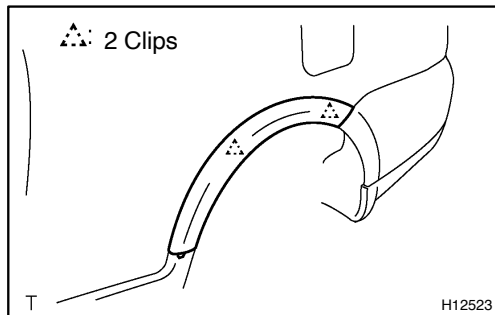

- (b) Install the quarter outside rear moulding.
 - (1) Using a heat light, heat the body and moulding.
Body: 40 - 60°C (104 - 140°F)
Moulding: 20 - 30°C (68 - 86°F)

NOTICE:

Do not heat the moulding excessively.

- (2) Lift the moulding release sheet from face of moulding.

NOTICE:

When the moulding release sheet is removed, make sure that no dirt or dust can get onto the uncoated area.


- (3) Align the bosses with their corresponding holes in the body and press firmly on the moulding.

NOTICE:

Do not apply excessive force onto the moulding, but steady pressure with your thumbs.

4. 4-Door vehicle:**INSTALL REAR DOOR LOWER OUTSIDE MOULDING**

- (a) Clean the body mounting surface.
 - (1) Using a heat light, heat the body mounting surface to 40 - 60°C (104 - 140°F).
 - (2) Remove the adhesive tape from the body.
 - (3) Wipe off stains with cleaner.

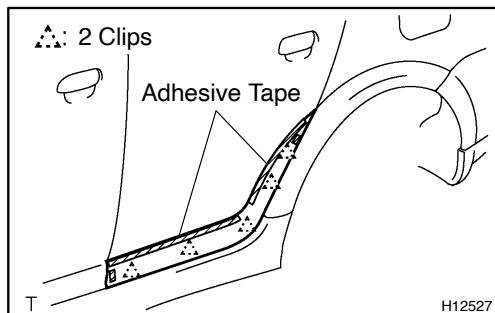

- (b) Install the rear door lower outside moulding.
- (1) Using a heat light, heat the body and moulding.
Body: 40 - 60°C (104 - 140°F)
Moulding: 20 - 30°C (68 - 86°F)

NOTICE:

Do not heat the moulding excessively.

- (2) Lift the moulding release sheet from face of moulding.

NOTICE:

When the moulding release sheet is removed, make sure that no dirt or dust can get onto the uncoated area.


- (3) Align the bosses with their corresponding holes in the body, and press firmly on the moulding.

NOTICE:

Do not apply excessive force onto the moulding, but steady pressure with your thumbs.

5. 4-Door vehicle:**INSTALL FRONT DOOR LOWER OUTSIDE MOULDING**

- (a) Clean the body mounting surface.
- (1) Using a heat light, heat the body mounting surface to 40 - 60°C (104 - 140°F).
 - (2) Remove the adhesive tape from the body.
 - (3) Wipe off stains with cleaner.

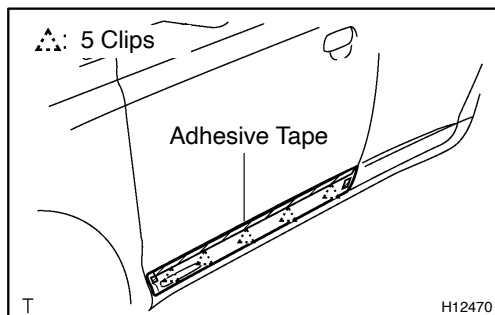

- (b) Install the front door lower outside moulding.
- (1) Using a heat light, heat the body and moulding.
Body: 40 - 60°C (104 - 140°F)
Moulding: 20 - 30°C (68 - 86°F)

NOTICE:

Do not heat the moulding excessively.

- (2) Lift the moulding release sheet from face of moulding.

NOTICE:

When the moulding release sheet is removed, make sure that no dirt or dust can get onto the uncoated area.


- (3) Align the bosses with their corresponding holes in the body, and press firmly on the moulding.

NOTICE:

Do not apply excessive force onto the moulding, but steady pressure with your thumbs.

6. 2-Door vehicle: INSTALL FRONT DOOR LOWER OUTSIDE MOULDING

- (a) Clean the body mounting surface.
- (1) Using a heat light, heat the body mounting surface to 40 - 60°C (104 - 140°F).
 - (2) Remove the adhesive tape from the body.
 - (3) Wipe off stains with cleaner.

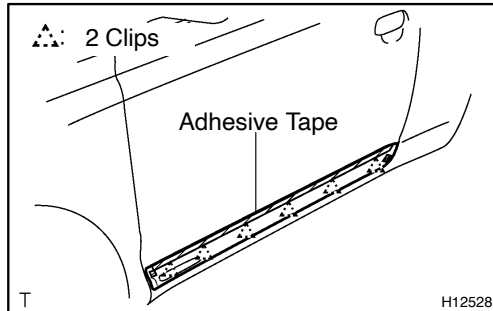

- (b) Install the front door lower outside moulding.
- (1) Using a heat light, heat the body and moulding.
Body: 40 - 60°C (104 - 140°F)
Moulding: 20 - 30°C (68 - 86°F)

NOTICE:

Do not heat the moulding excessively.

- (2) Lift the moulding release sheet from face of moulding.

NOTICE:

When the moulding release sheet is removed, make sure that no dirt or dust can get onto the uncoated area.


- (3) Align the bosses with their corresponding holes in the body, and press firmly on the moulding.

NOTICE:

Do not apply excessive force onto the moulding, but steady pressure with your thumbs.

7. INSTALL FRONT FENDER OUTSIDE MOULDING

- (a) Clean the body mounting surface.
- (1) Using a heat light, heat the body mounting surface to 40 - 60°C (104 - 140°F).
 - (2) Remove the adhesive tape from the body.
 - (3) Wipe off stains with cleaner.

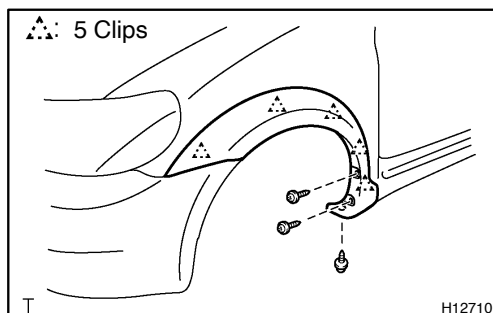

- (b) Install the front fender moulding.
- (1) Using a heat light, heat the body and moulding.
Body: 40 - 60°C (104 - 140°F)
Moulding: 20 - 30°C (68 - 86°F)

NOTICE:

Do not heat the moulding excessively.

- (2) Lift the moulding release sheet from face of moulding.

NOTICE:

When the moulding release sheet is removed, make sure that no dirt or dust can get onto the uncoated area.

- (3) Align the bosses with their corresponding holes in the body, and press firmly on the moulding.

NOTICE:

Do not apply excessive force onto the moulding, but steady pressure with your thumbs.

- (4) Install the 3 screws.
- (c) Install the fender liner.

8. w/ Front spoiler:

INSTALL FRONT SPOILER (See page [BO-4](#))