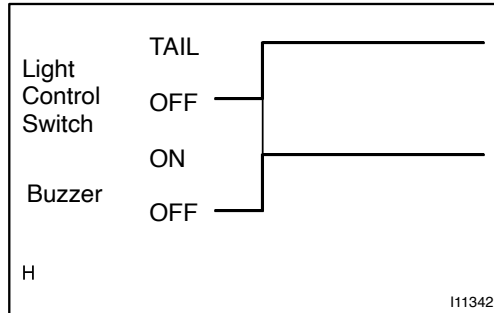


**7. INSPECT LIGHT AUTO TURN OFF BUZZER**

Check that the buzzer sound when driver's door is opened and turn light control switch position TAIL.

If operation is not as specified, replace the combination meter.
(See page [BE-42](#))