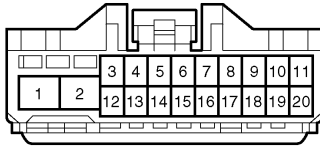


Wire harness side:e-14-1-A
N

I12364

**5. w/ Daytime running light system:
INSPECT DAYTIME RUNNING LIGHT MAIN RELAY
CIRCUIT**

Disconnect the connector from the relay and inspect the connector on the wire harness side.


Tester connection	Condition	Specified condition
1 - Ground *1	Light control switch OFF or TAIL	No continuity
1 - Ground *1	Light control switch HEAD	Continuity
1 - Ground *2	Constant	Continuity
2 - Ground	Constant	Continuity
7 - Ground	Headlight dimmer switch LOW beam	No continuity
7 - Ground	Headlight dimmer switch HIGH beam or FLASH	Continuity
10 - Ground	Brake fluid level warning switch OFF	No continuity
10 - Ground	Brake fluid level warning switch ON	Continuity
11 - Ground	Parking brake switch OFF (Parking brake pedal released)	No continuity
11 - Ground	Parking brake switch ON (Parking brake pedal depressed)	Continuity
3 - Ground	Constant	Battery positive voltage
9 - Ground	Engine Stop	No voltage
9 - Ground	Engine Running	Battery positive voltage
12 - Ground	Ignition switch LOCK or ACC	No voltage
12 - Ground	Ignition switch ON or START	Battery positive voltage

*1: Except Puerto Rico models

*2: Puerto Rico models

If circuit is specified, try replacing the relay with a new one.

If circuit is not as specified, inspect the circuits connected to other parts.

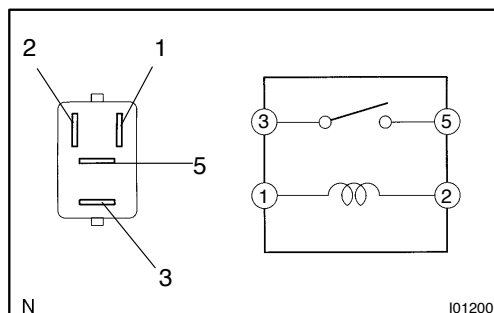

N

I01200

**6. w/ Daytime running light system:
INSPECT DAYTIME RUNNING LIGHT NO. 5 RELAY
CONTINUITY**

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminal 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.