


INSPECTION

1. Connector connected:

INSPECT COMBINATION METER CIRCUIT

Connect the connector "A" and "B" to the combination meter and inspect the wire harness side connectors from the back side as shown in the table.

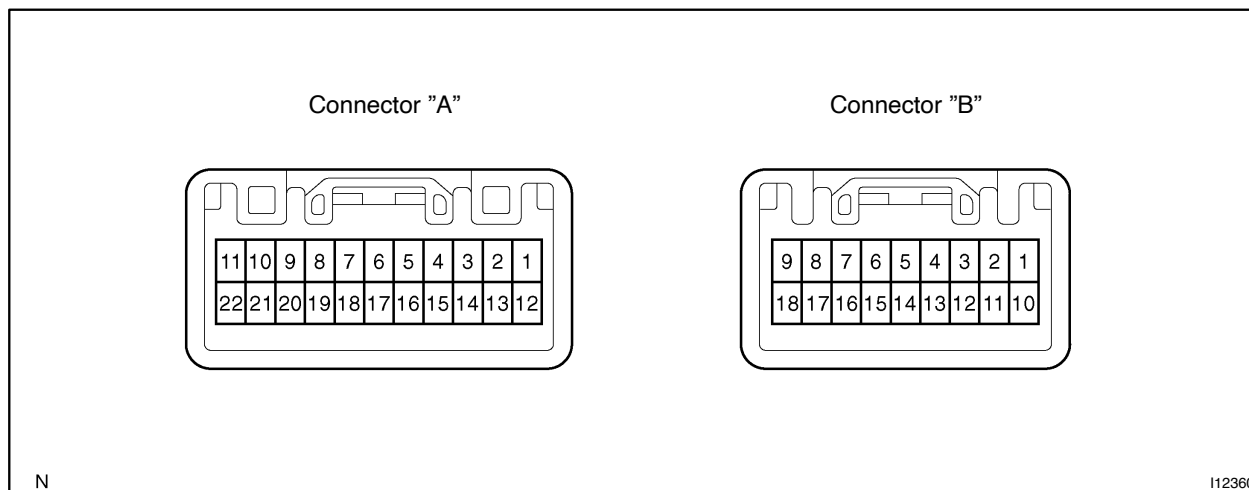

Tester connection	Condition	Specified condition
A1 - Ground	Constant	Battery positive voltage
A2 - Ground	Ignition switch OFF	No voltage
A2 - Ground	Ignition switch ON	Battery positive voltage
A3 - Ground	Ignition switch ON and O/D off switch ON	No voltage
A3 - Ground	Ignition switch ON and O/D off switch OFF	Battery positive voltage
A4 - Ground	Light control switch OFF	No voltage
A4 - Ground	Light control switch HI	Battery positive voltage
A5 - Ground	Ignition switch OFF, LOCK or ACC	No voltage
A5 - Ground	Ignition switch ST	Battery positive voltage
A6 - Ground	Ignition switch ON and turn signal switch OFF or LEFT	No voltage
A6 - Ground	Ignition switch ON and turn signal switch RIGHT	Battery positive voltage
A9 - Ground	Ignition switch ON and window washer level warning switch float DOWN	No voltage
A9 - Ground	Ignition switch ON and window washer level warning switch float UP	Battery positive voltage
A11 - Ground	Ignition switch ON and driver's seat belt is unfastened	No voltage
A11 - Ground	Ignition switch ON and driver's seat belt is fasted	Battery positive voltage
A12 - Ground	Ignition switch ON and driver door is opened	No voltage
A12 - Ground	Ignition switch ON and driver door is closed	Battery positive voltage