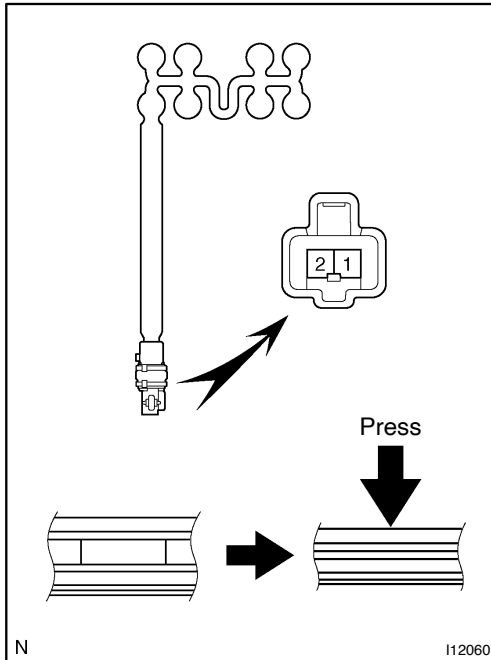
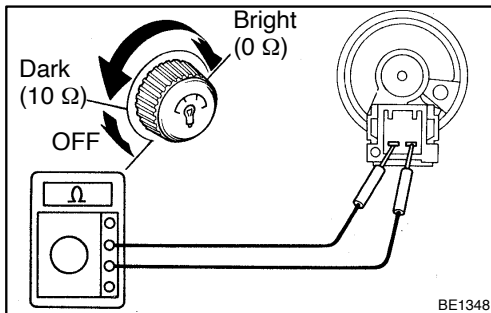


**18. Passenger's seat only:****INSPECT SEAT BELT WARNING OCCUPANT DETECTION SENSOR CONTINUITY**

Check that continuity exists between the terminals 1 and 2 when pressing the sensing part.

If operation is not as specified, replace the sensor.

**19. INSPECT LIGHT CONTROL RHEOSTAT**

- Turn the rheostat knob OFF, and check that there is no continuity between terminals. (Rheostat knob turned to fully counterclockwise.)
- Gradually, turn the rheostat knob from the dark side to bright side, and check that the resistance decreases from 10 to 0 Ω . (Rheostat knob turned to clockwise.)

If operation is not as specified, replace the rheostat.