
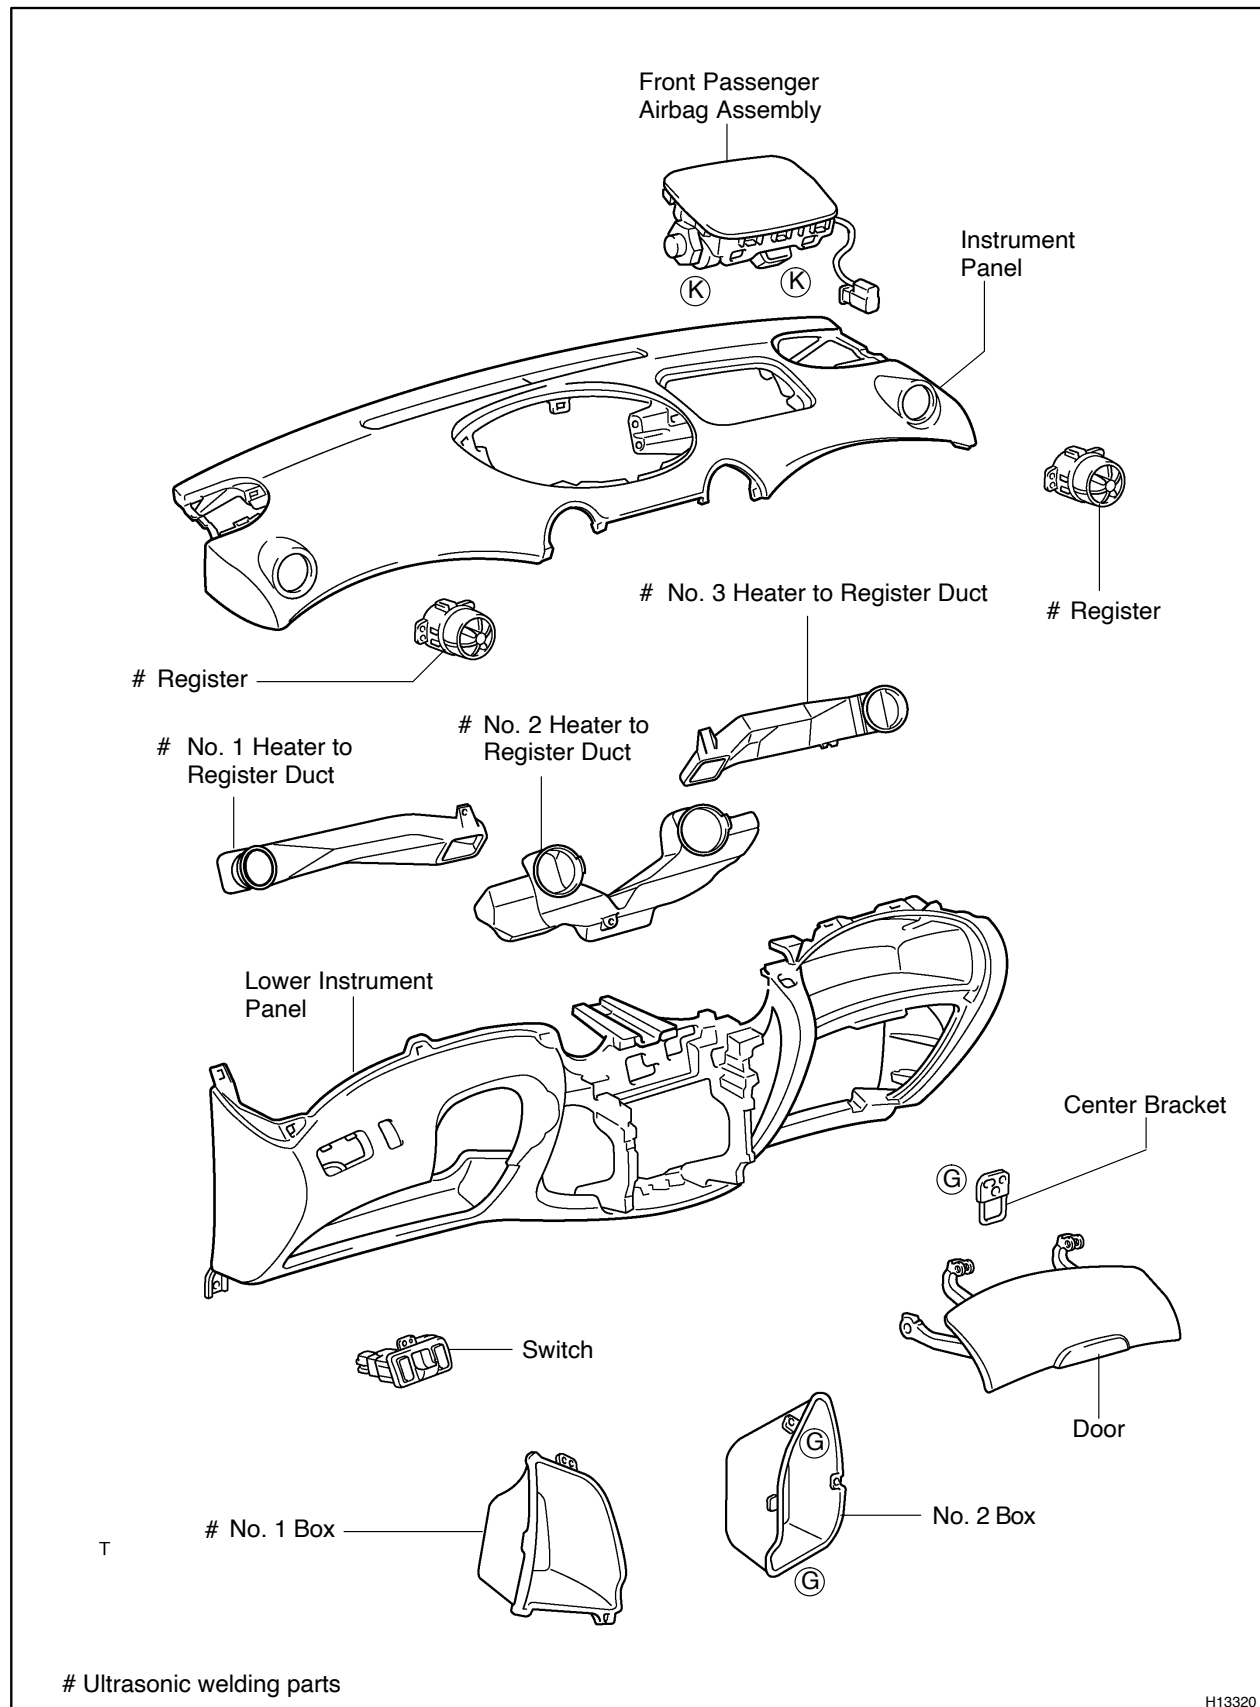










H13320


HINT:
Screw shapes and sizes are indicated in the table below. The codes ("A" - "K") correspond to those indicated on the previous pages.

mm (in.)

	Shape	Size		Shape	Size		Shape	Size
(A)		$\varnothing = 8$ (0.31) L = 15 (0.59)	(B)		$\varnothing = 6$ (0.24) L = 22 (0.87)	(C)		$\varnothing = 6$ (0.24) L = 19 (0.75)
(D)		$\varnothing = 6$ (0.24) L = 18 (0.71)	(E)		$\varnothing = 5$ (0.20) L = 25 (0.98)	(F)		$\varnothing = 5$ (0.20) L = 16 (0.63)
(G)		$\varnothing = 5$ (0.20) L = 14 (0.55)	(H)		$\varnothing = 5$ (0.20) L = 14 (0.55)	(I)		$\varnothing = 4$ (0.16) L = 14 (0.55)
(J)		$\varnothing = 8$ (0.31)	(K)		$\varnothing = 6$ (0.24)			

T

H11054

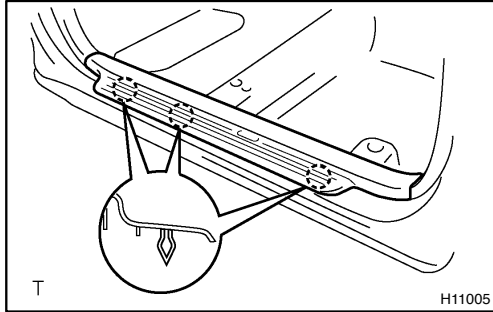

REMOVAL


1. REMOVE FRONT DOOR SCUFF PLATE

- (a) Insert a screwdriver between the front door scuff plate and body to pry it out.

HINT:

Tape the screwdriver tip before use.

- (b) Use the same manner described above to the other side.

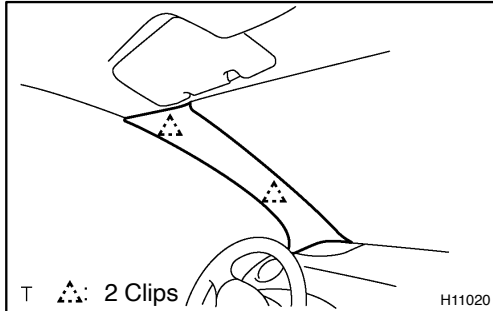


2. REMOVE FRONT PILLAR GARNISHES

- (a) Insert a screwdriver between the front pillar garnish and body to pry it out.

HINT:

Tape the screwdriver tip before use.

- (b) Use the same manner described above to the other side.

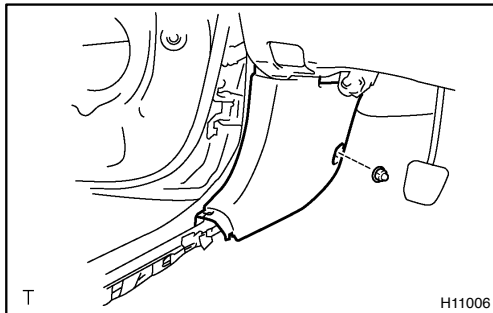

3. REMOVE COWL SIDE TRIM BOARD

- (a) Remove the clip.
(b) Insert a screwdriver between the cowl side trim board and body to pry it out.

HINT:

Tape the screwdriver tip before use.

- (c) Use the same manner described above to the other side.

4. REMOVE STEERING WHEEL PAD

(See page [SR-13](#))

5. REMOVE STEERING WHEEL (See page [SR-13](#))

6. REMOVE COLUMN UPPER AND LOWER COVER

(See page [SR-13](#))


7. REMOVE SPIRAL CABLE (See page [SR-13](#))

8. REMOVE WIPER AND WASHER SWITCH

9. REMOVE LIGHT CONTROL SWITCH AND HEAD-LIGHT DIMMER SWITCH


10. REMOVE PANEL

Remove the clip and panel.

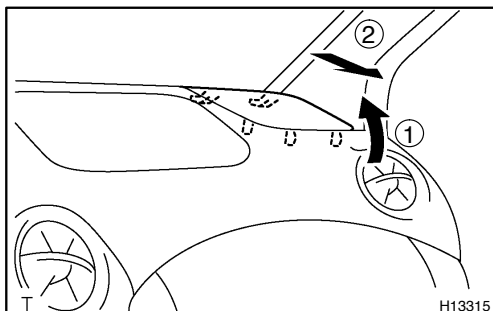


11. REMOVE NO. 1 SPEAKER PANEL AND NO. 2 SPEAKER PANEL

- (a) Remove the No. 2 speaker panel as shown in the illustration.
(b) Use the same manner described above to the No. 1 speaker panel.

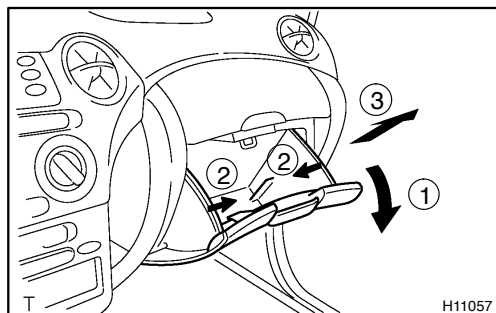**12. REMOVE GLOVE COMPARTMENT DOOR**

- (a) Open the glove compartment door.
- (b) Push both sides in and pull off the glove compartment door.

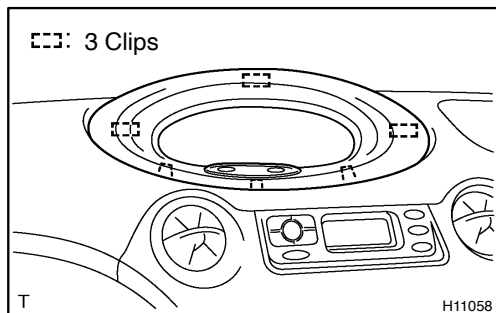
**13. REMOVE UPPER CLUSTER FINISH PANEL**

- (a) Using a screwdriver, remove the upper cluster finish panel as shown in the illustration.


HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the connector.

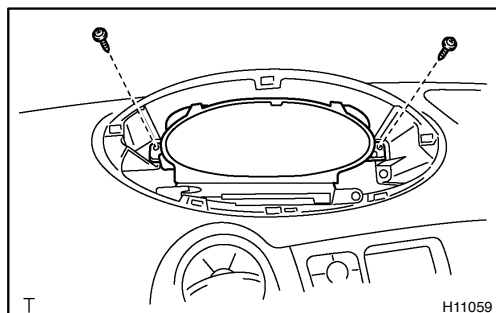**14. REMOVE METER**

- (a) Remove the 2 screws.
- (b) Disconnect the connectors, then remove the meter.

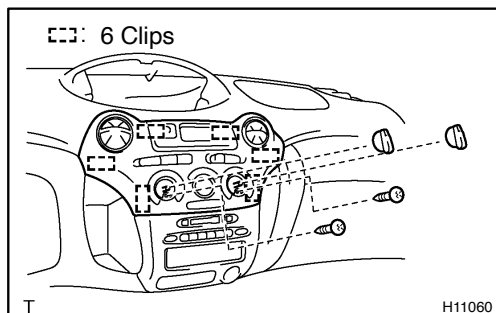
**15. REMOVE CLUSTER FINISH PANEL**

- (a) Remove the 2 knobs.
- (b) Remove the 2 screws.
- (c) Using a screwdriver, remove the cluster finish panel.

HINT:

Tape the screwdriver tip before use.

- (d) Disconnect the connectors.
- (e) w/ Multi display:
Remove the 2 screws and multi display.
- (f) w/o Multi display:
Remove the 2 screws stereo opening cover.

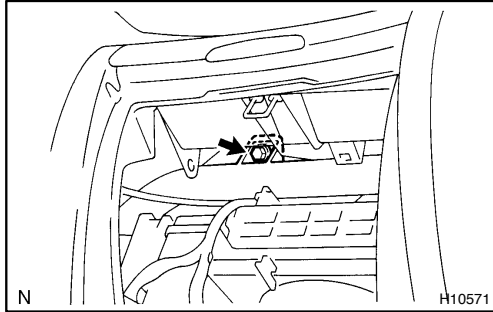
**16. REMOVE INSTRUMENT PANEL**

- (a) Remove the bolt holding to the front passenger airbag assembly to the body.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

NOTICE:

If the wiring connector of the SRS is disconnected when the ignition switch is in ON or ACC position, DTC will be recorded.


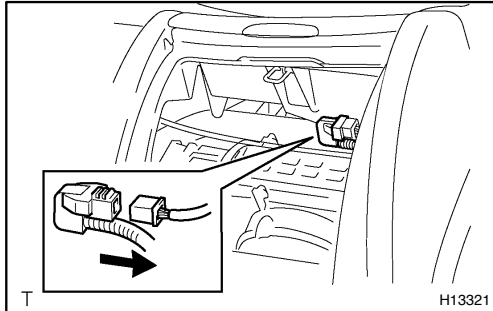


- (b) Remove the connector cover from the lower instrument panel.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (c) Disconnect the passenger airbag connector.
(d) Remove the screws and instrument panel as shown in the installation below.

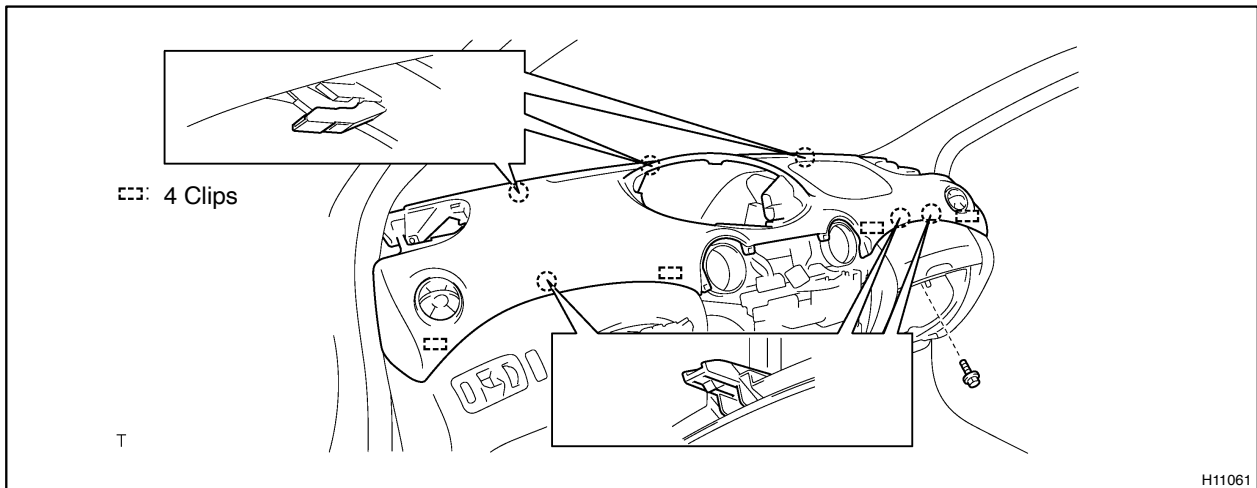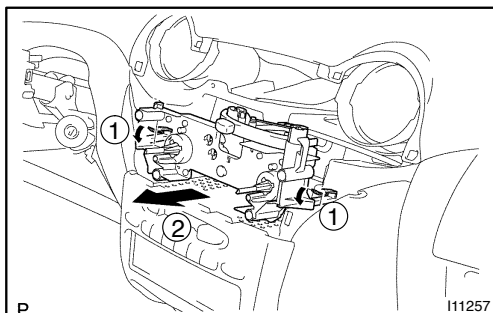**17. REMOVE DEFROSTER NOZZLE****18. REMOVE FRONT ASH RECEPTACLE BOX****19. REMOVE HEATER CONTROL ASSEMBLY**


(See page [AC-80](#))

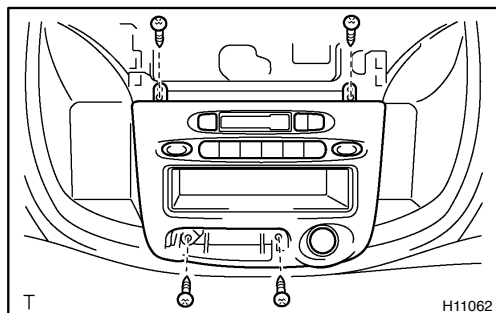**20. REMOVE RADIO ASSEMBLY**

- (a) Remove the 4 screws.
- (b) Disconnect the connectors, then remove the radio assembly.

21. REMOVE LOWER INSTRUMENT PANEL


- (a) Remove the hood lock release lever.
- (b) Remove the screws, bolts and nuts.
- (c) Disconnect the connectors.
- (d) Remove the lower instrument panel.

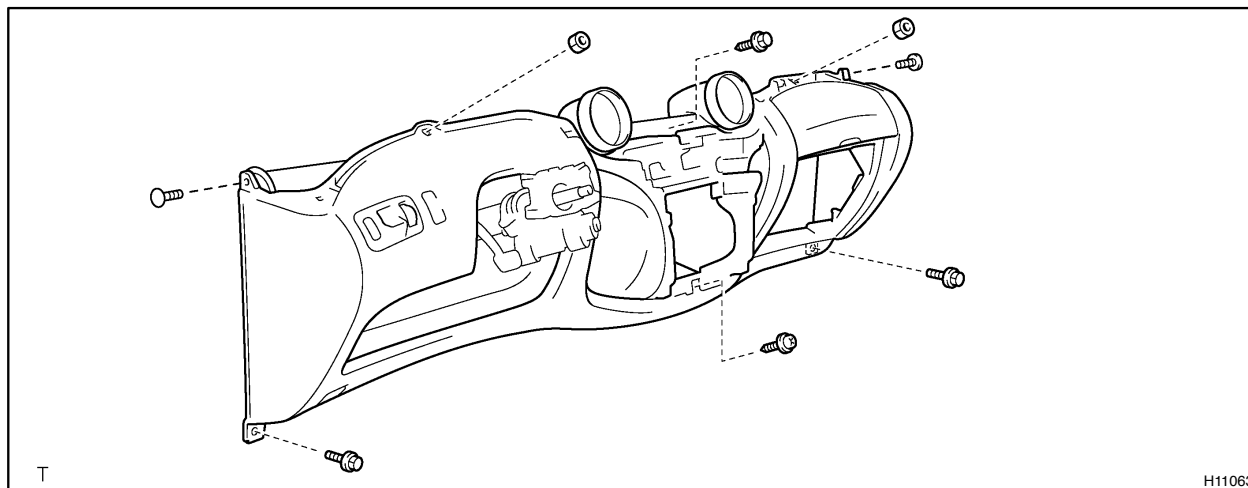**22. REMOVE LOWER PAD INSERT**

Remove the bolt, 2 nuts and lower pad insert.

23. REMOVE STEERING COLUMN (See page [SR-13](#))**24. REMOVE REAR CONSOLE BOX**

- (a) Remove the shifting hole cover.
- (b) Disconnect the connector of the base switch.
- (c) Remove the console carpet.
- (d) Remove the screw and rear console box.

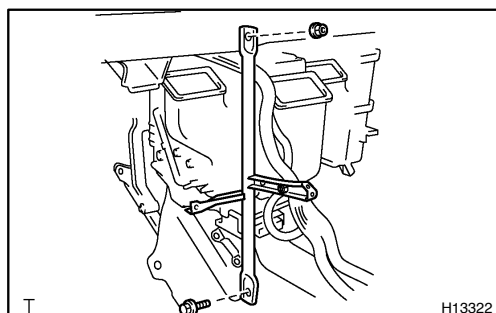**25. REMOVE INSTRUMENT PANEL TO FLOOR BRACE**


Remove the bolt and nut, then remove the instrument panel to floor brace.

26. REMOVE REINFORCEMENT


- (a) Remove the 6 bolts.
- (b) Disengage the wire harness clamps.
- (c) Remove the reinforcement.

NOTICE:

Be careful not to damage the body and wire harness.

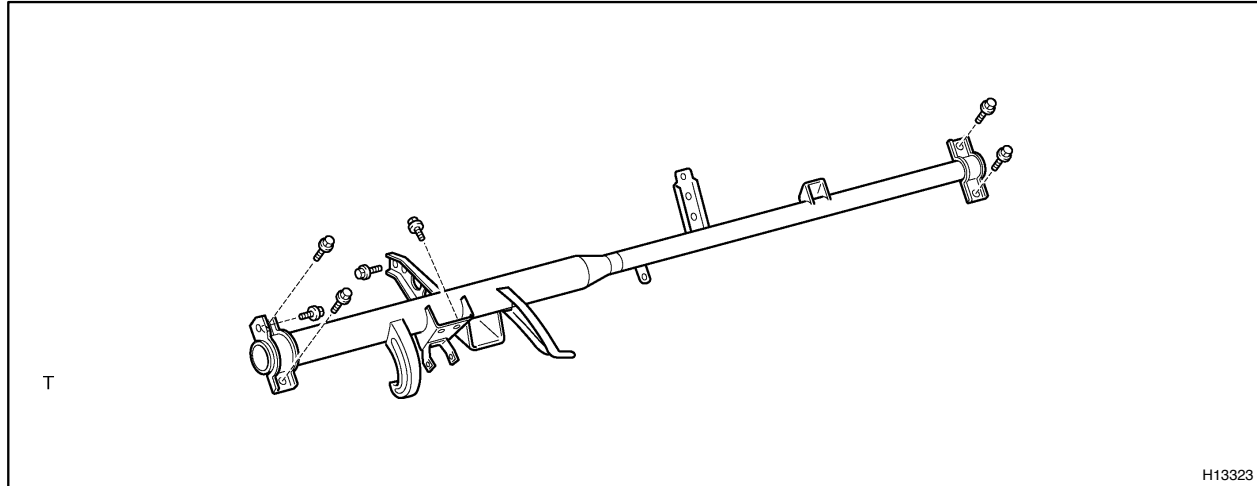

- (d) Remove the screw and door lock control.
- (e) Remove the screw and wireless door lock control.

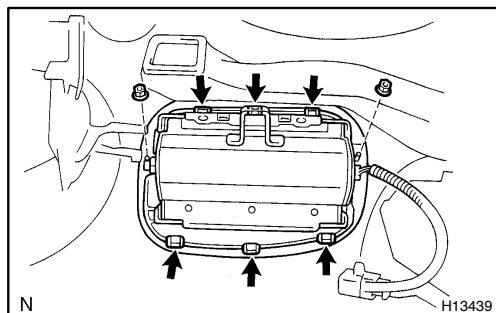

DISASSEMBLY

1. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY


- Remove the 2 nuts holding the front passenger airbag assembly to the instrument panel.
- Pry up the 6 clips shown in the illustration.
- Remove the front passenger airbag assembly from the instrument panel.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing down.
- Never disassemble the front passenger airbag assembly.

NOTICE:

When removing the front passenger airbag assembly, take care not to damage the wire harness.

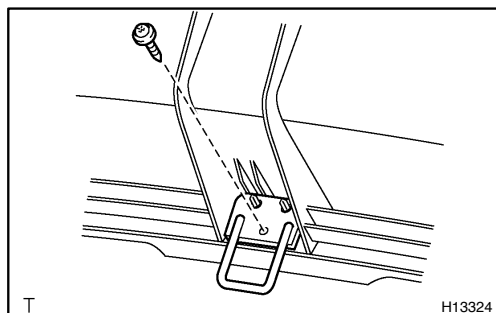


2. REMOVE CENTER BRACKET

Remove the screw and center bracket.

3. REMOVE DOOR

4. REMOVE NO. 2 BOX

Remove the 2 screws and No. 2 box.

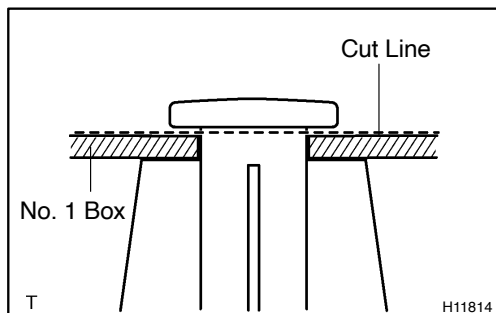

5. REMOVE NO. 1 BOX

- When installed by ultrasonic welding:
Using a nipper, cut off the ultrasonic welding portion of the instrument panel along the No. 1 box to remove the No. 1 box from the instrument panel lower.
- When installed with screw:
Remove the screw and No. 1 box from the instrument panel lower.

6. REMOVE REGISTERS

7. REMOVE NO. 1, NO. 2 AND NO. 3 HEATER TO REGISTER DUCT


HINT:

For step 6 and 7, remove them in the same way as No.1 box.

REASSEMBLY

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

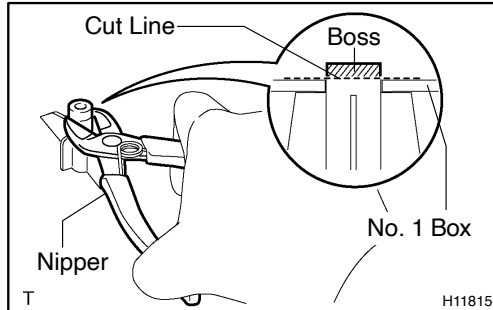


1. When replacing instrument panel lower:

INSTALL NO. 1 BOX

- (a) Cut off the boss using a nipper to make the level of the surface equal to the No. 1 box.

NOTICE:

Ensure that the cut surface is flush with the surface of No. 1 box to prevent looseness.

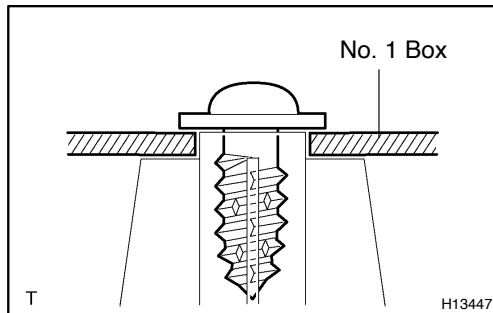

- (b) Install the No. 1 box securely on the instrument panel with the tapping screw provided in the same packing.

HINT:

Use the same manner to instrument panel upper.

2. When reusing instrument panel lower:

INSTALL NO. 1 BOX

Install the No. 1 box to the instrument panel lower with the screw.

3. INSTALL NO. 1, NO. 2 AND NO. 3 HEATER TO REGISTER DUCT

4. INSTALL NO. 1 AND NO. 2 SIDE DEFROSTER NOZZLE DUCT

5. INSTALL REGISTERS


HINT:

For step 2 and 3, install them in the same way as No. 1 box.

6. INSTALL NO. 2 BOX


Install the No. 2 box with the 2 screws.

7. INSTALL DOOR

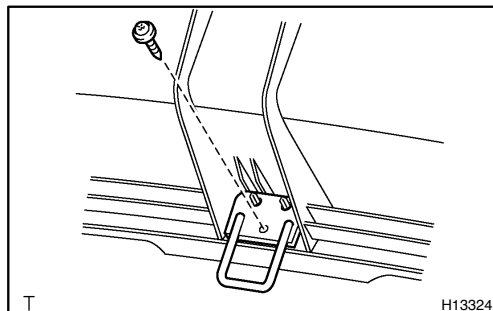

8. INSTALL CENTER BRACKET

Install the center bracket with the screw.

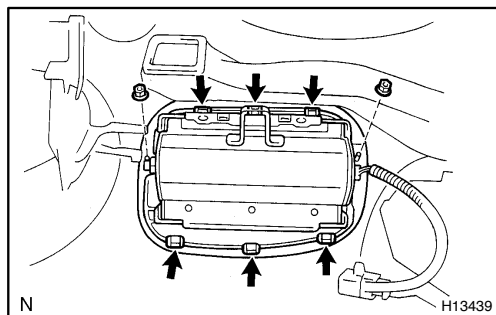**9. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY**

- (a) Install the front passenger airbag assembly to the instrument panel.
- (b) Install the 2 nuts.

NOTICE:

If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.

INSTALLATION

Installation is in the reverse order of removal (See page [BO-76](#)).