

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: Samsung
Firmware Version: N/A
Model(s): QN43LS03DAFXZA, QN50LS03DAFXZA, QN55LS03DAFXZA, QN65LS03DAFXZA,
QN75LS03DAFXZA, QN85LS03DAFXZA

Tested on the Following Software and Firmware Versions

ControlScript Deployment Utility	1.10.0-b.46
IP Link Pro Control Processor Firmware	3.18.0001-b002
IP Link Pro Control Processor xi Firmware	1.11.0000-b006
IP Link Pro Control Processor Q xi Firmware	1.11.0000-b006

Version History

Module Version	Date	Notes
1_0_0_0	9/11/2025	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='QN43LS03DAFXZA')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='QN43LS03DAFXZA')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value '4:3'	Value '16:9'	Value 'Custom'
# AspectRatio example InterfaceName.Set('AspectRatio', '4:3')			
Command AudioMute	Value 'Toggle'		
# AudioMute example InterfaceName.Set('AudioMute', 'Toggle')			
Command ChannelStep	Value 'Up'	Value 'Down'	
# ChannelStep example InterfaceName.Set('ChannelStep', 'Up')			
Command Input	Value 'TV' 'HDMI 3'	Value 'HDMI 1' 'HDMI 4'	Value 'HDMI 2'
# Input example InterfaceName.Set('Input', 'TV')			
Command Keypad	Value '0' – '9'		
# Keypad example InterfaceName.Set('Keypad', '0')			
Command MenuNavigation	Value 'Up' 'Right' 'Return'	Value 'Down' 'Menu' 'Exit'	Value 'Left' 'Enter' 'Home'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command MultiviewCommand	Value None		
# MultiviewCommand example InterfaceName.Set('MultiviewCommand', None)			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command RefreshToken	Value None		
# RefreshToken example InterfaceName.Set('RefreshToken', None)			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value '4:3'	Value '16:9'	Value 'Custom'
# AspectRatio example InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command AudioMute	Value 'Toggle'	Value 'On'	Value 'Off'
# AudioMute example InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Input	Value 'TV' 'HDMI 3'	Value 'HDMI 1' 'HDMI 4'	Value 'HDMI 2'
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)			

Cable and Adapter Requirements

Captive Screw to 3.5mm TRS RS-232 Serial Cable

Notes for the Device

Please ensure the following setting is configured for the module to work. Using the IR remote, open the Menu of the display:

- Settings → Connection → Network → Expert Settings → IP Remote → Enable

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram



Signal	Main Cable	Pin	Signal
TxD		T	TxD
RxD		R	RxD
GND		S	GND

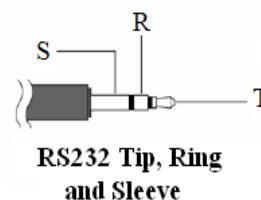

Appendix A. Set Commands

Aspect Ratio 16:9	\x08"\x0B\x0A\x01\x00\xC0
Aspect Ratio 4:3	\x08"\x0B\x0A\x01\x04\xBC
Aspect Ratio Custom	\x08"\x0B\x0A\x01\x0B\xB5
Audio Mute Off	\x08"\x0D\x00\x00\x0F\xBA
Audio Mute On	\x08"\x0D\x00\x00\x0F\xBA
Audio Mute Toggle	\x08"\x0D\x00\x00\x0F\xBA
Channel Step Down	\x08"\x03\x00\x02\x00\xD1
Channel Step Up	\x08"\x03\x00\x01\x00\xD2
Input HDMI 1	\x08"\x0A\x00\x05\x00\xC7
Input HDMI 2	\x08"\x0A\x00\x05\x01\xC6
Input HDMI 3	\x08"\x0A\x00\x05\x02\xC5
Input HDMI 4	\x08"\x0A\x00\x05\x03\xC4
Input TV	\x08"\x0A\x00\x00\x00\xCC
Keypad 0	\x08"\x0D\x00\x00\x11\xB8
Keypad 9	\x08"\x0D\x00\x00\x0E\xBB
Menu Navigation Down	\x08"\x0D\x00\x00ah
Menu Navigation Enter	\x08"\x0D\x00\x00.\x9B
Menu Navigation Exit	\x08"\x0D\x00\x00-\x9C
Menu Navigation Home	\x08"\x0D\x00\x00vS
Menu Navigation Left	\x08"\x0D\x00\x00ed
Menu Navigation Menu	\x08"\x0D\x00\x00\x1A\xAF
Menu Navigation Return	\x08"\x0D\x00\x00Xq
Menu Navigation Right	\x08"\x0D\x00\x00bg
Menu Navigation Up	\x08"\x0D\x00\x00`i
Power Off	\x08"\x00\x00\x00\x01\xD5
Power On	\x08"\x0D\x00\x00\x02\xC7
Volume 0	\x08"\x01\x00\x00\x00\xD5
Volume 100	\x08"\x01\x00\x00dq

Appendix B. Update Commands

Audio Mute	\x08"\xF0\x02\x00\x00\xE4
Input	\x08"\xF0\x04\x00\x00\xE2
Power	\x08"\xF0\x00\x00\x00\xE6
Volume	\x08"\xF0\x01\x00\x00\xE5