
operating instructions and specifications $NI\ 9870$

4-Port, RS232 Serial Module



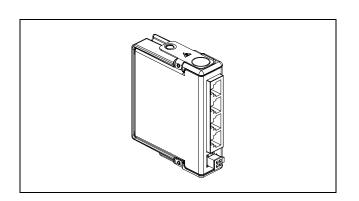

This document describes how to use the National Instruments 9870 and includes specifications and pin assignments for the NI 9870. Visit ni.com/info and enter rdsoftwareversion to determine which software you need for the modules you are using. For information about installing, configuring, and programming the system, refer to the system documentation. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.



Note The safety guidelines and specifications in this document are specific to the NI 9870. The other components in the system might not meet the same safety ratings and specifications. Refer to the documentation for each component in the system to determine the safety ratings and specifications for the entire system. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.

Safety Guidelines

Operate the NI 9870 only as described in these operating instructions.



Hot Surface This icon denotes that the component may be hot. Touching this component may result in bodily injury.

Safety Guidelines for Hazardous Locations

The NI 9870 is suitable for use in Class I, Division 2, Groups A, B, C, D, T4 hazardous locations; Class I, Zone 2, AEx nA II T4 and Ex nA II T4 hazardous locations; and nonhazardous locations only. Follow these guidelines if you are installing the NI 9870 in a potentially explosive environment. Not following these guidelines may result in serious injury or death.



Caution Do *not* disconnect I/O-side wires or connectors unless power has been switched off or the area is known to be nonhazardous.



Caution Do *not* remove modules unless power has been switched off or the area is known to be nonhazardous.



Caution Substitution of components may impair suitability for Class I, Division 2.



Caution For Zone 2 applications, install the CompactRIO system in an enclosure rated to at least IP 54 as defined by IEC 60529 and EN 60529.



Caution For Zone 2 applications, install a protection device between the RS232 signal cables and the NI 9870 RJ-50 jacks (ports 1–4). The device must prevent the RS232 signal-to-signal or signal-to-COM voltage from exceeding 35 V if there is a transient overvoltage condition.



Caution For Zone 2 applications, install a protection device between the external power supply and the NI 9870 V_{sup} and COM pins. The device must prevent the V_{sup} -to-COM voltage from exceeding 39 V if there is a transient overvoltage condition.

Special Conditions for Hazardous Locations in Europe

This equipment has been evaluated as Ex nA IIC T4 equipment under DEMKO Certificate No. 07 ATEX 0626664X. Each module is marked x II 3G and is suitable for use in Zone 2 hazardous locations. If you are using the NI 9870 in Gas Group IIC hazardous locations or in ambient temperatures of -40 °C \le Ta \le 70 °C, you must use the device in an NI chassis or controller that has been evaluated as EEx nC IIC T4, Ex nA IIC T4, or Ex nL IIC T4 equipment.

Special Conditions for Marine Applications

Some modules are Lloyd's Register (LR) Type Approved for marine applications. To verify Lloyd's Register certification, visit ni.com/certification and search for the LR certificate, or look for the Lloyd's Register mark on the module.



Caution To meet radio frequency emission requirements for marine applications, use shielded cables and install the system in a metal enclosure. Suppression ferrites must be installed on power supply inputs near power entries to modules and controllers. Power supply and module cables must be separated on opposite sides of the enclosure and must enter and exit through opposing enclosure walls.

Wiring the NI 9870

The NI 9870 has four RJ-50 receptacles that provide connections for four RS232 devices.

Table 1. RS232 Port Pinout

	RJ-50 Pin	Signal Name*
	1	No Connect
RJ50 Jack 1 + NC 2 + RI 3 + CTS 4 + RTS	2	RI
	3	CTS
	4	RTS
	5	DSR
5 + DSR 6 + COM	6	GND
7 + DTR 8 + TXD	7	DTR
9 — RXD	8	TXD
10 DCD	9	RXD
	10	DCD
* These signals are shared by all four RJ-50 connectors of		Deb

The cables included with your kit convert the RJ-50 pinout to the standard NI pinout on a DB-9 male connector, as shown in Table 2.

Table 2. Pin Assignments for RS232 DB-9 Male Connector

Connector	Pin	Signal
	1	DCD
	2	RXD
0	3	TXD
$ \begin{array}{c c} 6 & \circ & 1 \\ 7 & \circ & \circ & 2 \\ \end{array} $	4	DTR
8 0 0 14	5	GND
5	6	DSR
\circ	7	RTS
	8	CTS
	9	RI

You must connect an external power supply to the NI 9870. This power supply provides the power for the RS232 transceivers on the module. You can use the included female four-position pigtail to connect to an external voltage source. Figure 1 lists the connections between an external voltage source (of +8 V to +28 V) and the NI 9870.

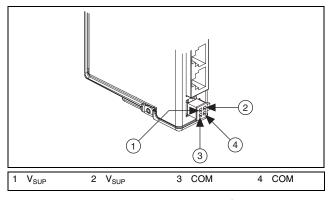


Figure 1. Four-Position External Power Connector

Figure 2 shows the method of power connection to the NI 9870 module. Attach an isolated power supply to the V_{sup} and COM terminals using the included pigtail.

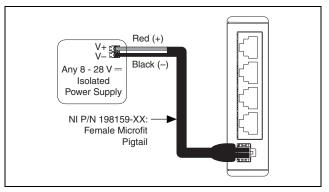


Figure 2. Powering the NI 9870 from an Isolated Power Source

Figure 3 shows how to use the optional y-adapter (available at ni.com/serial) to connect power to more than one module using the same power source. One y-adapter is needed for each

additional module. Ensure that the power supply can handle maximum power requirements for all modules connected.



Caution All connections must be made before power is applied.

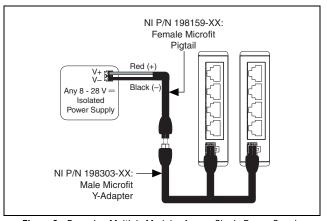


Figure 3. Powering Multiple Modules from a Single Power Supply

NI 9870 Hardware Overview

The NI 9870 has four full-featured, independent RS232 DTE ports that are isolated from the other modules in the system. Each port is fully compatible with the ANSI/EIA/TIA-232 standard.

Sleep Mode (CompactRIO Only)

You can enable sleep mode for the CompactRIO system in software. In sleep mode, the system consumes less power and may dissipate less heat. Typically, when a system is in sleep mode, you cannot communicate with the modules. Refer to the *Specifications* section for more information about power consumption and thermal dissipation.

Specifications

The following specifications are typical for the range -40 to 70 °C unless otherwise noted.

Maximum	baud rate	.921.6 kbps
Maximum	cable length	250 pF equivalent



Note Cable capacitance greater than 250 pF may adversely affect the maximum baud rate and thermal dissipation.

Maximum RS232 Receive signal
(RXD, CTS, DSR, DCD, RI)
Continuous Voltage±8 V



Note Continuous RS232 input voltages in excess of ±8 V may cause excessive thermal dissipation.

Data line ESD protection	
(human body model)	±15 kV
MTBF	448,008 hours at 25 °C;
	Bellcore Issue 6, Method 1,
	Case 3, Limited Part Stress
	Method



Note Contact NI for Bellcore MTBF specifications at other temperatures or for MIL-HDBK-217F specifications.

Power Requirements

Power consumption from chassis	
Active mode	0.5 W max
Sleep mode	50 µW max
Thermal dissipation (at 70 °C)	
Active mode	1.5 W max
Sleep mode	0.5 W max
Required external supply voltage range (V_{SUP})	+8 to +28 VDC
Power supply consumption from ex	cternal supply V _{SUP}
Typical	0.5 W
Maximum	2 W

Physical Characteristics

If you need to clean the module, wipe it with a dry towel.

Weight......Approx. 154 g (5.4 oz)

Safety

Maximum Voltage¹

Connect only voltages that are within these limits.

RS232 Receive Signal-to-COM (RXD, CTS, DSR, DCD, RI).....±25 V max,

Measurement Category I

RS232 Transmit Signal-to-COM

(TX, RTS, DTR)±13.2 V max, Measurement Category I

V_{SUP}-to-COM±28 V max,

Measurement Category I

Measurement Category I is for measurements performed on circuits not directly connected to the electrical distribution system referred to as *MAINS* voltage. MAINS is a hazardous live electrical supply system that powers equipment. This category is for measurements of voltages from specially protected secondary circuits. Such voltage measurements include signal levels, special equipment, limited-energy parts of equipment, circuits powered by regulated low-voltage sources, and electronics.

 $^{^{\}mathrm{1}}$ The maximum voltage that can be applied or output without creating a safety hazard.



Caution Do not connect to signals or use for measurements within Measurement Categories II, III, or IV.

Isolation Voltages

Withstand	$1000 V_{rms}$, verified by a
	dielectric withstand test, 5 s
Continuous	60 VDC,
	Measurement Category I

Hazardous Locations

U.S. (UL)	Class I, Division 2,
	Groups A, B, C, D, T4;
	Class I, Zone 2,
	AEx nA II T4
Canada (C-UL)	Class I, Division 2,
	Groups A, B, C, D, T4;
	Class I, Zone 2,
	Ex nA II T4
Europe (DEMKO)	Ex nA IIC T4

Safety Standards

The NI 9870 is designed to meet the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-1
- UL 61010-1, CSA 61010-1



Note For UL and other safety certifications, refer to the product label, or visit ni.com/certification, search by model number or product line, and click the appropriate link in the Certification column.

Electromagnetic Compatibility

Liconomagneno companion	ıty
Emissions	EN 55011 Class A at 10 m FCC Part 15A above 1 GHz
Immunity	Industrial levels per EN 61326-1:1997 + A2:2001, Table A.1
EMC/EMI	CE, C-Tick, and FCC Part 15 (Class A) Compliant



Note For the standards applied to assess the EMC of this product, refer to the *Online Product Certification* section.



Note For EMC compliance, operate this device with shielded cabling.

CE Compliance \subset \in

This product meets the essential requirements of applicable European Directives, as amended for CE marking, as follows:

Low-Voltage Directive (safety)......2006/95/EC

Electromagnetic Compatibility

Directive (EMC)2004/108/EC

Online Product Certification

Refer to the product Declaration of Conformity (DoC) for additional regulatory compliance information. To obtain product certifications and the DoC for this product, visit ni.com/certification, search by module number or product line, and click the appropriate link in the Certification column.

Shock and Vibration

To meet these specifications, you must panel mount the CompactRIO system.

sinusoidal (IEC 60068-2-6)5 g, 10 to 500 Hz

Operating vibration, random (IEC 60068-2-64)	.5 g _{rms} , 10 to 500 Hz
Operating shock	
(IEC 60068-2-27)	.30 g, 11 ms half sine,
	50 g, 3 ms half sine,
	18 shocks at 6 orientations
Operating vibration,	

Environmental

CompactRIO modules are intended for indoor use only. For outdoor use, mount the CompactRIO system in a suitably rated enclosure. Refer to the installation instructions for the chassis you are using for more information about meeting these specifications.

Operating temperature40 to 70 °C
Storage temperature40 to 85 °C
Ingress protectionIP 40

Operating humidity	10 to 90% RH,
	noncondensing
Storage humidity	5 to 95% RH,
	noncondensing
Maximum altitude	2,000 m
Pollution Degree (IEC 60664)	2

Environmental Management

NI is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial to the environment and to NI customers.

For additional environmental information, refer to the *NI* and the *Environment* Web page at ni.com/environment. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document.

Waste Electrical and Electronic Equipment (WEEE)



EU Customers At the end of their life cycle, all products must be sent to a WEEE recycling center. For more information about WEEE recycling centers and National Instruments WEEE initiatives, visit ni.com/ environment/weee.htm.

电子信息产品污染控制管理办法 (中国 RoHS)



中国客户 National Instruments 符合中国电子信息 产品中限制使用某些有害物质指令 (RoHS)。关于 National Instruments 中国 RoHS 合规性信息, 请登录 ni.com/environment/rohs china。 (For information about China RoHS compliance, go to ni.com/ environment/rohs_china.)

Where to Go for Support

The National Instruments Web site is your complete resource for technical support. At ni.com/support you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. National Instruments also has offices located around the world to help address your support needs. For telephone support in the United States, create your service request at ni.com/support and follow the calling instructions or dial 512 795 8248. For telephone support outside the United States, contact your local branch office:

Australia 1800 300 800, Austria 43 662 457990-0, Belgium 32 (0) 2 757 0020, Brazil 55 11 3262 3599, Canada 800 433 3488, China 86 21 5050 9800, Czech Republic 420 224 235 774, Denmark 45 45 76 26 00, Finland 358 (0) 9 725 72511, France 01 57 66 24 24, Germany 49 89 7413130, India 91 80 41190000, Israel 972 3 6393737, Italy 39 02 41309277, Japan 0120-527196,

Korea 82 02 3451 3400, Lebanon 961 (0) 1 33 28 28, Malaysia 1800 887710, Mexico 01 800 010 0793, Netherlands 31 (0) 348 433 466, New Zealand 0800 553 322, Norway 47 (0) 66 90 76 60, Poland 48 22 3390150, Portugal 351 210 311 210, Russia 7 495 783 6851, Singapore 1800 226 5886, Slovenia 386 3 425 42 00, South Africa 27 0 11 805 8197, Spain 34 91 640 0085, Sweden 46 (0) 8 587 895 00, Switzerland 41 56 2005151, Taiwan 886 02 2377 2222, Thailand 662 278 6777, Turkey 90 212 279 3031, United Kingdom 44 (0) 1635 523545

National Instruments, NI, ni.com, and LabVIEW are trademarks of National Instruments Corporation. Refer to the Terms of Use section on ni.com/legal for more information about National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: Help-Patents in your software, the patents.txt file on your media, or the National Instruments Patent Notice at ni.com/patents.		
	Terms of Use section on ni.com/legal for more information about National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: Helpa-Patents in your software, the patents.txt file on your media, or the National Instruments Patent Notice at ni.com/patents.	