TECHNICAL DOCUMENTATION & USER MANUAL

English

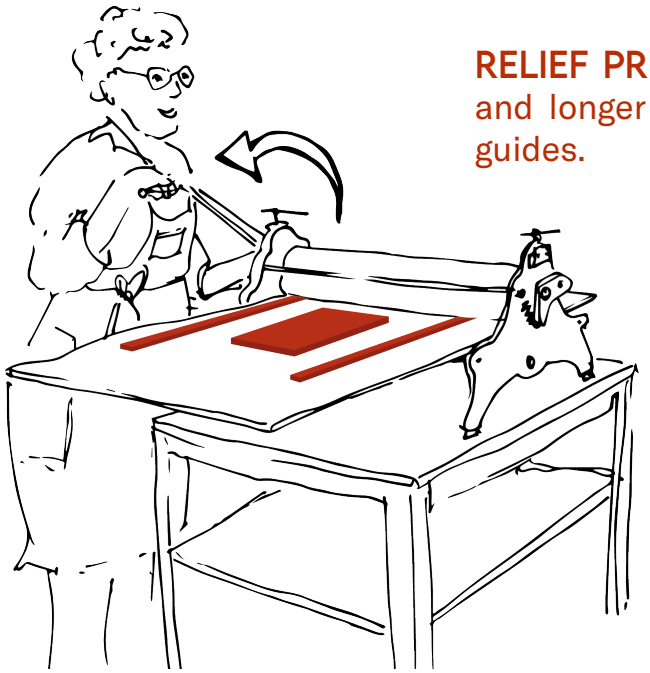

RELIEF PRINTING: Use guides of the same thickness and longer than the die to adjust the pressure on the guides.

You can unscrew the existing feet to fix the press directly to a workbench (provided the workbench is flat, otherwise the press may be deformed in the long term).

- The ball-bearing cylinder can be misaligned. It is therefore possible to print uniformly even if your die is left-handed (wood).

- The gear-driven transmission enables a free and comfortable printing gesture, despite high pressure.

- These presses can print all types of technique.

PRESSURE TEST: «Dry» printing of a strip of paper straddling your die: the cuvette must be homogeneous.

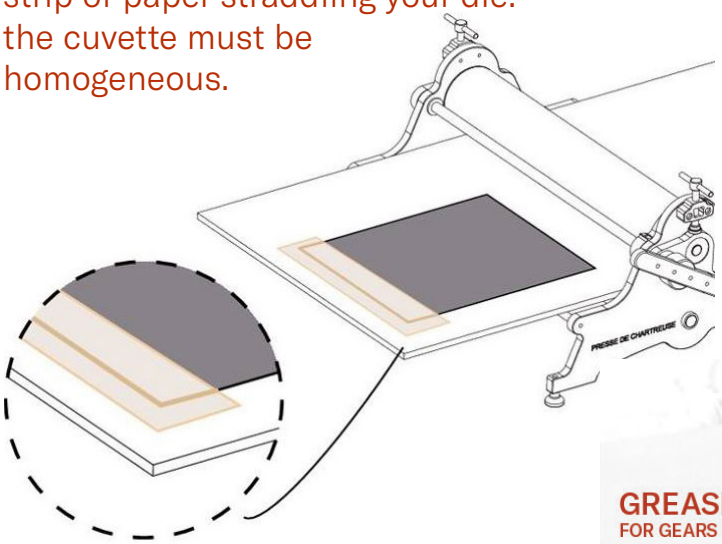

MAINTENANCE: Once a year approx. Grease when you feel it's «dry» - in hot weather, grease can evaporate more quickly. If you have a syringe, you can grease the gears by unscrewing the grease nipple on the gear cover, otherwise you can use the side of the small gear. Mechanical or bicycle grease (in tube).

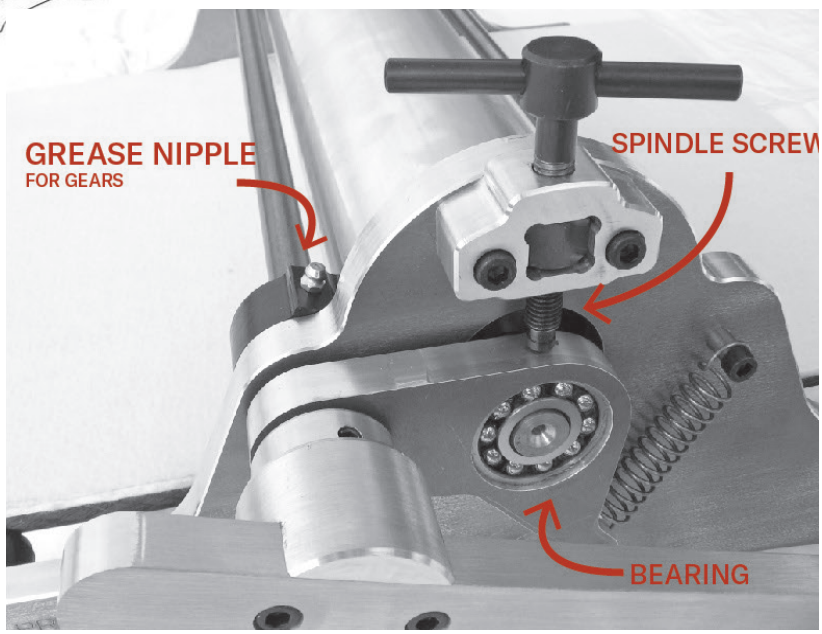

TECHNICAL DOCUMENTATION & USER MANUAL

English

PRESS DIMENSIONS:

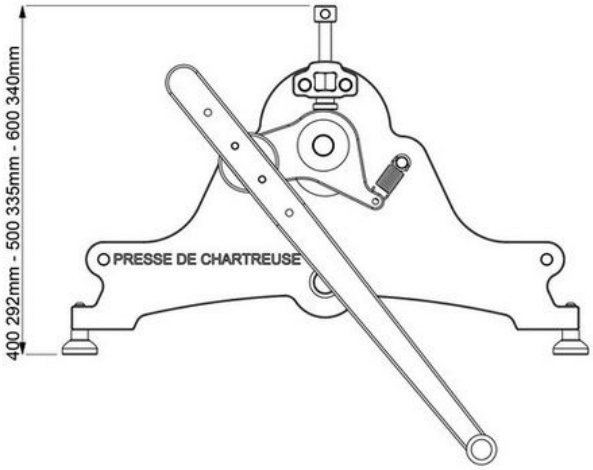

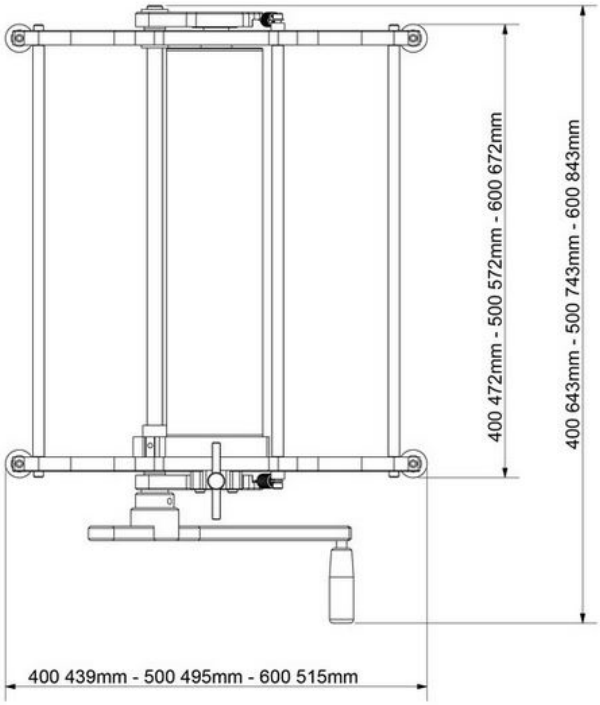

DIMENSION OF WOODEN CRATES:

Nb: the plate is packed in a separate package.

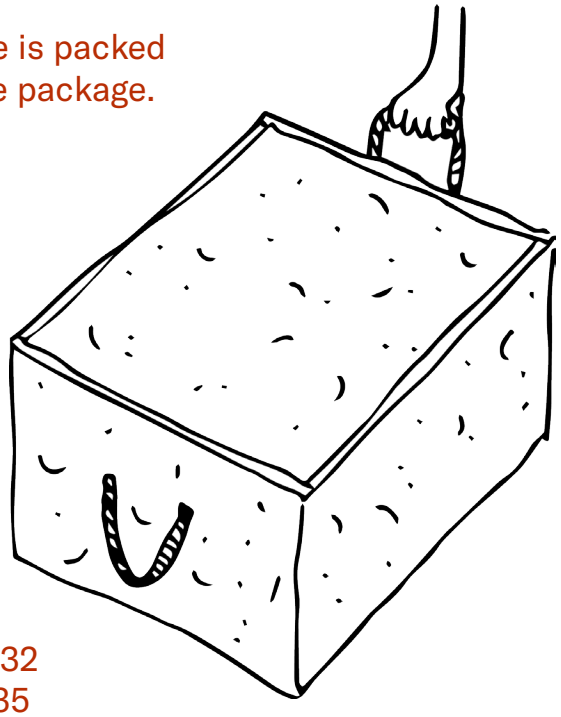

400 :45x49x32
500: 51x76x35
600: 53x86x36
Width x length x height :
approximate dimensions in cm.