





9. Flow Chart of Troubleshooting


9-1. Power On

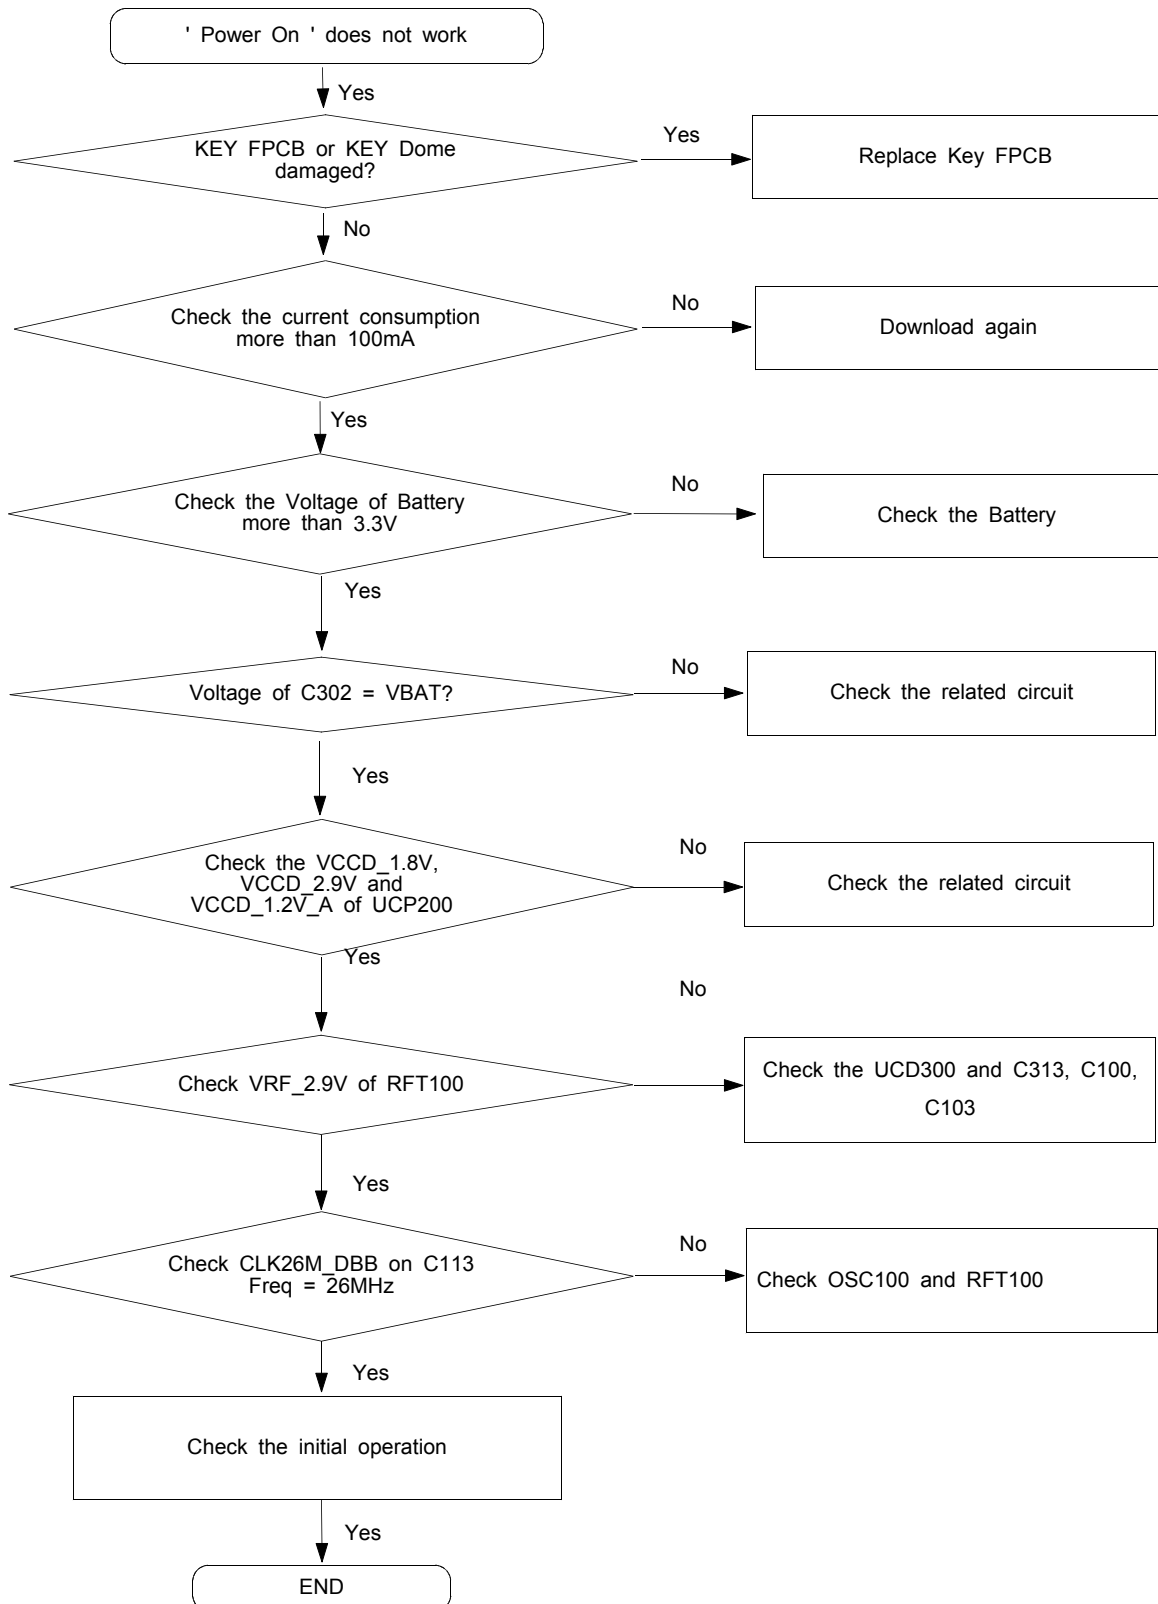


Flow Chart of Troubleshooting

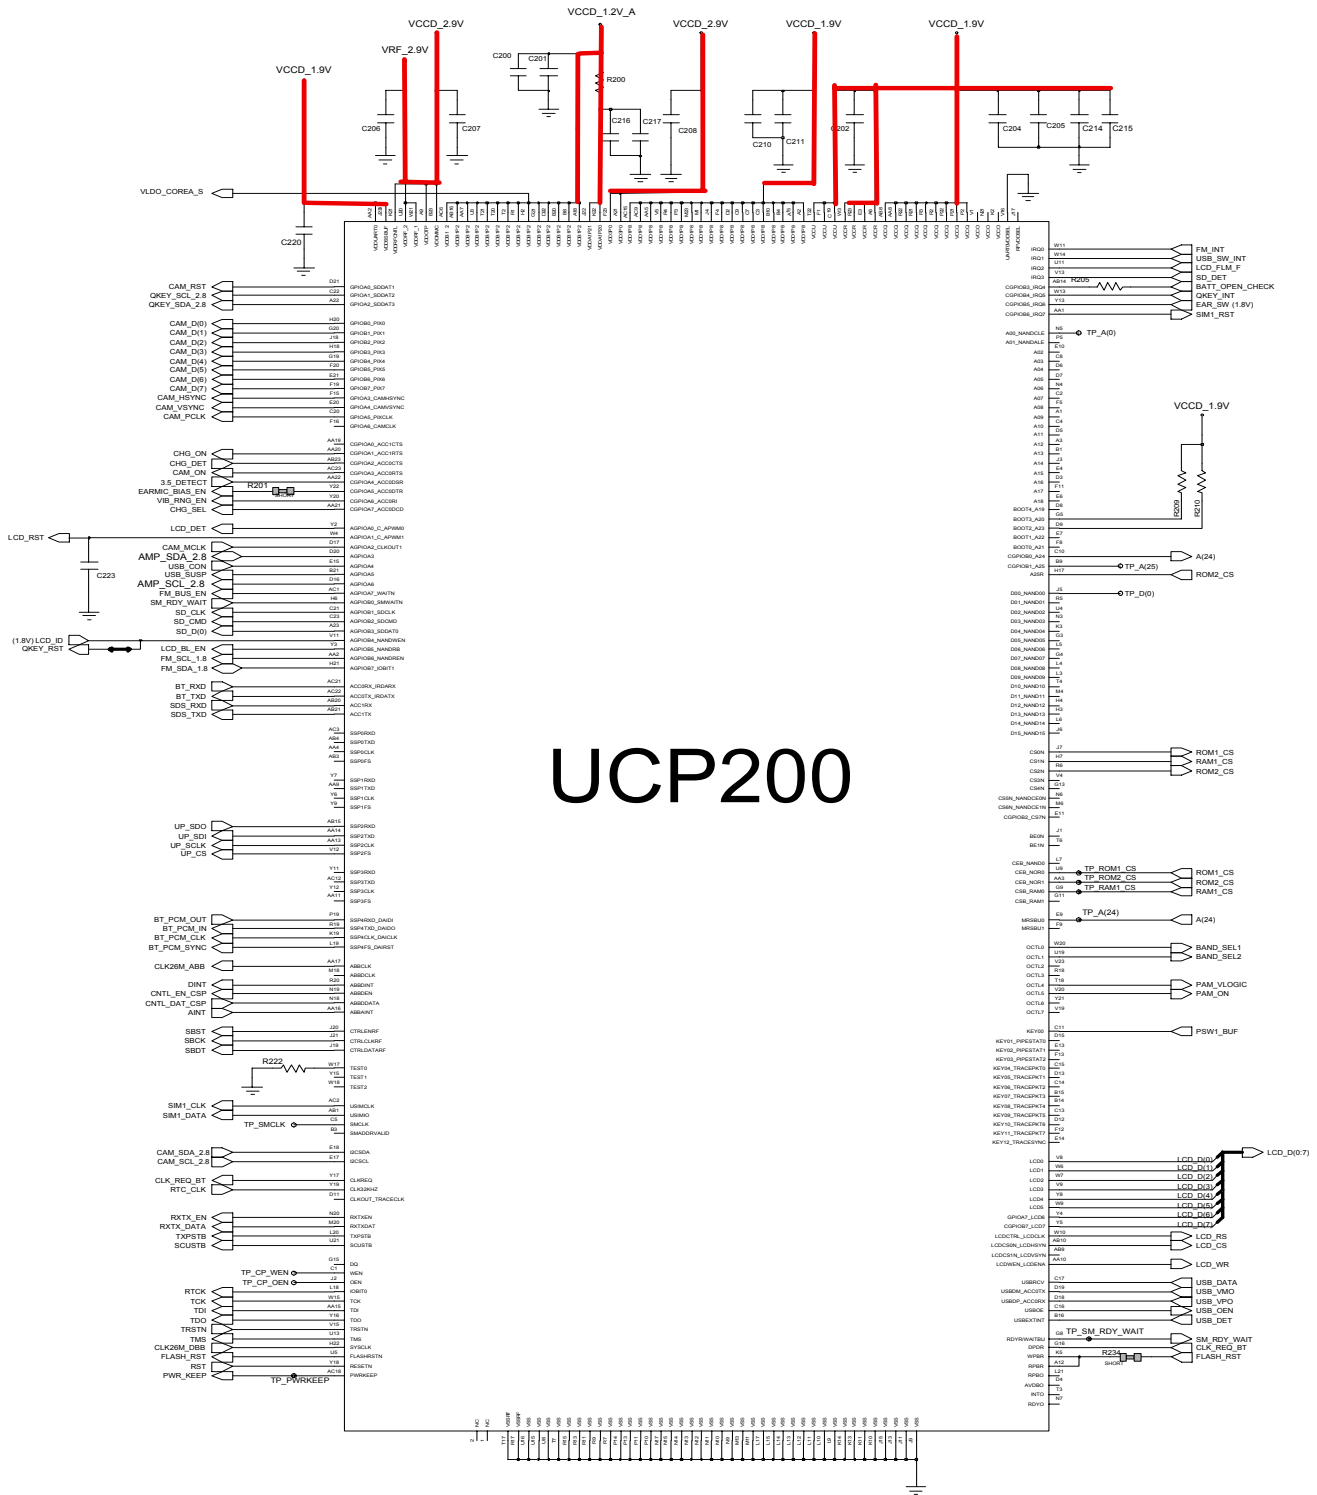


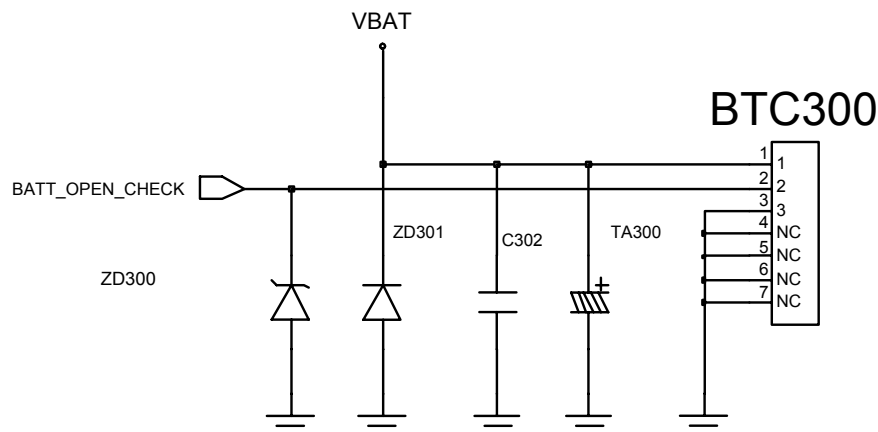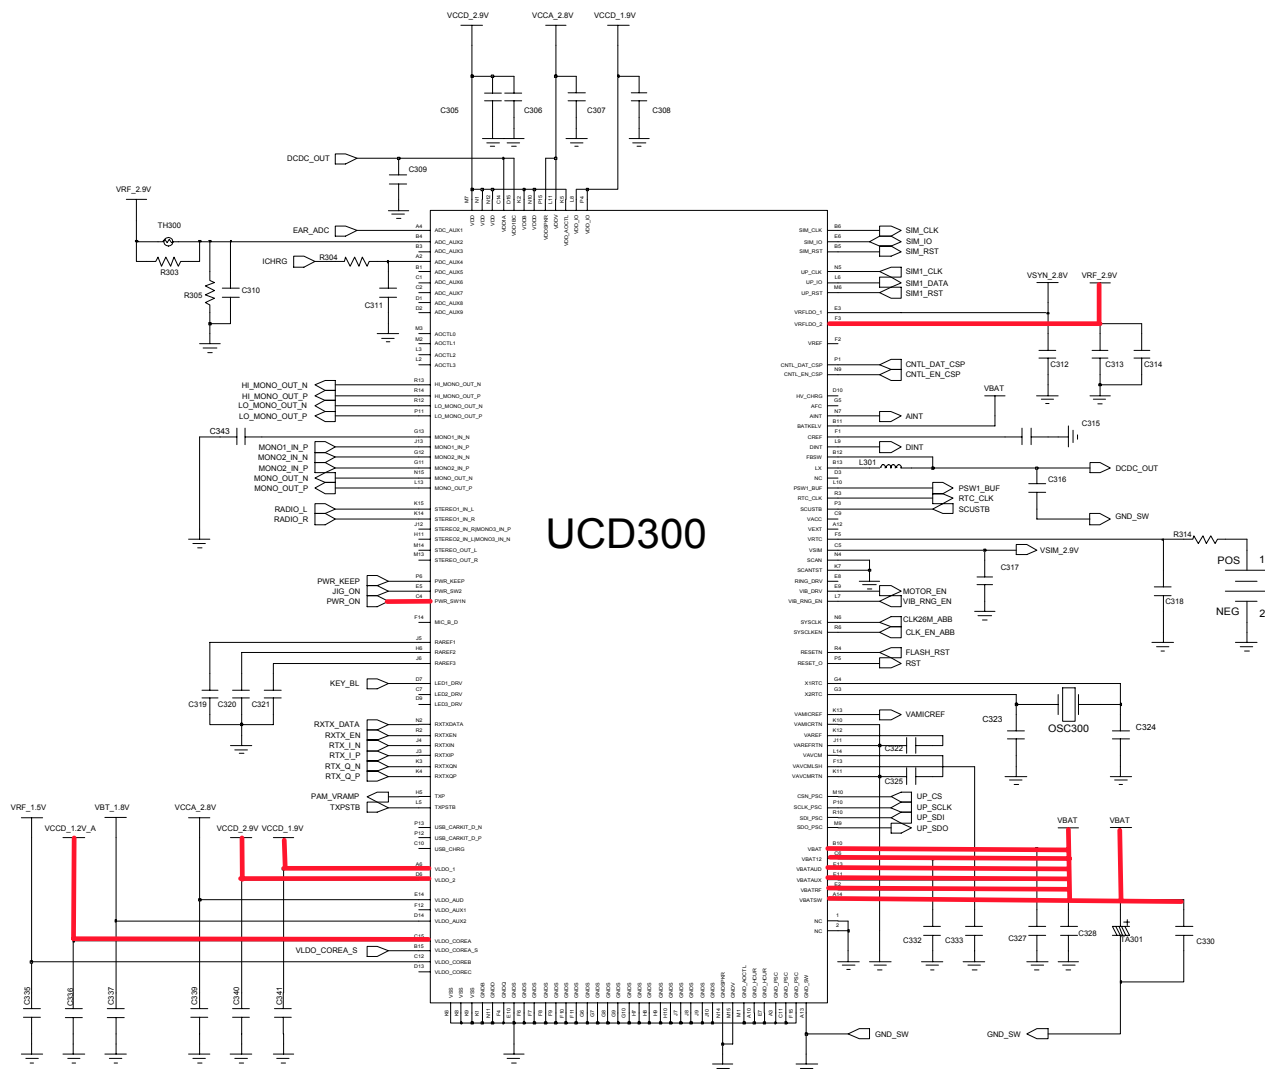

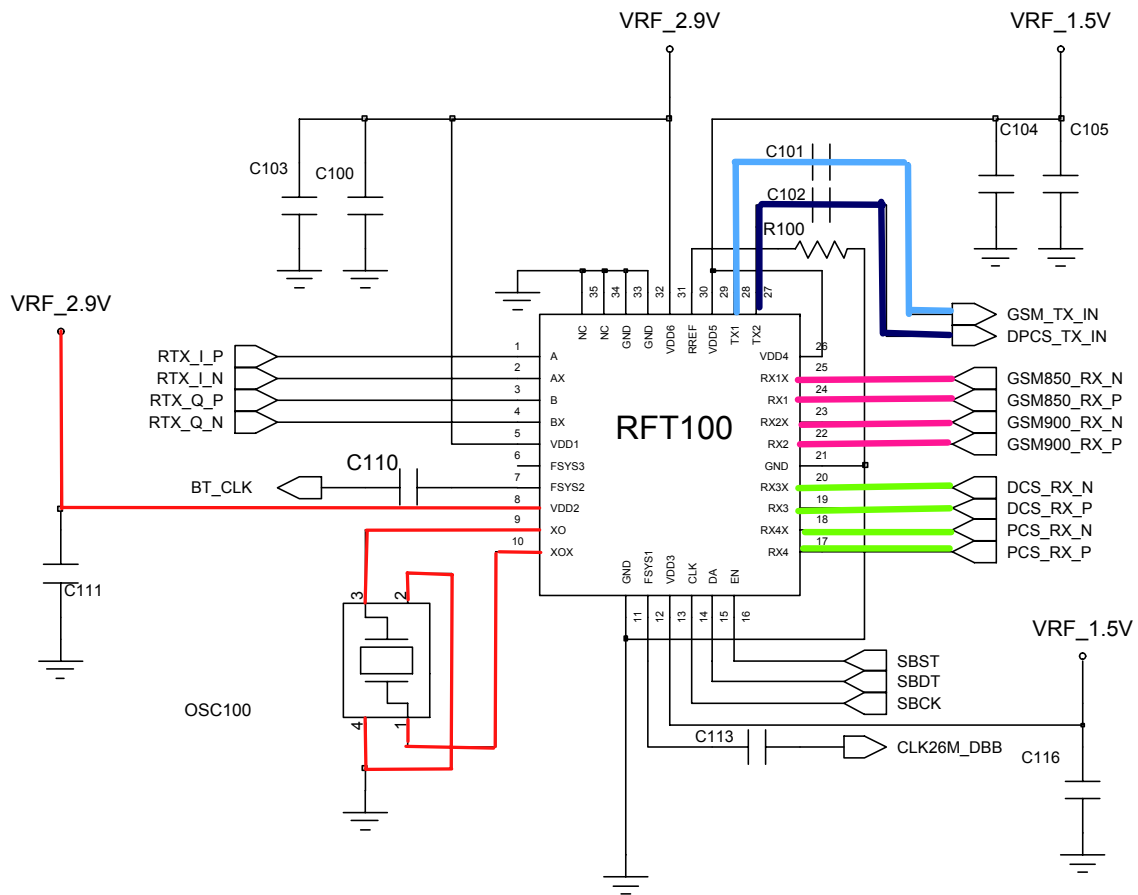


9-2. Initial

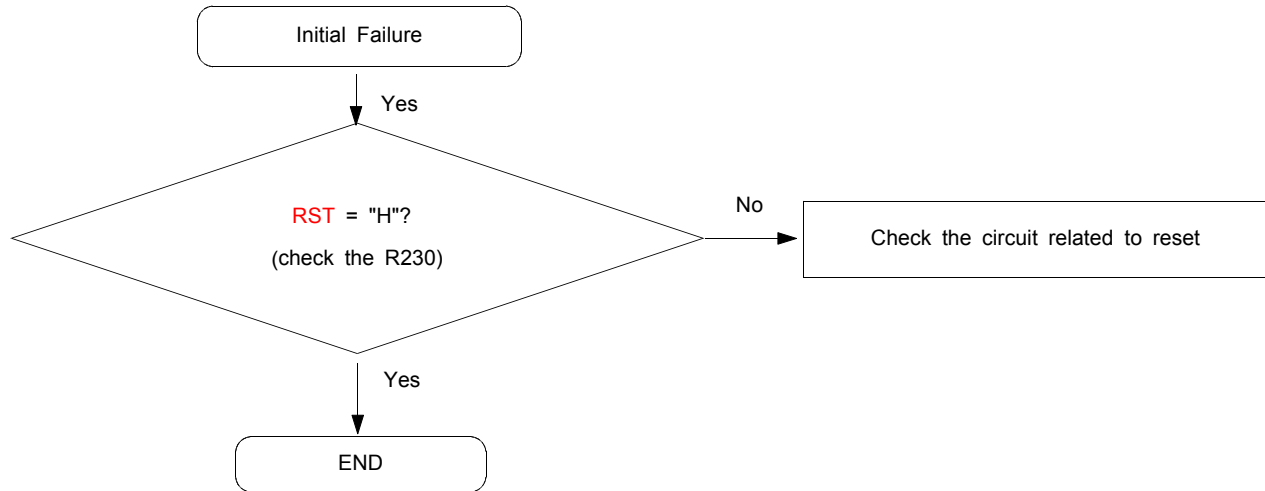


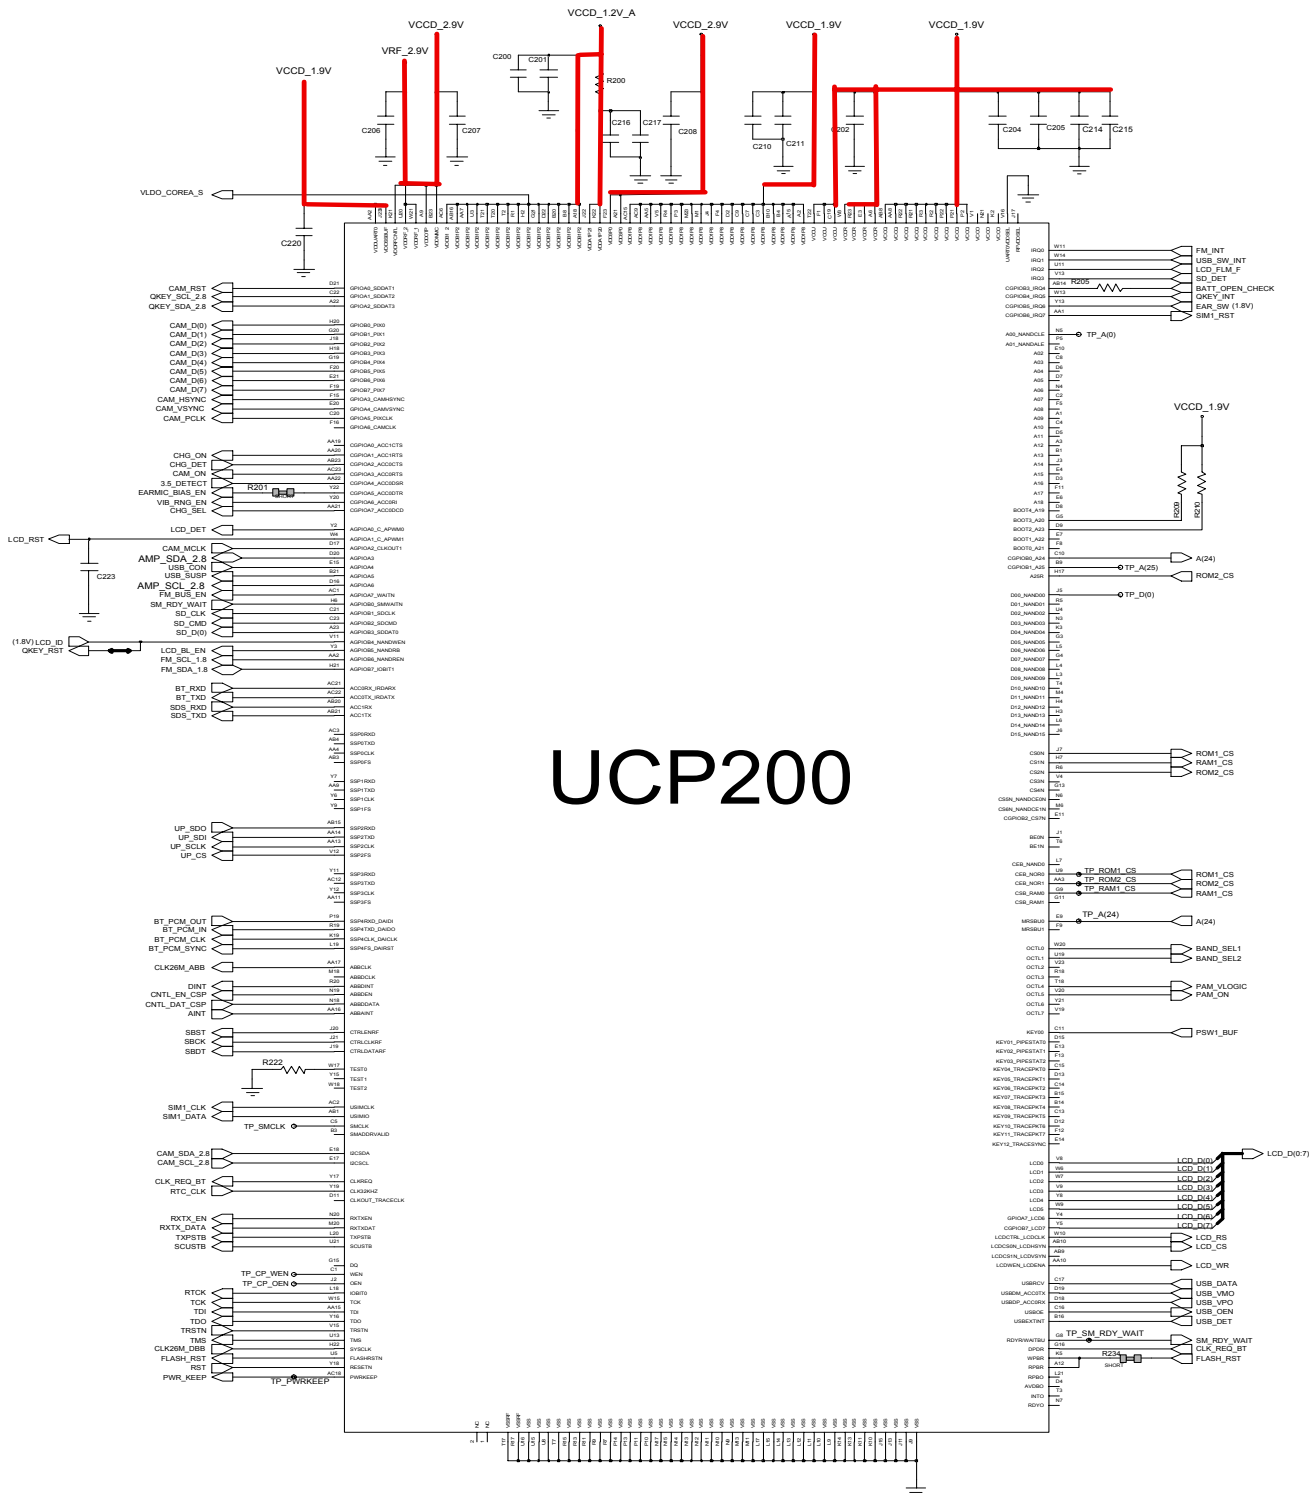





9-3. Charging Part


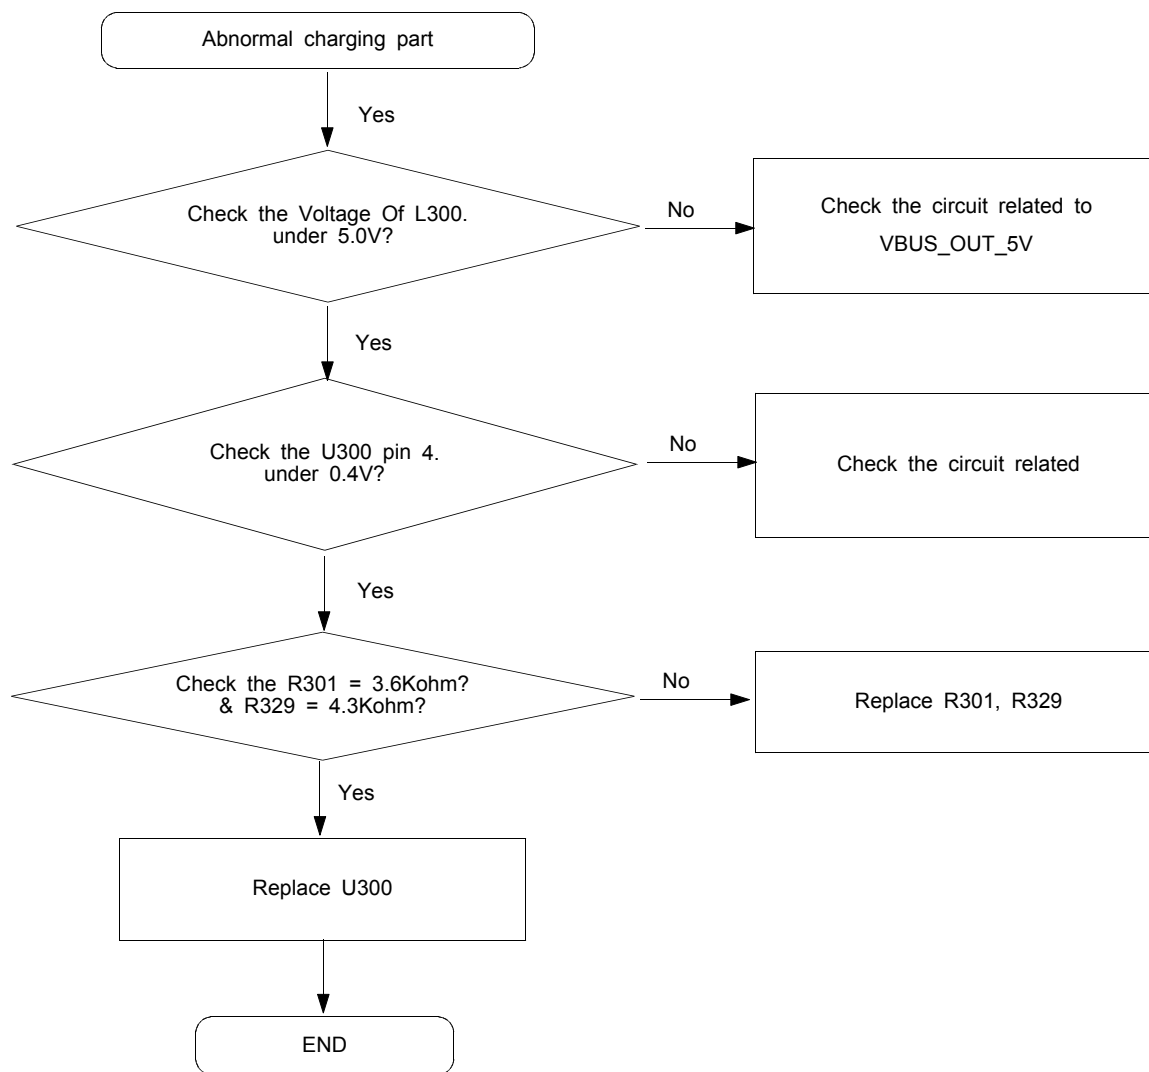


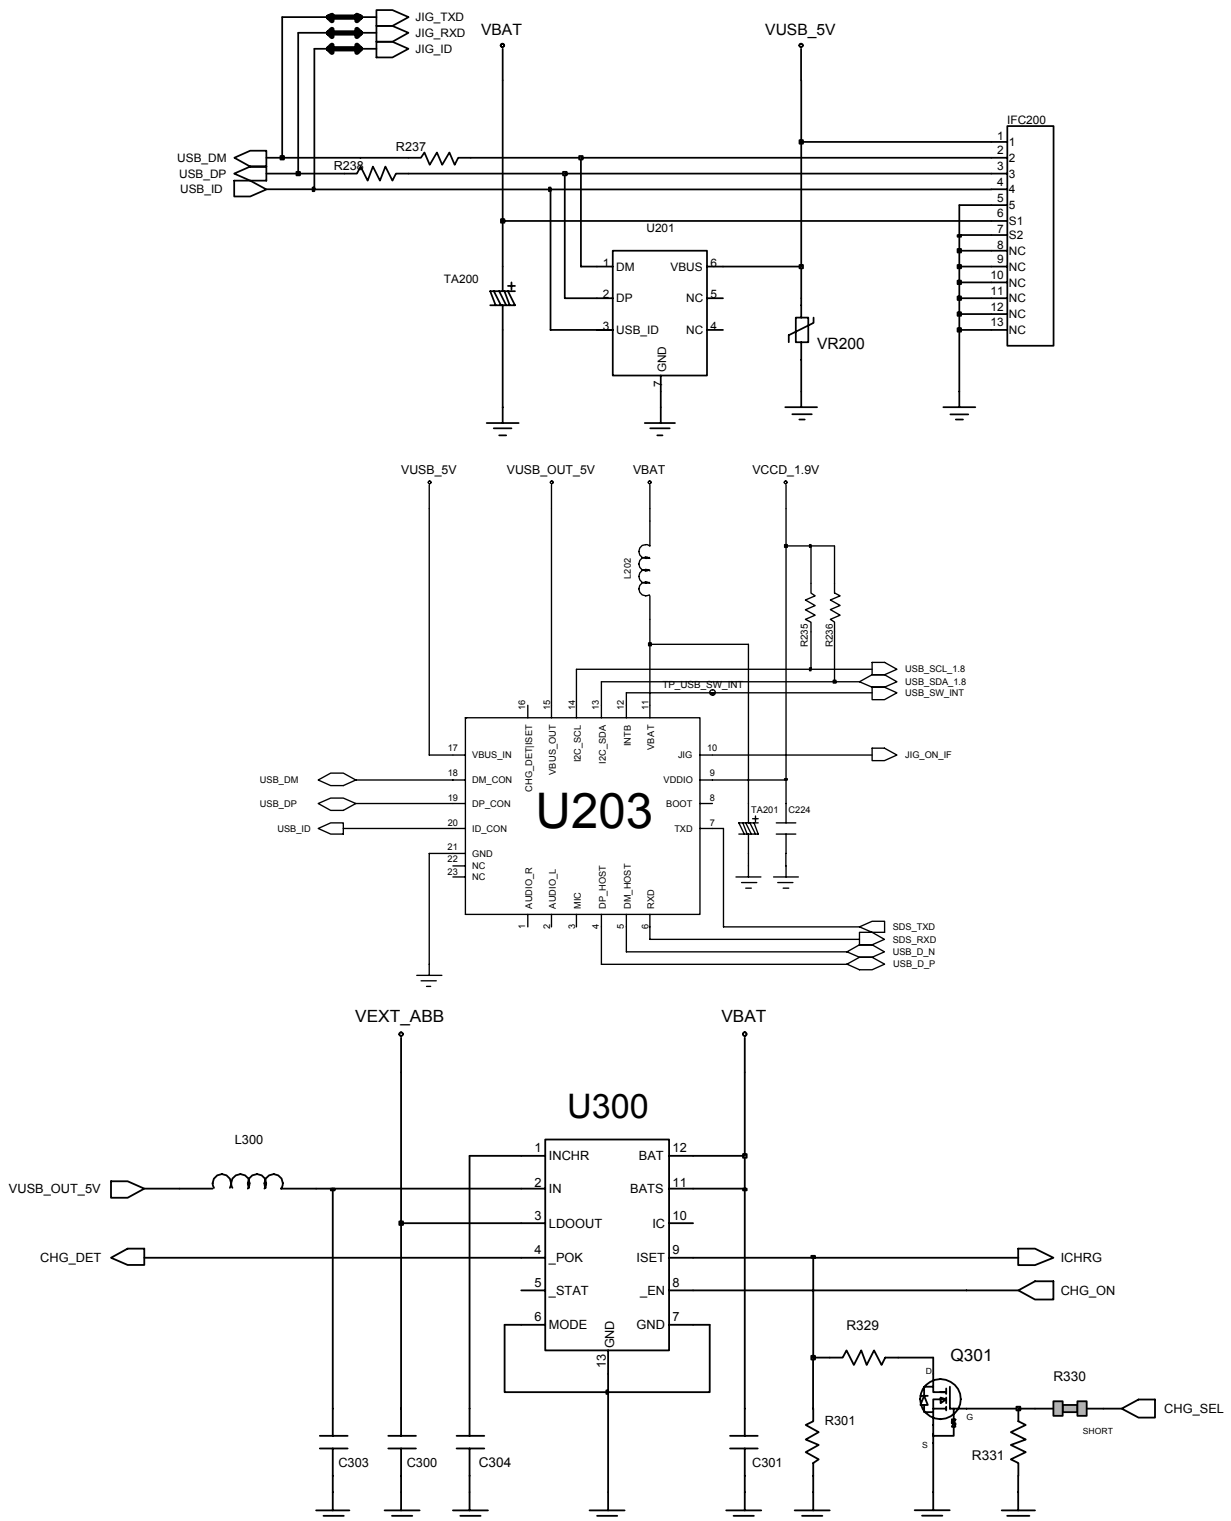

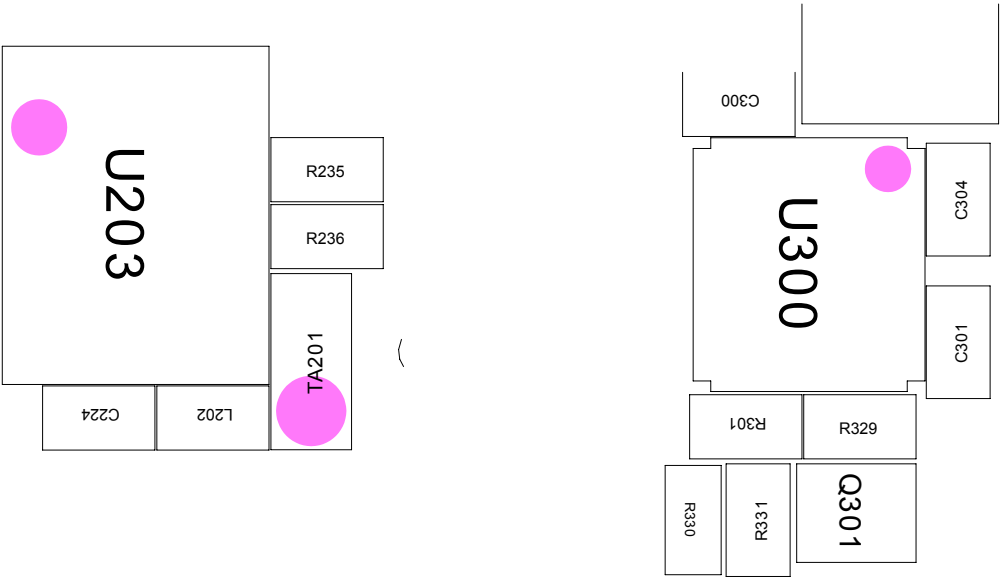




9-4. Sim Part

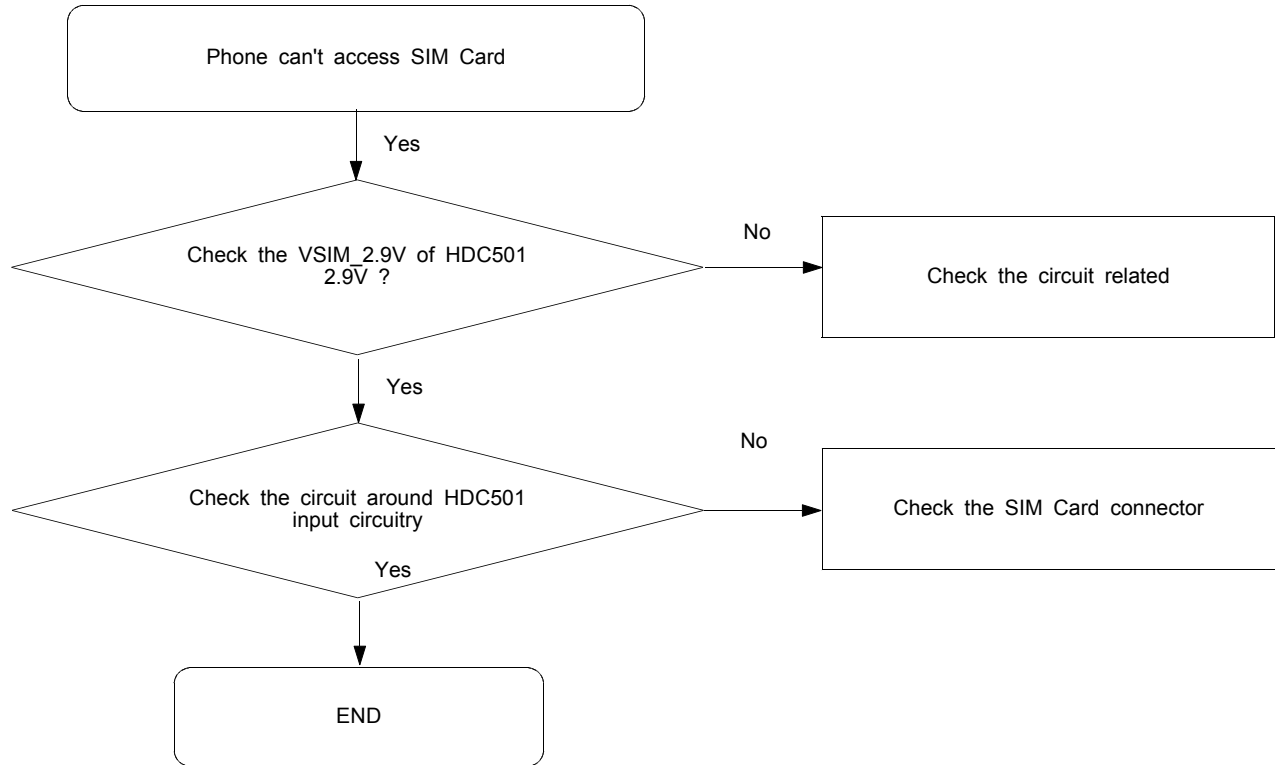

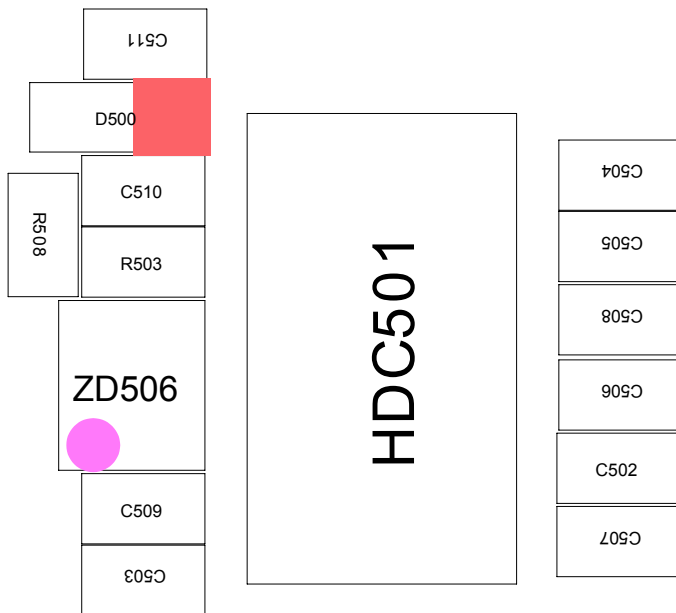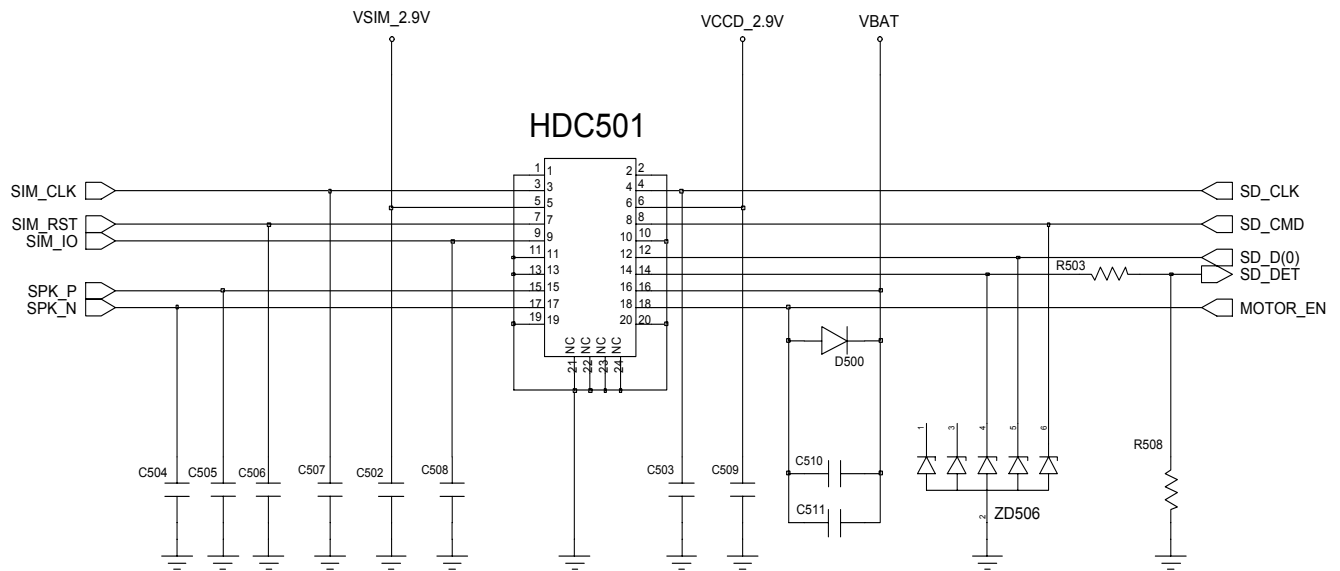



9-5. Microphone Part

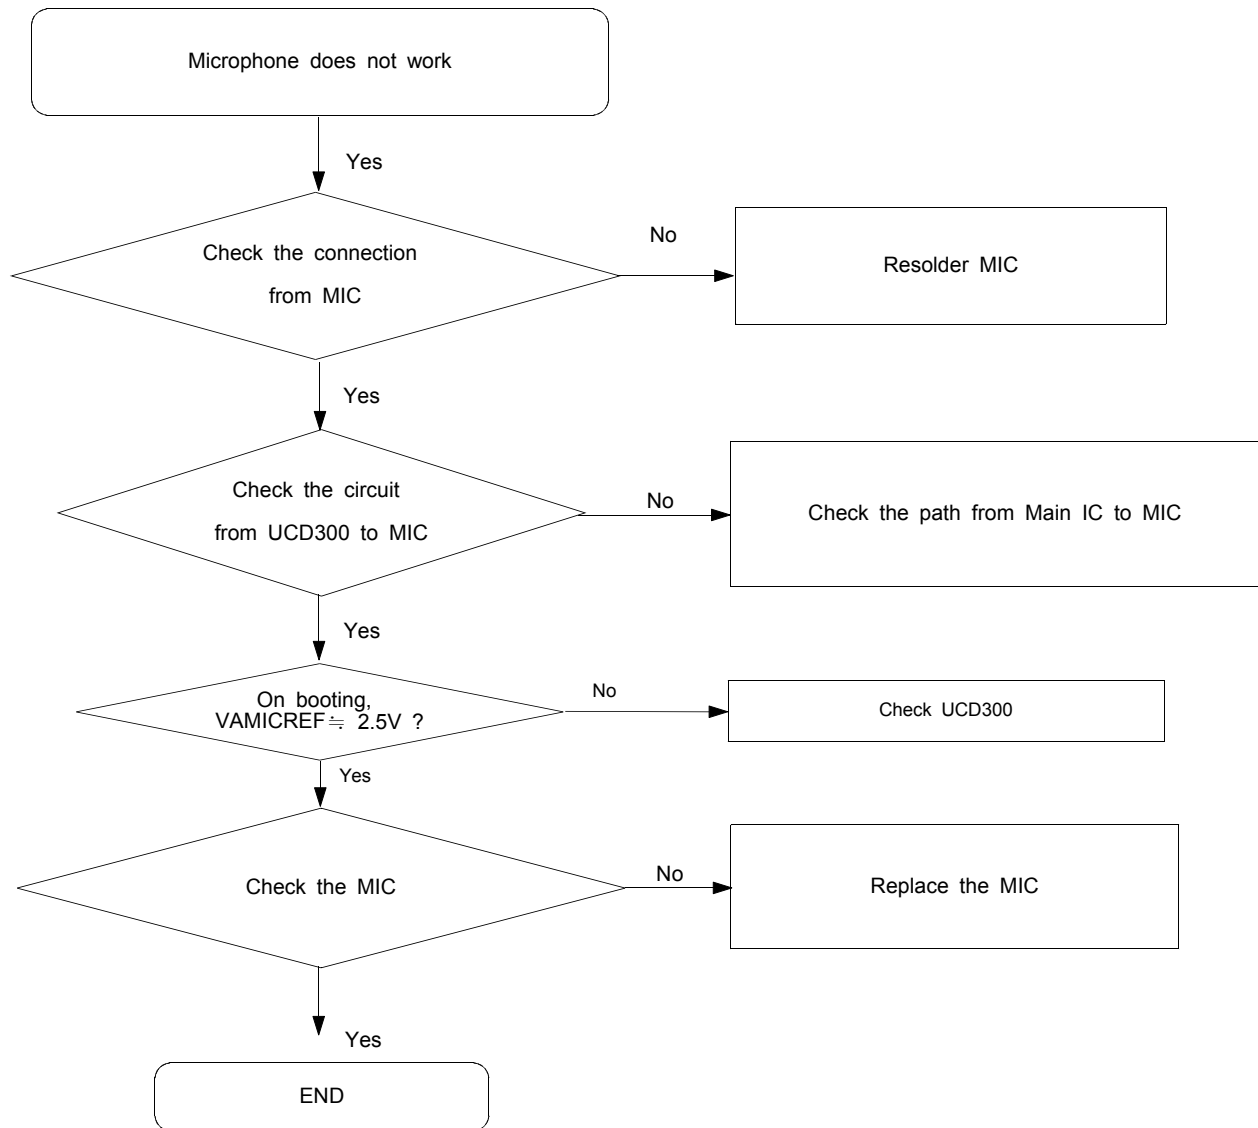

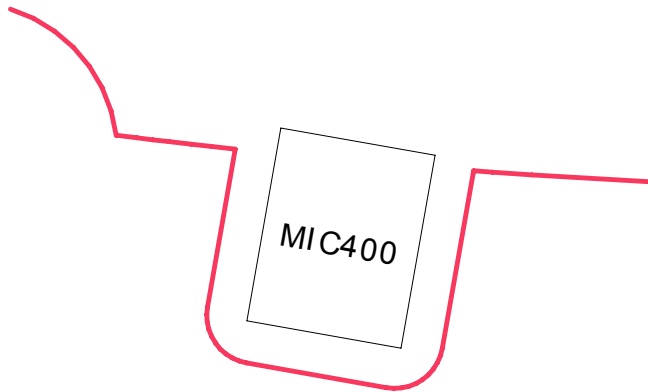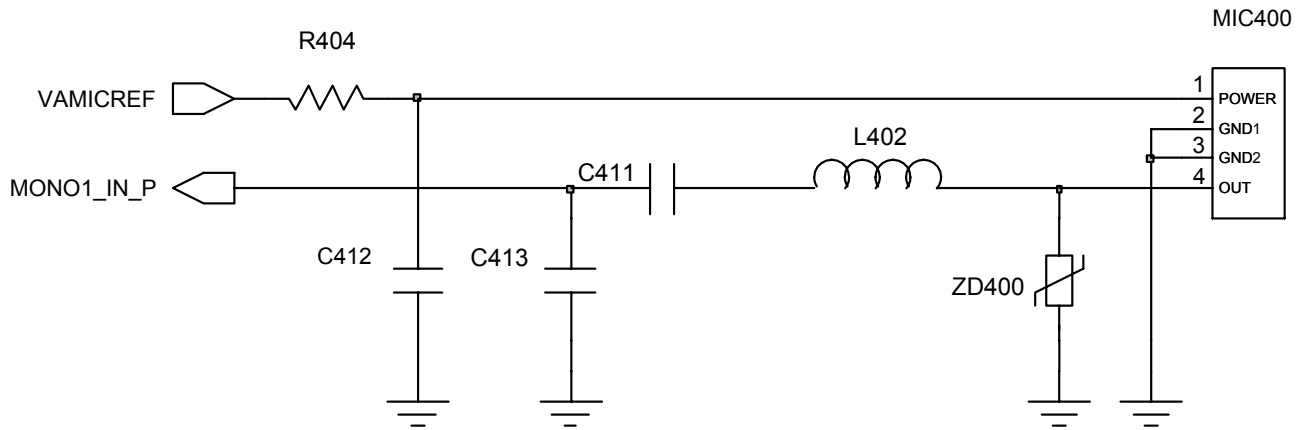




9-6. Speaker Part(Melody)

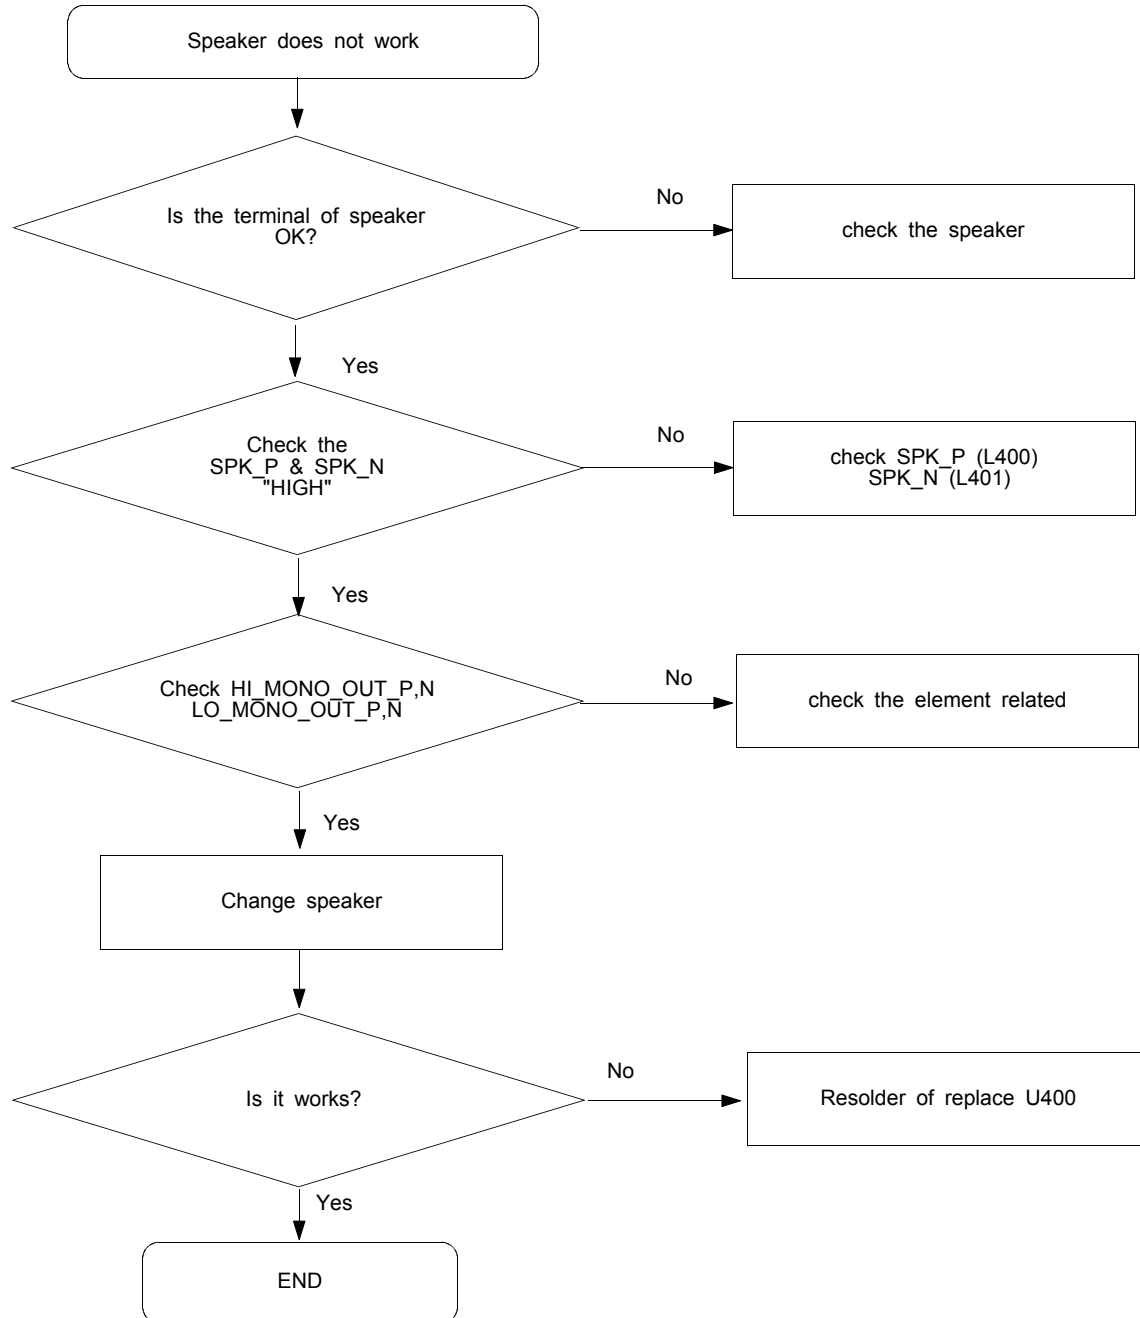


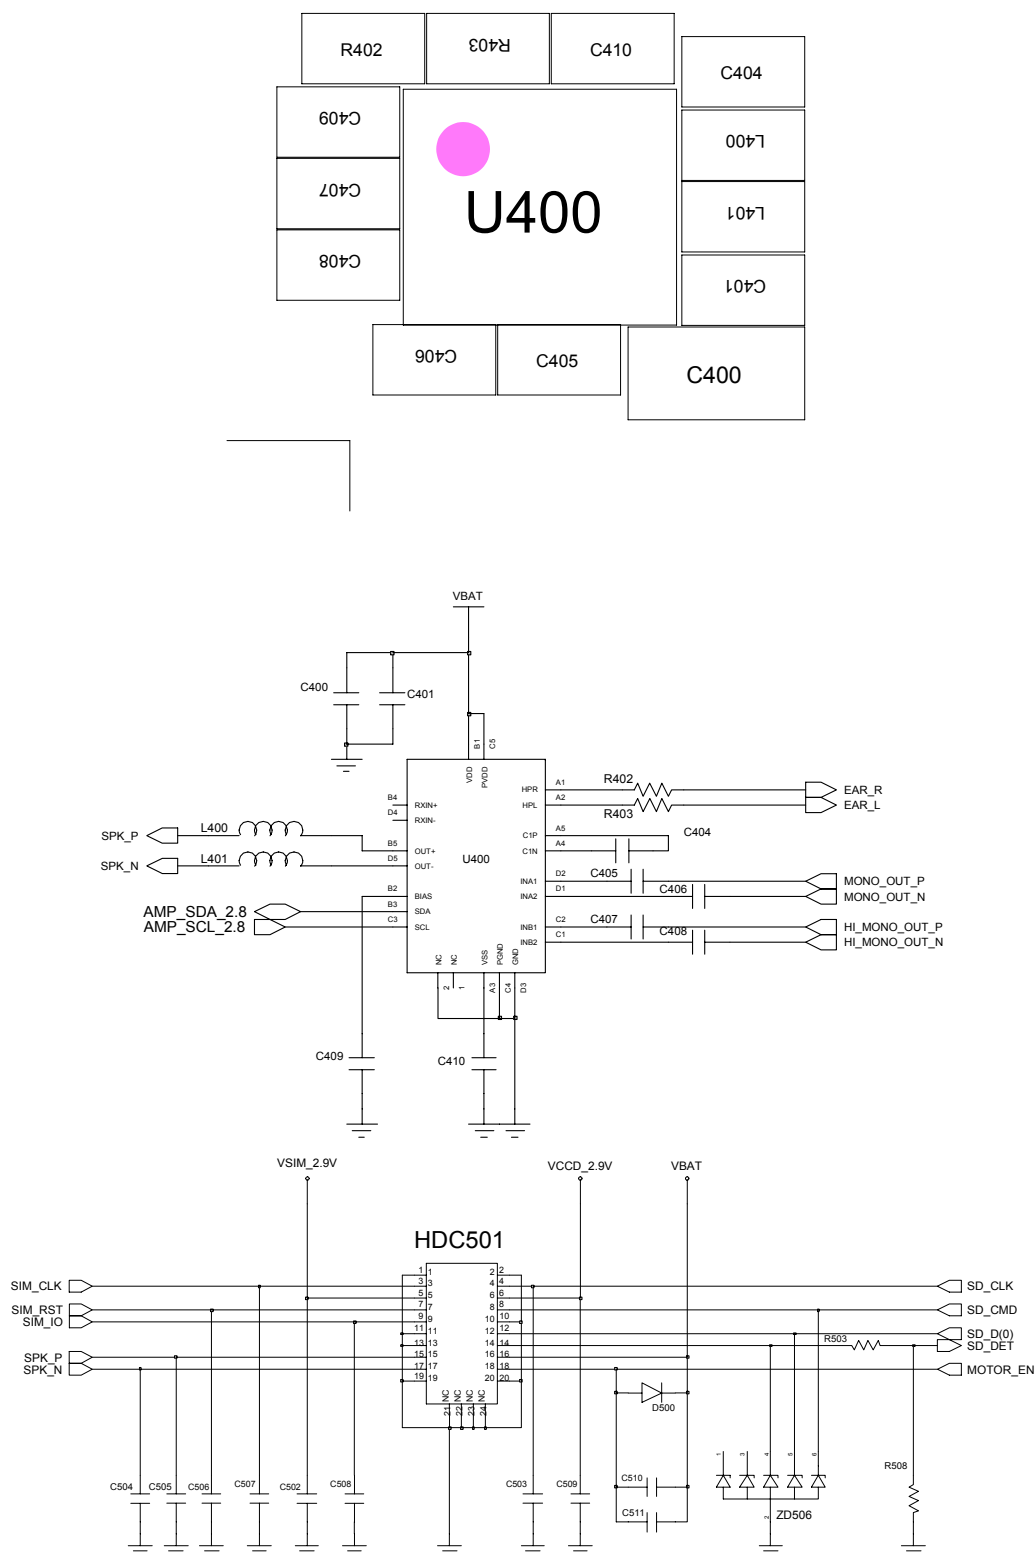


9-7. Key Data Input


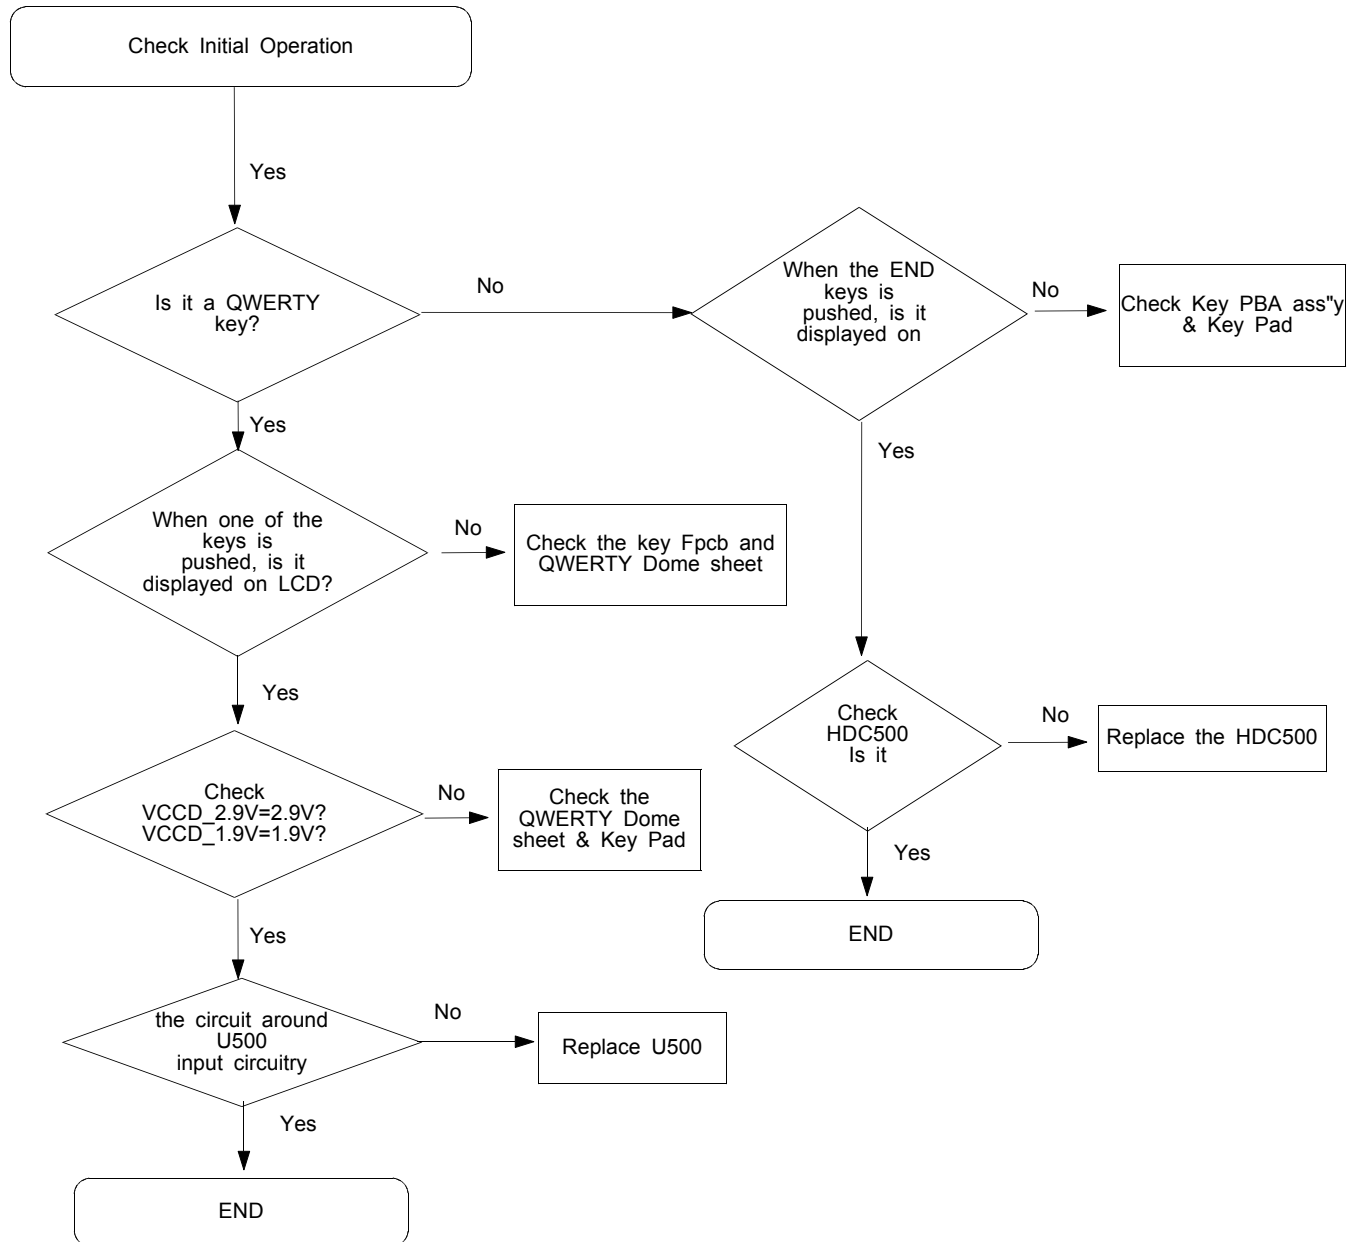


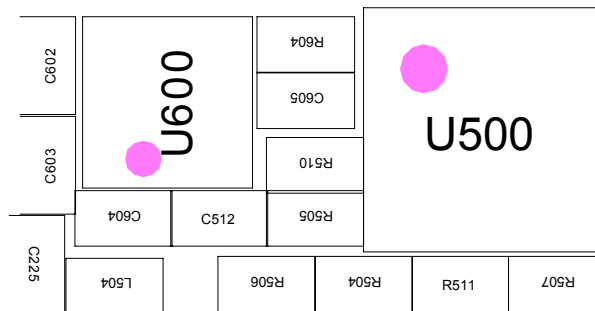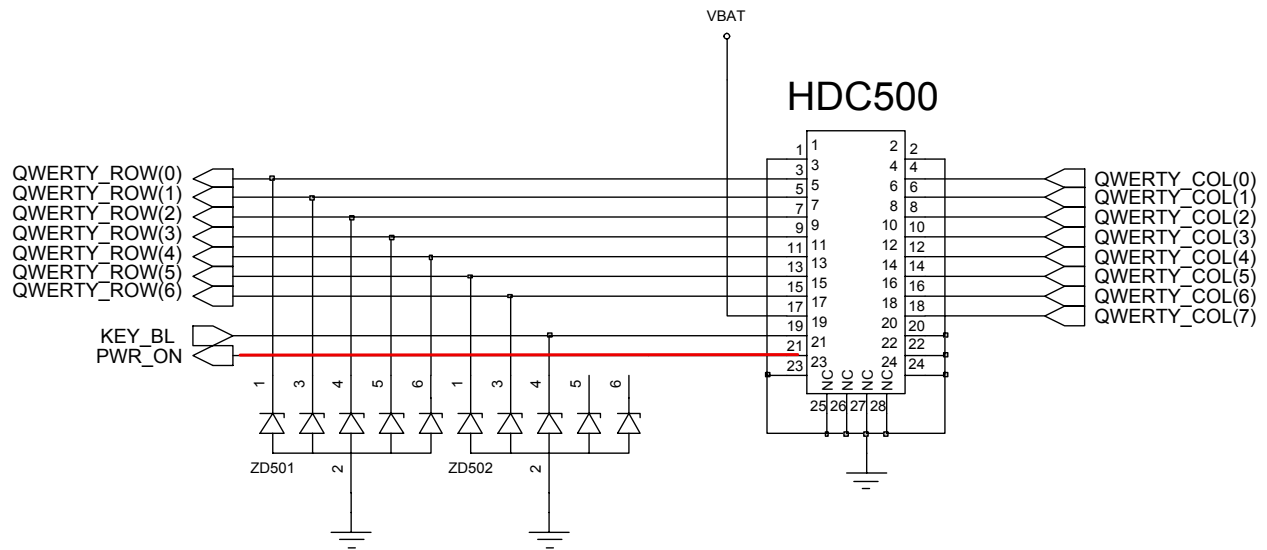

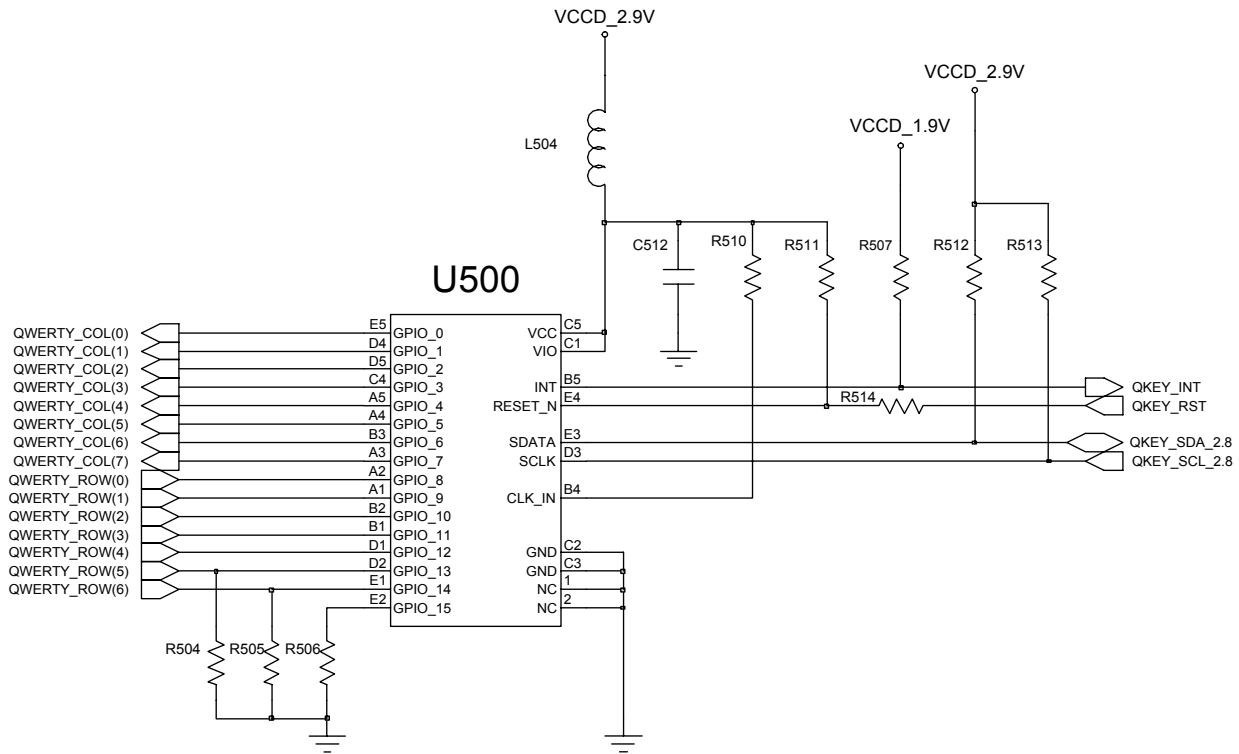




9-8. Camera part

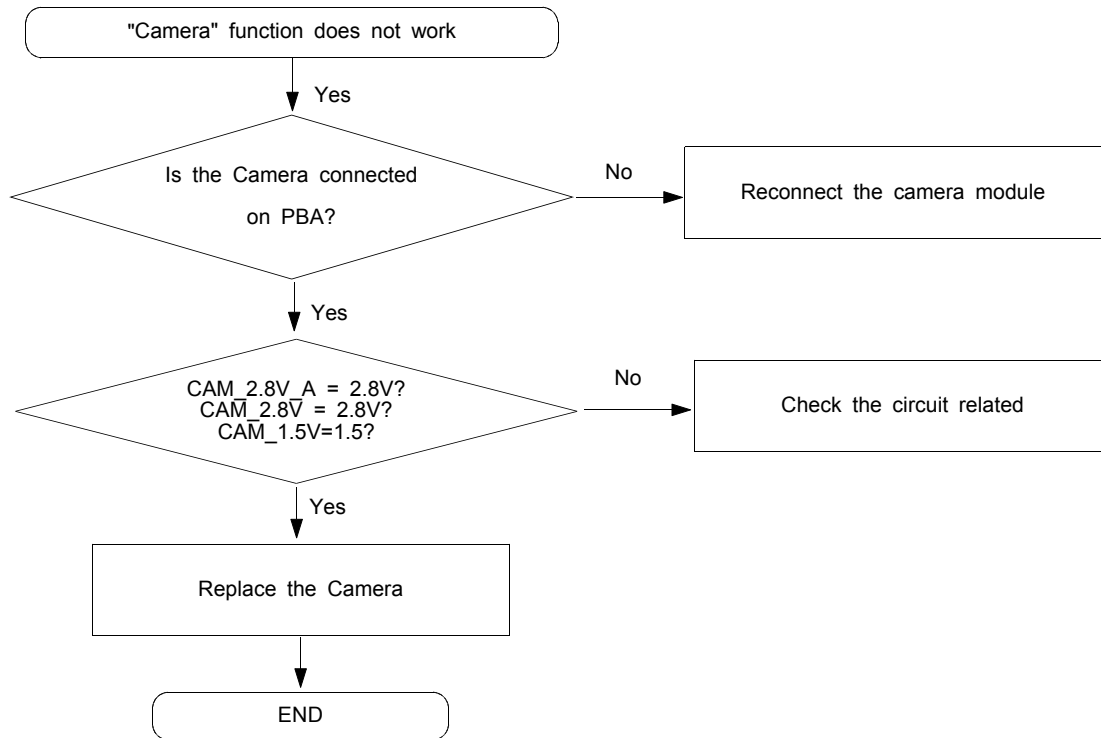

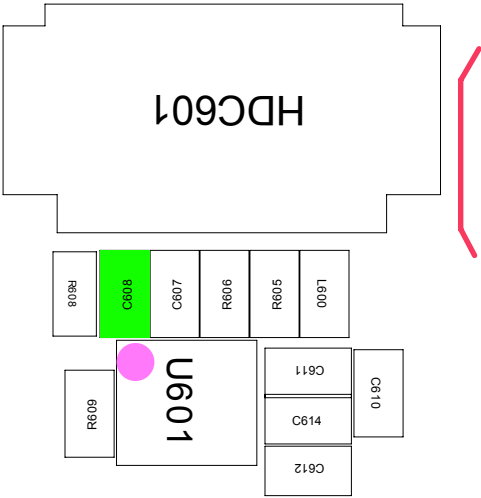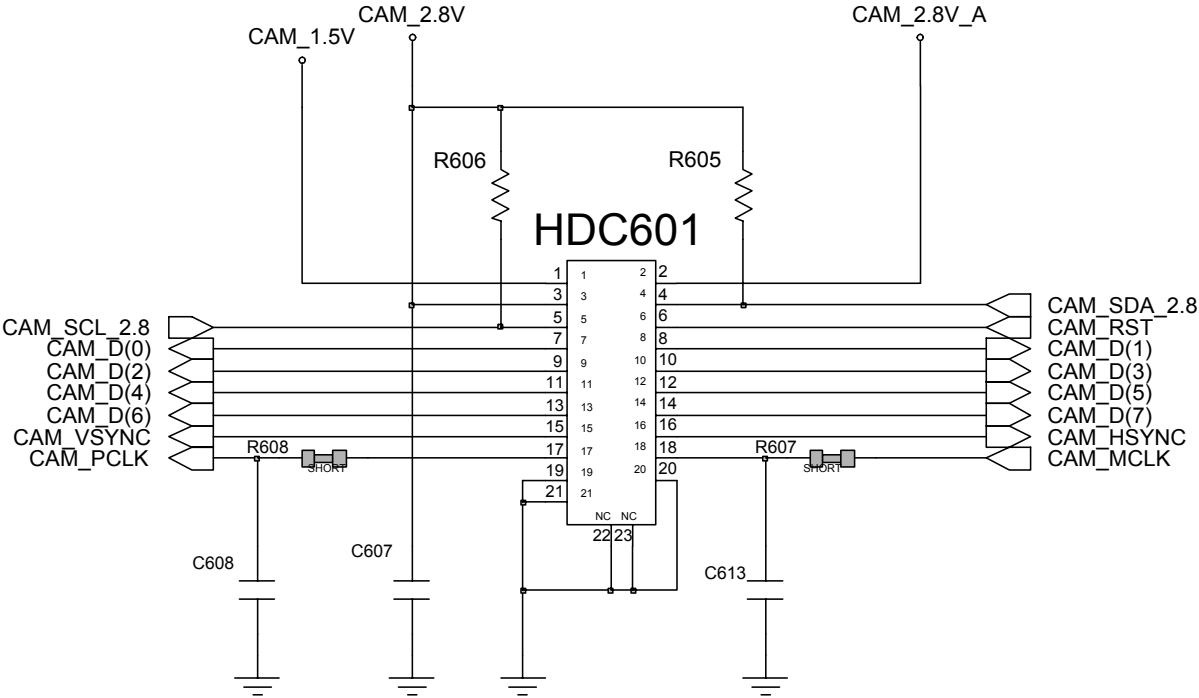


9-9. Radio part

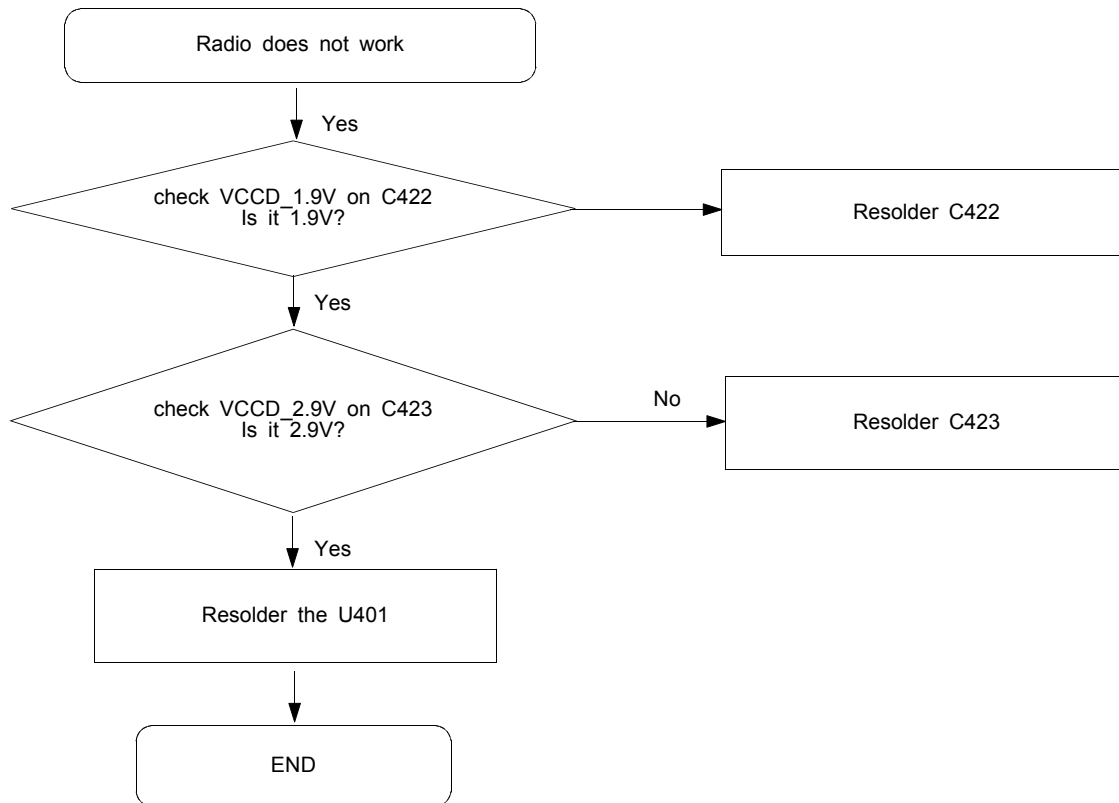


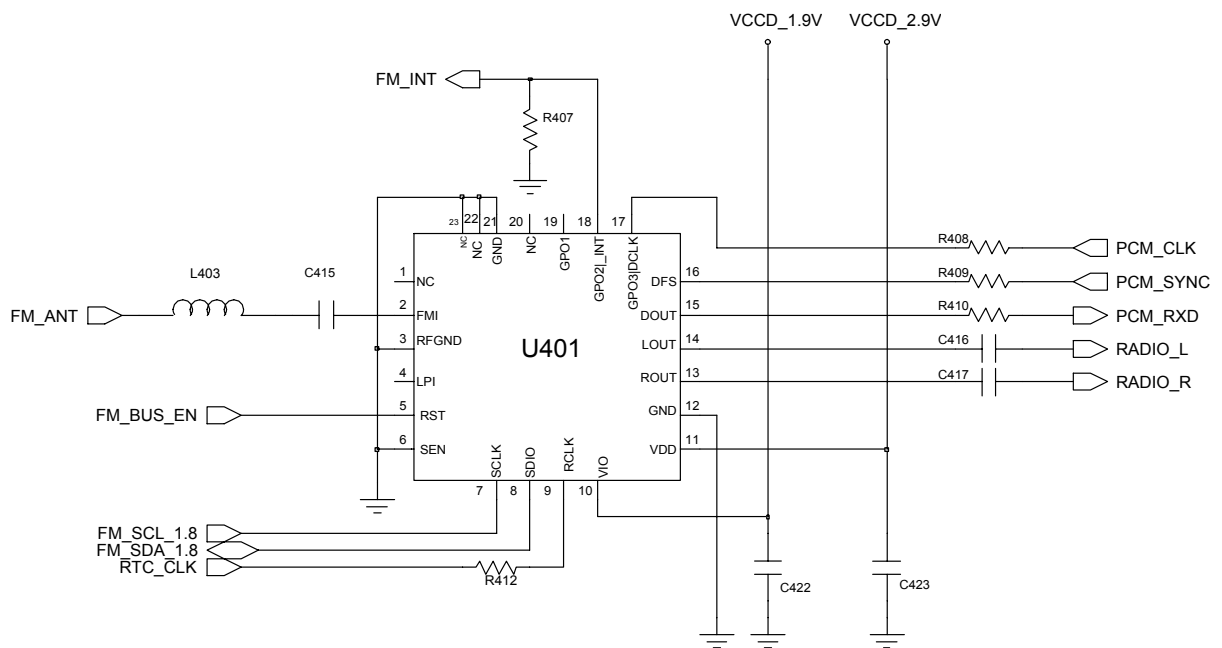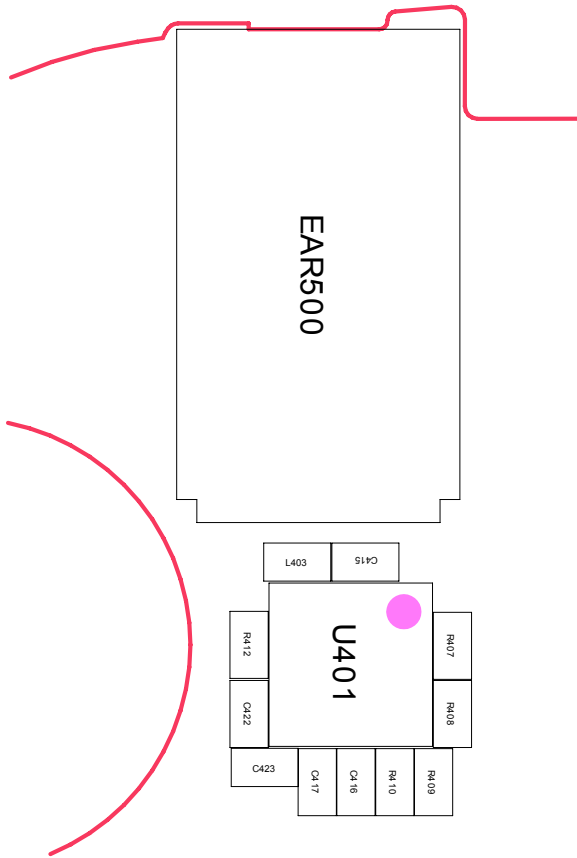


9-10. GSM850 RX

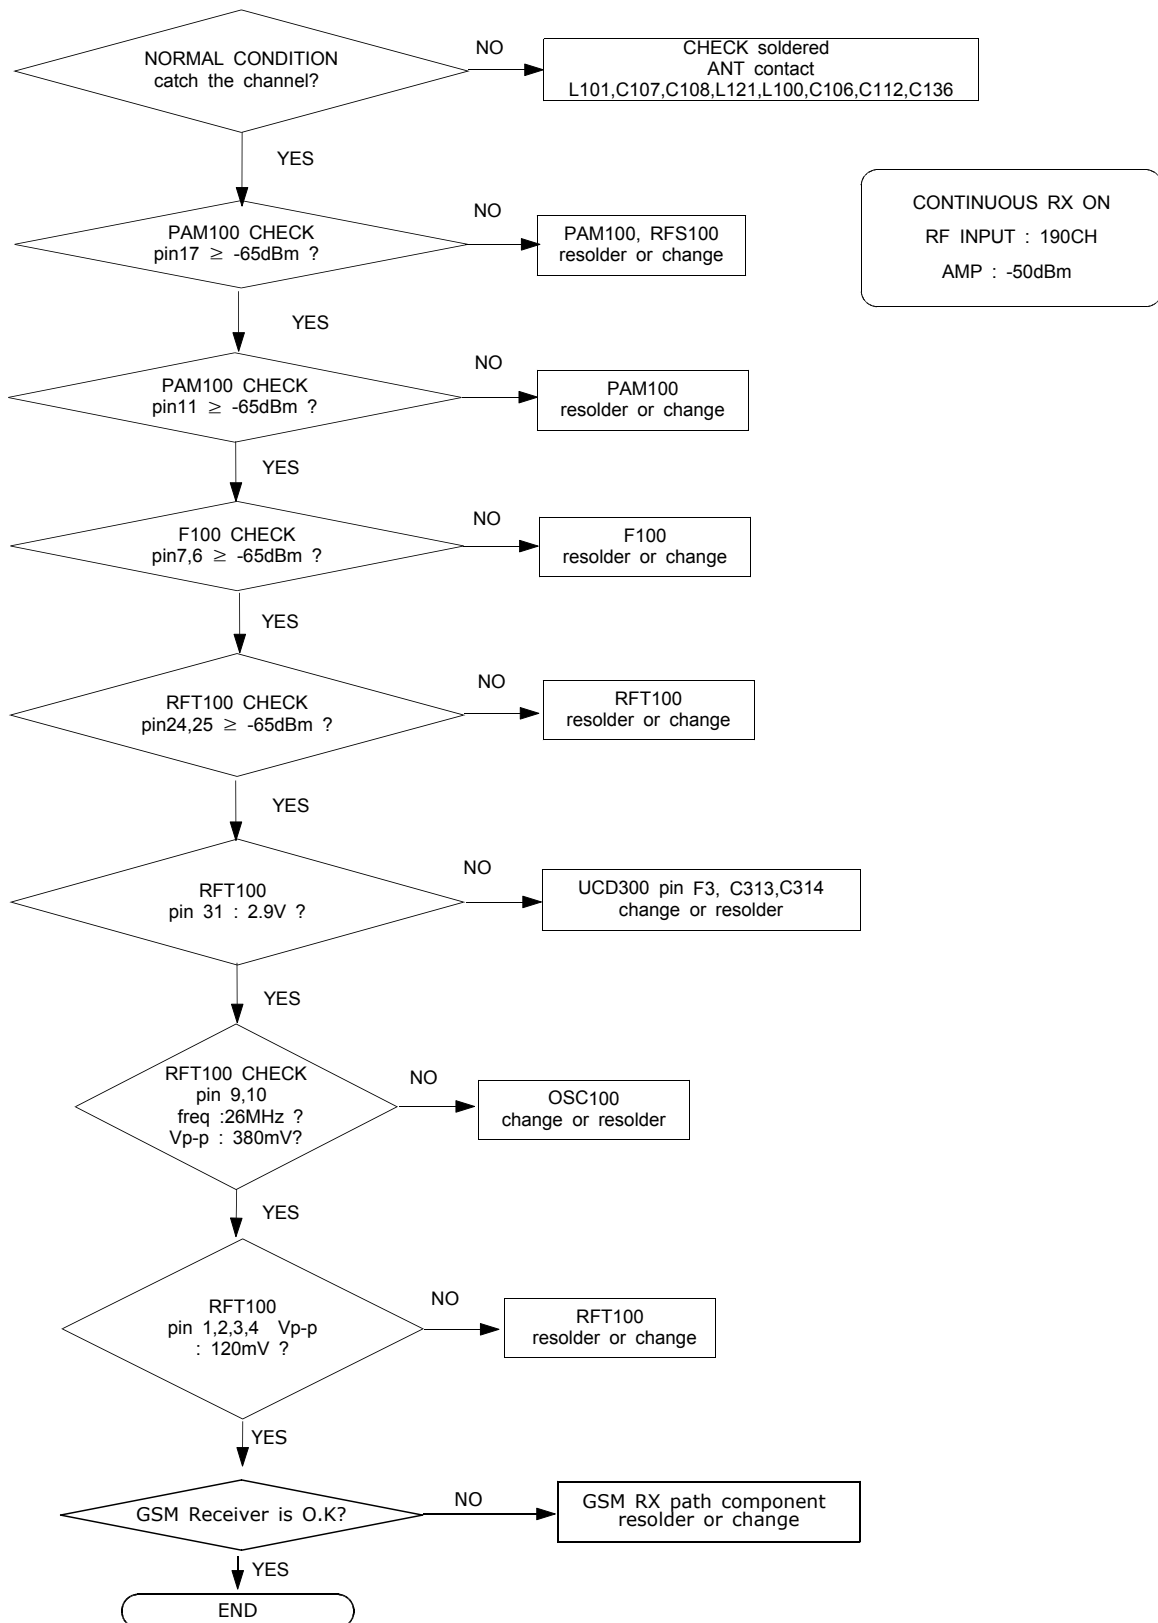


9-11. EGSM RX

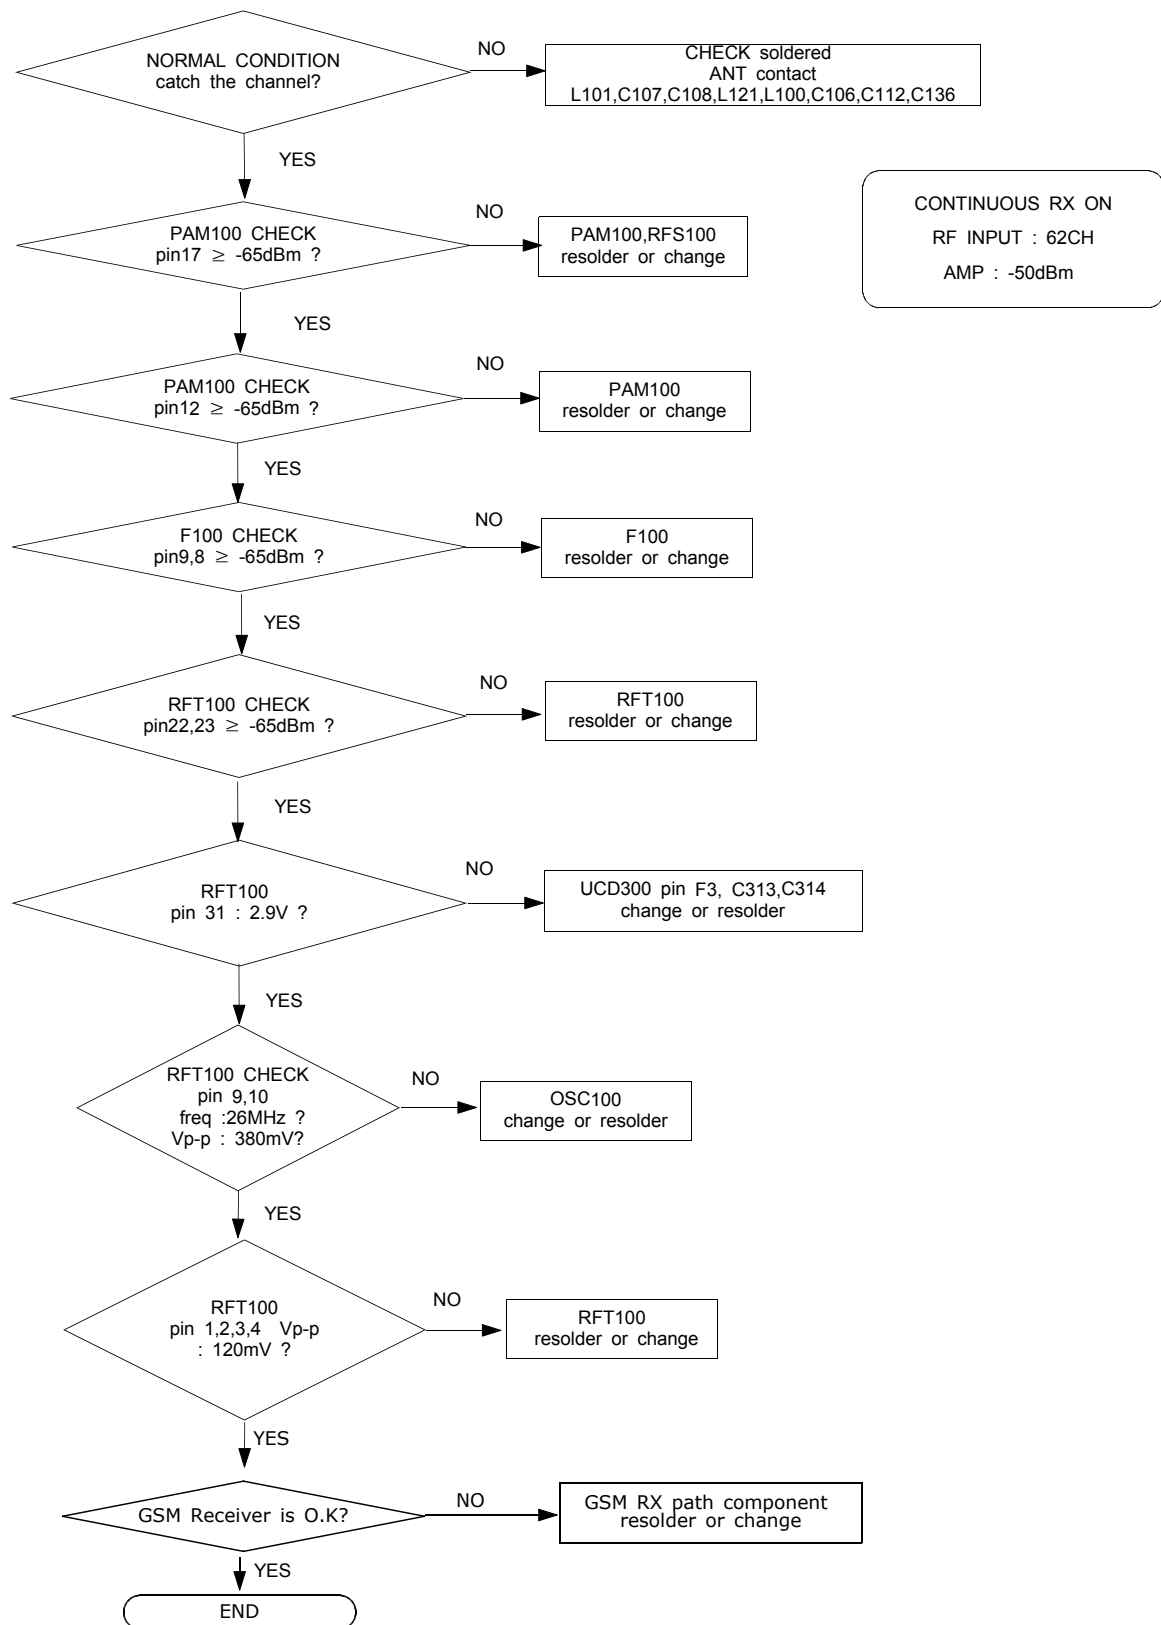


9-12. DCS RX

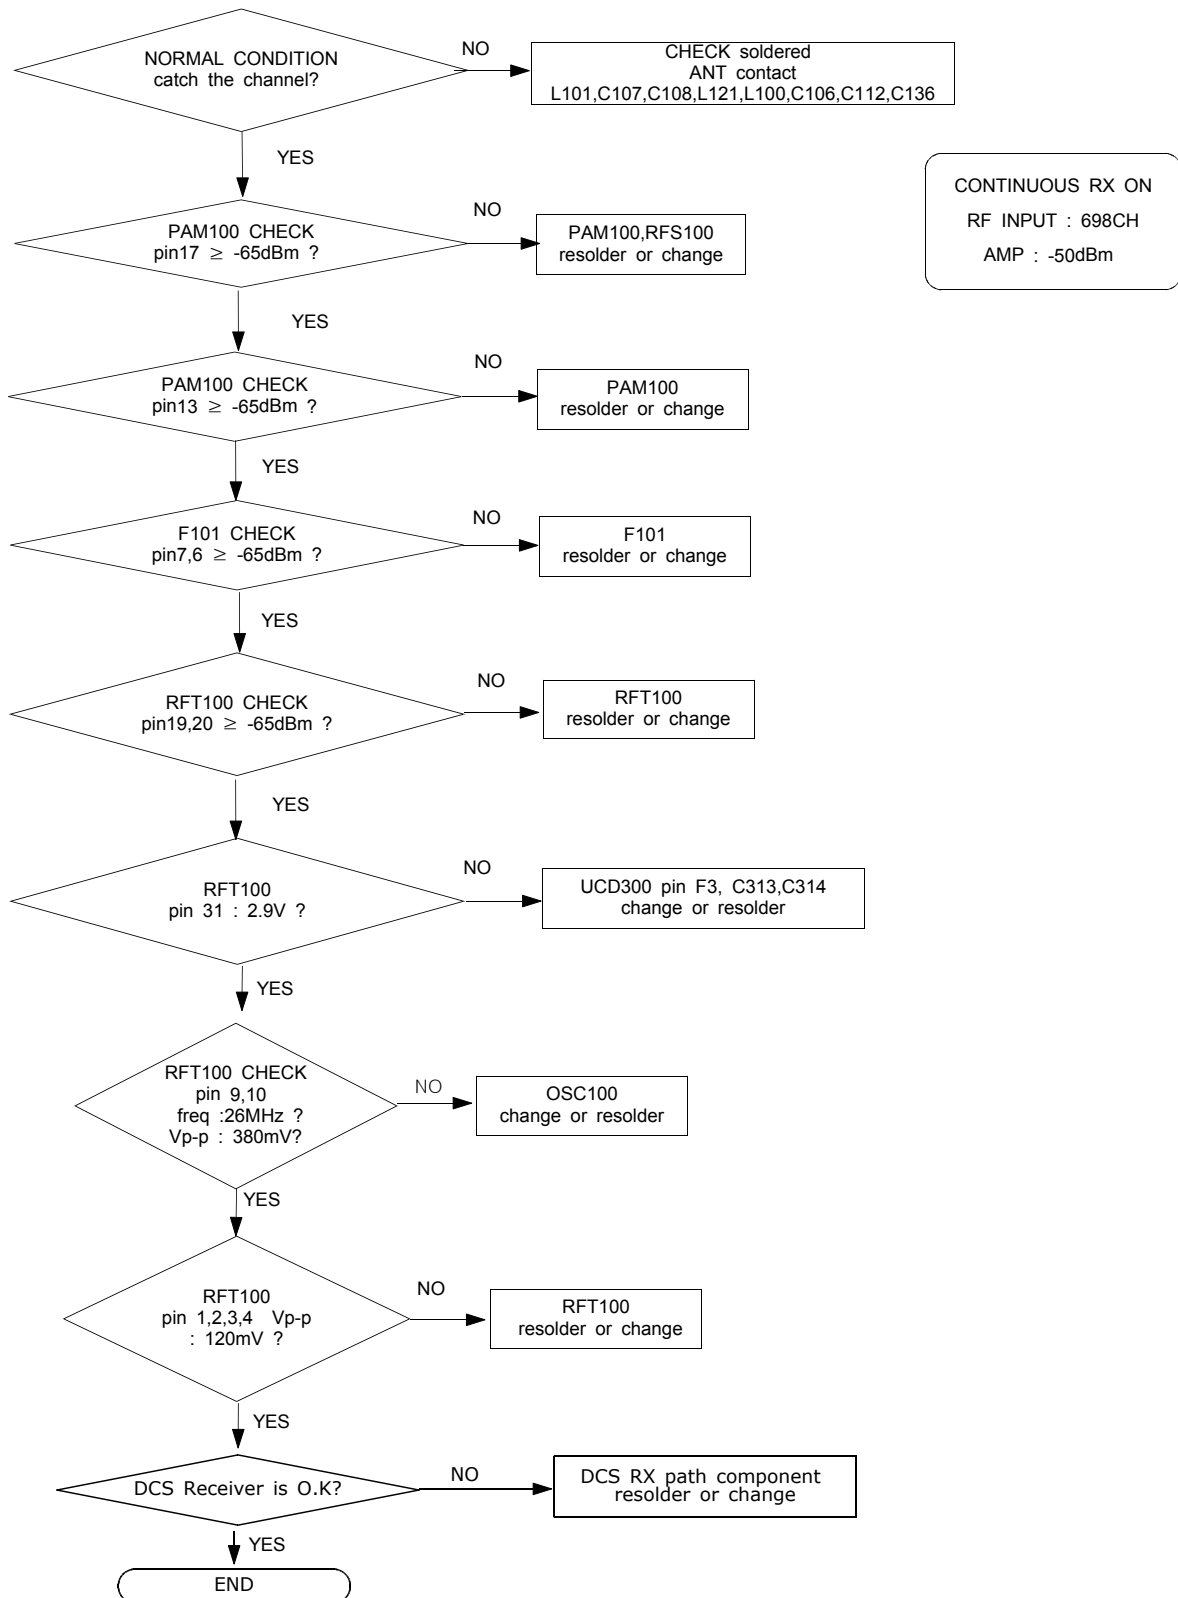

9-13. PCS RX

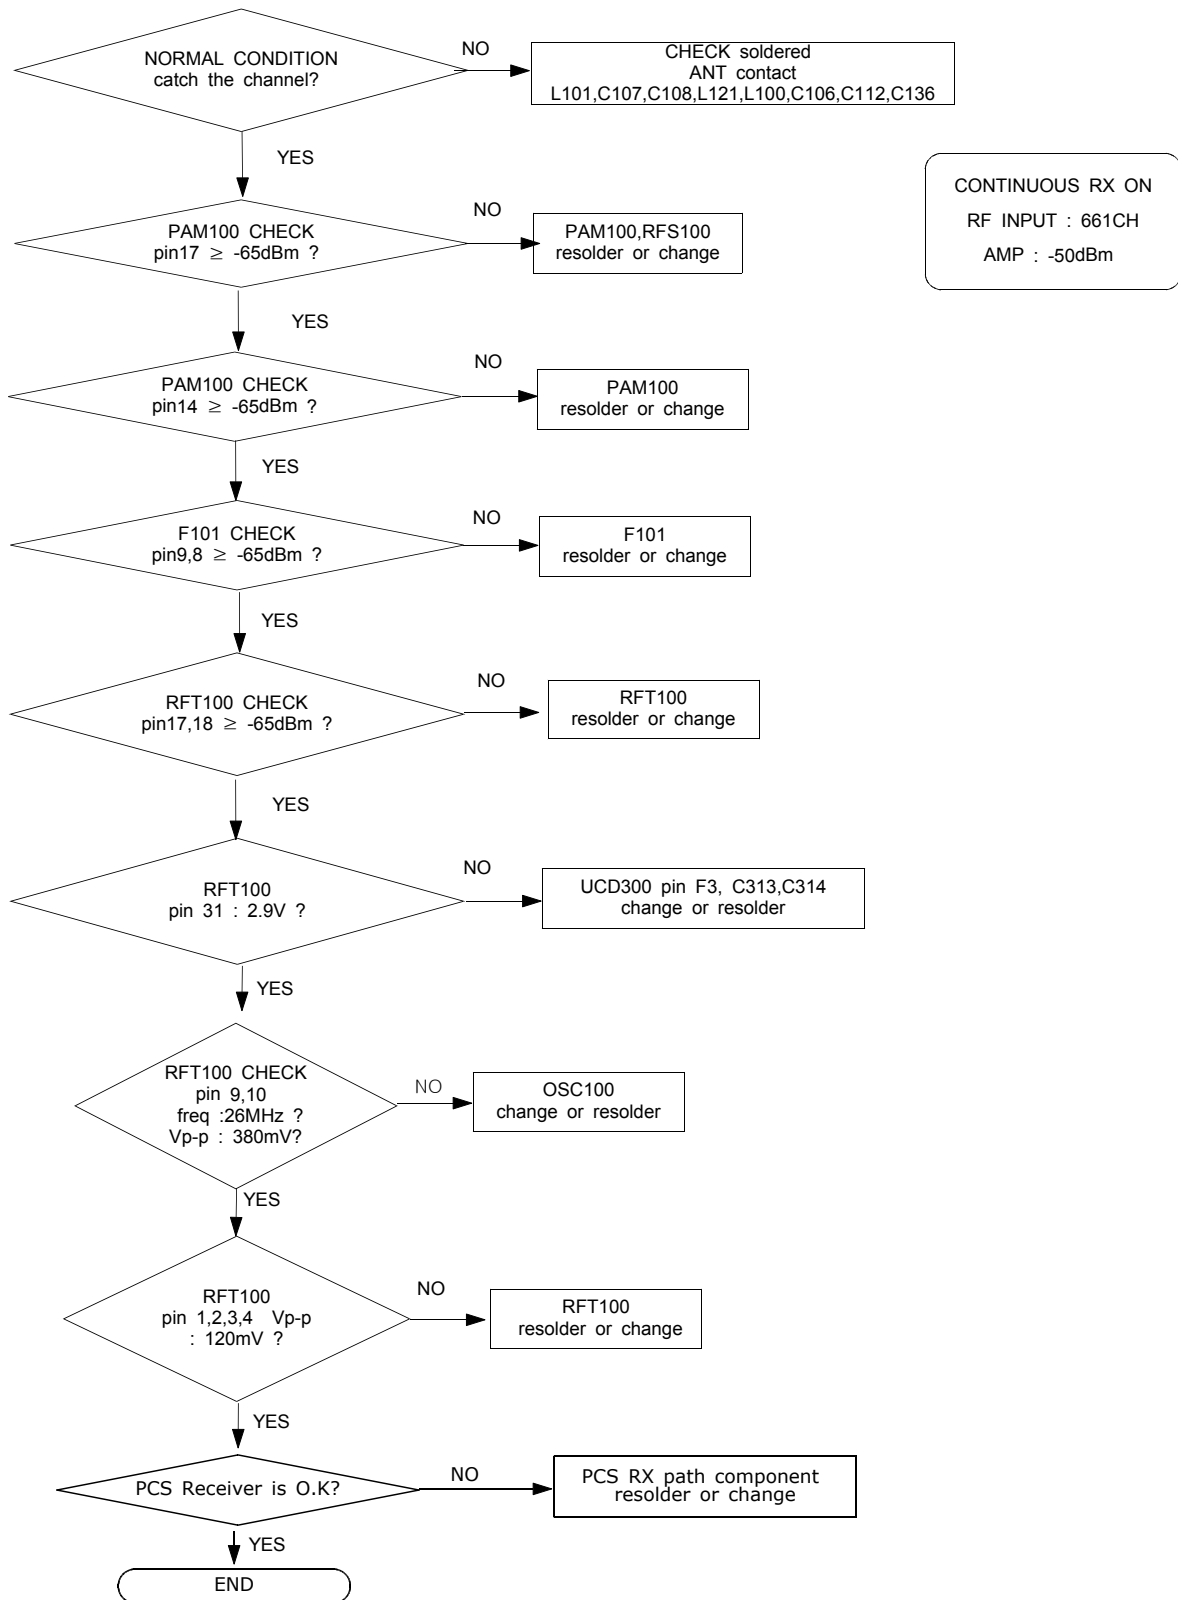


9-14. GSM850 TX

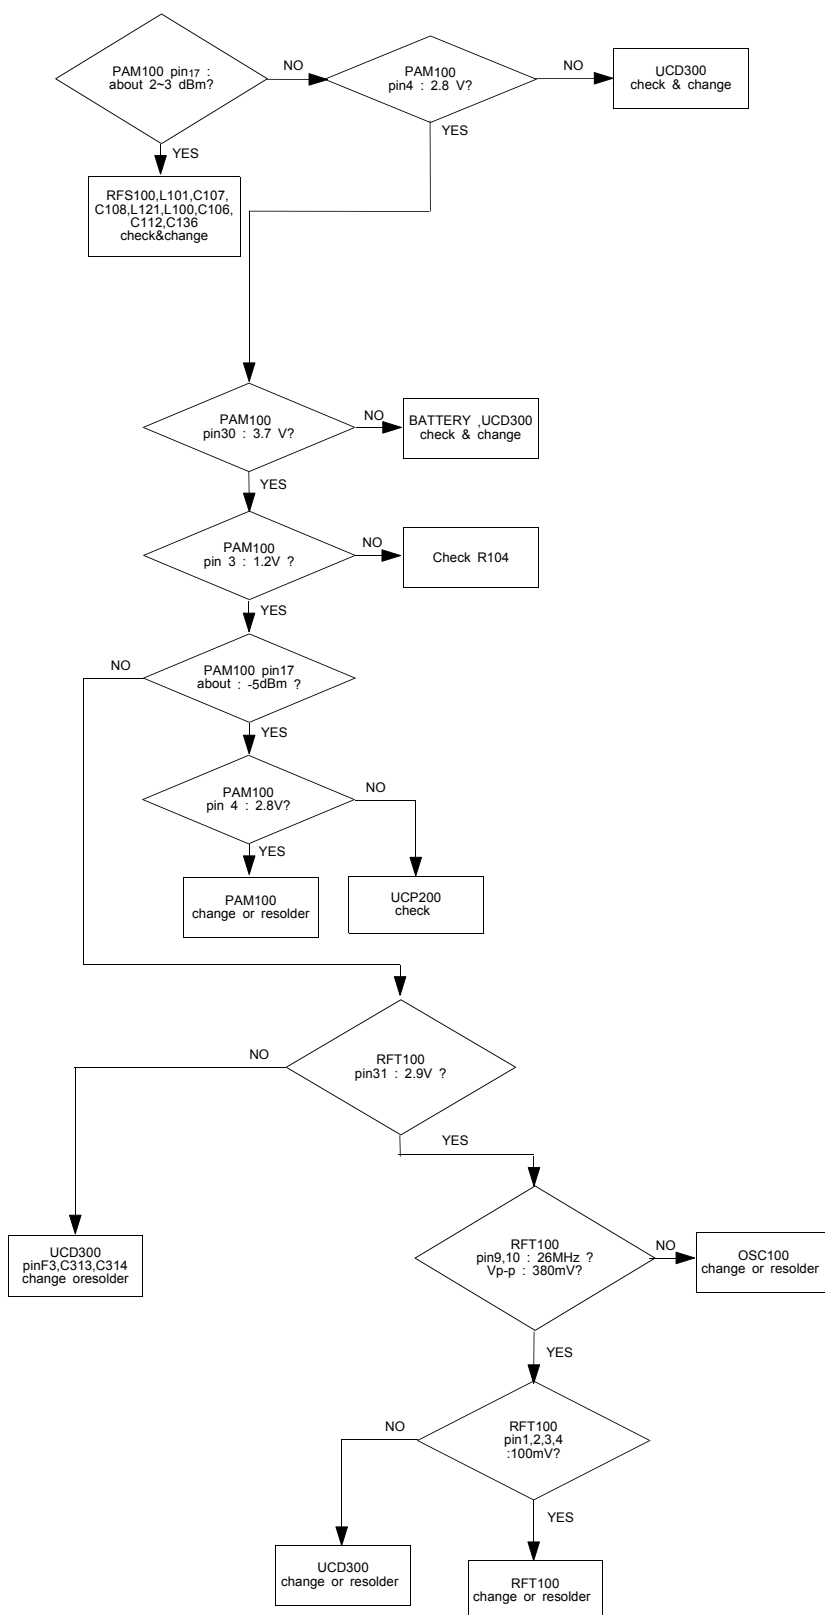


CONTINUOUS TX ON CONDITION
TX POWER DAC: 600 CODE APPLIED
CH : 190
RBW : 100KHz
VBW : 100KHz
SPAN : 10MHz
REF LEV : 10dBm
ATT : 20dB

9-15 EGSM TX

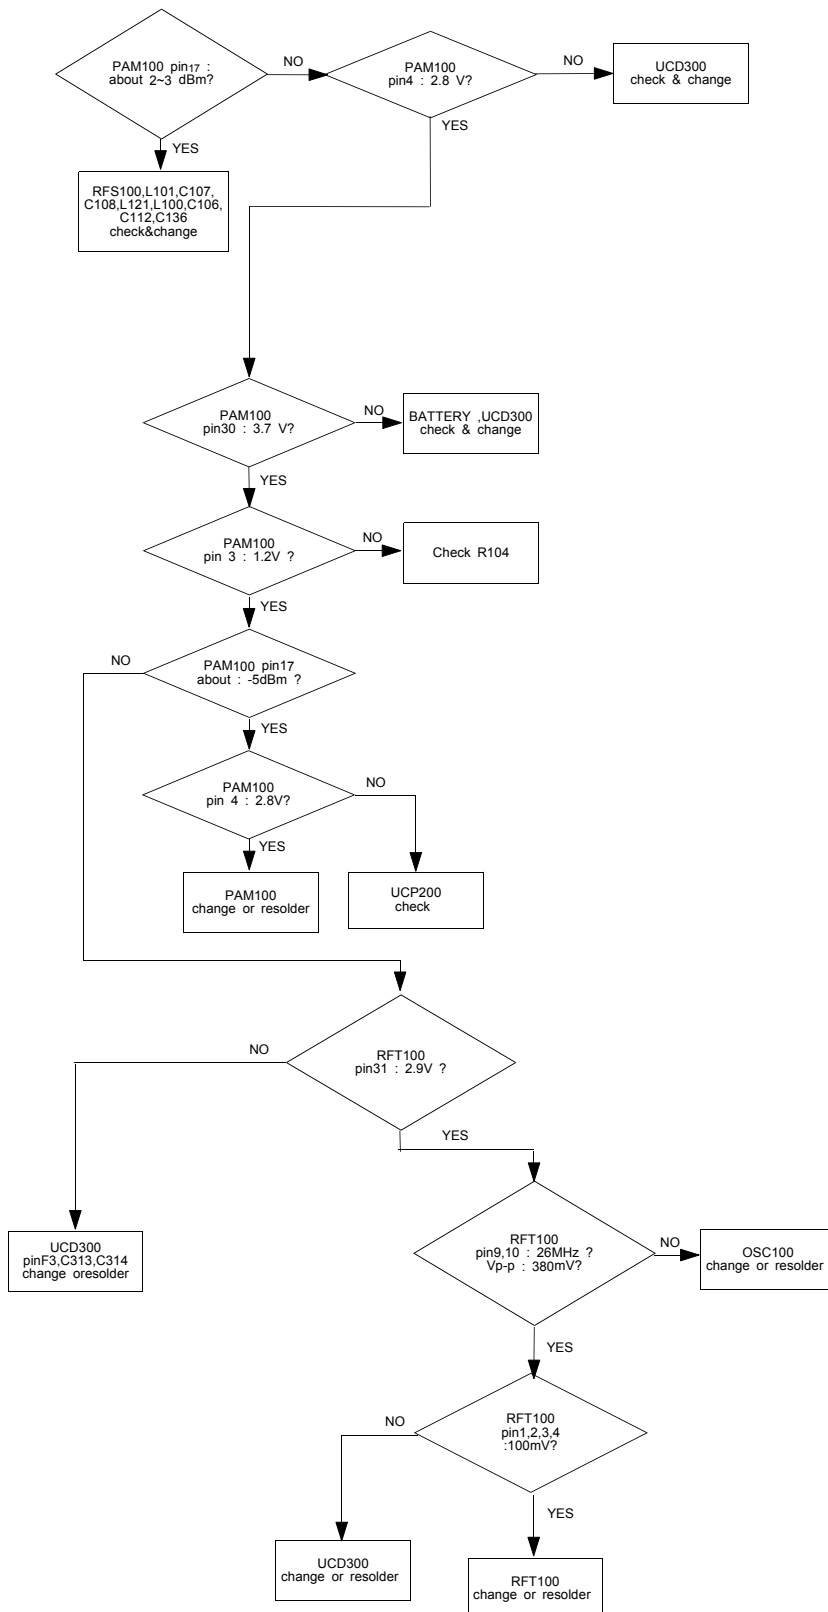


CONTINUOUS TX ON CONDITION
TX POWER DAC: 600 CODE APPLIED
CH : 62
RBW : 100KHz
VBW : 100KHz
SPAN : 10MHz
REF LEV : 10dBm
ATT : 20dB

9-16. DCS TX

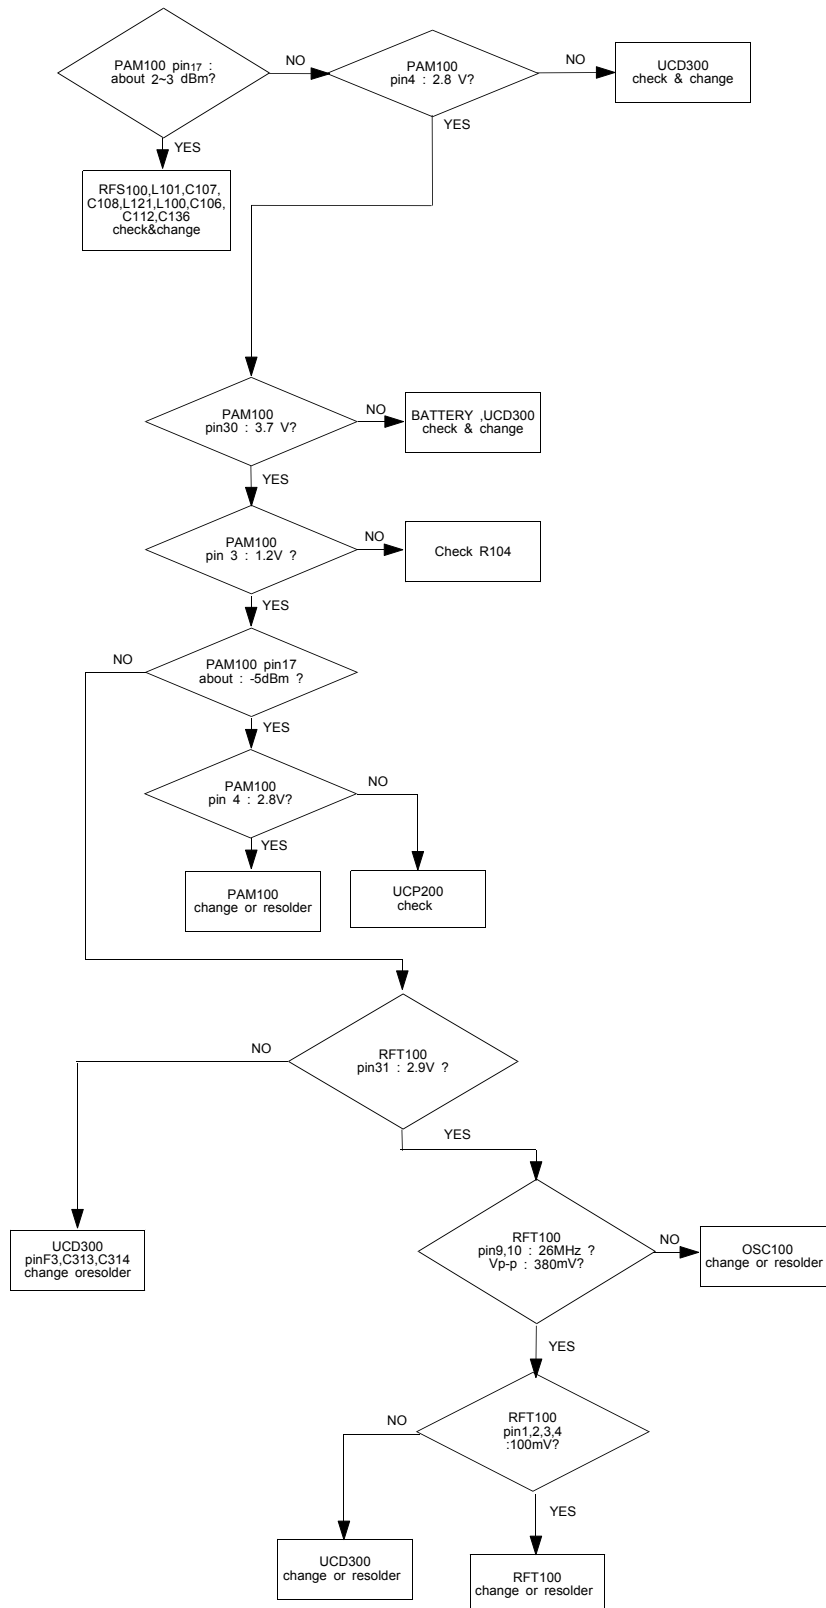



CONTINUOUS TX ON CONDITION
TX POWER DAC:520 CODE APPLIED
CH : 698
RBW : 100KHz
VBW : 100KHz
SPAN : 10MHz
REF. LEV. : 10dBm
ATT. : 20dB

9-17. PCS TX

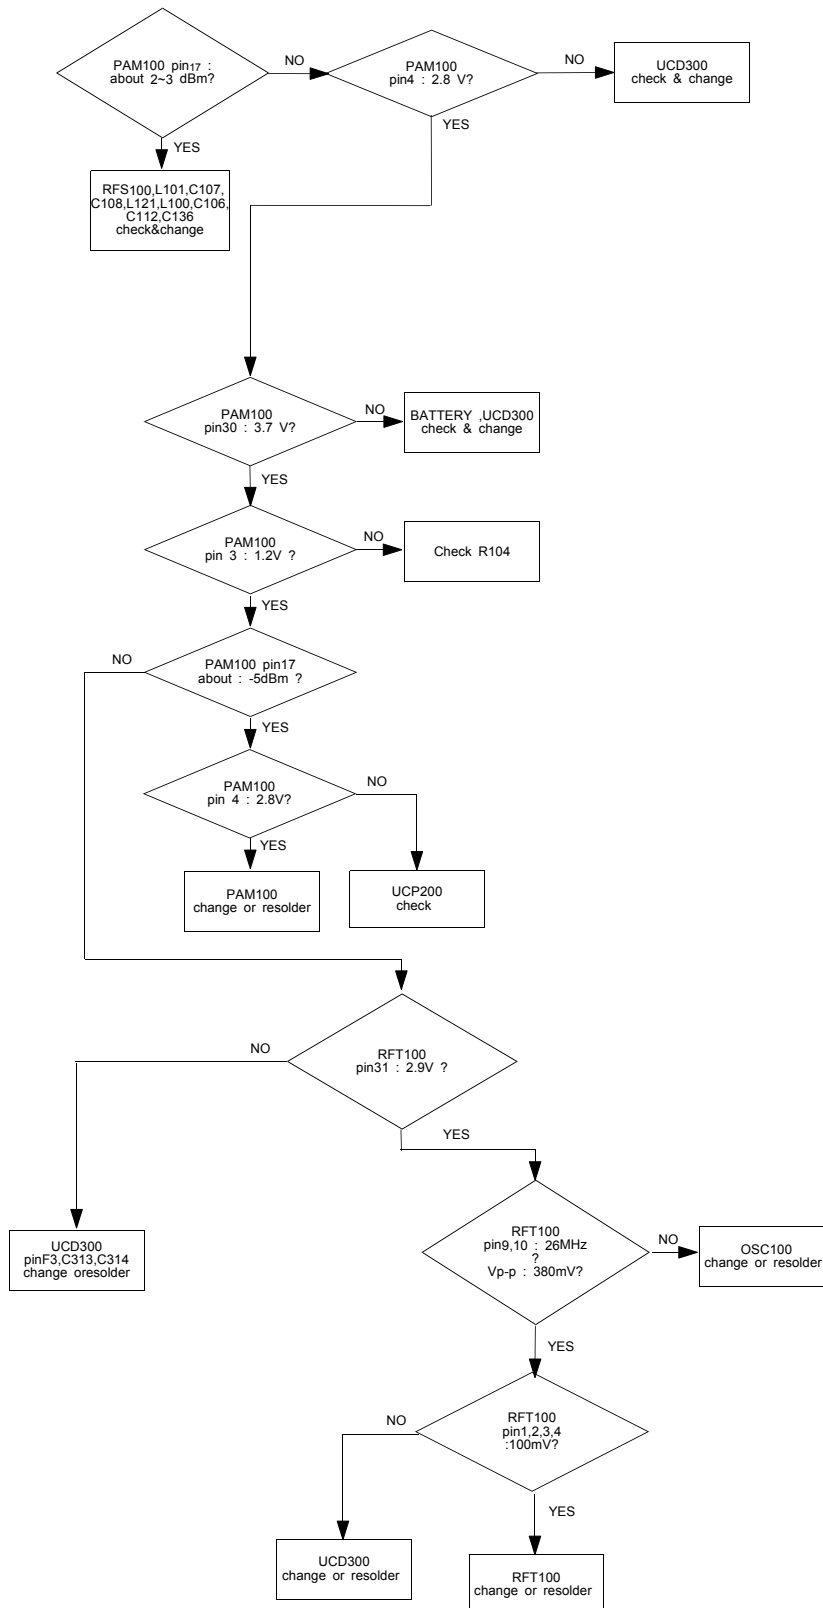




CONTINUOUS TX ON CONDITION
TX POWER DAC: 520 CODE APPLIED
CH : 661
RBW : 100KHz
VBW : 100KHz
SPAN : 10MHz
REF. LEV. : 10dBm
ATT. : 20dB

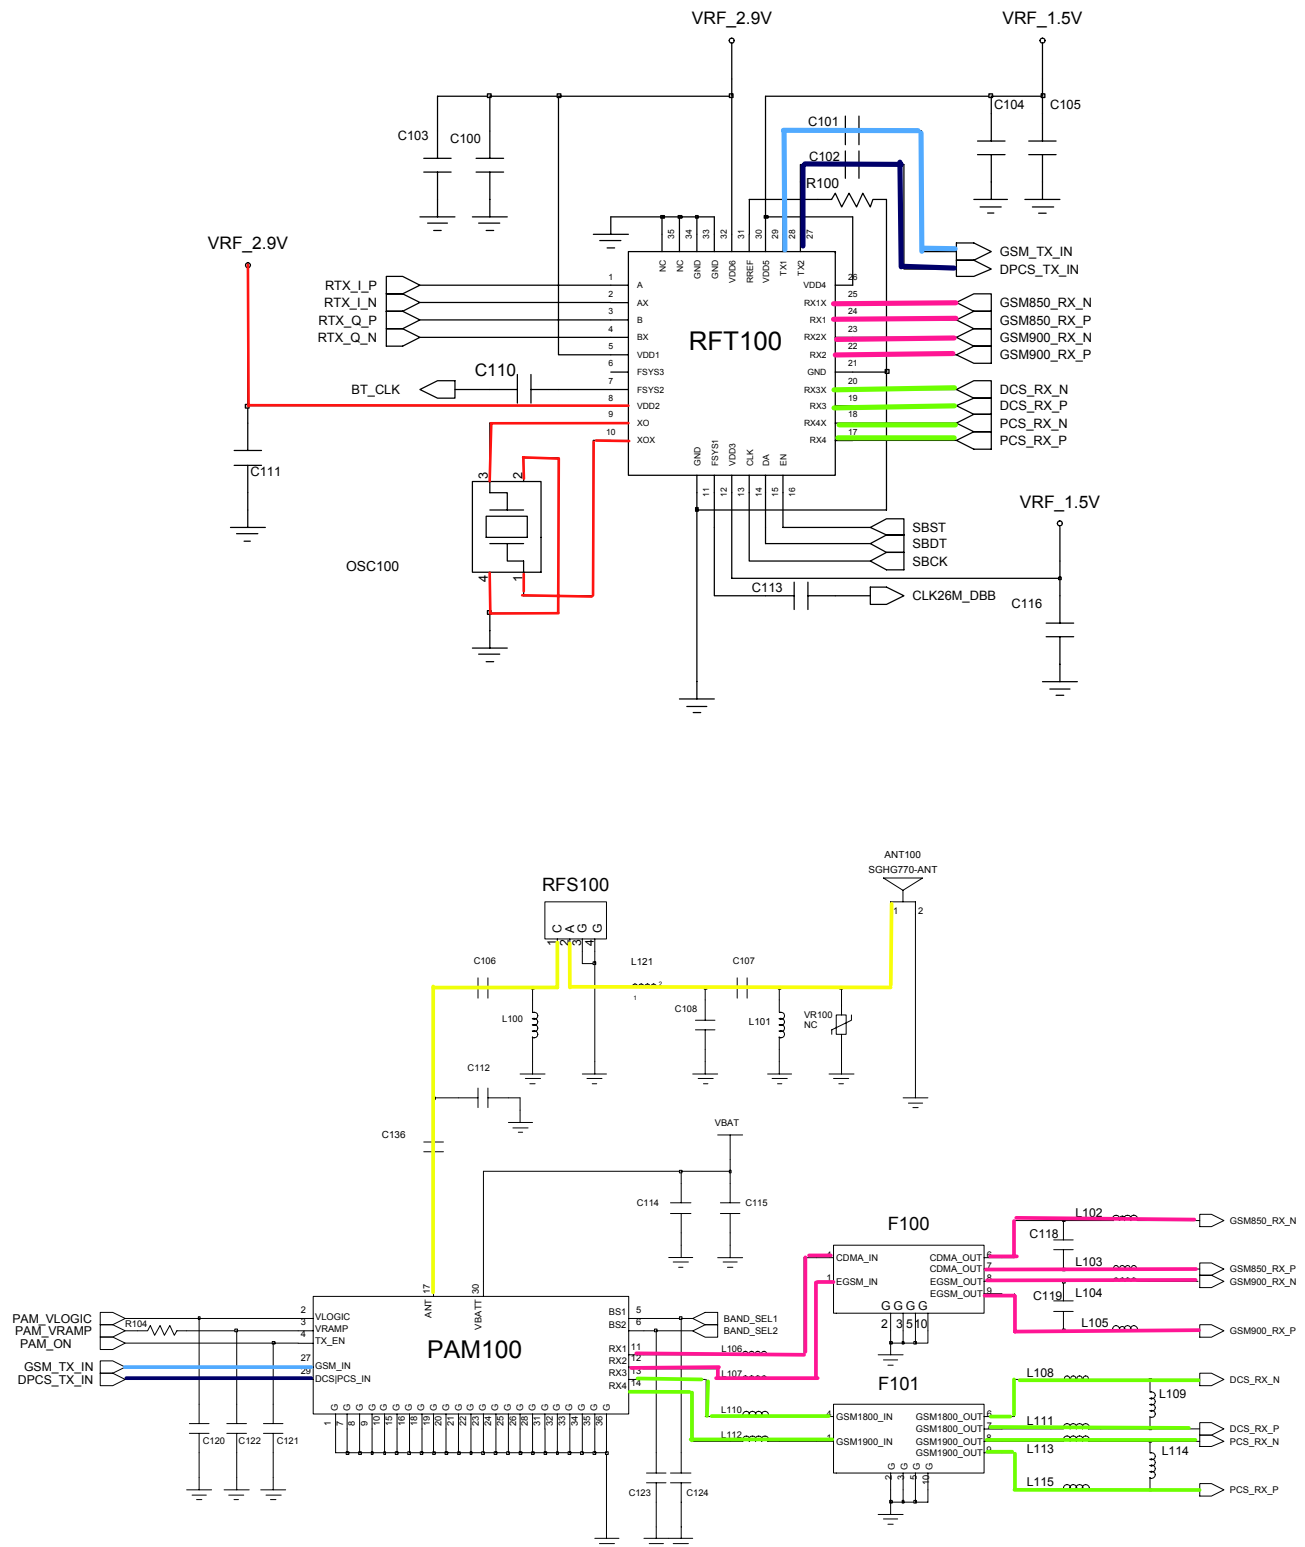


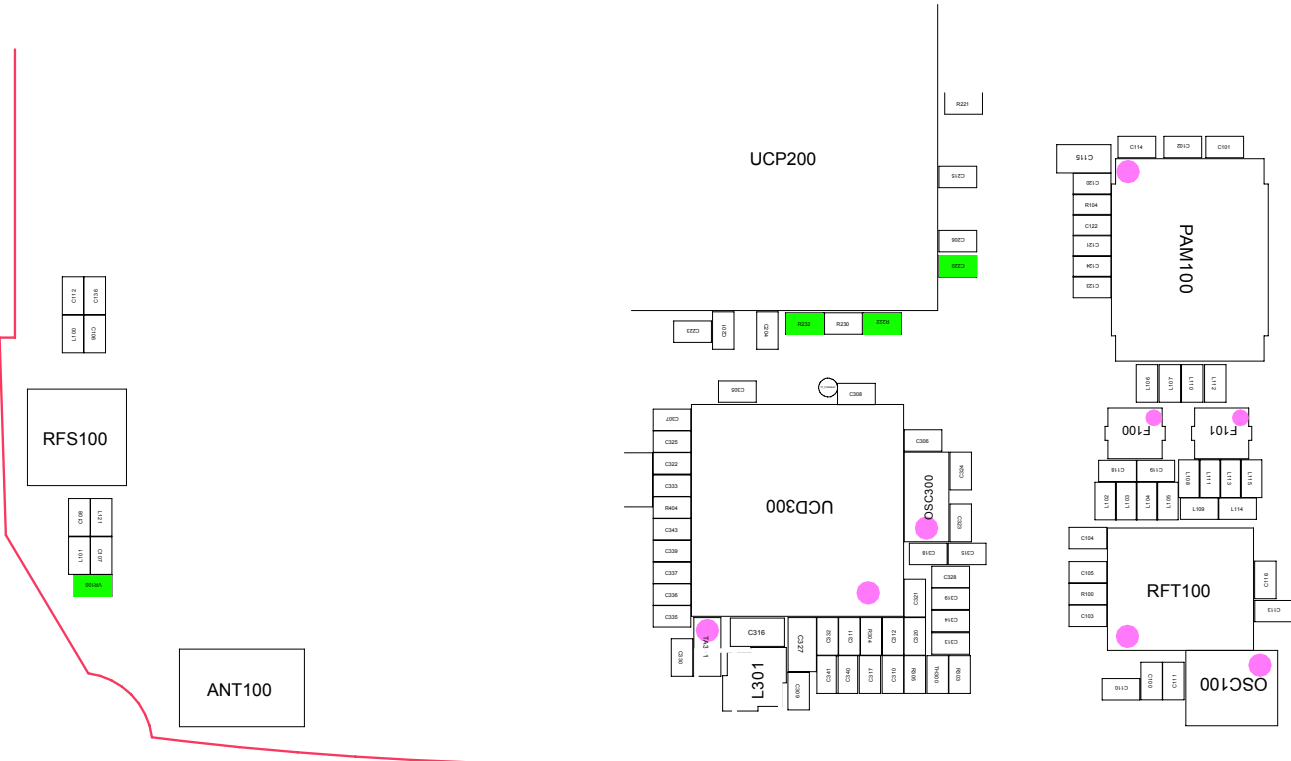


9-14. Bluetooth part

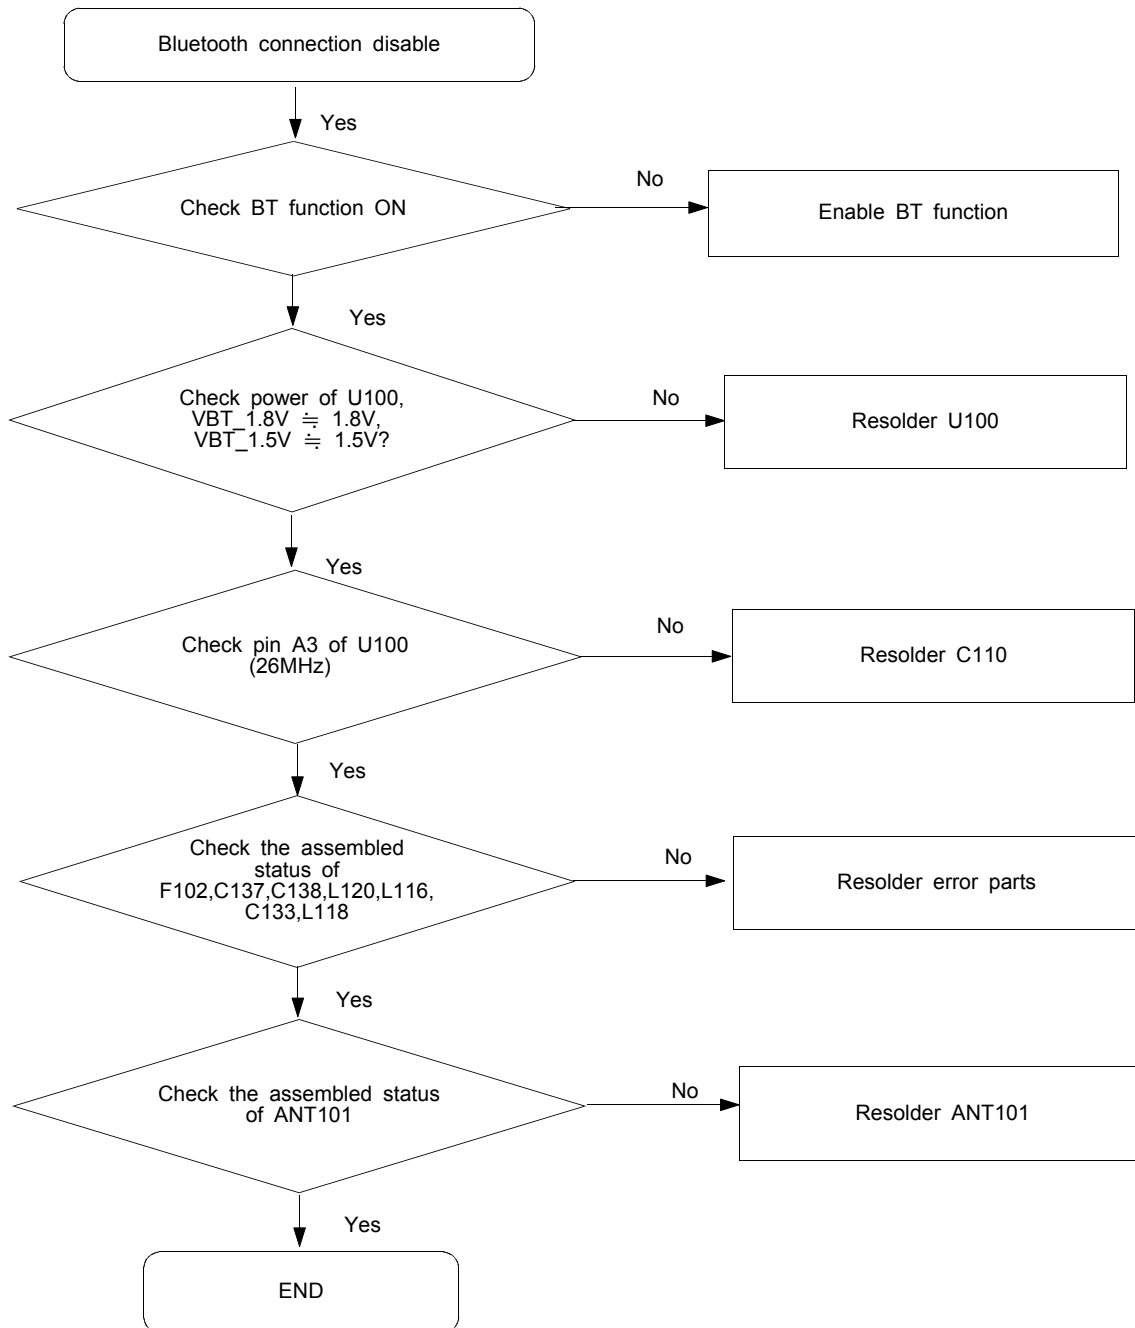


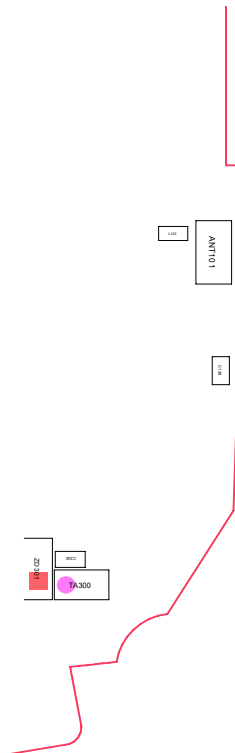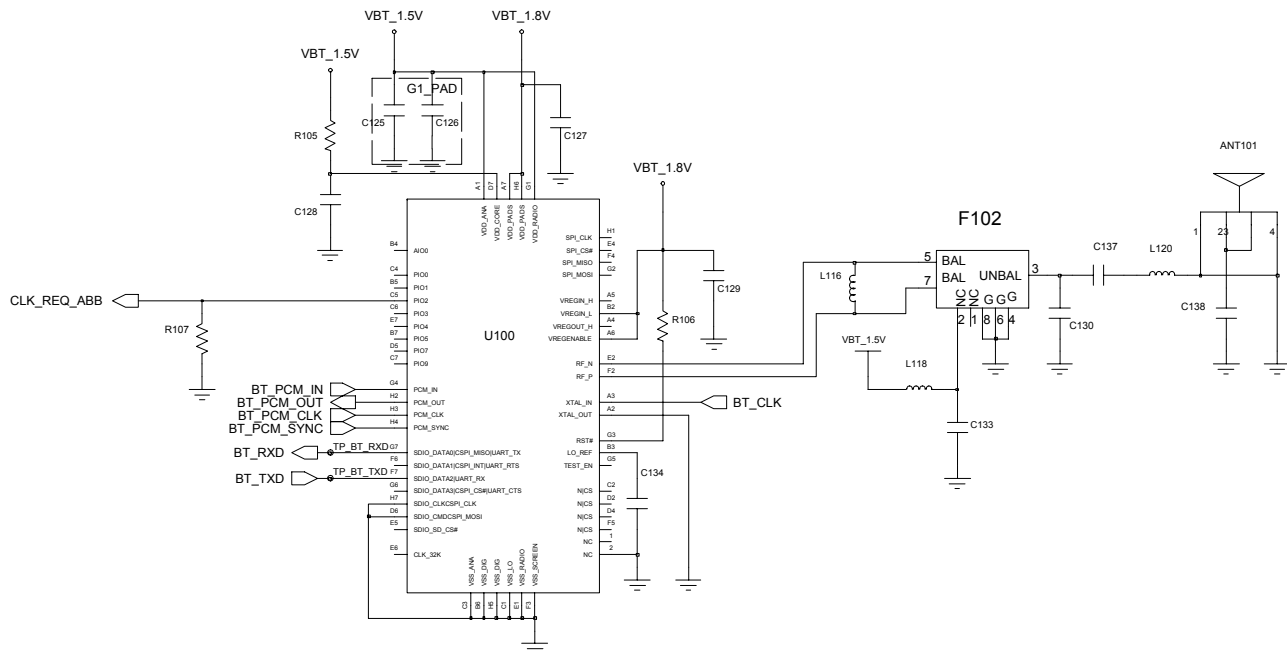

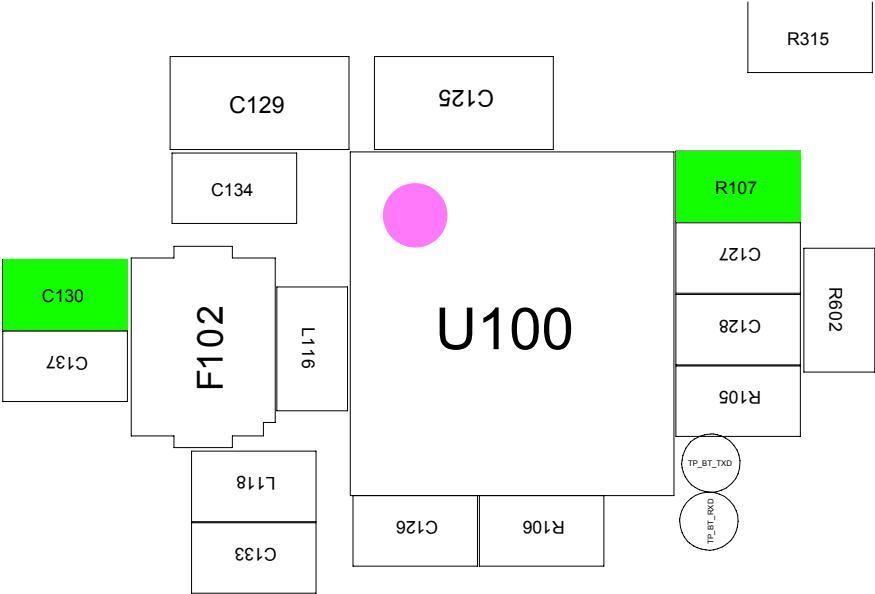



7. Block Diagrams

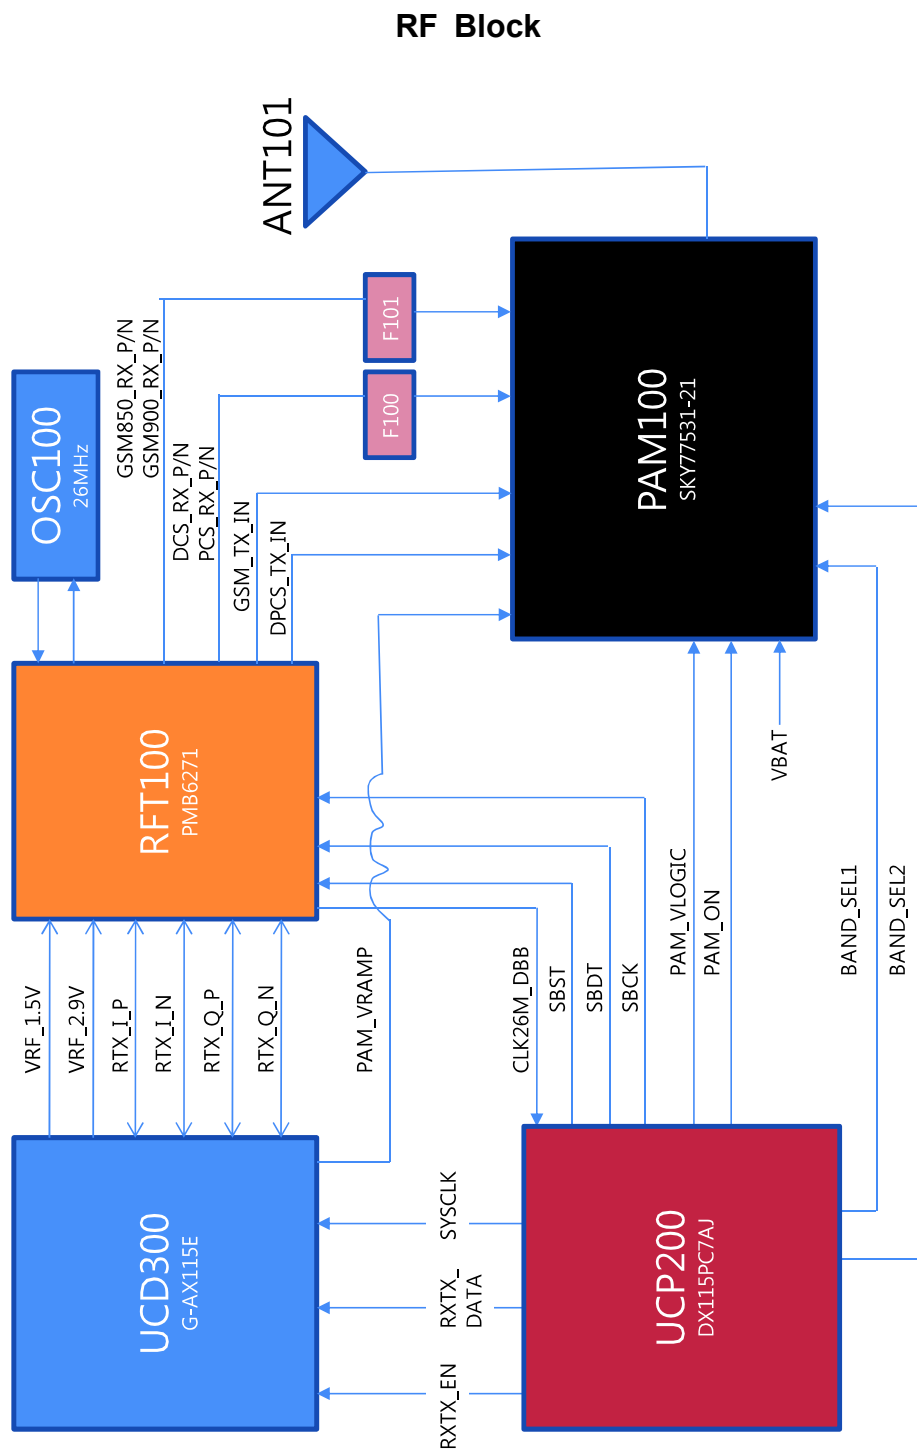


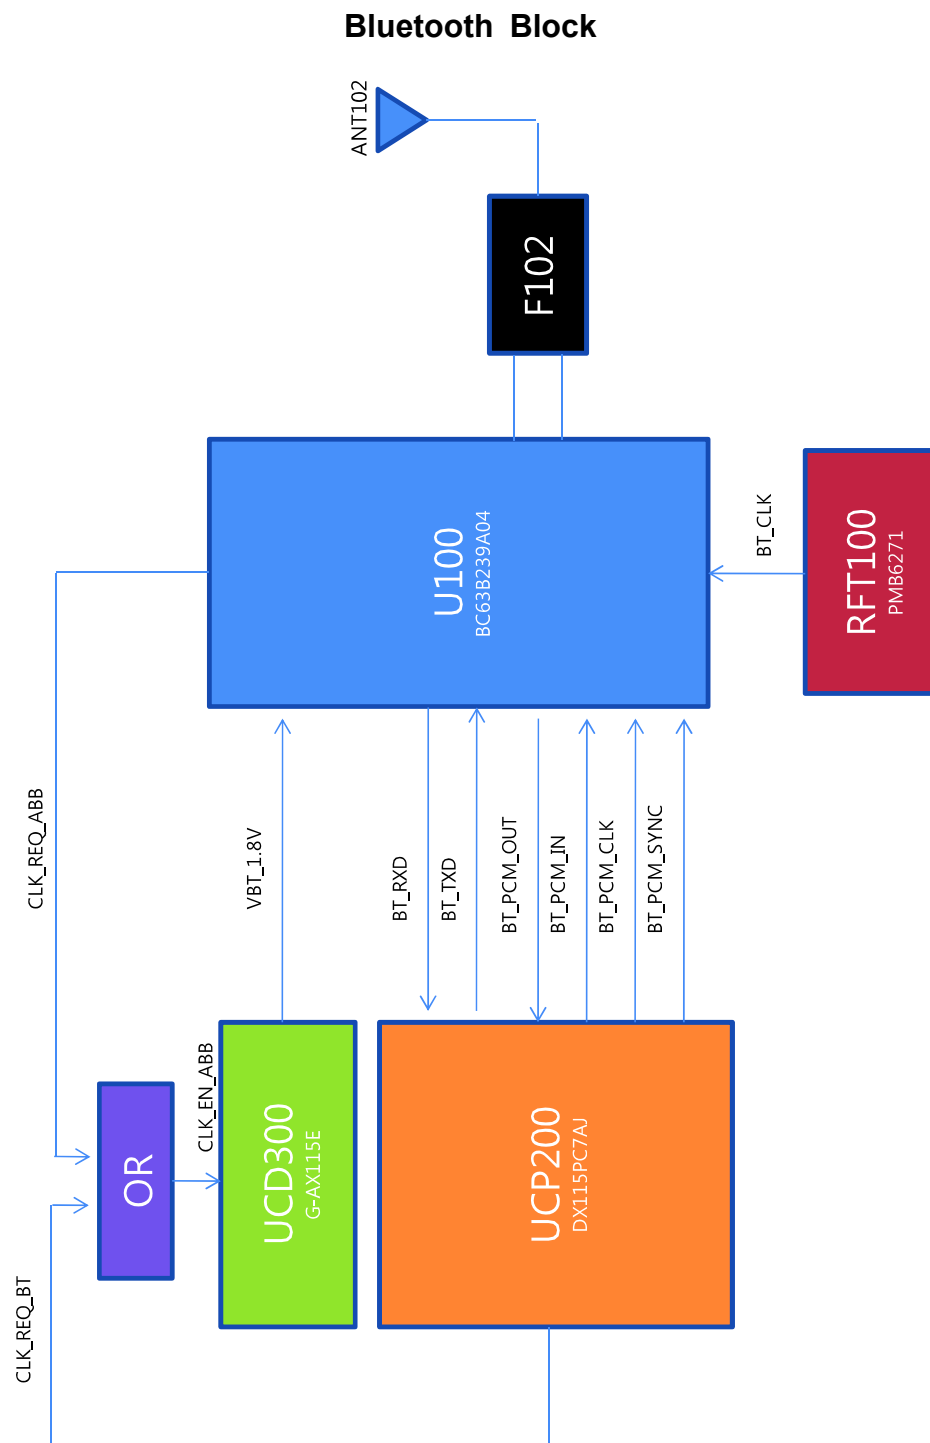

Audio Block (+ FM radio)

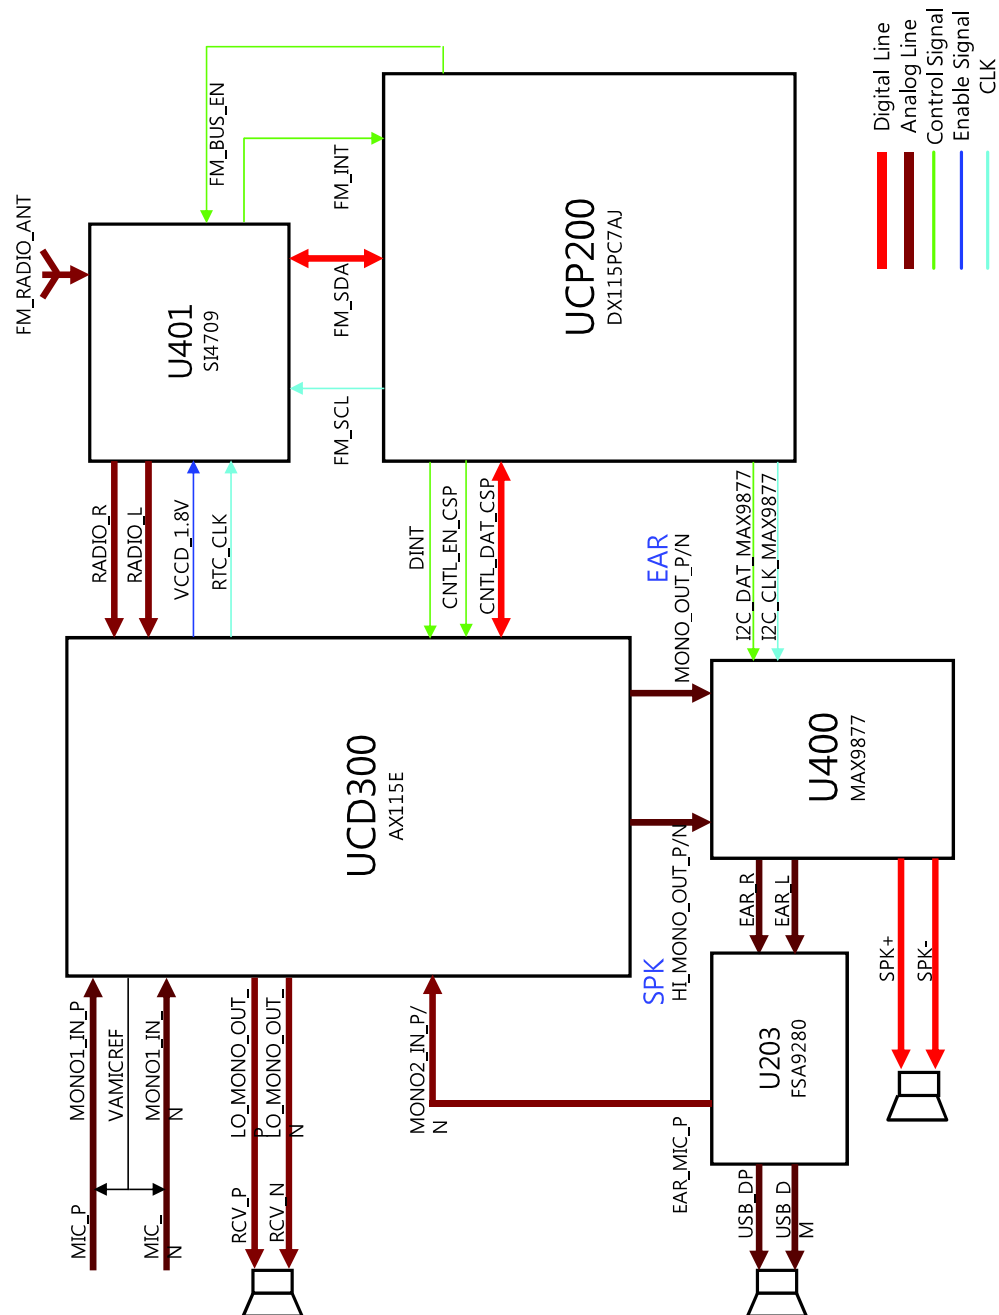

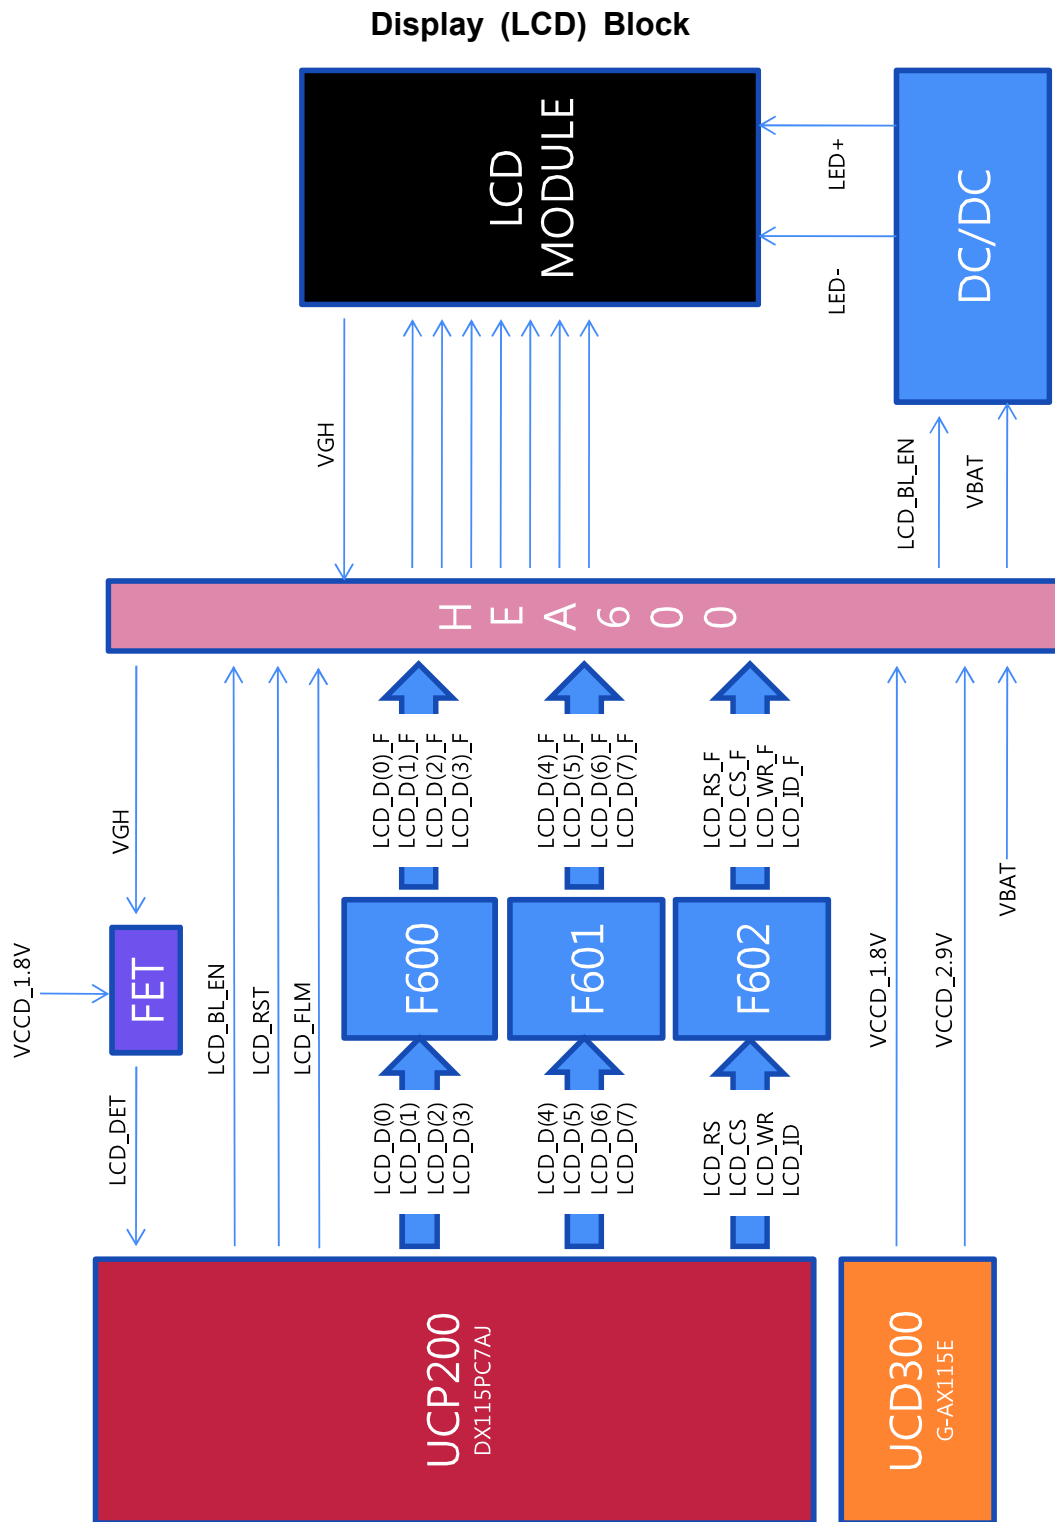

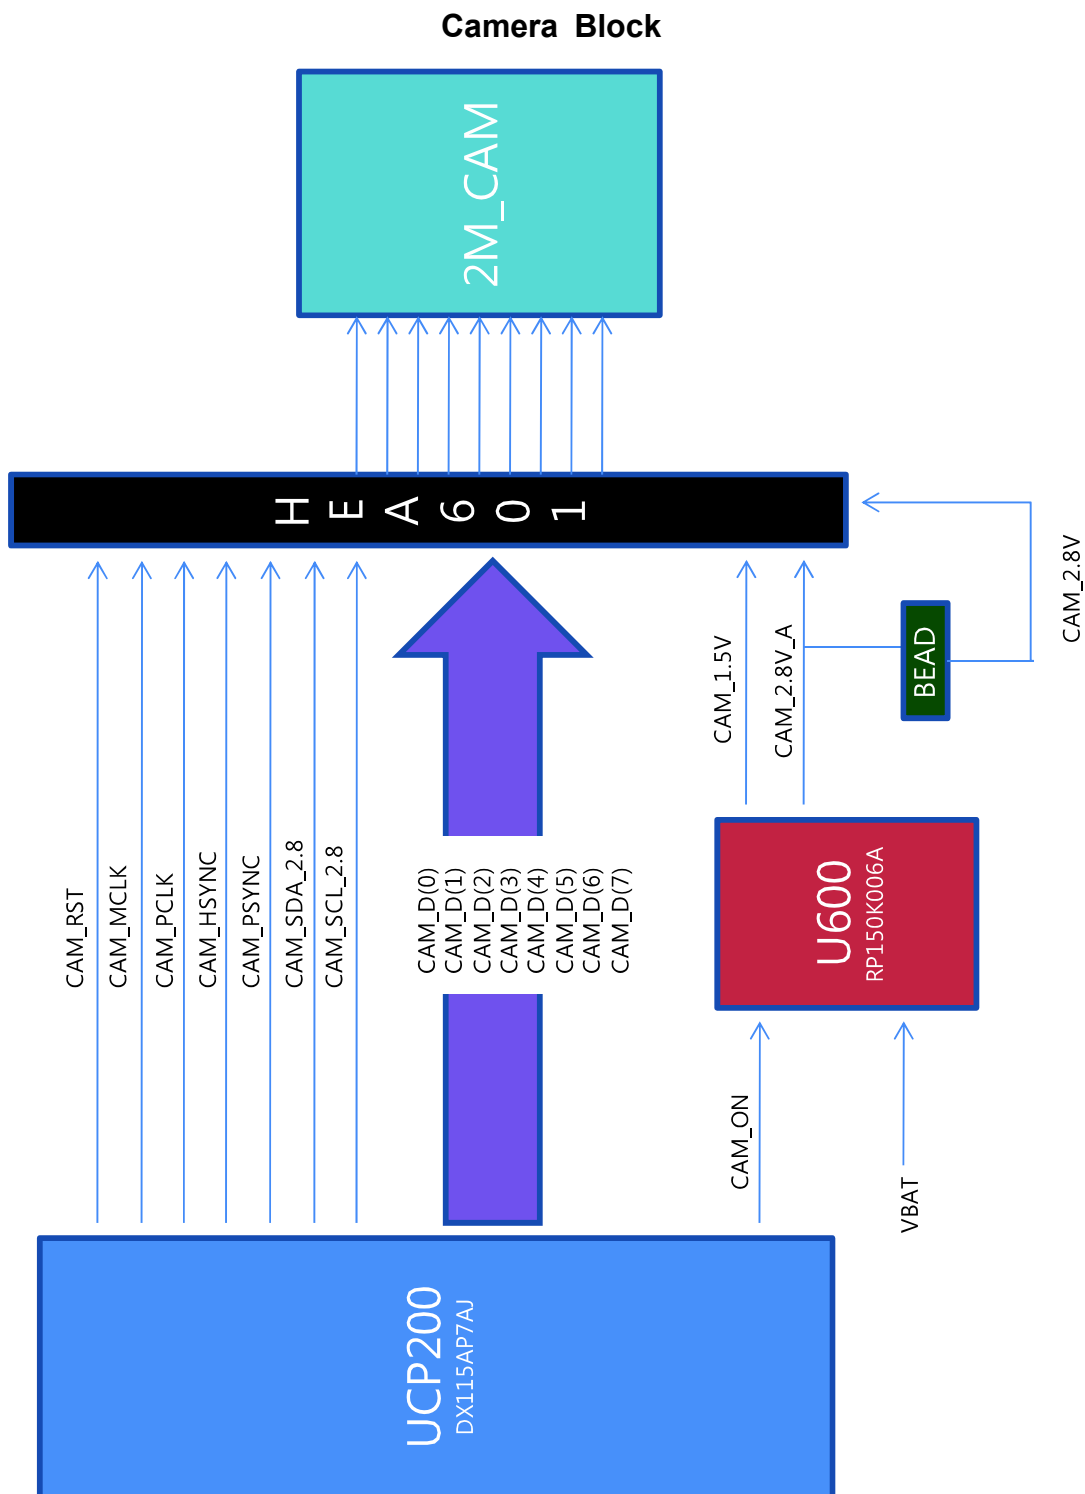

8. PCB Diagrams

