


8. 3 级维修


8-1. 组件布局

<顶部>

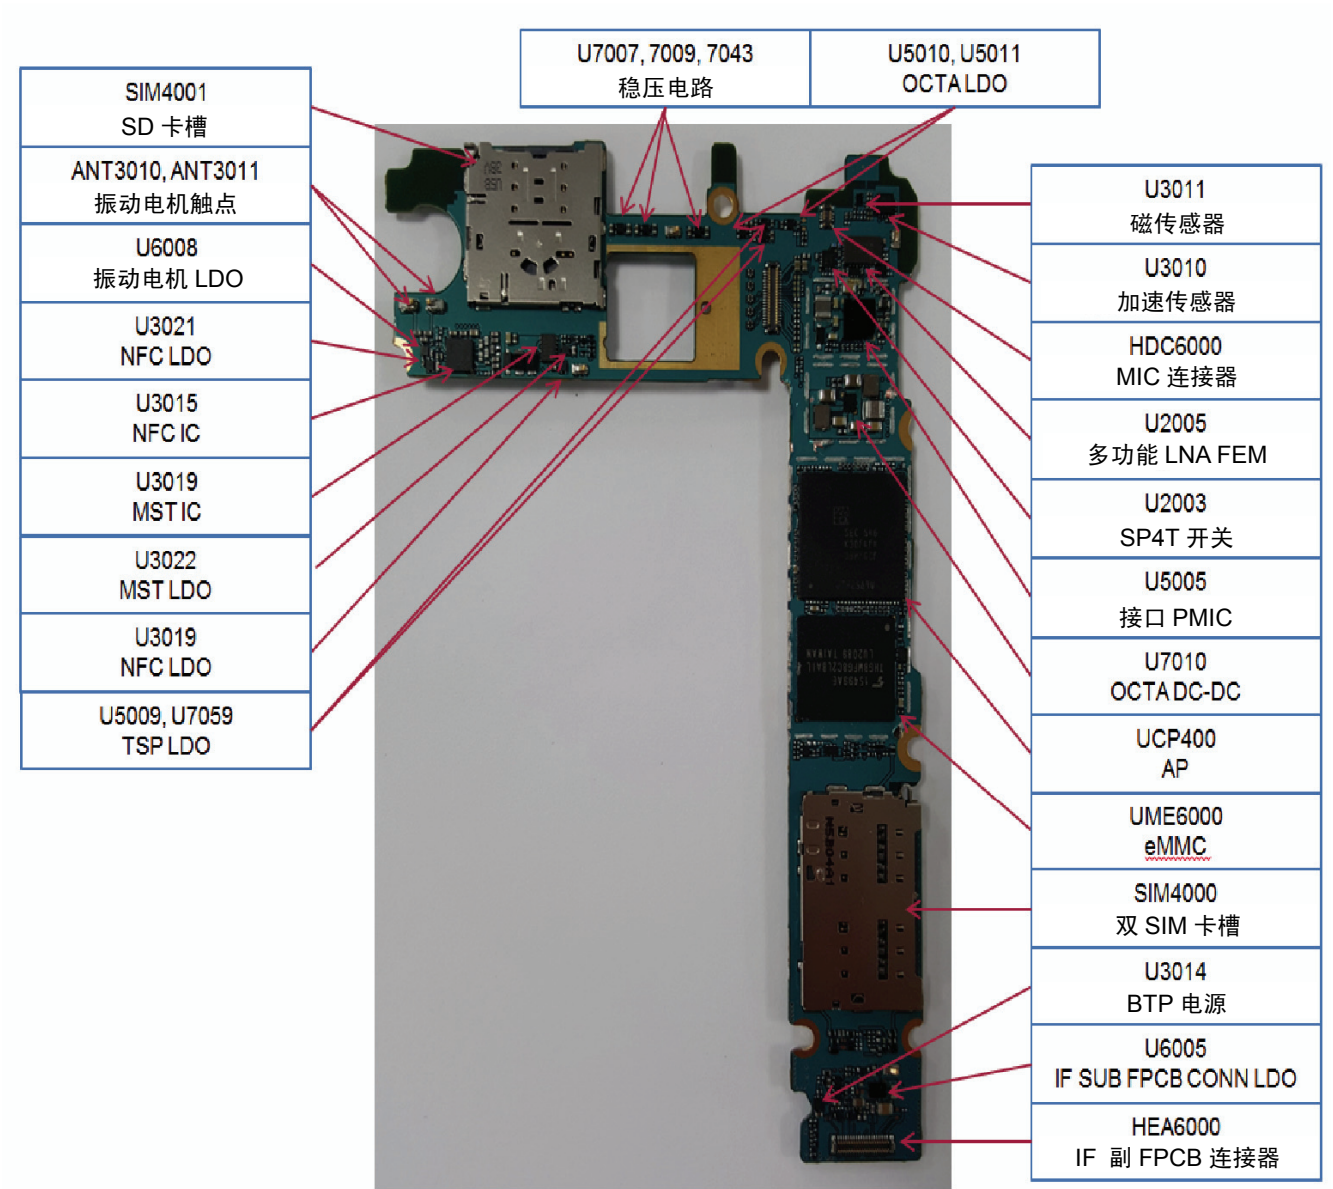


8.3 级维修

<底部>

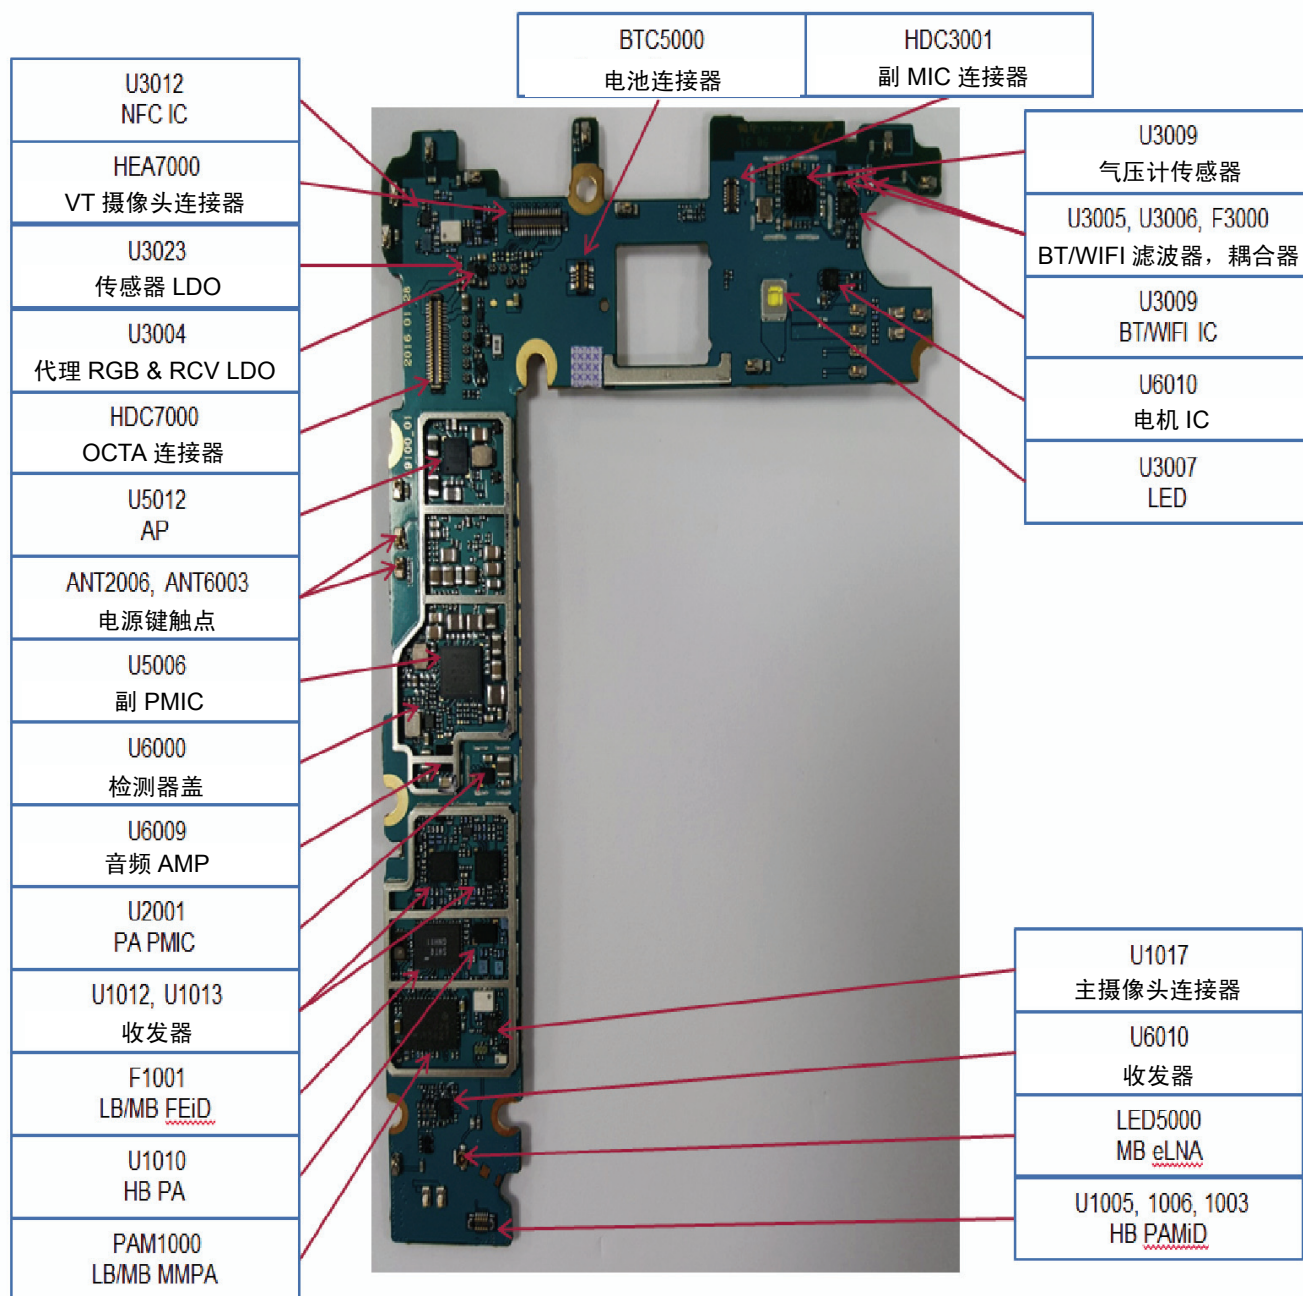


8.3 级维修

顶部


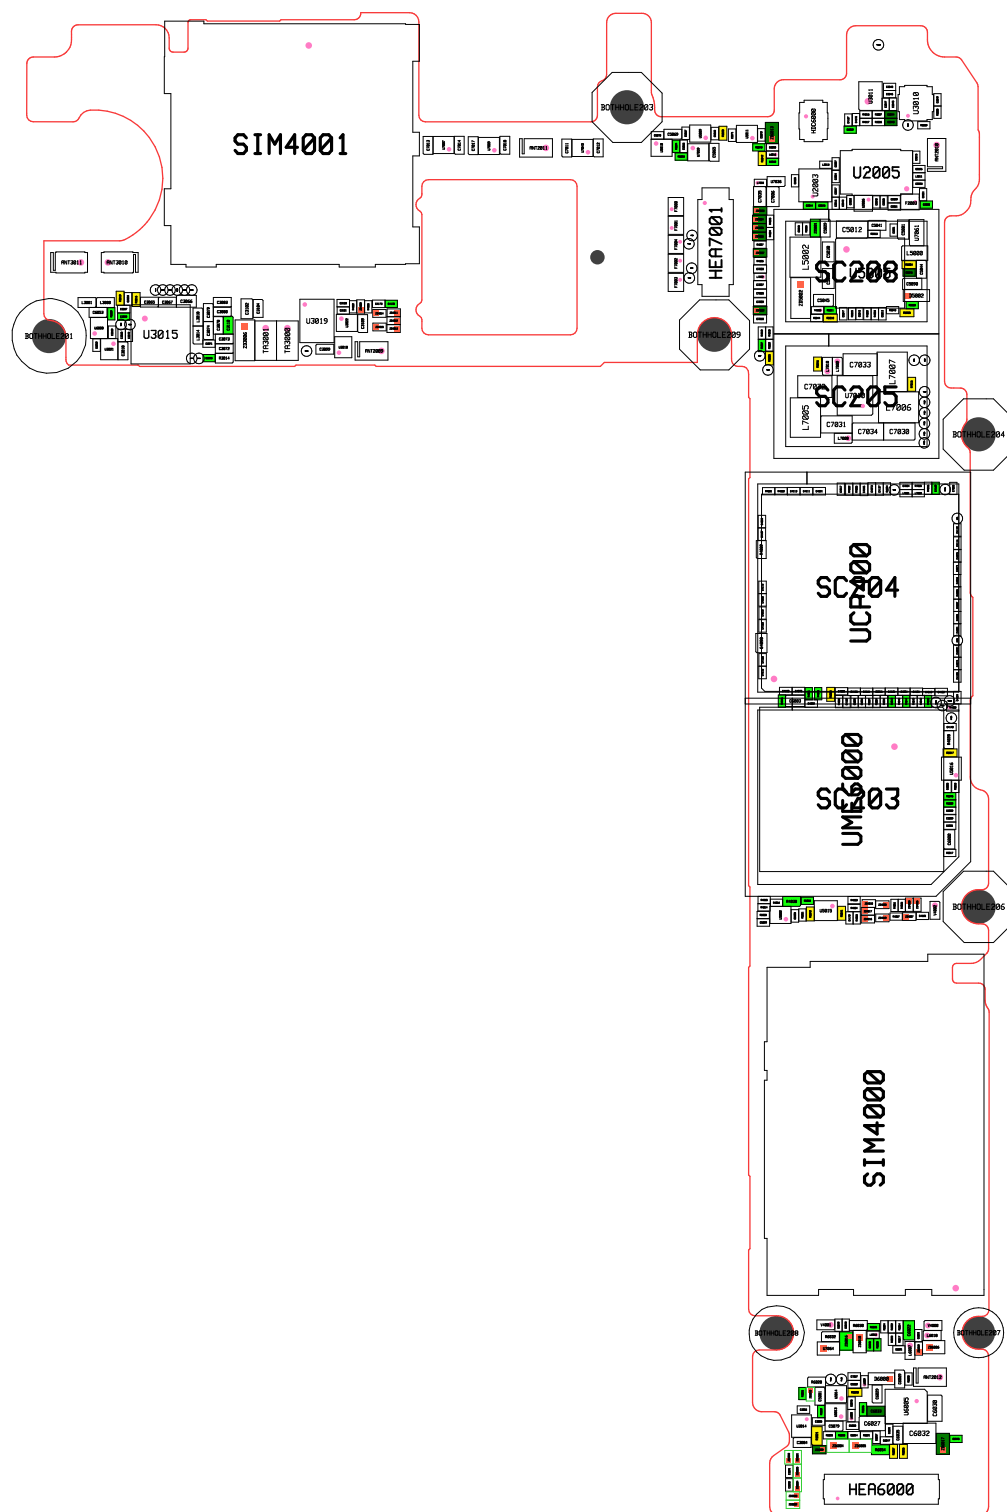


底部

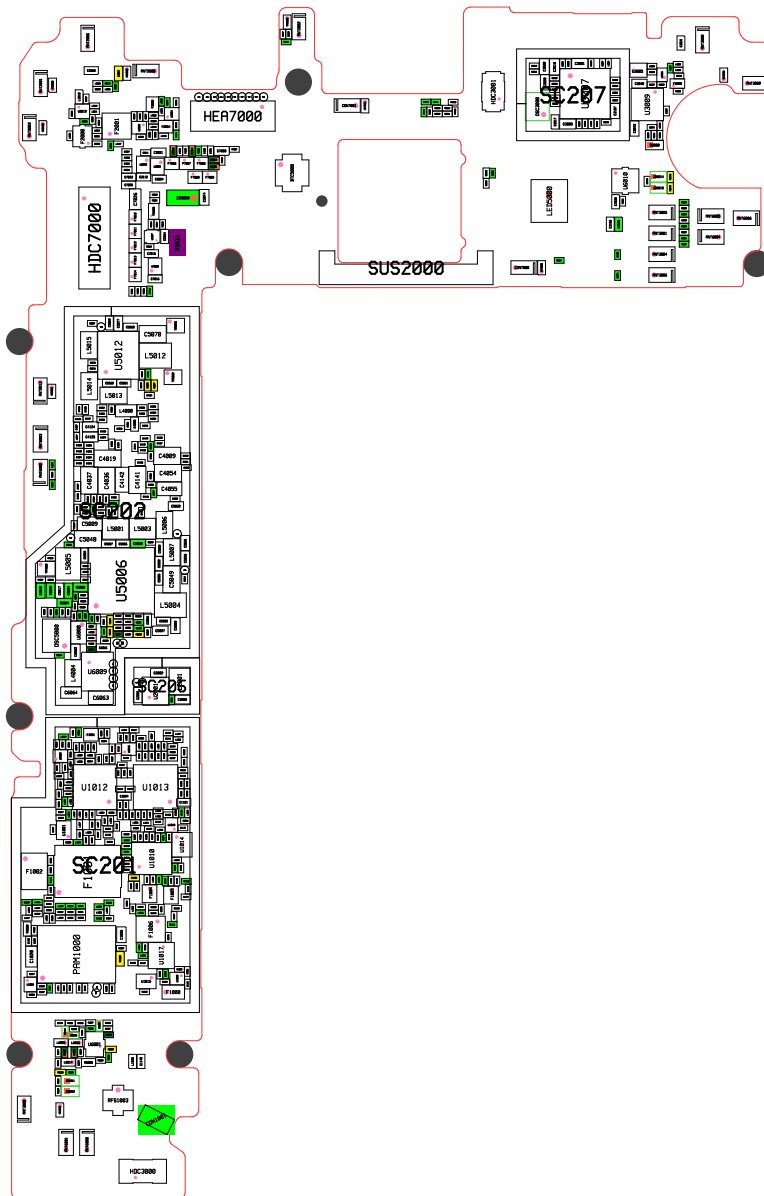


8.3 级维修

8-3. 故障排除流程图

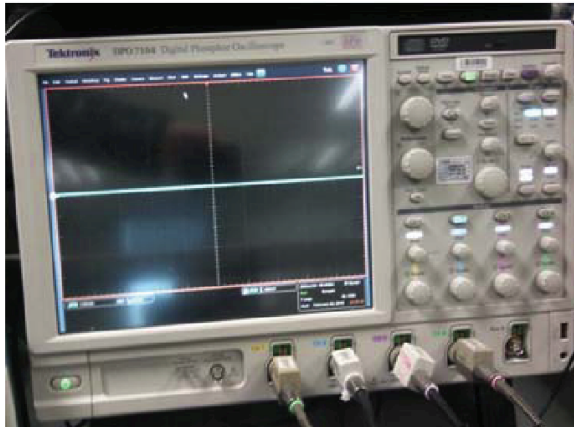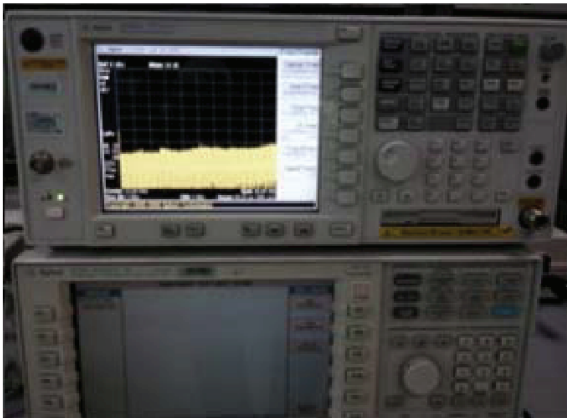	
示波器	数字万用表
	
电源供应器	+字螺丝刀, ESD 安全镊子
	
8960 和频谱仪	焊接烙铁


8.3 级维修

8-4-1. 开机

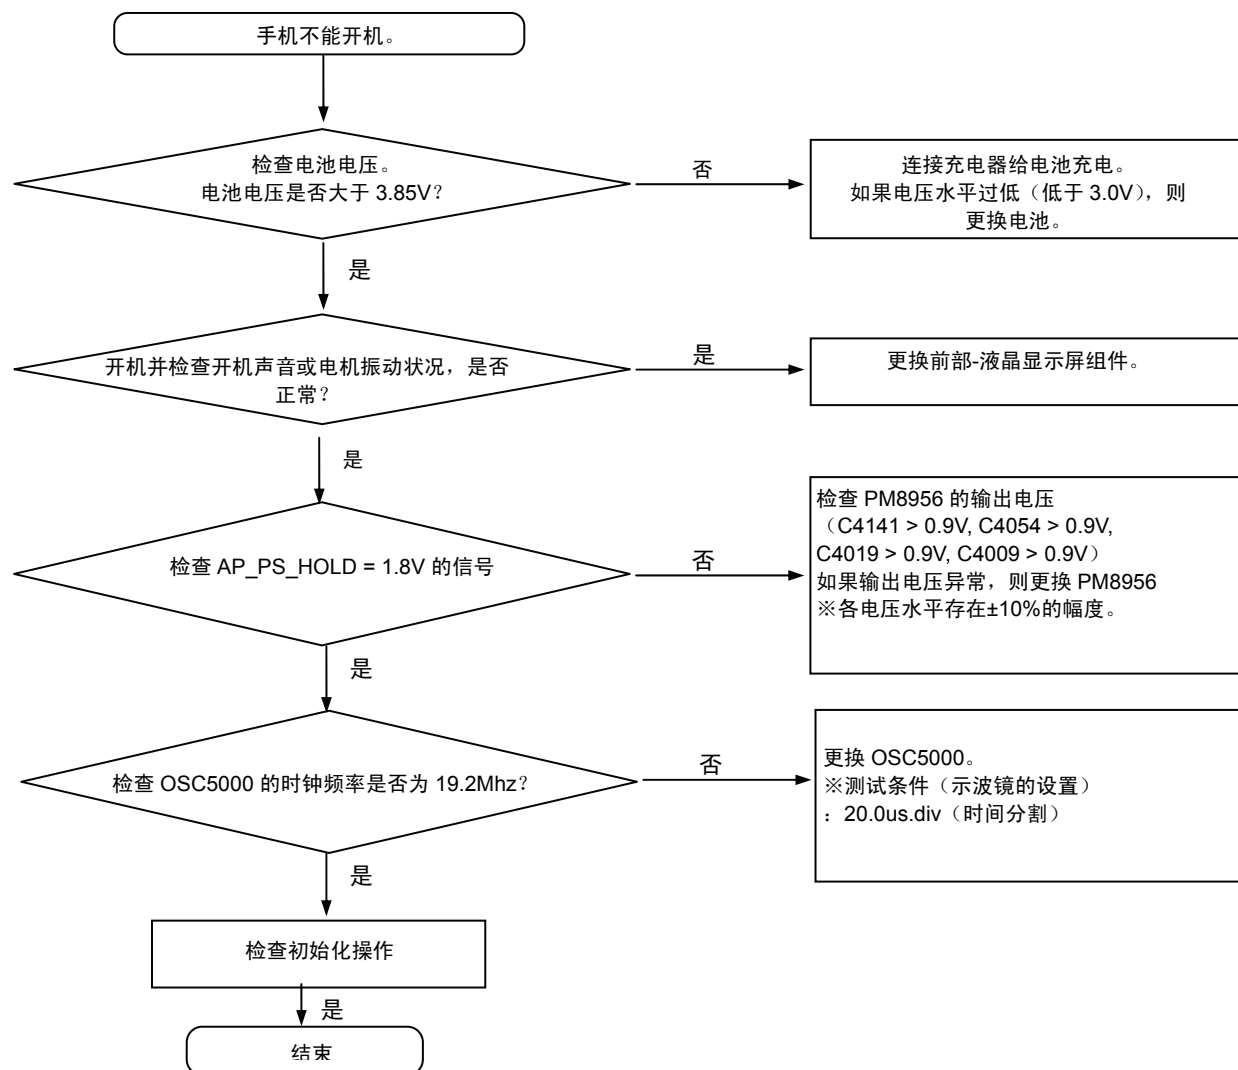


8.3 级维修

8-4-2 初始化

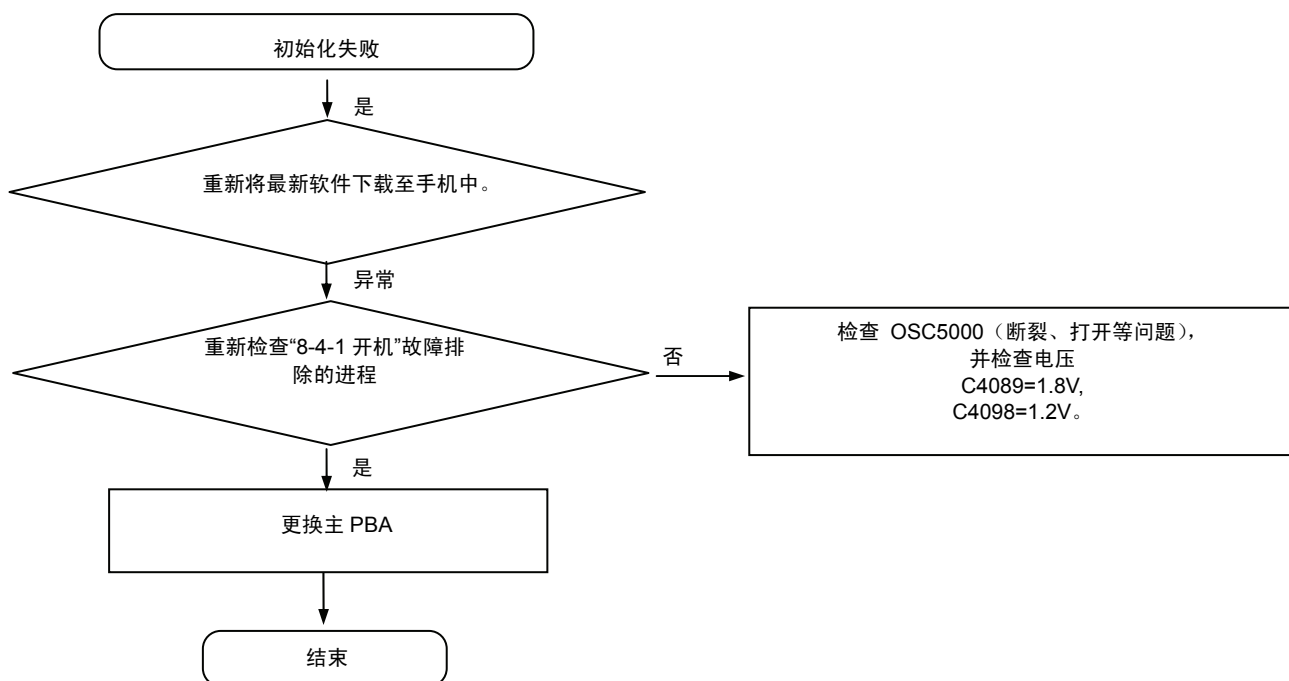


8.3 级维修

8-4-3. 无服务

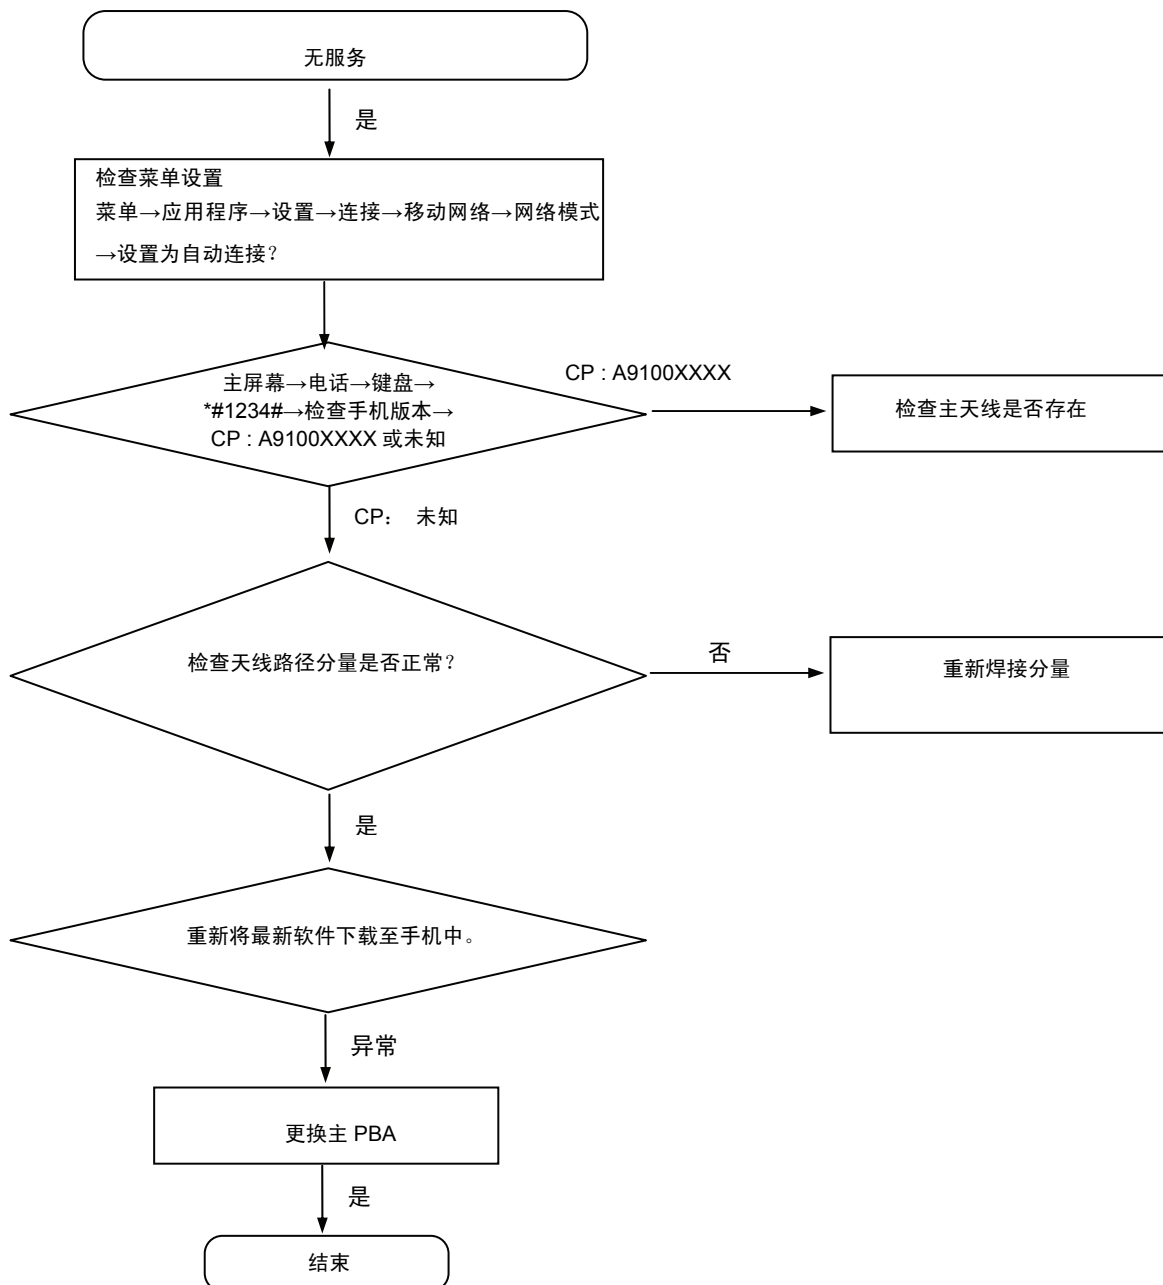

8.3 级维修


8-4-4. SIM 部分

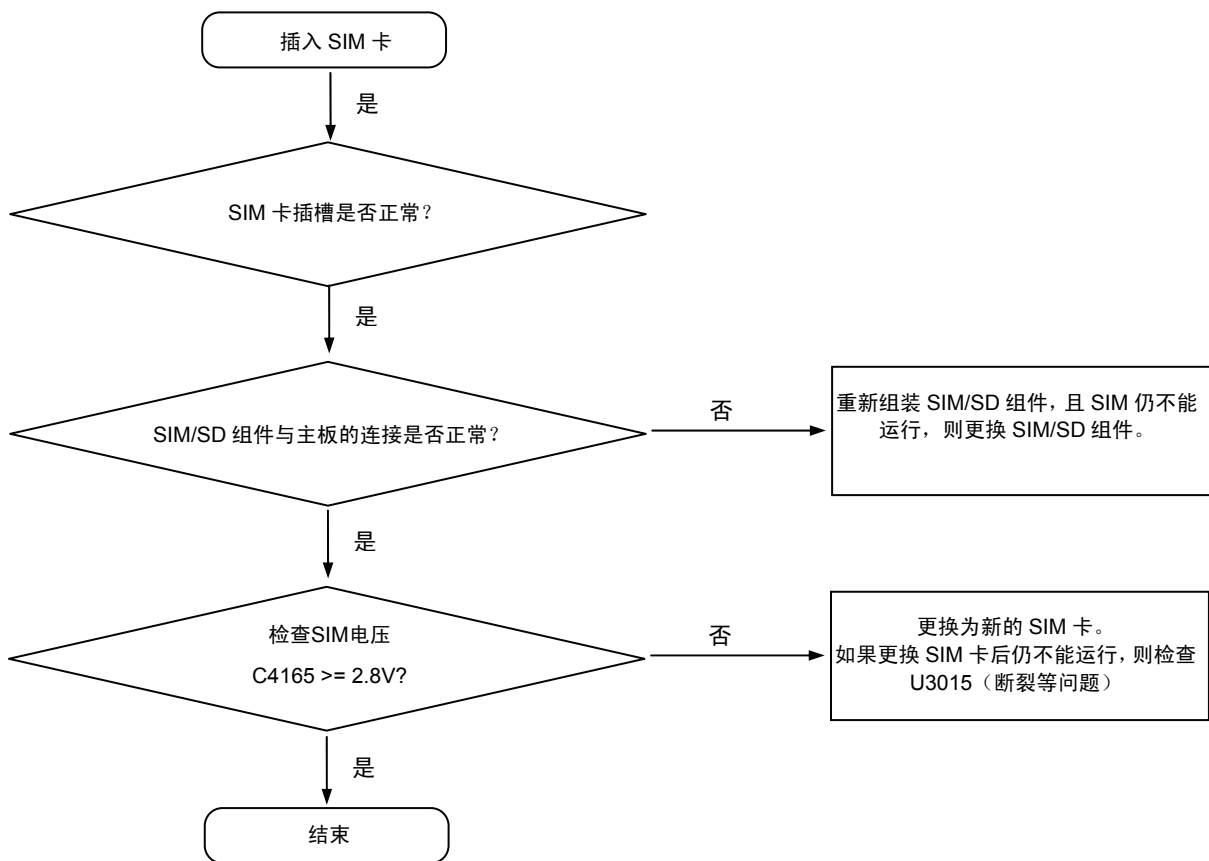

8.3 级维修


8-4-5. 充电部分

- 首先，请检查电池状态。

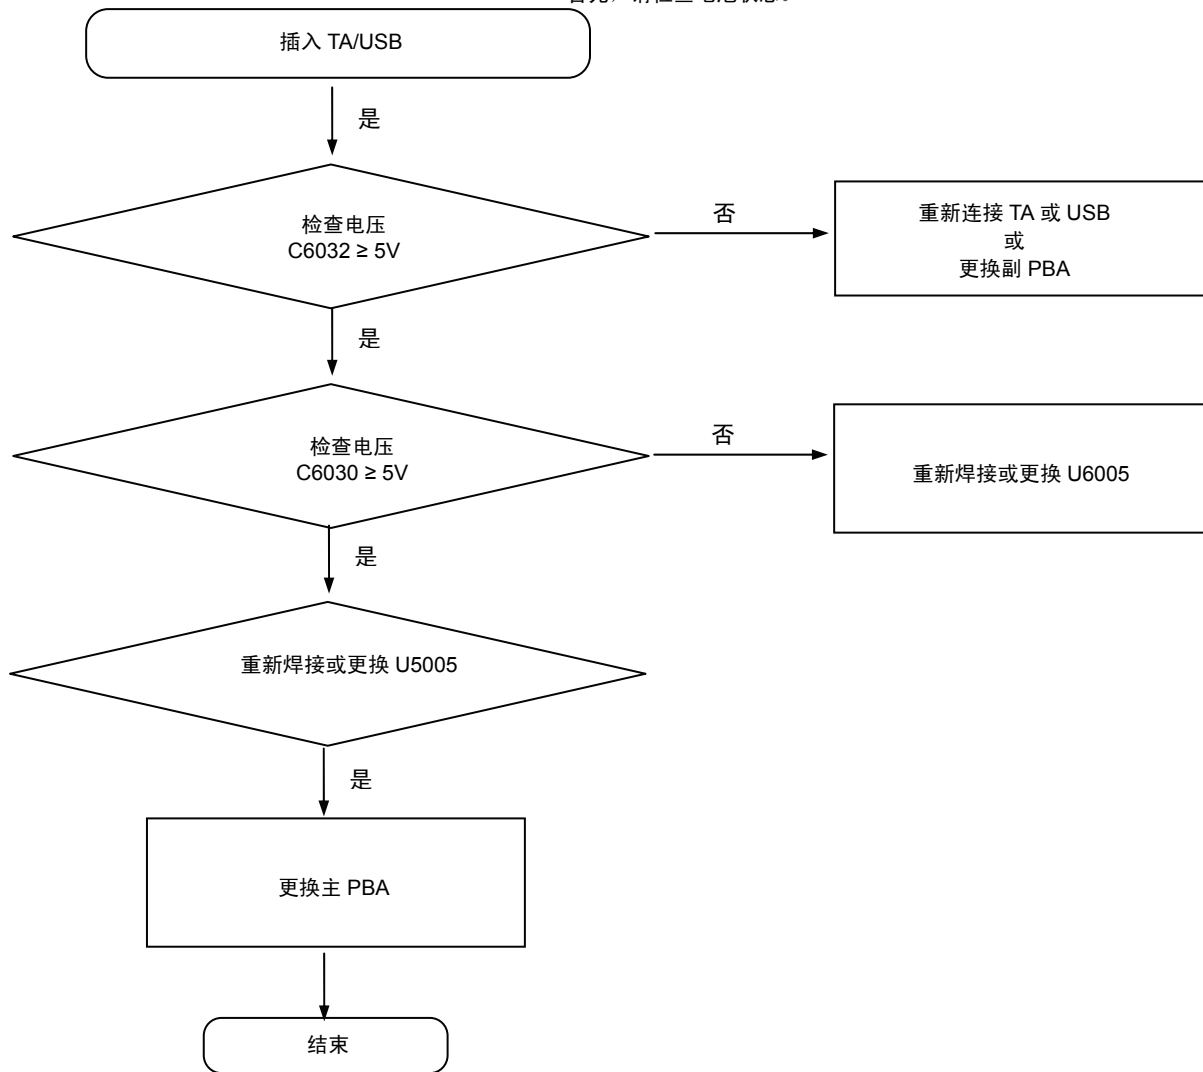


8.3 级维修

8-4-6. 麦克风部分

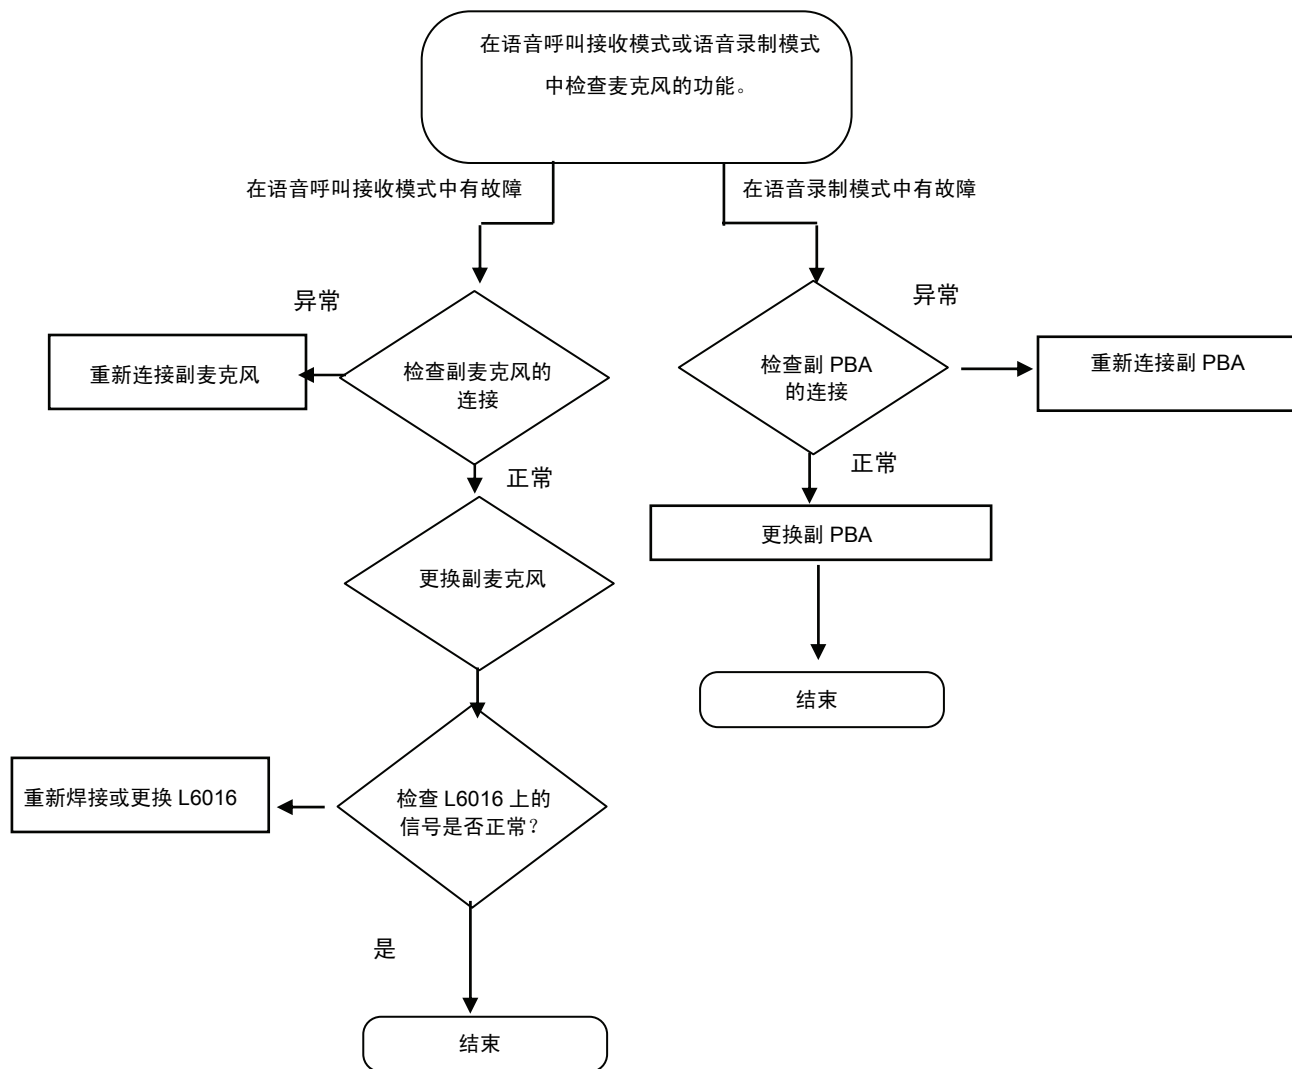


8.3 级维修

8-4-7. 扬声器部分

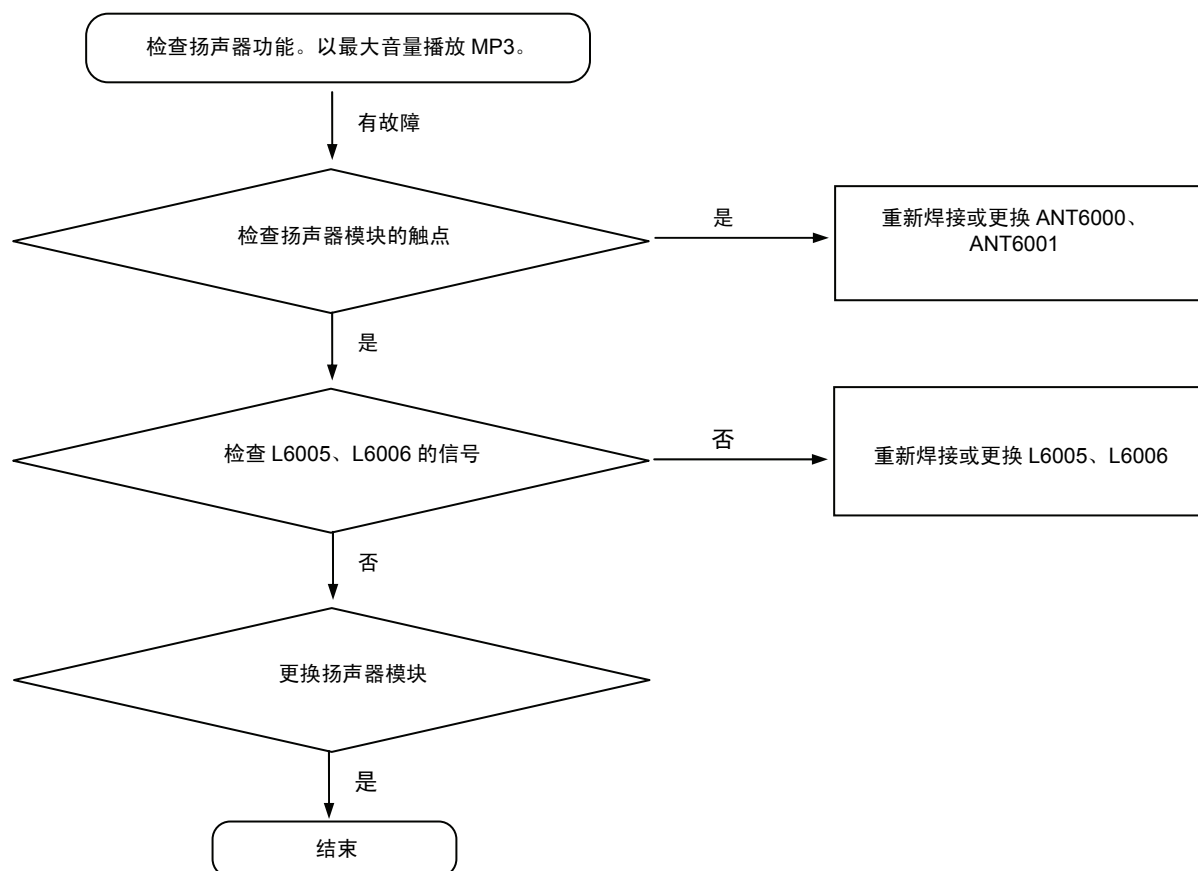


8.3 级维修

8-4-8. 听筒部分

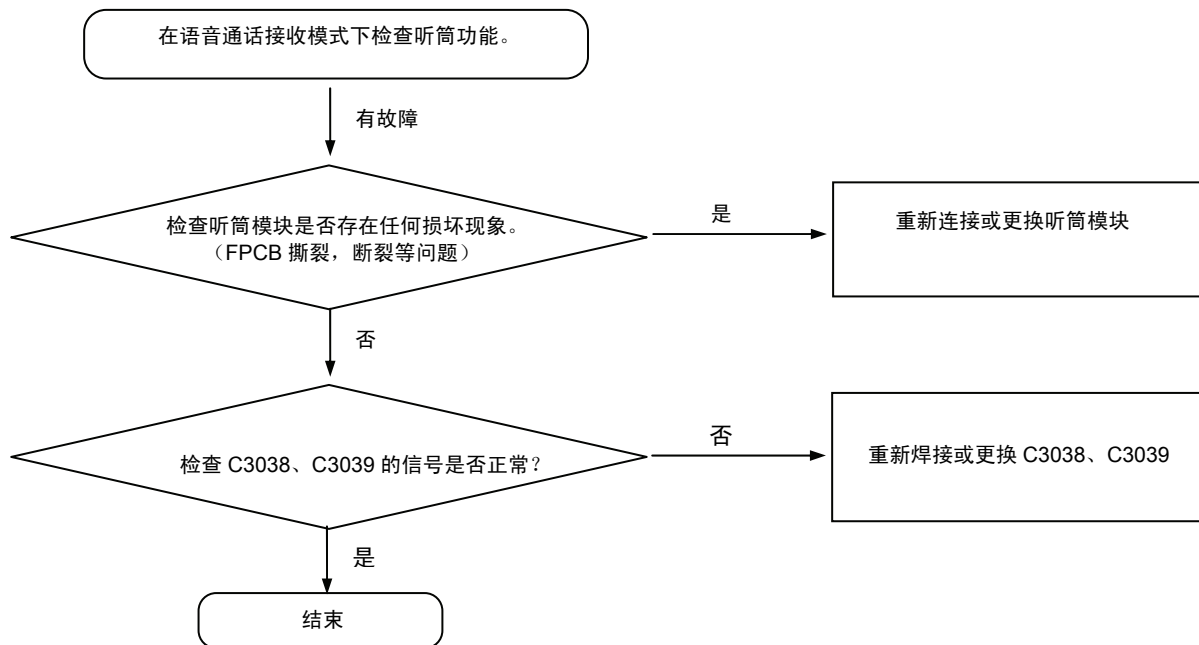


8.3 级维修

8-4-9. OCTA

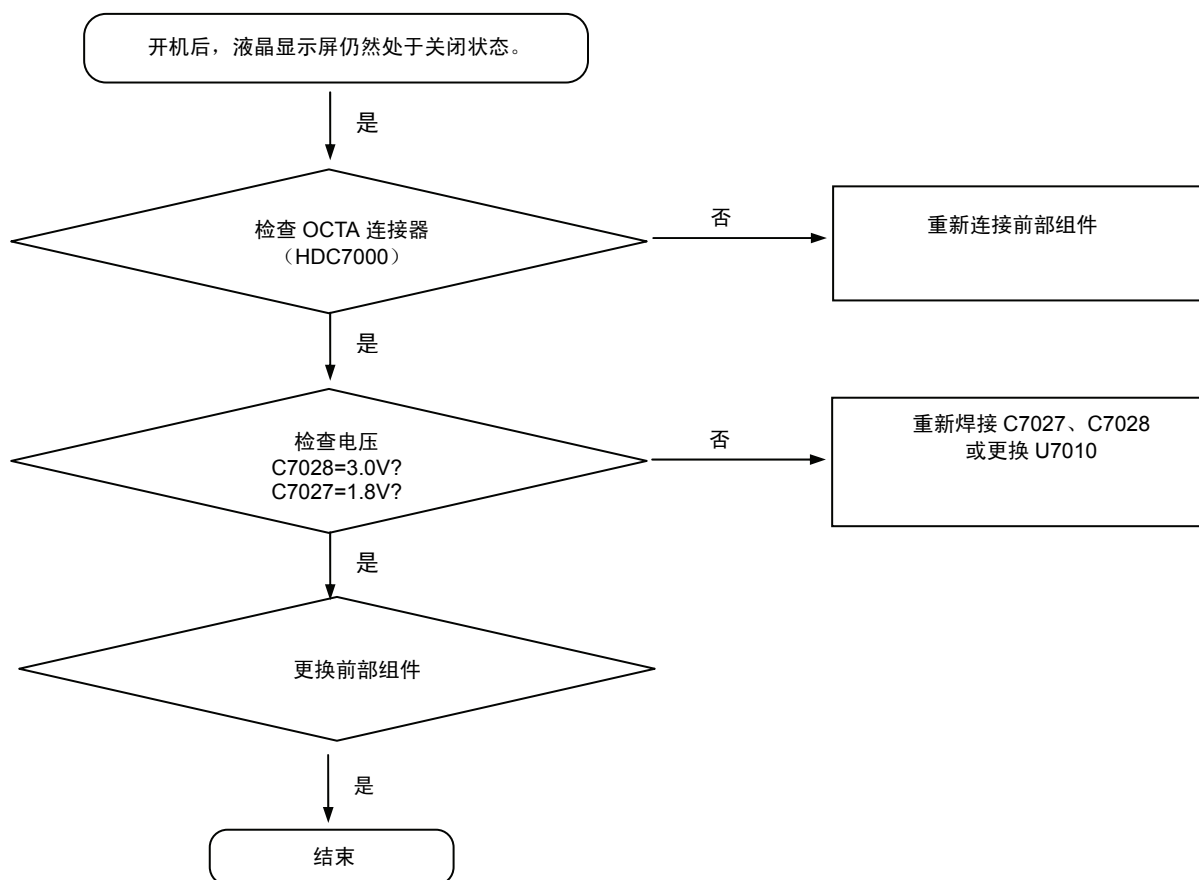


8.3 级维修

8-4-10. 16M 摄像头

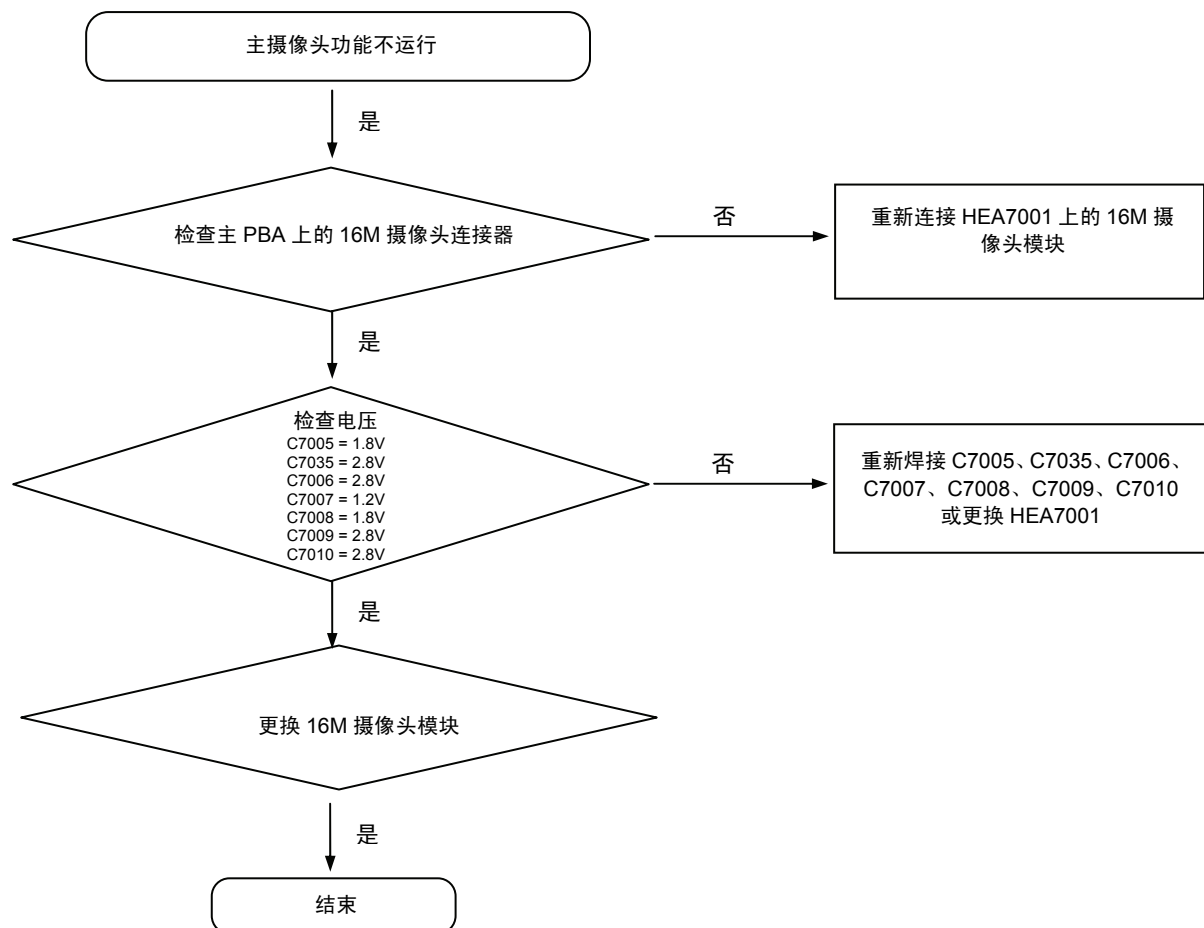


8.3 级维修

8-4-11. 8M 摄像头

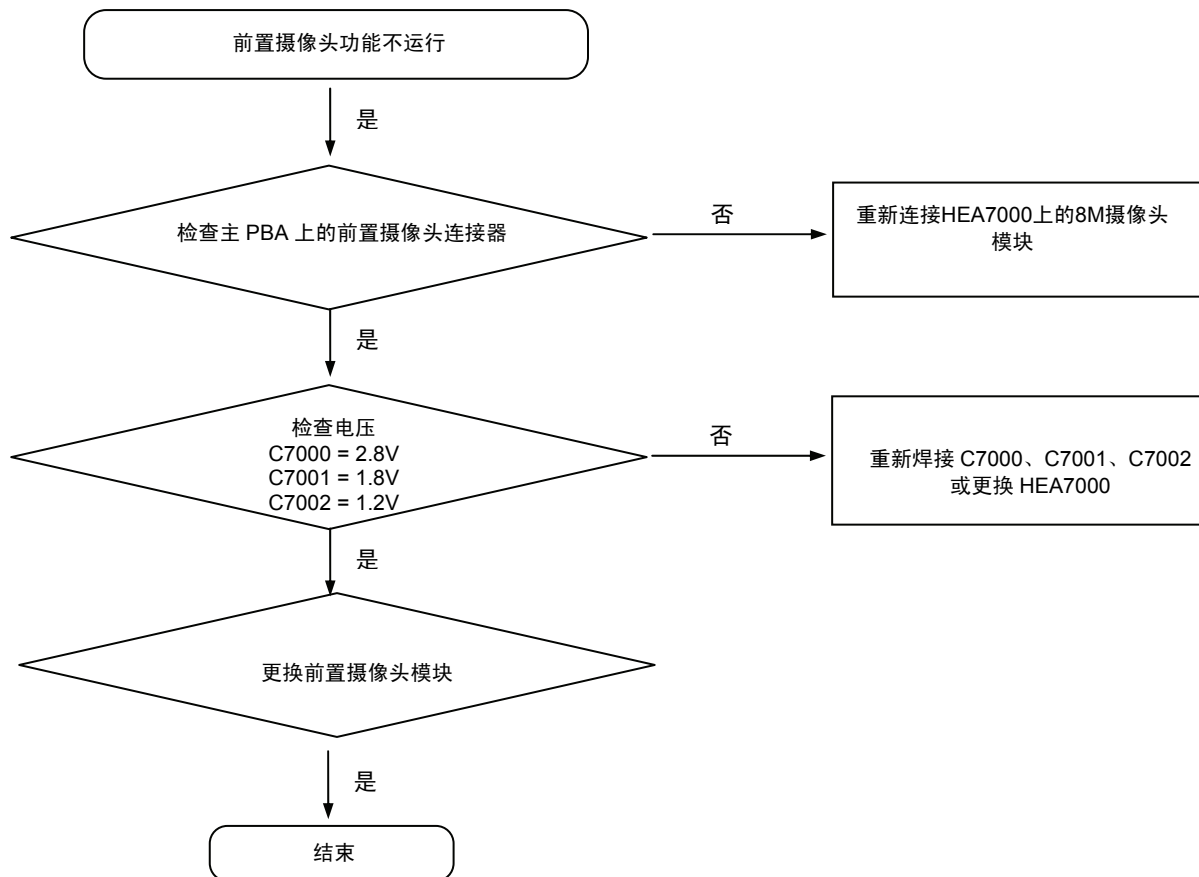


8.3 级维修

8-4-12. GSM 850 / WCDMA 5 / BC0 RX

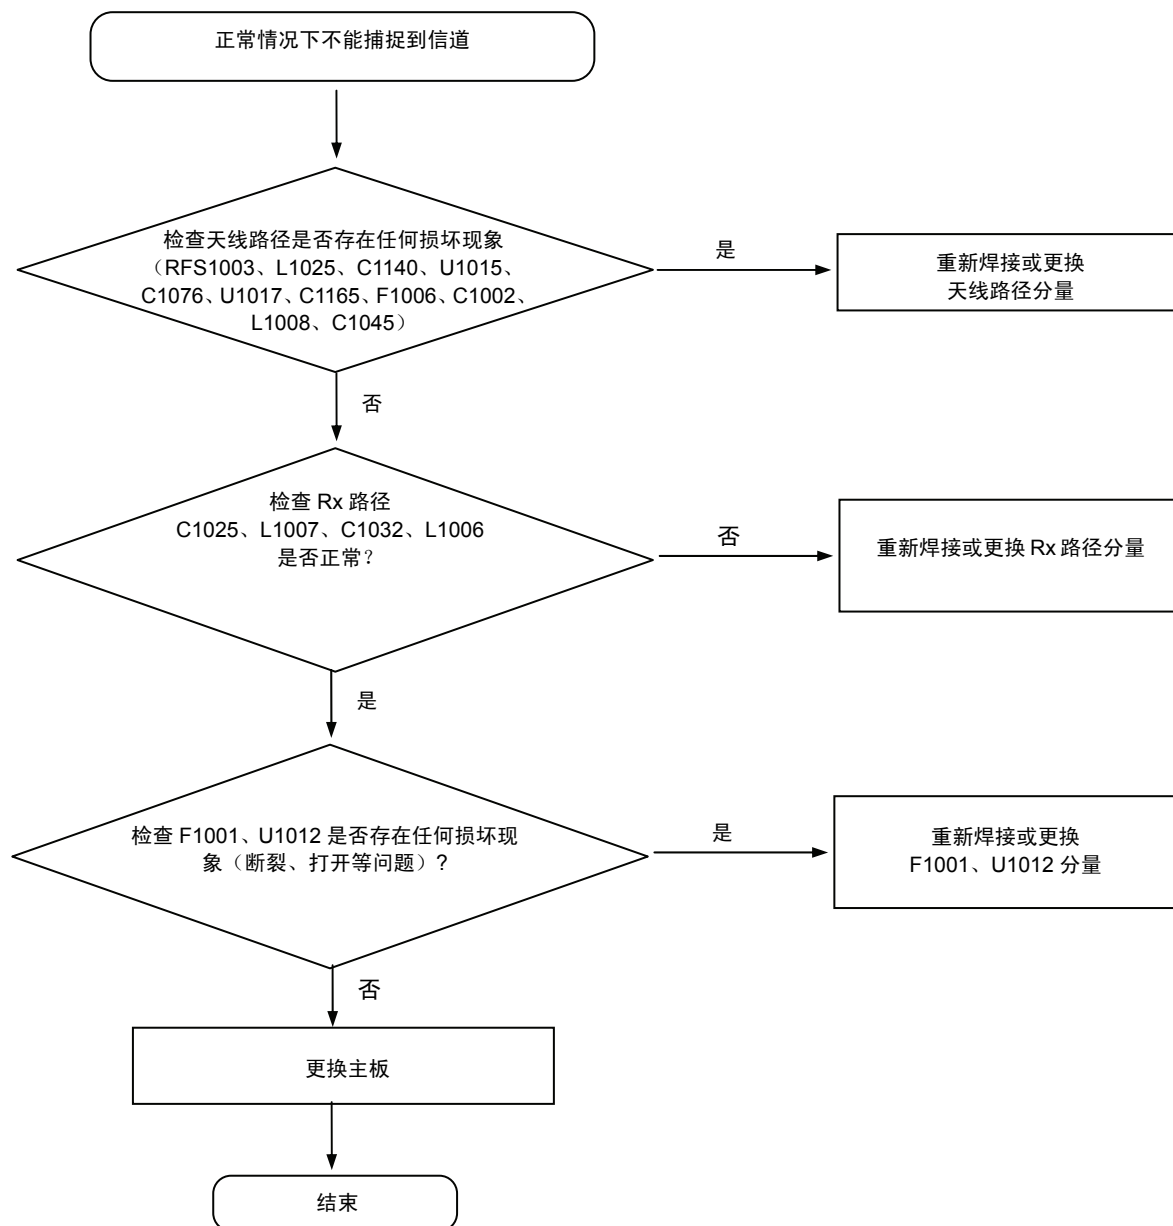


8.3 级维修

8-4-13. GSM 900 / LTE B8 RX

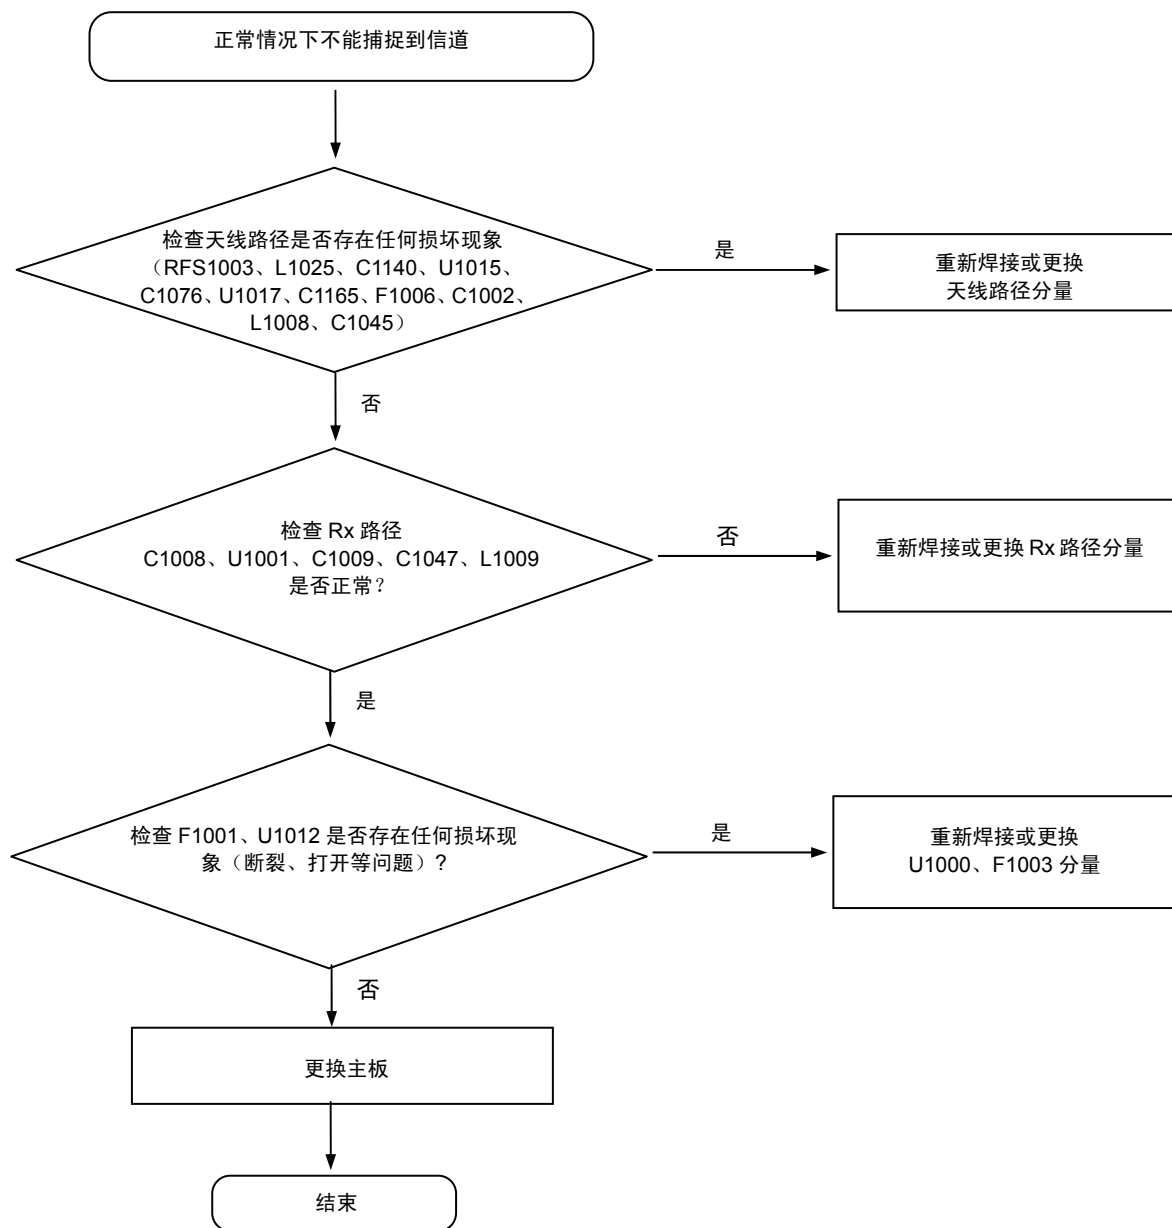


8.3 级维修

8-4-14. GSM 1800 / WCDMA2 / LTE B3 RX

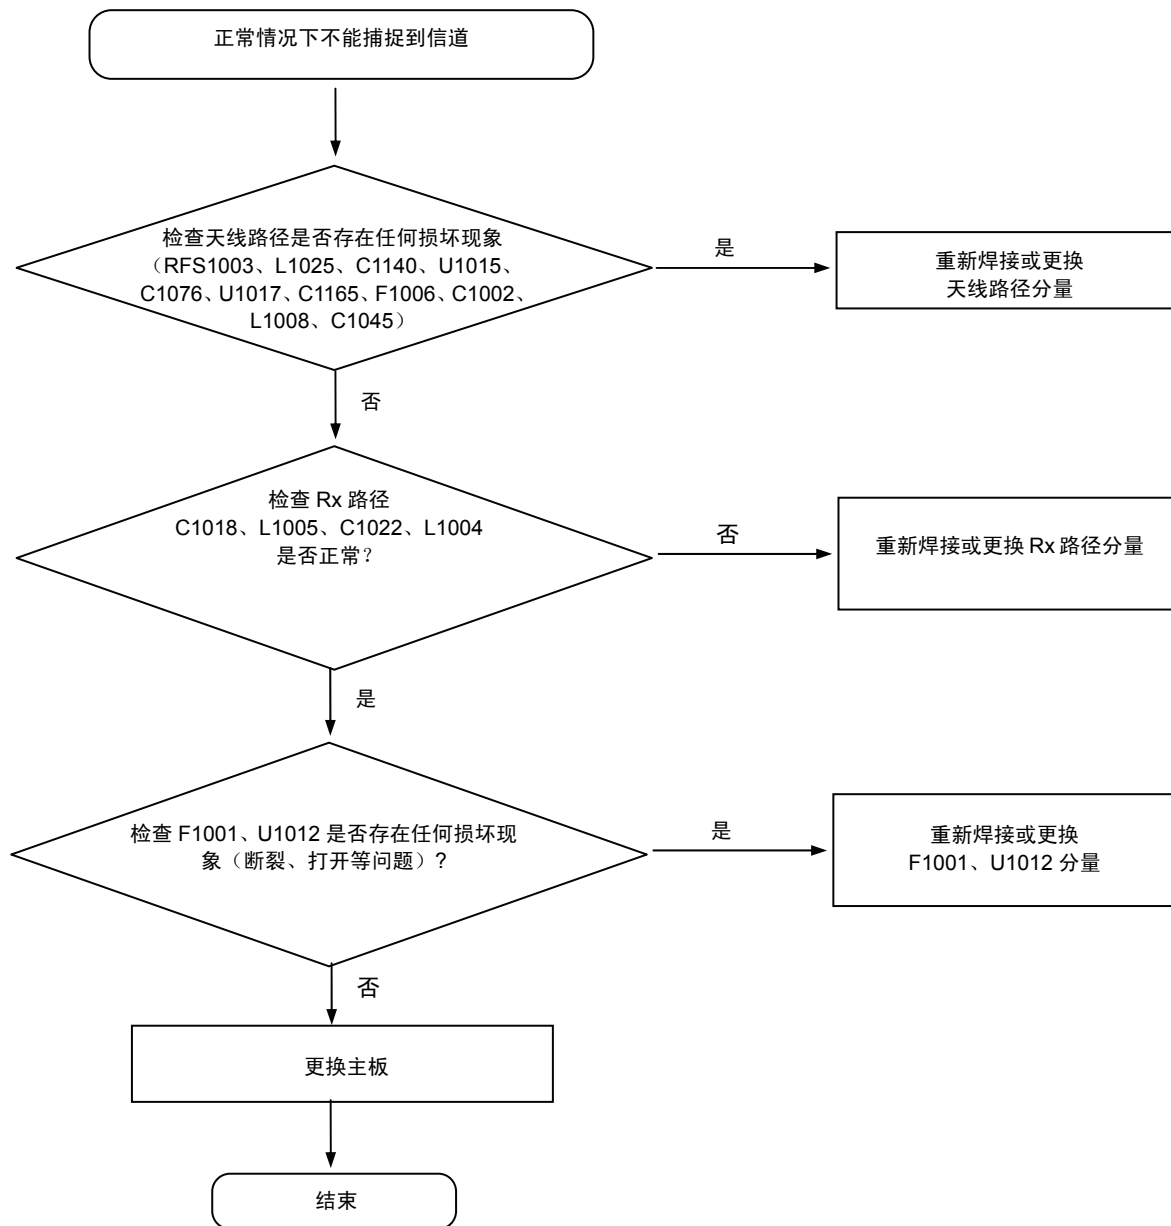


8.3 级维修

8-4-15 TD-SCDMA B34 / B39 RX

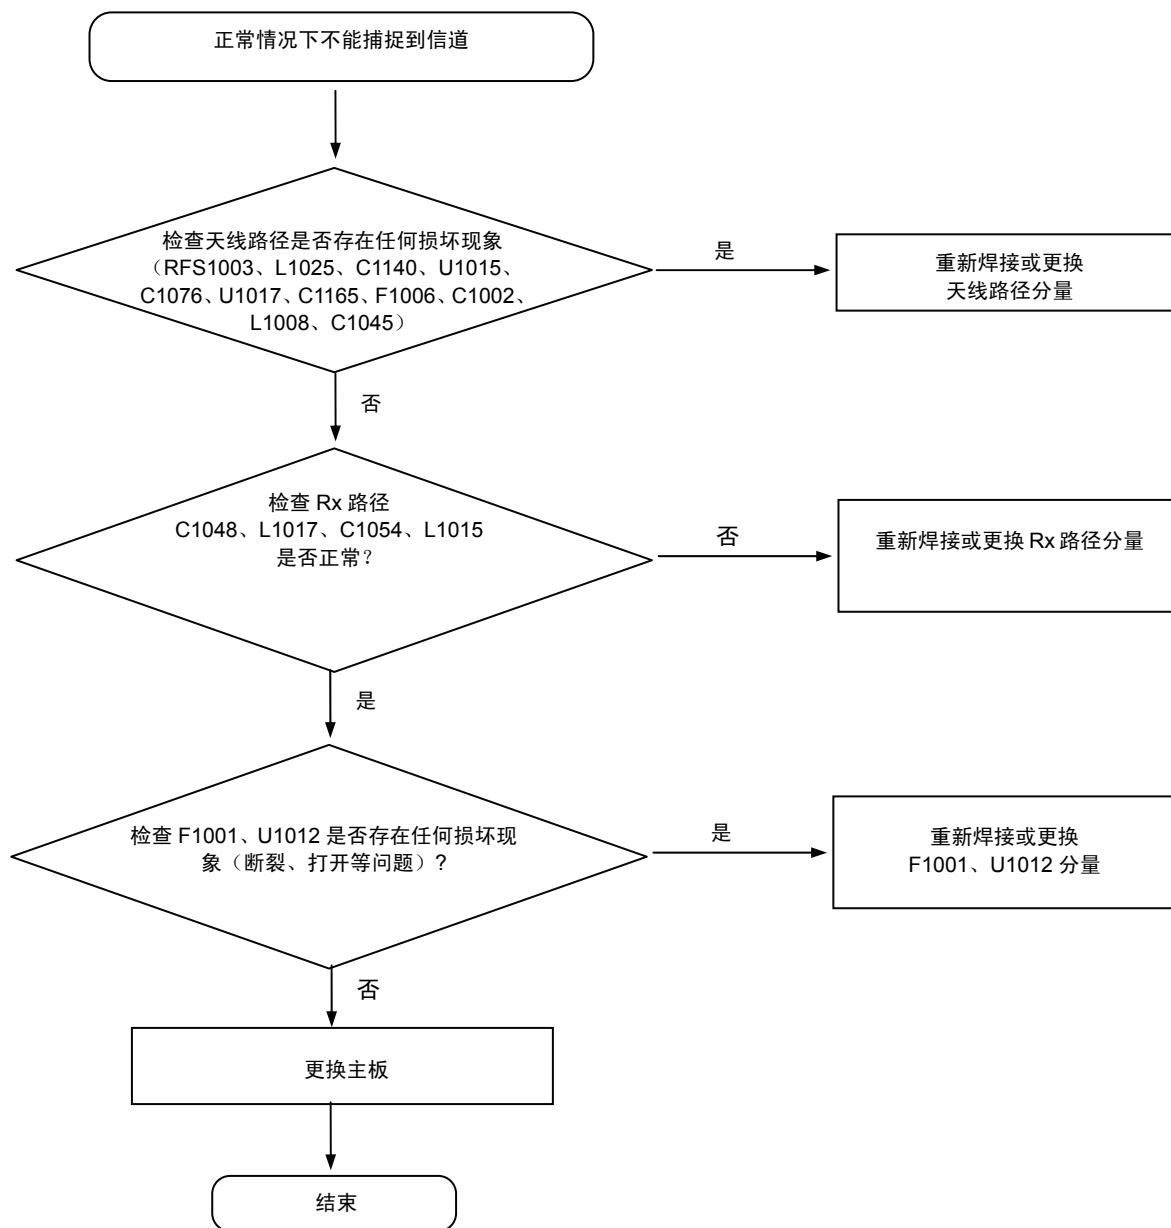


8. 3 级维修

8-4-16. LTEB38 /LTEB41 RX

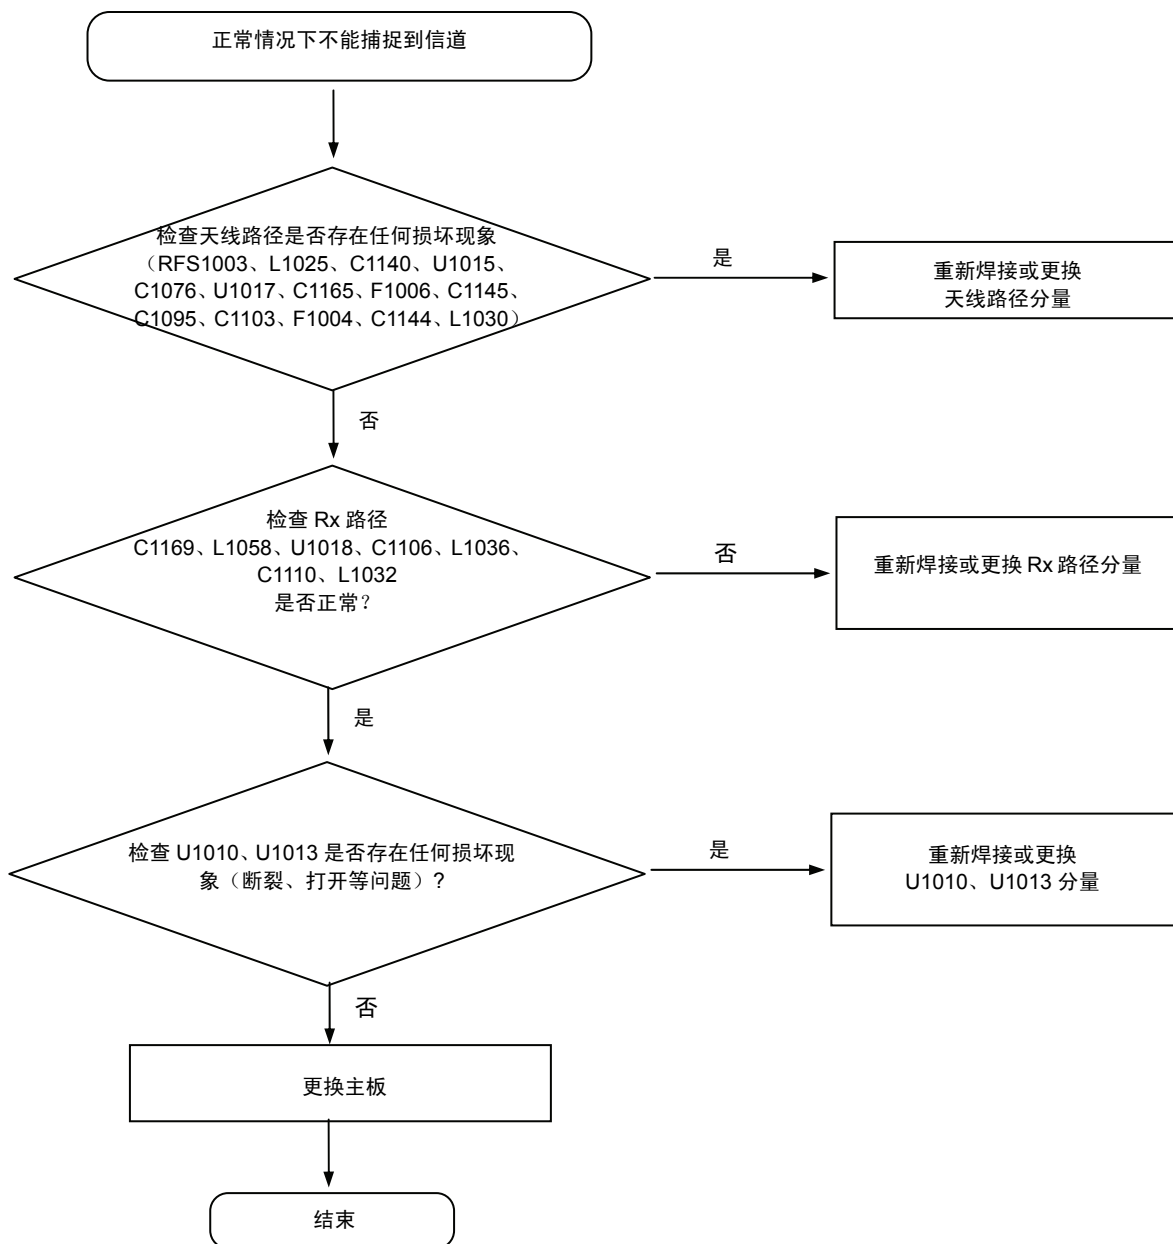


8.3 级维修

8-4-17. LB7 RX

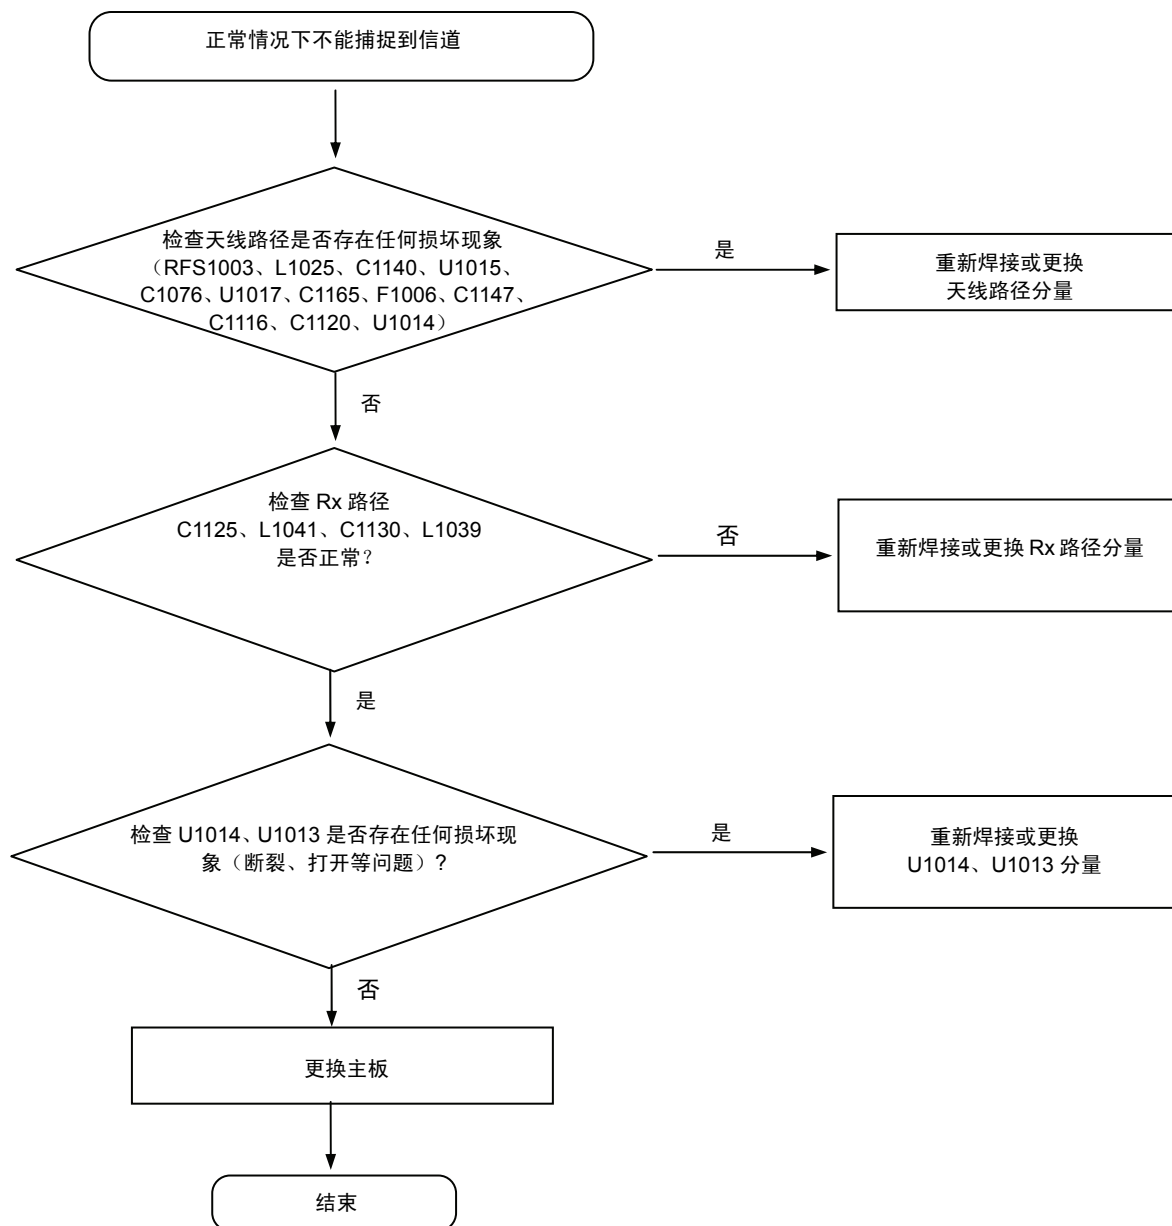


8. 3 级维修

8-4-18. LB40 Rx

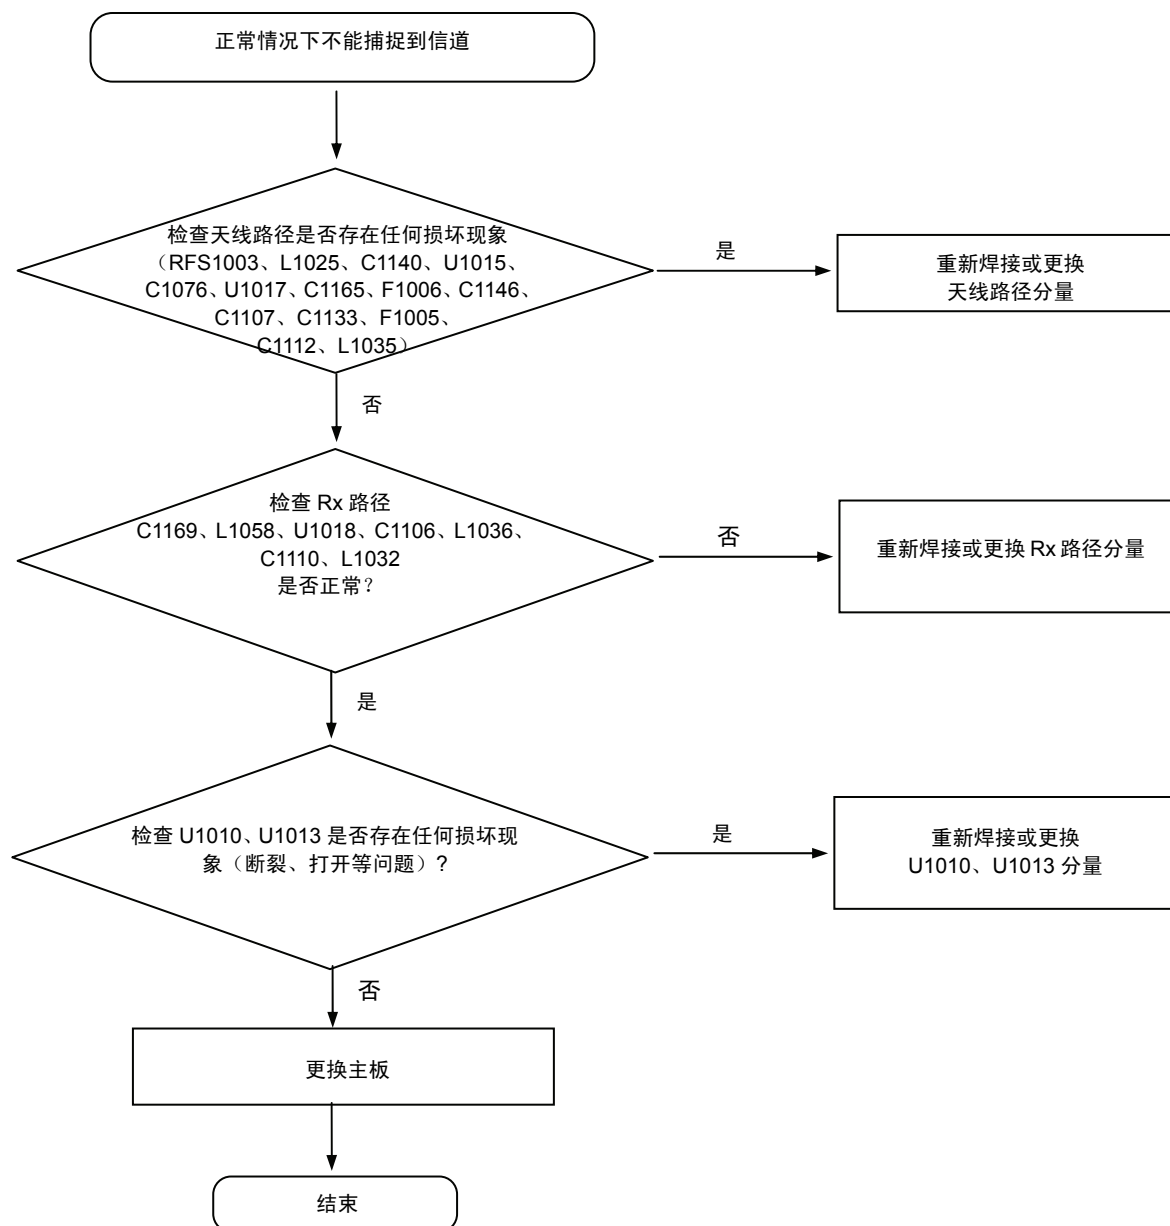


8.3 级维修

8-4-19. GSM850/GSM900 TX

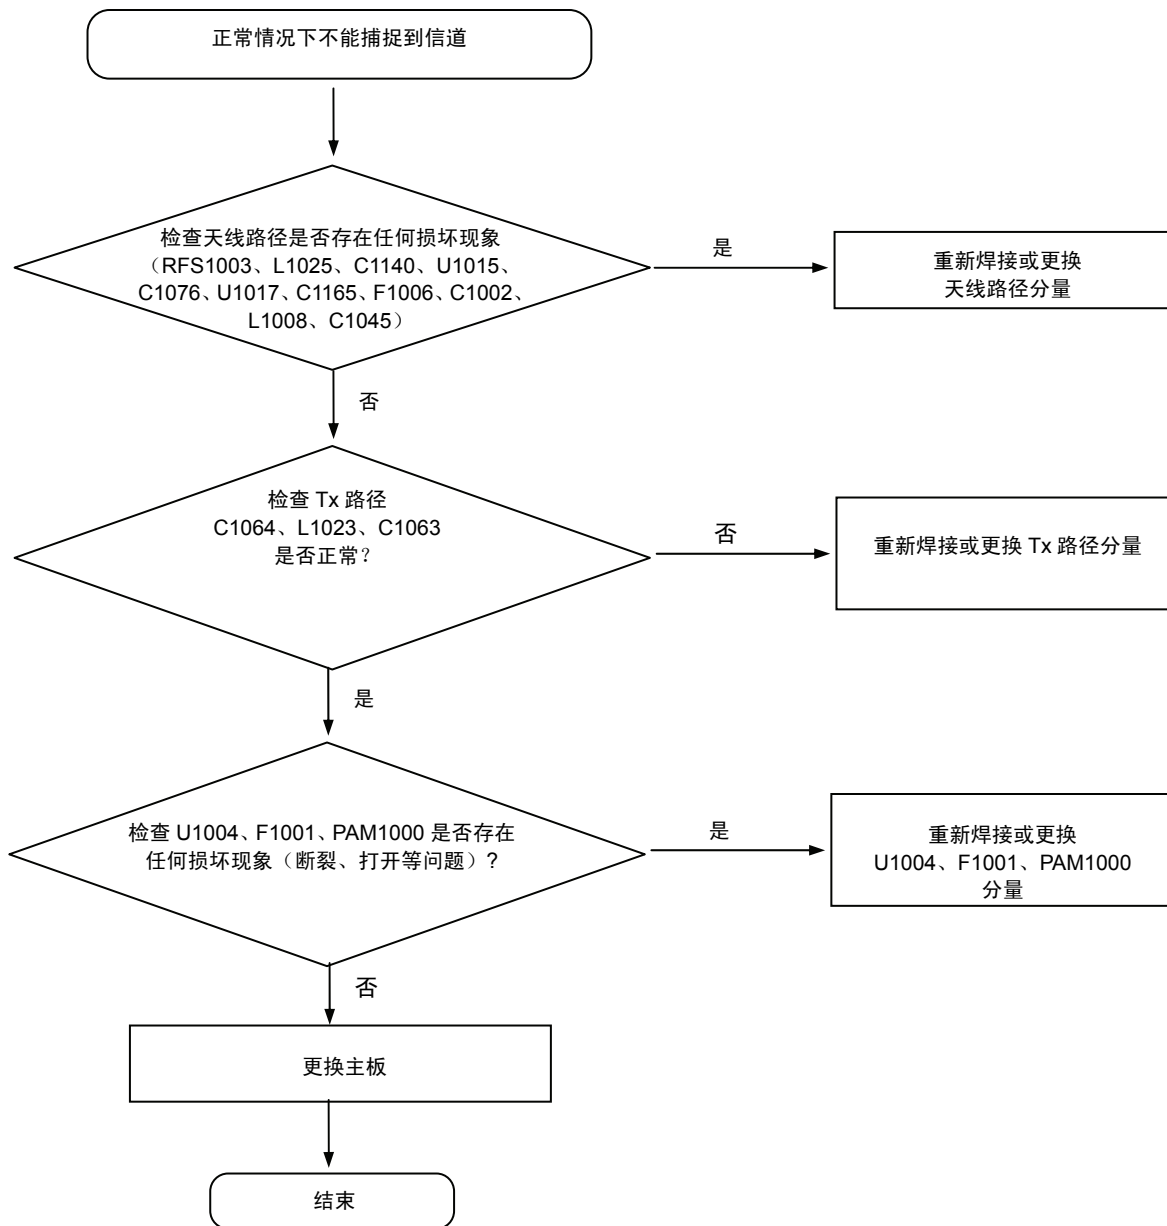


8.3 级维修

8-4-20. GSM1800/GSM1900 TX

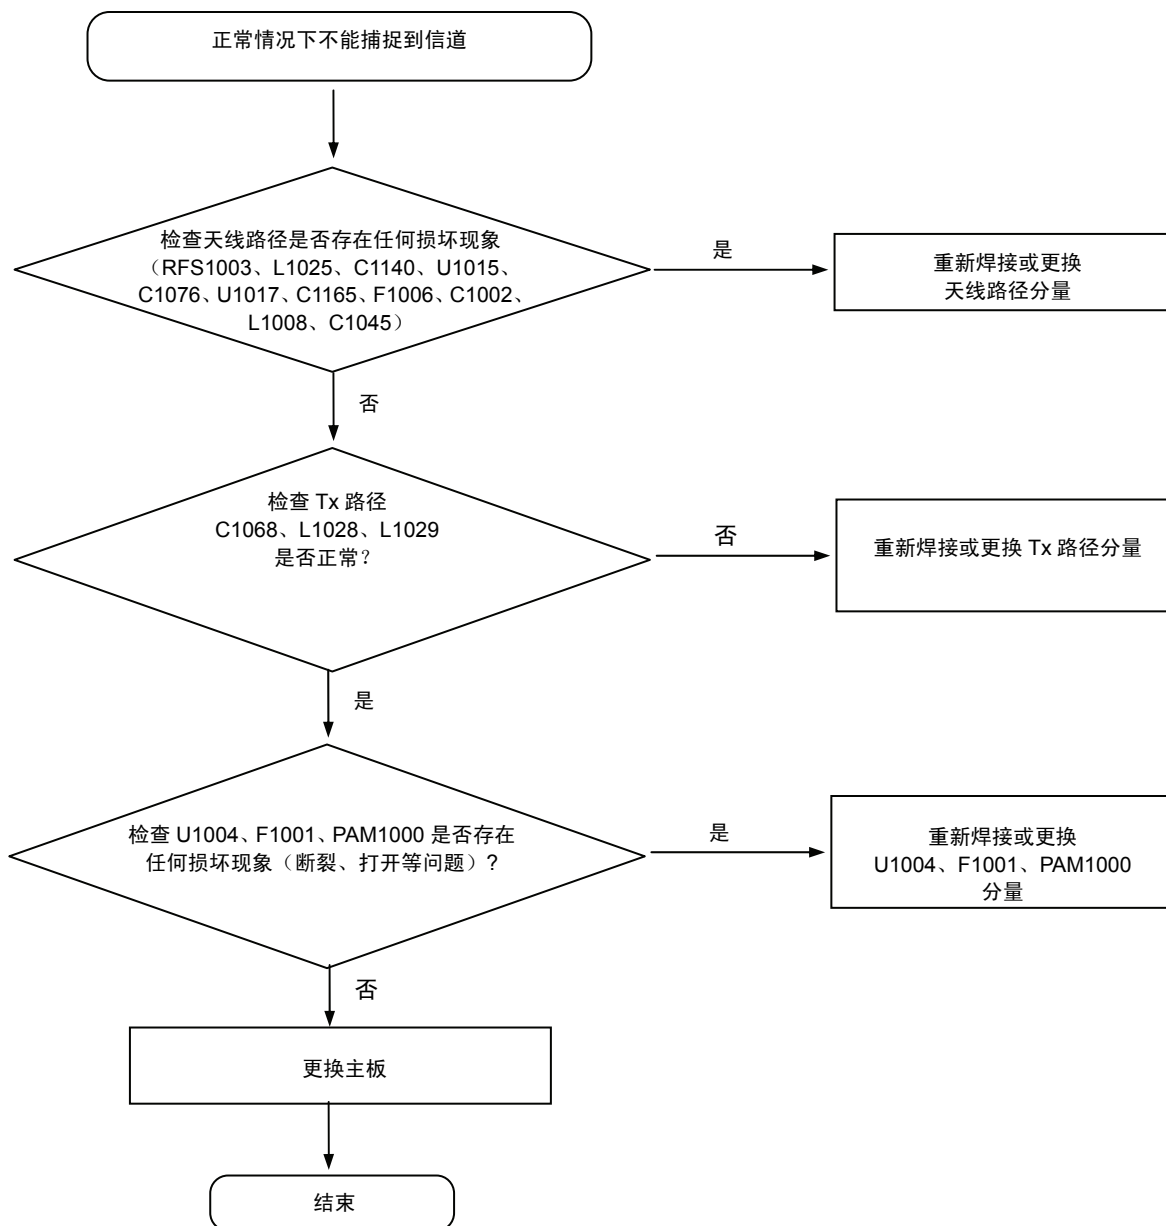


8.3 级维修

8-4-21. WCDMA2100 TX

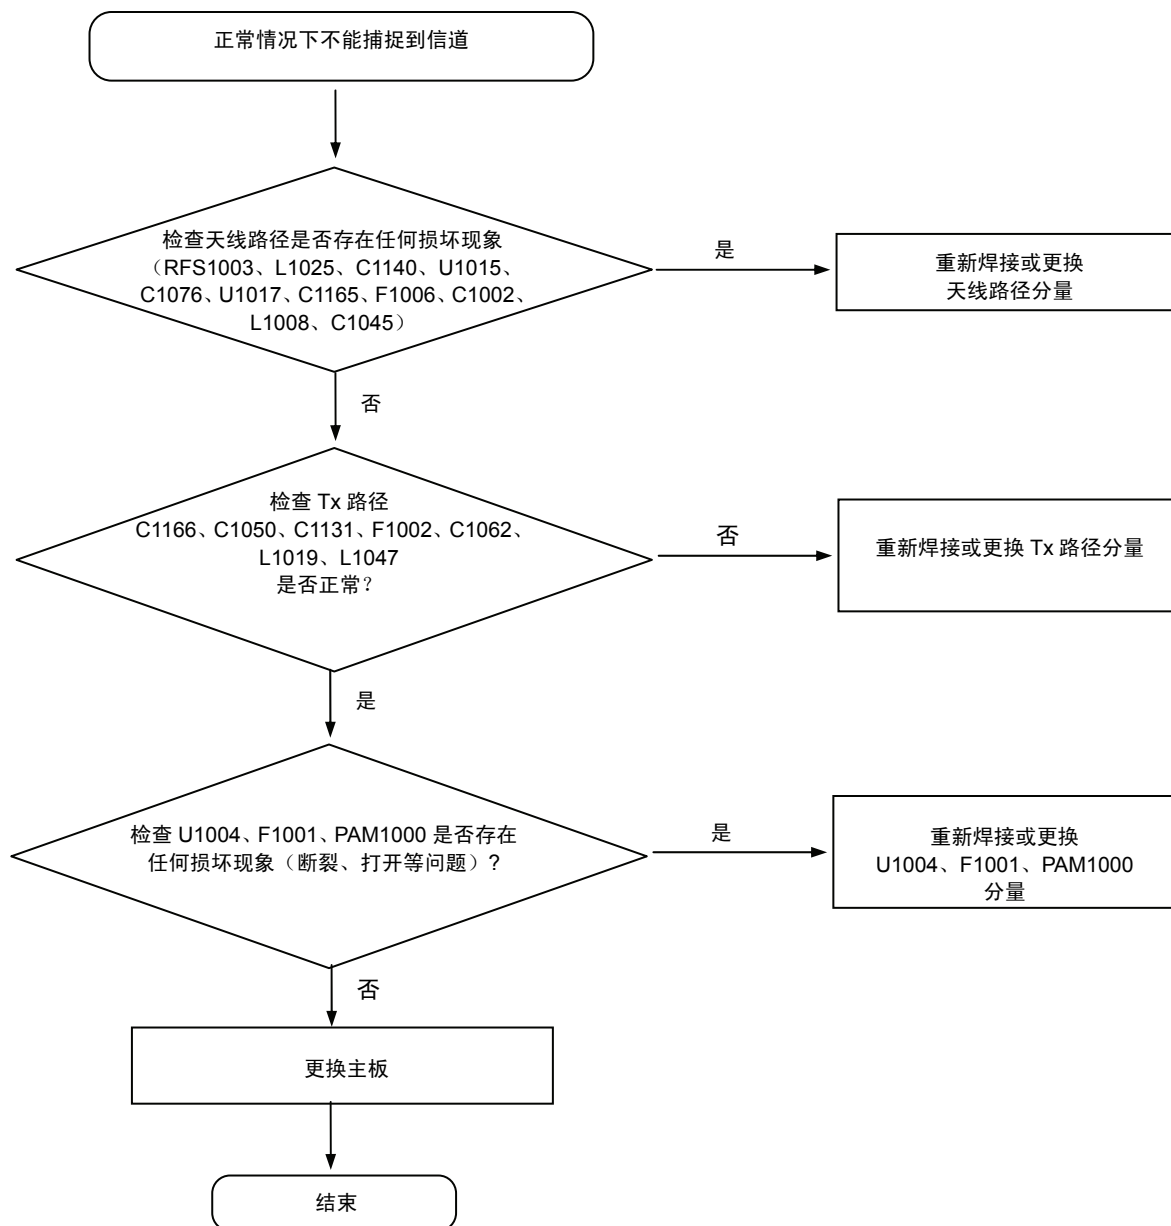


8.3 级维修

8-4-22. WCDMA1900 TX

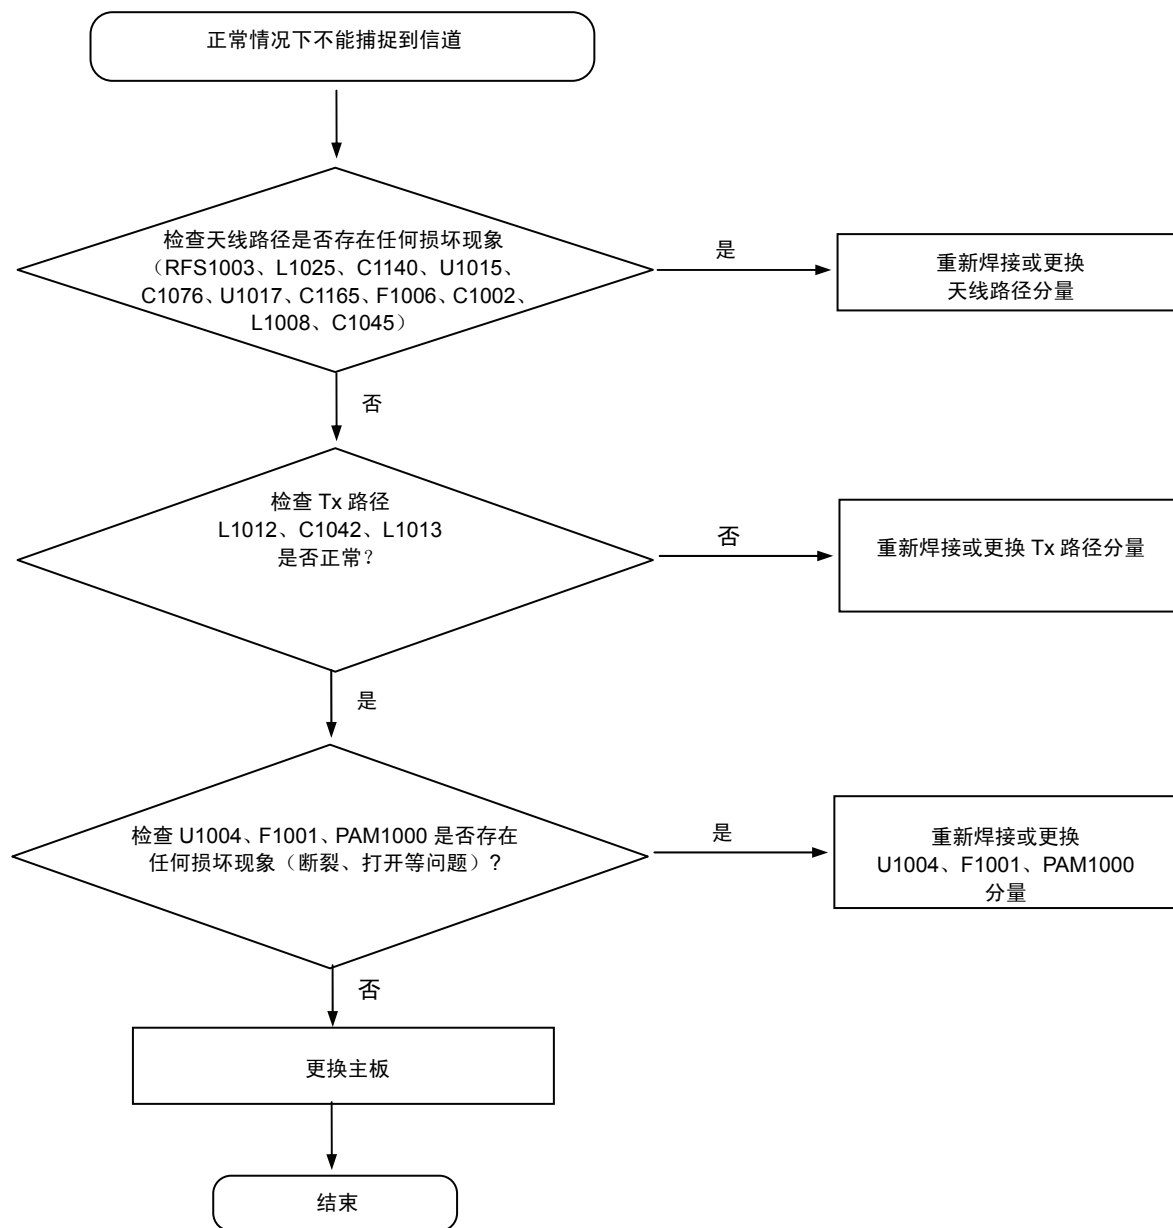


8.3 级维修

8-4-23. LTE B3 TX

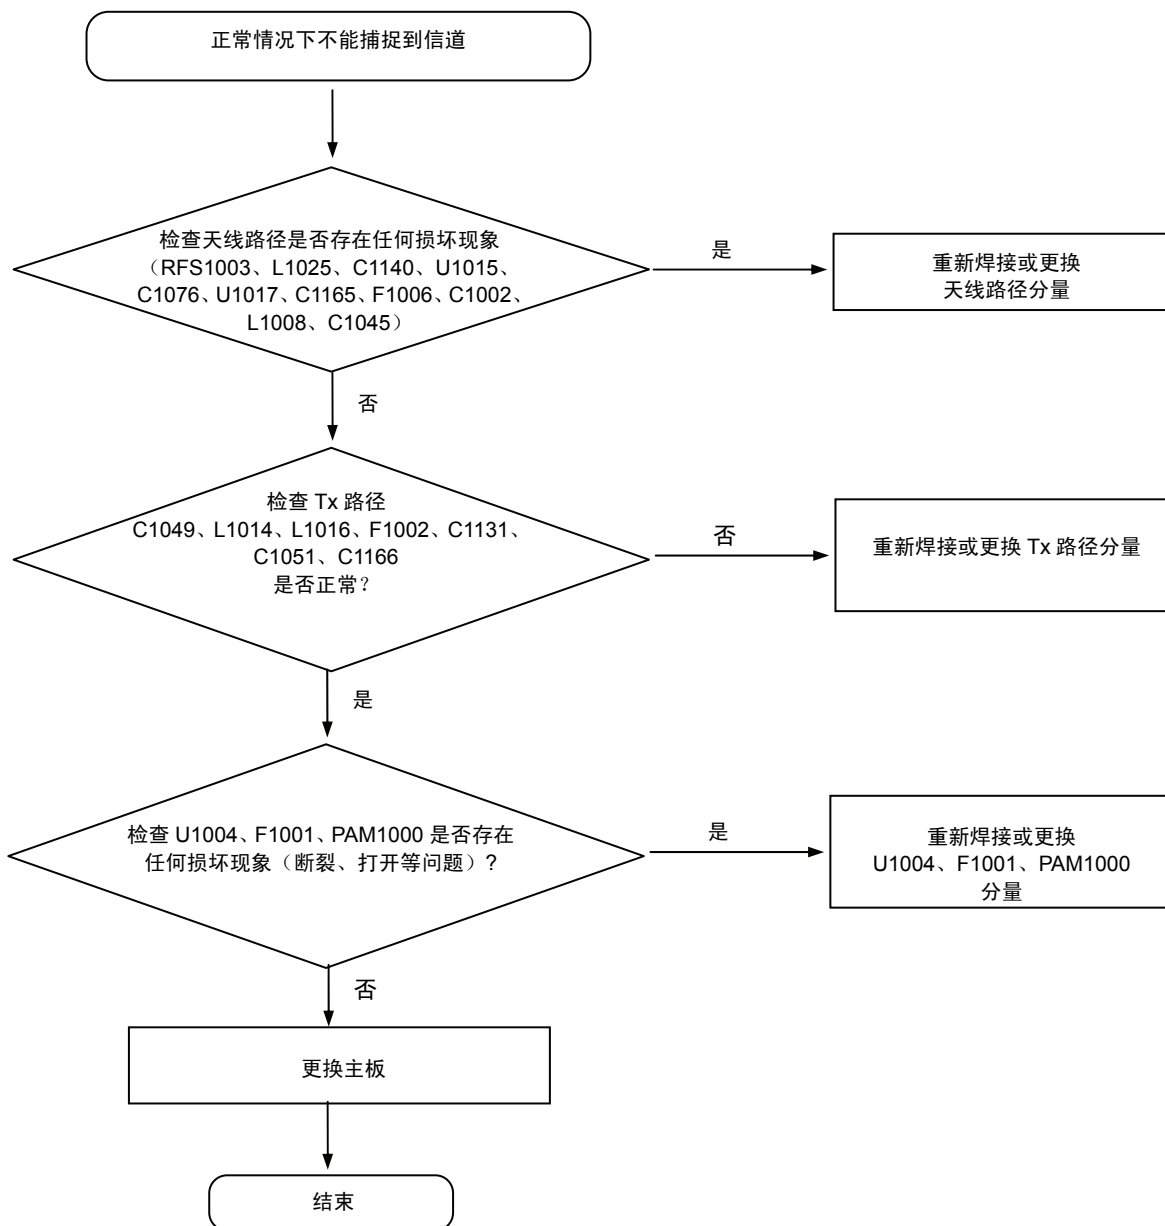


8.3 级维修

8-4-24. LB5 Tx

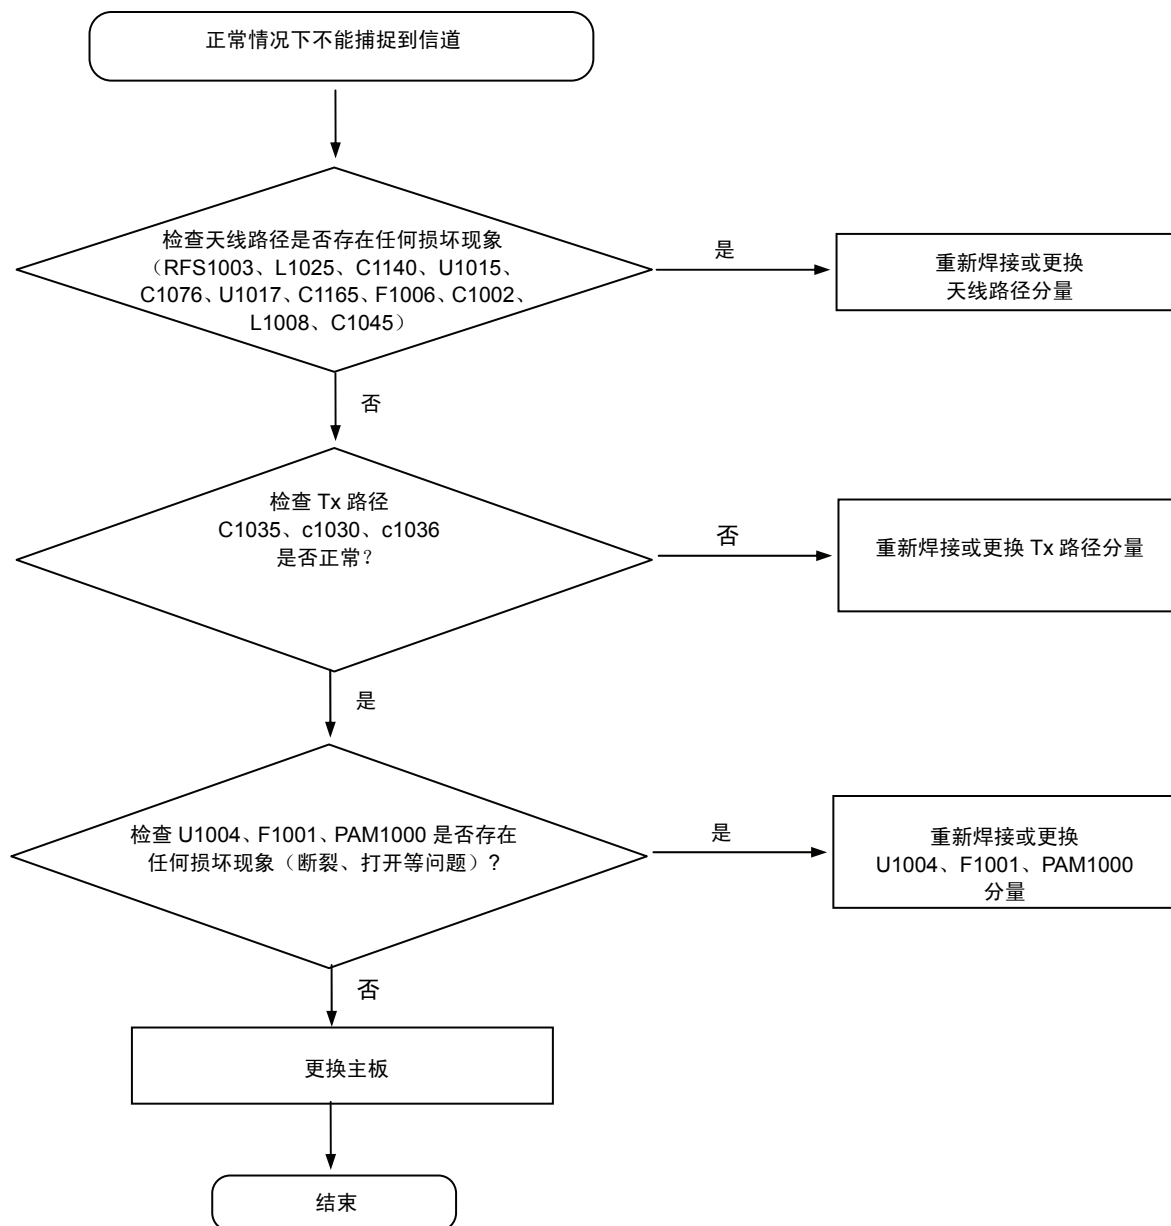


8.3 级维修

8-4-25. LB8 Tx

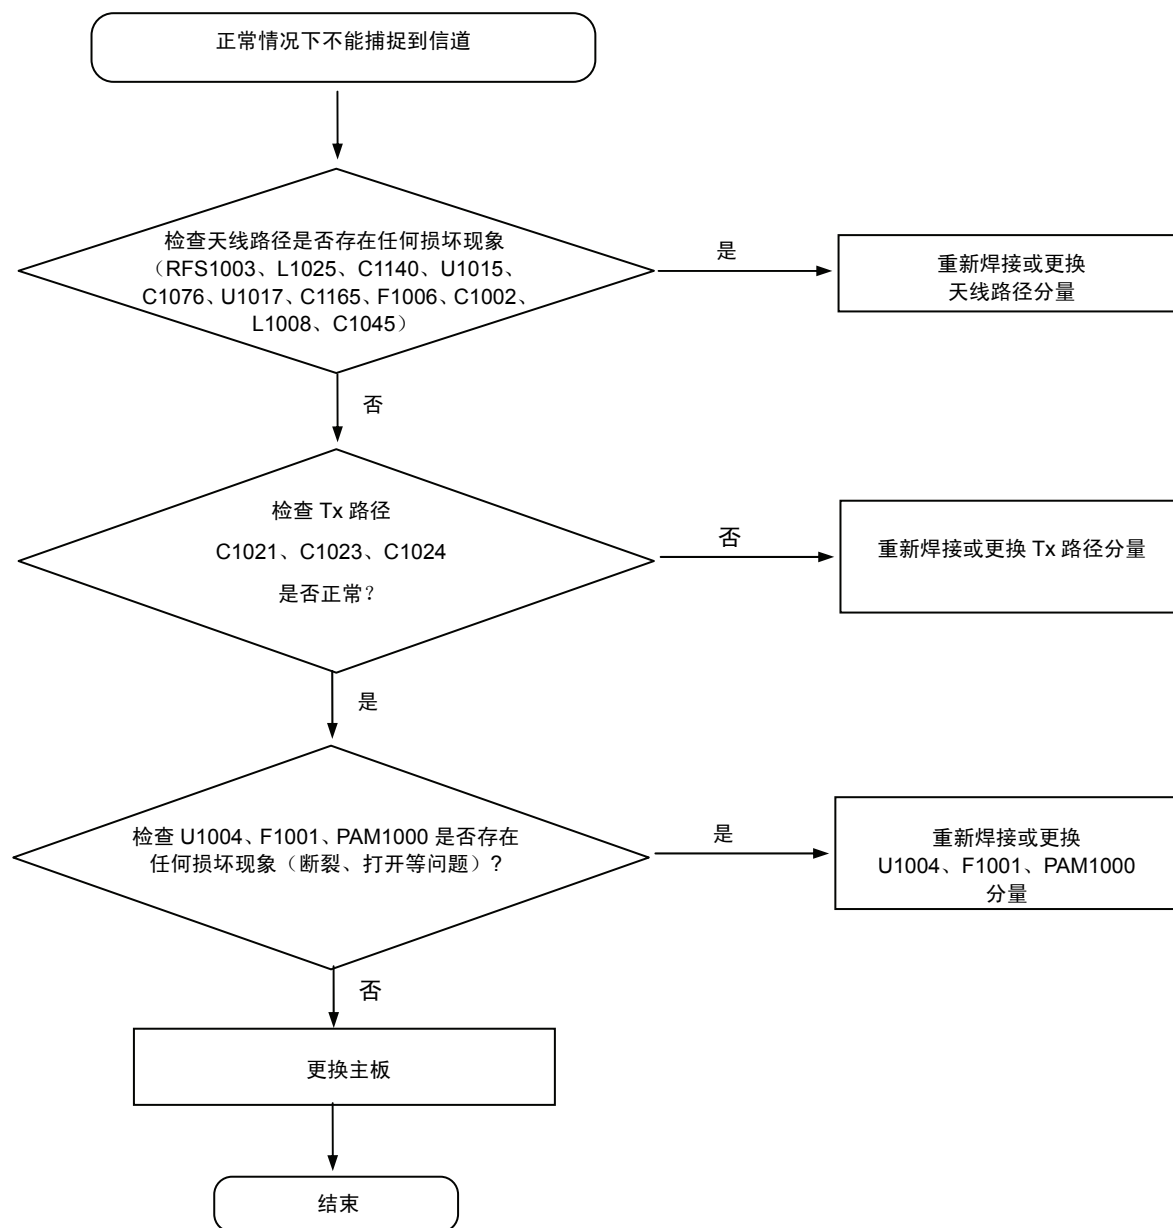


8.3 级维修

8-4-26. TD B34/39

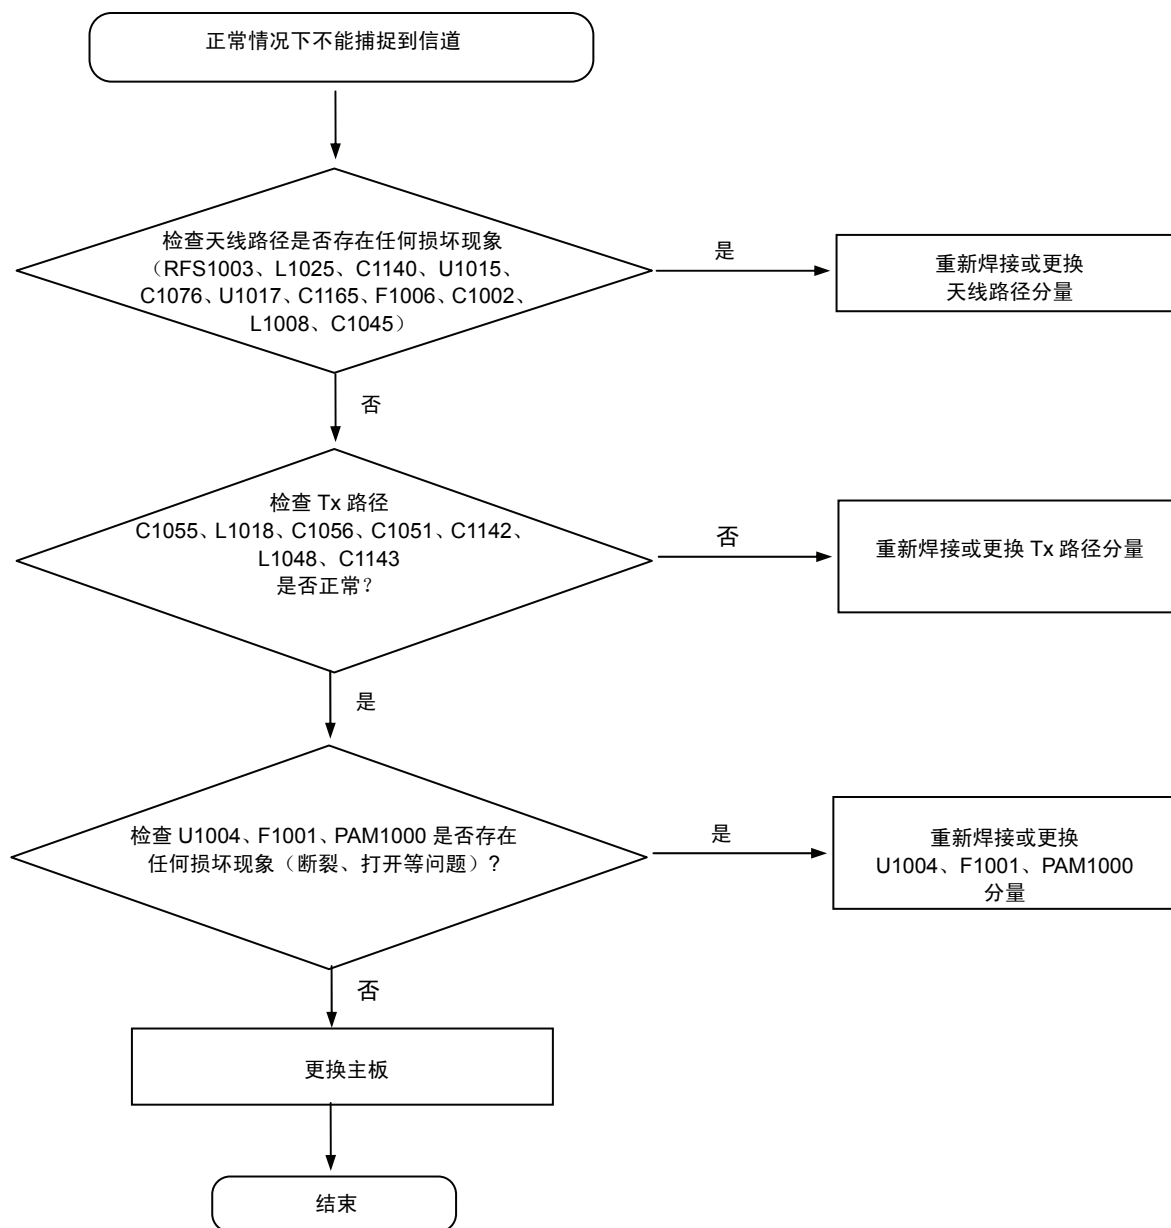


8.3 级维修

8-4-27. LB38/41 Tx

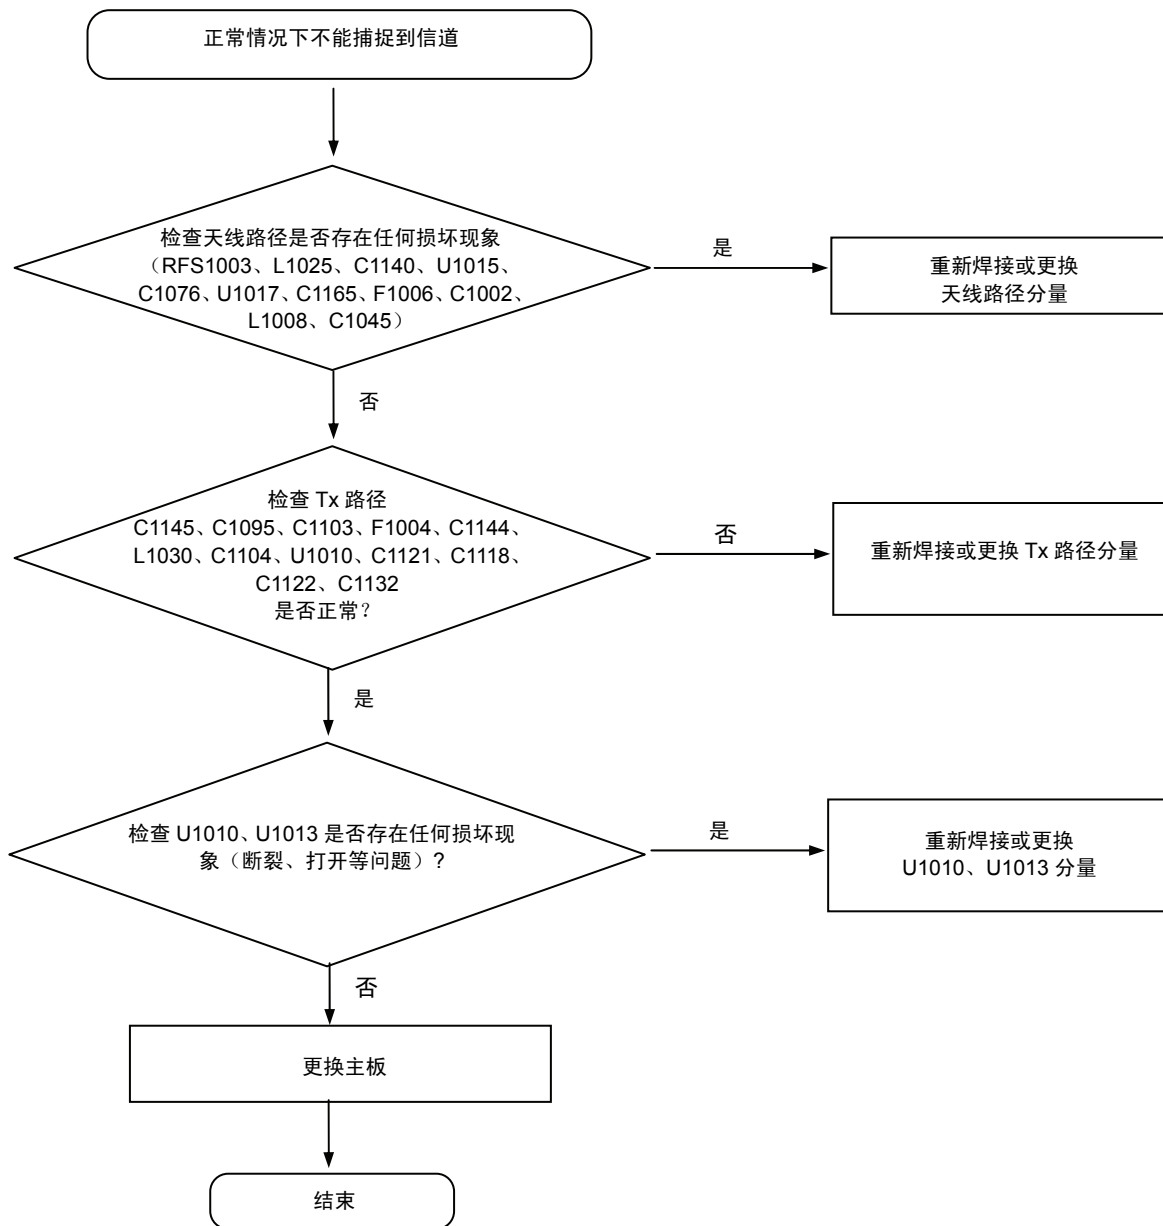


8.3 级维修

8-4-28. LB40 Tx

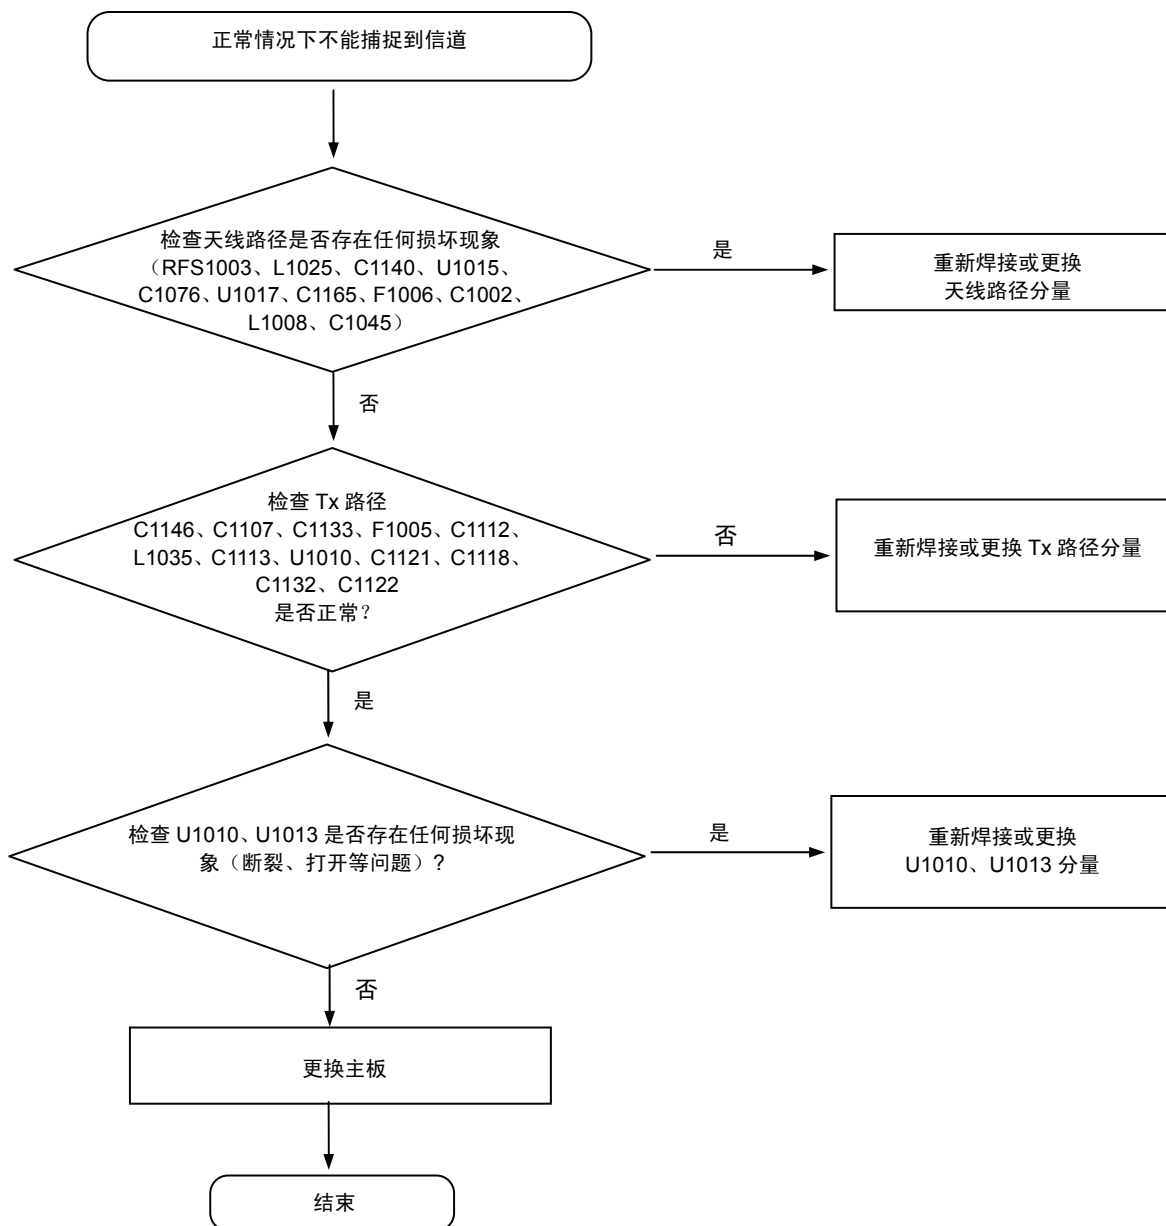


8.3 级维修

8-4-29. LB7 Tx

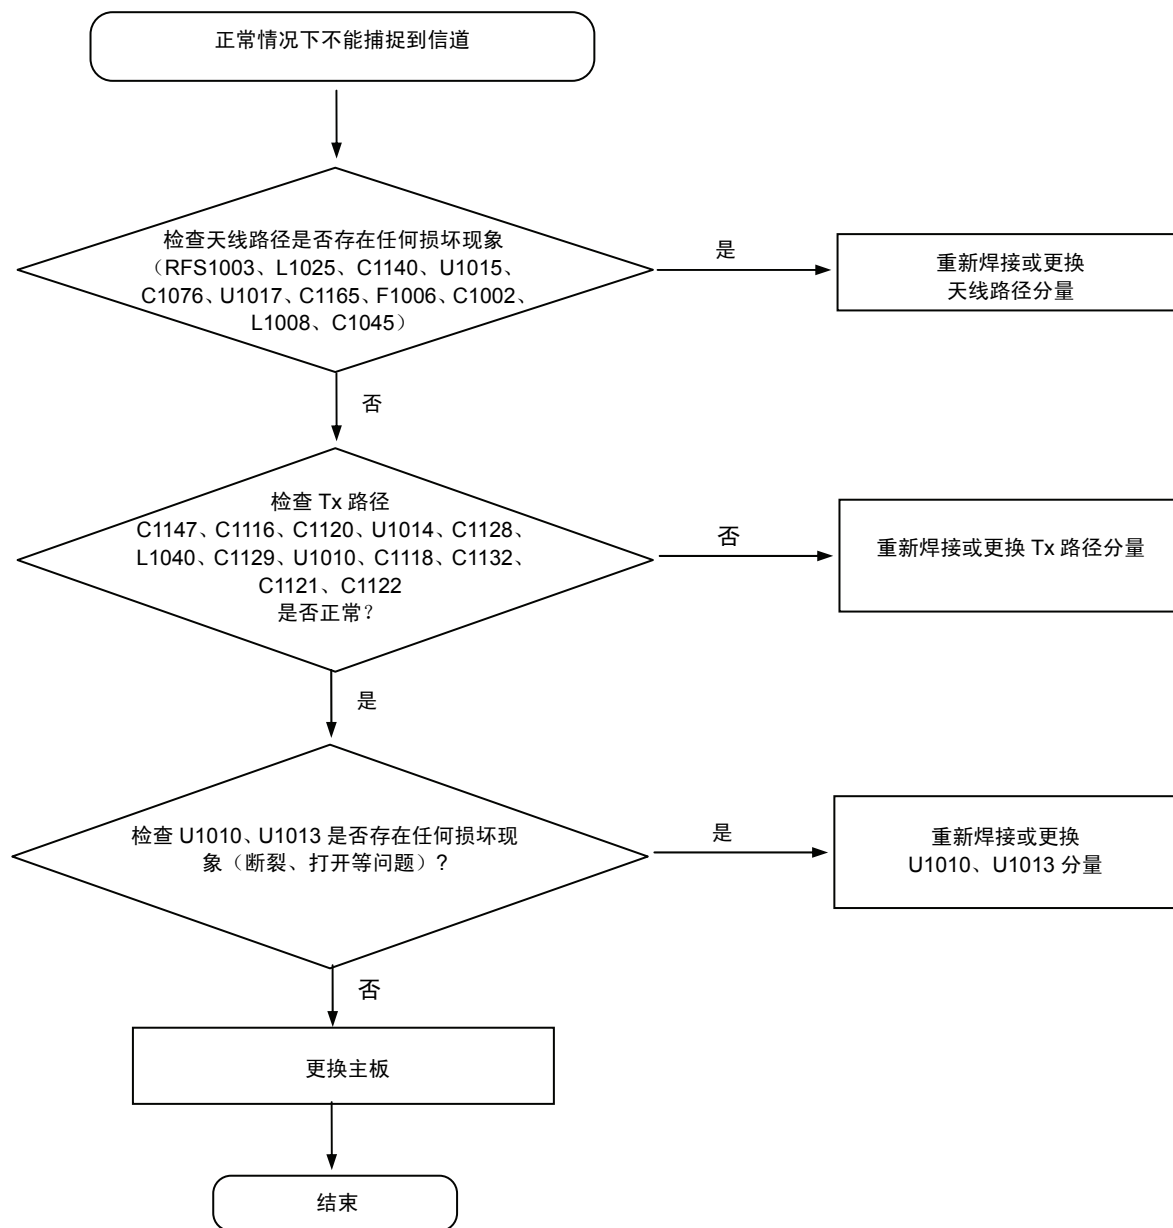


8.3 级维修

8-4-30. BT/WLAN

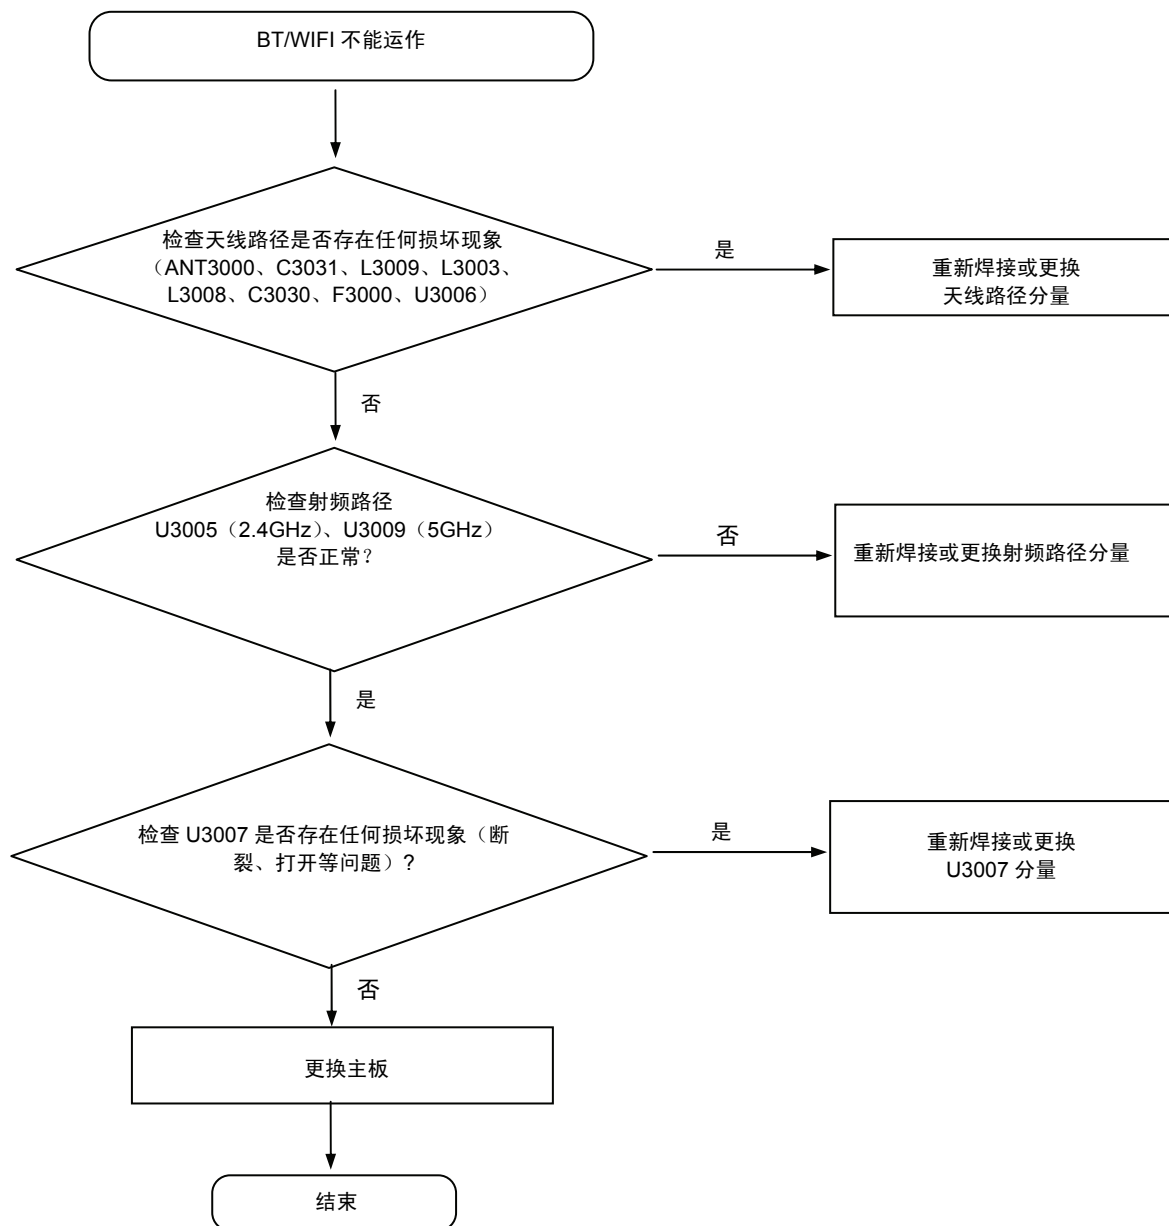


8.3 级维修

8-4-31. GPS

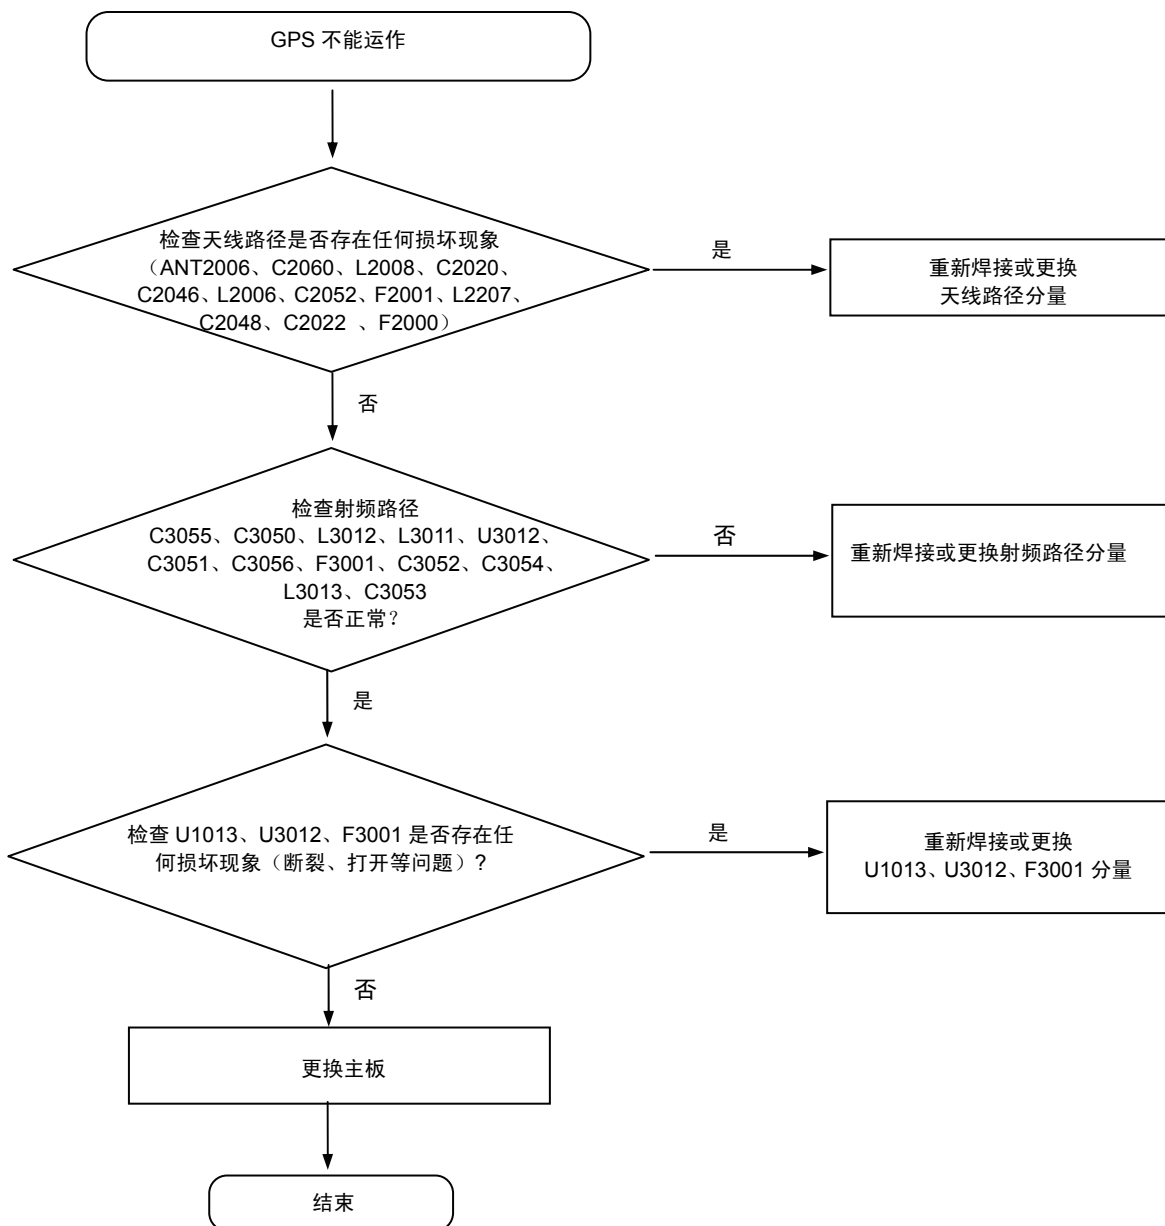


8.3 级维修

8-4-32. FM 收音机

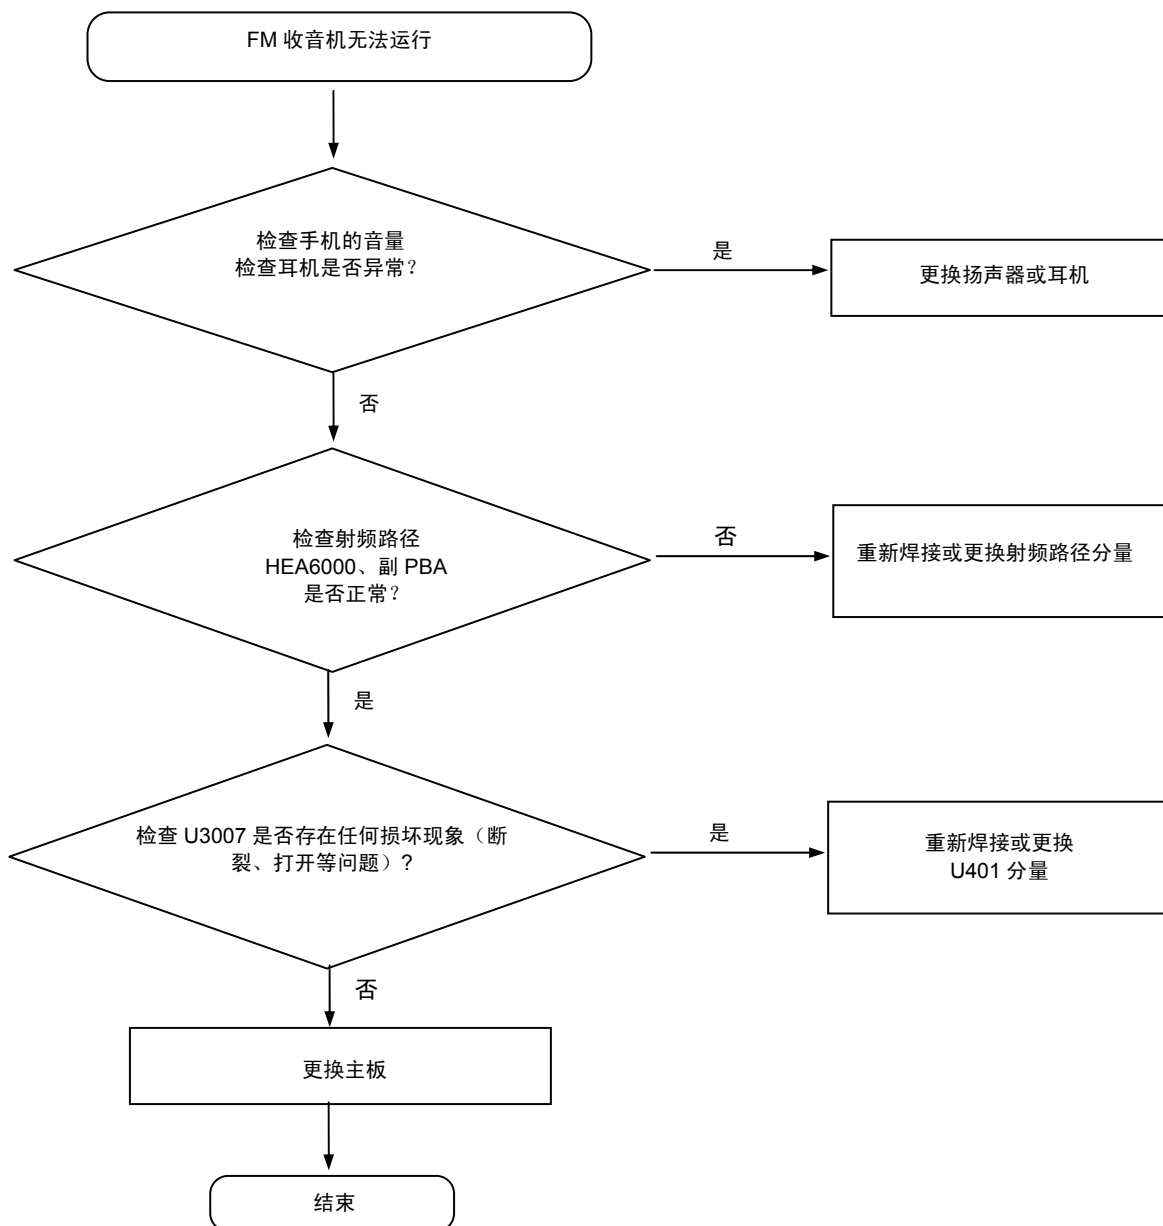


8.3 级维修

8-4-33. NFC

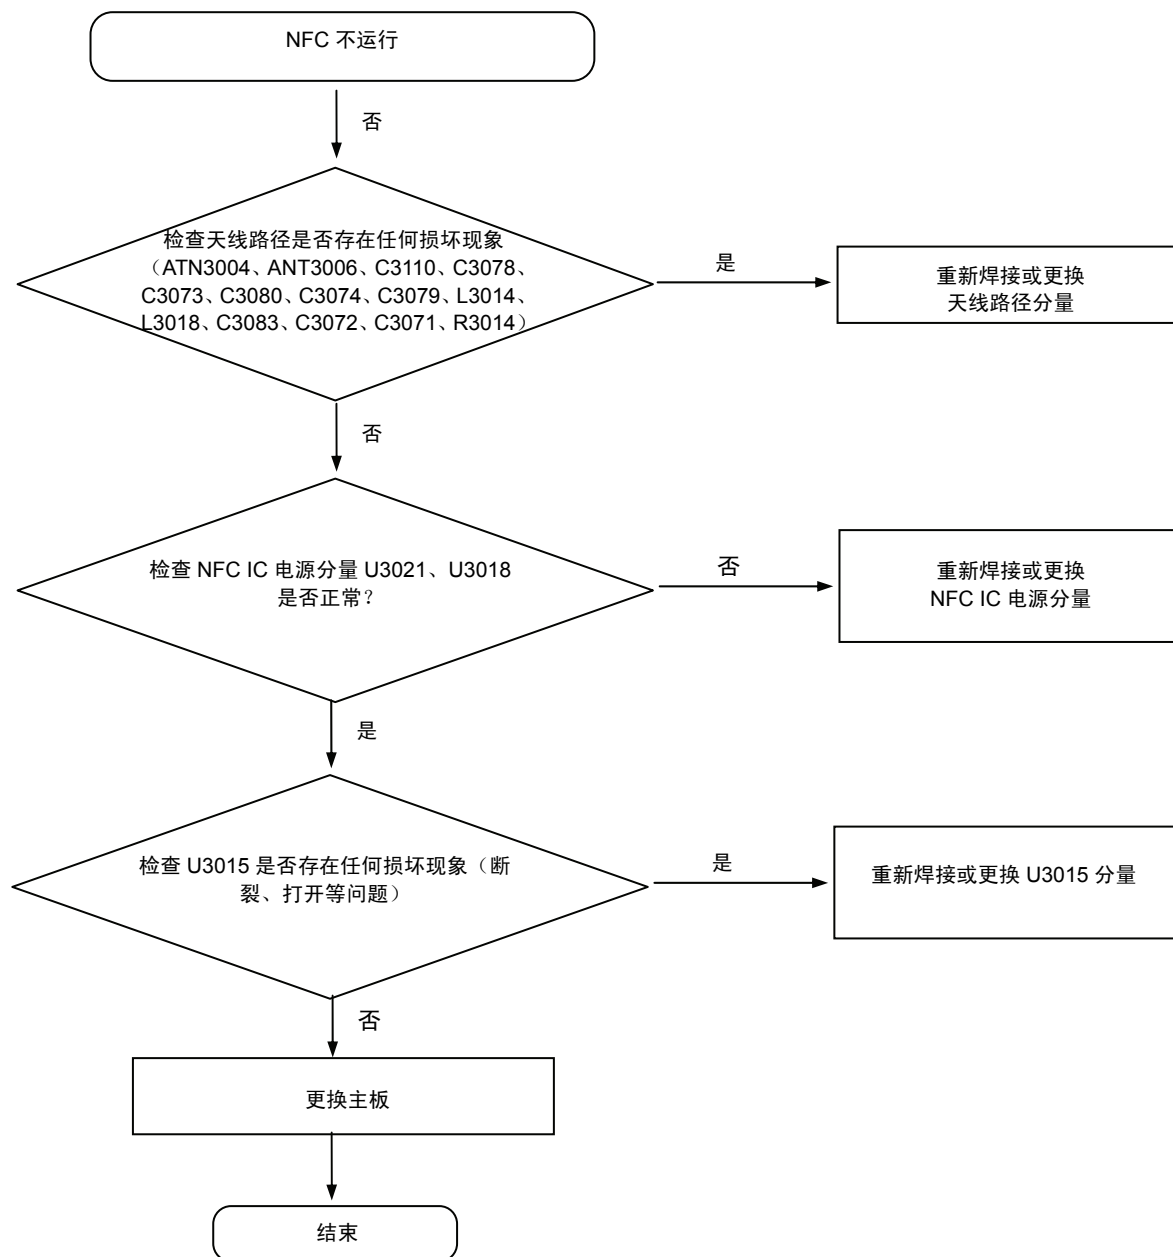

8.3 级维修

8-4-34. MST

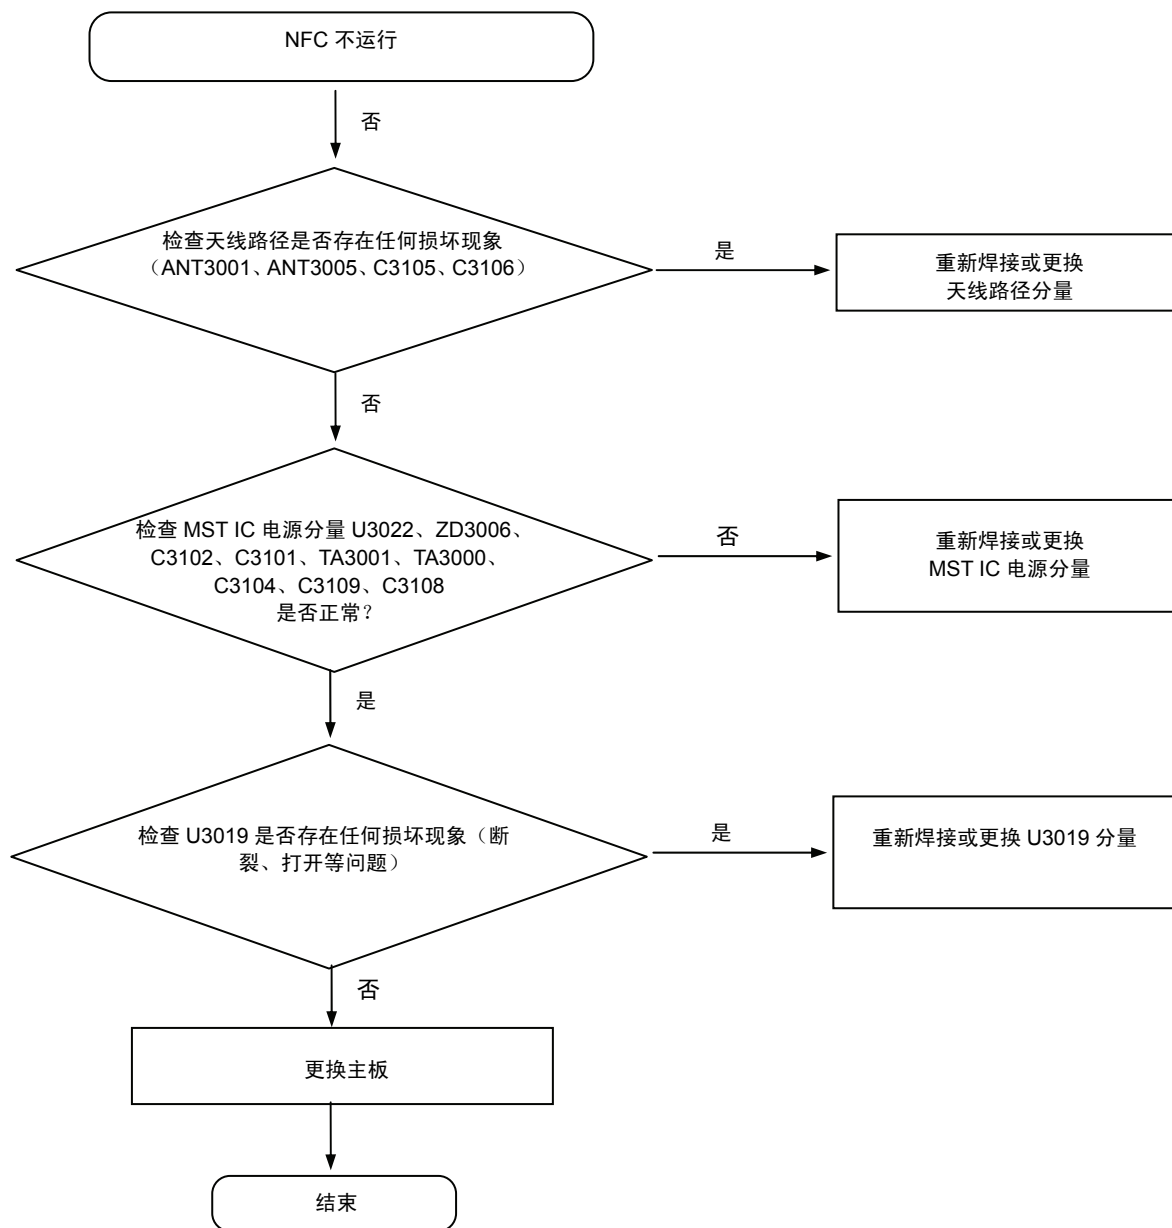

8.3 级维修

8-5. 维修示意图

-故障处（顶部视图）

UCP400（AP）

