




8.3 级 维修




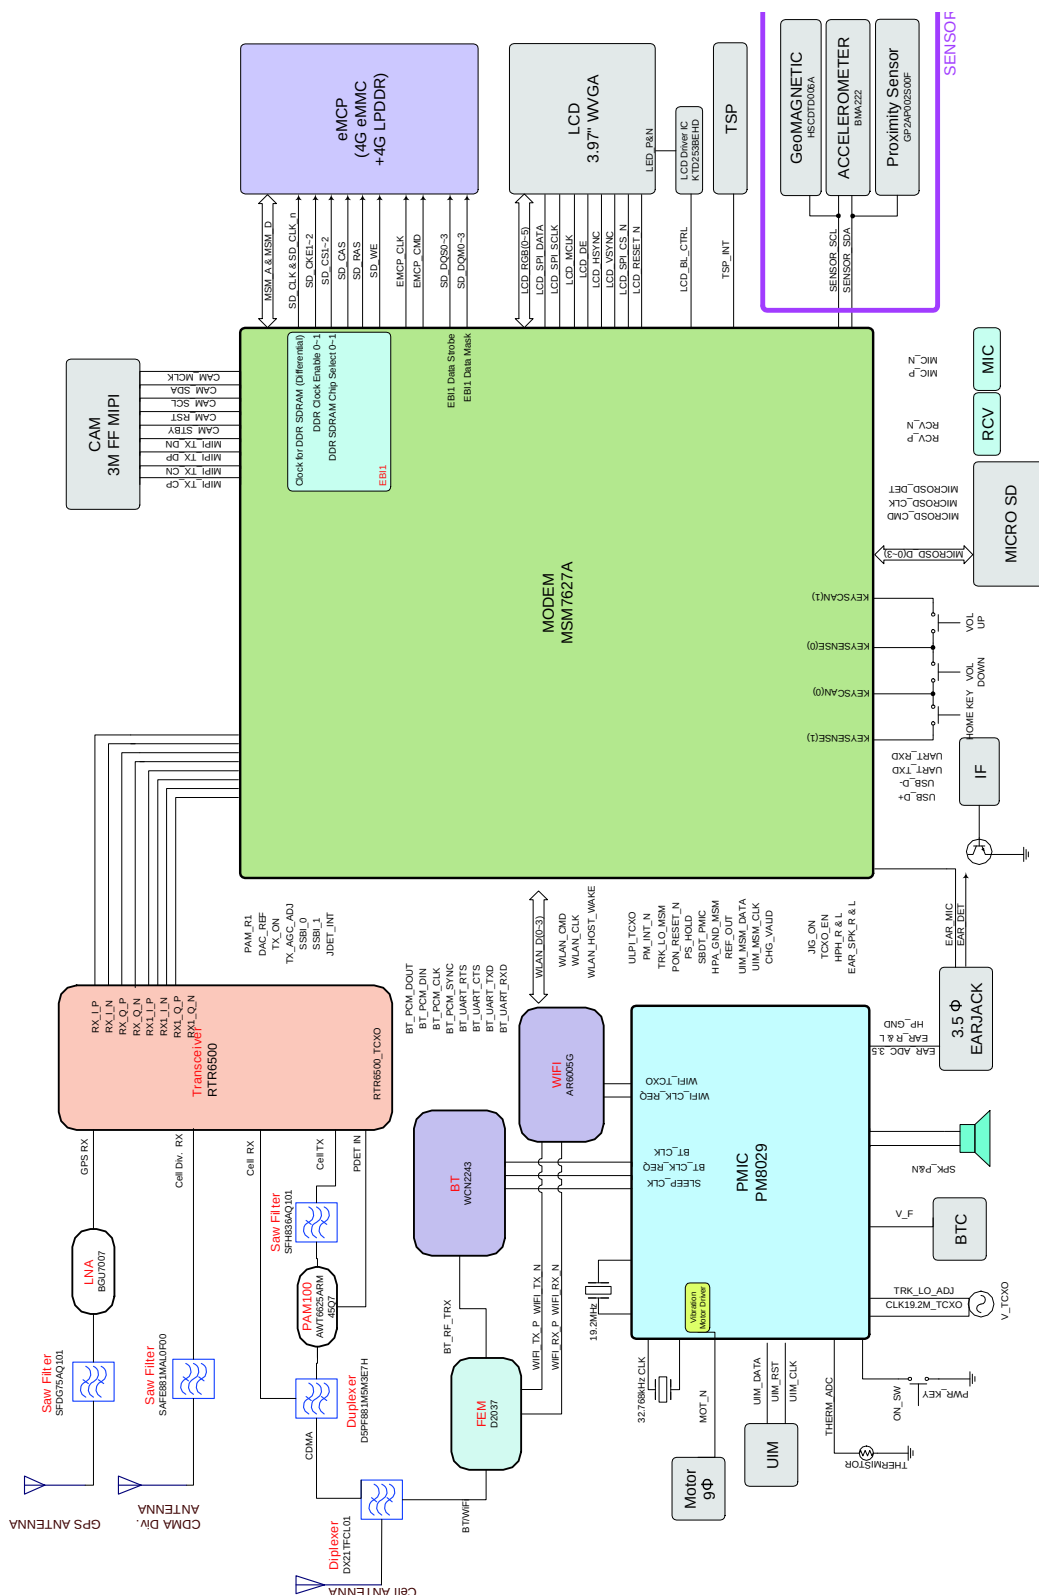


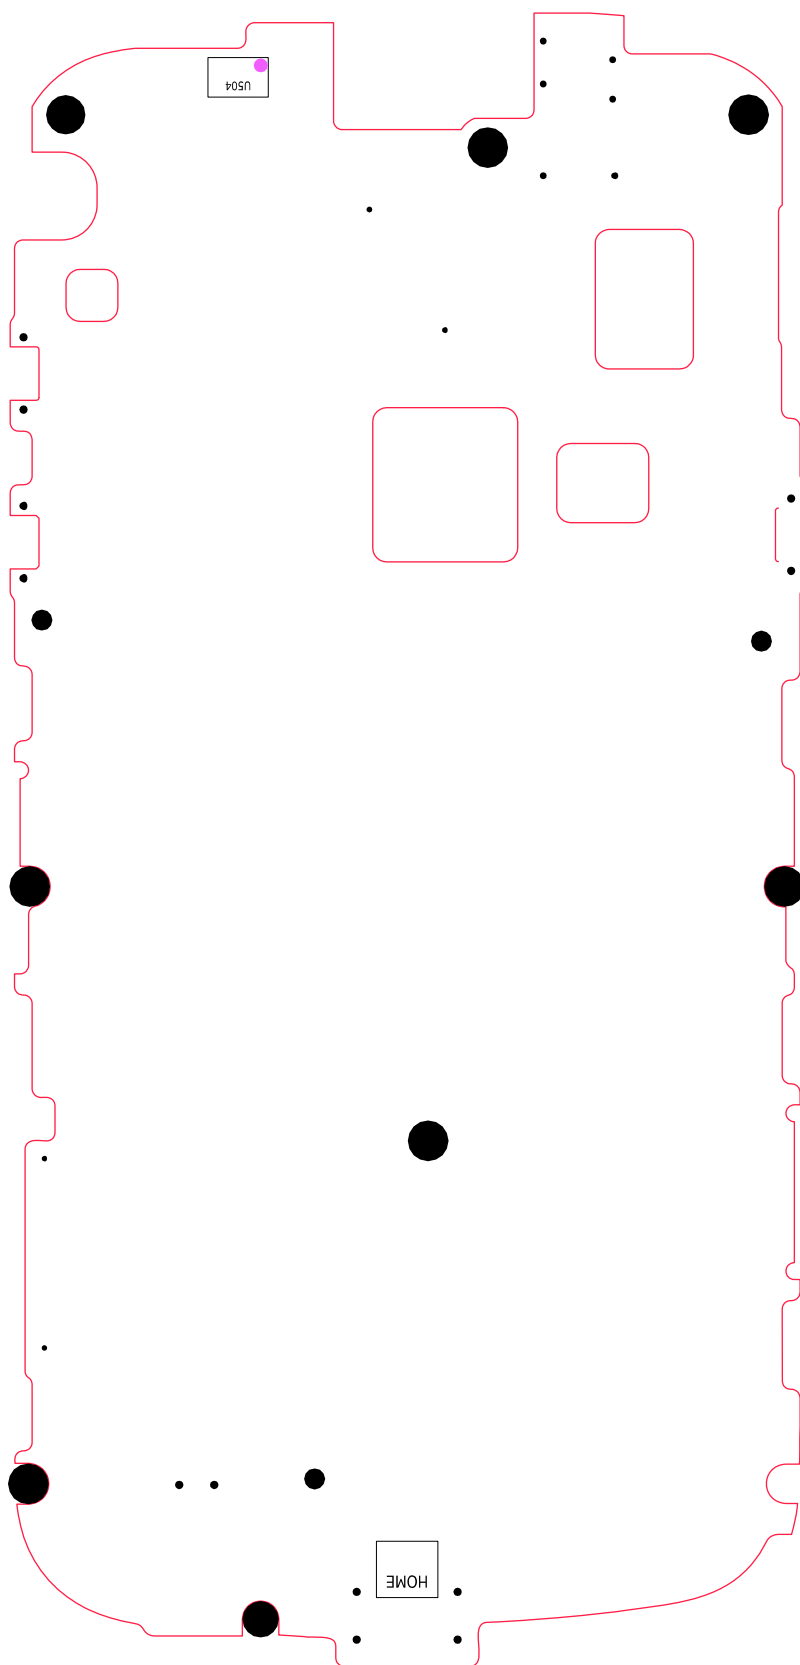





8-1. 开机

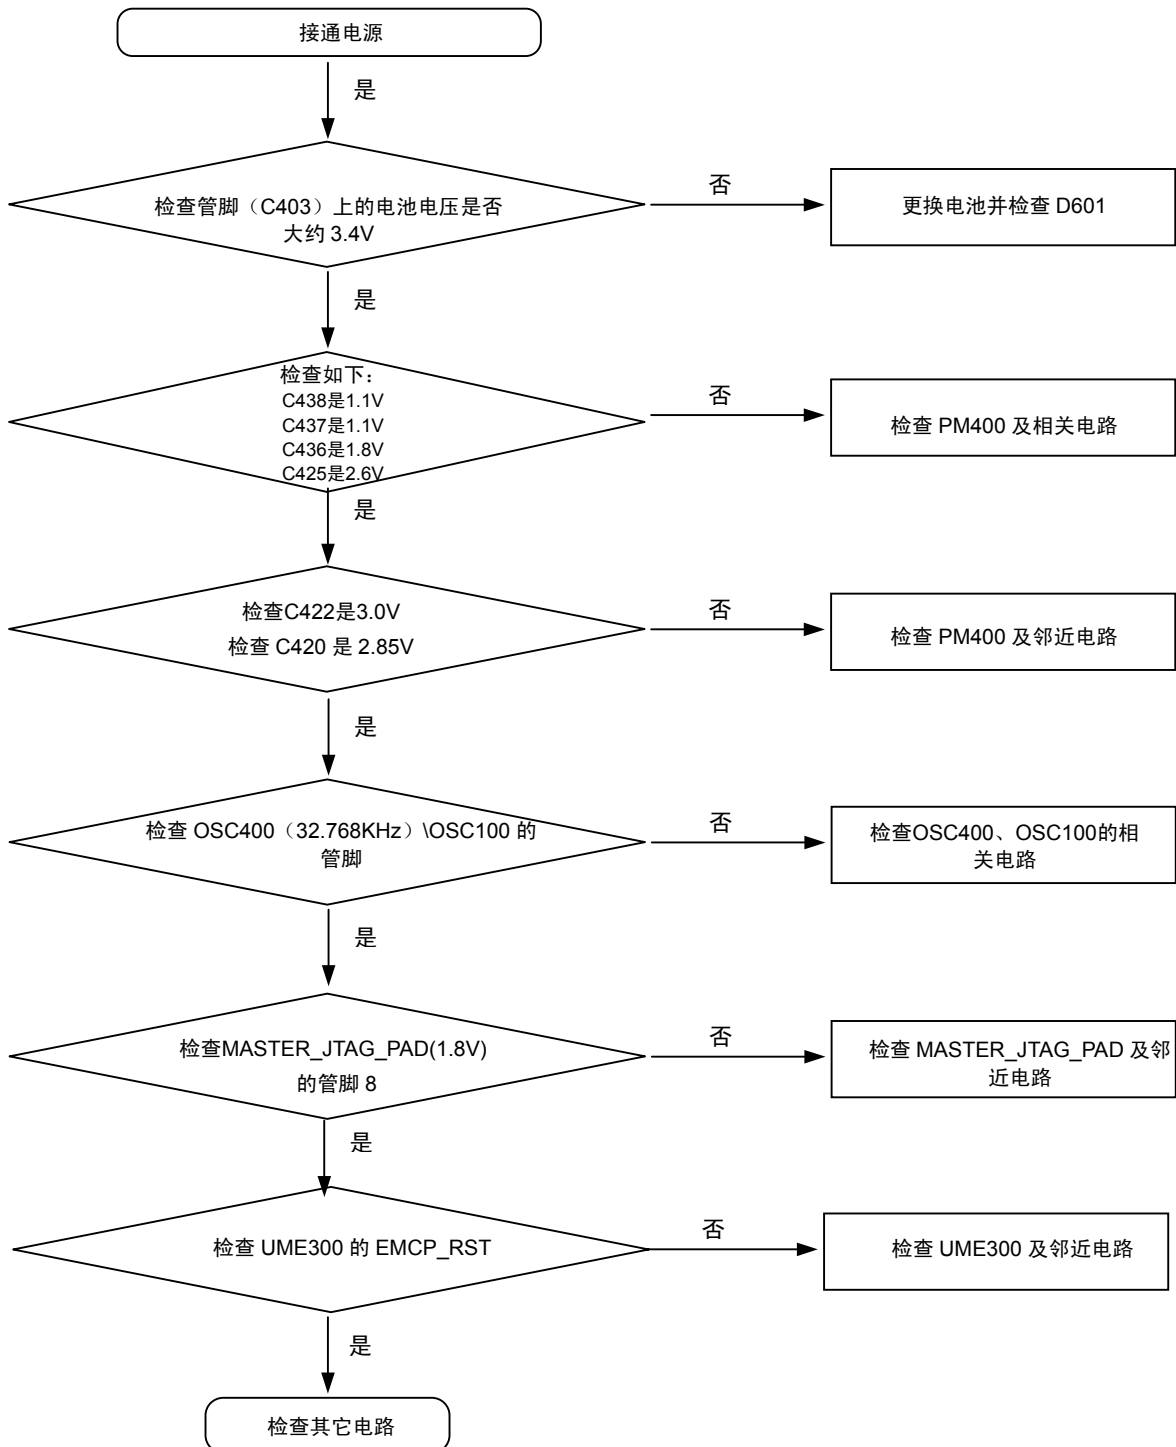

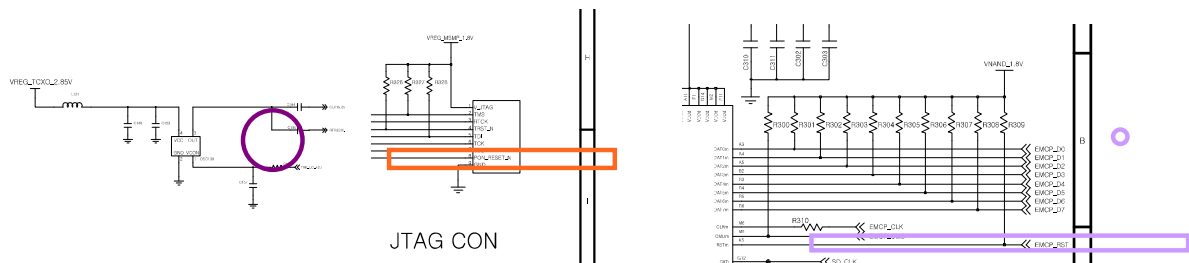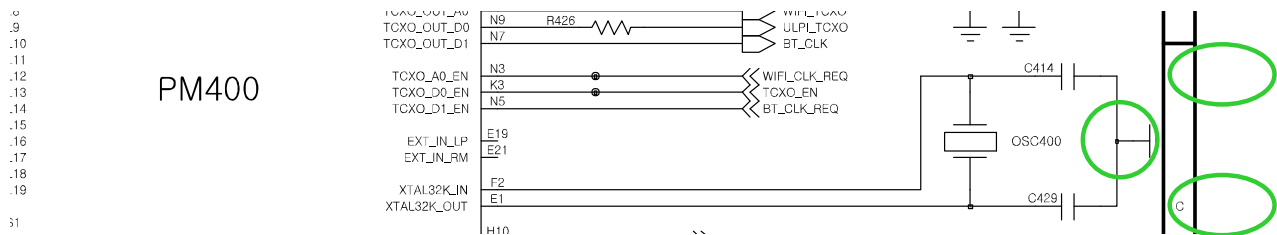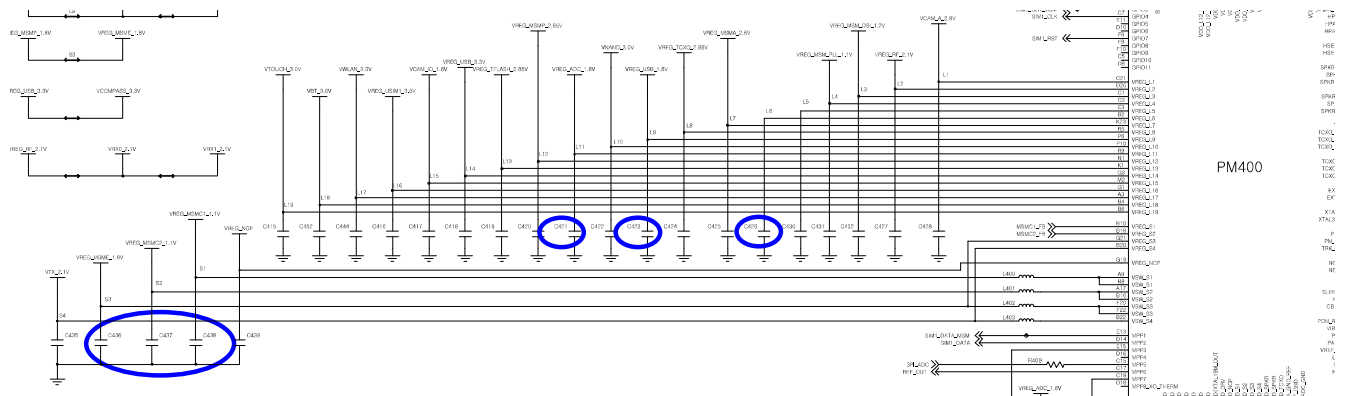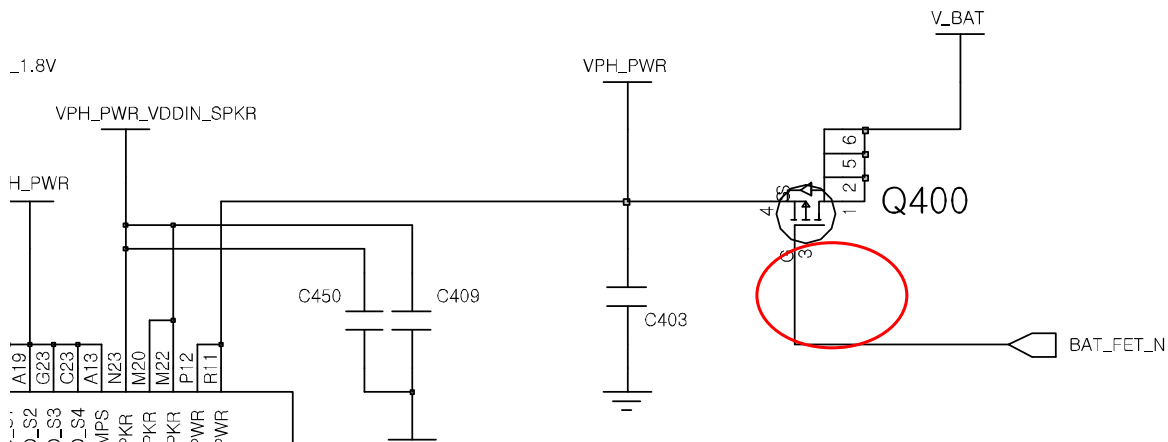



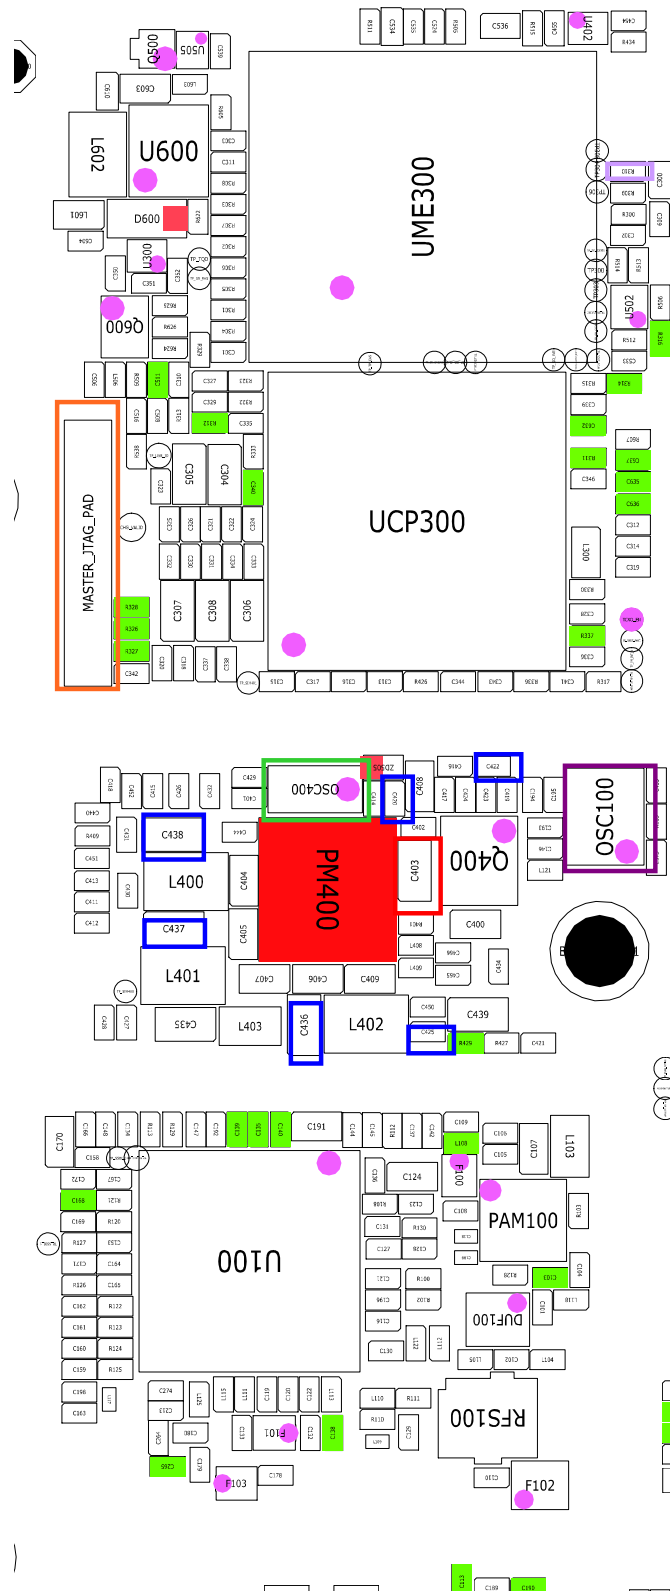


8-2.充电部分

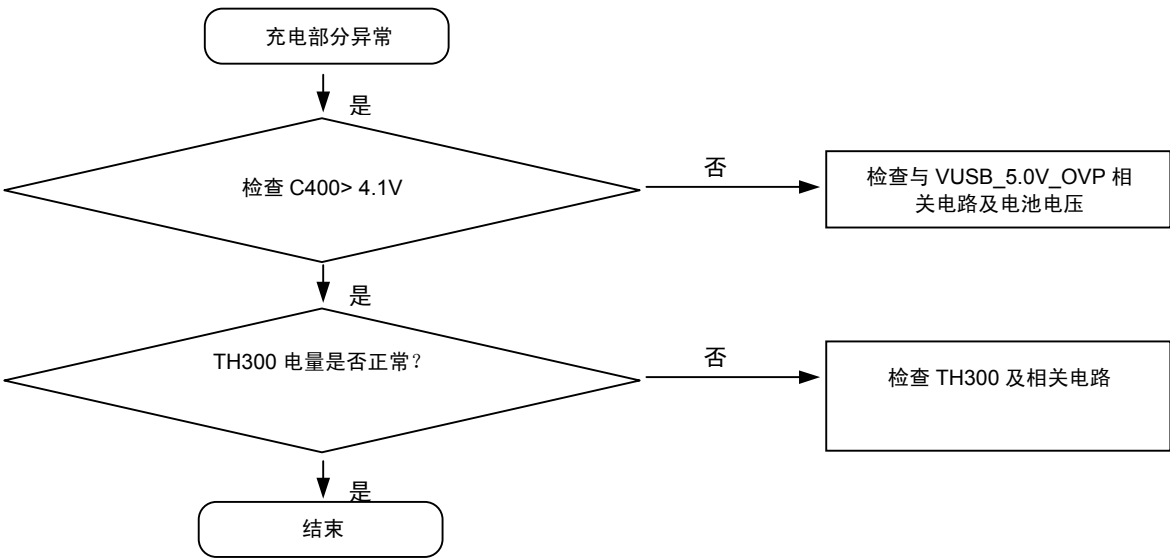


8-3.UIM 部分


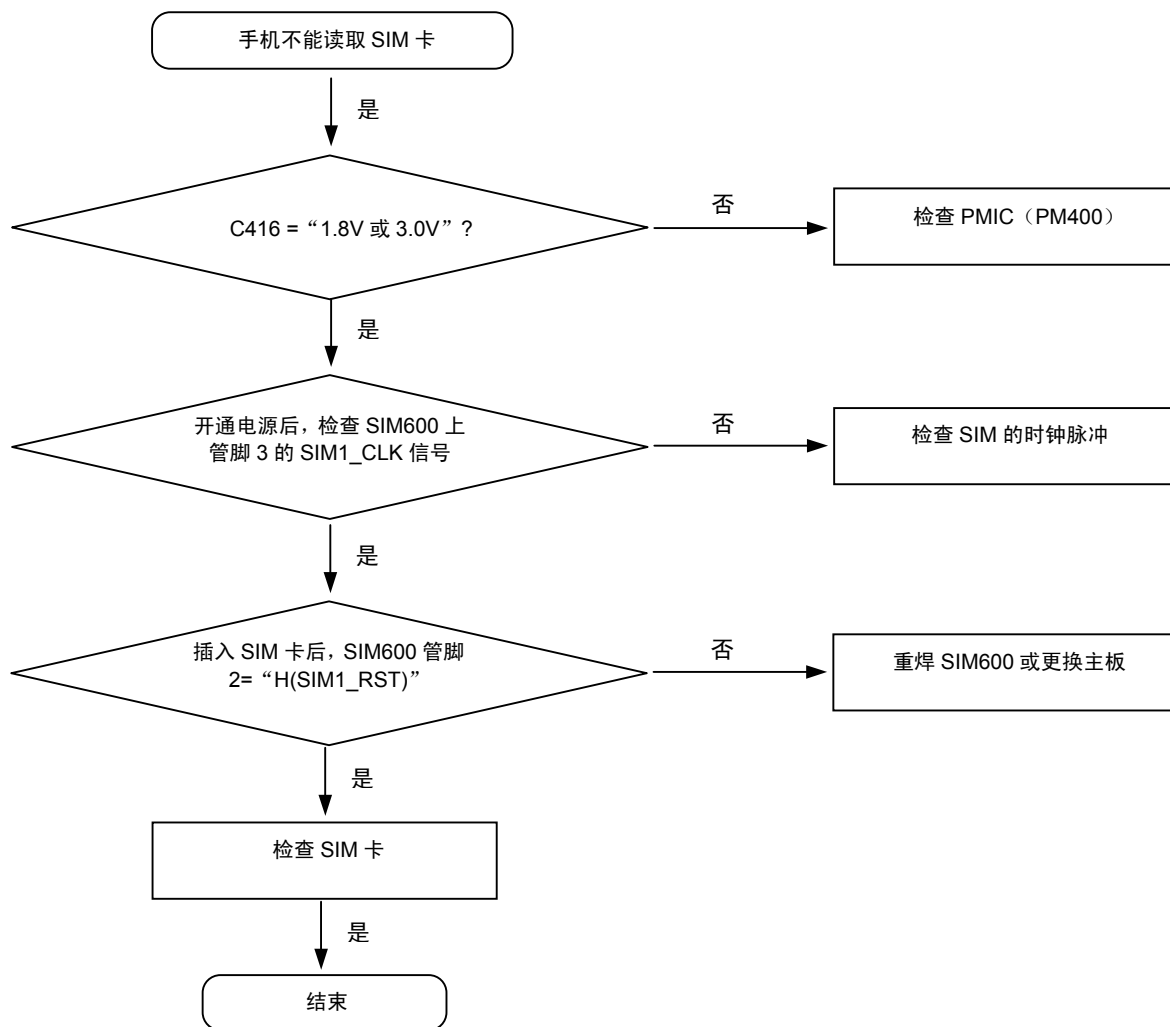


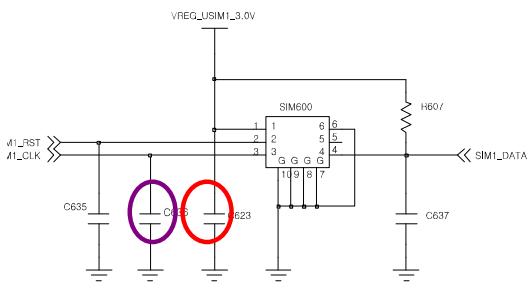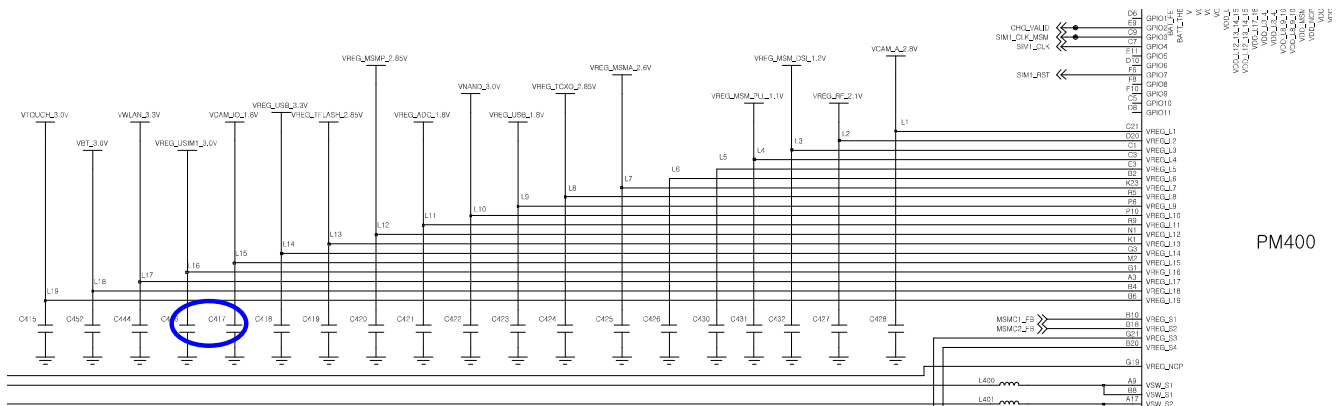


8-4. 扬声器部分

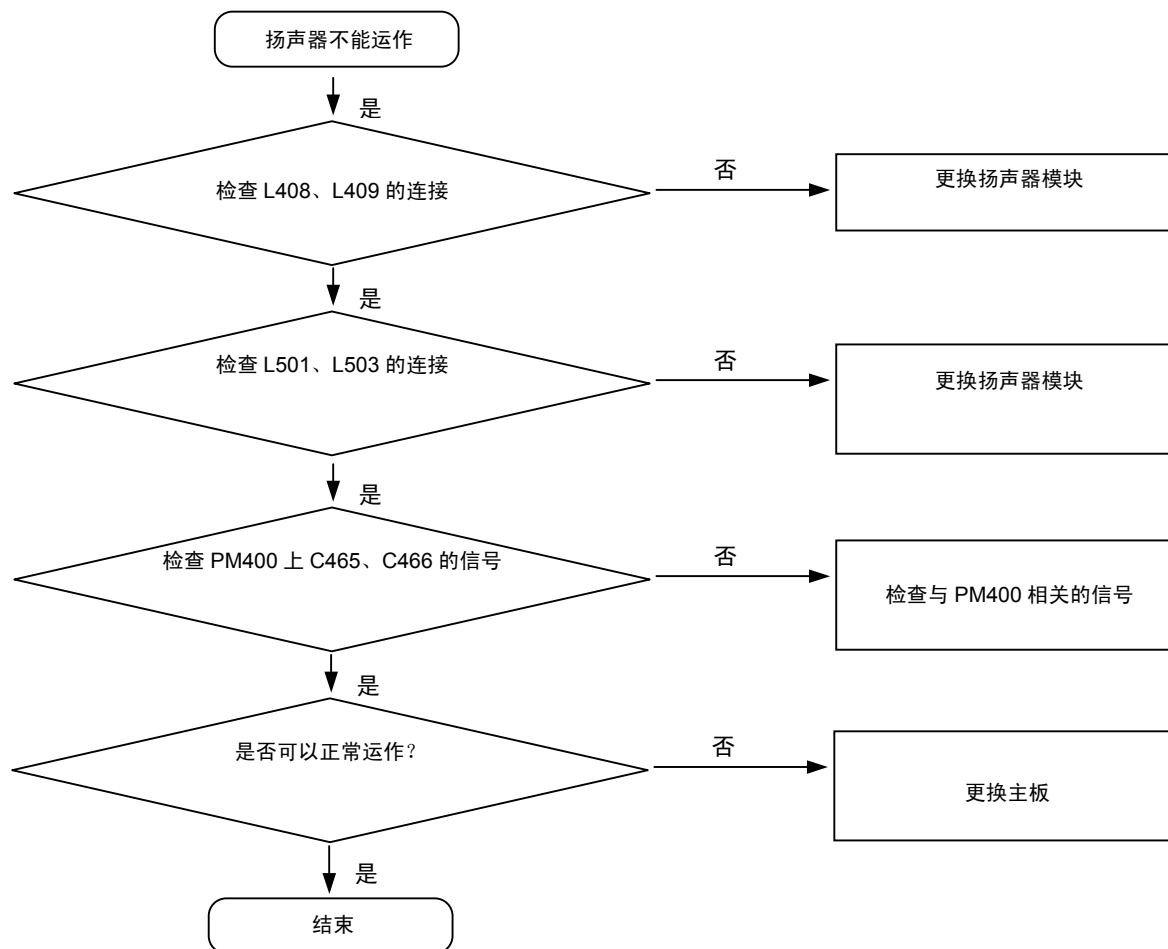


8-5.背景灯

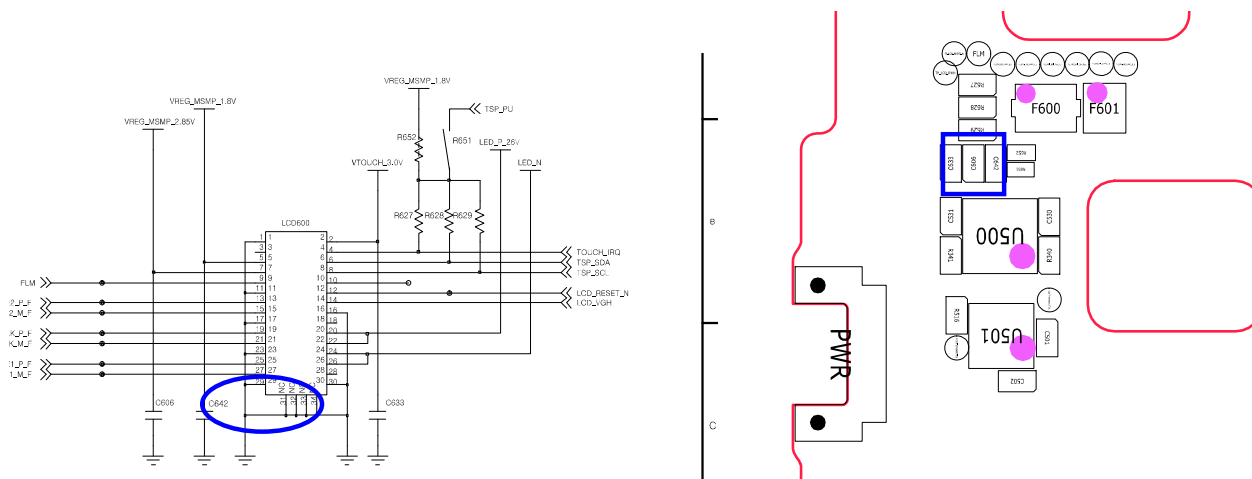
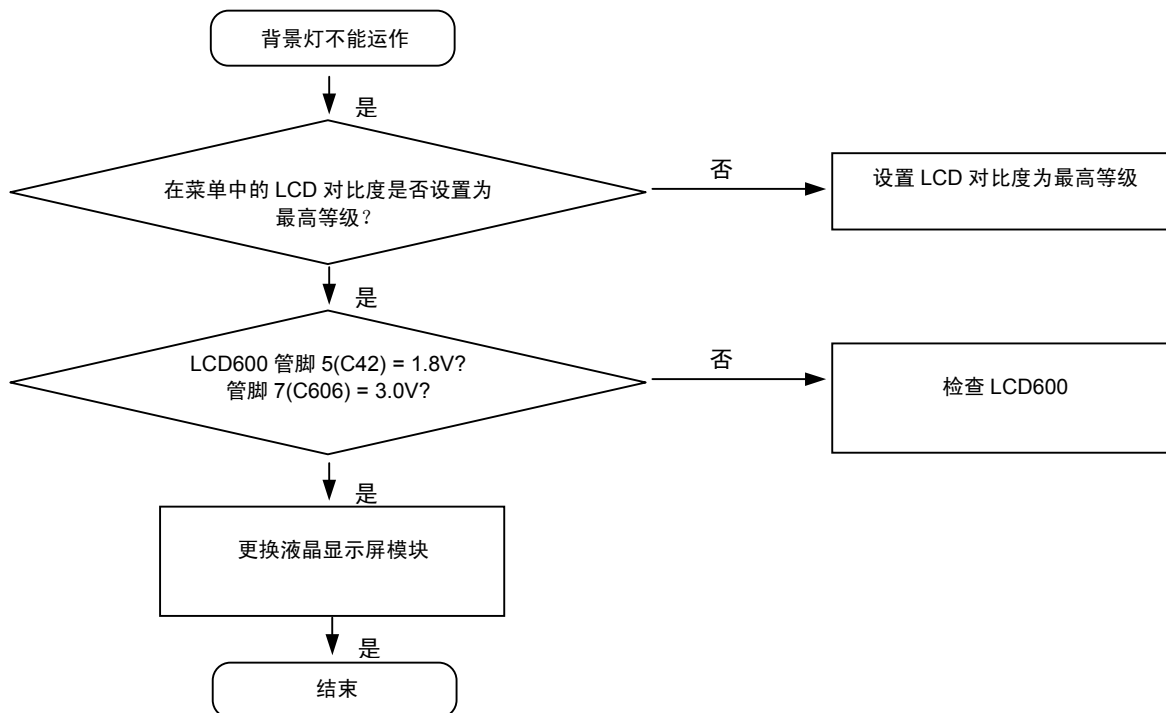


8-6.照相机部分(3M 摄像头)

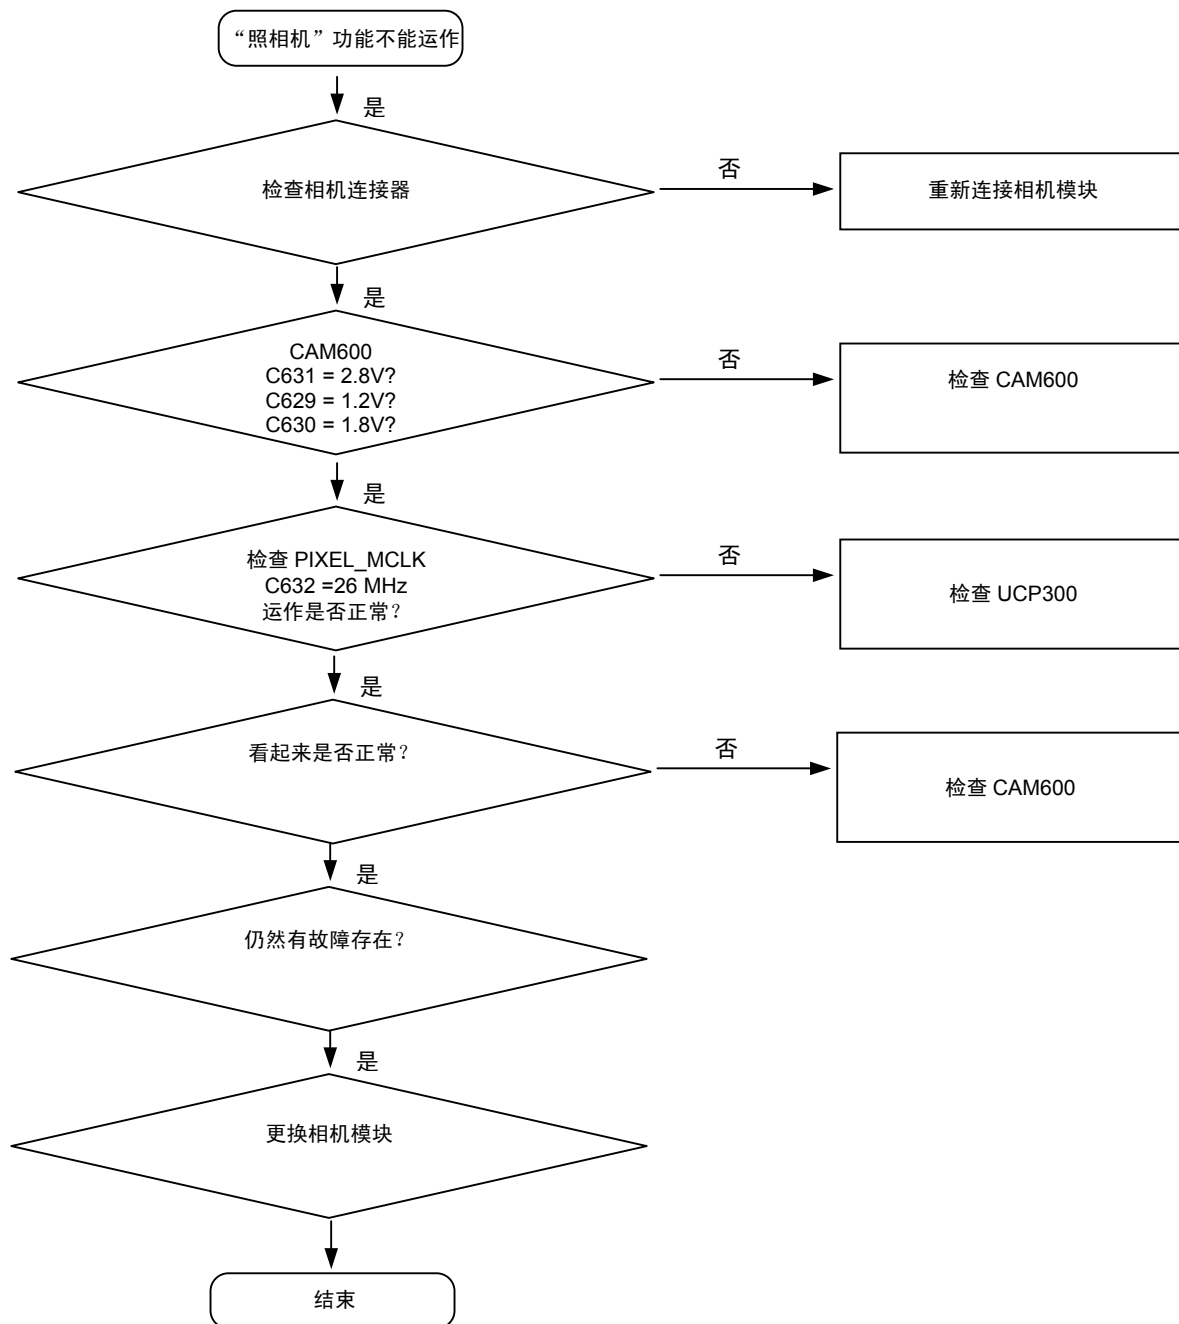


8-7.CDMA 接收器

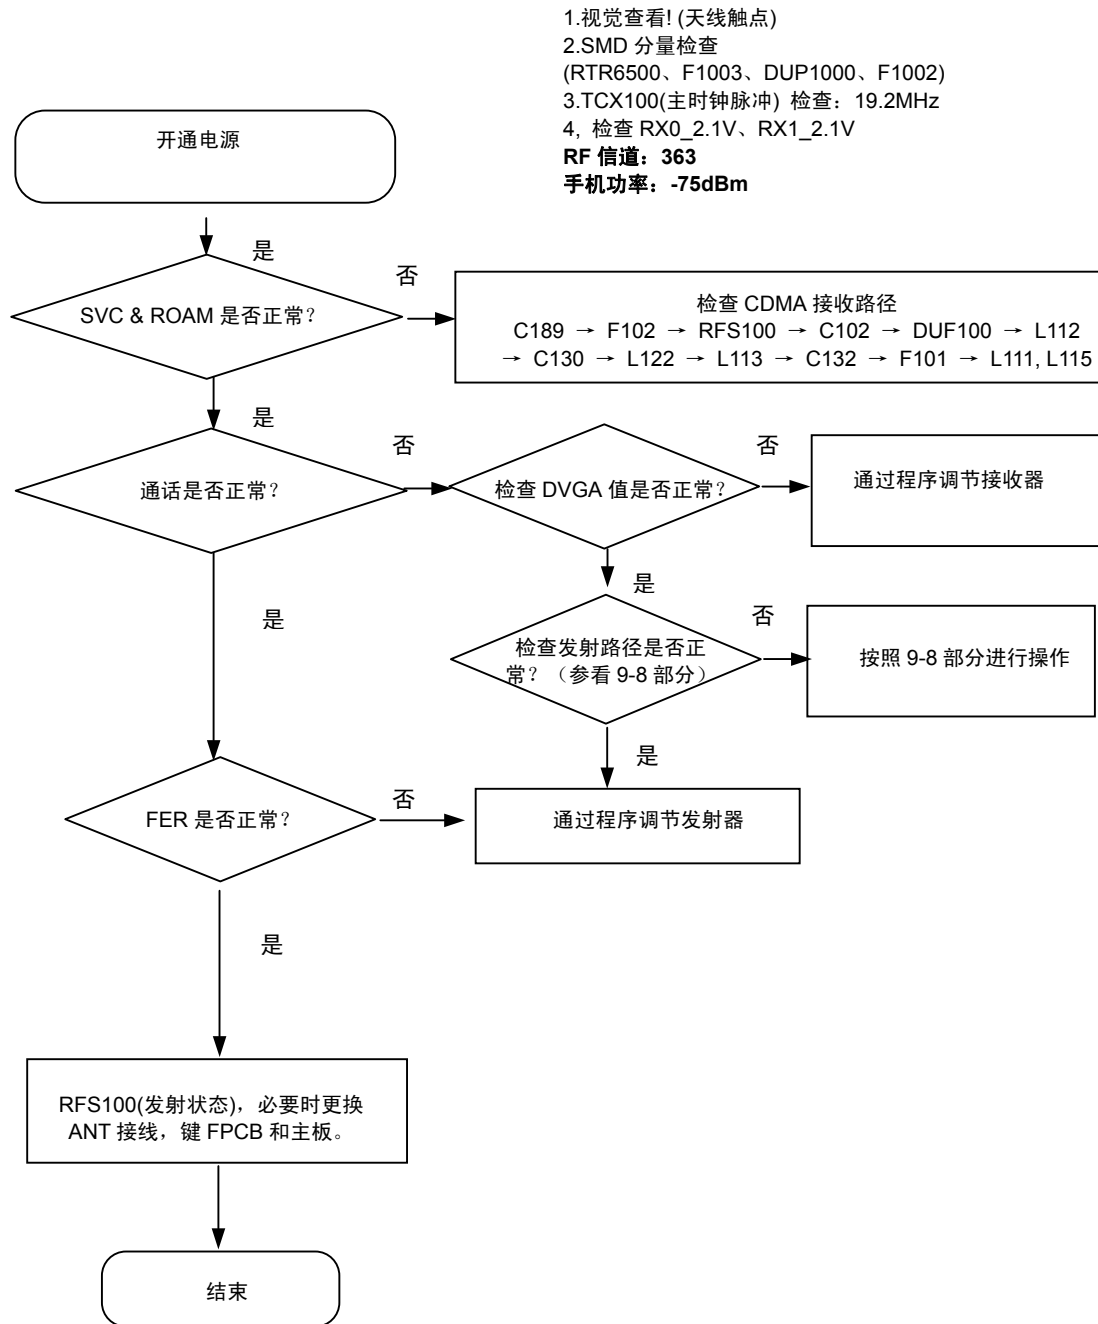


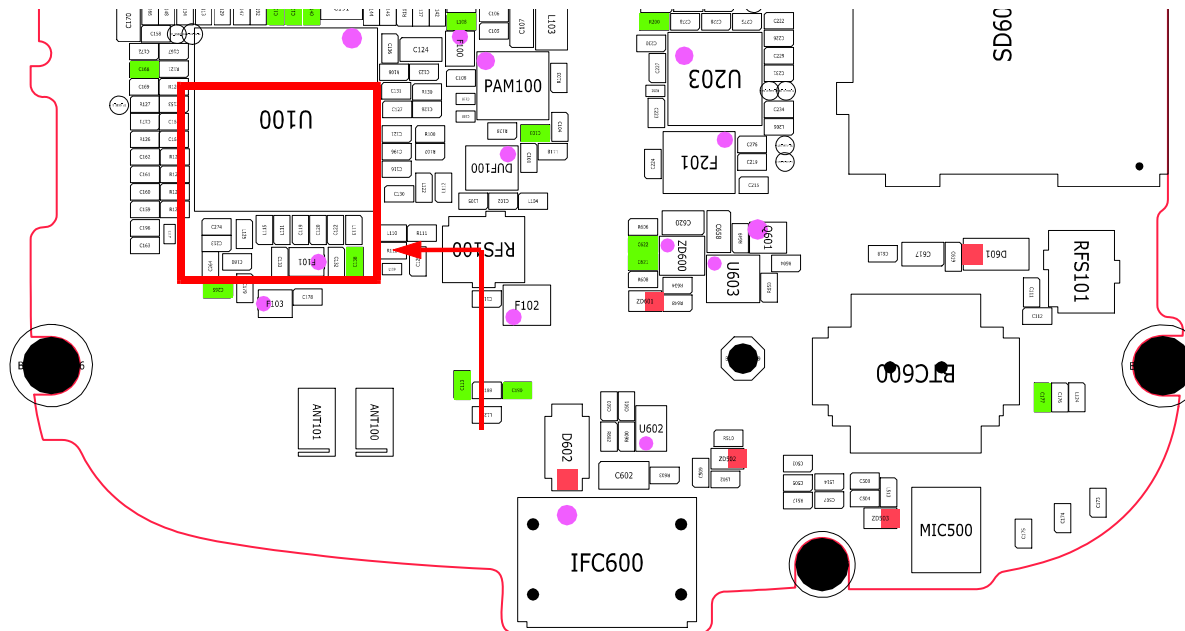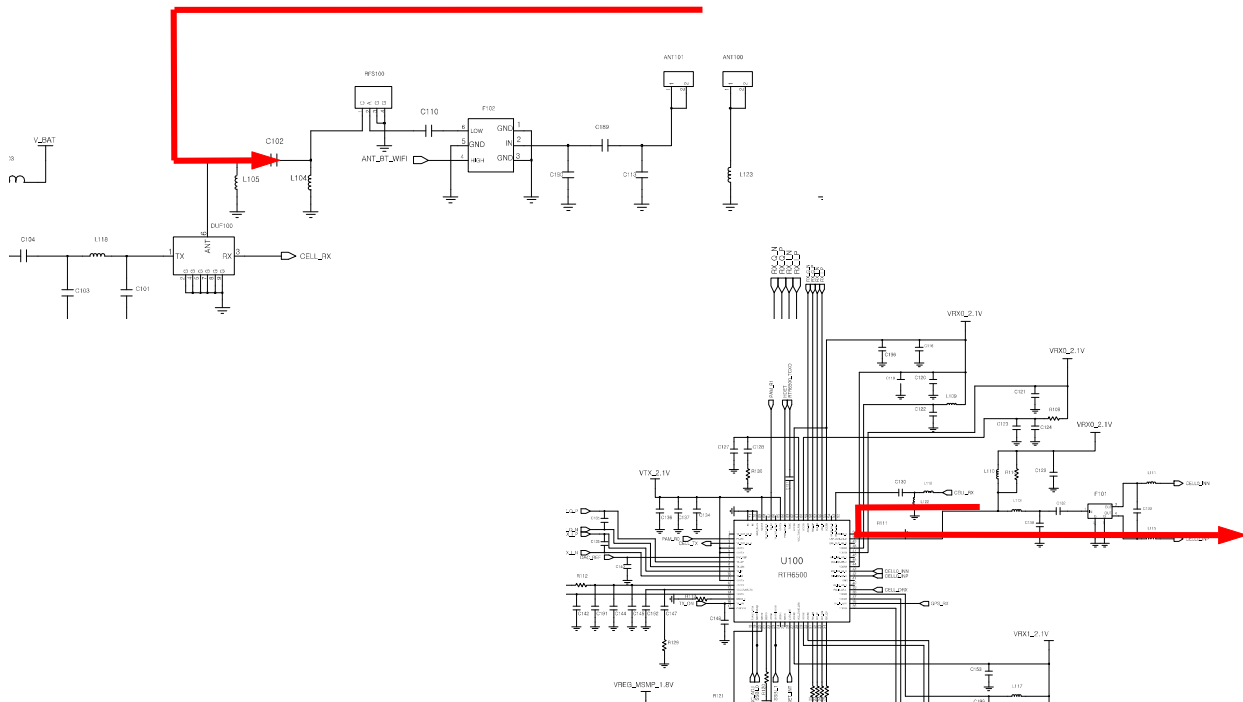


8-8. CDMA 发射器

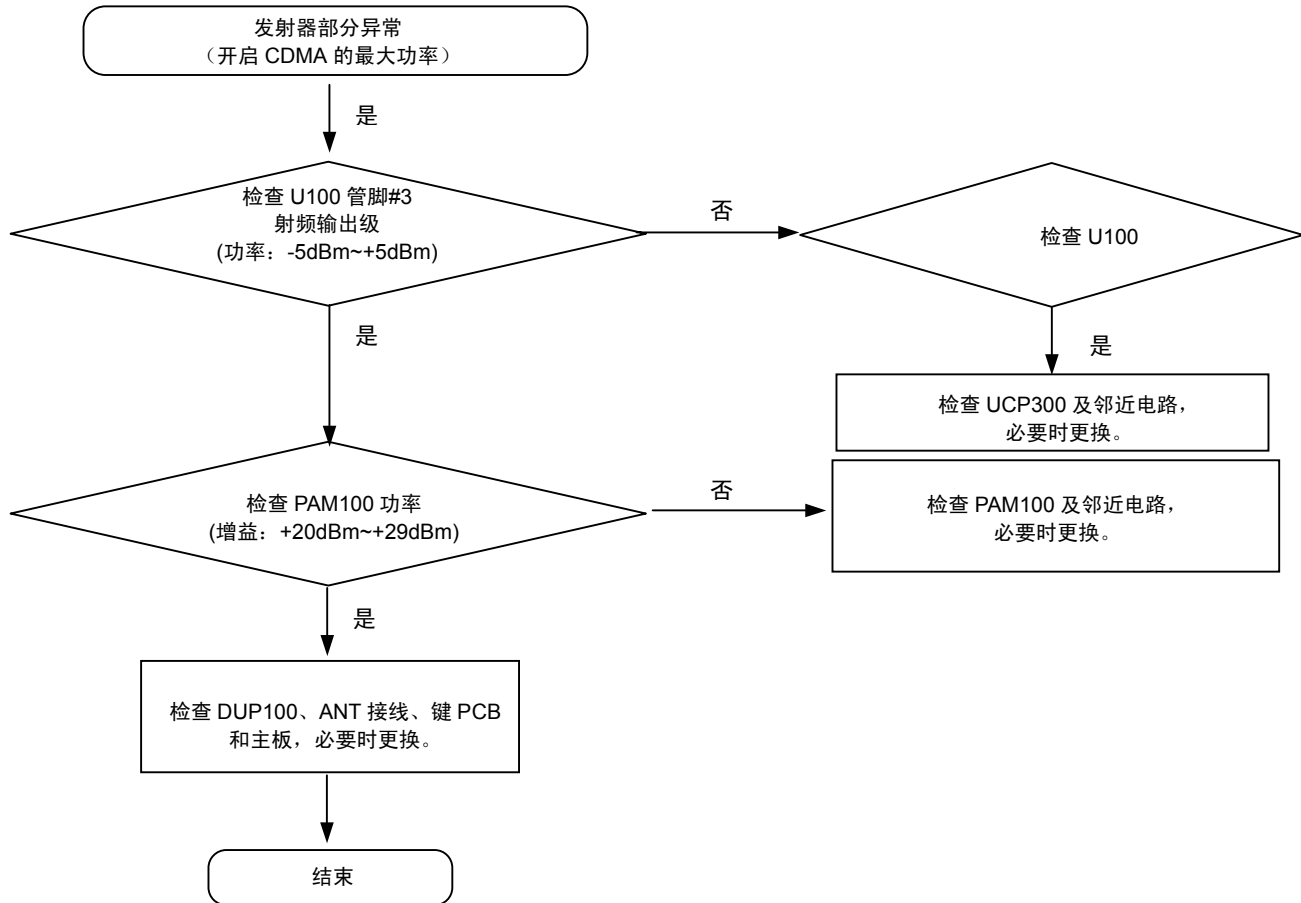


8-9 GPS 部分

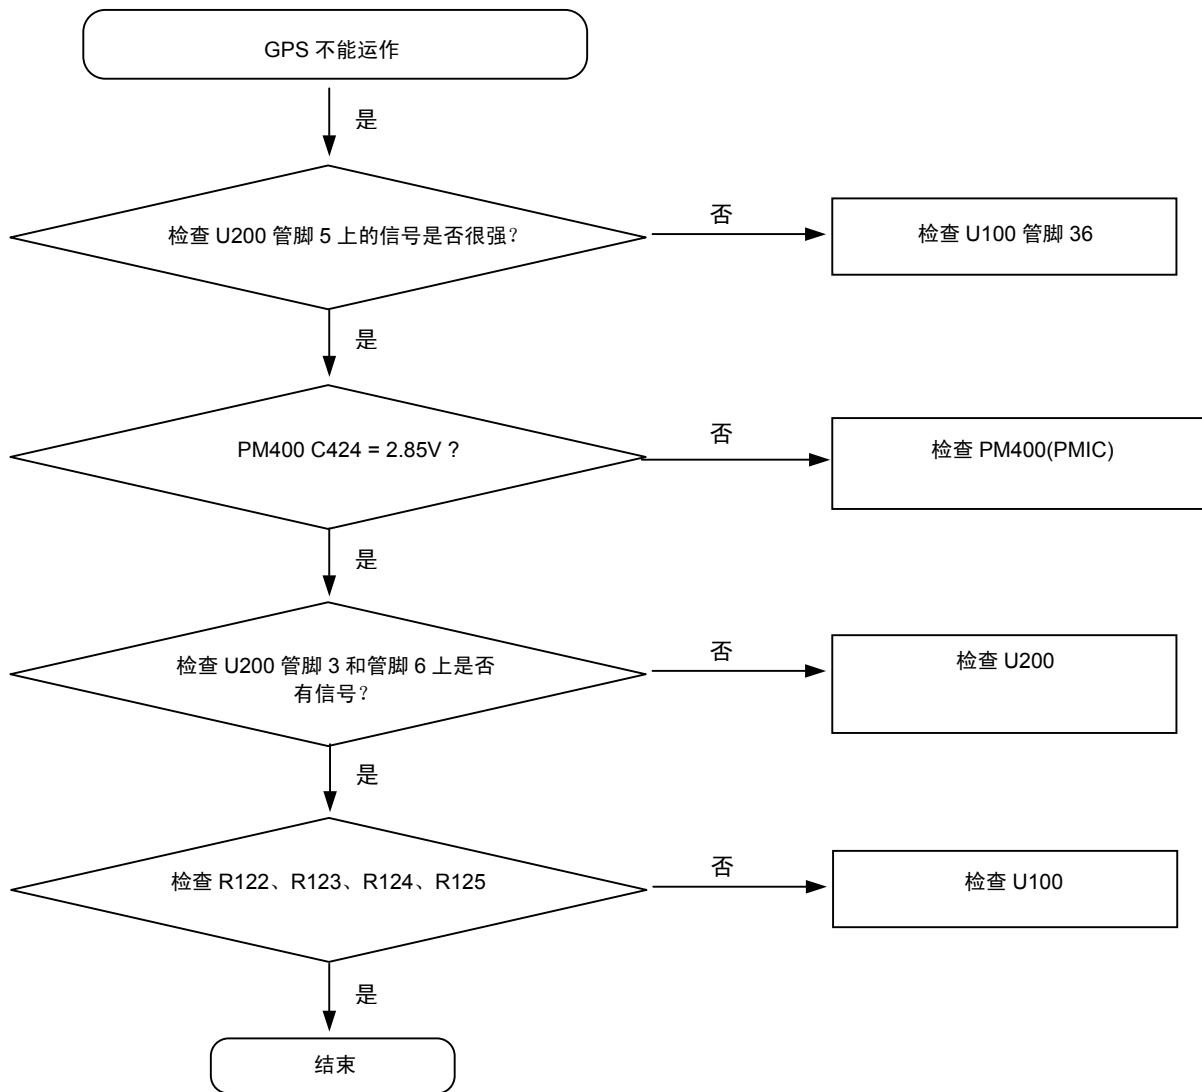

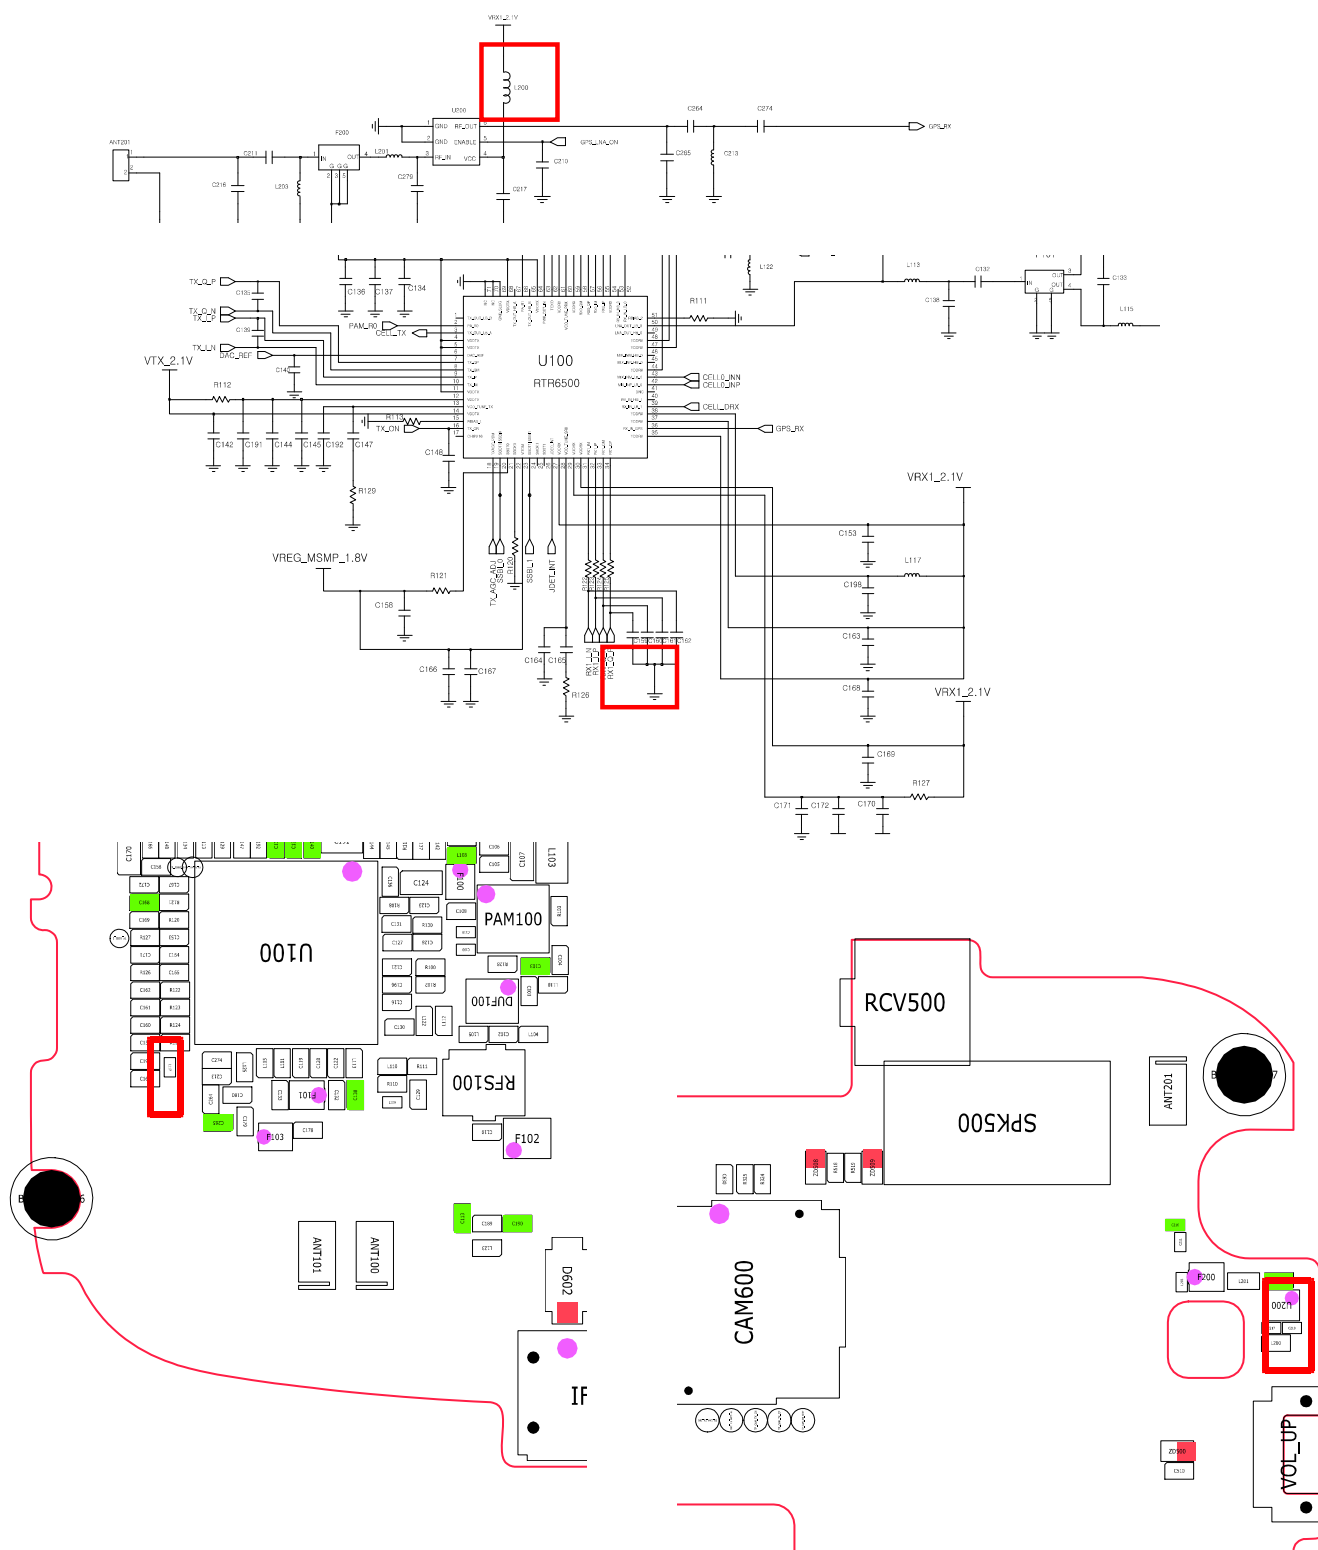

8-10.蓝牙/无线局域网

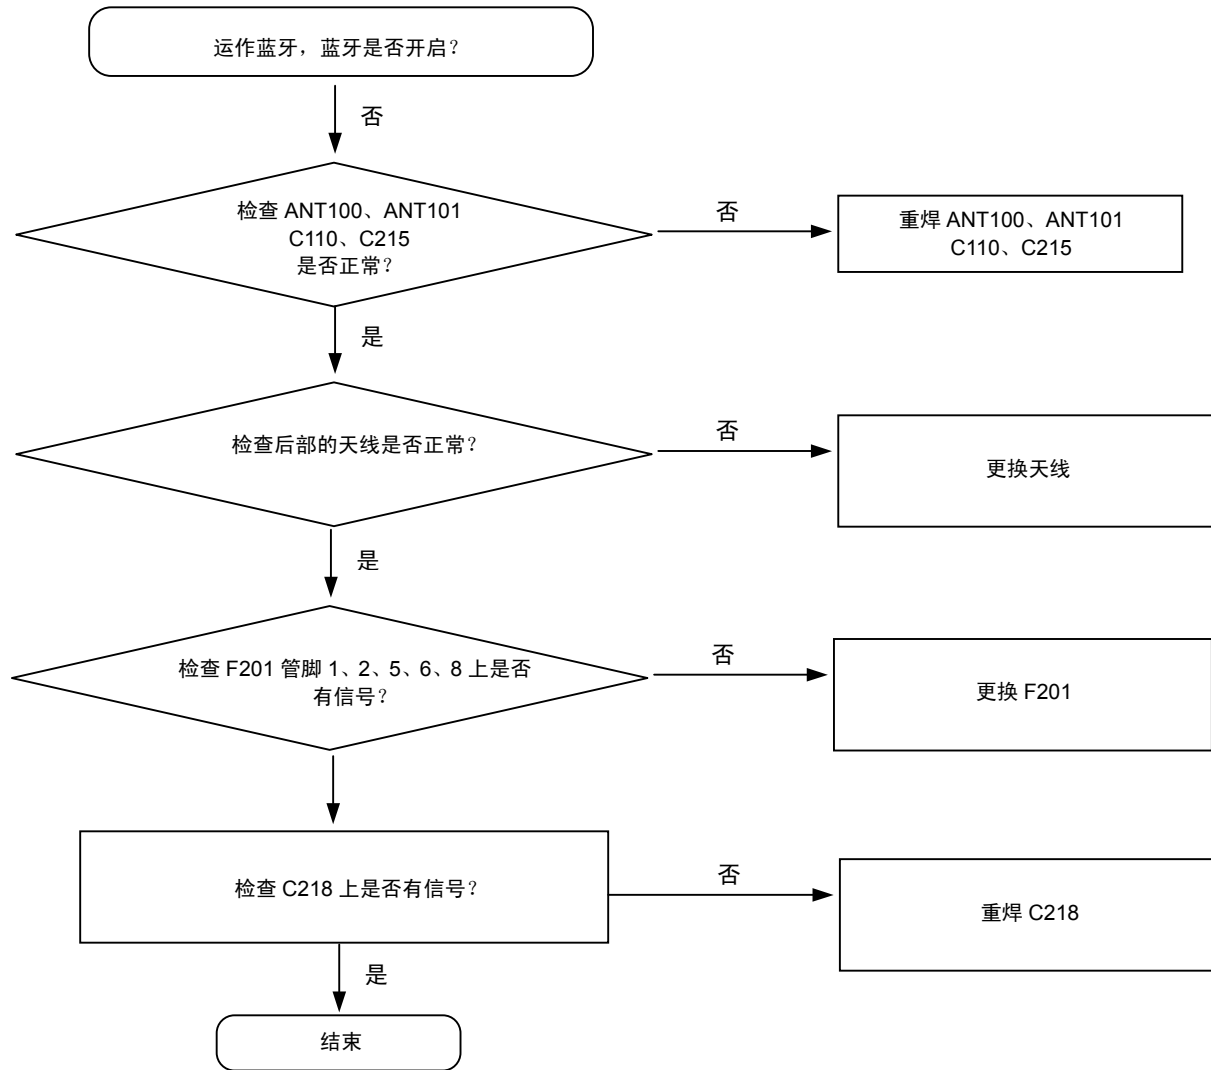



PM400

	1/2	3/4	5/6	7/8	9/10	11/12	13/14	15/16	17/18	19/20	21/22	23/24
A	○	○	○	○	○	○	○	○	○	○	○	○
B	○	○	○	○	○	○	○	○	○	○	○	○
C	○	○	●	○	○	○	○	○	○	○	○	○
D	○	○	●	●	●	○	○	●	●	○	○	○
E	○	○	○	○	○	●	○	○	○	●	●	○
F	○	○	○	●	●	○	○	○	○	○	○	○
G	○	○	○	○	○	○	○	○	○	○	○	○
H	○	○	○	○	○	○	○	○	○	○	○	○
K	○	○	○	○	○	○	○	○	○	○	○	○
M	○	○	○	○	○	○	○	●	○	○	○	○
N	○	○	○	○	○	○	○	●	○	○	●	○
P	○	○	○	○	○	○	○	○	○	●	○	○
R	○	○	○	○	○	○	●	○	●	○	○	○

UME300

	1	2	3	4	5	6	7	8	9	10	11	12	13	14
A	●	●	○	○	○	●	●	○	○	○	○	○	●	●
B	●	○	○	○	○	○	○	○	○	○	○	○	○	●
C	○	○	○	○	●	○	○	○	○	○	○	○	○	○
D	○	○	○									○	○	○
E	○	○	○		●	○	○	●	●	●		○	○	○
F	○	○	○		○					●		○	○	○
G	○	○	○		○					●		○	○	○
H	○	○	○		●					○		○	○	○
J	○	○	○		●					○		○	○	○
K	○	○	○		○	●	●	○	○	●		○	○	○
L	○	○	○									○	○	○
M	○	○	○	○	○	○	○	○	○	○	○	○	○	○
N	●	○	○	○	○	○	○	○	○	○	○	○	○	●
P	●	●	○	○	○	○	●	○	○	●	○	○	●	●