



## 9. 故障排除流程图

### 9-1. 开机


#### 9-1-1. PDA 部分

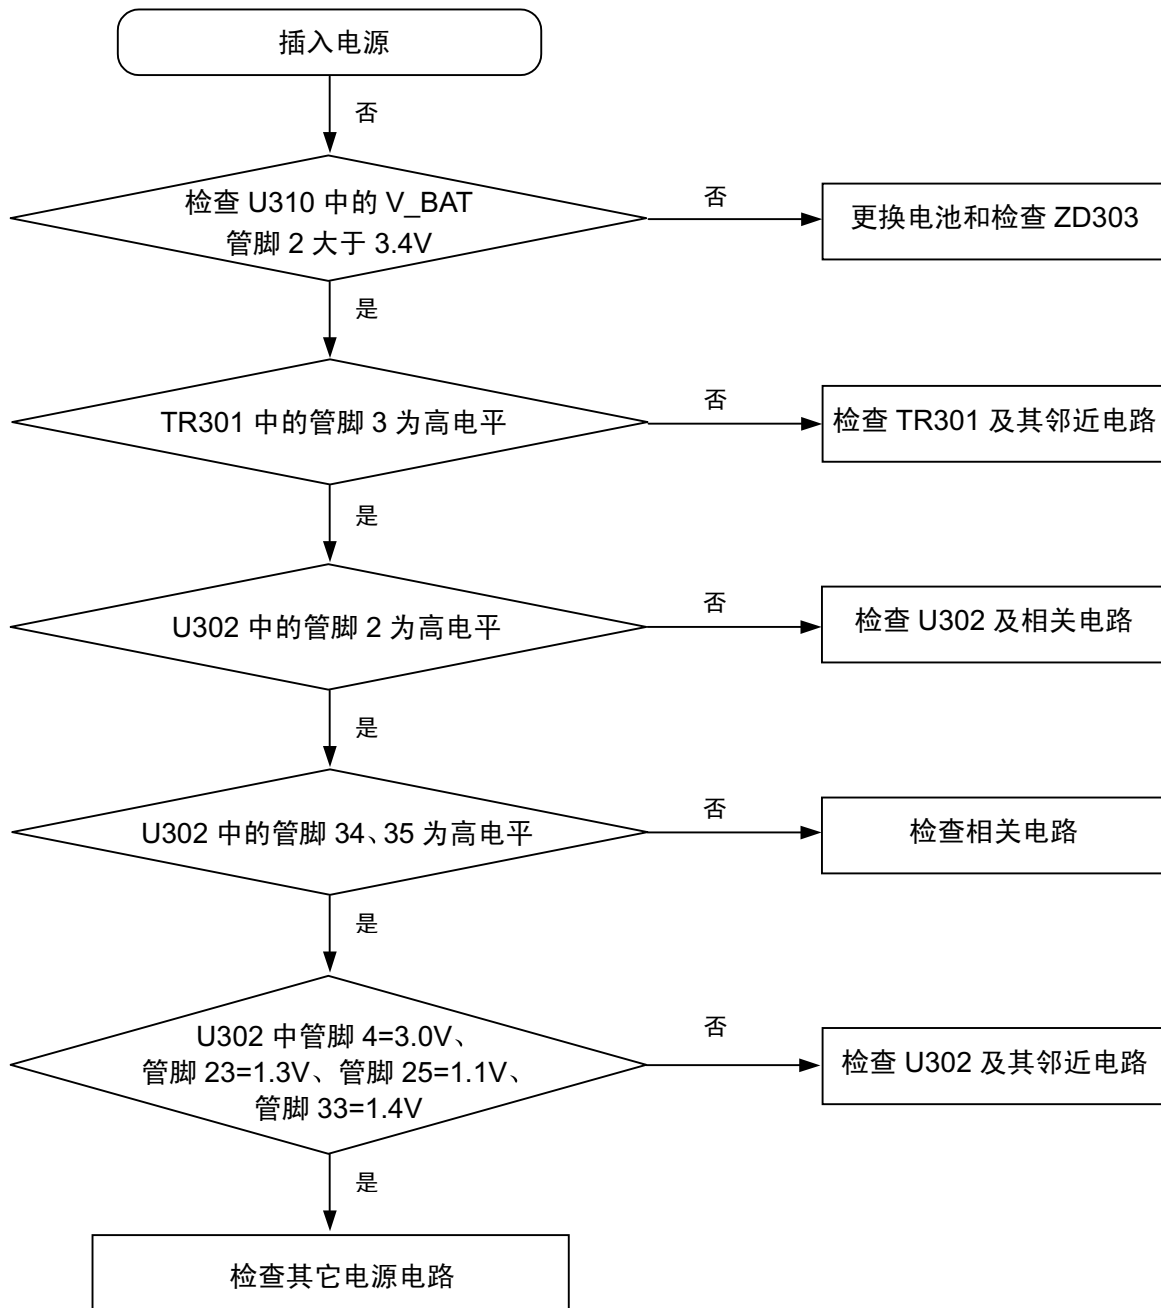





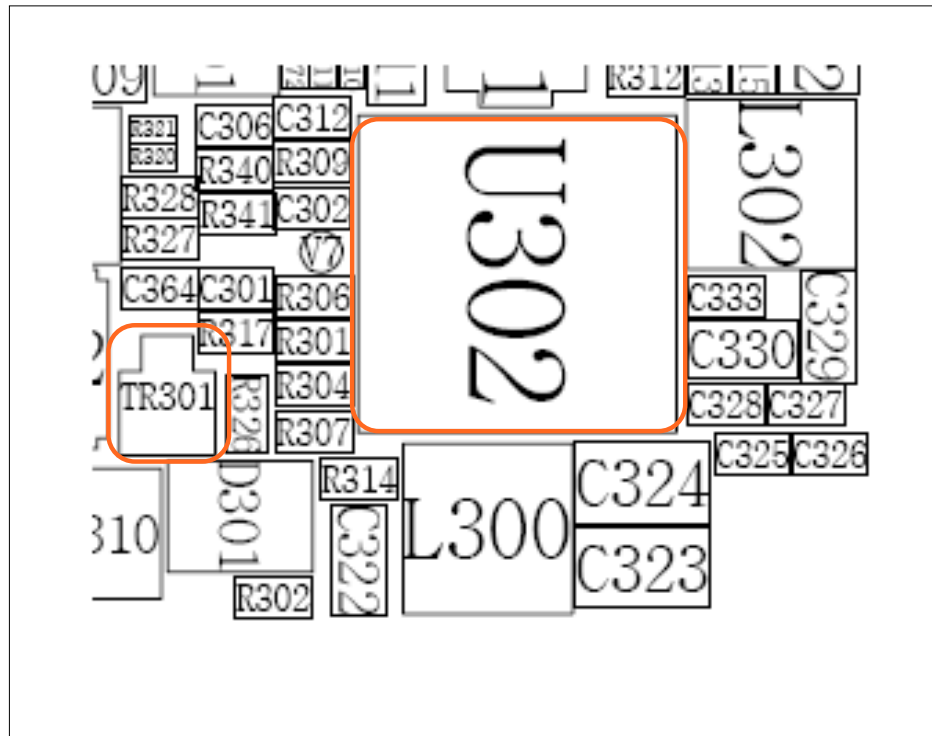



## 9-1-2. 手机部分

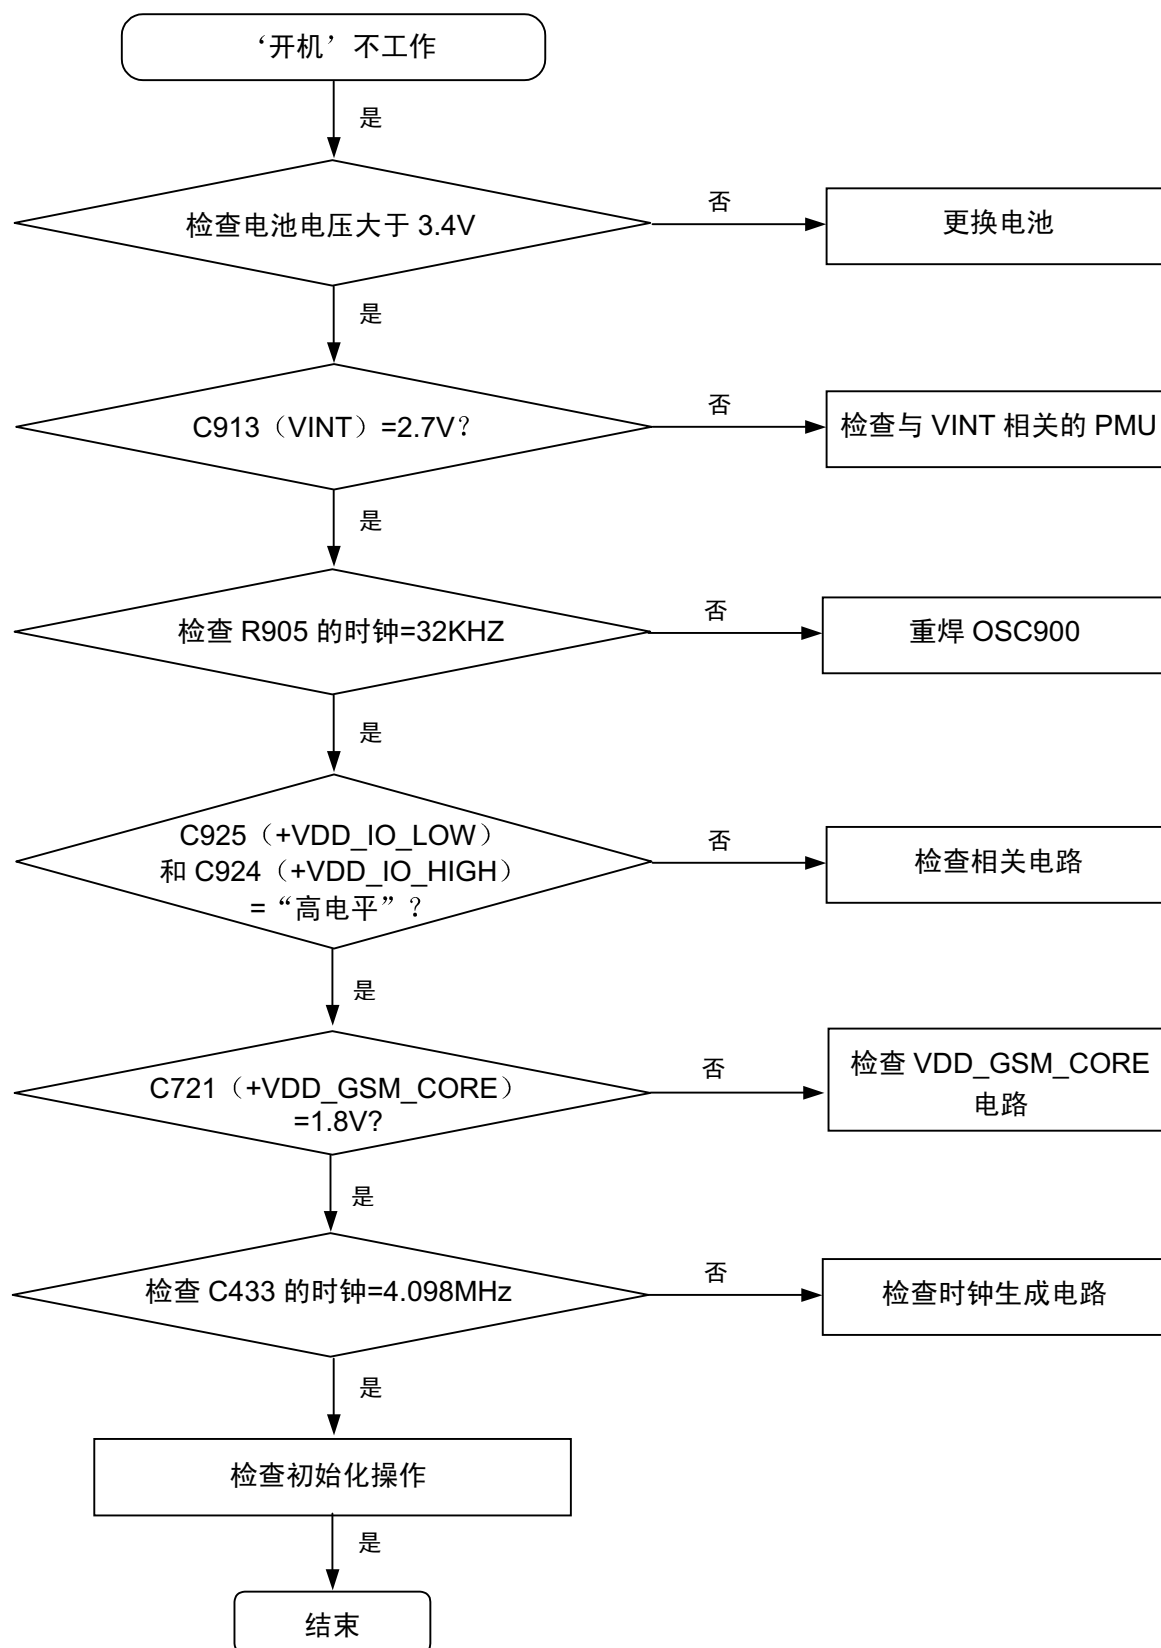

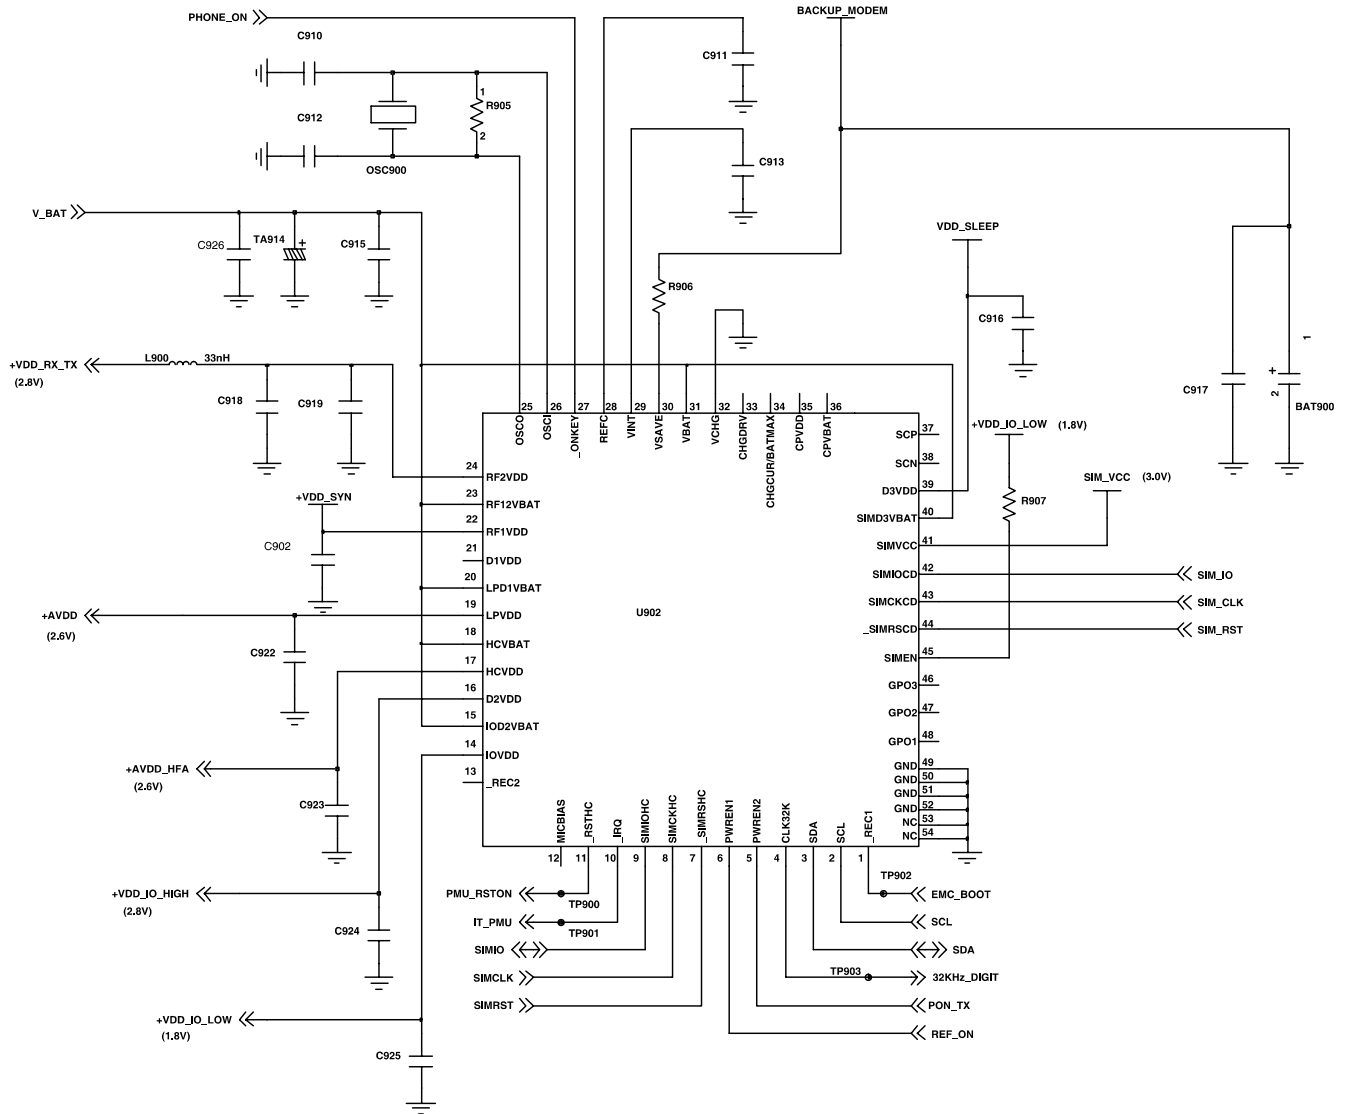


## 9-2. 初始化

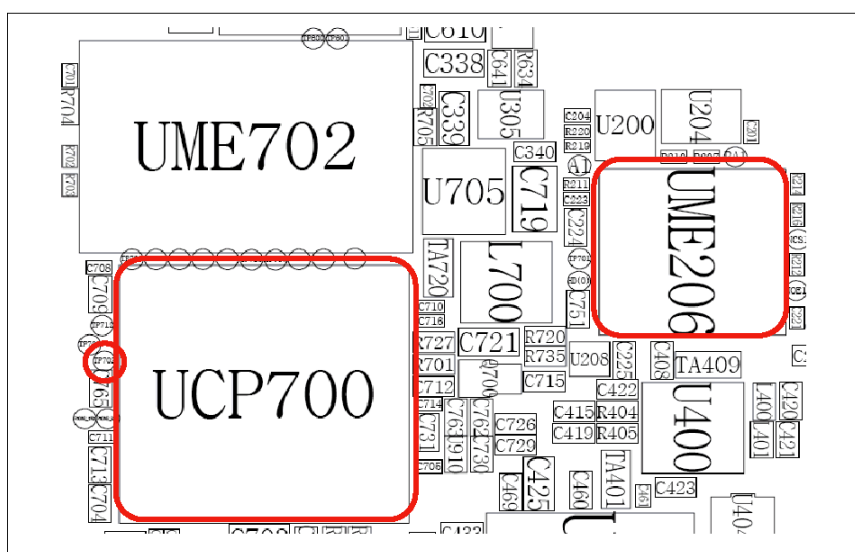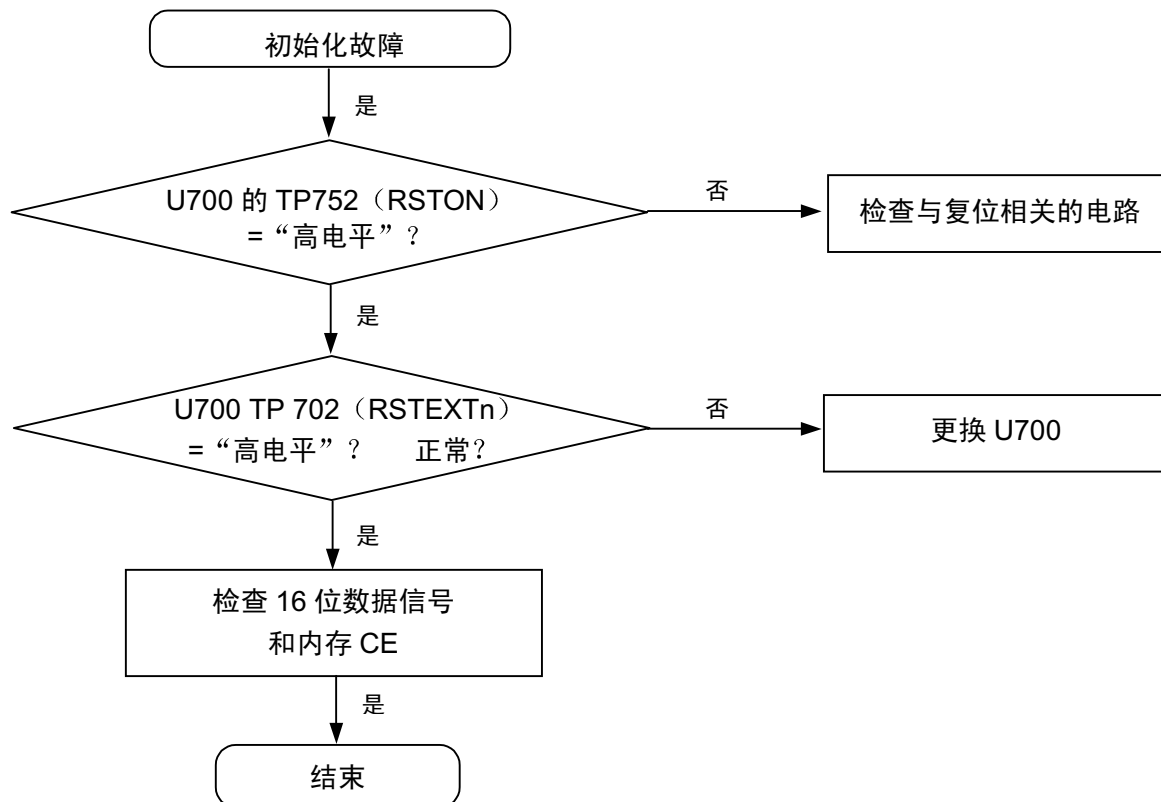

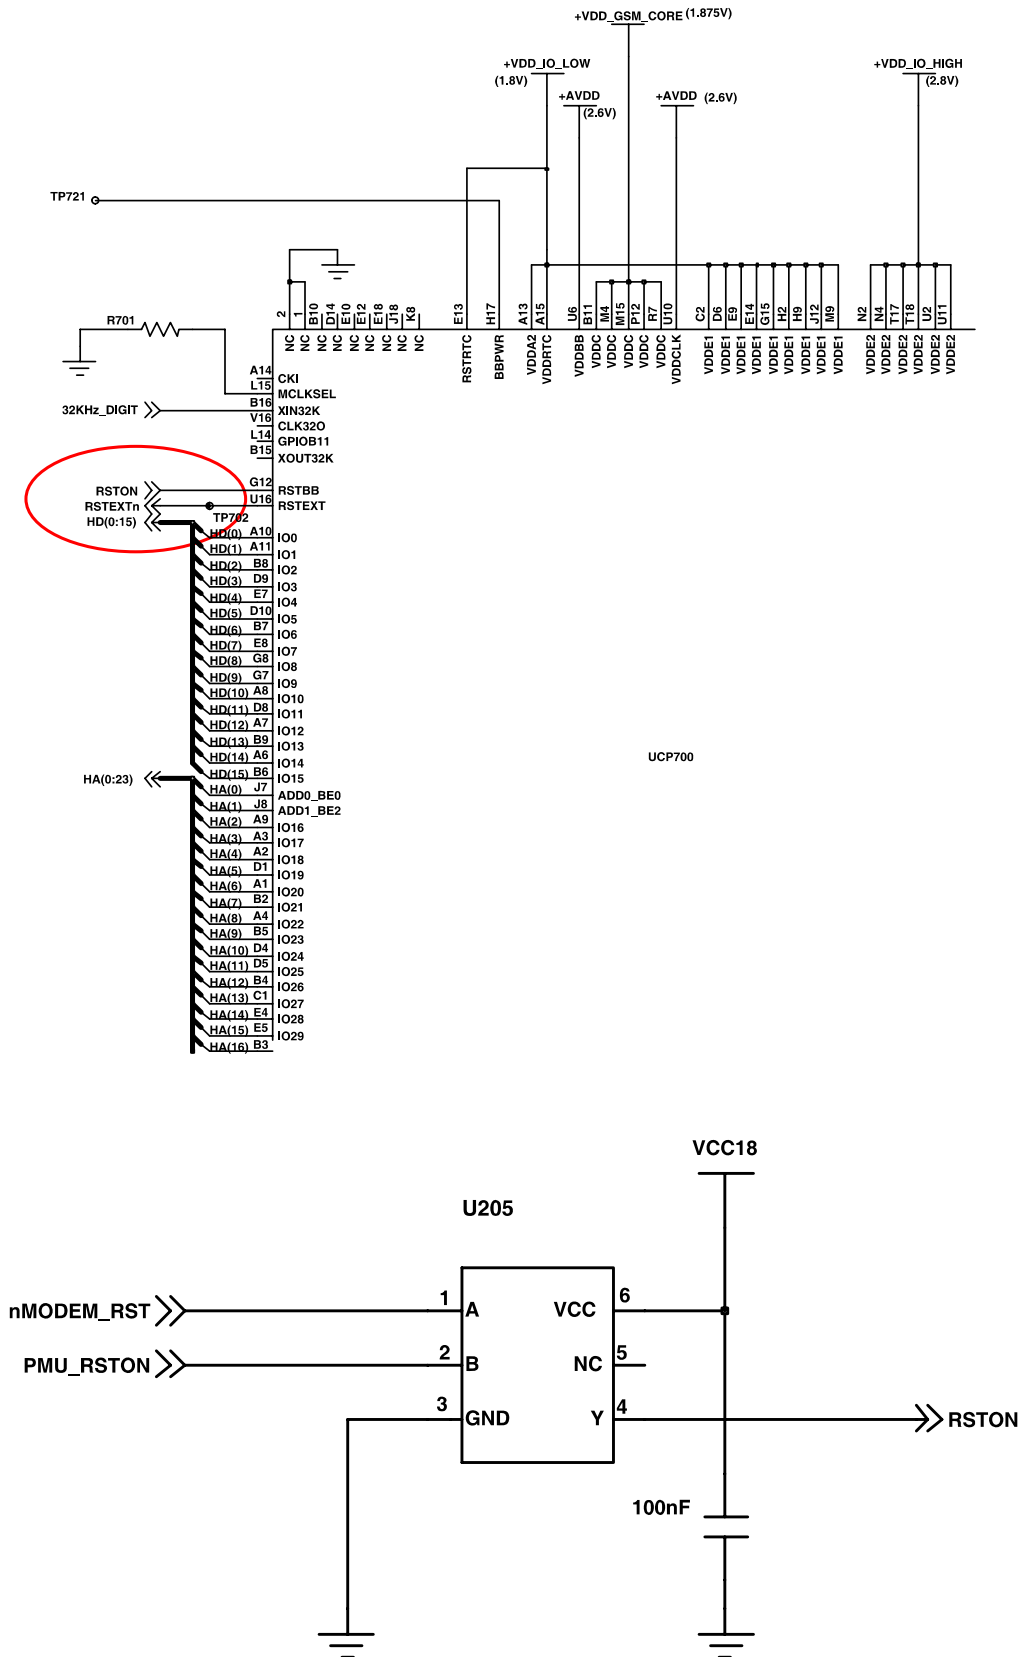


## 9-3. 充电部分


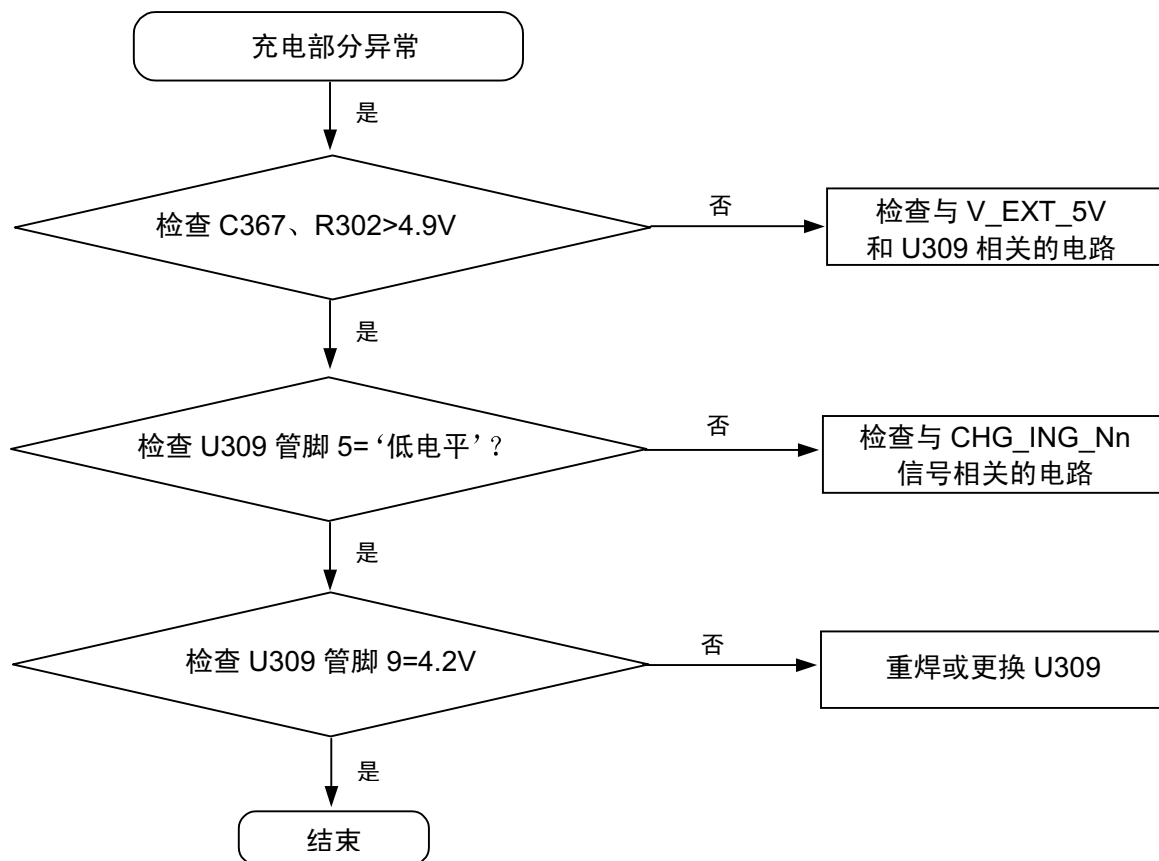








## 9-4. Sim 部分

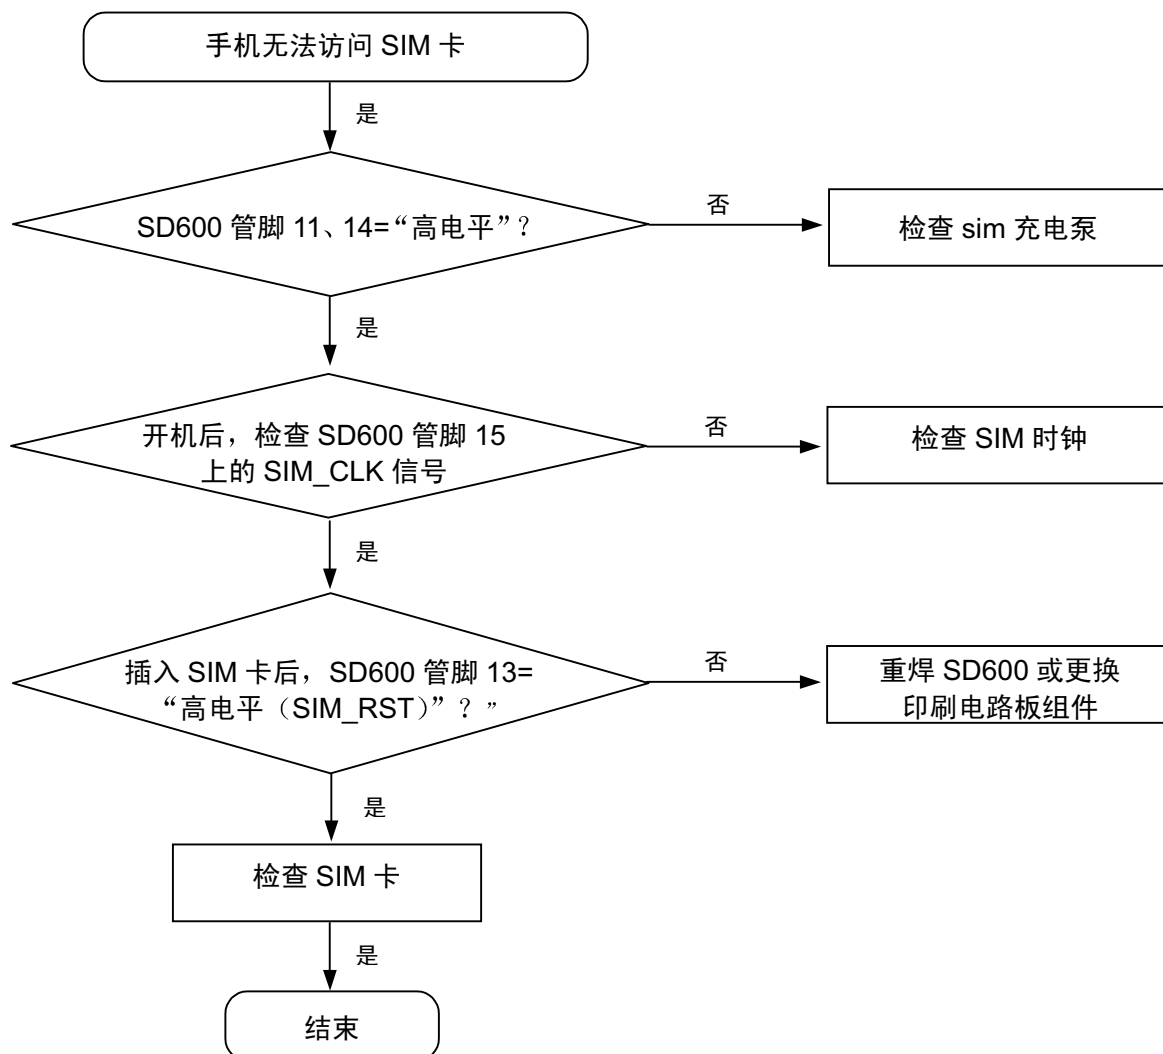

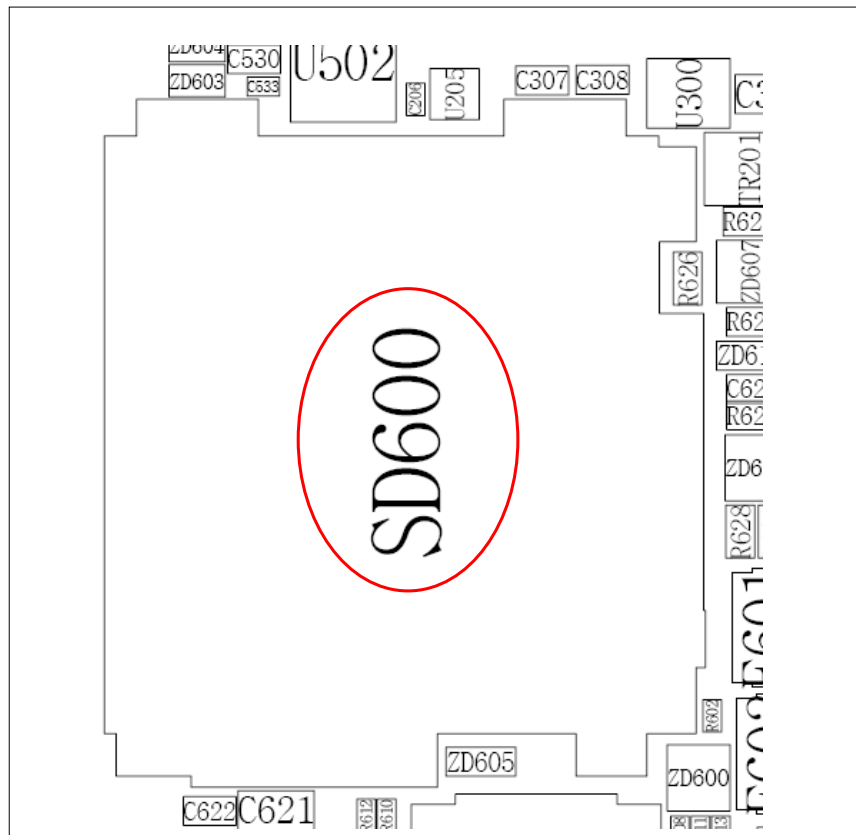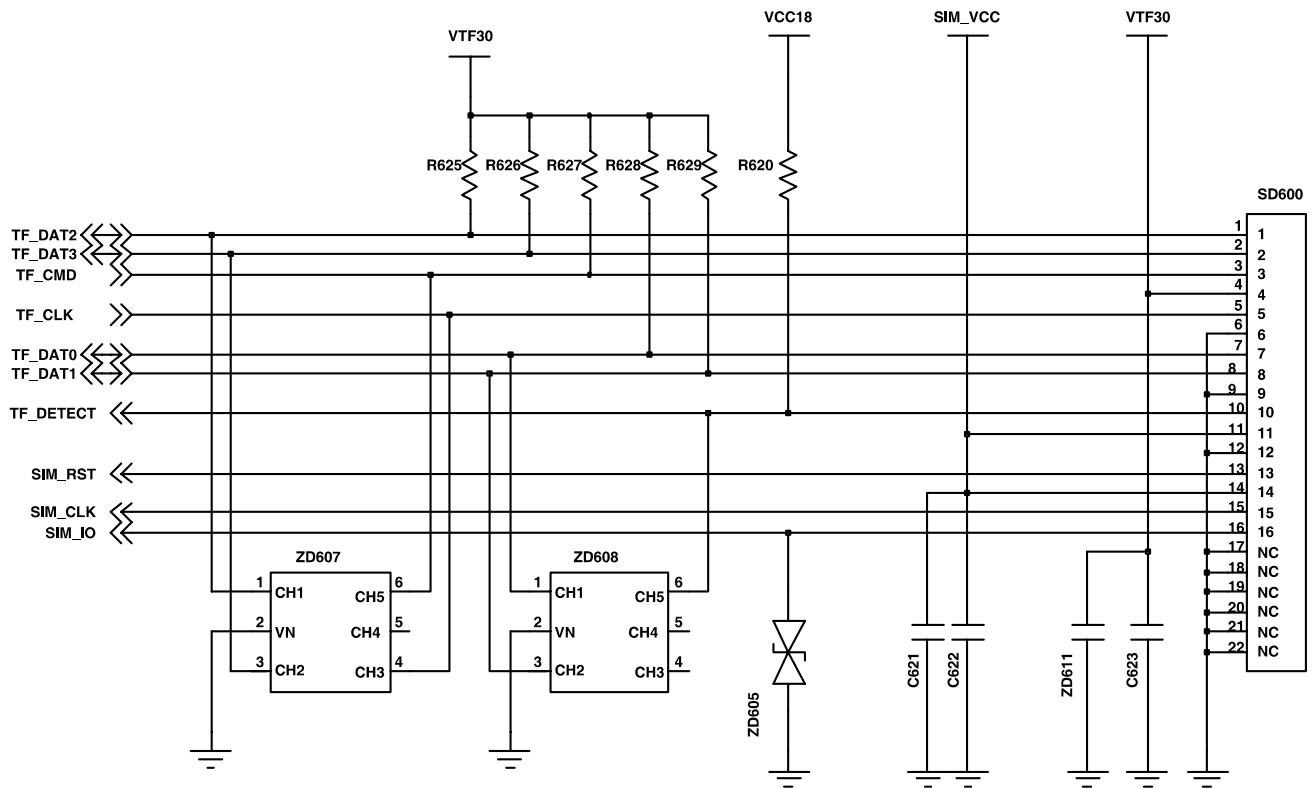






## 9-5. 麦克风部分

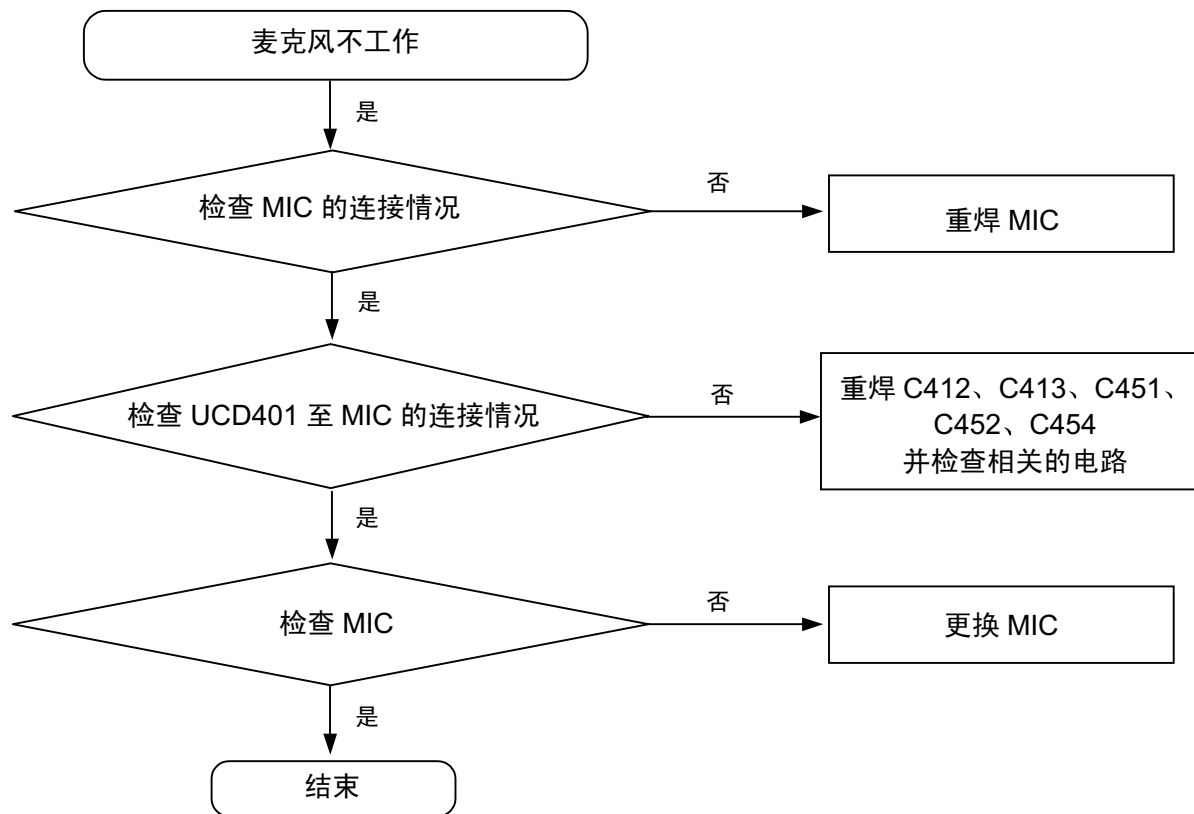

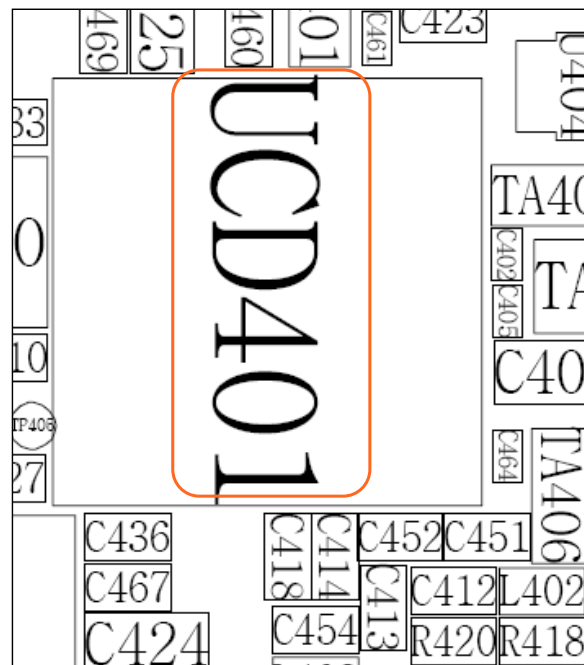


## 9-6. 扬声器部分（铃声）

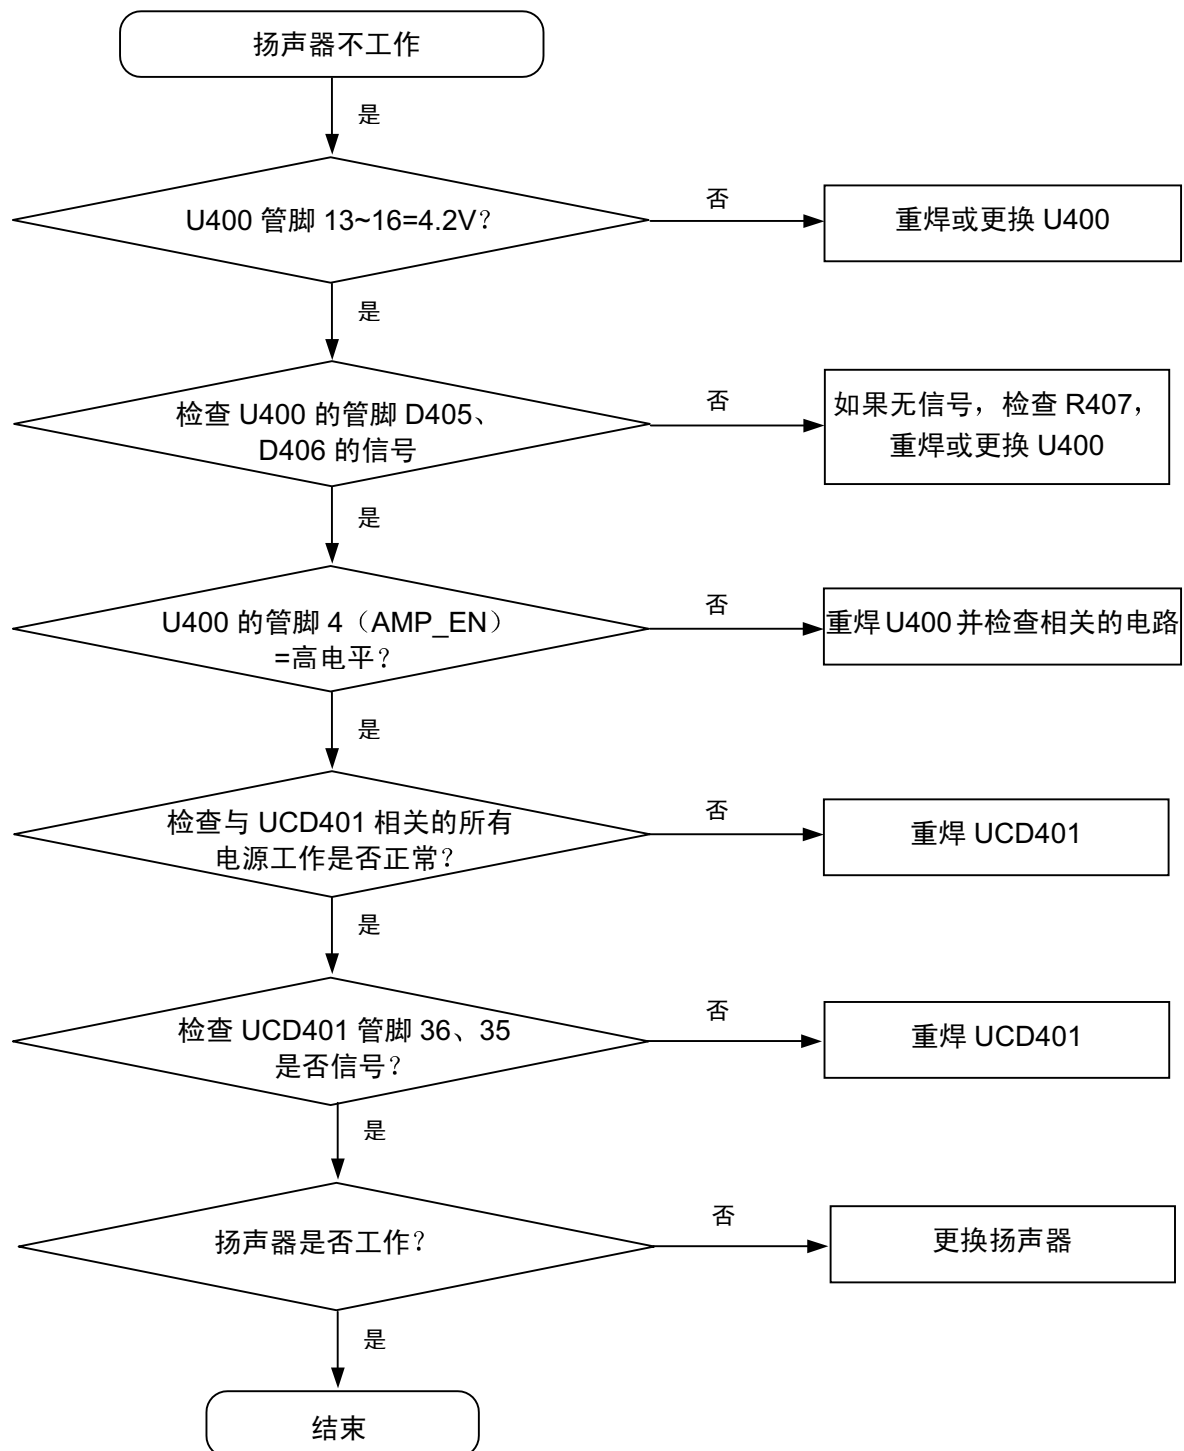

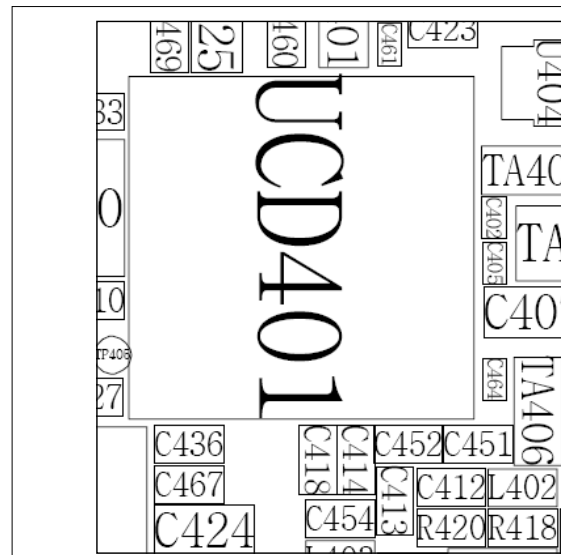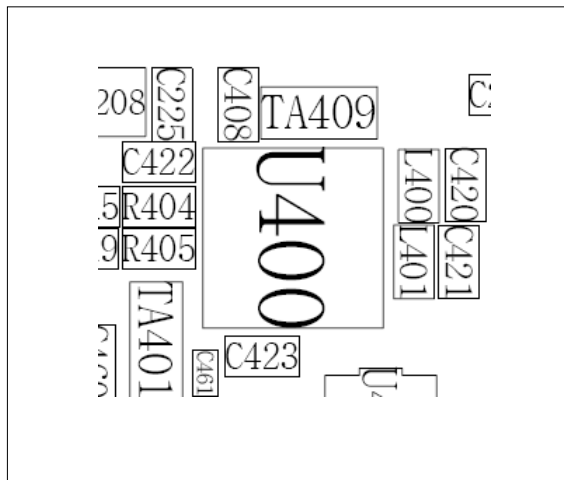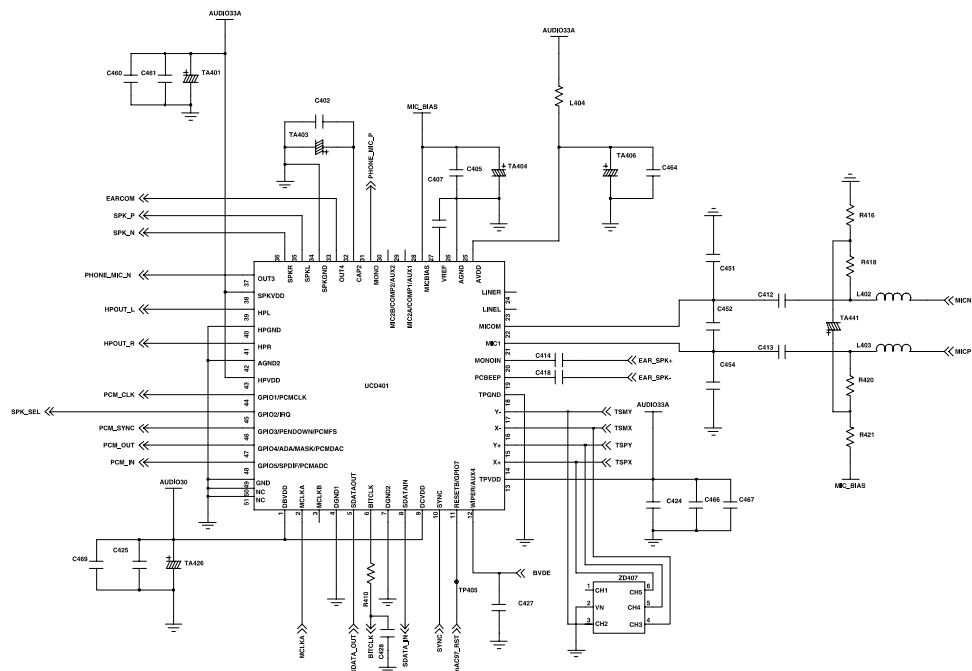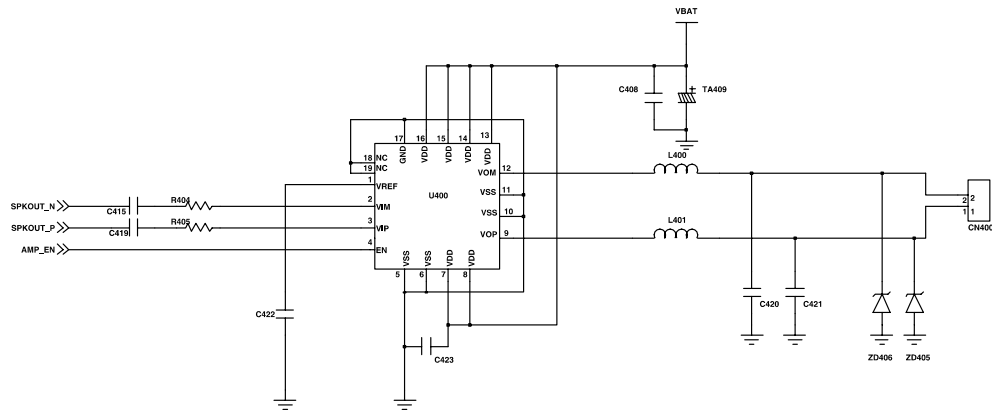


## 9-7. 按键数据输入

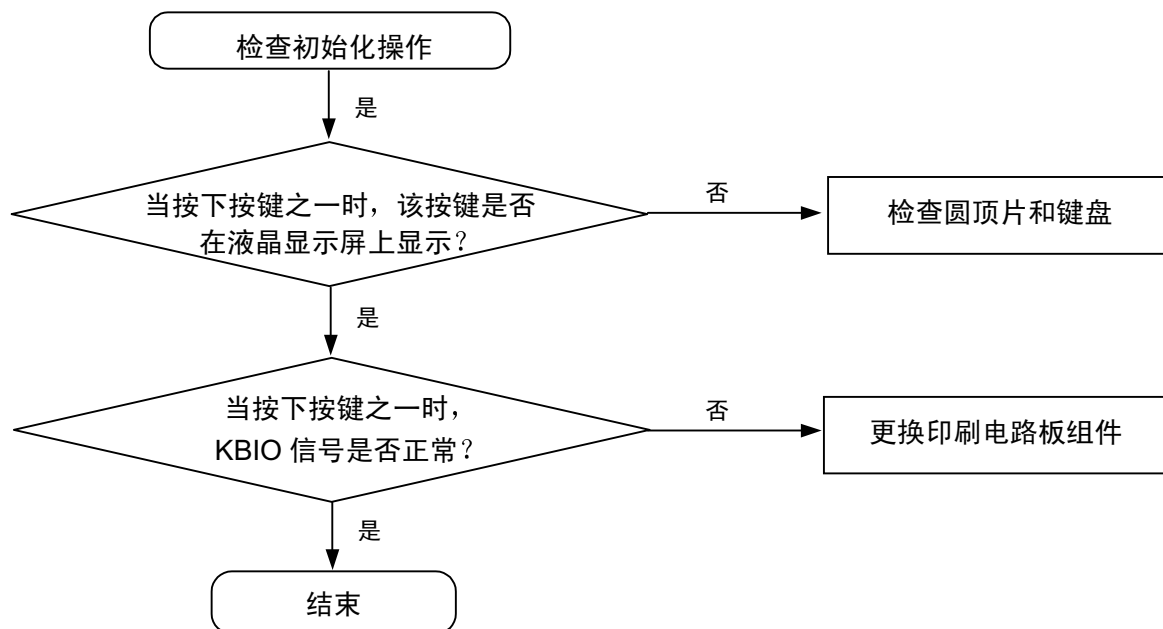






## 9-8. 接收器部分

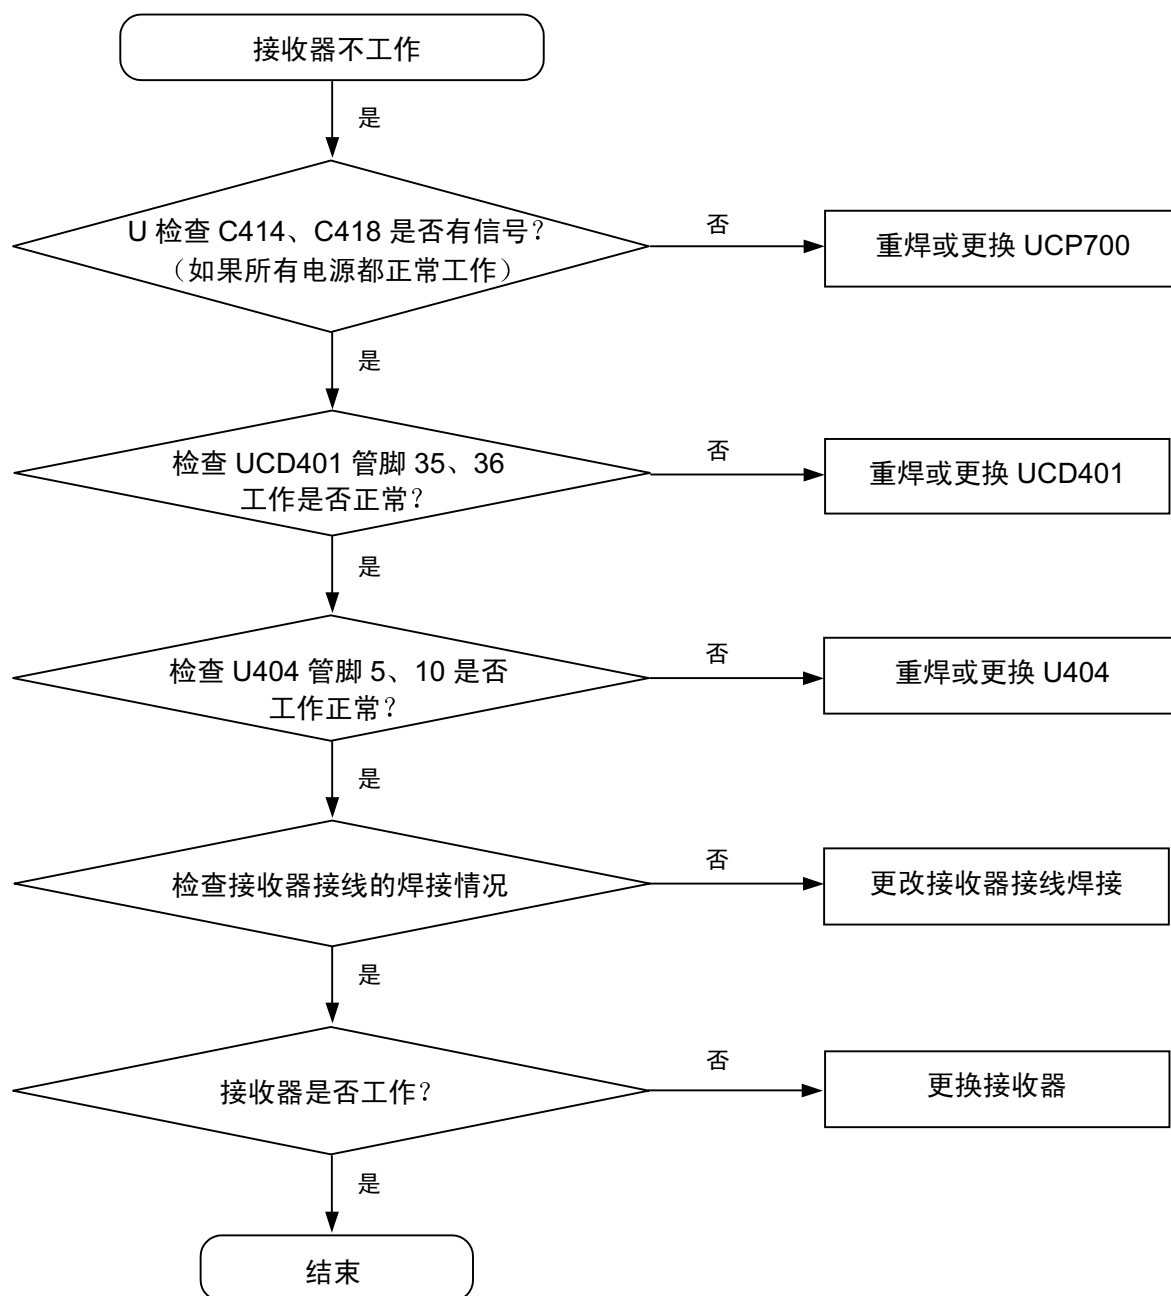


## 9-9. 背景灯（适于彩色主液晶显示屏）


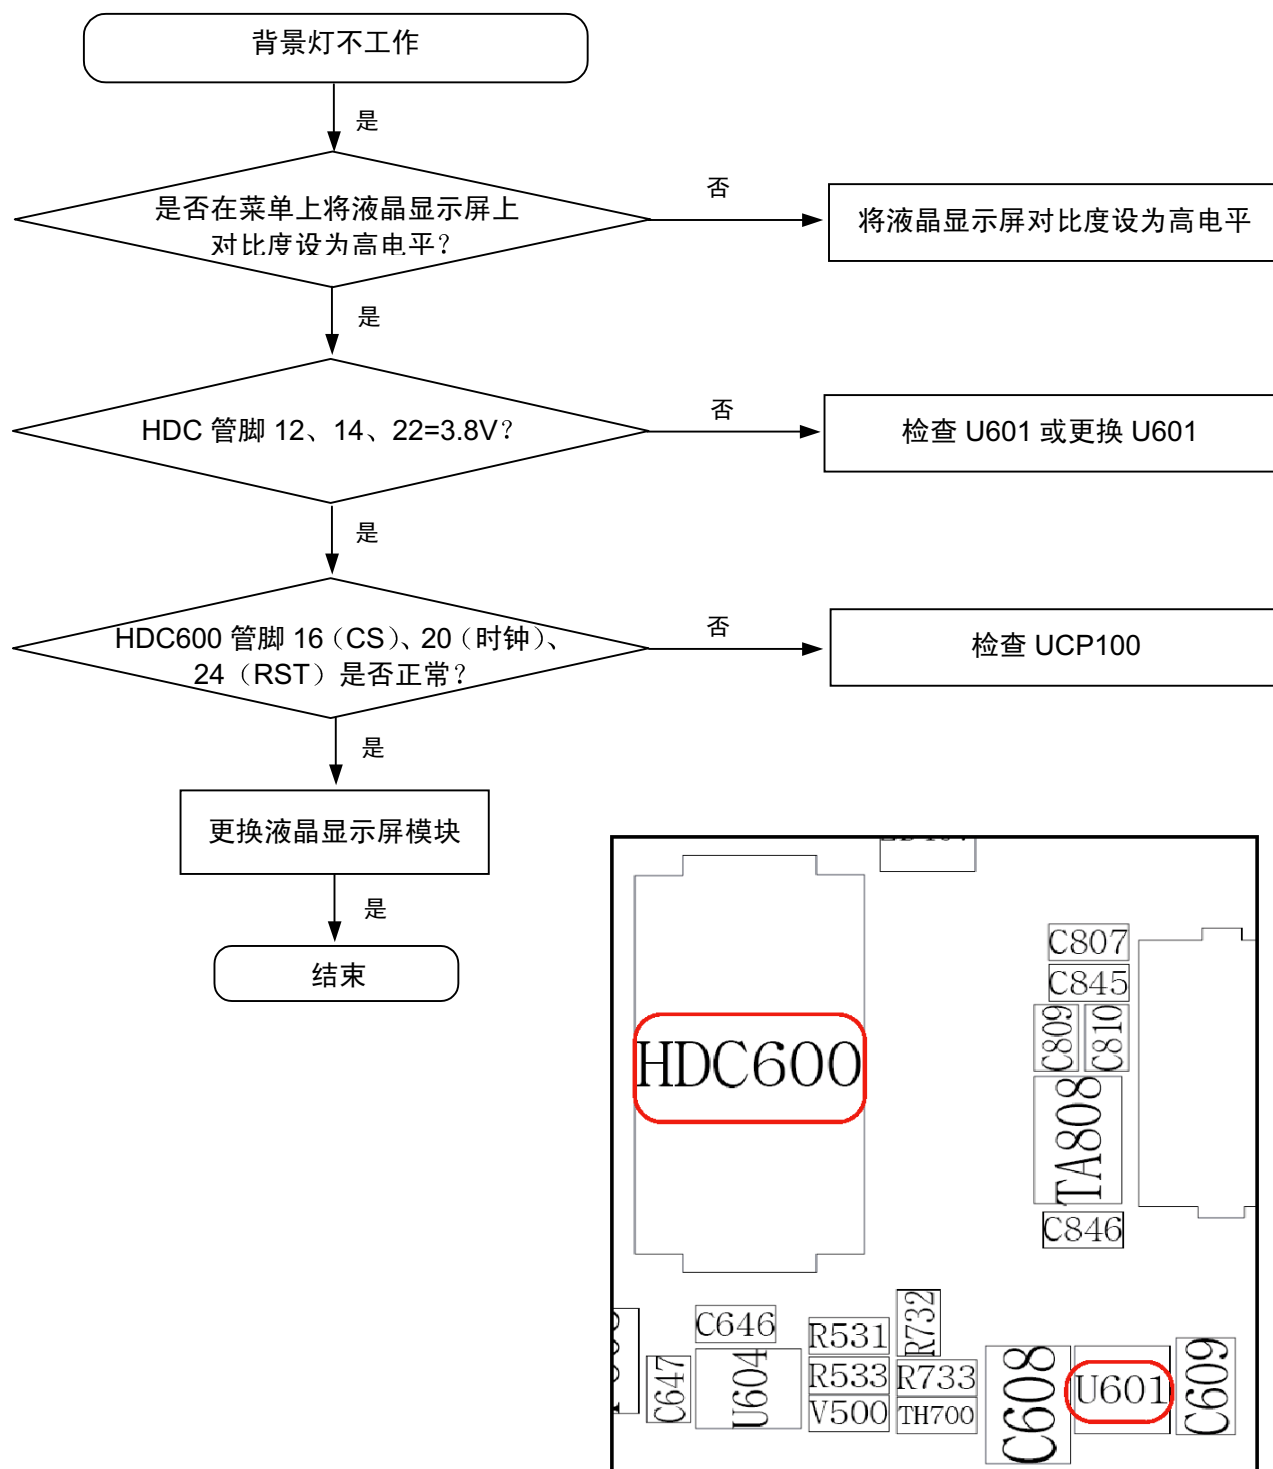


## 9-10. 按键背景灯

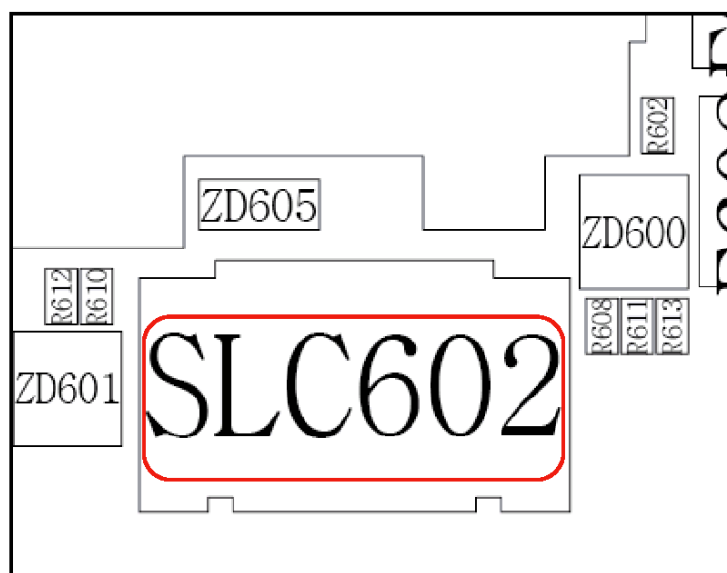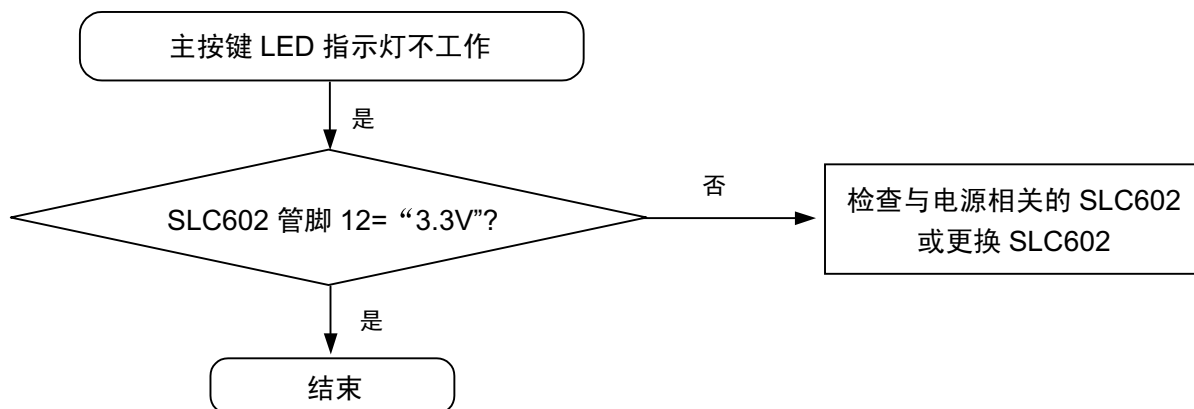



## 9-11. 照相机部分

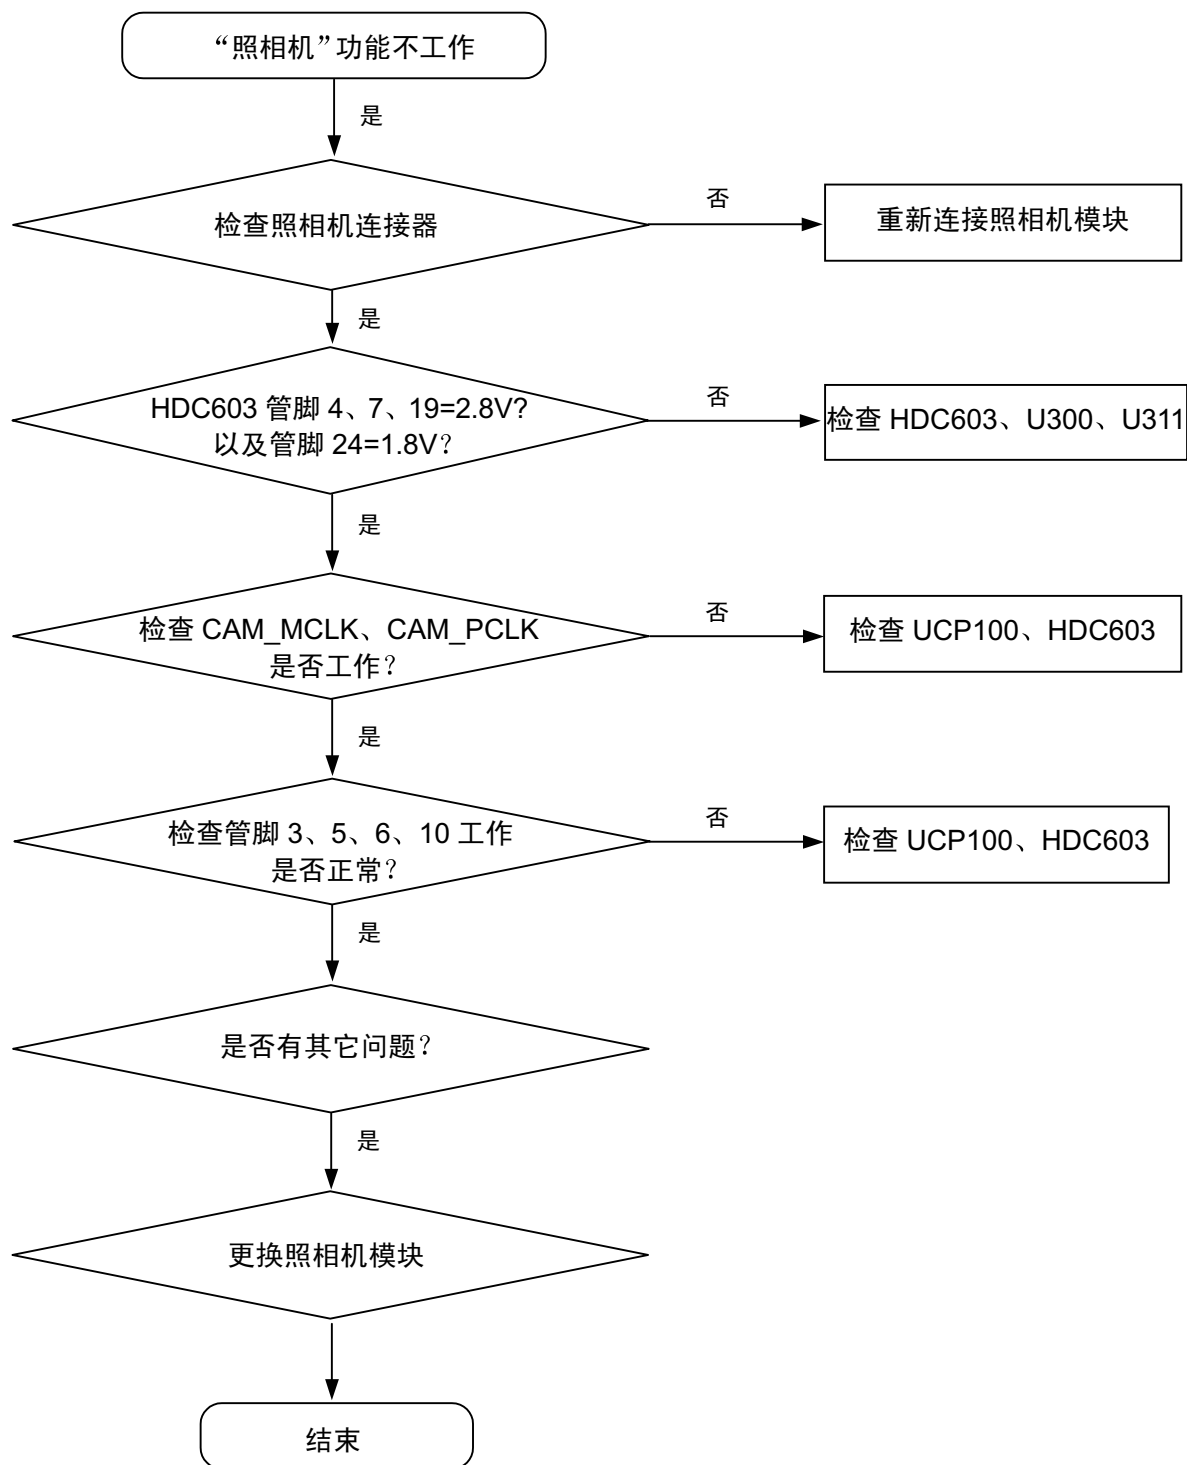

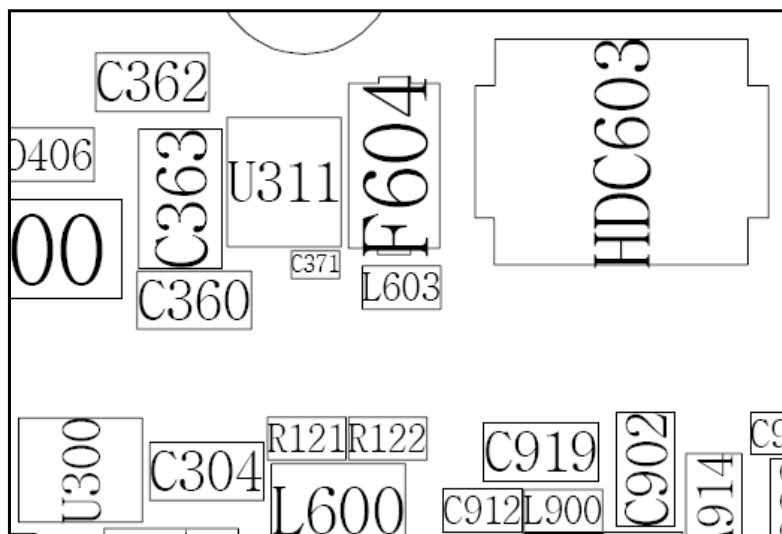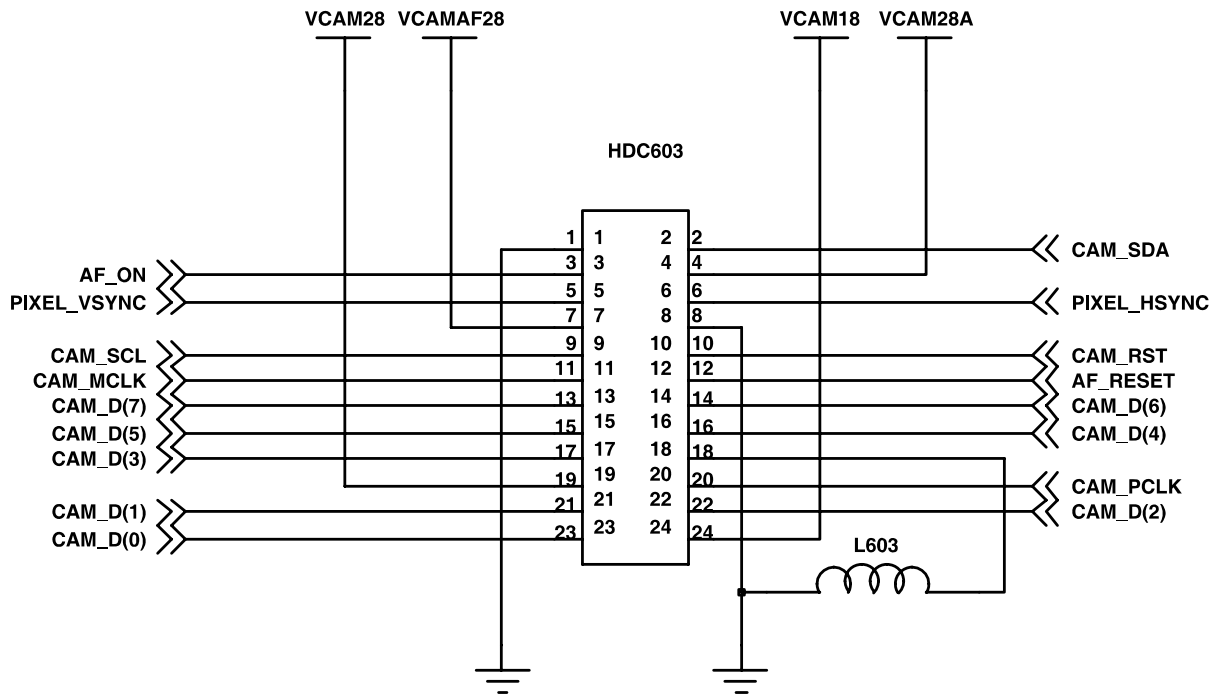


## 9-12. GSM850 接收器

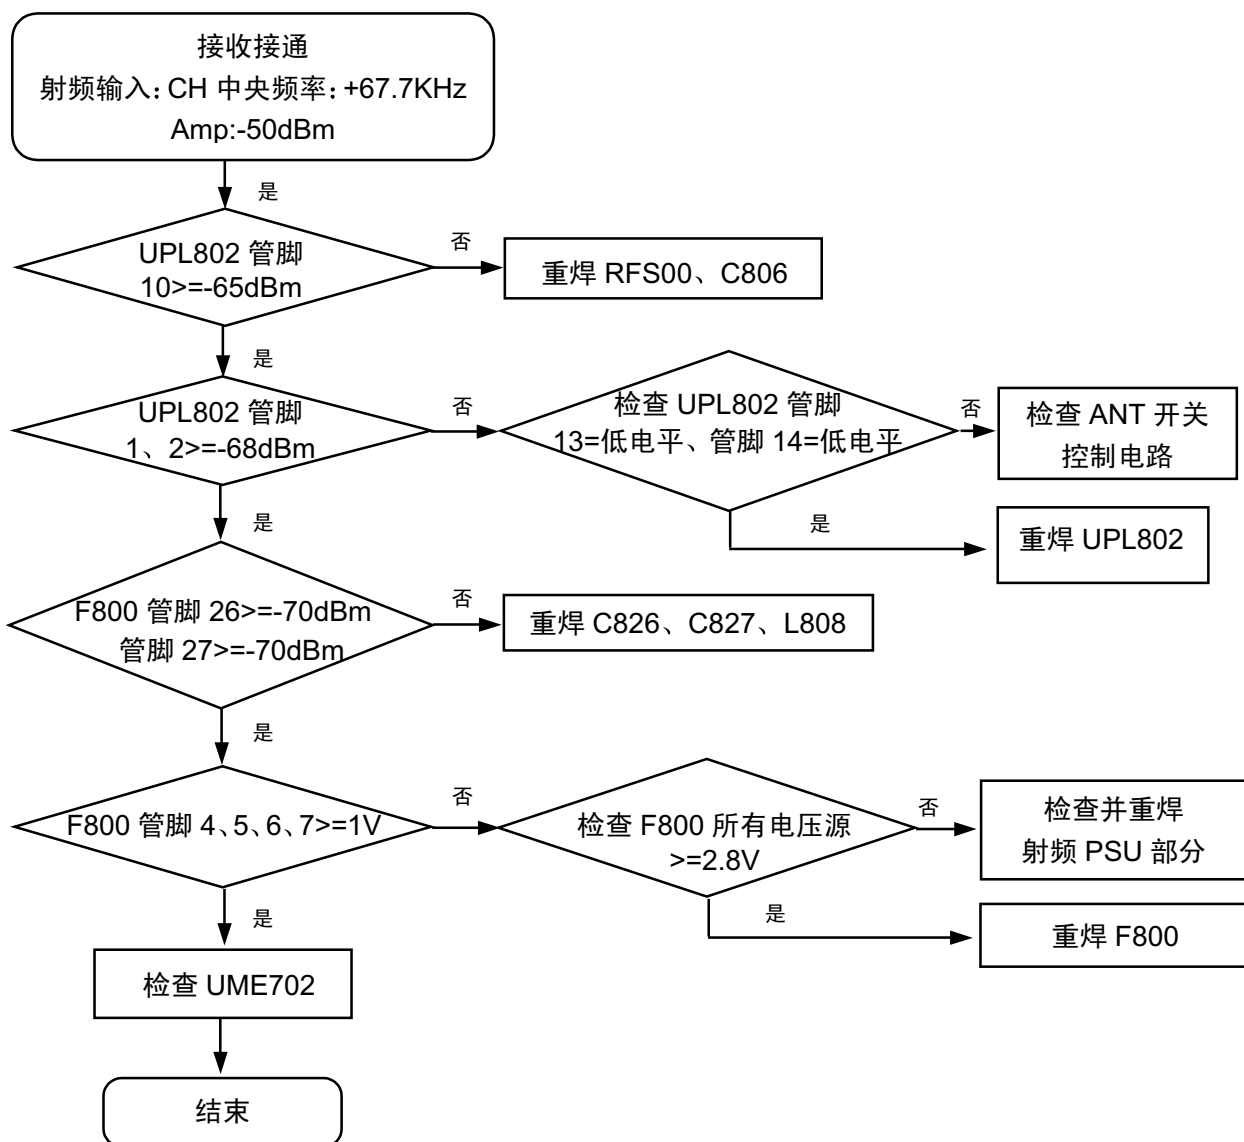


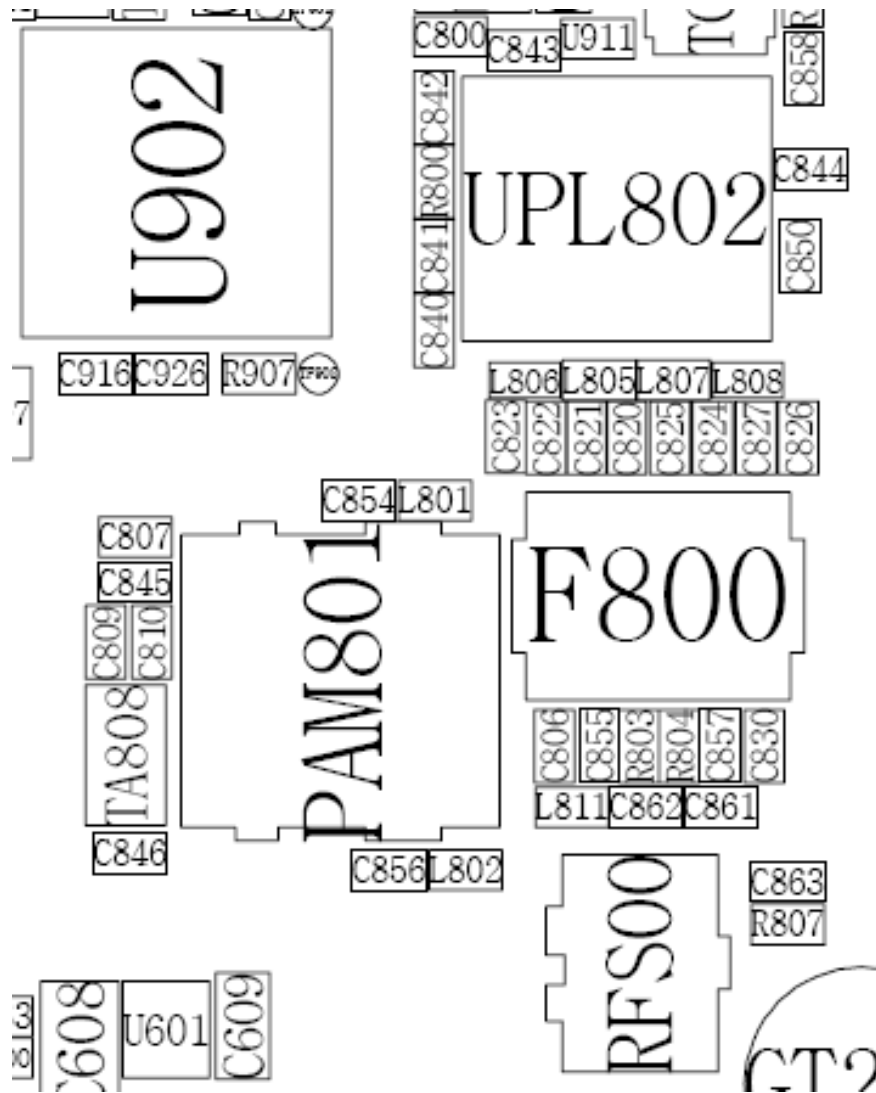


## 9-13. GSM850 发射器

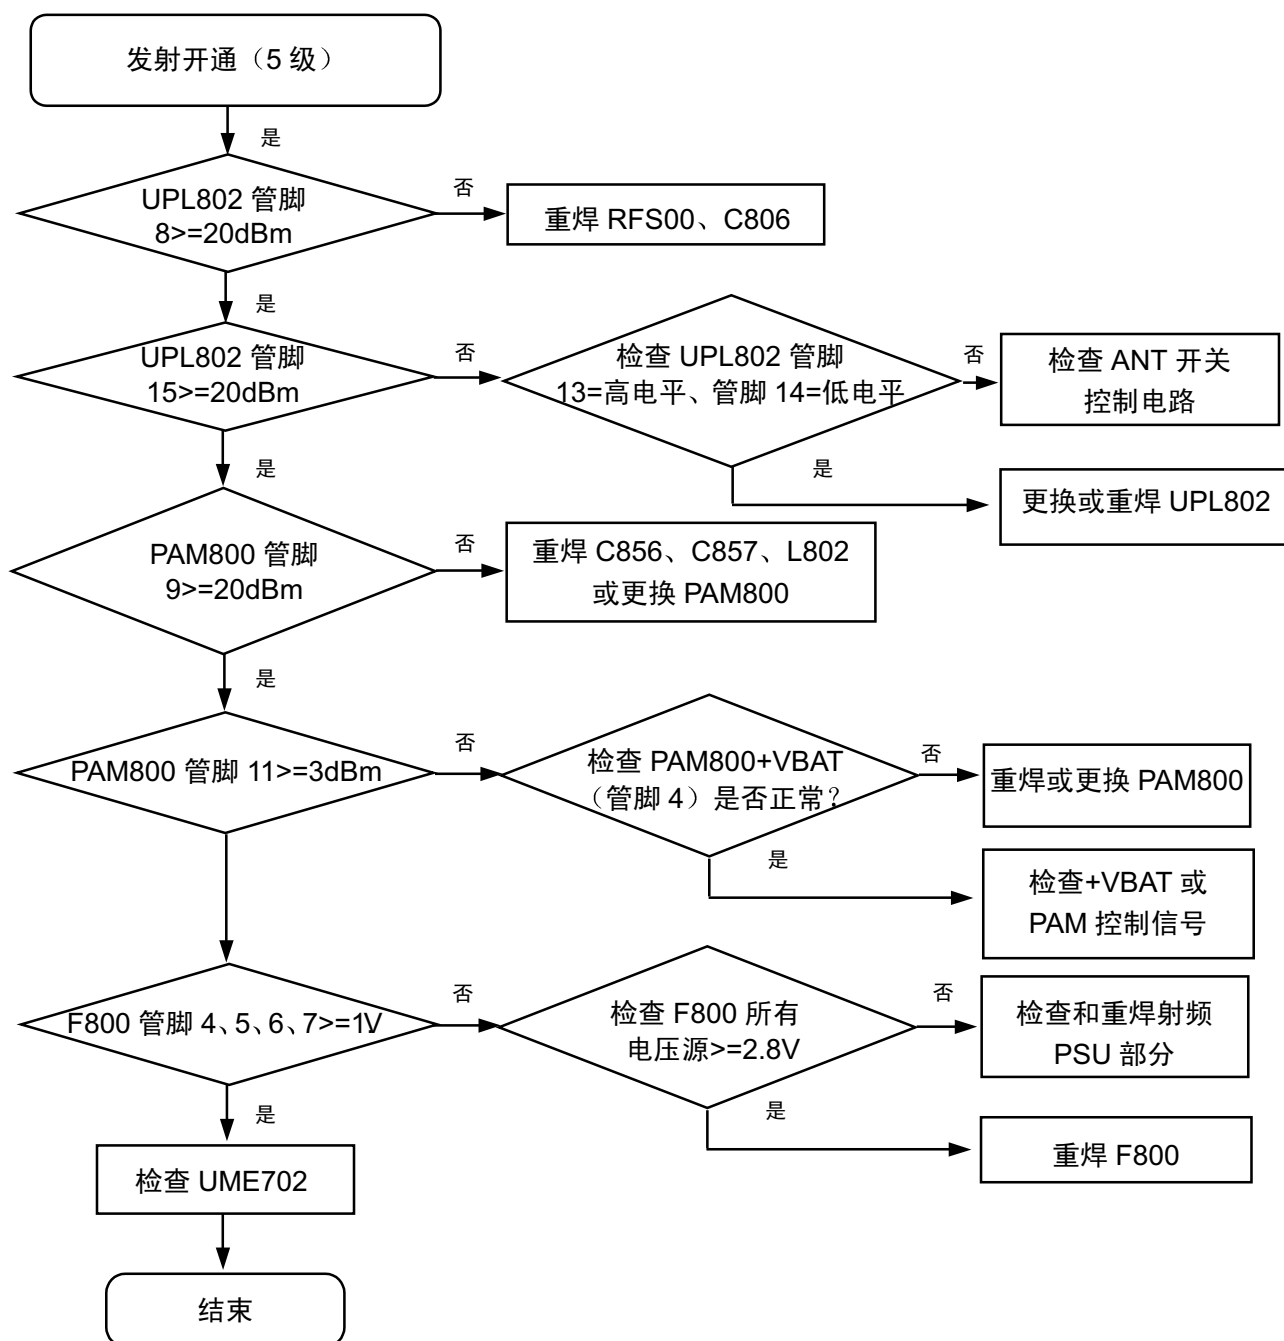



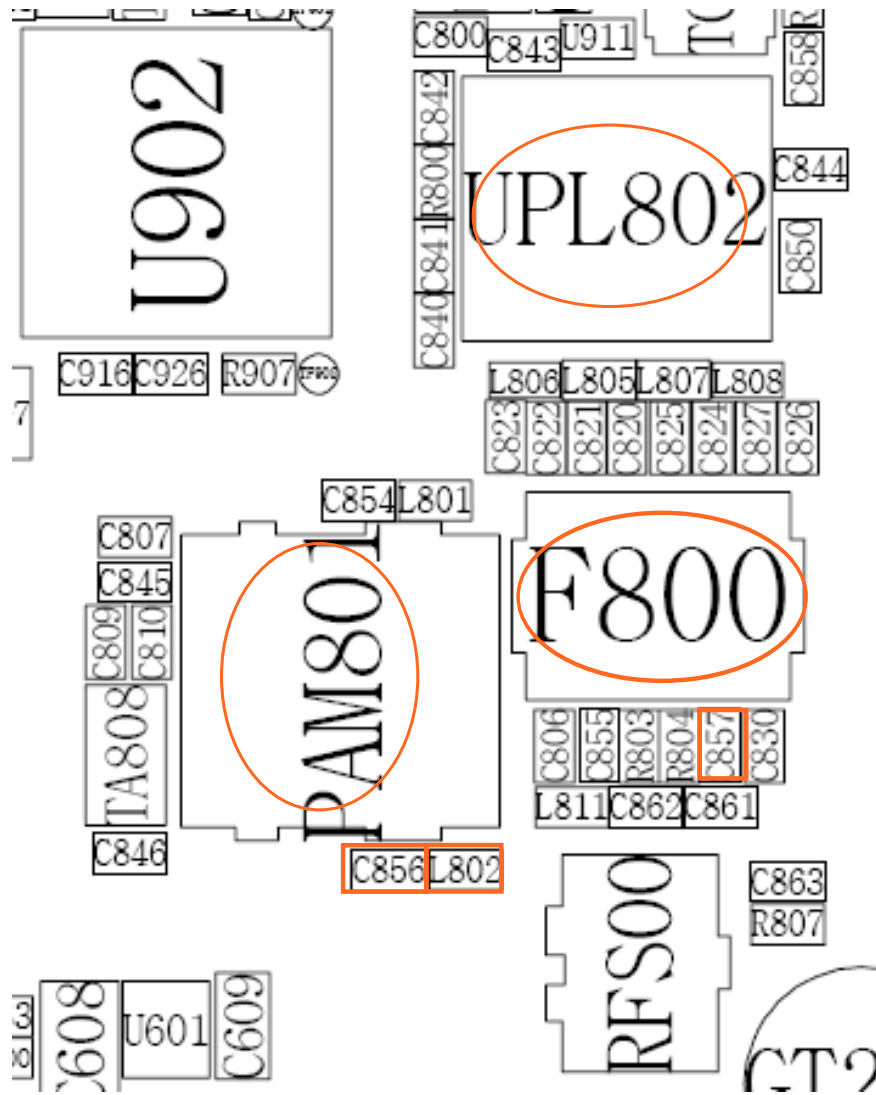



## 9-14. EGSM900 接收器

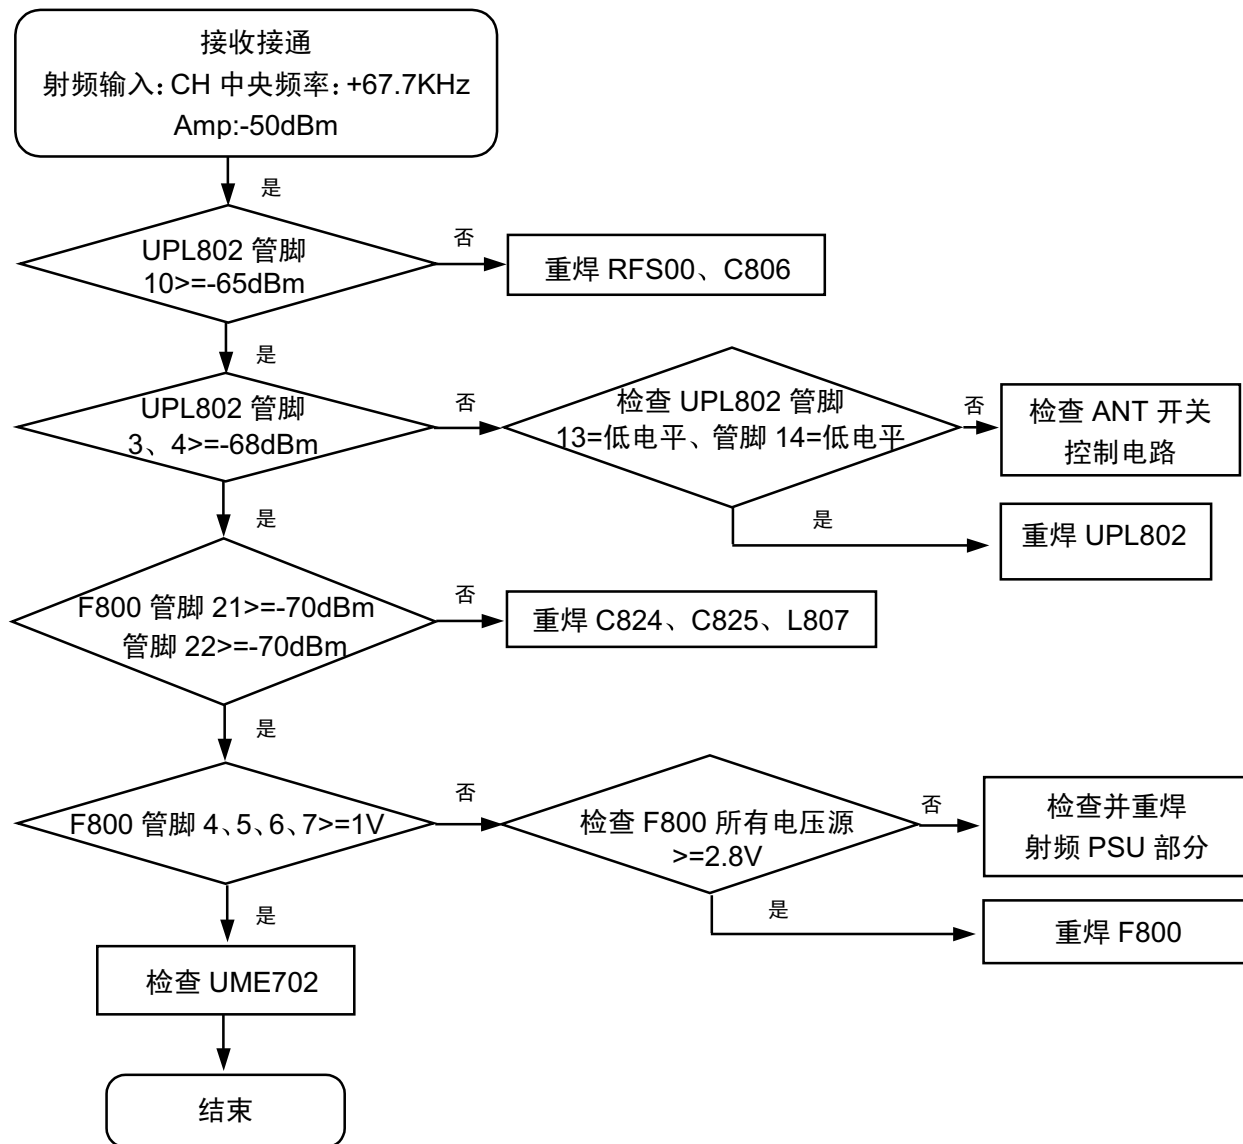





## 9-15. EGSM900 发射器

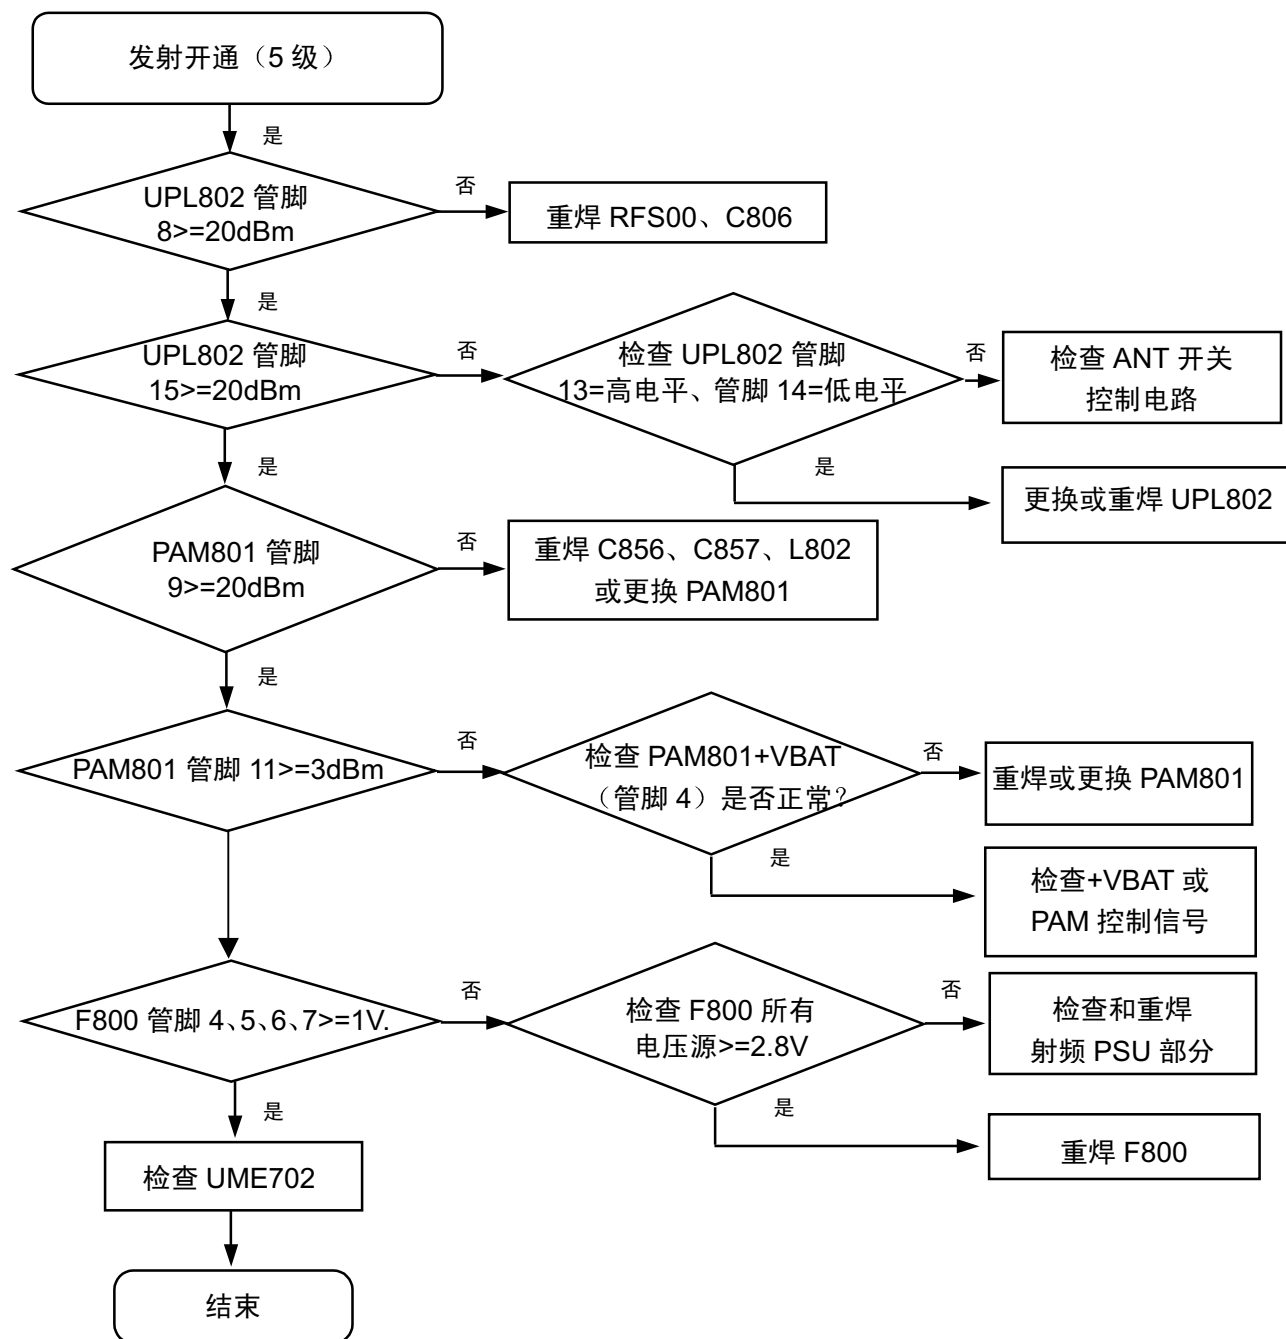

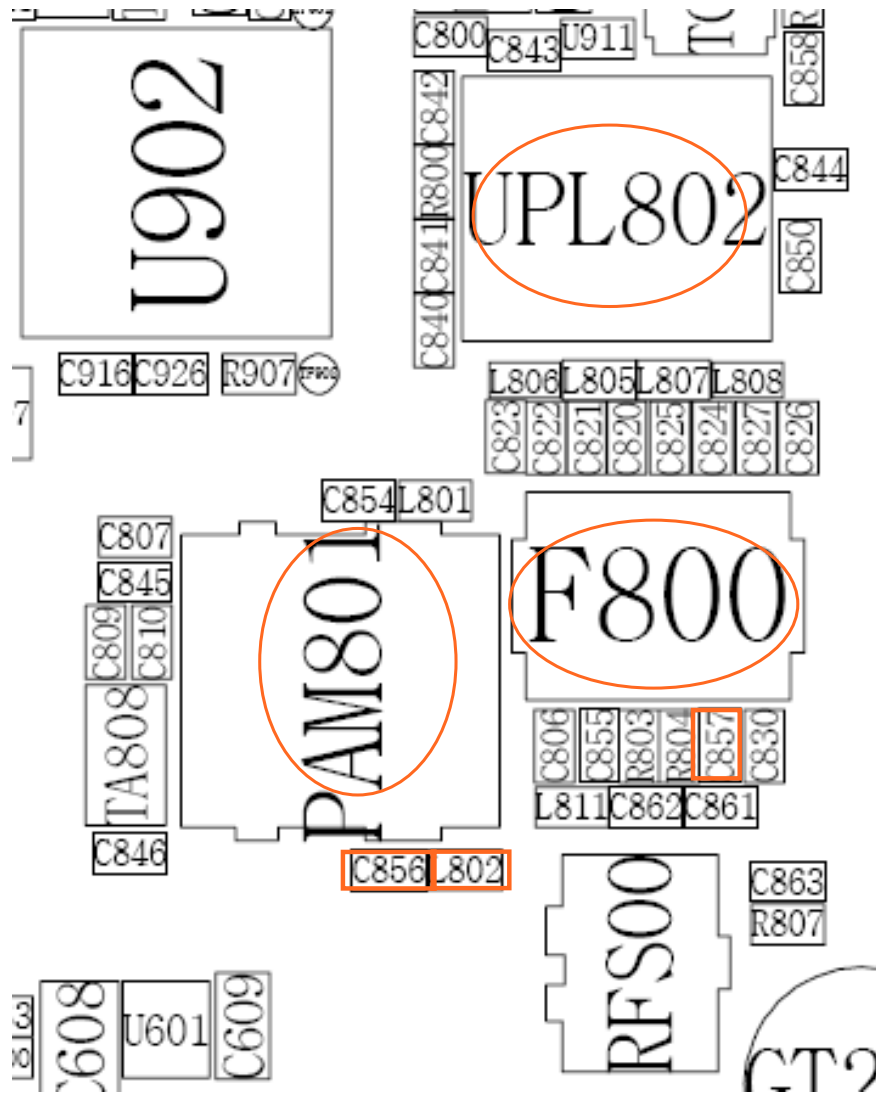


## 9-16. DCS 接收器

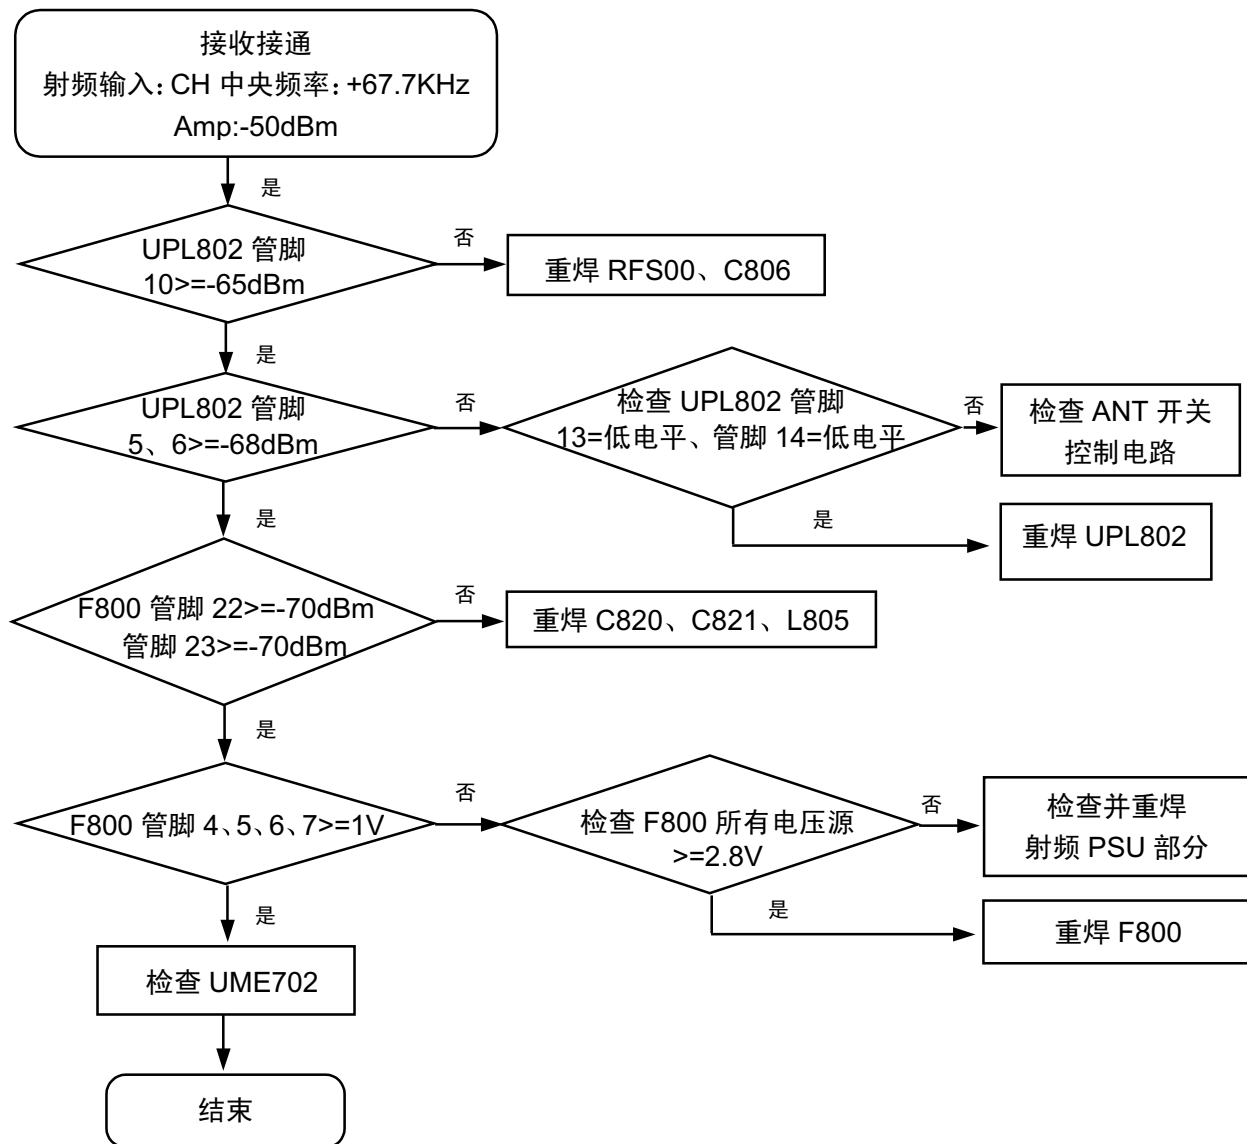


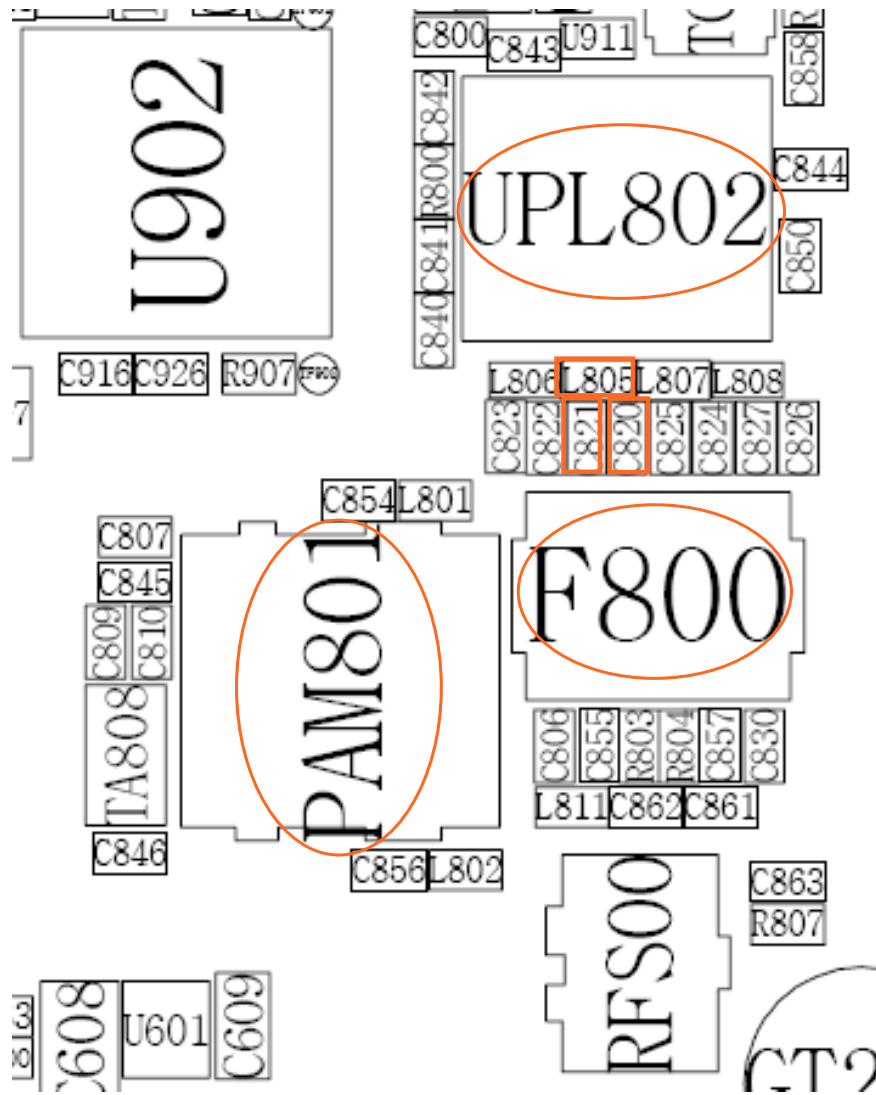


## 9-17. DCS 发射器

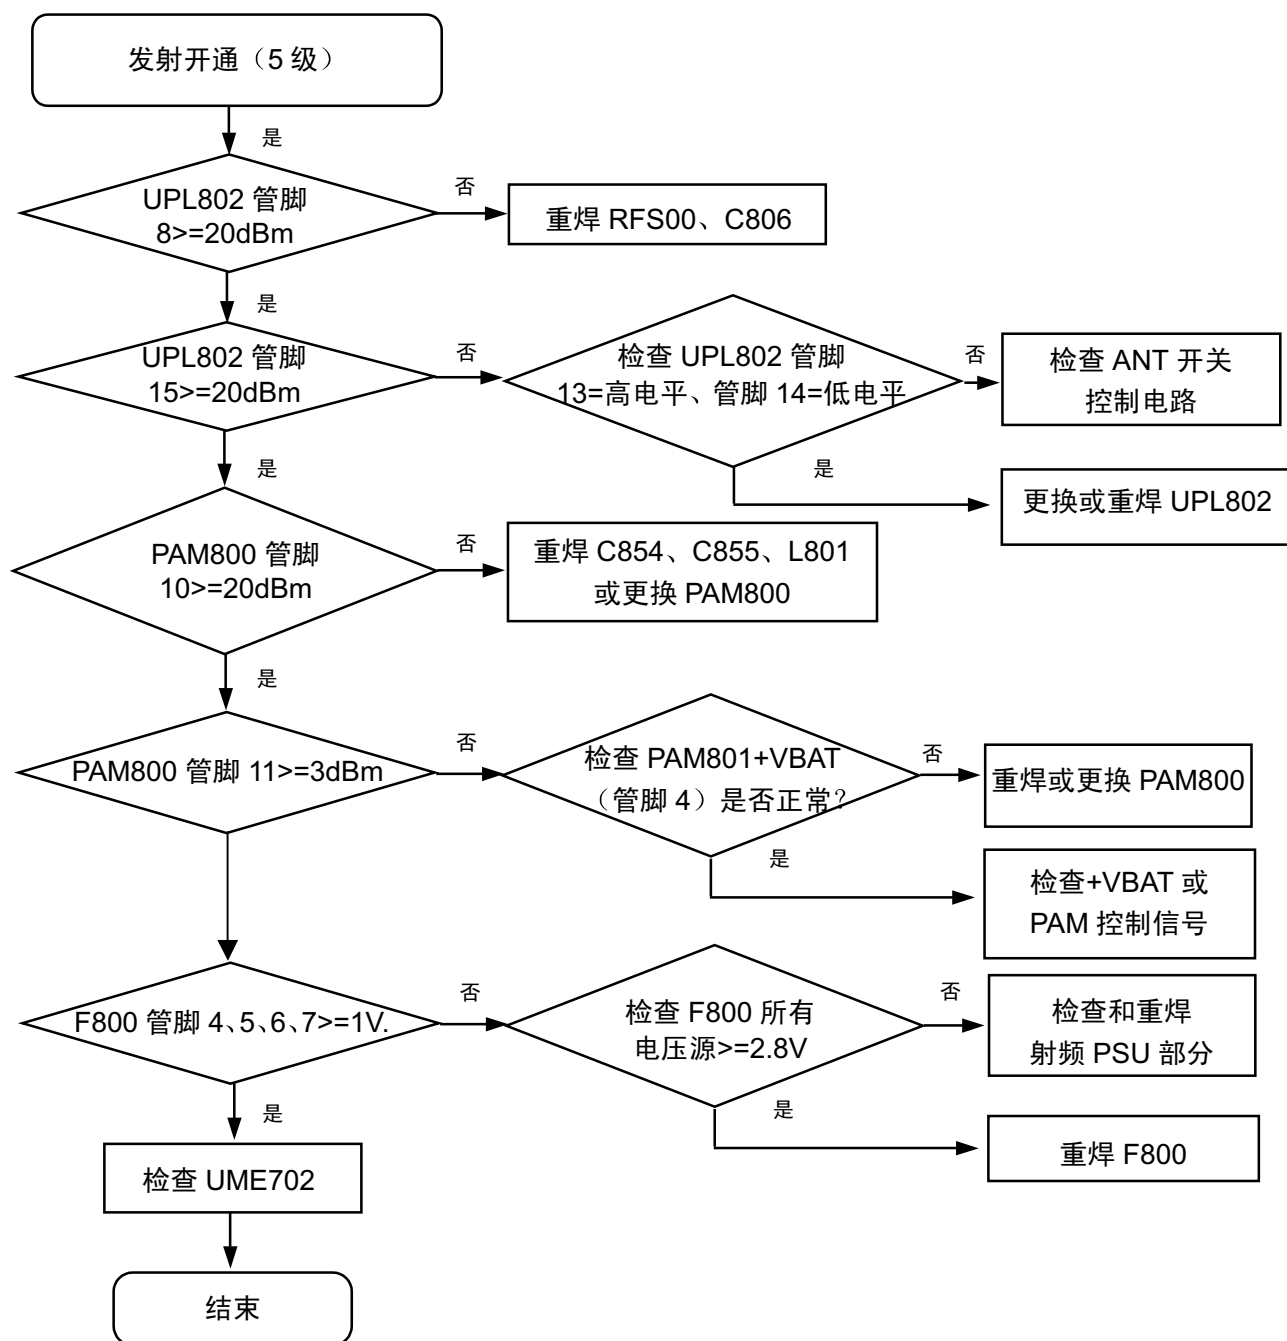




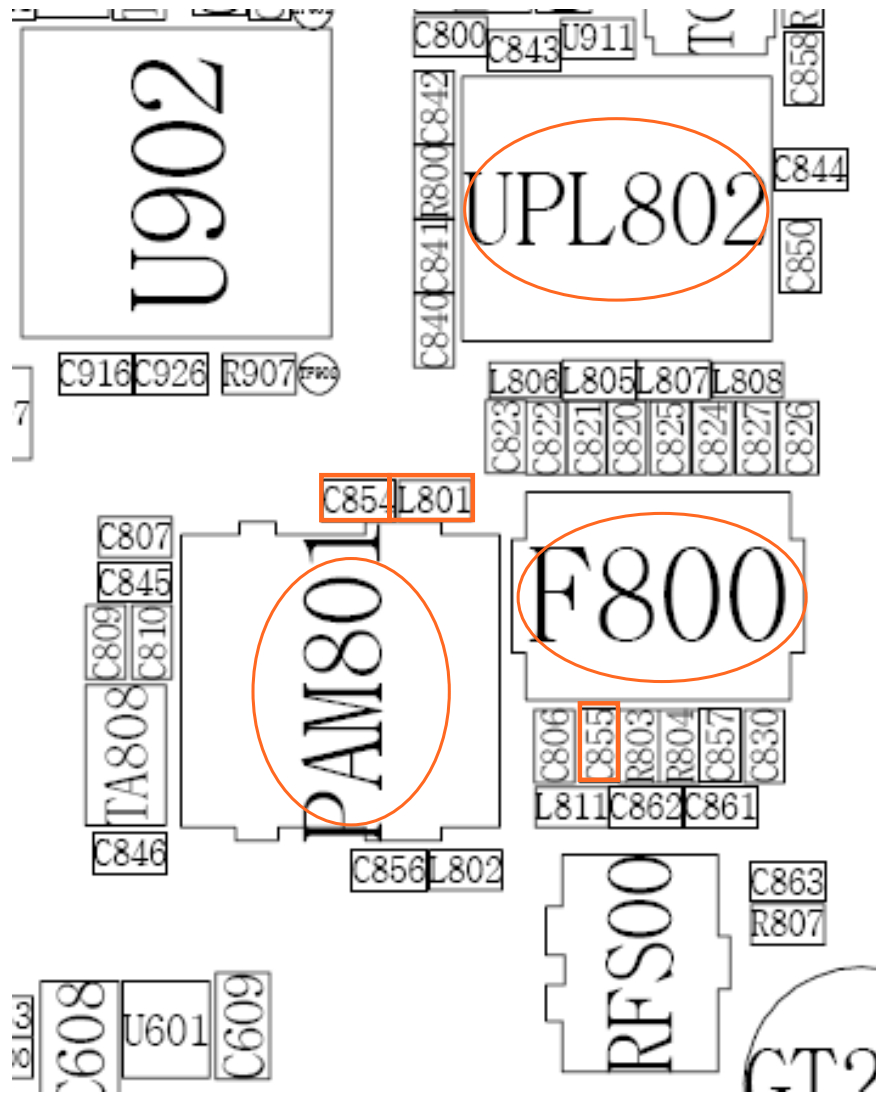

## 9-18. PCS 接收器

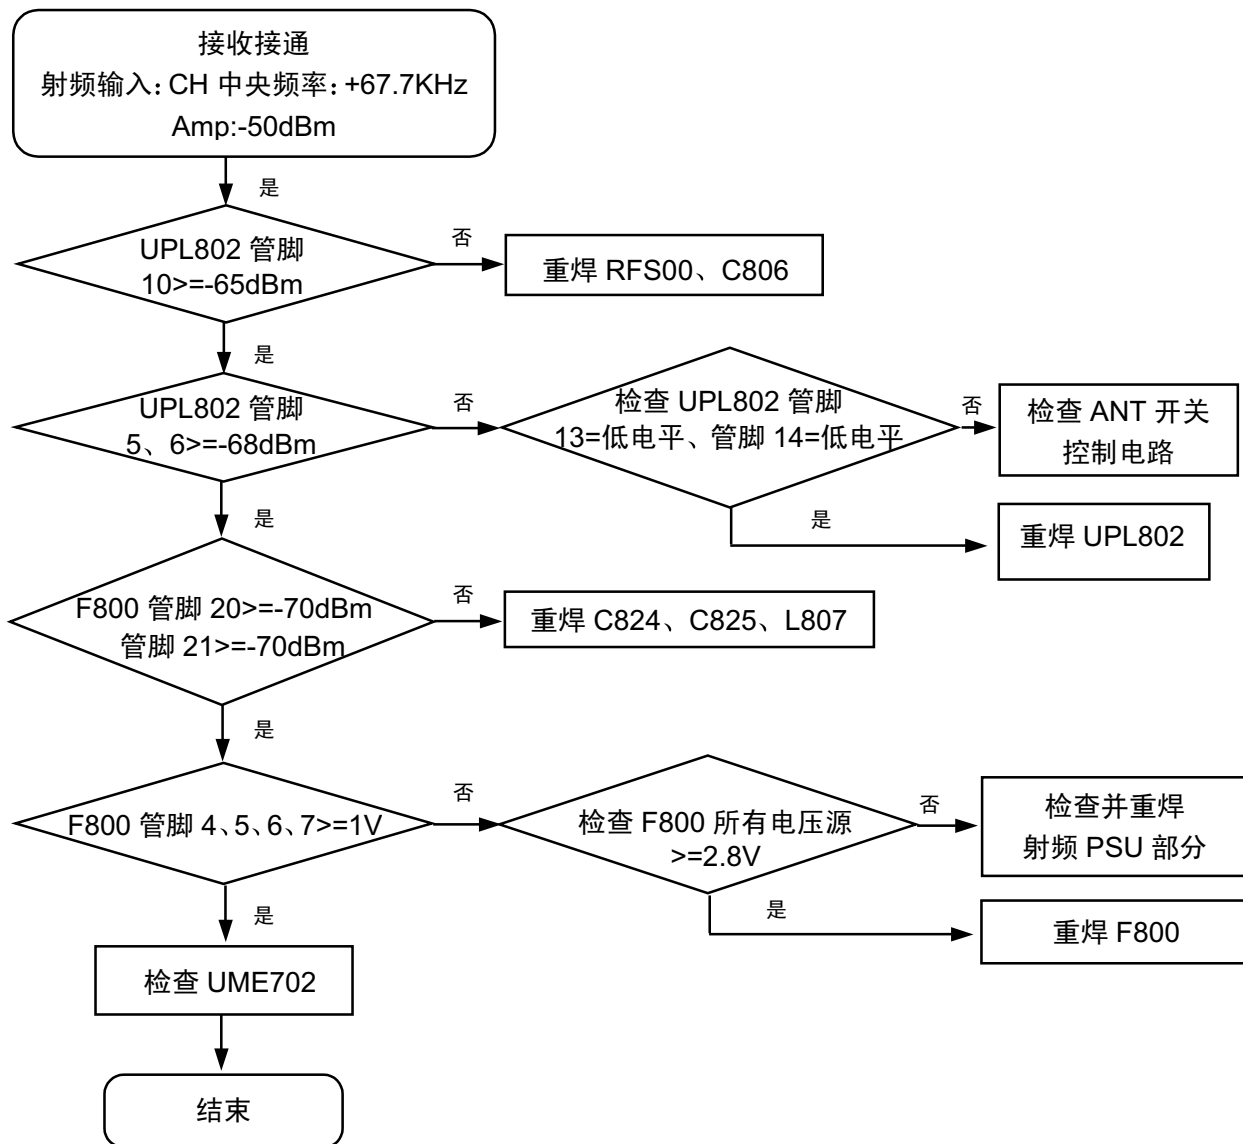

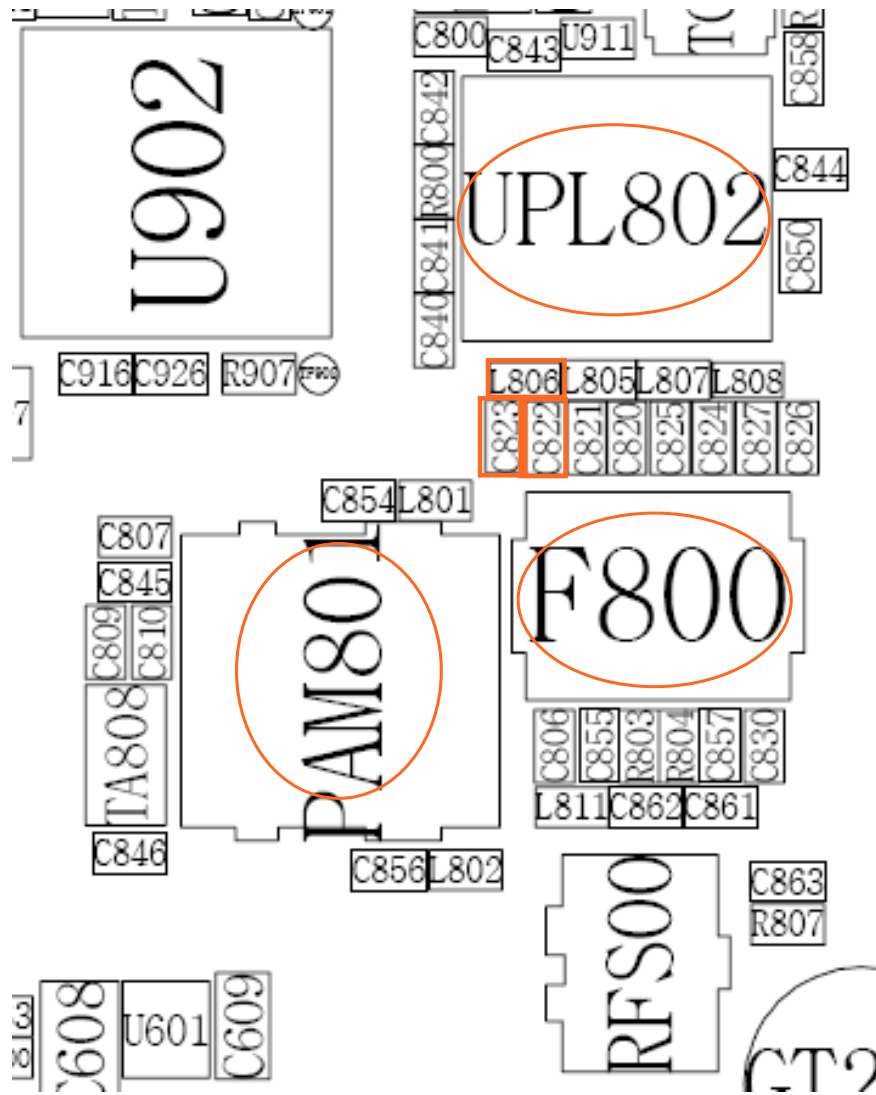

## 9-19. PCS 发射器

