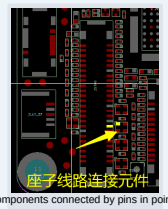

Components connected by pins in point bitmaps

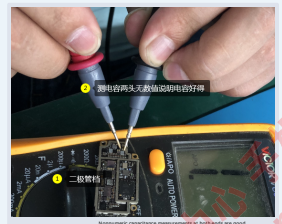

Nonnumeric capacitance measurements at both ends are good

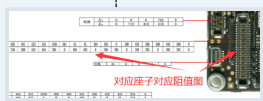

Find the resistance map corresponding to the location resistance value

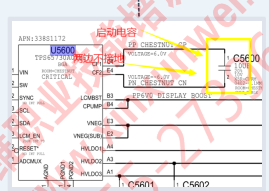

Start-Capacitance

Open the label map to find the location number of the display seat

6 to 8P XR 11 models do not show repair process

1. Change screen to exclude mismatching problems
2. Appearance inspection
   - Full plate check for visible damage to components
   - Focus observation shows whether there is corrosion and oxidation distortion of water inlet in the base
   - Screw post with or without breaking wires
3. Geodesic display of normal pedestal resistance
   - Find the corresponding display connection base according to the repaired machine
   - High resistance: broken line or broken bottom
   - Low resistance: bad capacitance connected to the line or bad chip connected to the line
4. Measure if 1.8V++ 5.7v power supply to display is normal
   - Install screen measure +5.7 voltage, no voltage after sleep
     - No voltage maintenance. Display power circuit
       - 1. Measurement shows if the power start capacitance is damaged
         - Short circuit replaces capacitors with the same parameters directly
       - 2. Measurements show whether 6VBOOT boost capacitance resistance value of power supply is normal
         - Find method. Find the label map for the machine type.Find the display power location number, search the corresponding location number in the drawing to display the power immediately
         - Low measurement resistance: chip or capacitor is dependent on substitution
       - 3. EAP model black touch damage will also lead to no display, you can directly remove the black touch and turn on the test
       - 4. Change display power supply
         - No voltage measurement shows power pad resistance after replacement
           - High resistance: insurance or disconnection from the line
           - Low resistance: bad capacitance on the line or bad chip on the line
     - Voltage Normal Next Step
5. Measure whether RESET voltage is normal
   - Abnormal resistance value
   - Abnormal voltage
   - Purchase reset module
6. Change MIPI inductance
7. Measure if CPU display module drop-down resistance is normal
   - If you find the display connector on the right, find the total MIPILine, MIPI bus found CPU.Both foundMIPI module

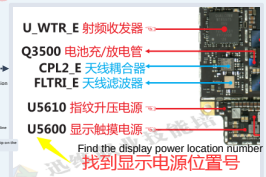

Element Label Find Display Power Location Number

Reset module in-built wiring tutorial

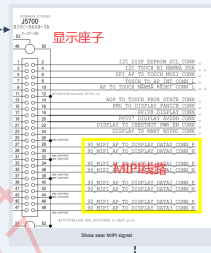

Show seat MIPI signal

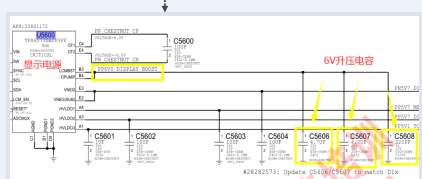

6VBOOST boost capacitance

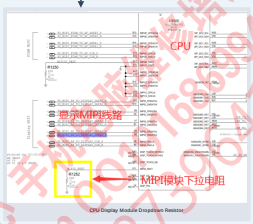

CPU-Display Module Dropdown Resistor

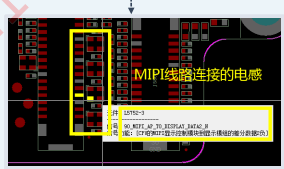

Point Bitmap MIPI Line

Ground resistance value of 6VBOOST boost capacitor

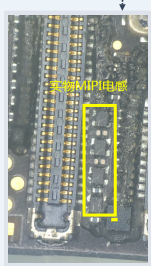

Physical MIPI inductance

迅维职业技能培训中心 手机电脑维修培训 www.xinxunwei.com QQ19168994 0755-27396416 27396417