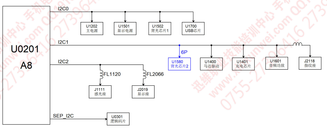

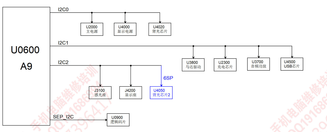

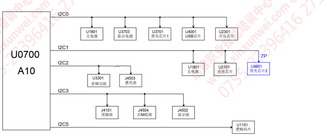

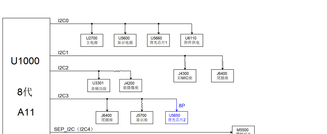

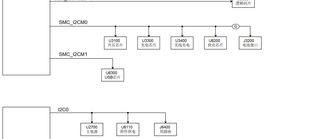

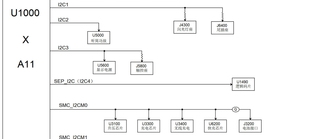

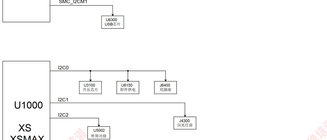

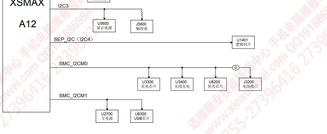

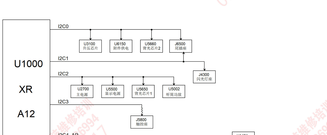

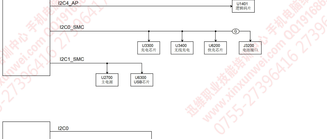

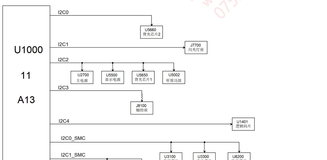

iPhone6~iPhone12ProMax CPU I2C bus framework diagram
Note: each set of I2C bus contains two wires, SDA and SCL, which require pull up resistance
the common faults of I2C bus are: fixed current, brush machine error, white apple restart, defined screen,unscheduled restart, the functions failure corresponding to the chip to which the bus is attached, etc

iPhone6~iPhone12ProMax CPU的I2C总线框架图

注：每组I2C总线都包含SDA和SCL两条线，都需要上拉电阻！

I2C总线常见故障有：定电流、刷机报错、白苹果重启、定屏、不定时重启、总线所连芯片对应的功能故障等

U0201
A8
I2C0
U1202 主电源
U1501 显示电源
U1502 背光芯片1
U1700 USB芯片
I2C1
6P
U1580 背光芯片2
U1400 马达驱动
U1401 充电芯片
U1601 音频功放
J2118 指纹座
I2C2
FL1120
FL2066
J1111 感光座
J2019 显示座
SEP_I2C
U0301 逻辑码片
U0600
A9
I2C0
U2000 主电源
U4000 显示电源
U4020 背光芯片
I2C1
U3800 马达驱动
U2300 充电芯片
U3700 音频功放
U4500 USB芯片
I2C2
6SP
J3100 感光座
J4200 显示座
U4050 背光芯片2
SEP_I2C
U0900 逻辑码片
U0700
A10
I2C0
U1801 主电源
U3703 显示电源
U3701 背光芯片1
U4001 USB芯片
U2301 升压芯片
I2C1
U1801 主电源
U2101 充电芯片
7P
U4601 背光芯片2
I2C2
U3301 音频功放
J4503 感光座
I2C3
J4101 尾插座
J4504 后MIC座
J4502 显示座
I2C5
U1101 逻辑码片
U1000
8代
A11
I2C0
U2700 主电源
U5600 显示电源
U5660 背光芯片1
U6110 附件供电
I2C1
J4300 后MIC座
J6400 尾插座
I2C2
U3301 音频功放
J4200 前摄像座
I2C3
J6400 尾插座
J5700 显示座
8P
U5650 背光芯片2
SEP_I2C（I2C4）
M5500 逻辑码片
SMC_I2CM0
U3100 升压芯片
U3300 充电芯片
U3400 无线充电
U6200 快充芯片
Q
J3200 电池接口
SMC_I2CM1
U6300 USB芯片
U1000
X
A11
I2C0
U2700 主电源
U6110 附件供电
J6400 尾插座
I2C1
J4300 闪光灯座
J6400 尾插座
I2C2
U5000 听筒功放
I2C3
U5600 显示电源
J5800 触控座
SEP_I2C（I2C4）
U1490 逻辑码片
SMC_I2CM0
U3100 升压芯片
U3300 充电芯片
U3400 无线充电
U6200 快充芯片
Q
J3200 电池接口
SMC_I2CM1
U6300 USB芯片
U1000
XS
XSMAX
A12
I2C0
U3100 升压芯片
U6150 附件供电
J6400 尾插座
I2C1
J4300 闪光灯座
I2C2
U5002 听筒功放
I2C3
U5600 显示电源
J5800 触控座
SEP_I2C（I2C4）
U1401 逻辑码片
SMC_I2CM0
U3300 充电芯片
U3400 无线充电
U6200 快充芯片
Q
J3200 电池接口
SMC_I2CM1
U2700 主电源
U6300 USB芯片
U1000
XR
A12
I2C0
U3100 升压芯片
U6150 附件供电
U5660 背光芯片2
J6500 尾插座
I2C1
J4300 闪光灯座
I2C2
U2700 主电源
U5500 显示电源
U5650 背光芯片1
U5002 听筒功放
I2C3
J5800 触控座
I2C4_AP
U1401 逻辑码片
I2C0_SMC
U3300 充电芯片
U3400 无线充电
U6200 快充芯片
Q
J3200 电池接口
I2C1_SMC
U2700 主电源
U6300 USB芯片
U1000
11
A13
I2C0
U5660 背光芯片2
I2C1
J7700 闪光灯座
I2C2
U2700 主电源
U5500 显示电源
U5650 背光芯片1
U5002 听筒功放
I2C3
J8100 触控座
I2C4
U1401 逻辑码片
I2C0_SMC
U3100 升压芯片
U3300 充电芯片
U6200 快充芯片
I2C1_SMC
U6150 附件供电
U6300 USB芯片
I2C2_SMC
J7000 电池接口
U1000
11ProMax
A13
I2C0
×
I2C1
J7700 闪光灯座
I2C2
U5000 听筒功放
I2C3
J8100 触控座
I2C4
U1401 逻辑码片
I2C0_SMC
U3100 升压芯片
U6200 快充芯片
I2C1_SMC
U6150 附件供电
U6300 USB芯片
I2C2_SMC
J8200 尾插座
U1000
12ProMax
A14
I2C0
×
I2C1
×
I2C2
U8100 听筒功放
I2C3
U9000 触摸芯片
J11800 显示触摸座
I2C4
U9100 显示电源
I2C0_S_SCL
U1700 逻辑码片
I2C0_SMC
U9400 快充芯片
I2C1_SMC
U9500 附件供电
U9300 USB芯片
U9600 USB信号转换芯片
I2C2_SMC
U2470 总线转换管
U4000 充电芯片
J10000 电池座
I2C0_AOP
U2470 总线转换管
J11000 听筒泛光座
I2C1_AOP
U7400
J11200 尾插
U1000
12-12Pro
A14
I2C0
×
I2C1
×
I2C2
U8100 听筒功放
I2C3
J11600 触摸座
I2C4
U9100 显示电源
J11500 显示座
I2C0_S_SCL
U1700 逻辑码片
I2C0_SMC
U9400 快充芯片
I2C1_SMC
U9500 附件供电
U9300 USB芯片
U9600 USB信号转换芯片
I2C2_SMC
U2470 总线转换管
U4000 充电芯片
J10000 电池座
I2C0_AOP
U2420 总线转换管
J11000 听筒泛光座
I2C1_AOP
U7500
J11200 尾插

迅维职业技能培训中心 手机电脑维修培训
www.xinxunwei.com QQ191686994
0755-27396416 27396417