


L 1 & 2 Trouble Shooting Guide

1. Fail to power on

NO.	Issue Description	Cause	Solution
1	Fail to power on	Side key FPC doesn't connect well	re-connect
		side key FPC breaks	replace side key FPC
		MB has defects	Refer to MB Service Manual


1. Check if the FPC is damaged or connects improperly
2. Replace the side key
3. Check and repair MB

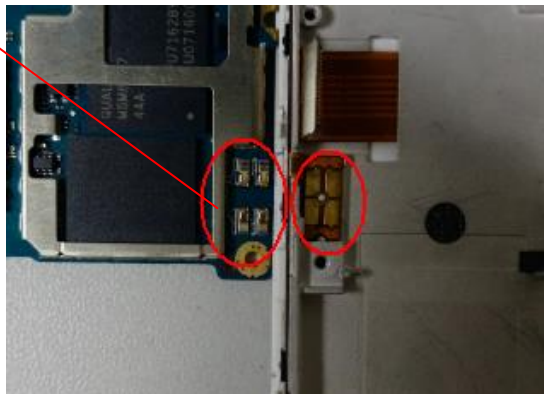

2. LCD

NO.	Issue Description	Cause	Solution
1	LCD shows blank screen/white screen/lines	LCD FPC isn't well assembled	re-assemble LCD FPC
		FPC breaks	replace LCD
		MB has defects	Refer to MB Service Manual
		Link FPC isn't well assembled	re-assemble FPC
		Link FPC breaks	replace Link FPC
		SW cause	re-update software
		FPC connector damages	replace LCD
2	LCD has defective appearance	LCD scratches	replace LCD
		LCD is damaged	replace LCD

1. Check if LCD FPC is assembled in place without break.
2. Use fixture to test LCD quality, replace LCD if bad.
3. Check and repair MB.

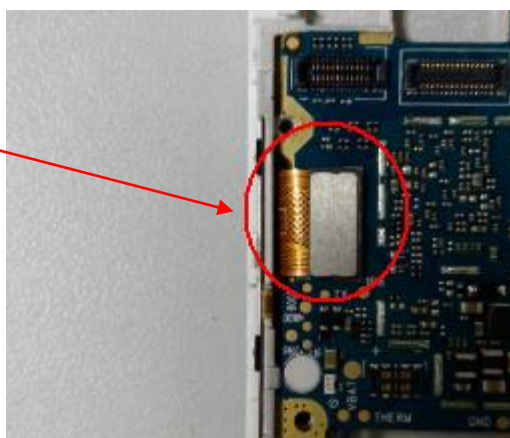

ASUS ZC520KL


3. TP issue

NO.	Issue Description	Cause	Solution
1	TP touch pad fails	FPC isn't well assembled	re-assemble TP FPC
		FPC breaks	replace TP
		MB is damaged	refer to MB Service Manual
2	TP appearance has defects	TP scratches	replace TP
		TP is damaged	replace TP

1. Check if TP have scratches, damages and defective appearance



2. Check if TP FPC is assembled in place or breaks
3. Use fixture to test TP quality, replace it if bad
4. Check and repair MB

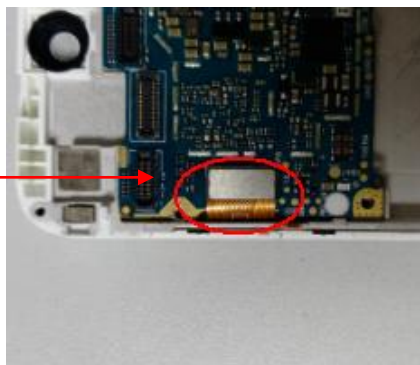

ASUS ZC520KL

4. flashlight issue

NO.	Issue Description	Cause	Solution
1	flashlight fails to work	MB is damaged	refer to MB Service Manual

1. Check and repair MB




5. Side key button issue

NO.	Issue Description	Cause	Solution
1	Side key button has no response	Side FPC's connection has defects	replace FPC
		Side key button has defects	1.replace the battery cover 2.replace side key FPC



1. Check the side key button's touching, if it is assembled in place.
2. Check if the side key FPC's connector cover is flexible, if the FPC is inserted in place.

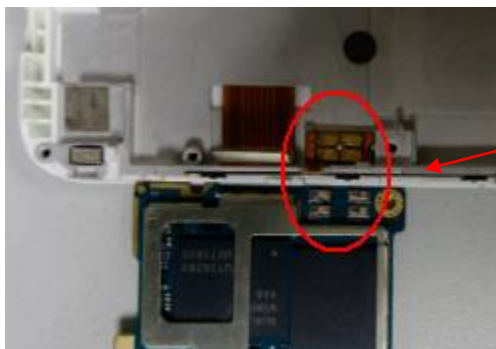

3. Check if the side key FPC isn't well connected or breaks; replace it if bad.
4. Check and repair MB


ASUS ZC520KL

6. Charging issue

NO.	Issue Description	Cause	Solution
1	Not charging	USB cable breaks	Replace USB cable
		Charging broken head	Replace charging head
		MB is damaged	Refer to MB Service Manual
2	Charging slowly	USB cable breaks	Replace USB cable
		Charging broken head	Replace charging head
		MB is damaged	Refer to MB Service Manual

7. Rear camera issue

NO.	Issue Description	Cause	Solution
1	Camera not prepared, not working/No function	Rear camera FPC isn't well assembled	re-assemble camera FPC
		Rear camera is defective	Replace the camera
		MB is damaged	Repair MB
2	Cannot start the rear camera	Rear camera is defective	Replace the camera
3	Picture fault	FPC isn't well assembled or connection has defects	re-assemble camera FPC
		Rear camera has defects	Replace the camera
		MB is damaged	Repair MB

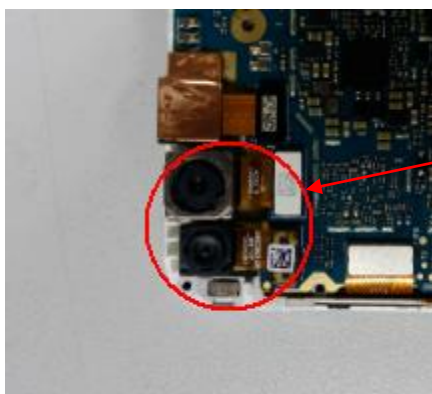


1. Check if the FPC is assembled in place or breaks.
2. Use fixture or good MB to test the camera quality.
3. Check and repair MB

8. Front camera issue

ASUS ZC520KL

NO.	Issue Description	Cause	Solution
1	Camera not prepared, not working/No function	Front camera FPC isn't well assembled	re-assemble
		Front camera is defective	Replace the camera
		MB is damaged	Repair MB
2	Cannot start the front camera	Front camera is defective	Replace the camera
3	Image fault	Front camera FPC isn't well assembled	re-assemble
		Front camera is defective	Replace the camera
		MB is damaged	Repair MB

4. Check if the camera FPC is assembled in place or breaks.
5. Use fixture or good MB to test the camera quality.
6. Check and repair MB

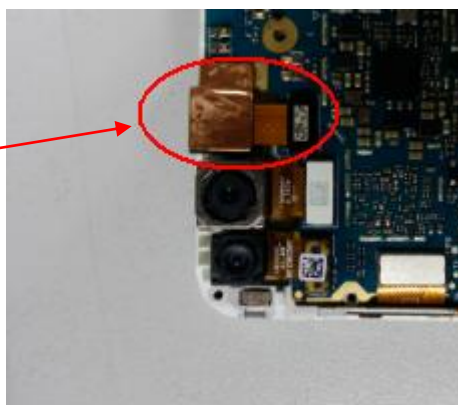

9. Motor vibration issue

NO.	Issue Description	Cause	Solution
1	No vibration	connection	re-connect
		motor	replace
		MB is damaged	Repair MB



1. Check if the motor cable breaks or is soldered properly.
2. Check if the motor vibrates or not.
3. Check and Repair MB

ASUS ZC520KL

10. No main signal


NO.	Issue Description	Cause	Solution
1	No signal or poor signal	MB has defects	Repair MB
		Coaxial cable is defective	replace coaxial cable
		Coaxial cable isn't well assembled	Re-assemble coaxial cable

1. Check if the coaxial cable is assembled in place or breaks.
2. Check the coaxial cable quality.
3. Check and repair MB



11. GPS has no signal

NO.	Issue Description	Cause	Solution
1	GPS has no signal	GPS antenna isn't well assembled	re-assemble
		GPS antenna has defects	replace GPS antenna
		MB is damaged	Repair MB

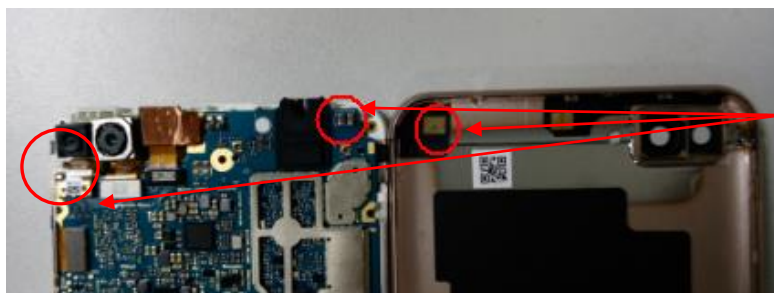

1. Check if GPS/WiFi antenna is damaged and well connected to MB.
2. Check the GPS antenna quality.
3. Check and repair MB

ASUS ZC520KL

12. MP4 plays abnormally



NO.	Issue Description	Cause	Solution
1	Multi-media plays abnormally	MB is damaged	Repair MB
		SW issue	Upgrade SW
		Speaker box is defective	replace Speaker box
		Speaker box isn't well assembled	re-assemble

13. Earphone issue

NO.	Issue Description	Cause	Solution
1	No function	Earphone is defective	replace earphone
		MB is damaged	Repair MB
2	Earphone acoustic anomaly	Earphone is defective	replace earphone
		MB is damaged	Repair MB

14. Receiver/speaker box issue

NO.	Issue Description	Cause	Solution
1	Acoustic anomaly	Speaker box has defects	replace
		MB has defects	Repair MB
2	No sound	Speaker box connects poorly	re-assemble
		Speaker box has defects	replace Speaker box
		MB has defects	Repair MB

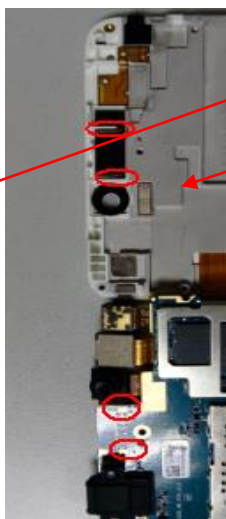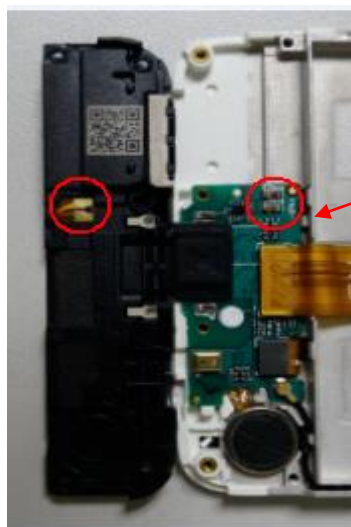

1. Check the speaker box's shrapnel connect well to KB.
2. Check the speaker box quality
3. Check and repair MB

15. Microphone issue

NO.	Issue Description	Cause	Solution
1	Acoustic problem	MIC has defects	replace
		Miss assembling MIC rubber case	Re-assemble
		MB has defects	Repair MB
2	MIC has no sound	MB has defects	Repair MB

ASUS ZC520KL

16. Battery issue

NO.	Issue Description	Cause	Solution
1	Screen shows charging but fail	MB has defects	Repair MB
2	Fail to fully charge	Battery problem	replace
		MB problem	Repair MB
3	Fail to charge	MB has defects	Repair MB



1. Check the battery quality, replace it if bad.
2. Check and repair MB.

17. fingerprint issue

NO.	Issue Description	Cause	Solution
1	fingerprint not prepared, not working/No function	fingerprint FPC isn't well assembled	re-assemble
		fingerprint is defective	Replace the fingerprint
		MB is damaged	Repair MB

7. Check if the fingerprint FPC is assembled in place or breaks.
8. Use fixture or good MB to test the fingerprint quality.
9. Check and repair MB

