


8. Level 3 Repair

8-1. Components Layout

PBA (Bottom)

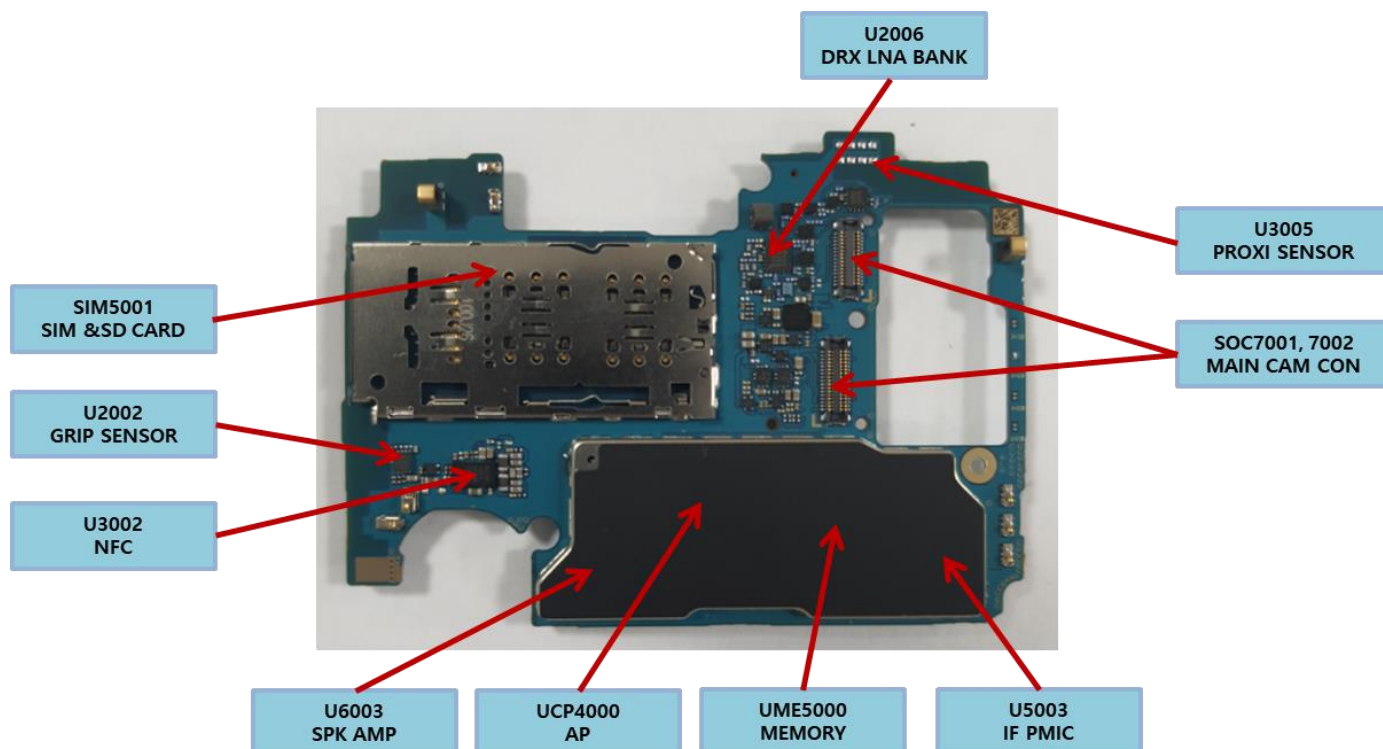


PBA (Top)

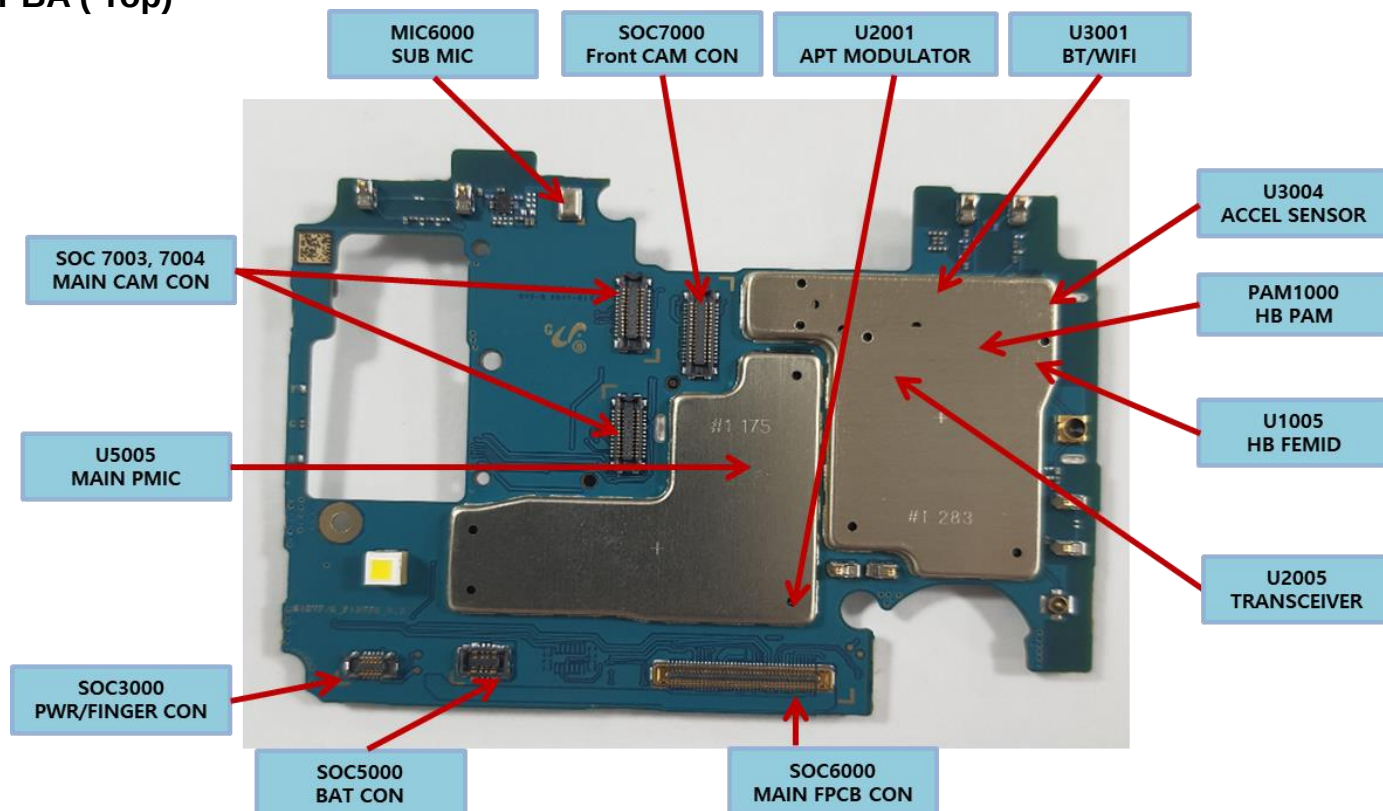

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

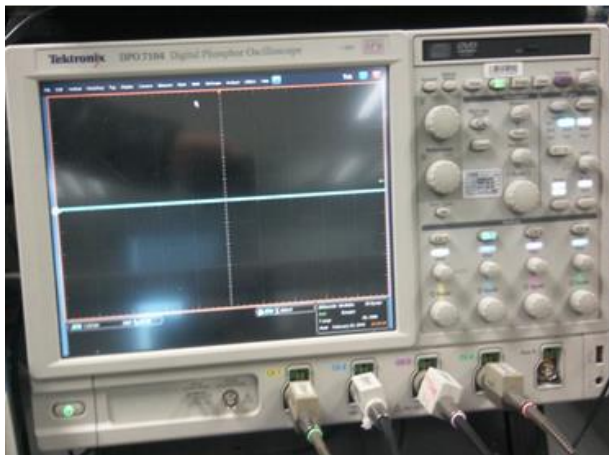

Oscilloscope




Digital Multimeter



Power Supply



+ driver, ESD Safe Tweezer

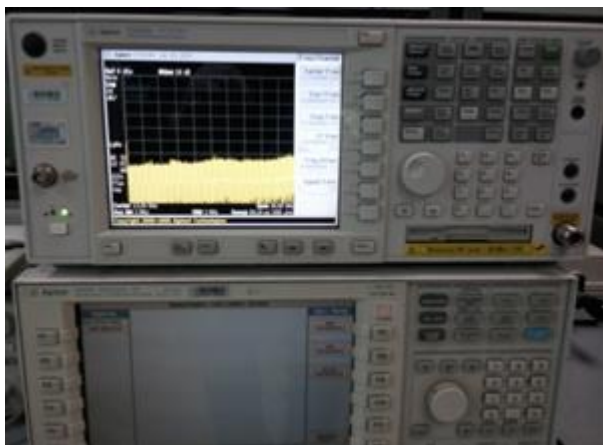



8960 & Spectrum Analyzer





Soldering iron


2020 M12 REV03 Block Diagram 20.12.14

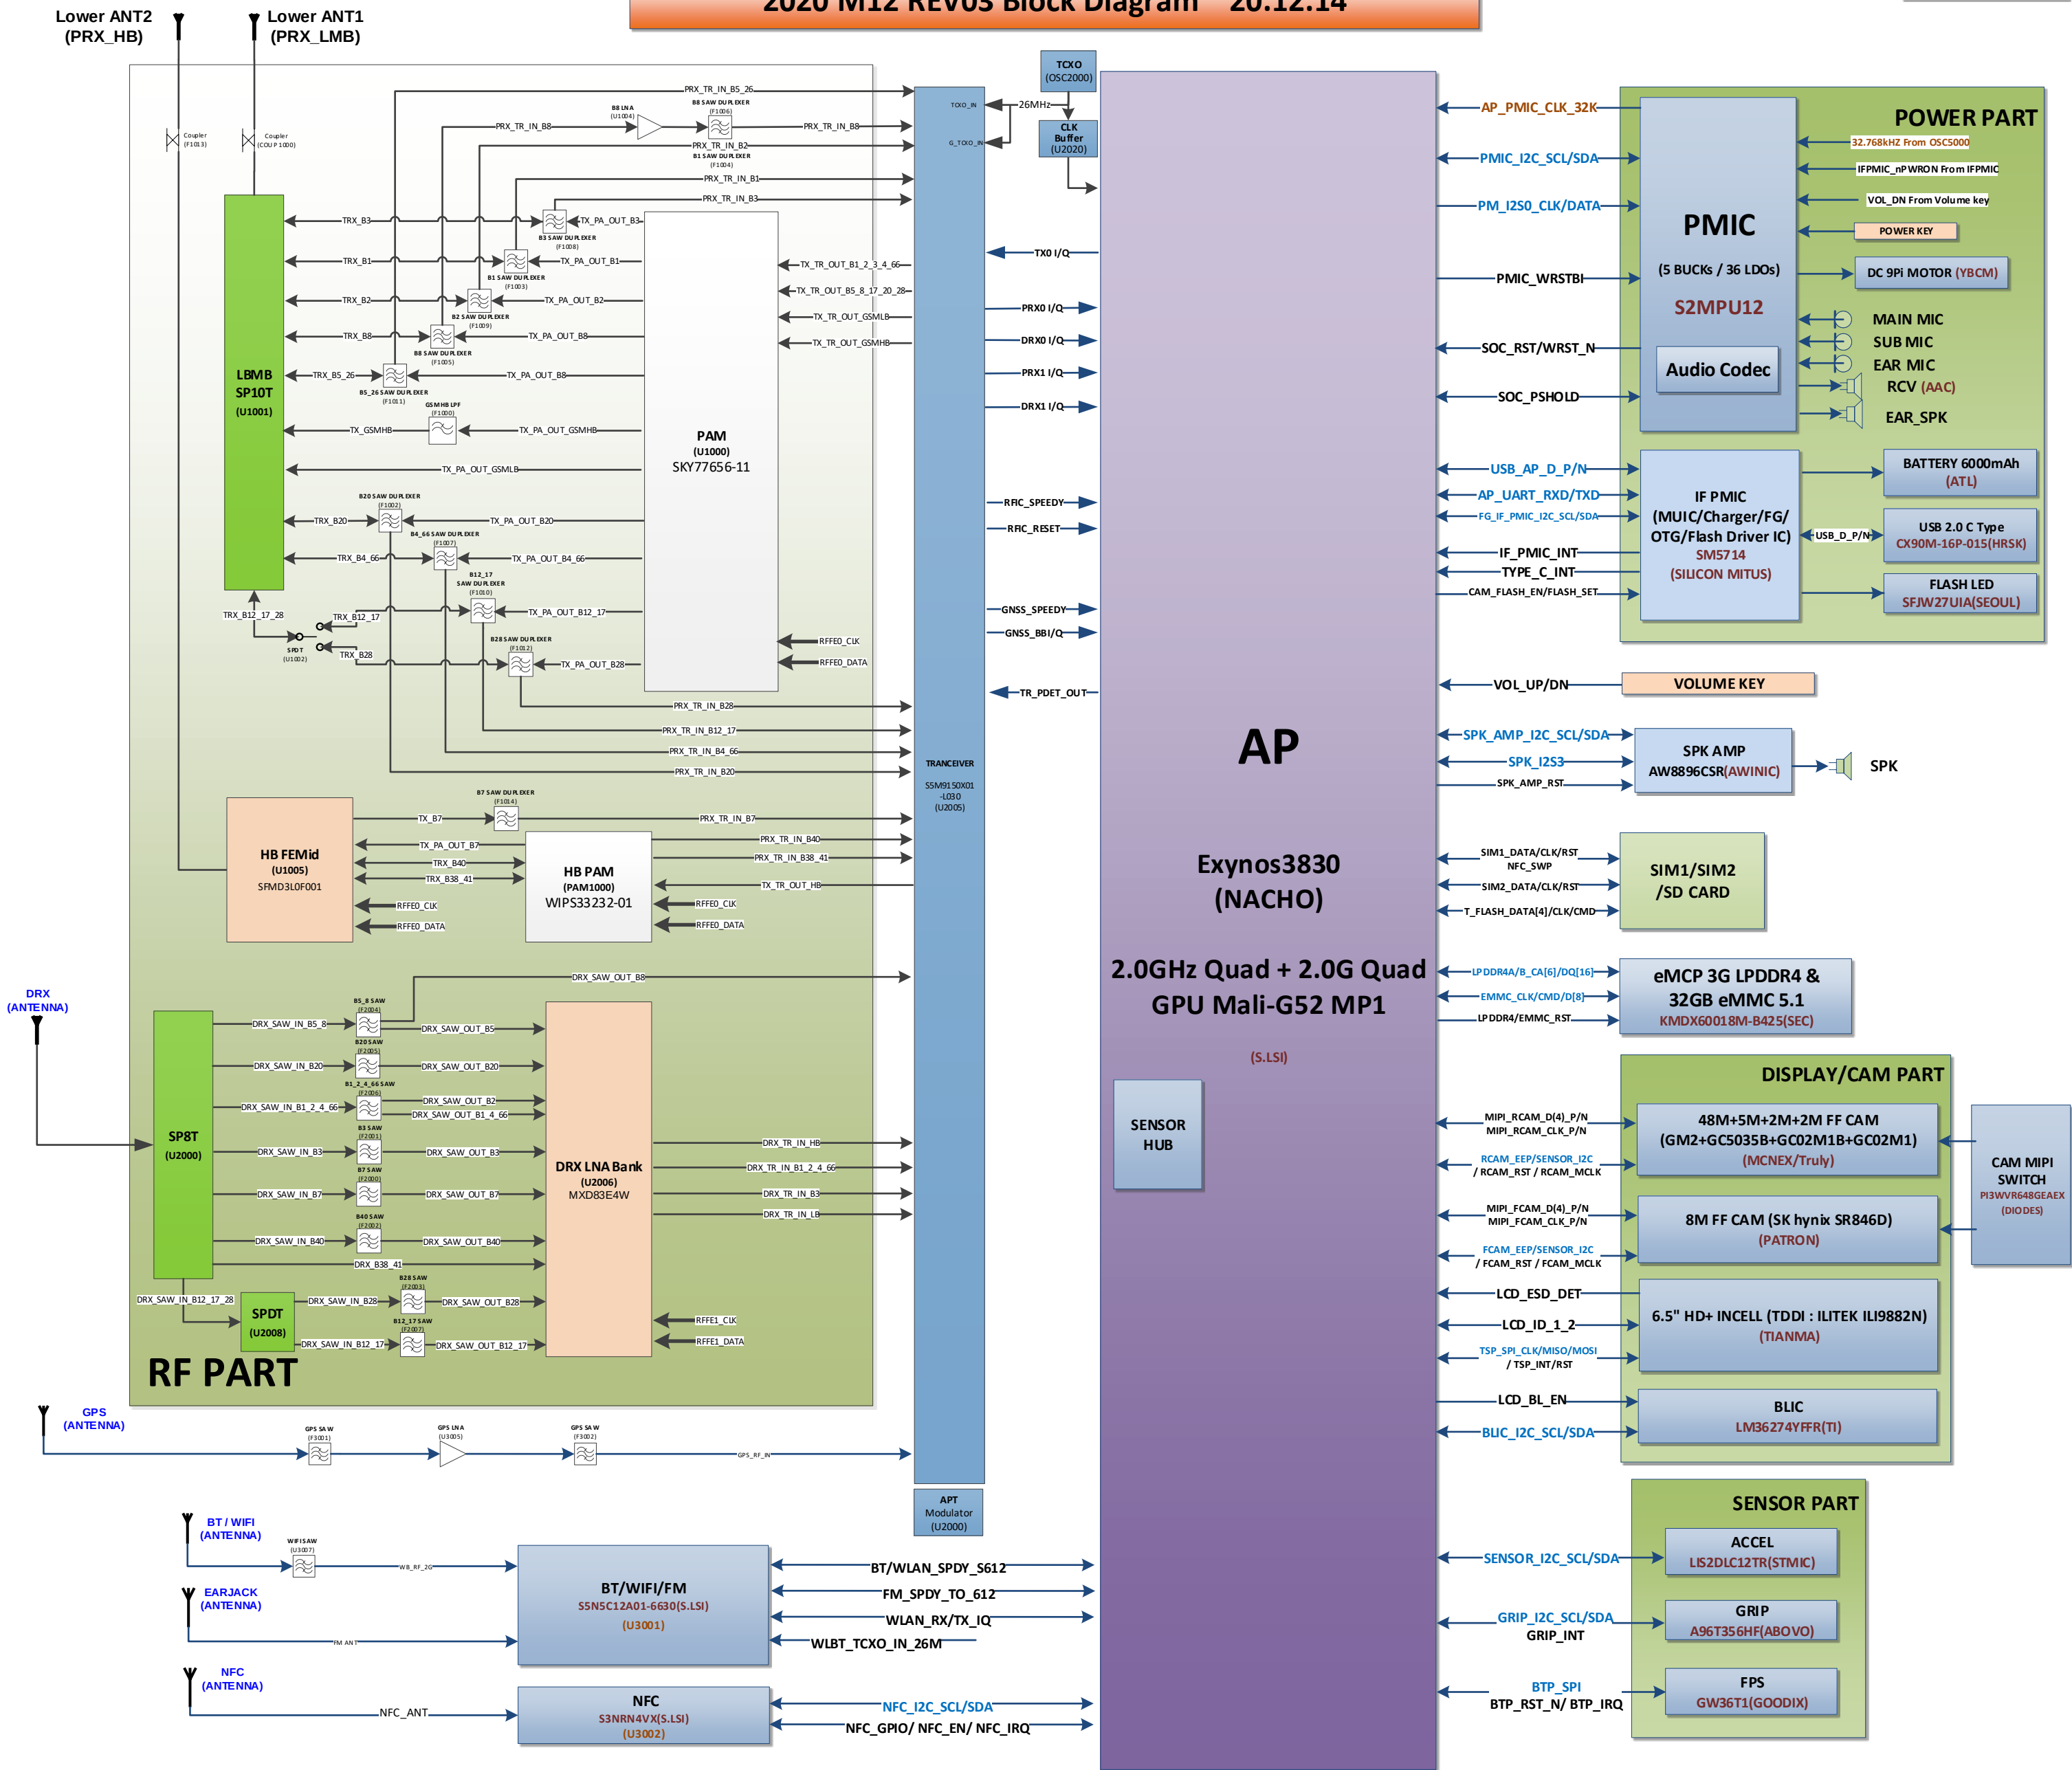

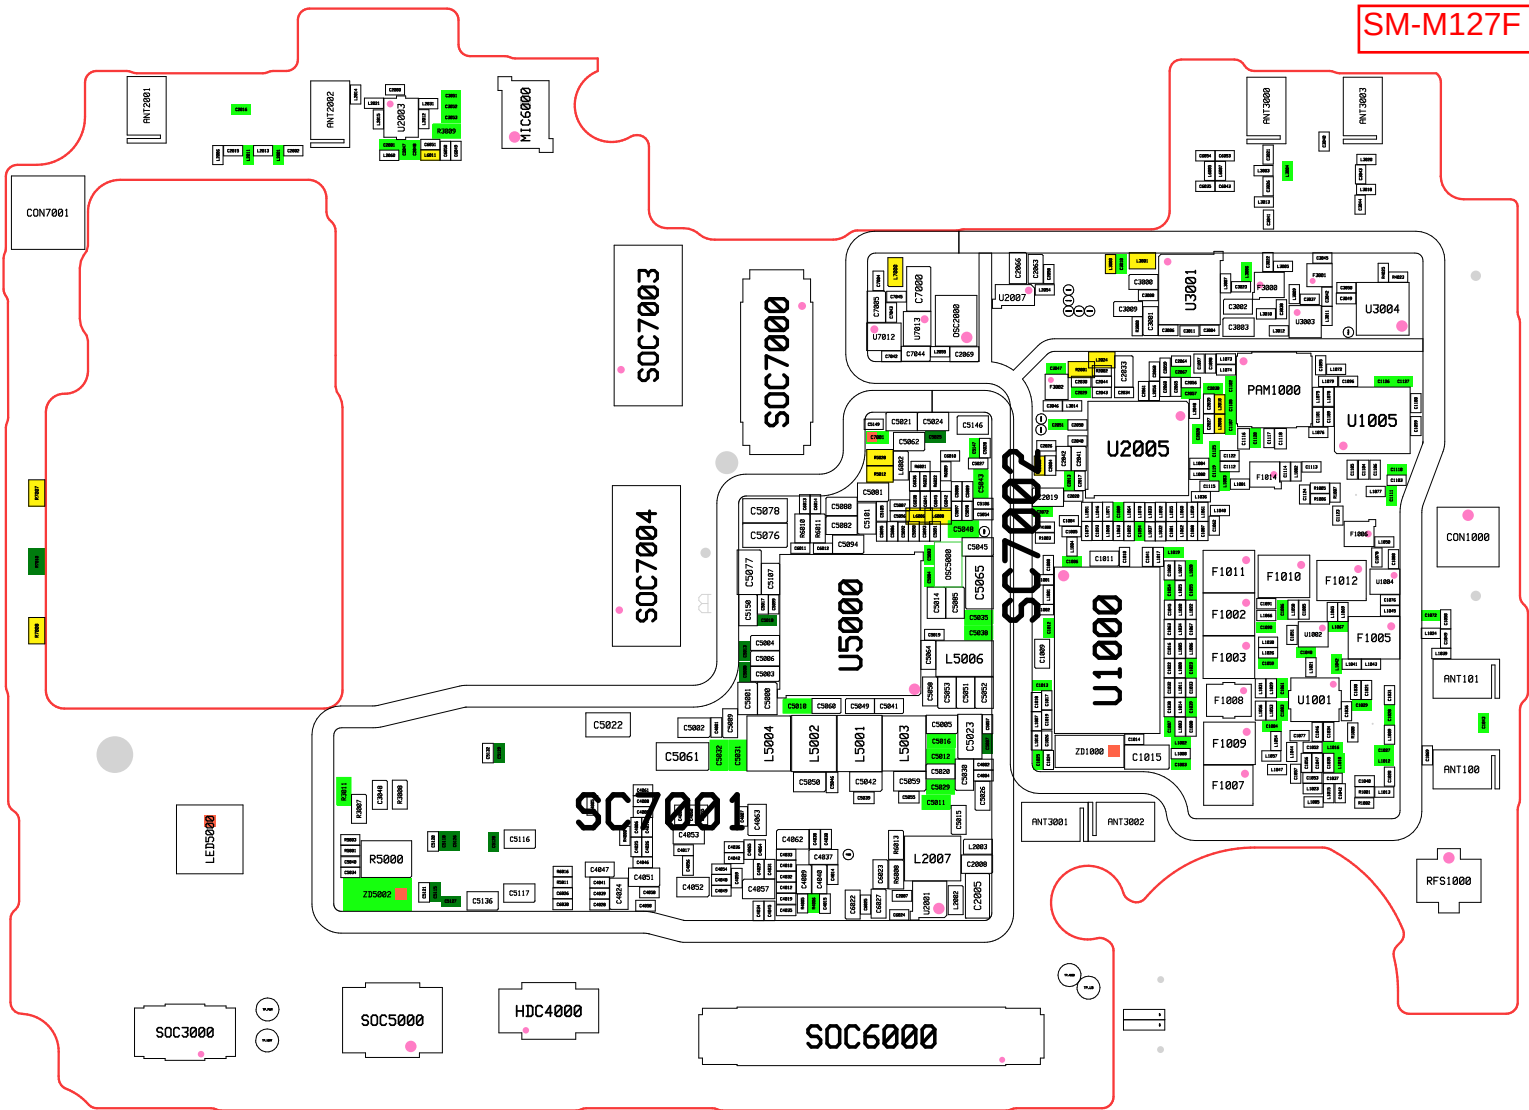


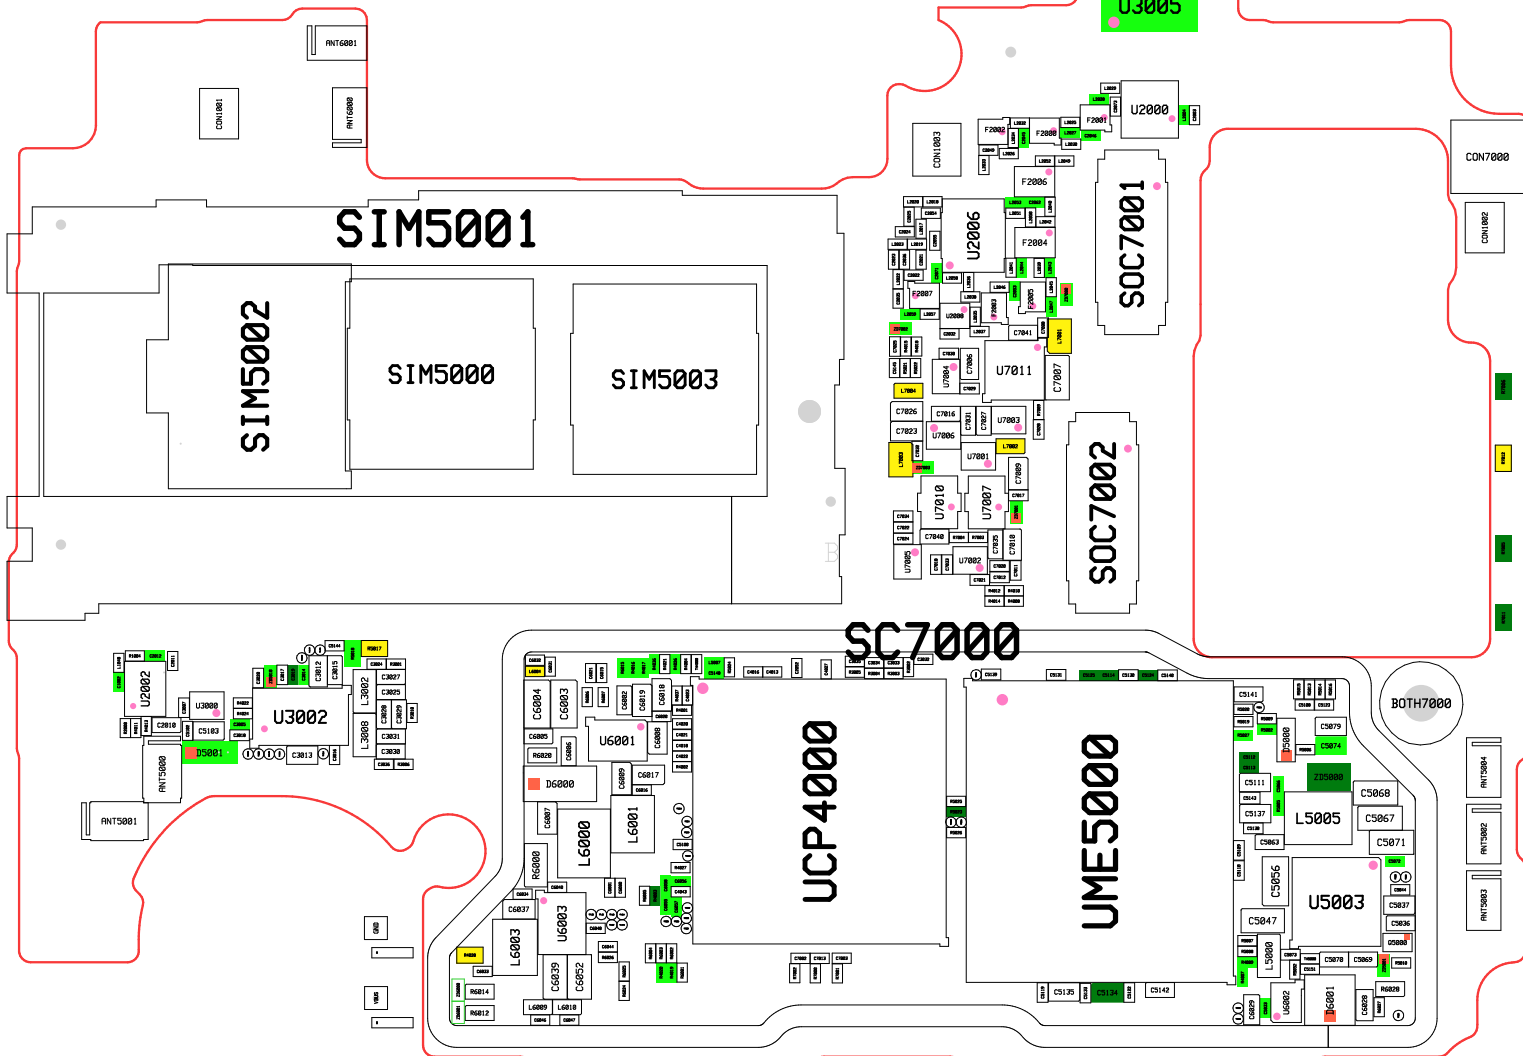

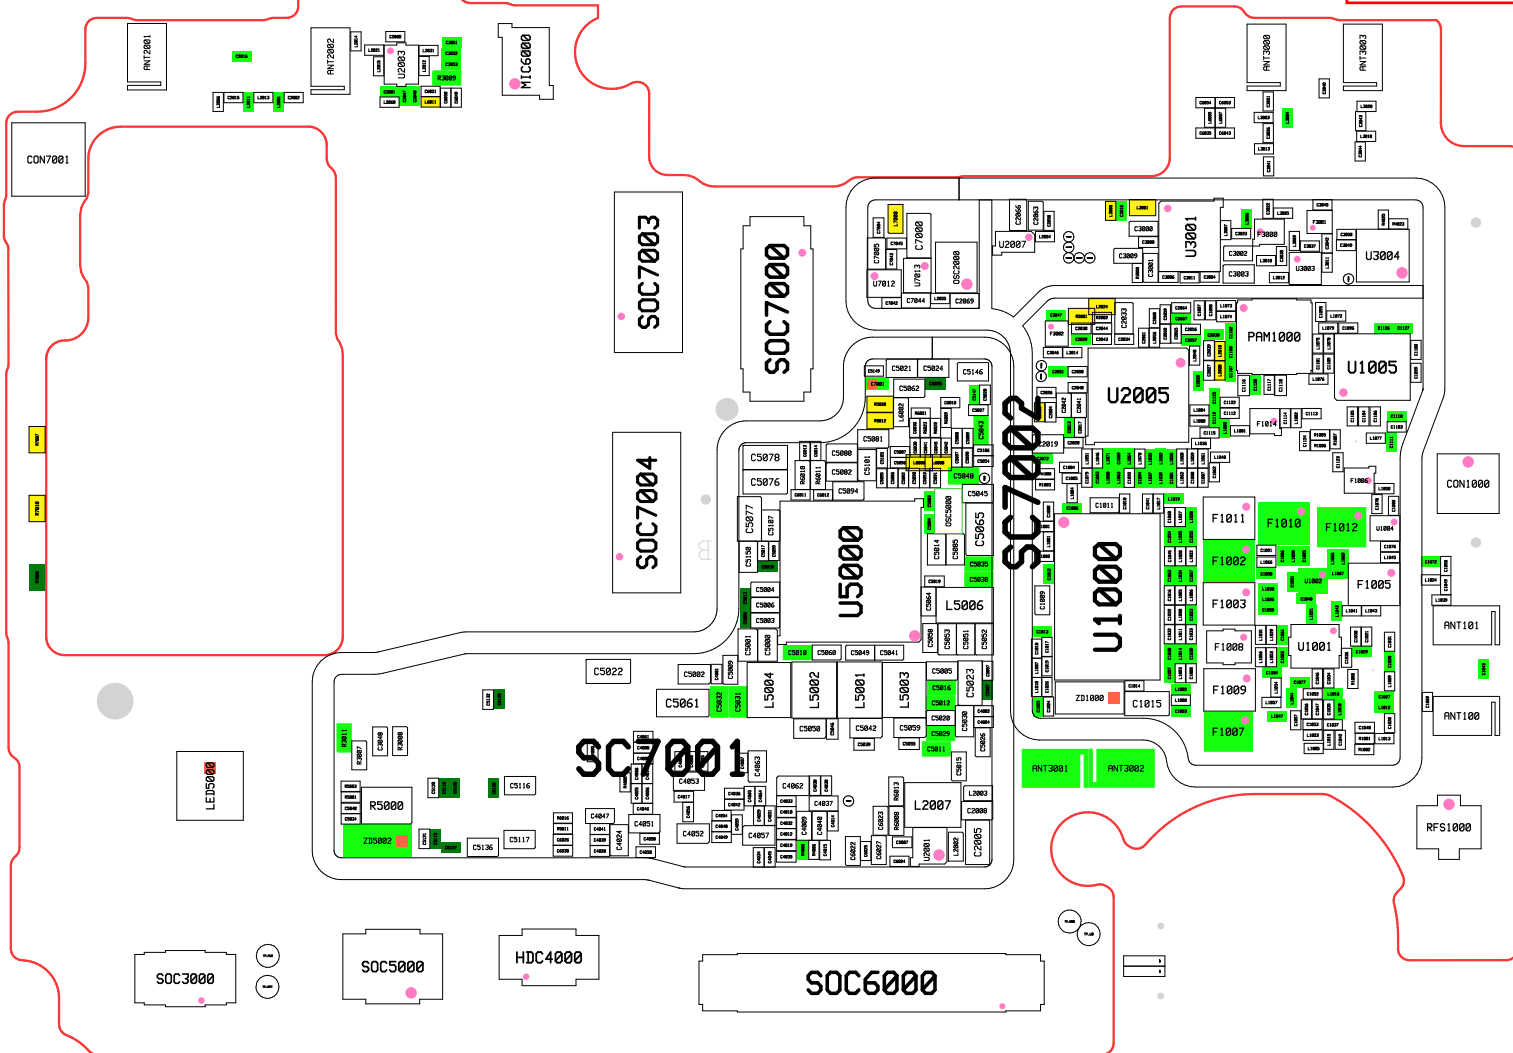

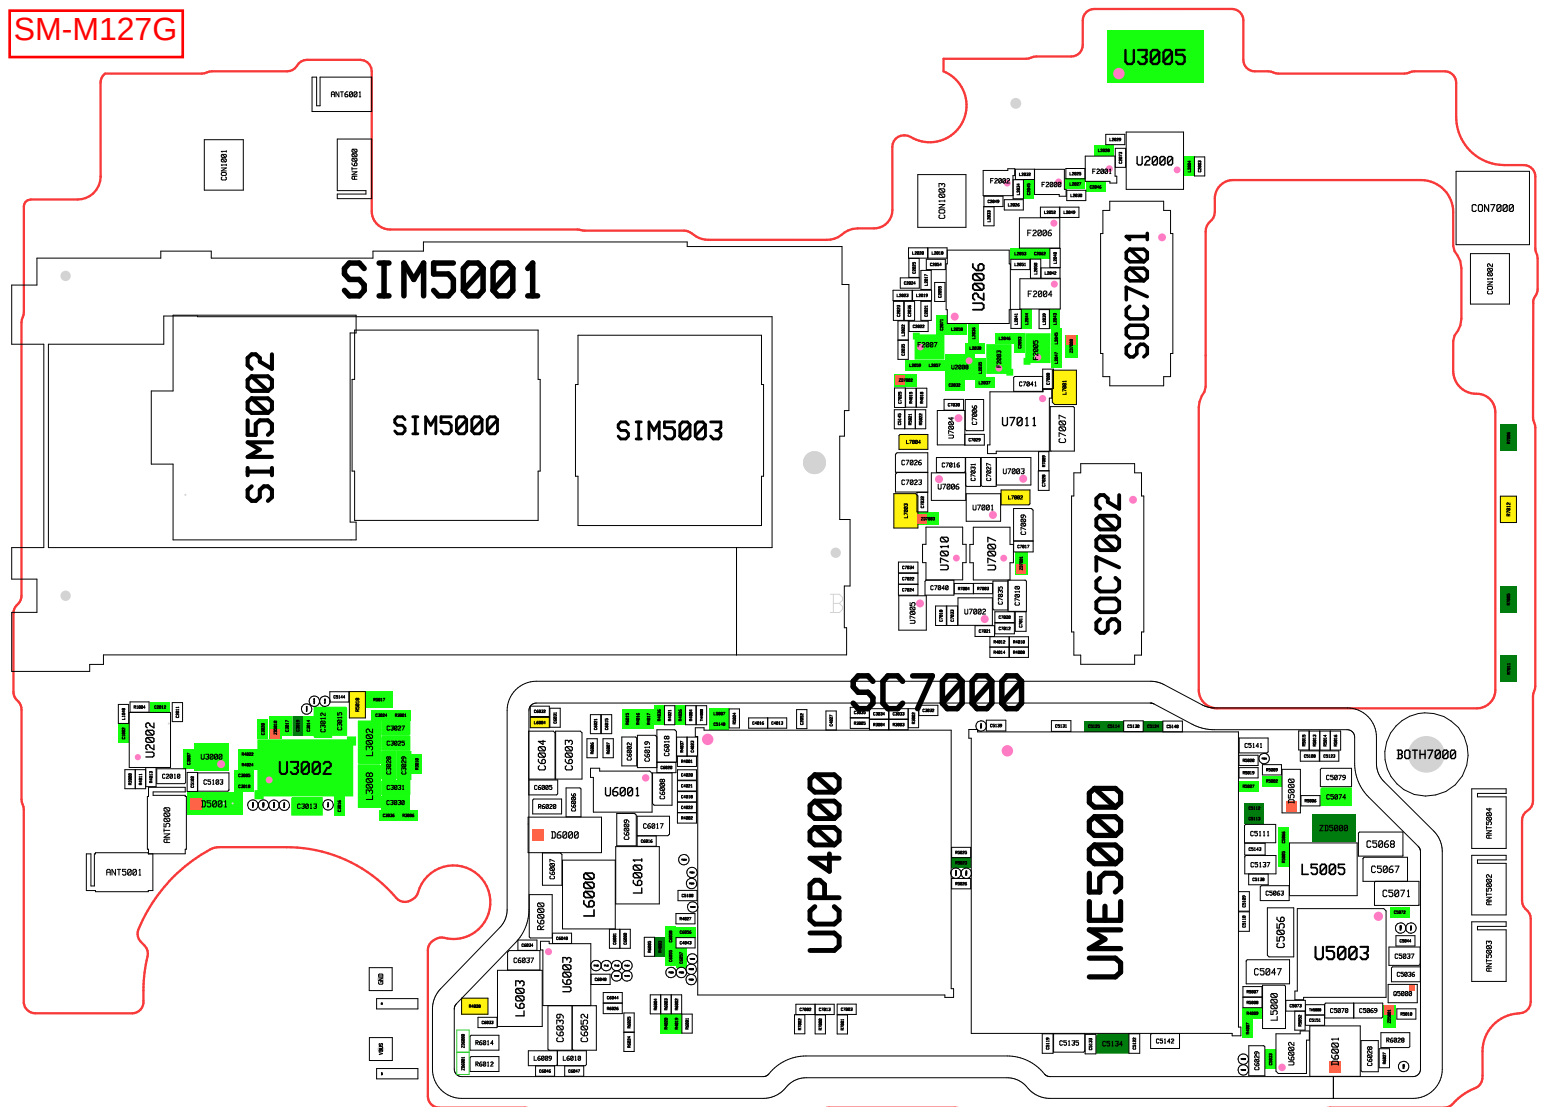


SM-F127G

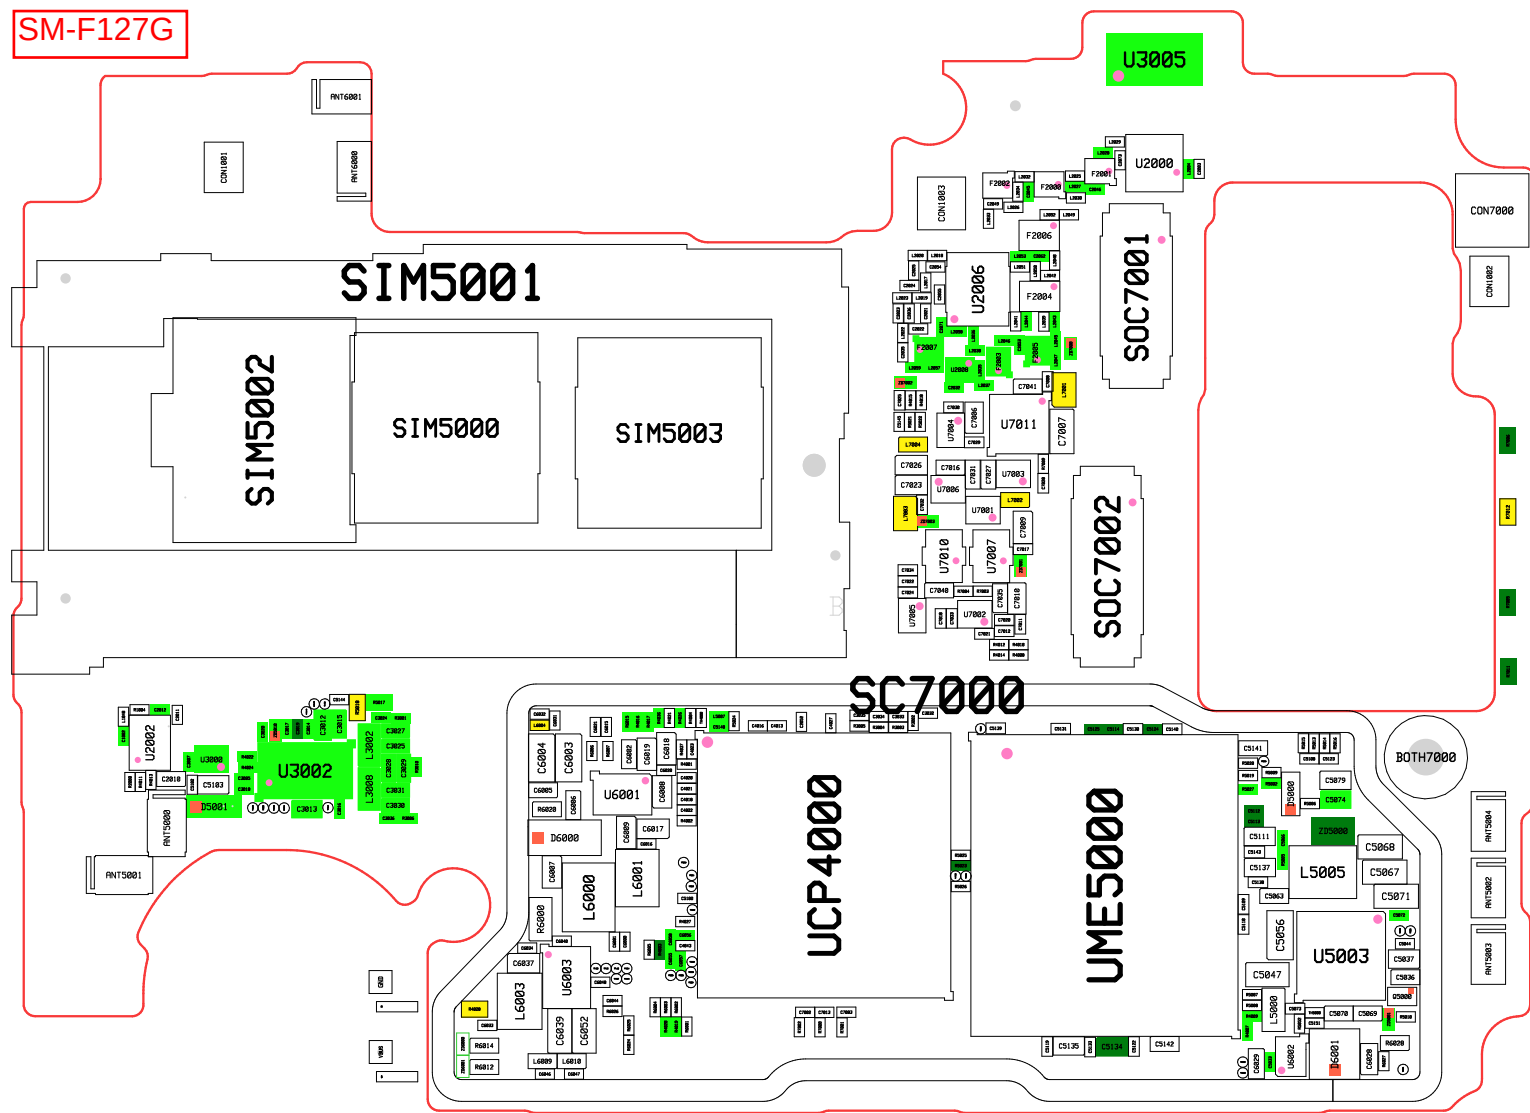


8. Level 3 Repair

8-4-1. Power On

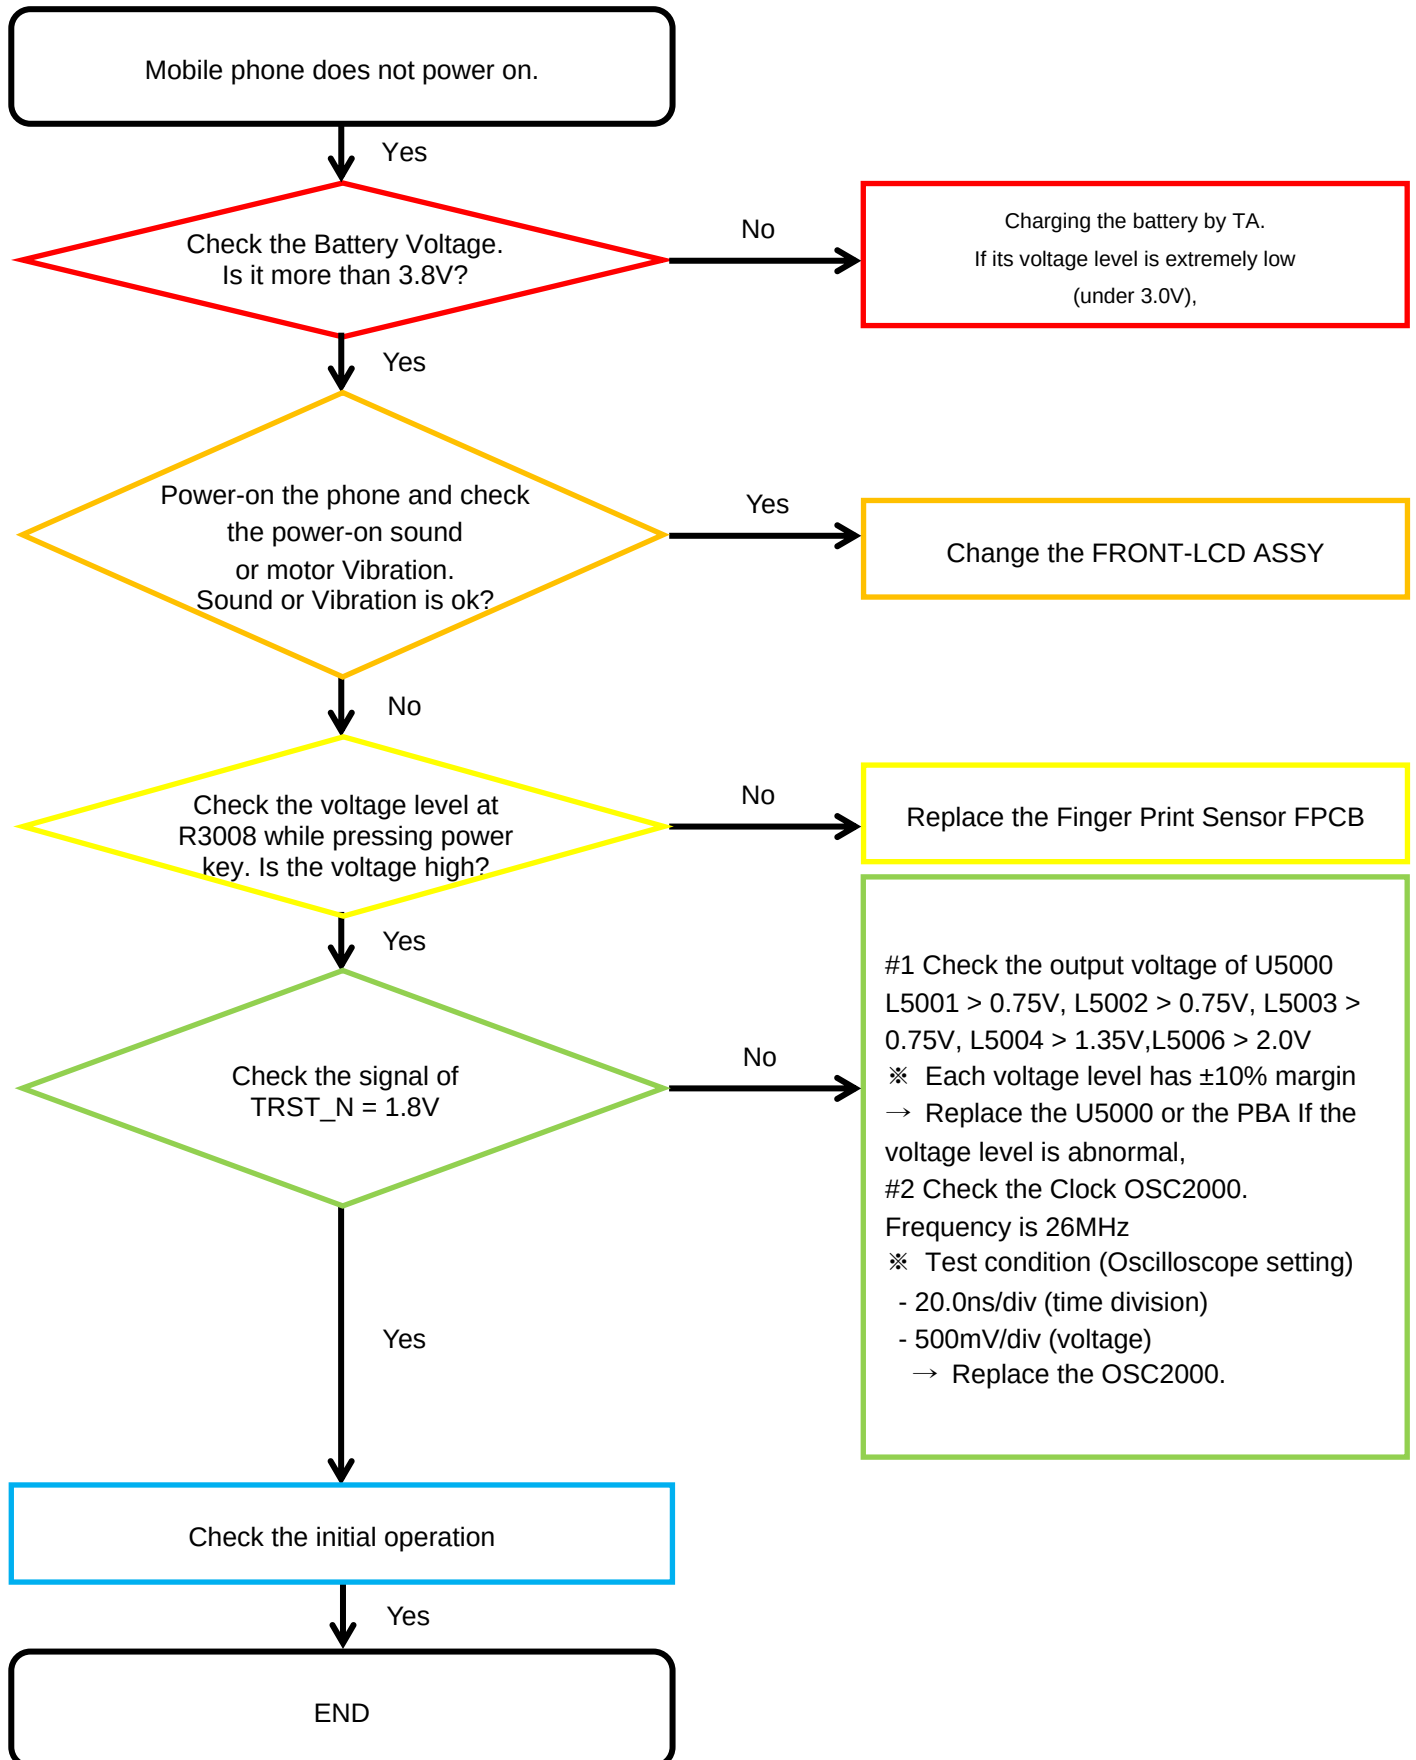


8. Level 3 Repair

8-4-2. Initial

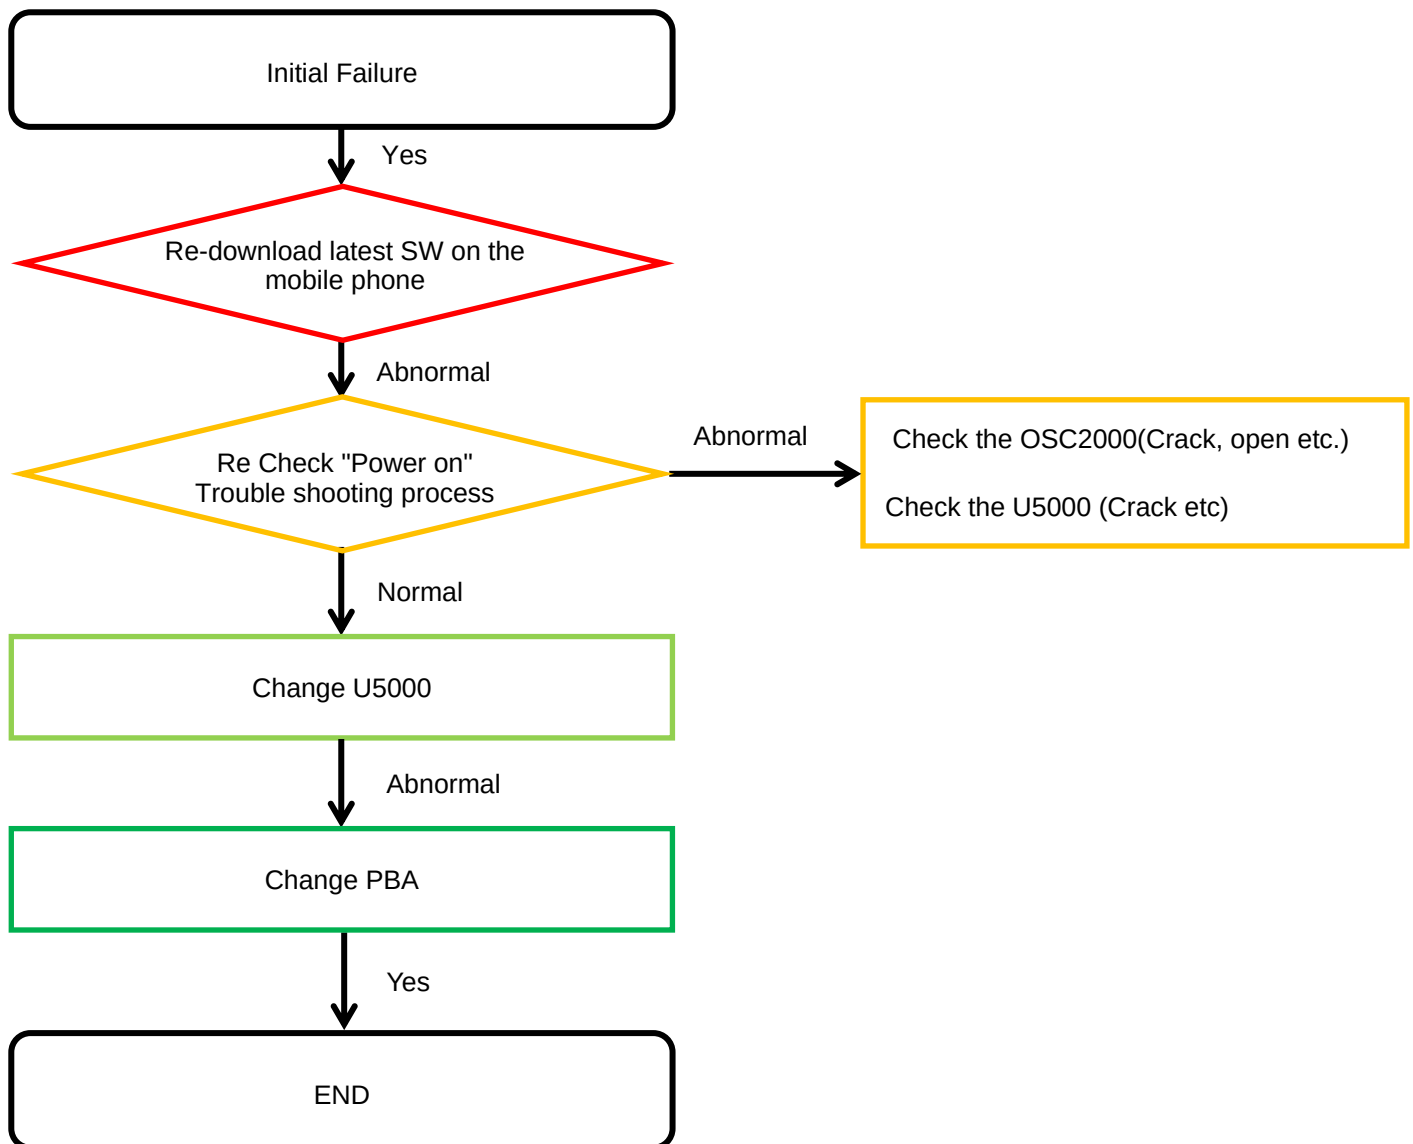


8. Level 3 Repair

8-4-3. No Service

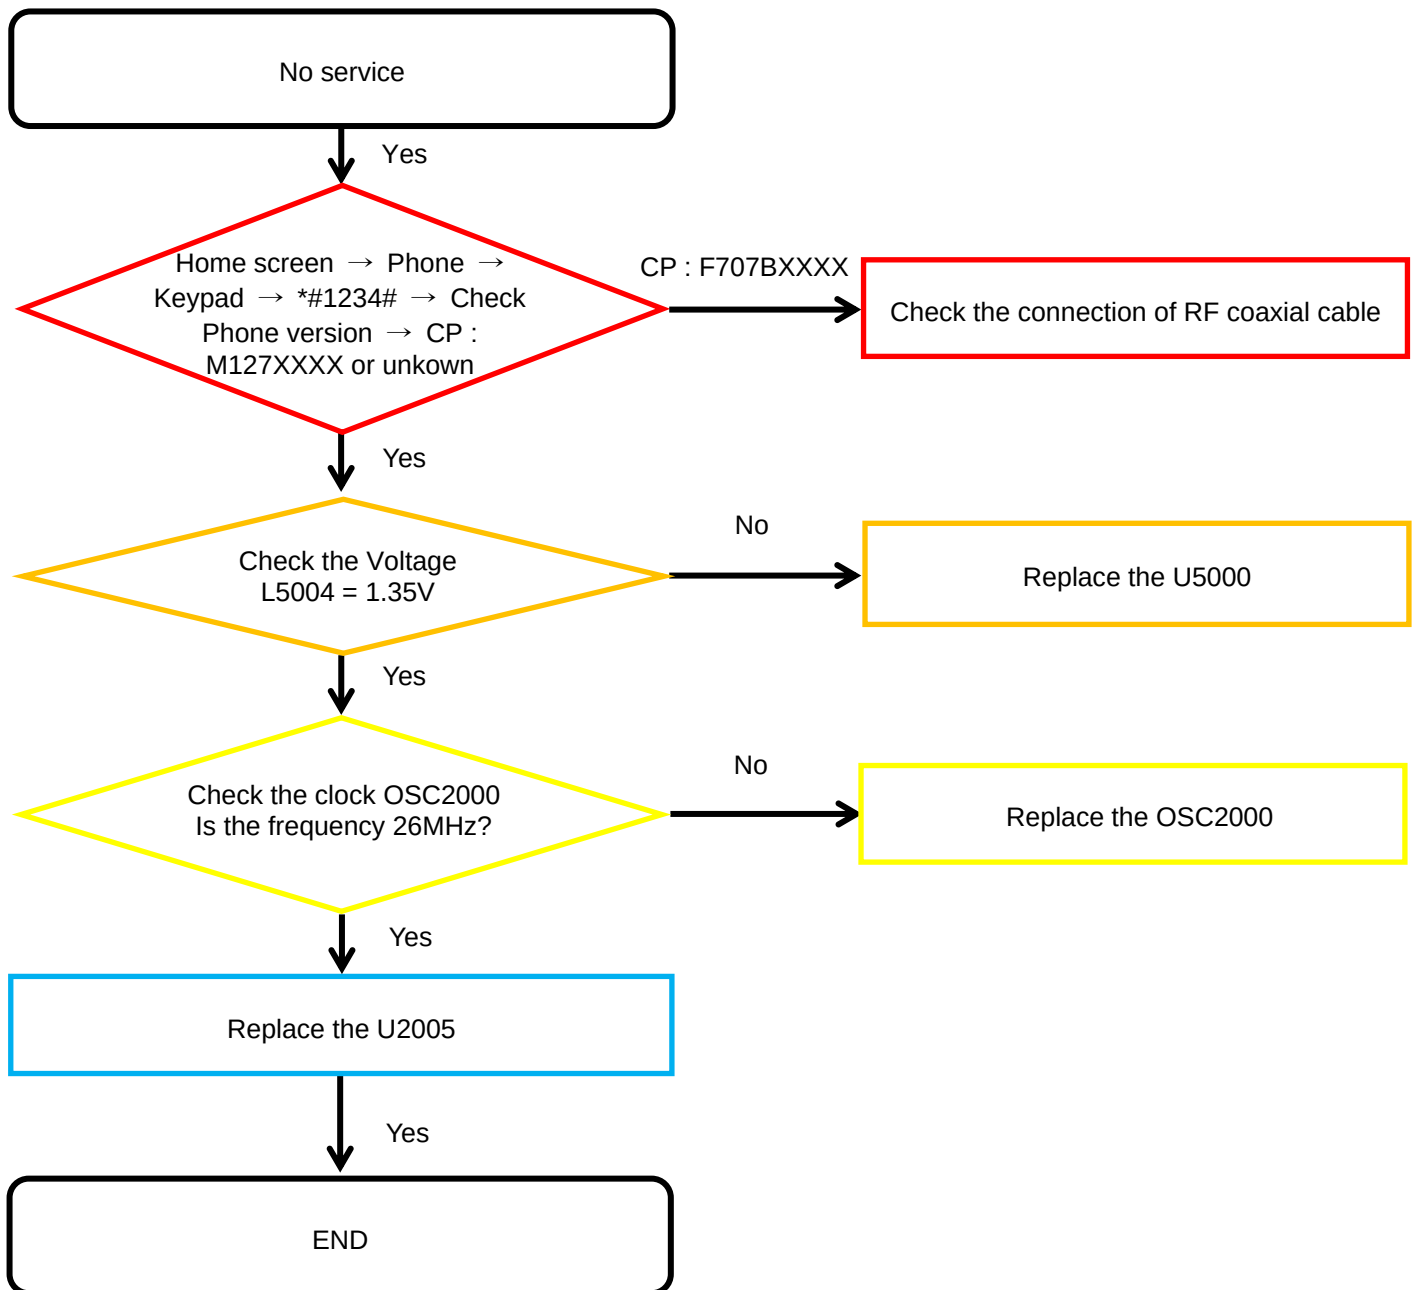


8. Level 3 Repair

8-4-4. SIM Part

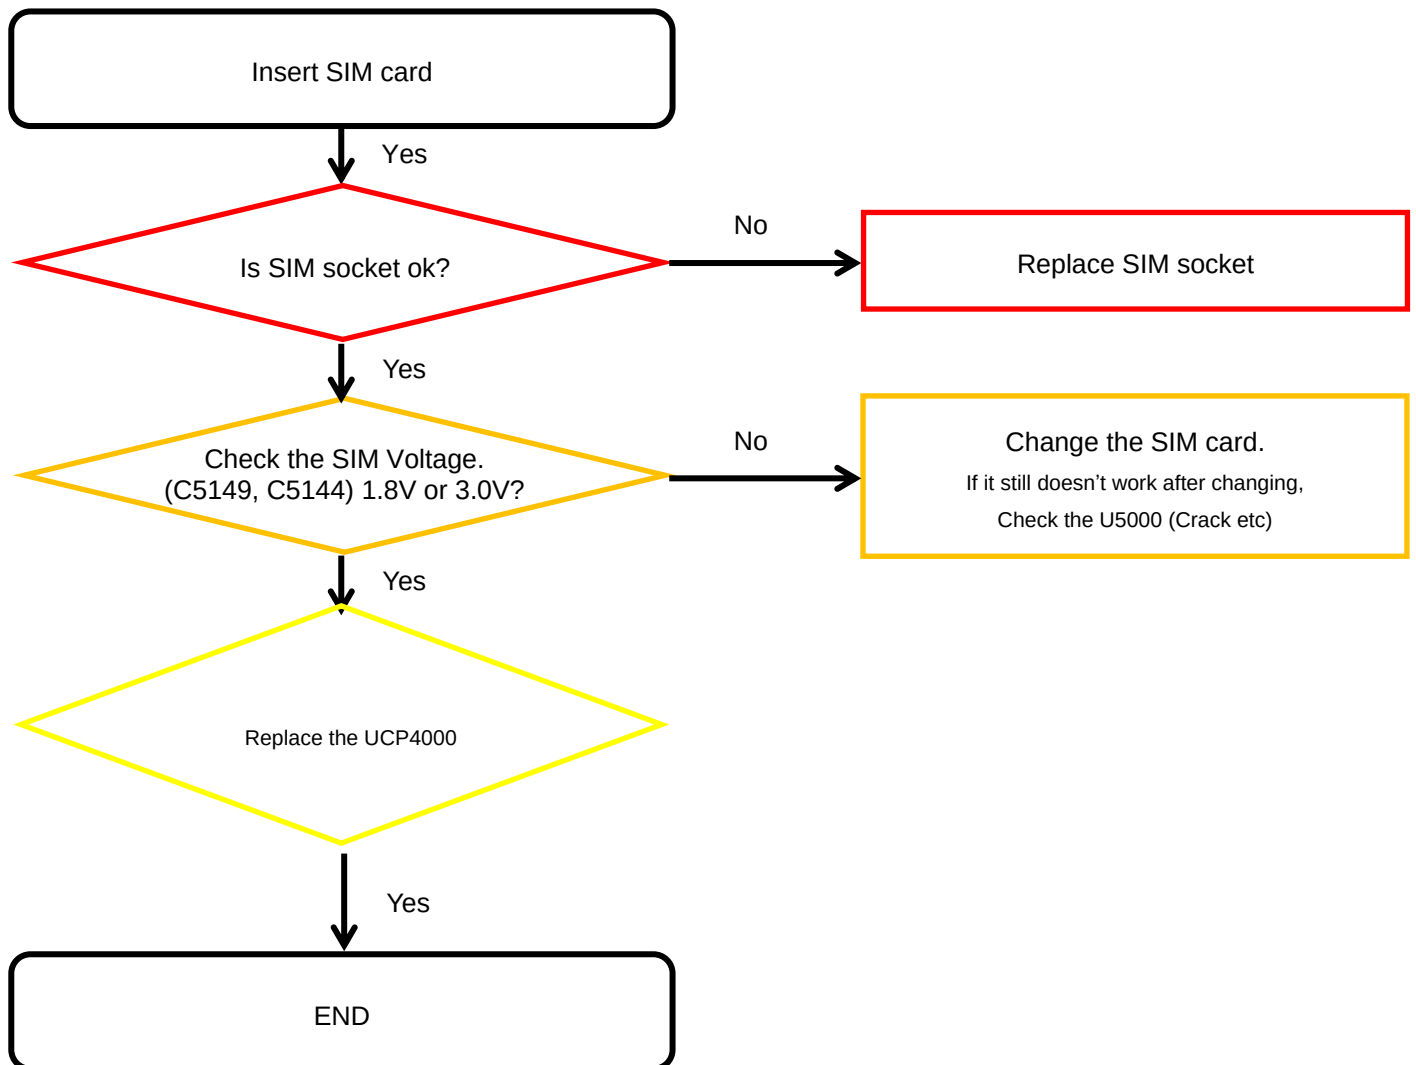


8. Level 3 Repair

8-4-5. T-Flash Part

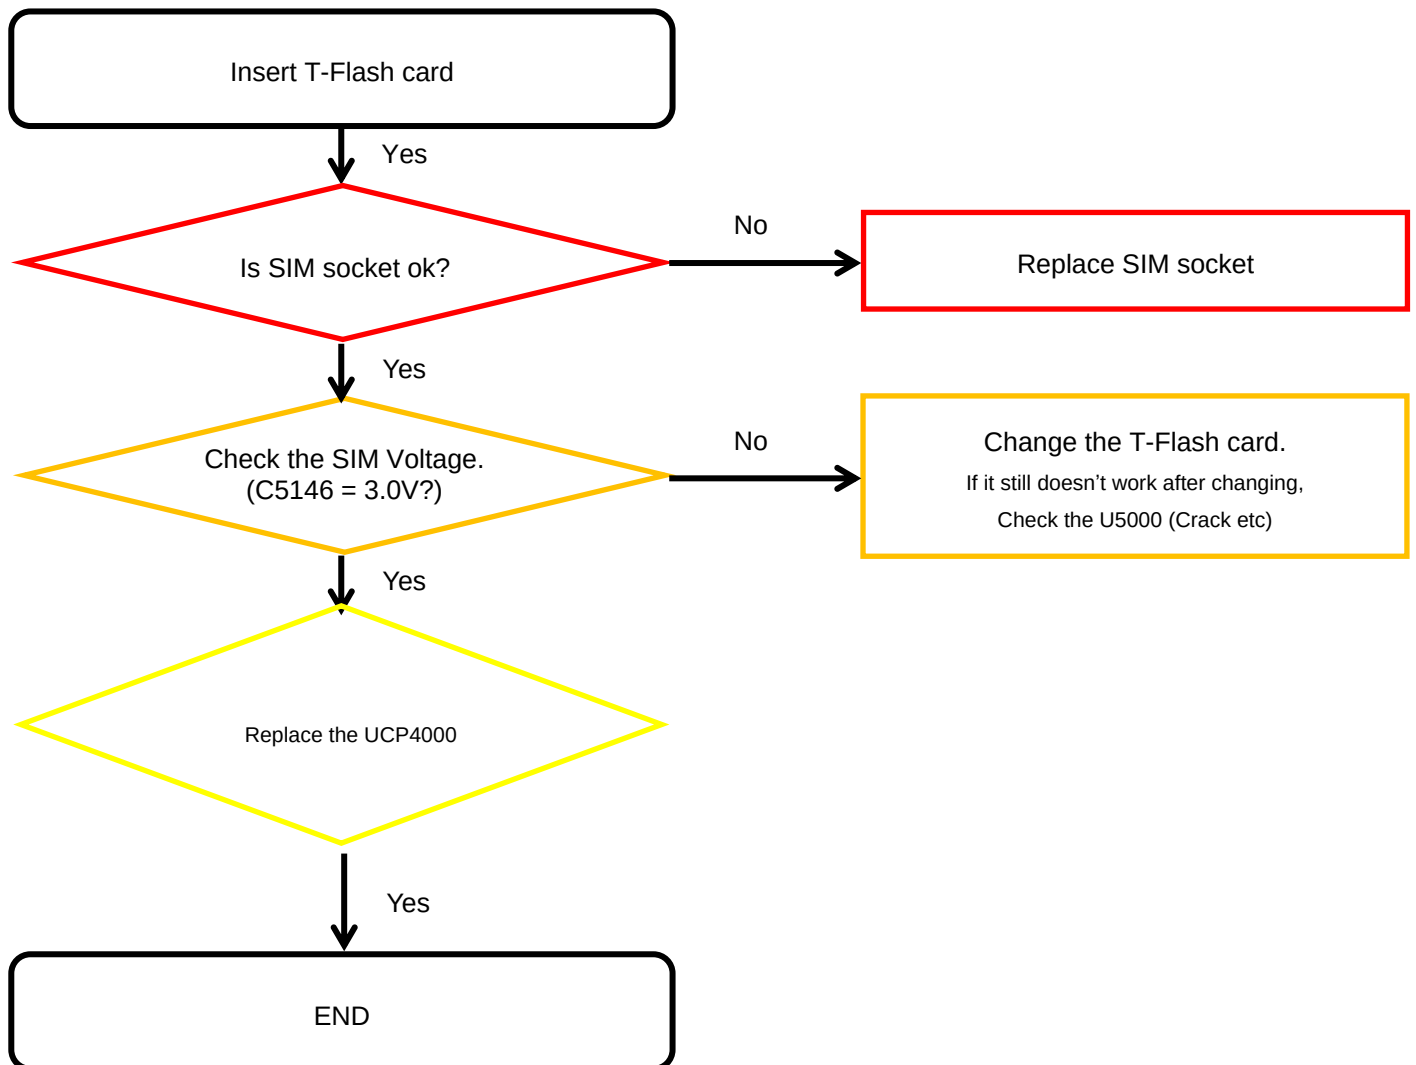


8. Level 3 Repair

8-4-6. Cable Charging Part (15W)

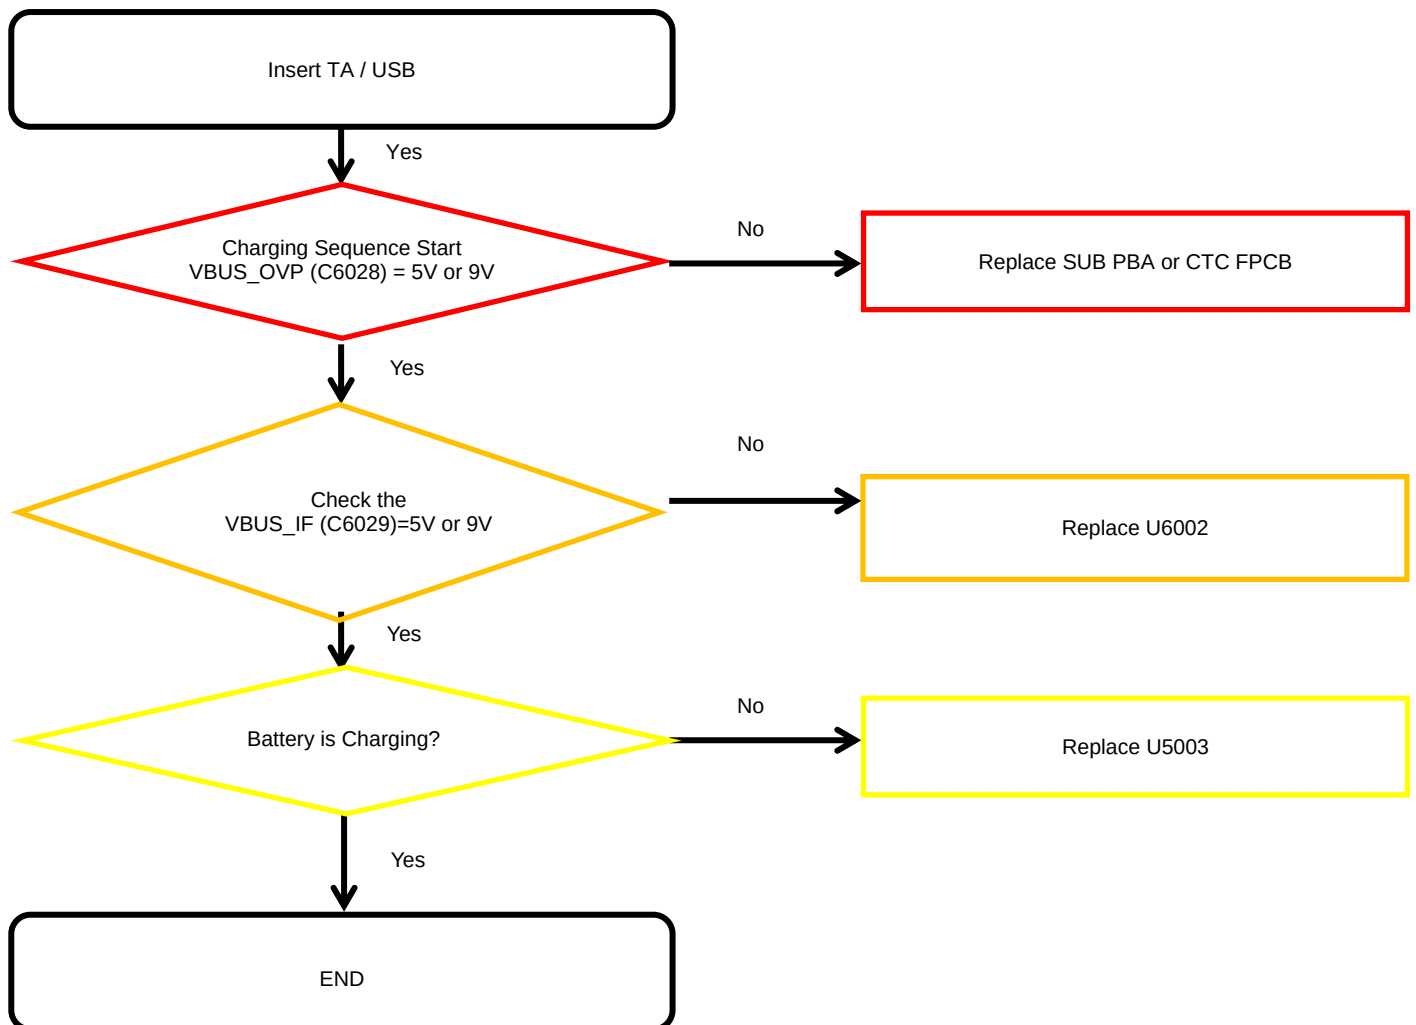


8. Level 3 Repair

8-4-7. OTG

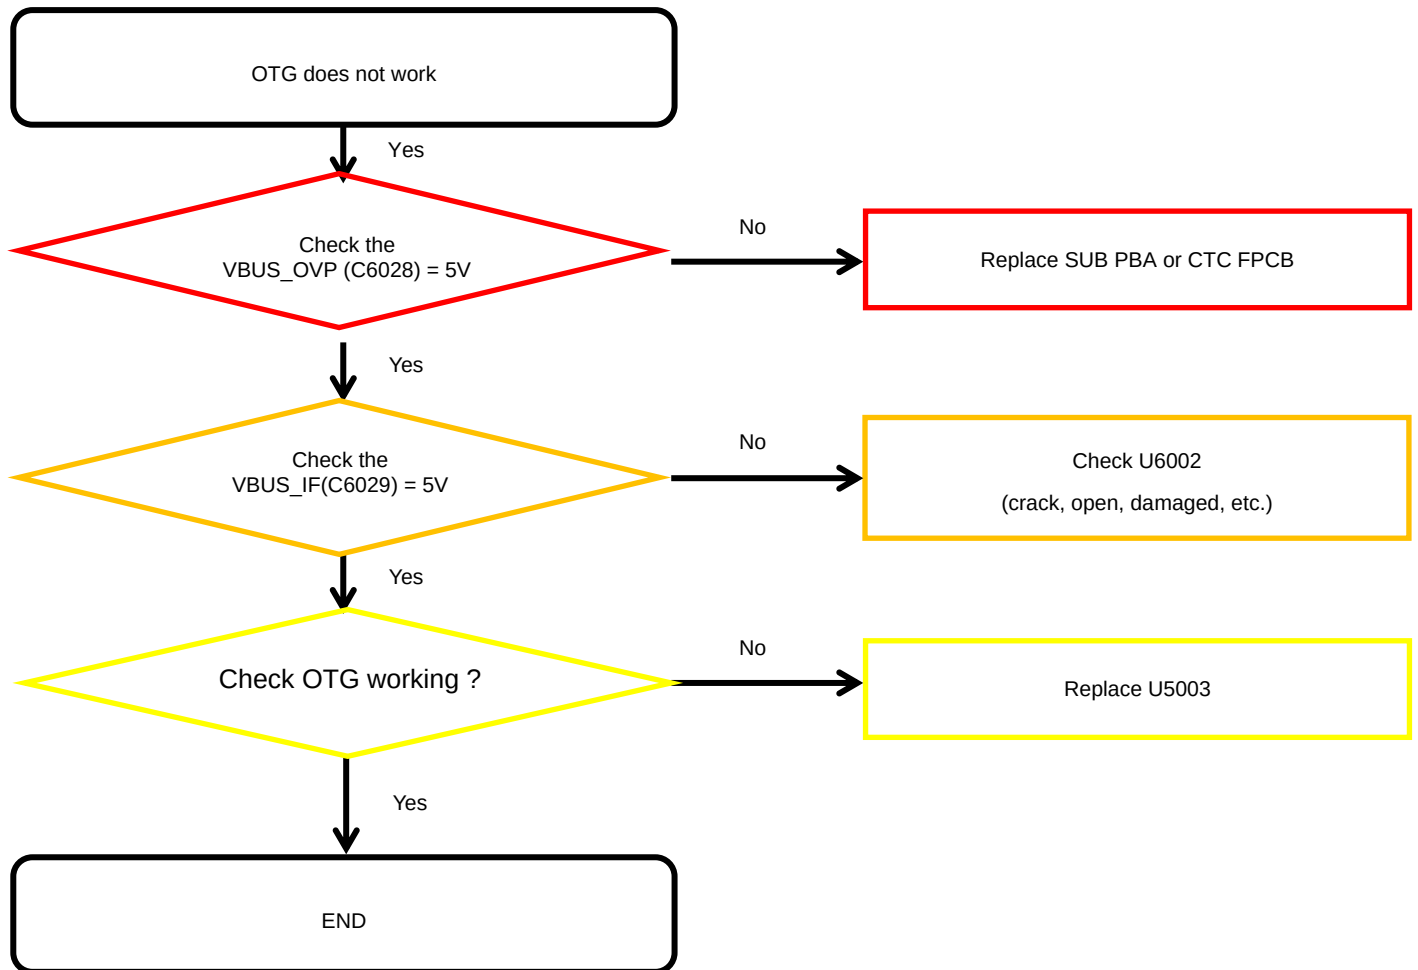


8. Level 3 Repair

8-4-8-1. Grip Sensor

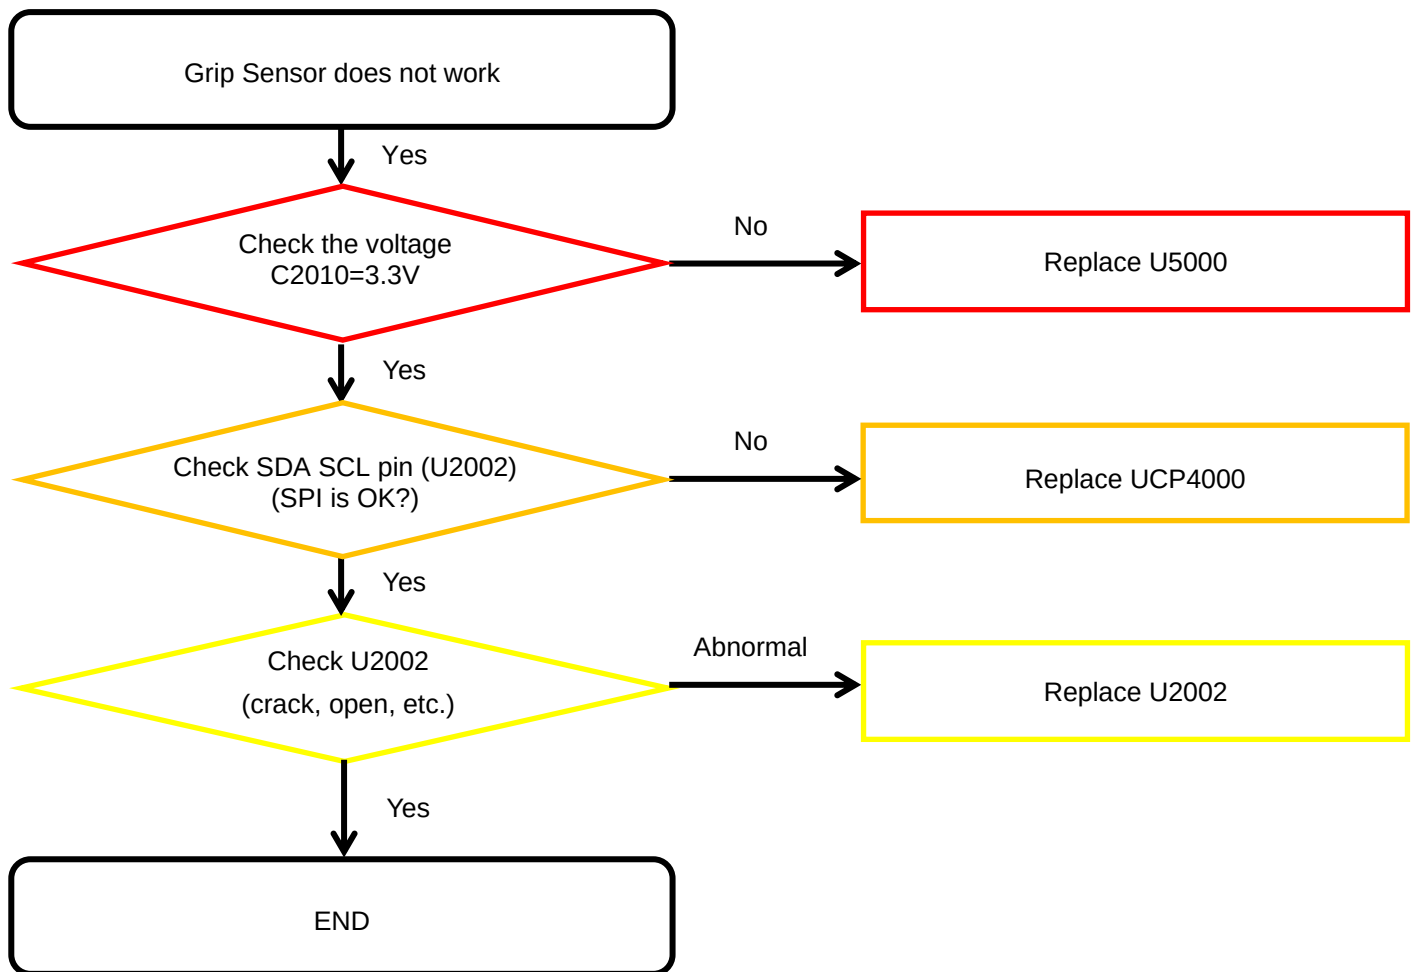


8. Level 3 Repair

8-4-8-2. Accelerometer Sensor

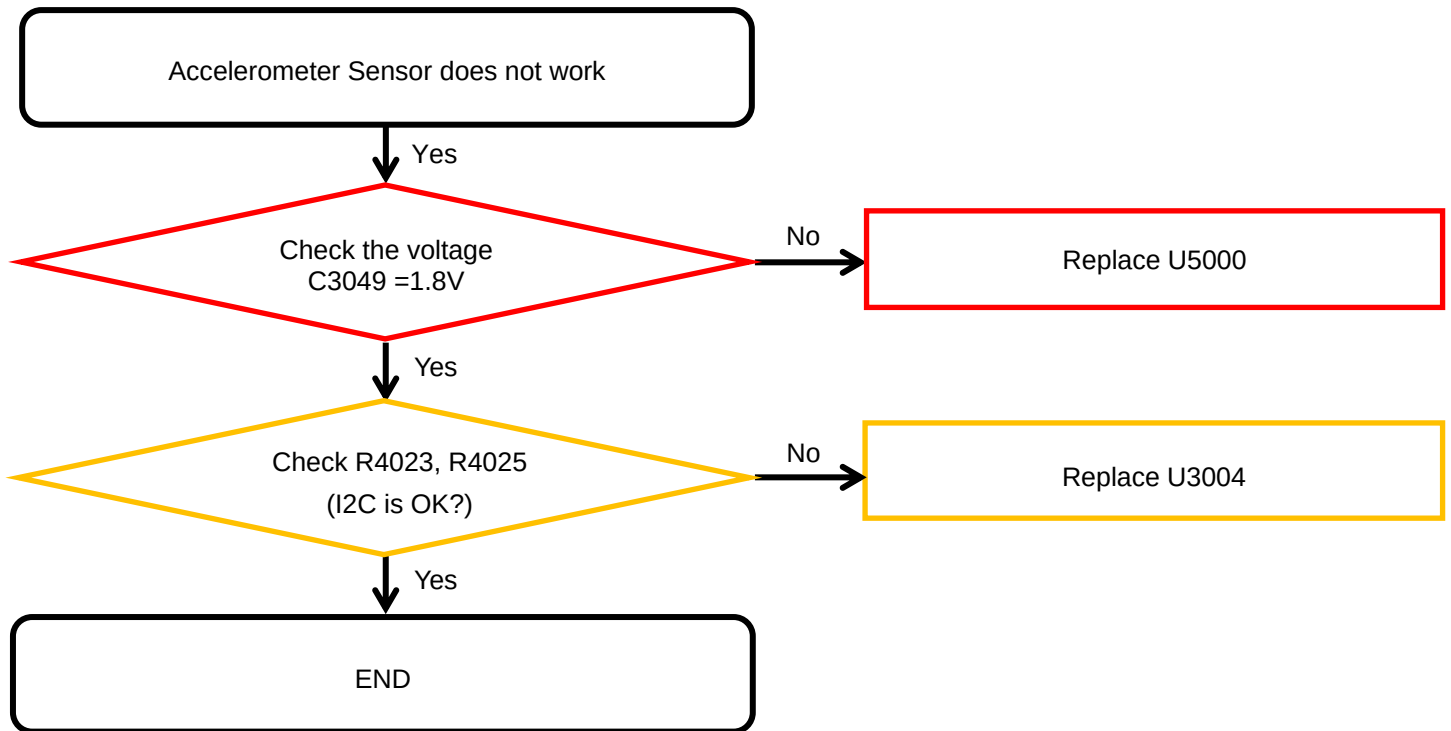


8. Level 3 Repair

8-4-8-3. Fingerprint Sensor

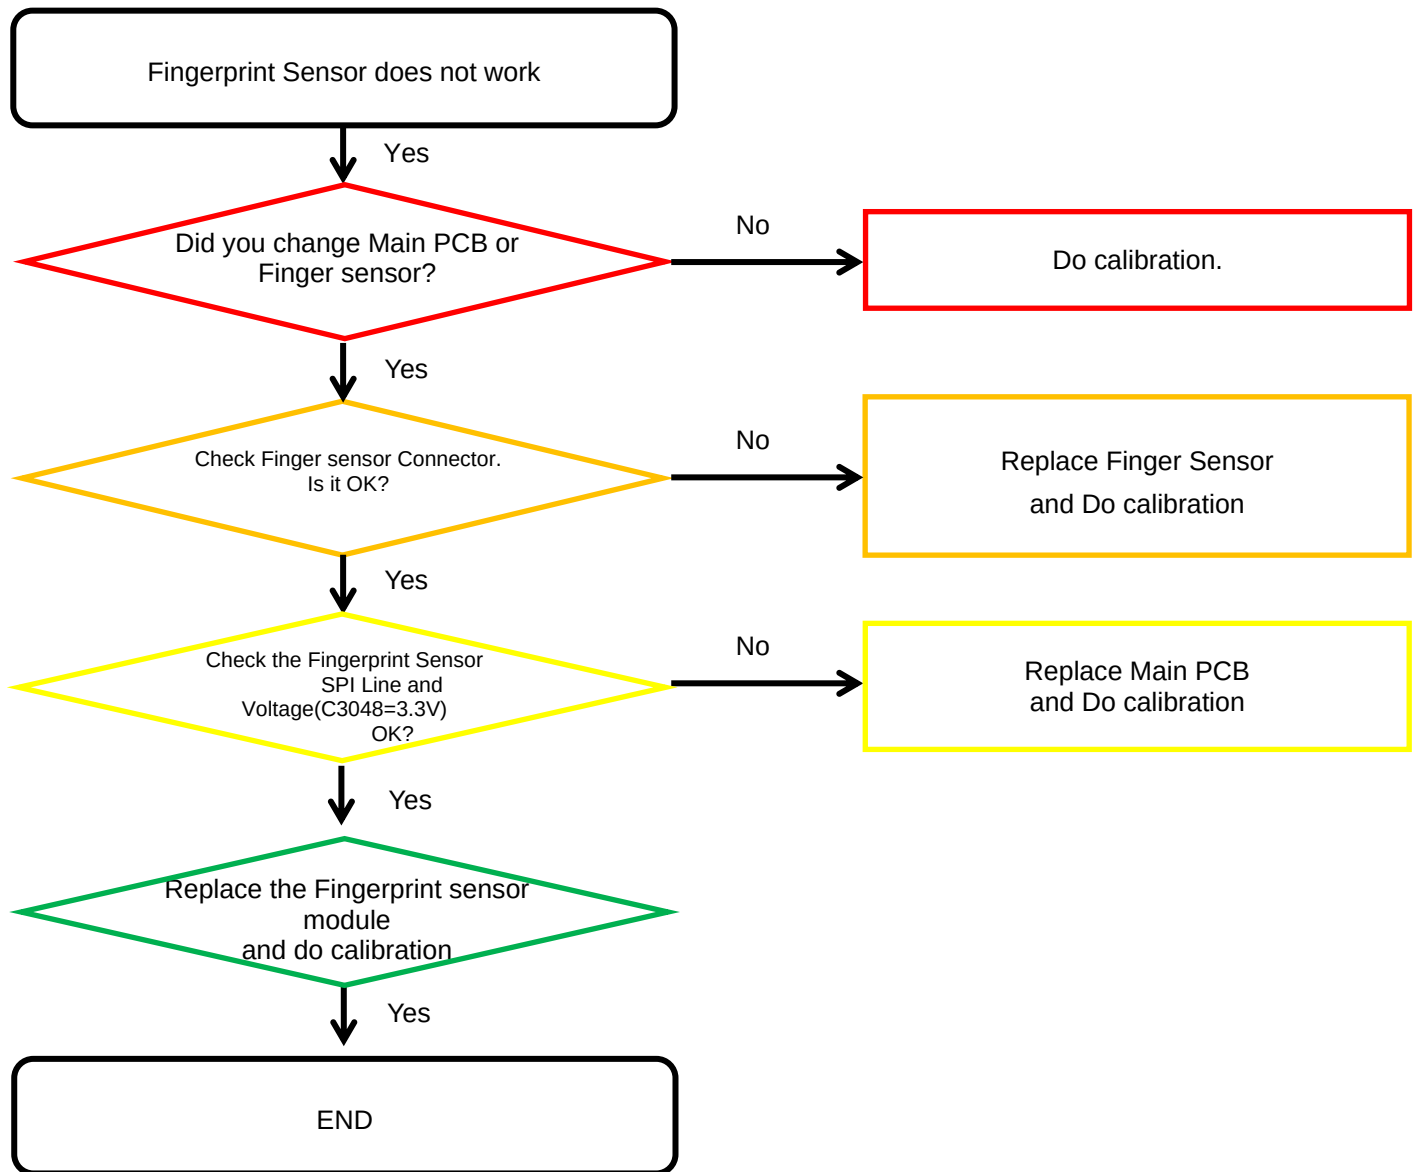


8. Level 3 Repair

8-4-9-1. Microphone Part – MAIN MIC

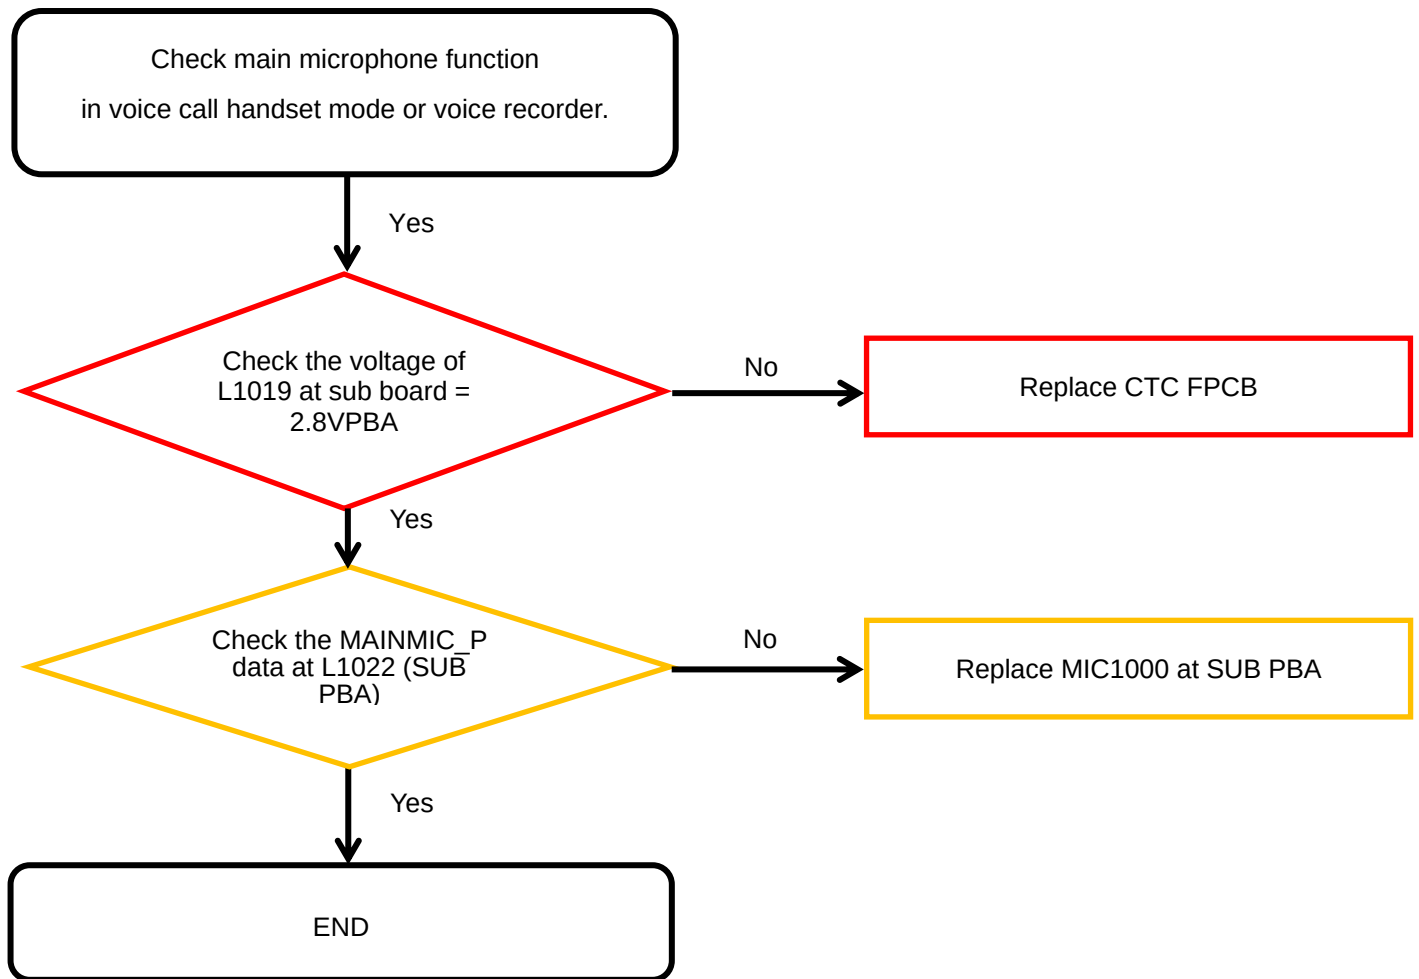


8. Level 3 Repair

8-4-9-2. Microphone Part – 2nd MIC

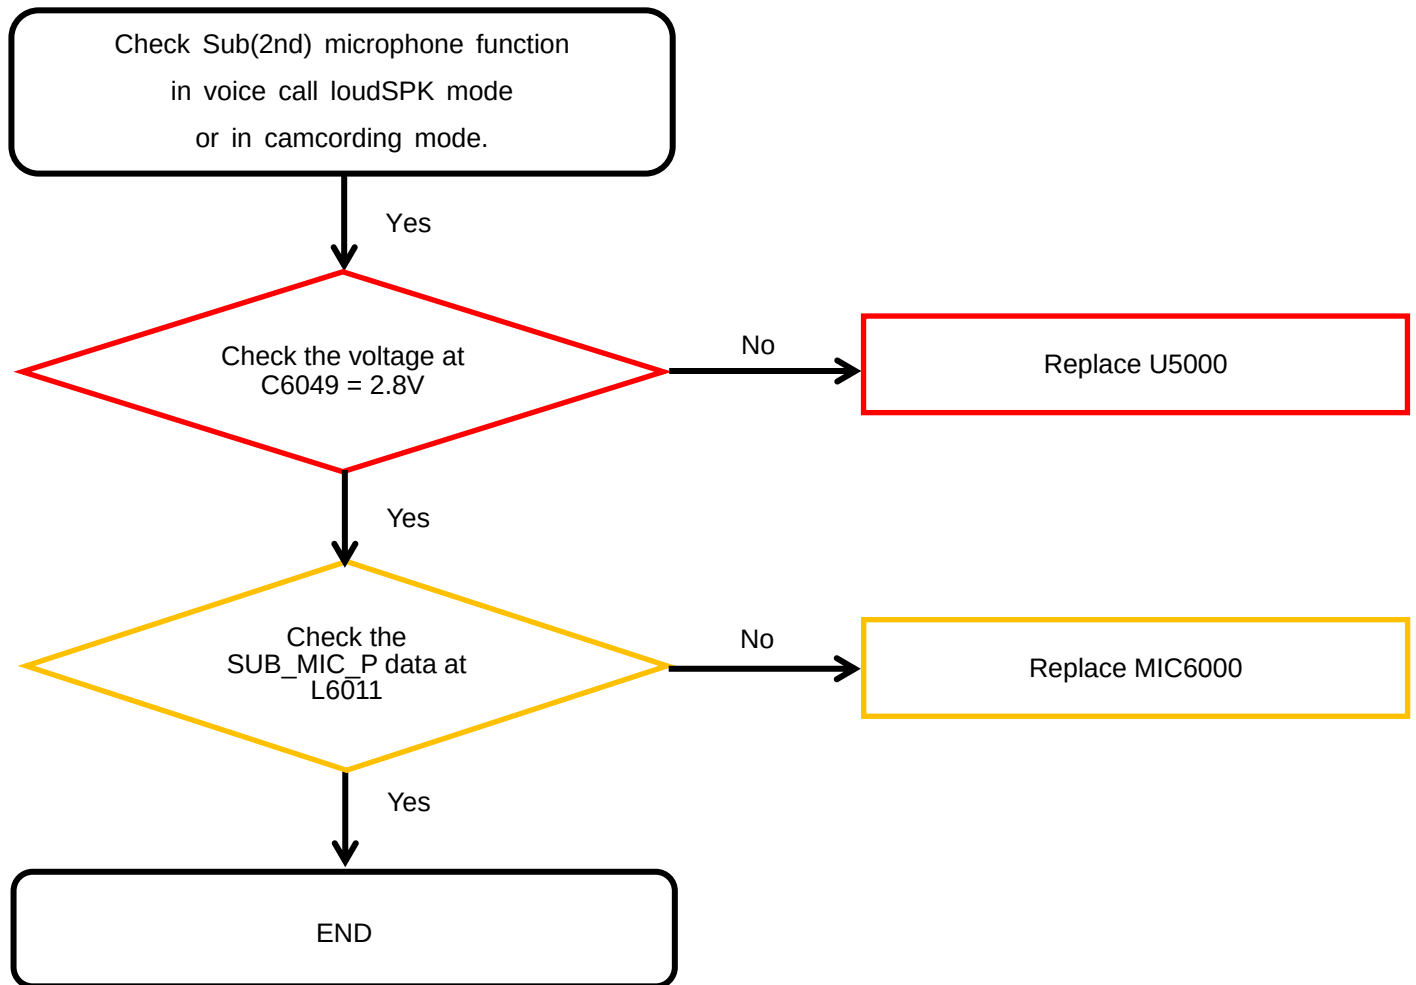


8. Level 3 Repair

8-4-10. Speaker Part

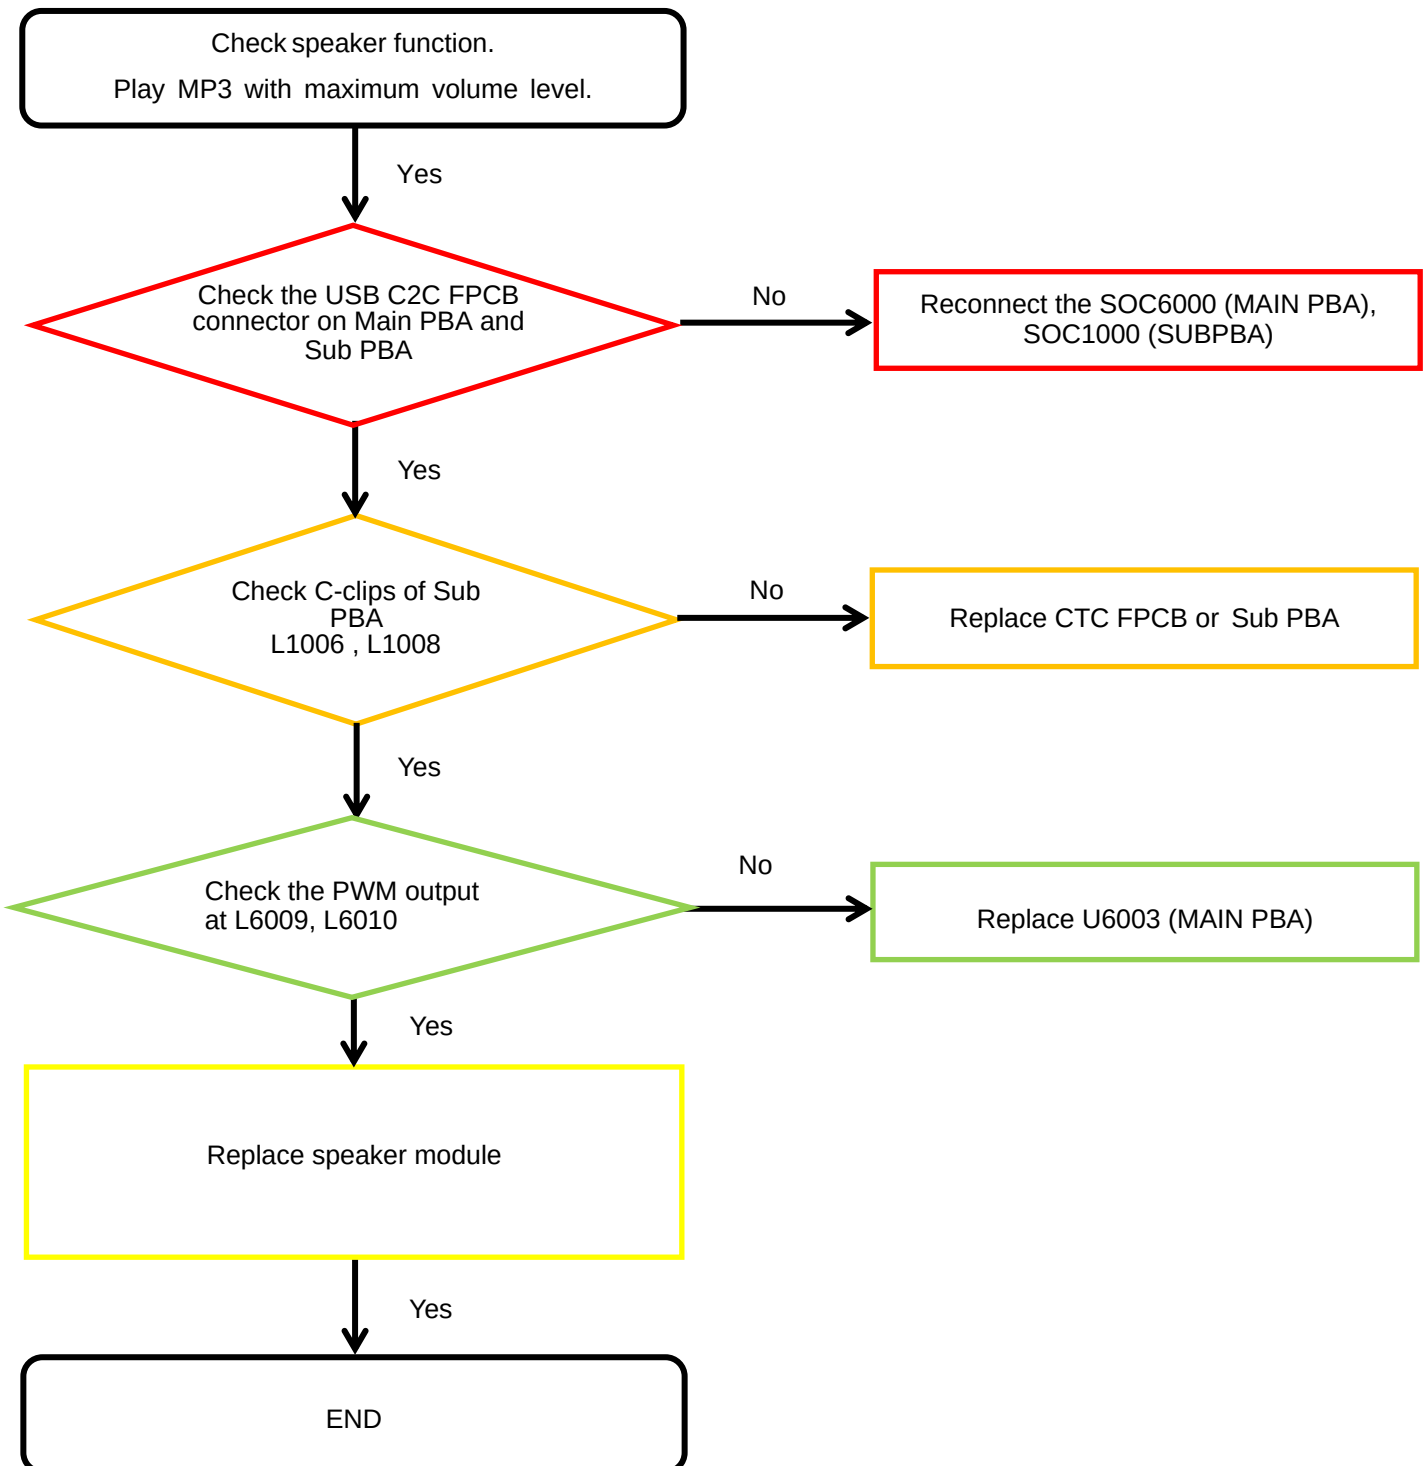


8. Level 3 Repair

8-4-11. Receiver Part

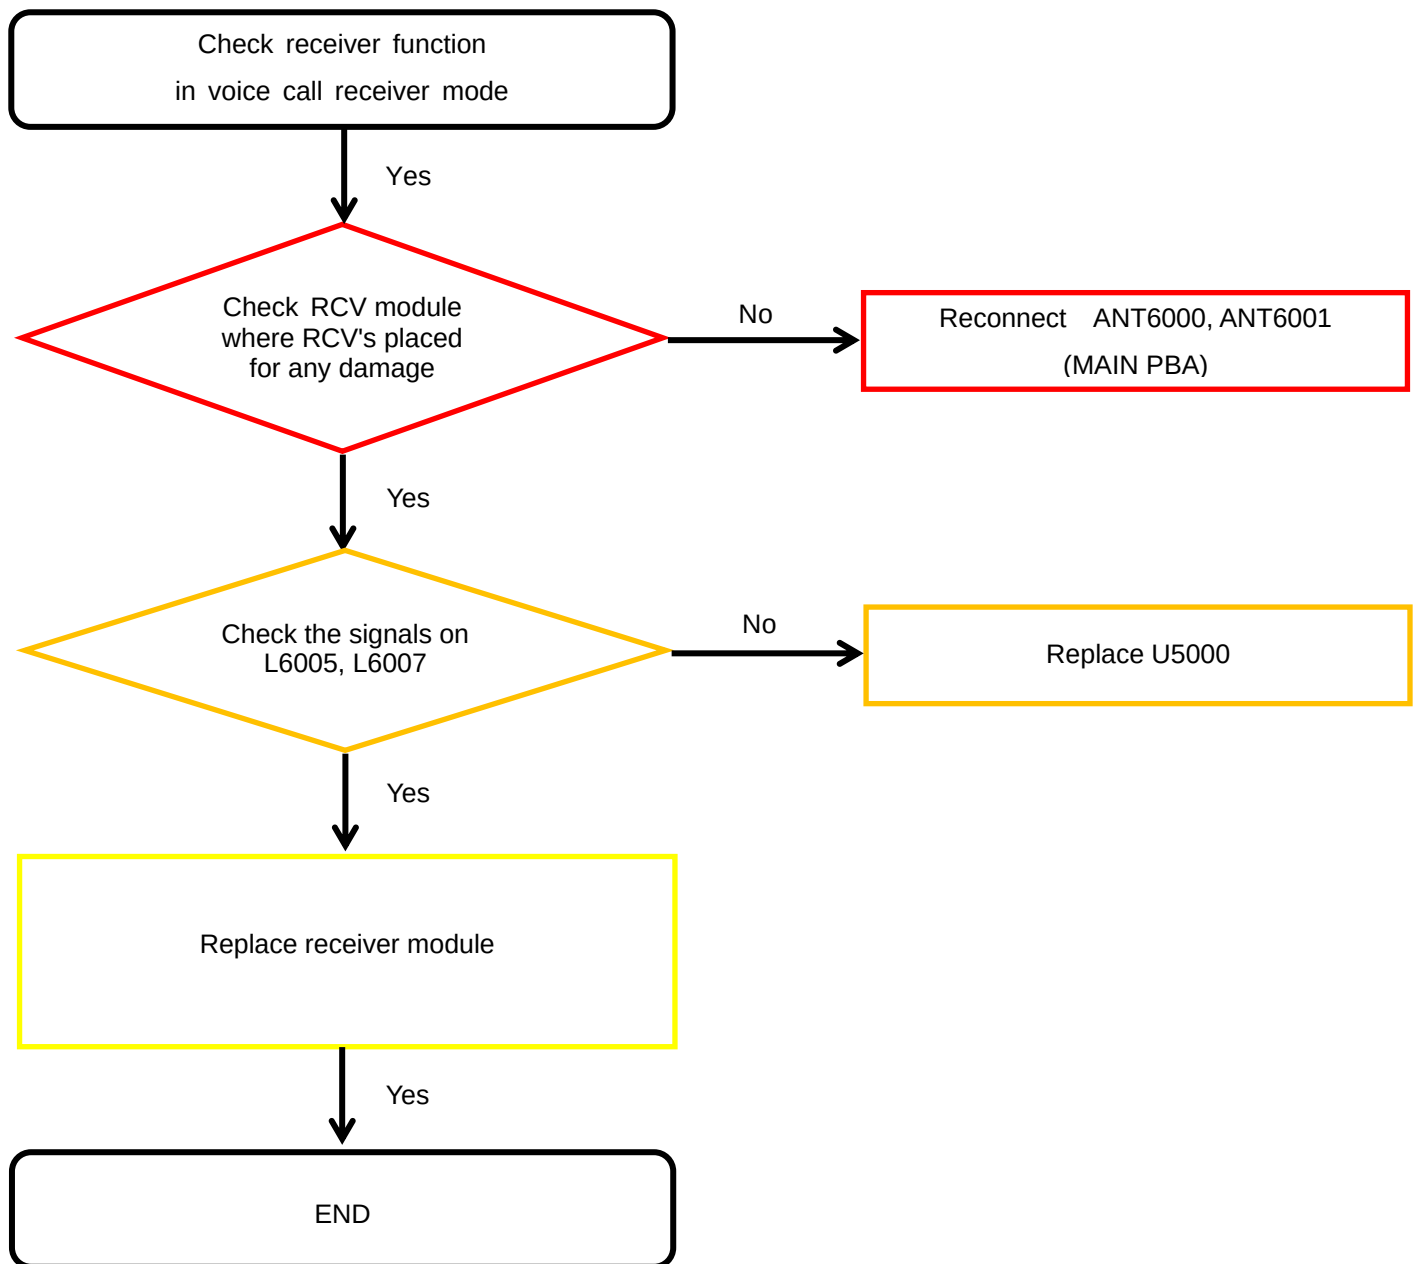


8. Level 3 Repair

8-4-12. Display

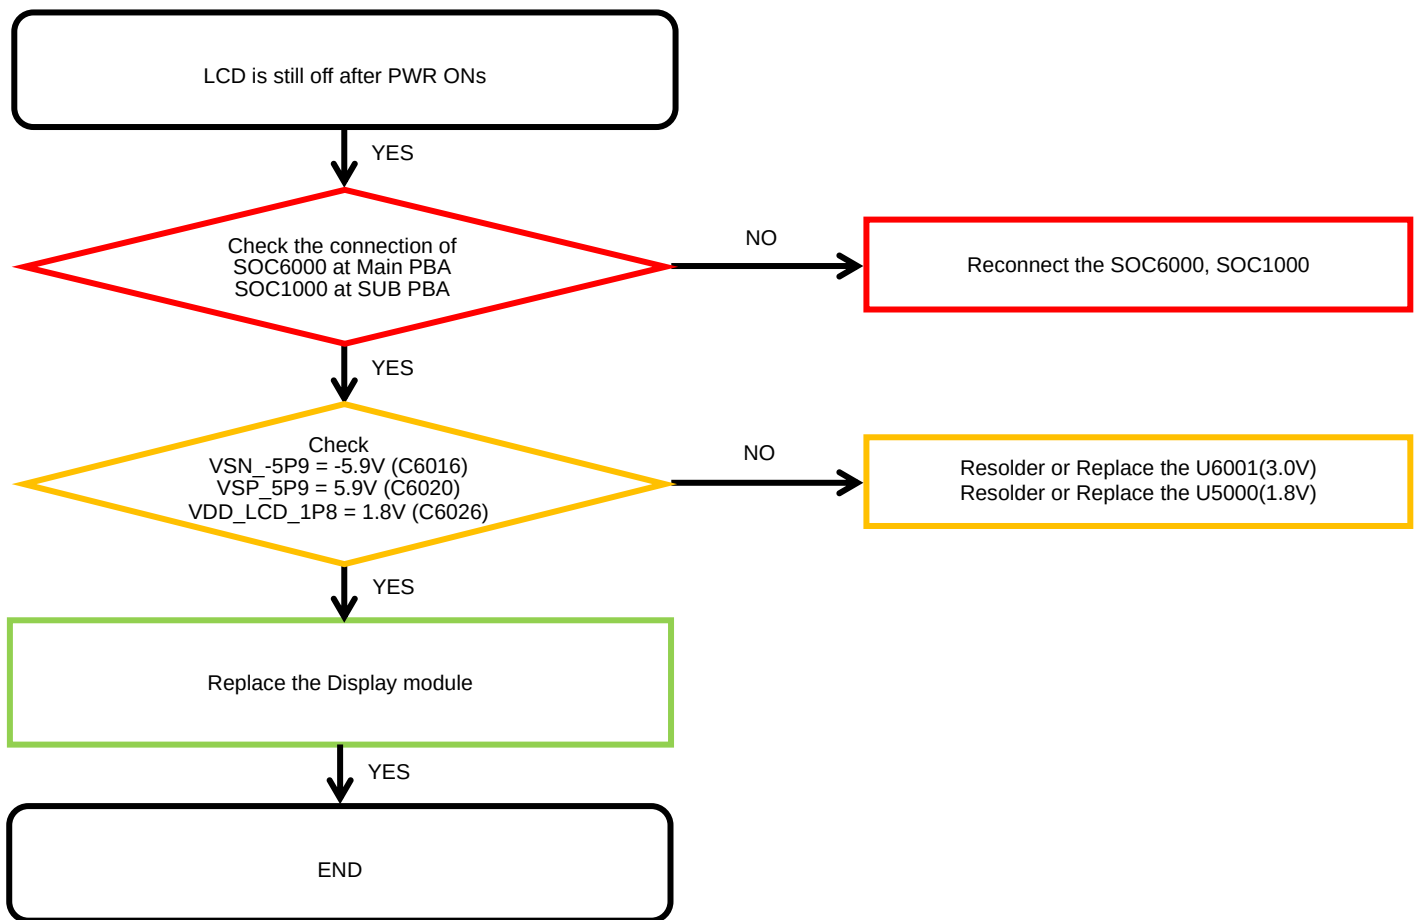


8. Level 3 Repair

8-4-13. Quad Camera

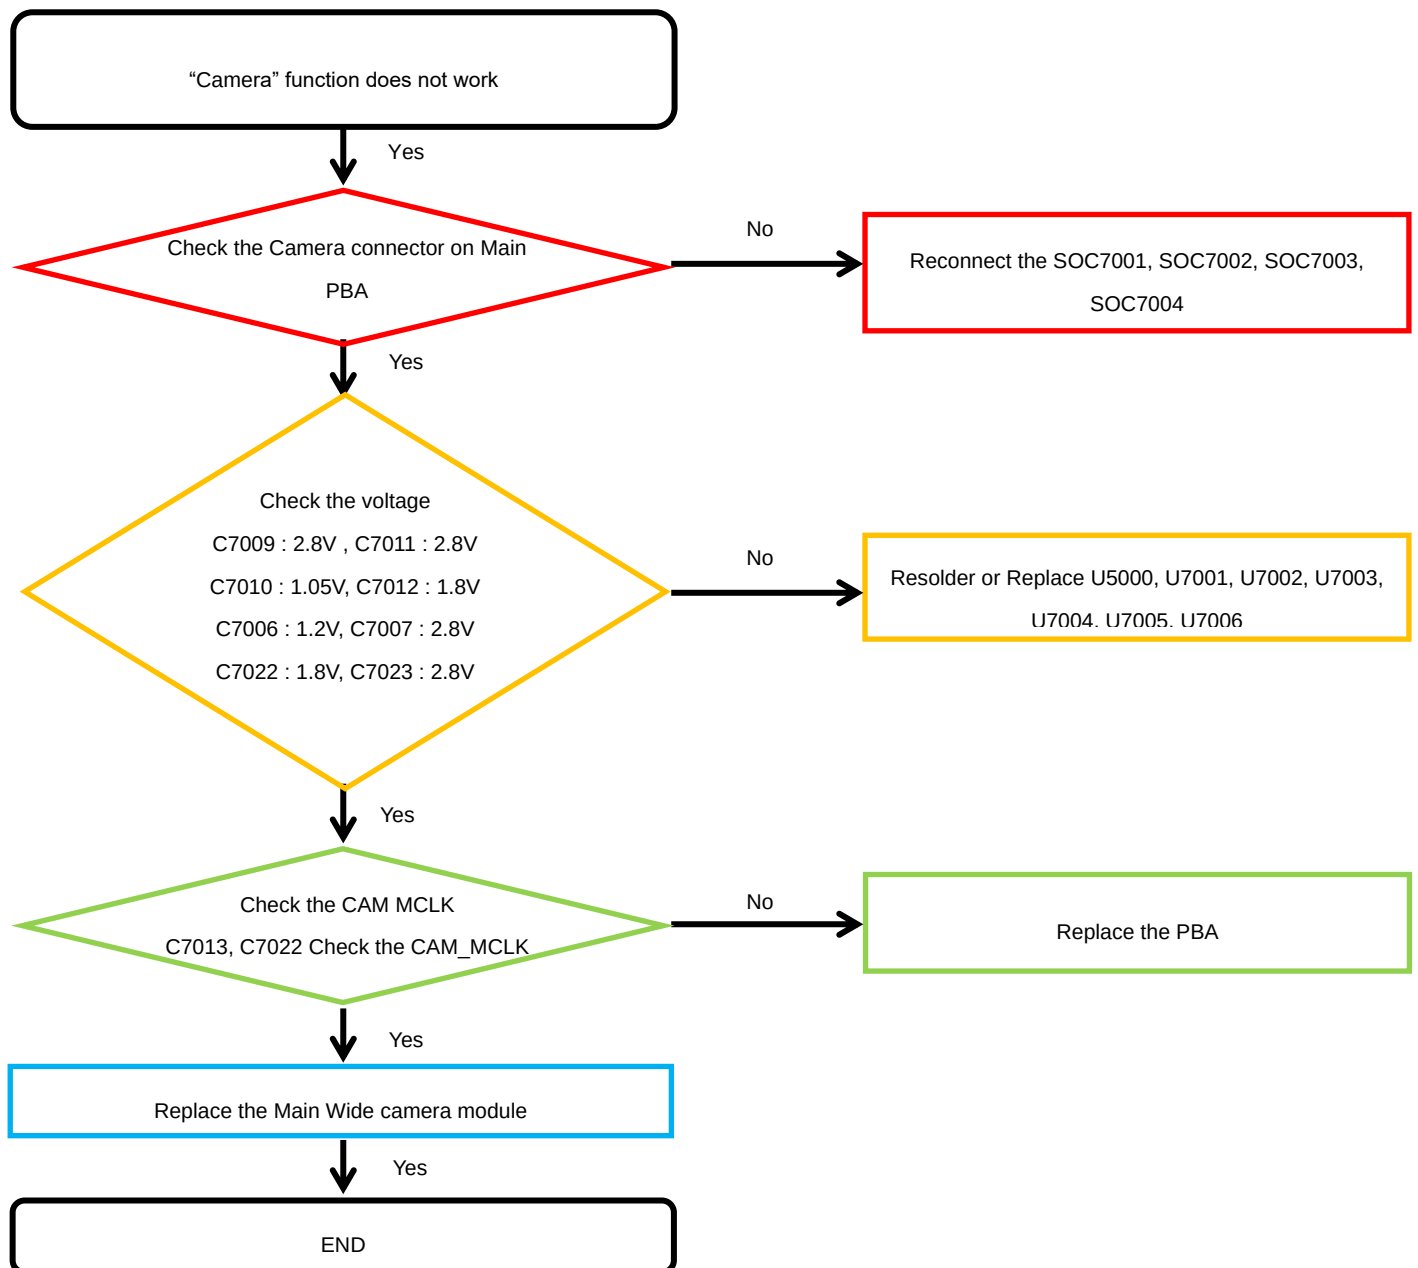


8. Level 3 Repair

8-4-14. FRONT CAMERA

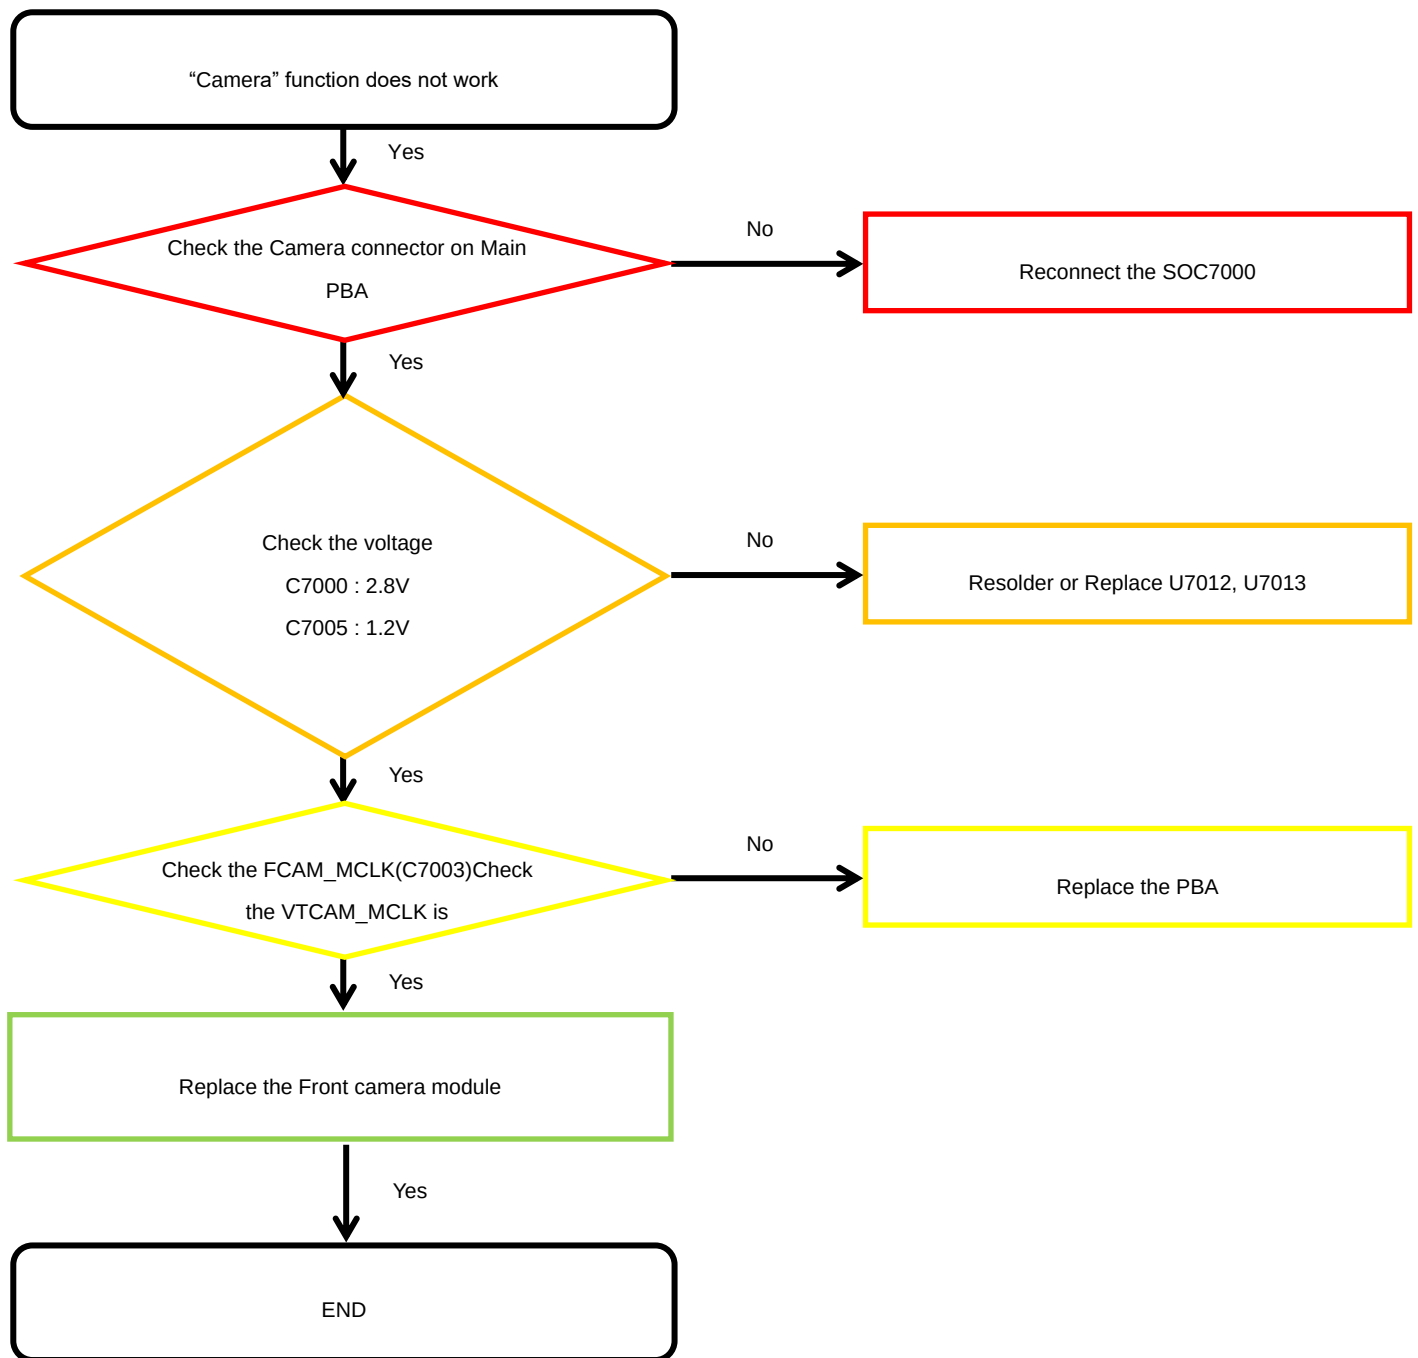


8. Level 3 Repair

8-4-15. TSP

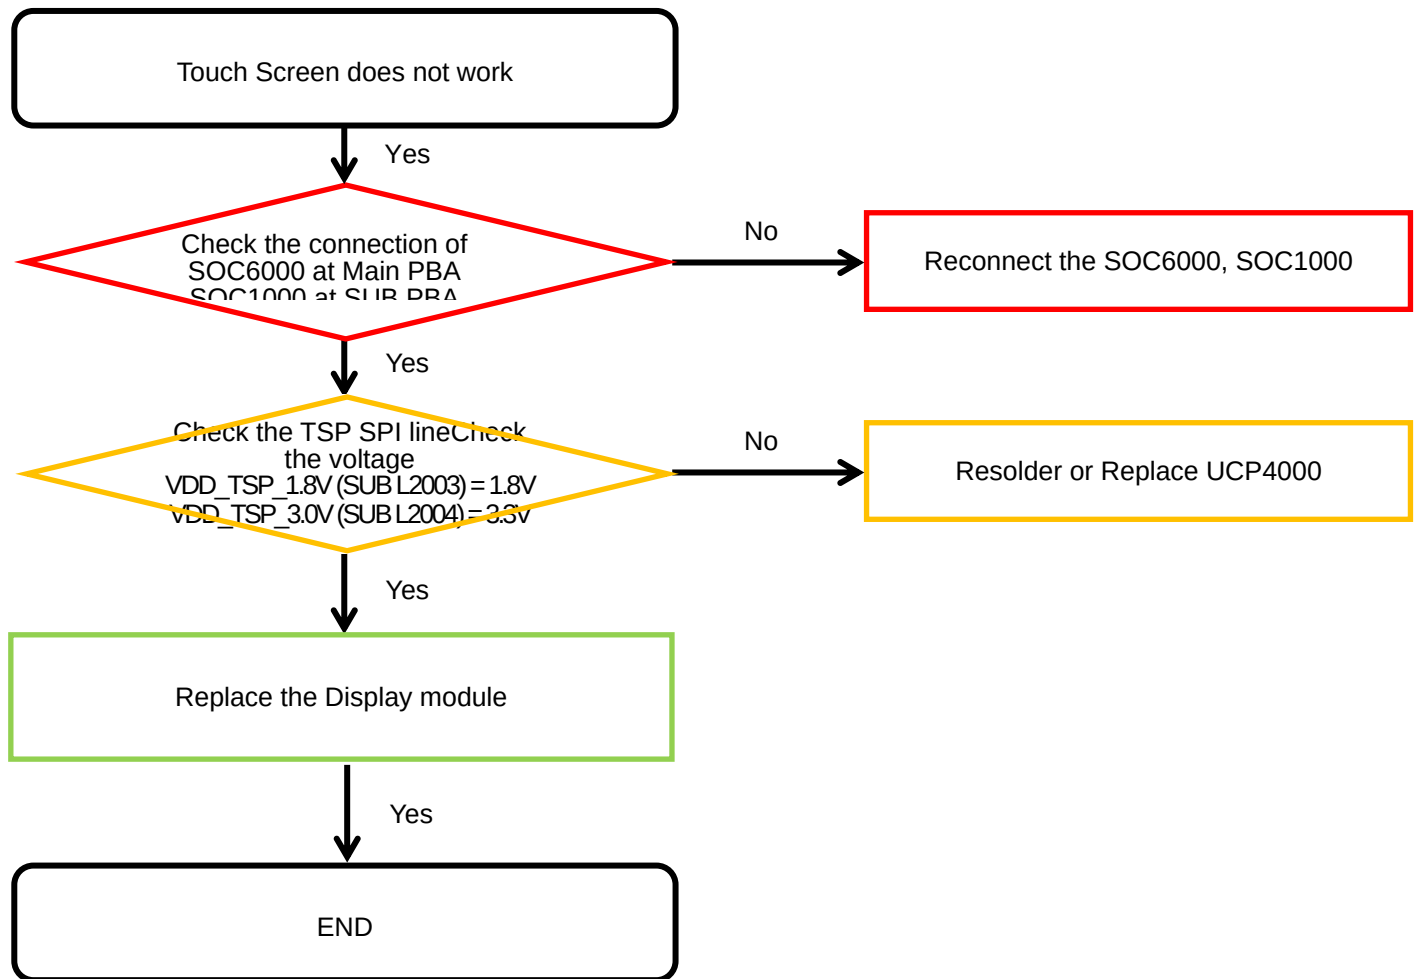


8. Level 3 Repair

8-4-16. Motor

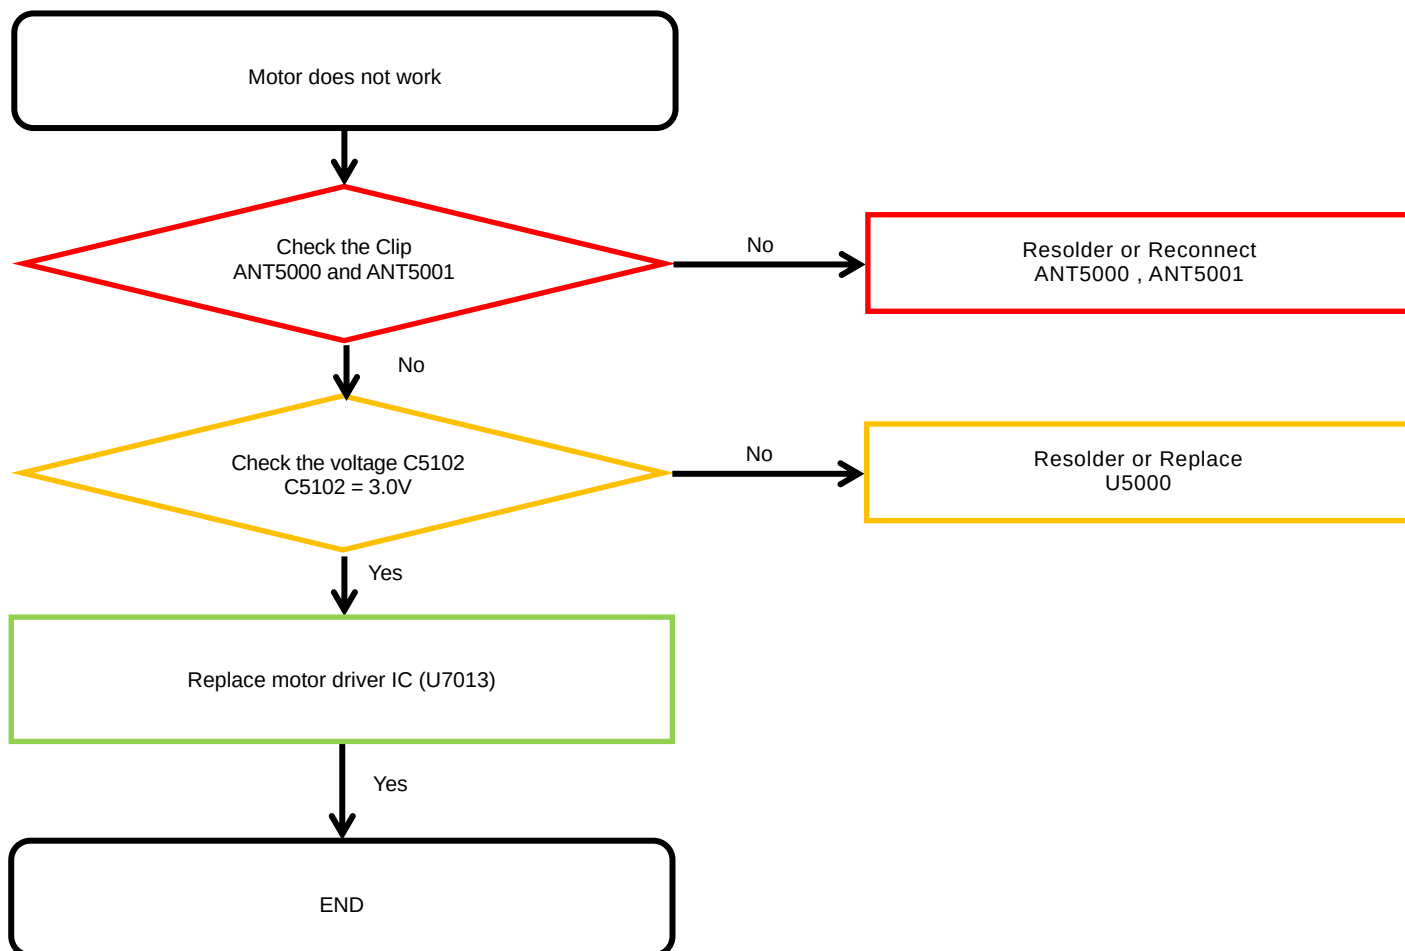


8. Level 3 Repair

8-4-17. BT/WIFI

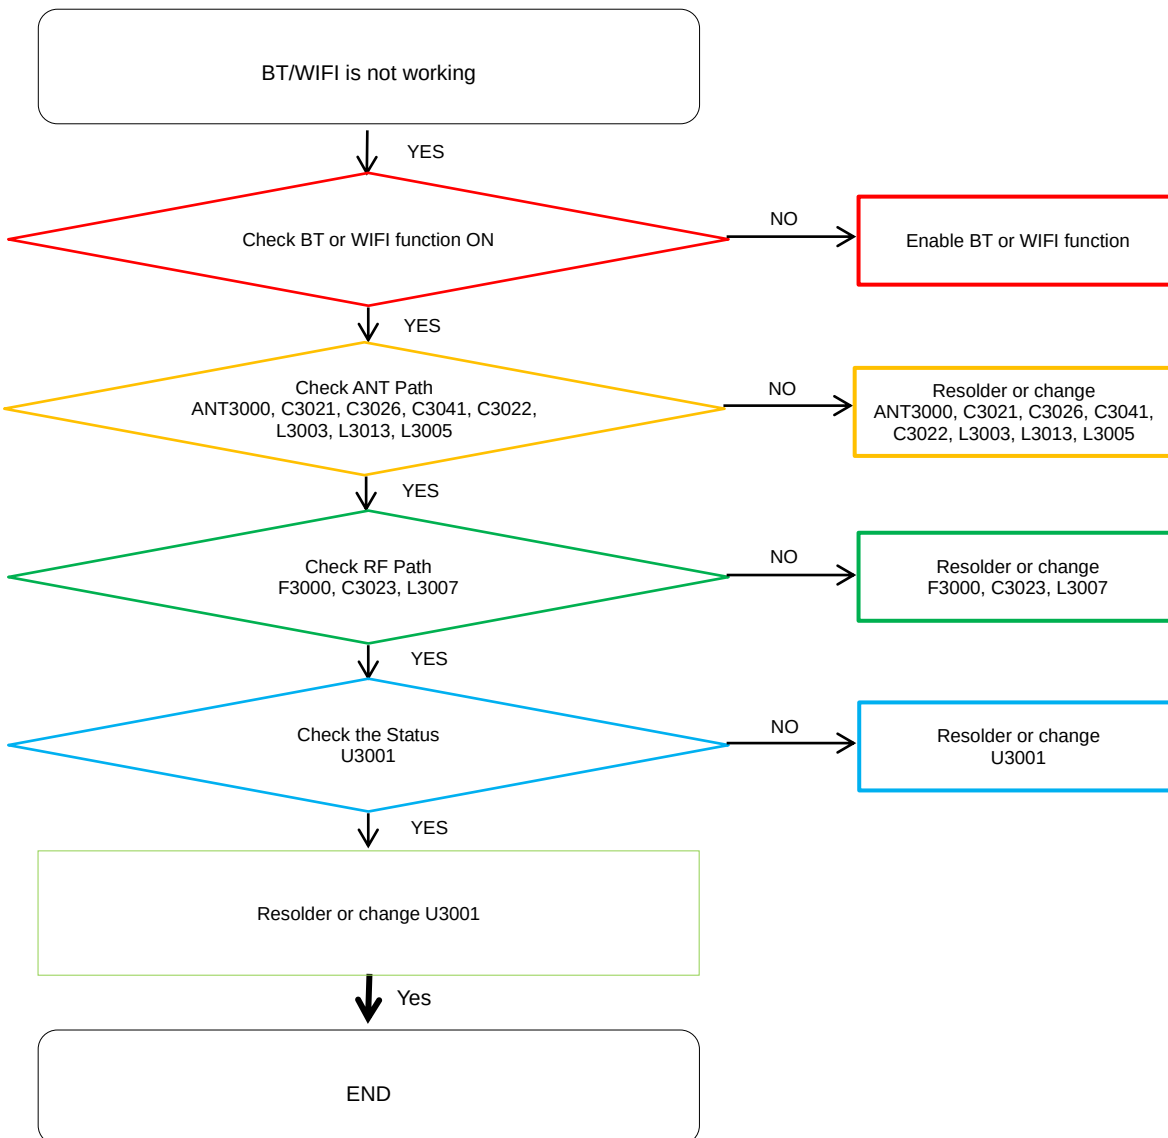


8. Level 3 Repair

8-4-18. GPS

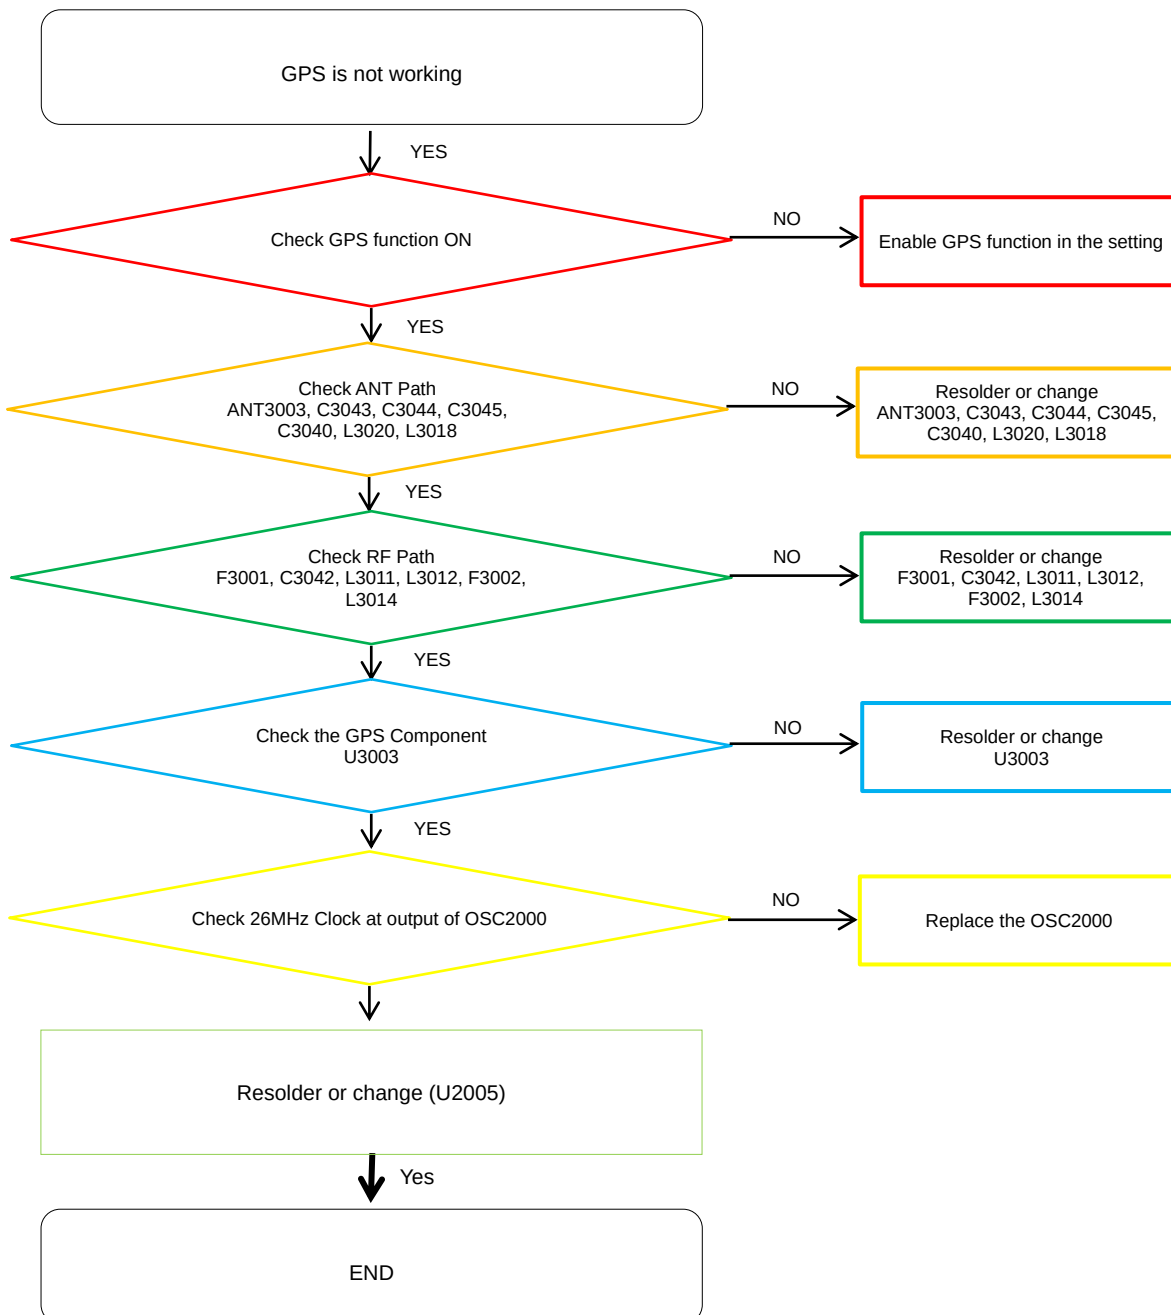


8. Level 3 Repair

8-4-19. NFC (SM-M127F/DSN Only)

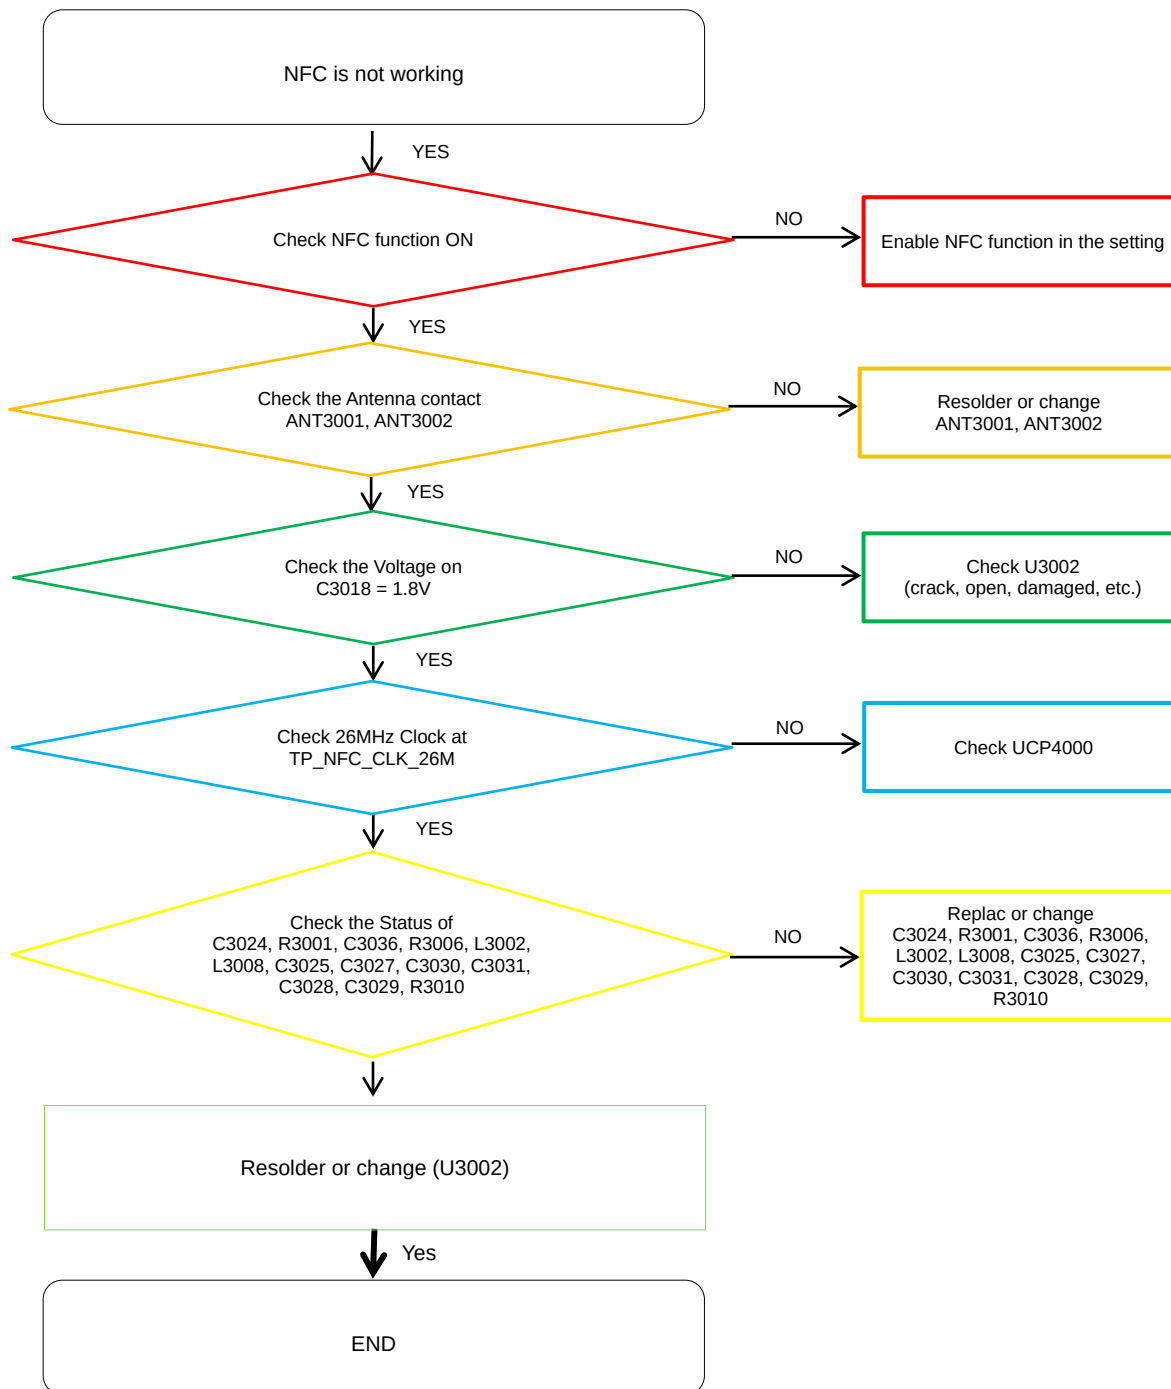


8. Level 3 Repair

8-4-20. FM radio part

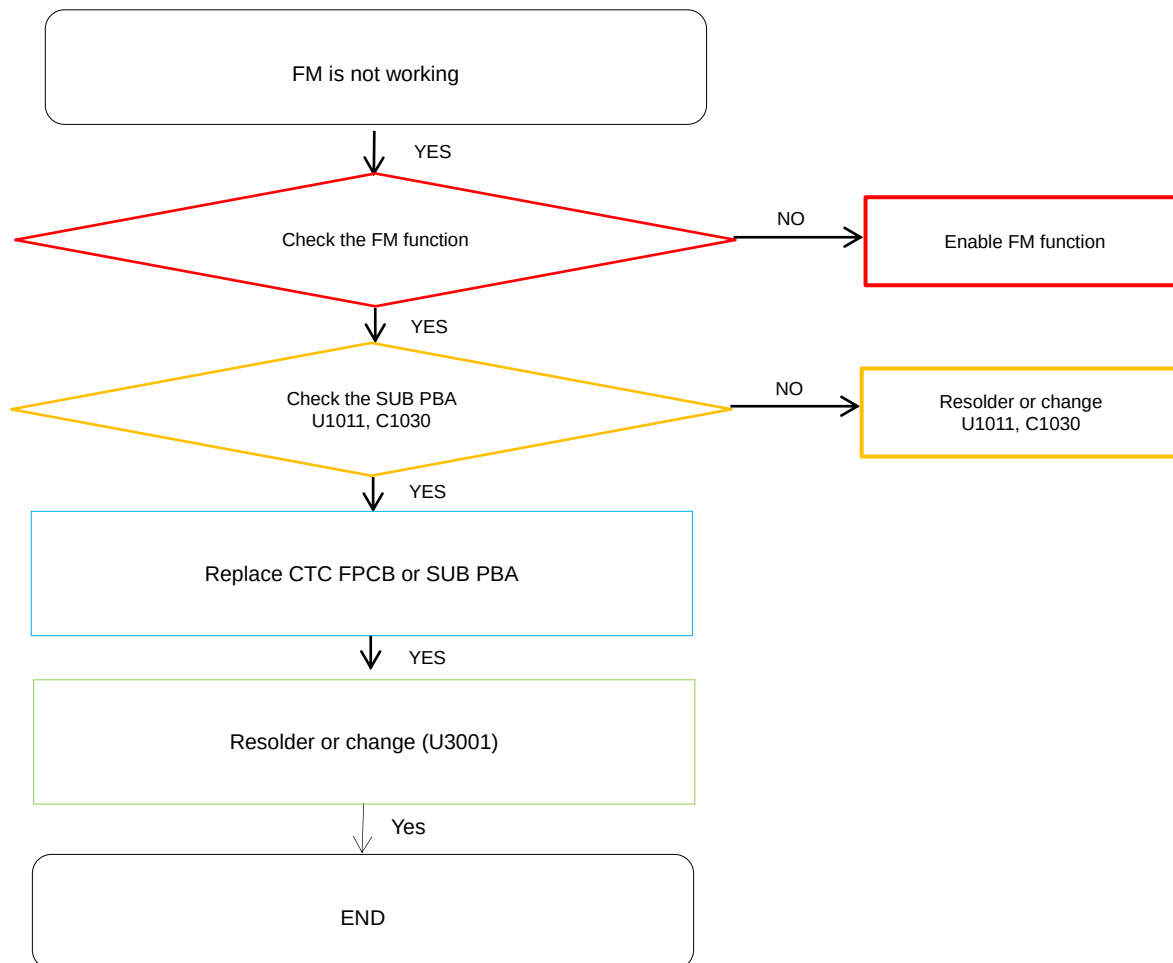


8. Level 3 Repair

8-4-21. GSM 850/900/DCS/PCS, WCDMA B1/2/3/5/8, LTE 1/2/3/4/5/8/12/17/20/26/28/66 PRx

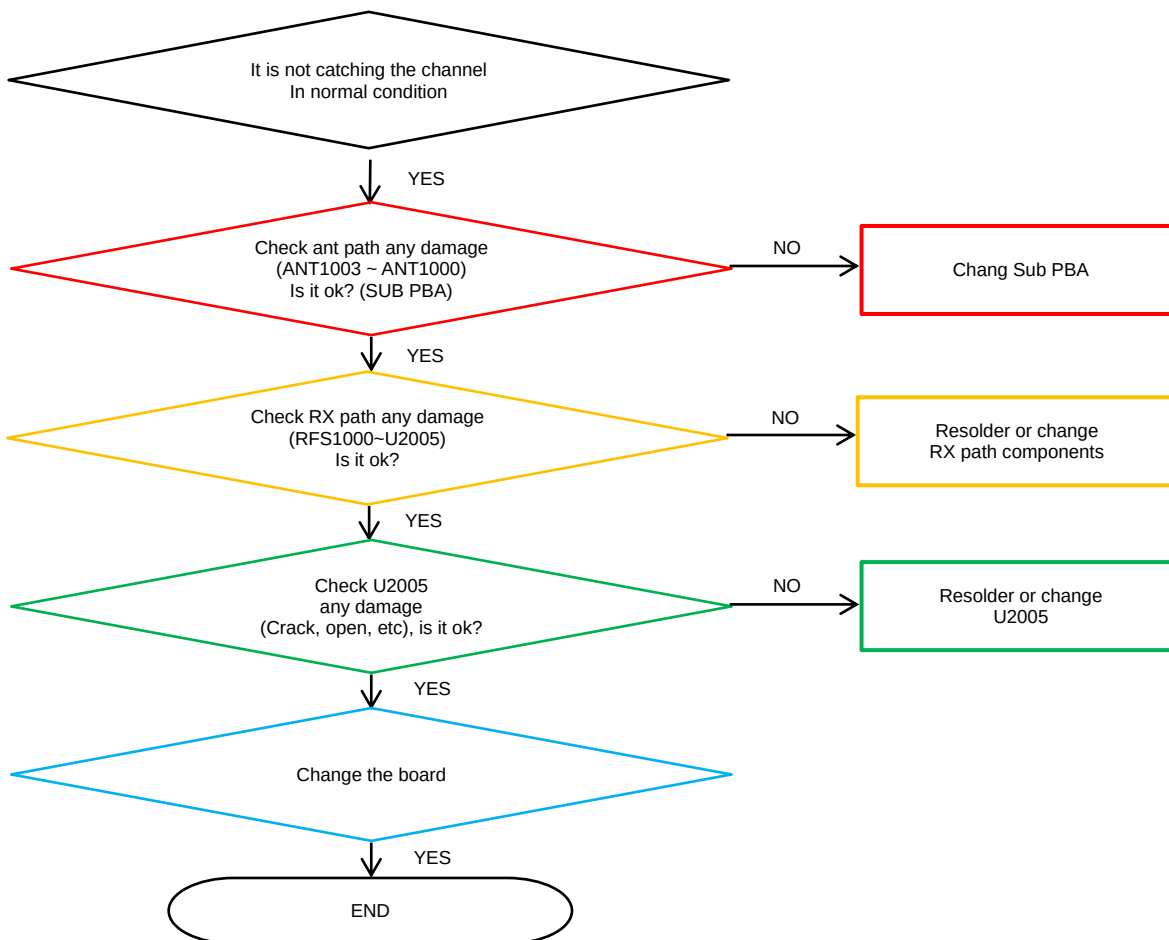


8. Level 3 Repair

8-4-22. LTE 7/38/40/41 PRx

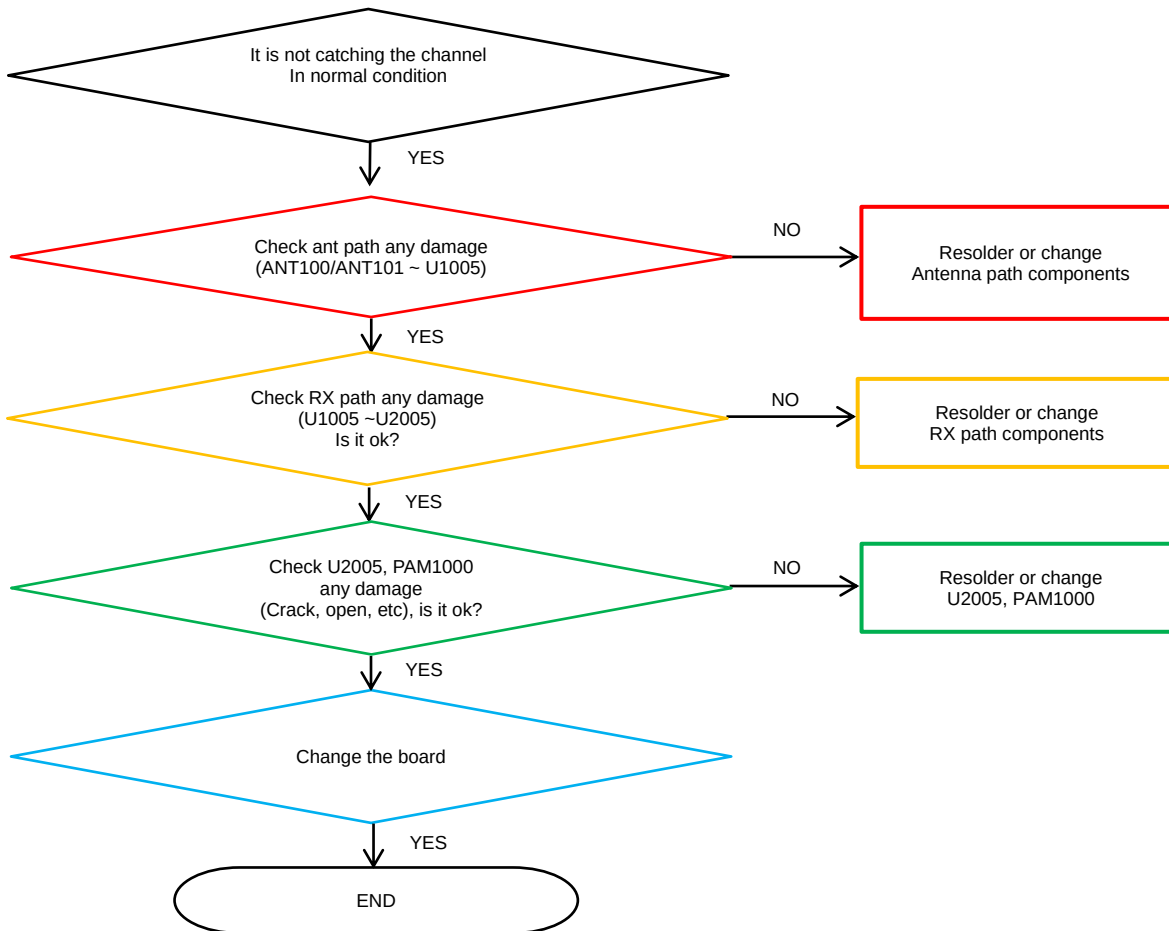


8. Level 3 Repair

8-4-23. WCDMA B1/2/4/5/8, LTE B1/2/3/4/5/7/8/12/17/20/28/38/40/41 DRx

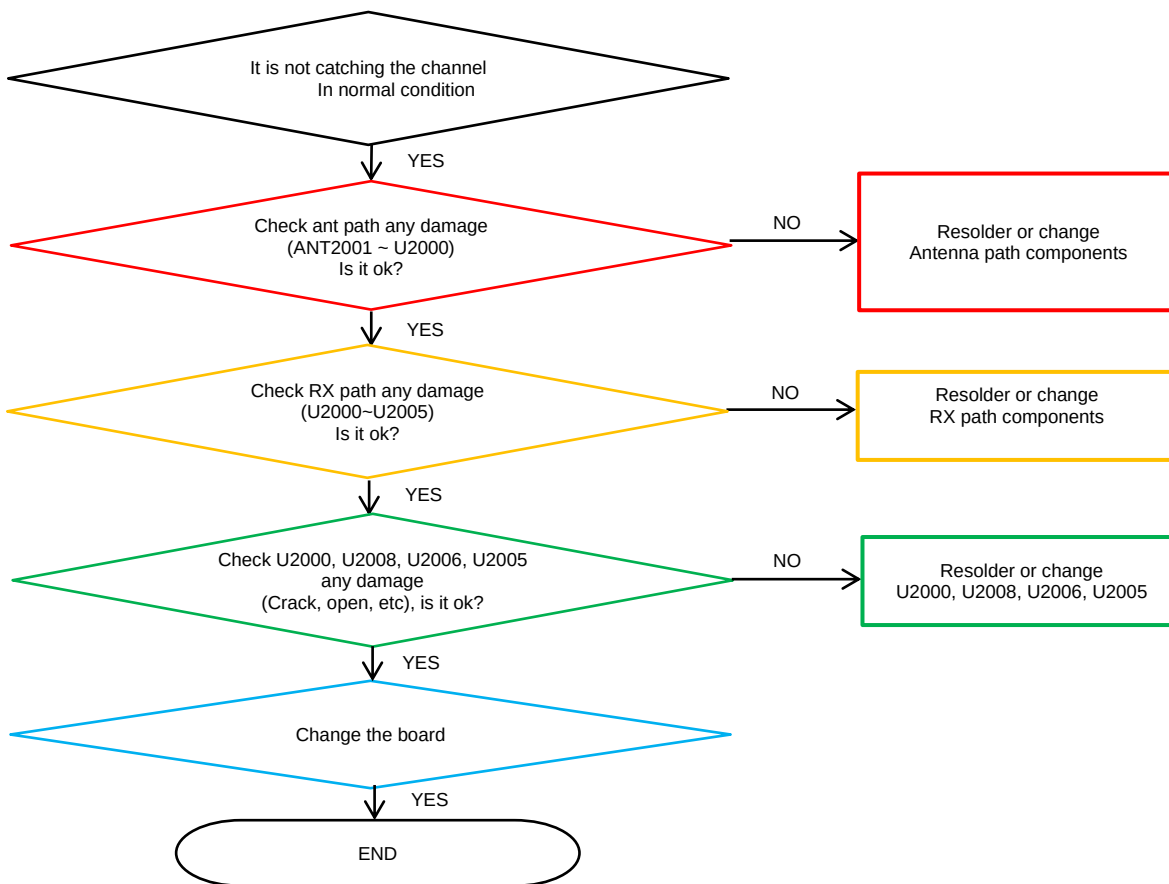

8. Level 3 Repair

8-4-24. GSM 850/900/DCS/PCS, WCDMA B1/2/3/5/8, LTE 1/2/3/4/5/8/12/17/20/26/28/66 Tx

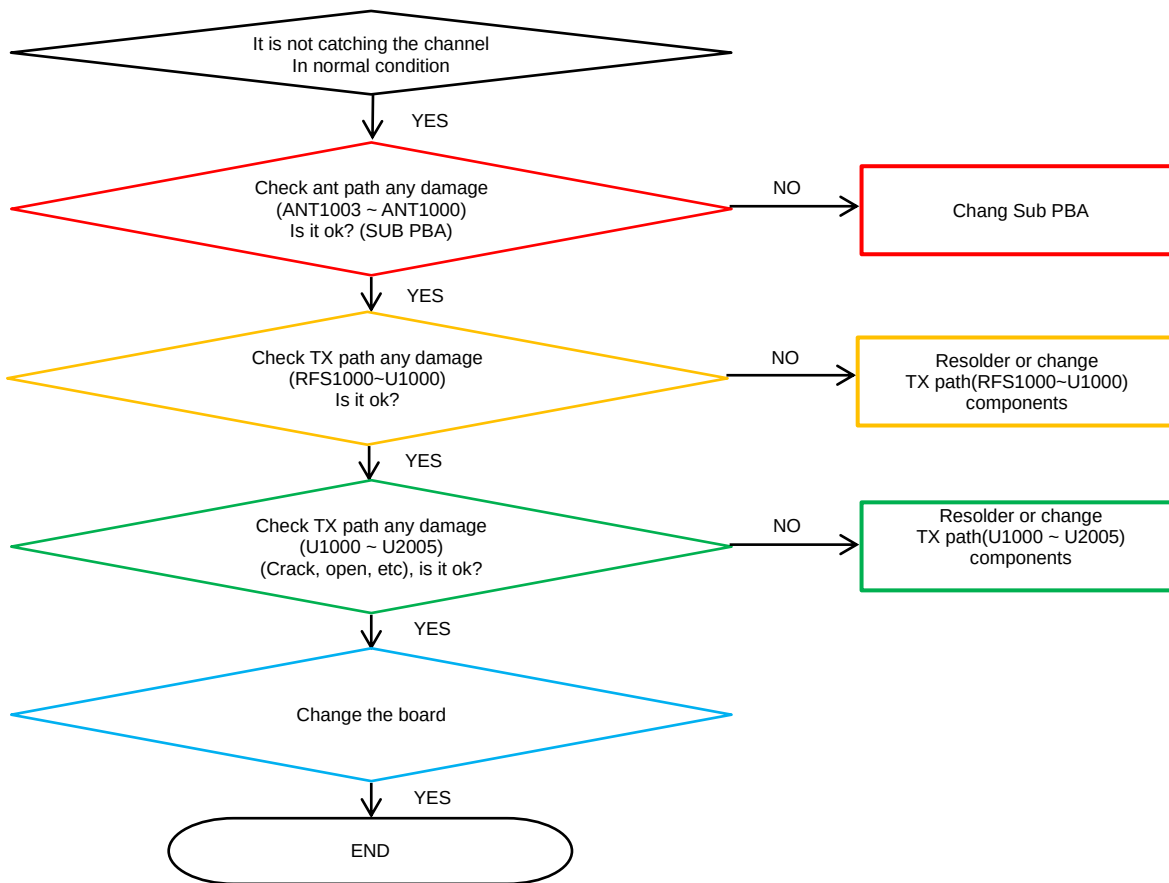

8. Level 3 Repair

8-4-25. LTE B7/38/40/41 Tx

