

8

7

6

5

4

3

2

1

1. ALL RESISTANCE VALUES ARE IN OHMS, 0.1 WATT +/- 5%.

2. ALL CAPACITANCE VALUES ARE IN MICROFARADS.

3. ALL CRYSTALS & OSCILLATOR VALUES ARE IN HERTZ.

REV

ECN

DESCRIPTION OF REVISION

CK APPD
DATE

A

0004536627

PRODUCTION RELEASED

2015-07-21

迅维手机维修培训

联系电话：0755-61506416

咨询QQ：1727176051 981775188

N71 MLB - PVT OK2FAB

LAST_MODIFICATION=

Tue Jul 21 11:39:02 2015

PAGE

<CSA>

CONTENTS

SYNC

DATE

1

1

TABLE OF CONTENTS

2

3

SYSTEM:BOM TABLES

3

4

SYSTEM:N71 SPECIFIC

4

6

SYSTEM:MECHANICAL

5

7

SOC:JTAG,USB,XTAL

6

8

SOC:PCIE

7

9

SOC:CAMERA & DISPLAY

8

10

SOC:SERIAL & GPIO

9

11

SOC:OWL

10

12

SOC:POWER (1/3)

11

13

SOC:POWER (2/3)

12

15

SOC:POWER (3/3)

13

20

NAND

14

21

SYSTEM POWER:PMU (1/3)

15

22

SYSTEM POWER:PMU (2/3)

16

23

SYSTEM POWER:PMU (3/3)

17

24

SYSTEM POWER:CHARGER

18

30

SYSTEM POWER:BATTERY CONN

19

31

SENSORS:MOTION SENSORS

20

32

CAMERA:FOREHEAD FLEX B2B

21

33

CAMERA:REAR CAMERA B2B

22

35

CAMERA:STROBE DRIVER

23

36

AUDIO:CALTRA CODEC (1/2)

24

37

AUDIO:CALTRA CODEC (2/2)

25

38

AUDIO:SPEAKER DRIVER

26

40

AUDIO:ARC DRIVER

27

41

DISPLAY:POWER

28

42

TOUCH:ORB & MESA B2B

29

45

DISPLAY:KEPLER B2B

STOCKHOLM

30

46

I/O:TRISTAR 2

TABLE

PAGE

<CSA>

CONTENTS

SYNC

DATE

31

47

I/O:DOCK FLEX B2B

32

48

I/O:BUTTON FLEX B2B

33

BASEBAND:RADIO SYMBOL

34

page1

35

ELNA & UAT ANT FEED

36

FE: ANT CONNECTORS AND UAT TUNER

37

WLAN LAT 2.4GHZ BAW BPF

38

DEBUG CONN & TEST POINTS

39

CELLULAR BASEBAND: POWER1

40

CELLULAR BASEBAND: POWER2

41

CELLULAR BASEBAND: CONTROL AND INTERFACES

42

CELLULAR BASEBAND: GPIOs

43

CELLULAR PMU: CONTROL AND CLOCKS

44

CELLULAR PMU: SWITCHERS AND LDOS

45

CELLULAR PMU: ET MODULATOR

46

CELLULAR TRANSCEIVER: POWER

47

CELLULAR TRANSCEIVER: PRX PORTS

48

CELLULAR TRANSCEIVER: DRX/GPS PORTS

49

CELLULAR TRANSCEIVER: TX PORTS

50

CELLULAR FRONT END: LB PAD

51

CELLULAR FRONT END: MB PAD

52

CELLULAR FRONT END: HB PAD

53

CELLULAR FRONT END: 2G PA

54

CELLULAR FRONT END: LB ASM

55

CELLULAR FRONT END: MB-HB ASM

56

CELLULAR FRONT END: DIVERSITY

57

SIM

58

WIFI/BT: WIFI/BT MODULE

59

SCH 051-1902

BRD 820-5507

MCO 056-01060

BOM 639-00263 (BETTER, DB30)

BOM 639-00265 (ULTRA, DB30)

BOM 639-00266 (SUPREME, DB30)

BOM 639-01056 (BETTER, B30)

BOM 639-01057 (ULTRA, B30)

BOM 639-01058 (SUPREME, B30)

BOM 639-01098 (BETTER, DB30C)

BOM 639-01100 (ULTRA, DB30C)

BOM 639-01099 (SUPREME, DB30C)

BOM 939-01627 (BETTER, DARWIN)

迅维手机维修培训

联系电话：0755-61506416

咨询QQ：1727176051 981775188

1 OF 59

8

7

6

5

4

3

2

1

迅维手机维修培训
联系电话：0755-61506416
咨询QQ: 1727176051 981775188

SCHEMATIC & PCB BOM CALLOUTS

PART#	QTY	DESCRIPTION	REFERENCE DESIGNATOR(S)	CRITICAL	BOM OPTION
051-1902	1	SCH, SINGLE_BRD, N71	SCH	CRITICAL	?
829-5507	1	PCBF, SINGLE_BRD, N71	PCB	CRITICAL	?
825-6838	1	EEEE CODE FOR 639-00263	EEEE_G2KM	CRITICAL	EEEE_16G_DB30
825-6838	1	EEEE CODE FOR 639-00265	EEEE_G2KN	CRITICAL	EEEE_64G_DB30
825-6838	1	EEEE CODE FOR 639-00266	EEEE_G2KL	CRITICAL	EEEE_128G_DB30
825-6838	1	EEEE CODE FOR 639-01056	EEEE_GKF9	CRITICAL	EEEE_16G_B30
825-6838	1	EEEE CODE FOR 639-01057	EEEE_GKFC	CRITICAL	EEEE_64G_B30
825-6838	1	EEEE CODE FOR 639-01058	EEEE_GKF8	CRITICAL	EEEE_128G_B30
825-6838	1	EEEE CODE FOR 639-01098	EEEE_GLHL	CRITICAL	EEEE_16G_DB30C
825-6838	1	EEEE CODE FOR 639-01100	EEEE_GLHR	CRITICAL	EEEE_64G_DB30C
825-6838	1	EEEE CODE FOR 639-01099	EEEE_GLHM	CRITICAL	EEEE_128G_DB30C
825-6838	1	EEEE CODE FOR 939-01627	EEEE_GR09	CRITICAL	EEEE_16G_DARWIN

S3E NAND BOM OPTIONS

PART#	QTY	DESCRIPTION	REFERENCE DESIGNATOR(S)	CRITICAL	BOM OPTION
335S00039	1	NAND, 1YNM, 16GX8, S3E, 64G, T, SLGA70	U1500	CRITICAL	NAND_16G
335S00075	1	NAND, 1YNM, 64GX8, S3E, MLB, 64G, H, SLGA70	U1500	CRITICAL	NAND_64G
335S00079	1	NAND, 1YNM, 128GX8, S3E, TLC, 128G, H, SLGA70	U1500	CRITICAL	NAND_128G

PART NUMBER	ALTERNATE FOR PART NUMBER	BOM OPTION	REF DES	COMMENTS:
335S00074	335S00039	NAND_16G	U1500	HYNIX 16G SLGA70 C DIE
335S00078	335S00075	NAND_64G	U1500	HYNIX 64G SLGA70
335S00064	335S00075	NAND_64G	U1500	SANDISK 64G SLGA70 1Z
335S00065	335S00079	NAND_128G	U1500	SANDISK 128G SLGA70

CARBON/ACCEL BOM OPTIONS

PART#	QTY	DESCRIPTION	REFERENCE DESIGNATOR(S)	BOM OPTION
338S1163	1	IC, ACCEL, 3-AXIS, DIG, BMA282, LGA14	U3030	NOSTUFF
117S0202	1	RES, MF, 20 OHM, 5%, 1/32W, 01005	R3030	NOSTUFF
117S0202	1	RES, MF, 20 OHM, 5%, 1/32W, 01005	R3031	NOSTUFF
117S0202	1	RES, MF, 20 OHM, 5%, 1/32W, 01005	R3032	NOSTUFF
138S0031	1	CAP, CER, XSR, 2.2UF, 20%, 6.3V, 0201	C3031	NOSTUFF
132S0316	1	CAP, CER, XSR, 0.1UF, 20%, 6.3V, 01005	C3032	NOSTUFF
338S00017	1	IC, CARBON, MPU-6700-12, LGA16	U3010	INVENSENSE_CARBON
338S1163	1	IC, ACCEL, 3-AXIS, DIG, BMA282, LGA14	U3030	INVENSENSE_CARBON
117S0202	1	RES, MF, 20 OHM, 5%, 1/32W, 01005	R3030	INVENSENSE_CARBON
117S0202	1	RES, MF, 20 OHM, 5%, 1/32W, 01005	R3031	INVENSENSE_CARBON
117S0202	1	RES, MF, 20 OHM, 5%, 1/32W, 01005	R3032	INVENSENSE_CARBON
138S0031	1	CAP, CER, XSR, 2.2UF, 20%, 6.3V, 0201	C3031	INVENSENSE_CARBON
132S0316	1	CAP, CER, XSR, 0.1UF, 20%, 6.3V, 01005	C3032	INVENSENSE_CARBON
338S00087	1	IC, CARBON 1.1, MPU-6800-00, LGA16	U3010	INVENSENSE_STANDALONE_CARBON

ALTERNATE BOM OPTIONS

PART NUMBER	ALTERNATE FOR PART NUMBER	BOM OPTION	REF DES	COMMENTS:
138S00032	138S0031	ALTERNATE	C0610	TY, 2.2UF, 0201
138S00049	138S0031	ALTERNATE	C0610	KYOCERA, 2.2UF, 0201
155S0060	155S0513	ALTERNATE	FL3100	MURATA, FERR, 22-OHM
138S00005	138S00003	ALTERNATE	C2000	TY, 15UF, 0402
138S00048	138S00003	ALTERNATE	C2000	KYOCERA, 15UF, 0402
138S0702	138S0657	ALTERNATE	C2111	MURATA, 4.3UF, 0610
118S0764	118S0717	ALTERNATE	R2250	PANASONIC, 3.92K-OHM, 0201
138S00006	138S0035	ALTERNATE	C1106	TY, 4.3UF, 0402
152S2052	152S1929	ALTERNATE	L2060	CYNTEC, 1UH, 1600
155S0773	155S0453	ALTERNATE	FL3110	TY, FERR, 120-OHM, 01005
377S0168	377S0140	ALTERNATE	DZ3150	TDK, VARISTOR, 6.8V, 100PF, 01005
155S00067	155S0581	ALTERNATE	FL4200	TDK, FERR, 240-OHM, 0201
155S00012	155S00009	ALTERNATE	L3100	MURATA, CHOKO, 65-OHM, 0005
138S0706	138S0739	ALTERNATE	C3302_RF	MURATA, CAP, CER, 3UF, 20%, 10V, 030, 0201
138S0945	138S0739	ALTERNATE	C3302_RF	KYOCERA, CAP, CER, 3UF, 20%, 10V, 030, 0201
155S00095	155S00068	ALTERNATE	FL1200	FERR, 80, 100 OHM, 25%, 100MA, 2 OHM, 01005
138S0648	138S0652	ALTERNATE	C3650	TY, 4.7UF, 0402
132S0400	132S0436	ALTERNATE	C1200	CAP, CER, XSR, 0.22UF, 20%, 6.3V, 01005
155S0960	155S0941	ALTERNATE	FL3151	FERR, 80, 70 OHM, 25%, 100MA, 0.4 OHM, 01005
138S00024	138S0986	ALTERNATE	C1107	CAP, CER, 3-TERM, 7.5UF, 20%, 4V, 0402
335S00066	335S0946	ALTERNATE	U0900	IC, EEPROM, 16KX8, 1.8V, 13C, MLCS04
155S00653	155S0511	ALTERNATE	FL4000	FERR, 80, 33 OHM, 25%, 100MA, 0.0005, 0201

NOT ALL REFERENCE DESIGNATORS LISTED.
USED ~116 TIMES IN DESIGN.

USED ~116 TIMES IN DESIGN.

USED ~7 TIMES IN DESIGN.

USED ~63 TIMES IN DESIGN.

USED ~63 TIMES IN DESIGN.

USED ~3 TIMES IN DESIGN.

USED ~19 TIMES IN DESIGN.

USED ~61 TIMES IN DESIGN.

USED ~9 TIMES IN DESIGN.

USED ~8 TIMES IN DESIGN.

USED ~11 TIMES IN DESIGN.

USED ~17 TIMES IN DESIGN.

USED ~17 TIMES IN DESIGN.

USED ~12 TIMES IN DESIGN.

USED ~2 TIMES IN DESIGN.

USED ~9 TIMES IN DESIGN.

USED ~7 TIMES IN DESIGN.

USED ~4 TIMES IN DESIGN.

POWER INDUCTOR ALTERNATES

PART NUMBER	ALTERNATE FOR PART NUMBER	BOM OPTION	REF DES	COMMENTS:
152S00120	152S00077	ALTERNATE	L2070	TAIYO 2016 1.0UH 0.65MM
152S00118	152S00075	ALTERNATE	L3700	TAIYO 2016 1.2UH

ACTIVE DIODE ALTERNATE

PART NUMBER	ALTERNATE FOR PART NUMBER	BOM OPTION	REF DES	COMMENTS:
376S00106	376S00047	ALTERNATE	Q2300	DIODES INC. ACT DIODE

SHIELD PART NUMBERS

PART#	QTY	DESCRIPTION		
806-02095	1	SHIELD, EMI, UPPER FRONT, WTOP, N71	SH0500	COMMON
806-04508	1	SHIELD, EMI, LOWER FRONT, CLOSED, NOMU, N71	SH0501	COMMON
806-03994	1	SHIELD, EMI, SA, OPEN, N71	SH0502	COMMON
806-02097	1	SHIELD, EMI, UPPER BACK, WTOP, N71	SH0503	COMMON
806-02098	1	SHIELD, EMI, LOWER BACK, WTOP, N71	SH0504	COMMON

SOC/PMU SUB BOMS

PART#	QTY	DESCRIPTION	REFERENCE DESIGNATOR(S)	BOM OPTION
685-00069	1	SUBBOM, SINGLE, BRD, MAUI, N71	SUBBOM_SOC	COMMON
338S00120	1	IC, PMU, ANTIQUA, A0, D225SA1, OTP-AL, MLCS0300	U2000	MAUI
118S0631	1	RES, MF, 100 OHM, 1%, 1/32W, 01005	R0730	MAUI
131S0307	1	CAP, CER, NP0/COG, 100PF, 5%, 16V, 01005	C0730	MAUI
339S00112	1	PROD FUSED, H DRAM	U0600	MAUI
117S0161	1	RES, MF, 0 OHM, 1/32W, 01005	R0651	MAUI

PART#	QTY	DESCRIPTION	REFERENCE DESIGNATOR(S)	BOM OPTION
338S00122	1	IC, PMU, ANTIQUA, R225SA1, OTP-2L, MLCS0300	U2000	MALTA
118S00009	1	RES, MF, 3.01KOHM, 1%, 1/32W, 01005	R0730	MALTA
131S0307	1	CAP, CER, NP0/COG, 100PF, 5%, 16V, 01005	C0730	NOSTUFF
339S00124	1	M DEV FUSED, M DRAM	U0600	MALTA
118S00025	1	RES, MF, 330 OHM, 1%, 1/32W, 01005	R0651	MALTA

PART NUMBER	ALTERNATE FOR PART NUMBER	BOM OPTION	REF DES	COMMENTS:
685-00070	685-00069	ALTERNATE	SUBBOM_SOC	SUBBOM, SINGLE, BRD, MALTA, N71

SOC ALTERNATES

PART NUMBER	ALTERNATE FOR PART NUMBER	BOM OPTION	REF DES	COMMENTS:
339S00113	339S00112	MAUI	U0600	PROD FUSED, M DRAM
339S00114	339S00112	MAUI	U0600	PROD FUSED, S DRAM

339S00125	339S00124	MALTA	U0600	M PROD FUSED, H DRAM, ATK
339S00126	339S00124	MALTA	U0600	M PROD FUSED, S DRAM, ATK
339S00127	339S00124	MALTA	U0600	M PROD FUSED, M DRAM, SCK
339S00128	339S00124	MALTA	U0600	M PROD FUSED, H DRAM, SCK
339S00129	339S00124	MALTA	U0600	M PROD FUSED, S DRAM, SCK

INDUCTOR SUB BOMS

PART#	QTY	DESCRIPTION	REFERENCE DESIGNATOR(S)	BOM OPTION
685-00081	1	SUBBOM, SINGLE, BRD, CYNTEC, N71	SUBBOM_IND	COMMON
152S00074	6	IND, PWR, SHLD, 1.0UH, 3.6A, 0.060 OHM, 2016	L2000, L2002, L2010, L2012, L2020, L2030	CYNTEC
152S00074	5	IND, PWR, SHLD, 1.0UH, 3.6A, 0.060 OHM, 2016	L2040, L2050, L2300, L3300, L4021	CYNTEC
152S00081	6	IND, PWR, SHLD, 0.47UH, 3.6A, 0.040 OHM, 2012	L2001, L2003, L2011, L2013, L2021, L2041	CYNTEC


PART#	QTY	DESCRIPTION	REFERENCE DESIGNATOR(S)	BOM OPTION
152S00117	6	IND, PWR, SHLD, 1.0UH, 3.6A, 0.060 OHM, 2016	L2000, L2002, L2010, L2012, L2020, L2030	TAIYO
152S00117	5	IND, PWR, SHLD, 1.0UH, 3.6A, 0.060 OHM, 2016	L2040, L2050, L2300, L3300, L4021	TAIYO
152S00121	6	IND, PWR, SHLD, 0.47UH, 3.6A, 0.040 OHM, 2012	L2001, L2003, L2011, L2013, L2021, L2041	TAIYO

PART NUMBER	ALTERNATE FOR PART NUMBER	BOM OPTION	REF DES	COMMENTS:
685-00080	685-00081	ALTERNATE	SUBBOM_IND	SUBBOM, SINGLE, BRD, TAIYO, N71

迅维手机维修培训
联系电话：0755-61506416
咨询QQ: 1727176051 981775188

TESTPOINTS


POWER

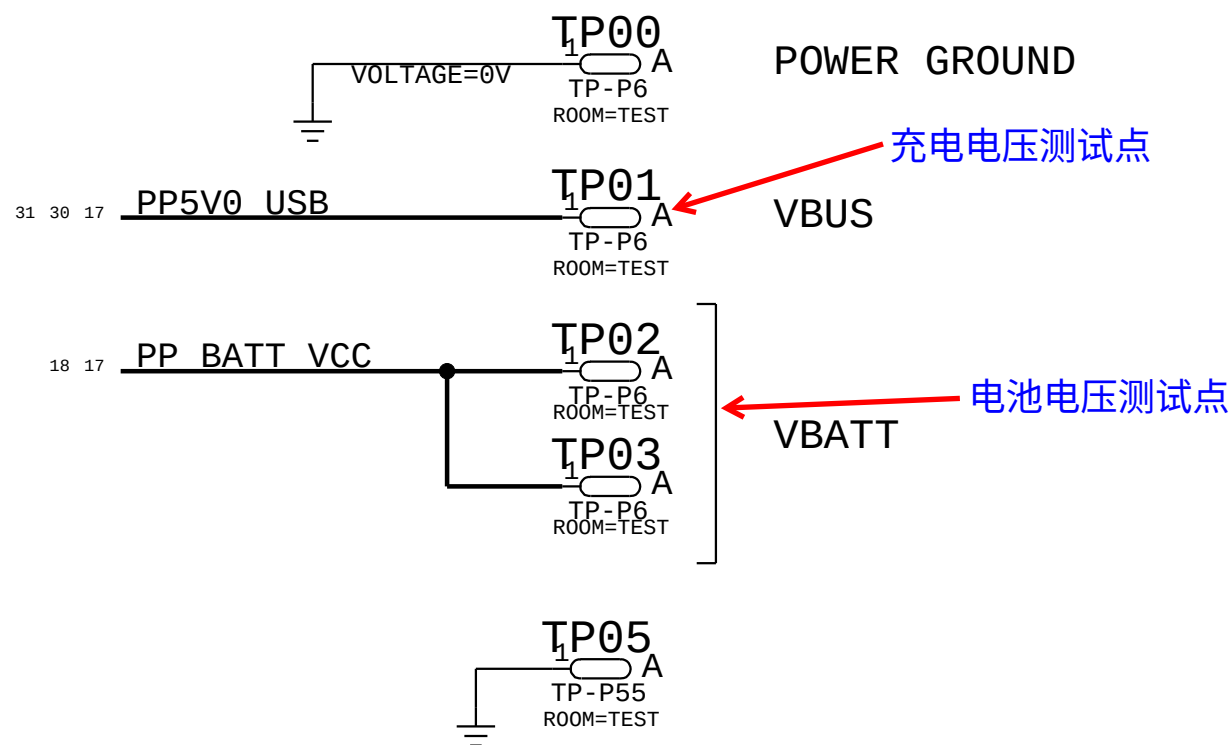


RESET



DFU

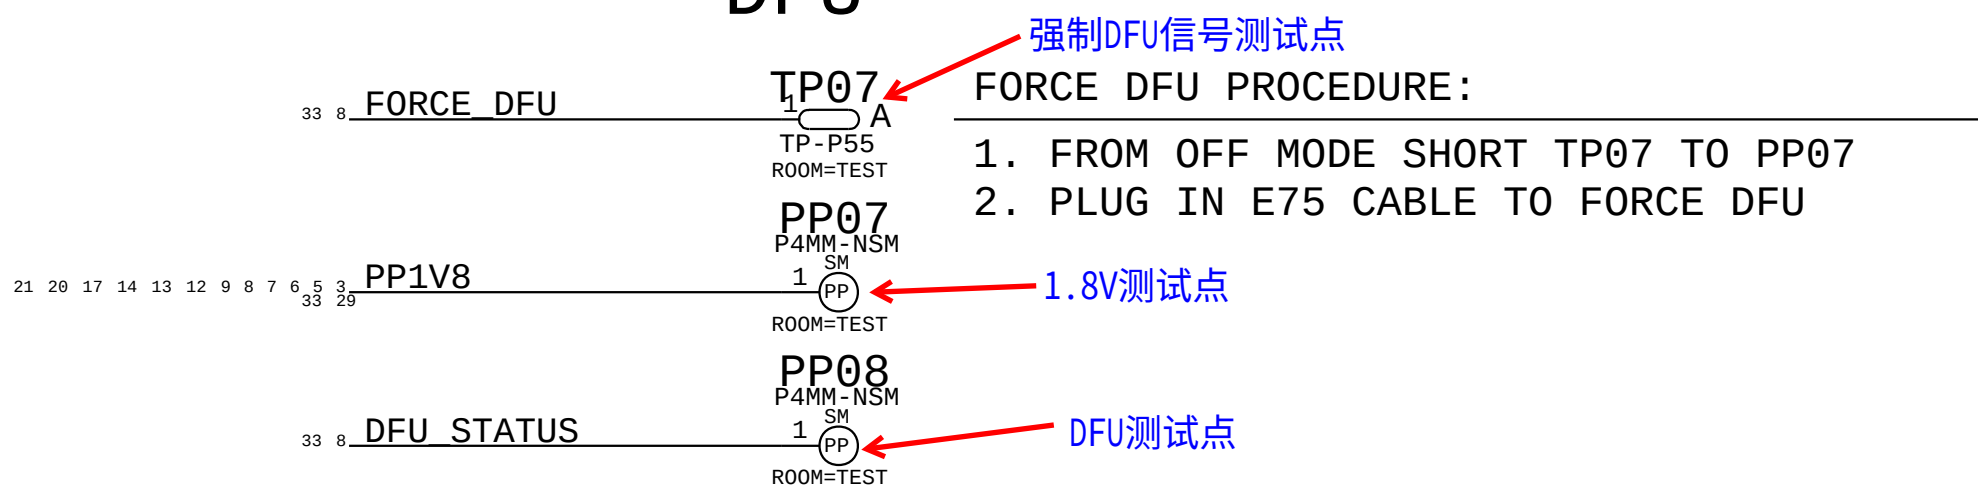


E75

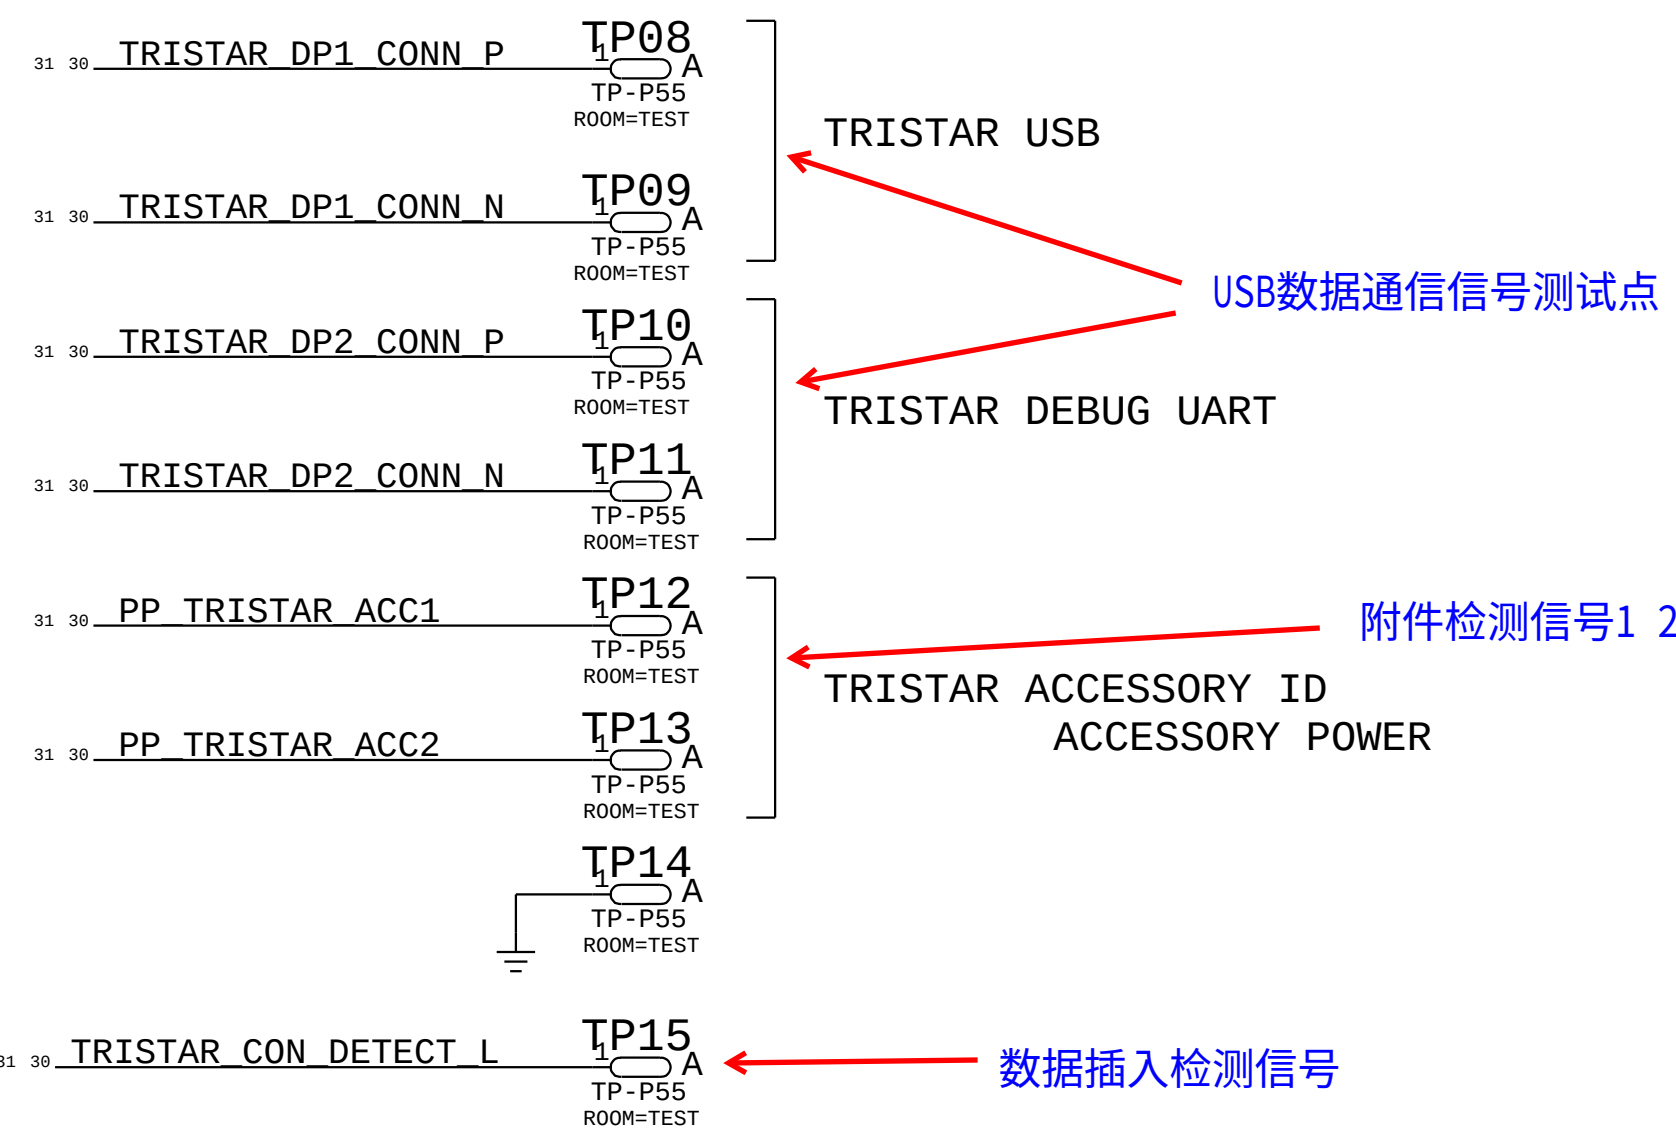


迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188


AMUX

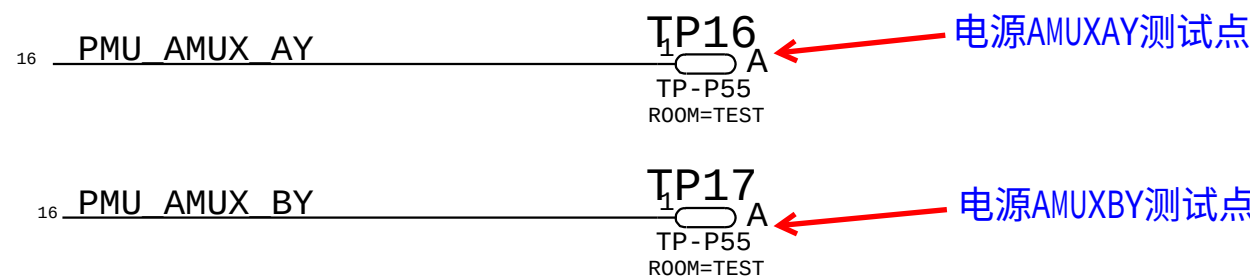


MOJAVE

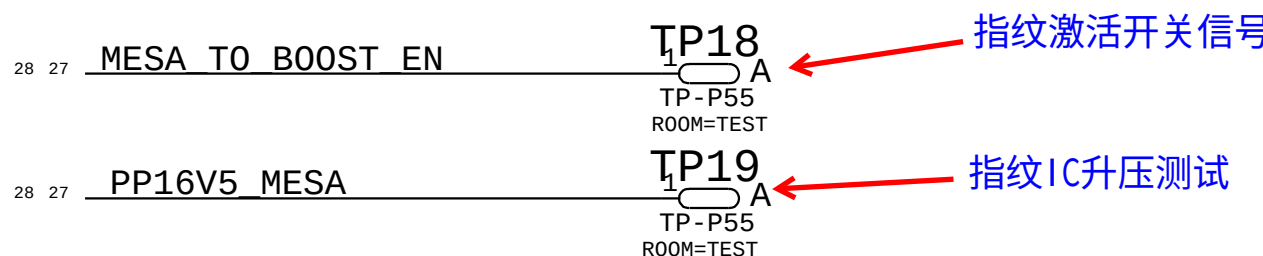

LCM

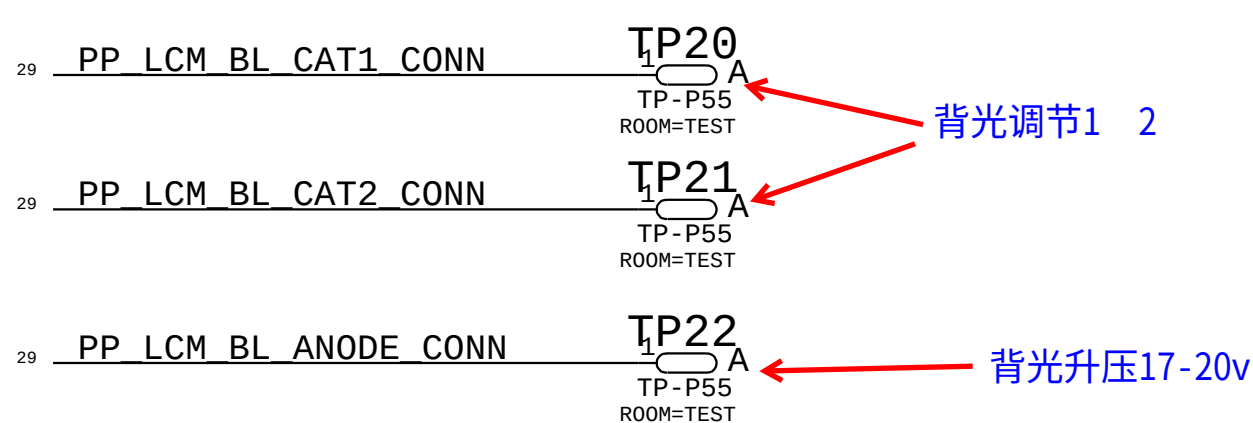


SUPER SCREW

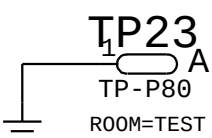

N71 I2C DEVICE MAP

I2C BUS	DEVICE	BINARY	7-BIT HEX	8-BIT HEX
I2C0	ANTIGUA PMU	1110100X	0X74	0XE8
	CHESTNUT	0100111X	0X27	0X4E
	MUON	1100010X	0X62	0XC4
I2C1	TIGRIS	1110101X	0X75	0XEA
	ARC DRIVER	1000001X	0X41	0X82
	SPEAKER AMP	1000000X	0X40	0X80
	TRISTAR	0011010X	0X1A	0X34
I2C2	ALS	0101001X	0X29	0X52
	DISP EEPROM	1010001X	0X51	0XA2
OWL	UNUSED	N/A	N/A	N/A
ISP I2C0	REAR CAM	TBD	TBD	TBD
	LED DRIVER	1100011X	0X63	0XC6
ISP I2C1	FRONT CAM	0010000X	0X10	0X20
TOUCH I2C	MESON	1000000X	0x40	0x80
	MAMBA	1100000X	0x60	0xC0
	DOPPLER	1011000X	0x58	0xB0
SEP I2C	SEP EEPROM	1010001X	0x51	0xA2

BOOTSTRAPPING:BOARD REV
BOARD ID
BOOT CONFIG

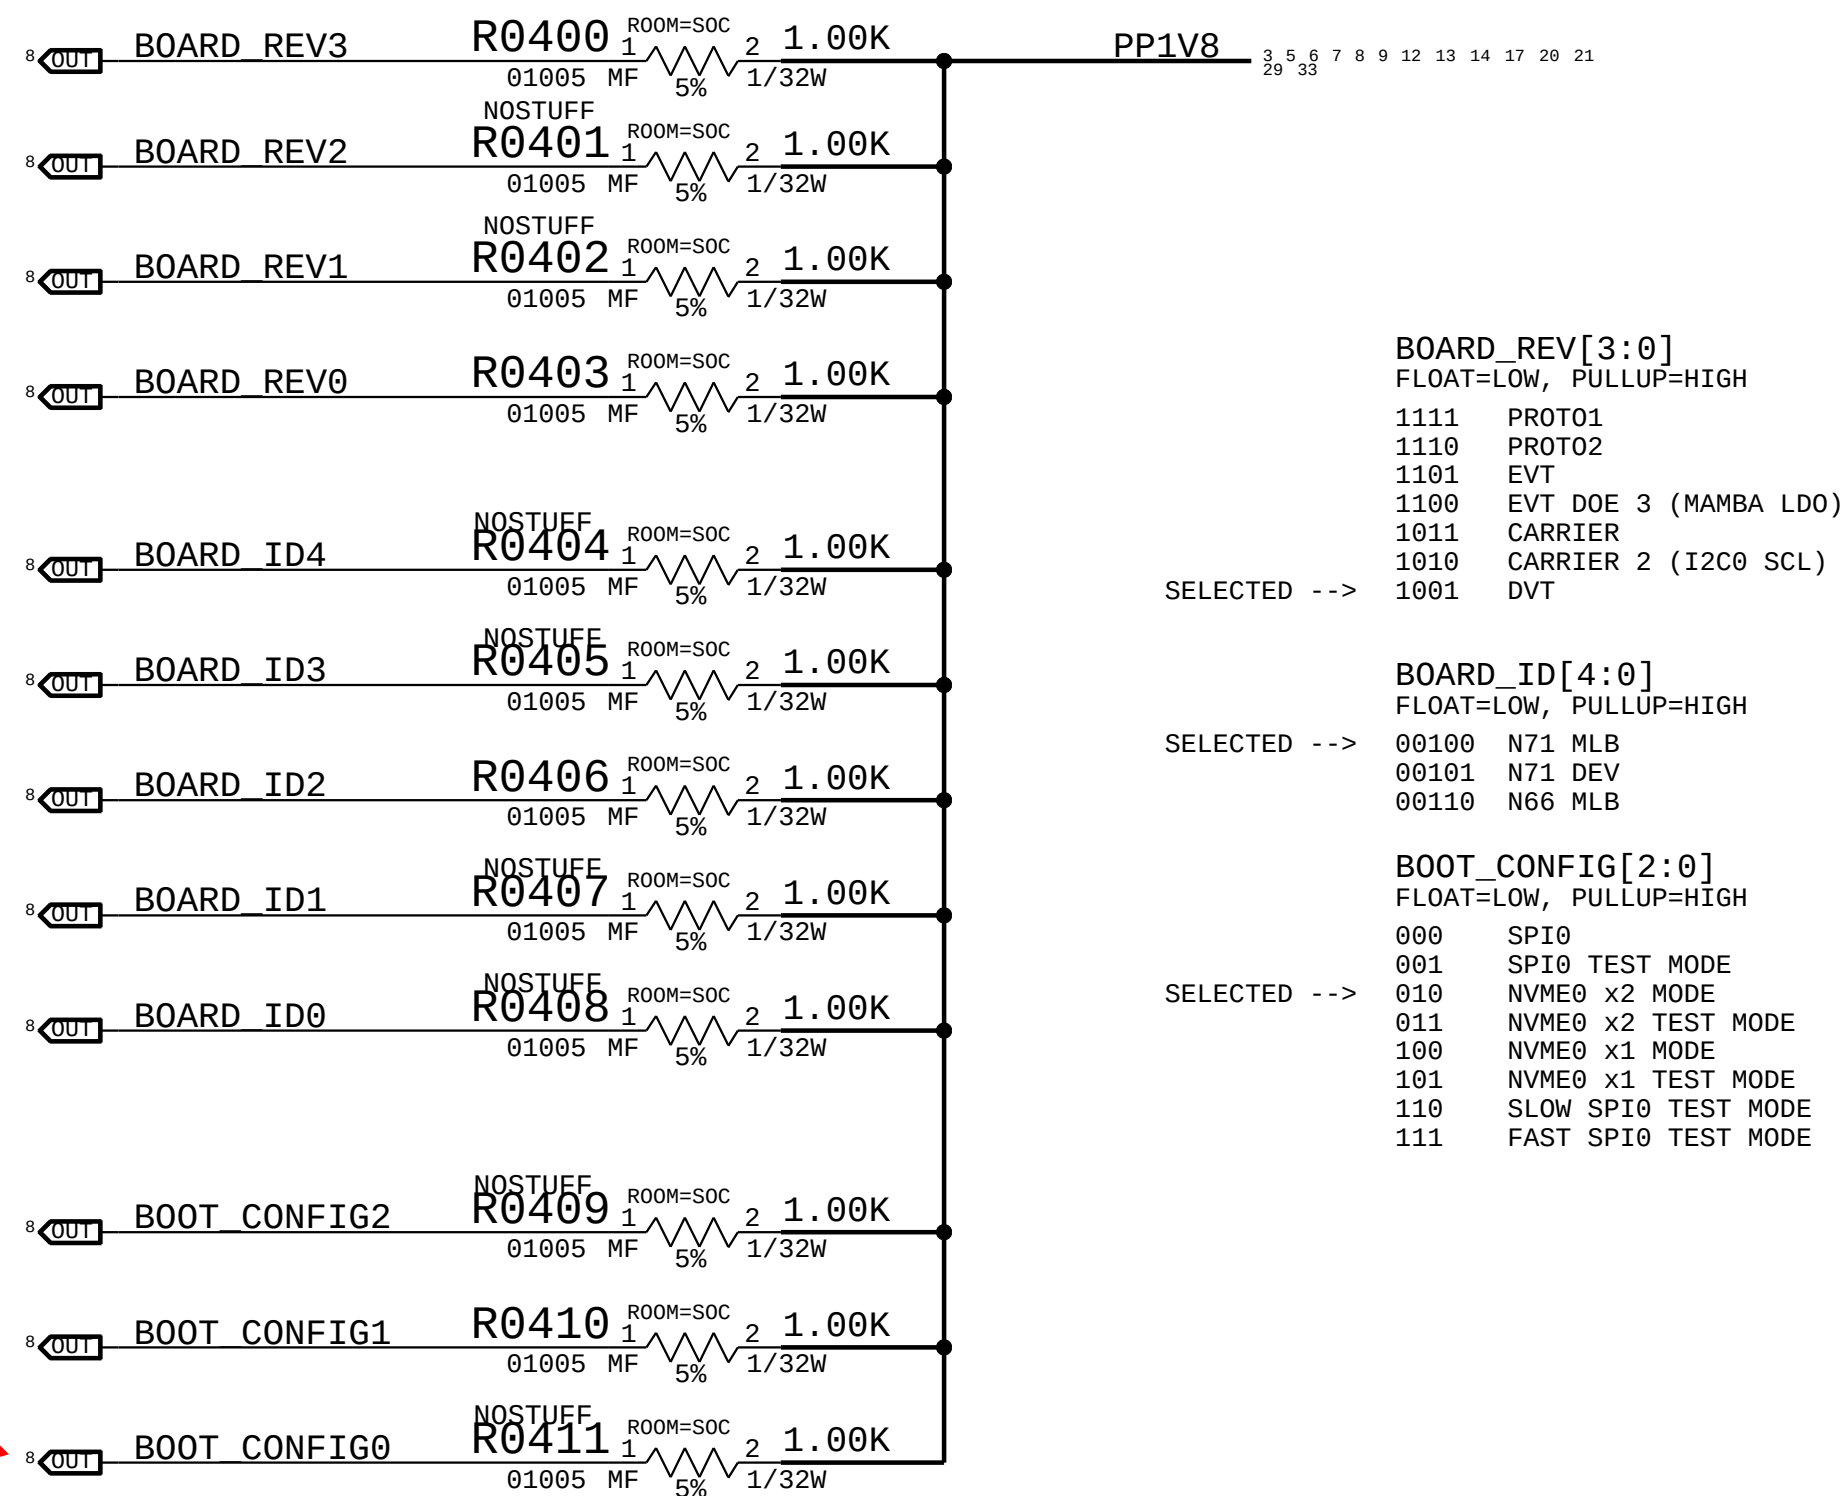

迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188





TOP - SIDE

BOTTOM - SIDE

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

FIDUCIALS

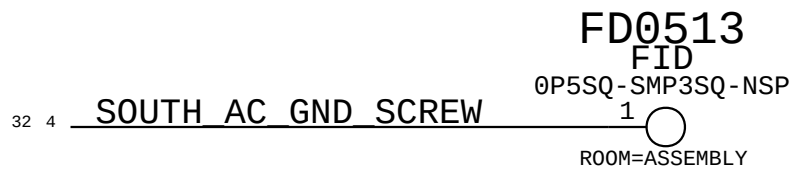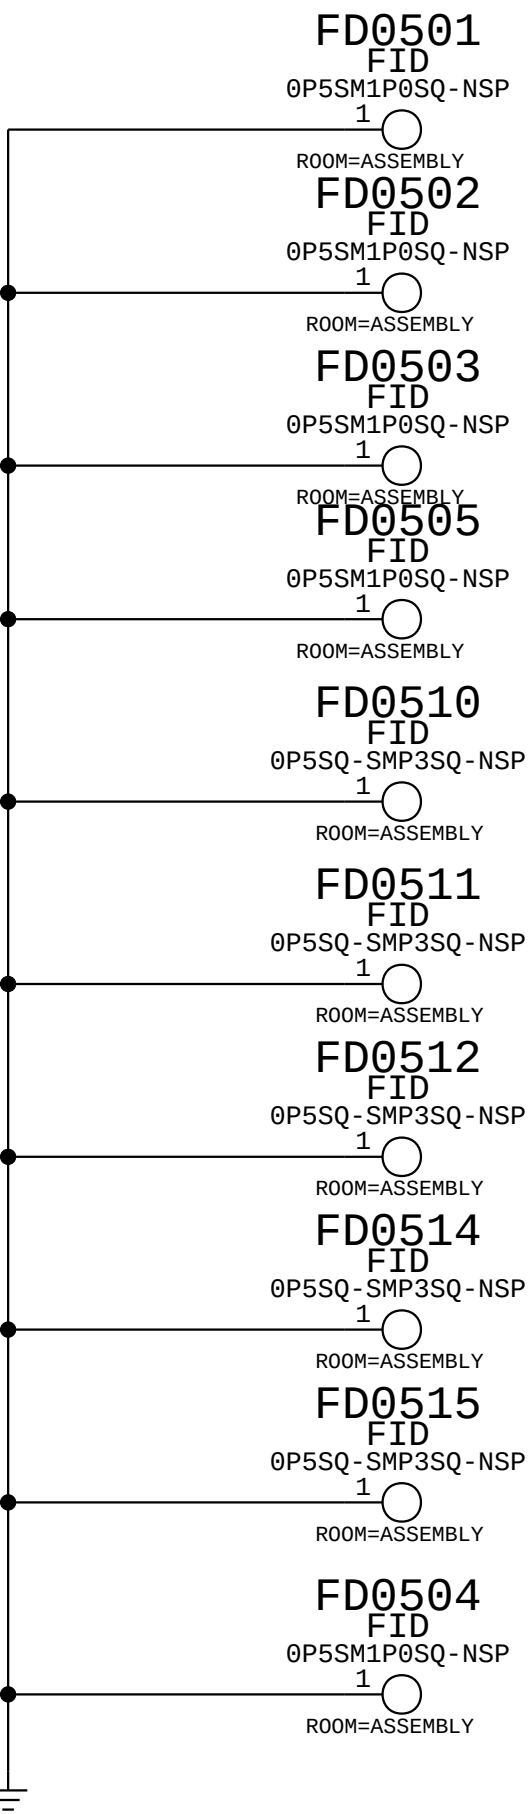

UPPER SHIELD


OMIT_TABLE



SHLD-EMI-UPPER-BACK-N61

LOWER SHIELD

OMIT_TABLE

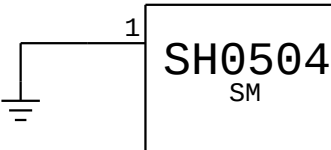

SHLD-EMI-LOWER-BACK-N61

DUAL RF COAX CLIP

STOCKHOLM FEED

BS0505

STD0FF-2.560D1.4ID.99H-SM

ROOM=ASSEMBLY

860-00109

33 AP TO STOCKHOLM ANT

1

860-00096

ROOM=ASSEMBLY

BS0503

STD0FF-2.60D0.81H-TH

ROOM=ASSEMBLY

860-00111

860-00111

ROOM=ASSEMBLY

BS0502

STD0FF-2.850D1.4ID-0.84H

ROOM=ASSEMBLY

860-00111

860-00111

ROOM=ASSEMBLY

CL0502

TH-NSP

SL-1.20X0.40-1.50X0.70-NSP

ROOM=ASSEMBLY

UPPER SHIELD

OMIT_TABLE



SHLD-EMI-UPPER-FRONT-N61

ROOM=ASSEMBLY

SH0501


SM

SHLD-EMI-LOWER-FRONT-N61

ROOM=ASSEMBLY

SA SHIELD

OMIT_TABLE

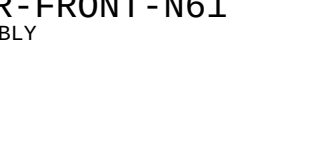

SHLD-EMI-SA-N71

ROOM=ASSEMBLY

BS0500

STD0FF-2.700D1.84ID-0.88H-TH

ROOM=ASSEMBLY

860-7862

860-7862

ROOM=ASSEMBLY

BS0501

STD0FF-2.850D1.4ID-0.84H

ROOM=ASSEMBLY

860-00111

860-00111

ROOM=ASSEMBLY

CL0502

TH-NSP

SL-1.20X0.40-1.50X0.70-NSP

ROOM=ASSEMBLY

UPPER SHIELD

OMIT_TABLE



SHLD-EMI-UPPER-FRONT-N61

ROOM=ASSEMBLY

SH0501


SM

SHLD-EMI-LOWER-FRONT-N61

ROOM=ASSEMBLY

SA SHIELD

OMIT_TABLE

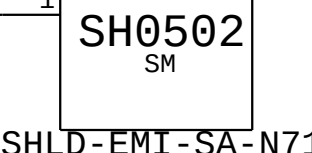

SHLD-EMI-SA-N71

ROOM=ASSEMBLY

BS0500

STD0FF-2.700D1.84ID-0.88H-TH

ROOM=ASSEMBLY

860-7862

860-7862

ROOM=ASSEMBLY

BS0501

STD0FF-2.850D1.4ID-0.84H

ROOM=ASSEMBLY

860-00111

860-00111

ROOM=ASSEMBLY

CL0502

TH-NSP

SL-1.20X0.40-1.50X0.70-NSP

ROOM=ASSEMBLY

UPPER SHIELD

OMIT_TABLE

SH0500

SM

SHLD-EMI-UPPER-FRONT-N61

ROOM=ASSEMBLY

SH0501

SM

SHLD-EMI-LOWER-FRONT-N61

ROOM=ASSEMBLY

SA SHIELD

OMIT_TABLE

SH0502

SM

SHLD-EMI-SA-N71

ROOM=ASSEMBLY

BS0500

STD0FF-2.700D1.84ID-0.88H-TH

ROOM=ASSEMBLY

860-7862

860-7862

ROOM=ASSEMBLY

BS0501

STD0FF-2.850D1.4ID-0.84H

ROOM=ASSEMBLY

860-00111

860-00111

ROOM=ASSEMBLY

CL0502

TH-NSP

SL-1.20X0.40-1.50X0.70-NSP

ROOM=ASSEMBLY

UPPER SHIELD

OMIT_TABLE

SH0500

SM

SHLD-EMI-UPPER-FRONT-N61

ROOM=ASSEMBLY

SH0501

SM

SHLD-EMI-LOWER-FRONT-N61

ROOM=ASSEMBLY

SA SHIELD

OMIT_TABLE

SH0502

SM

SHLD-EMI-SA-N71

ROOM=ASSEMBLY

BS0500

STD0FF-2.700D1.84ID-0.88H-TH

ROOM=ASSEMBLY

860-7862

860-7862

ROOM=ASSEMBLY

BS0501

STD0FF-2.850D1.4ID-0.84H

ROOM=ASSEMBLY

860-00111

860-00111

ROOM=ASSEMBLY

CL0502

TH-NSP

SL-1.20X0.40-1.50X0.70-NSP

ROOM=ASSEMBLY

UPPER SHIELD

OMIT_TABLE

SH0500

SM

SHLD-EMI-UPPER-FRONT-N61

ROOM=ASSEMBLY

SH0501

SM

SHLD-EMI-LOWER-FRONT-N61

ROOM=ASSEMBLY

SA SHIELD

OMIT_TABLE

SH0502

SM

SHLD-EMI-SA-N71

ROOM=ASSEMBLY

BS0500

STD0FF-2.700D1.84ID-0.88H-TH

ROOM=ASSEMBLY

860-7862

860-7862

ROOM=ASSEMBLY

BS0501

STD0FF-2.850D1.4ID-0.84H

ROOM=ASSEMBLY

860-00111

860-00111

ROOM=ASSEMBLY

CL0502

TH-NSP

SL-1.20X0.40-1.50X0.70-NSP

ROOM=ASSEMBLY

UPPER SHIELD

OMIT_TABLE

SH0500

SM

SHLD-EMI-UPPER-FRONT-N61

ROOM=ASSEMBLY

SH0501

SM

SHLD-EMI-LOWER-FRONT-N61

ROOM=ASSEMBLY

SA SHIELD

OMIT_TABLE

SH0502

SM

SHLD-EMI-SA-N71

ROOM=ASSEMBLY

BS0500

STD0FF-2.700D1.84ID-0.88H-TH

ROOM=ASSEMBLY

860-7862

860-7862

ROOM=ASSEMBLY

BS0501

STD0FF-2.850D1.4ID-0.84H

ROOM=ASSEMBLY

860-00111

860-00111

ROOM=ASSEMBLY

CL0502

TH-NSP

SL-1.20X0.40-1.50X0.70-NSP

ROOM=ASSEMBLY

UPPER SHIELD

OMIT_TABLE

SH0500

SM

SHLD-EMI-UPPER-FRONT-N61

ROOM=ASSEMBLY

SH0501

SM

SHLD-EMI-LOWER-FRONT-N61

ROOM=ASSEMBLY

SA SHIELD

OMIT_TABLE

SH0502

SM

SHLD-EMI-SA-N71

ROOM=ASSEMBLY

BS0500

STD0FF-2.700D1.84ID-0.88H-TH

ROOM=ASSEMBLY

860-7862

860-7862

ROOM=ASSEMBLY

BS0501

STD0FF-2.850D1.4ID-0.84H

ROOM=ASSEMBLY

860-00111

860-00111

ROOM=ASSEMBLY

CL0502

TH-NSP

SL-1.20X0.40-1.50X0.70-NSP

ROOM=ASSEMBLY

UPPER SHIELD

OMIT_TABLE

SH0500

SM

SHLD-EMI-UPPER-FRONT-N61

ROOM=ASSEMBLY

SH0501

SM

SHLD-EMI-LOWER-FRONT-N61

ROOM=ASSEMBLY

SA SHIELD

OMIT_TABLE

SH0502

SM

SHLD-EMI-SA-N71

ROOM=ASSEMBLY

BS0500

STD0FF-2.700D1.84ID-0.88H-TH

ROOM=ASSEMBLY

860-7862

860-7862

ROOM=ASSEMBLY

BS0501

STD0FF-2.850D1.4ID-0.84H


ROOM=ASSEMBLY

860-00111

860-00111

MAUI - USB, JTAG, XTAL

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

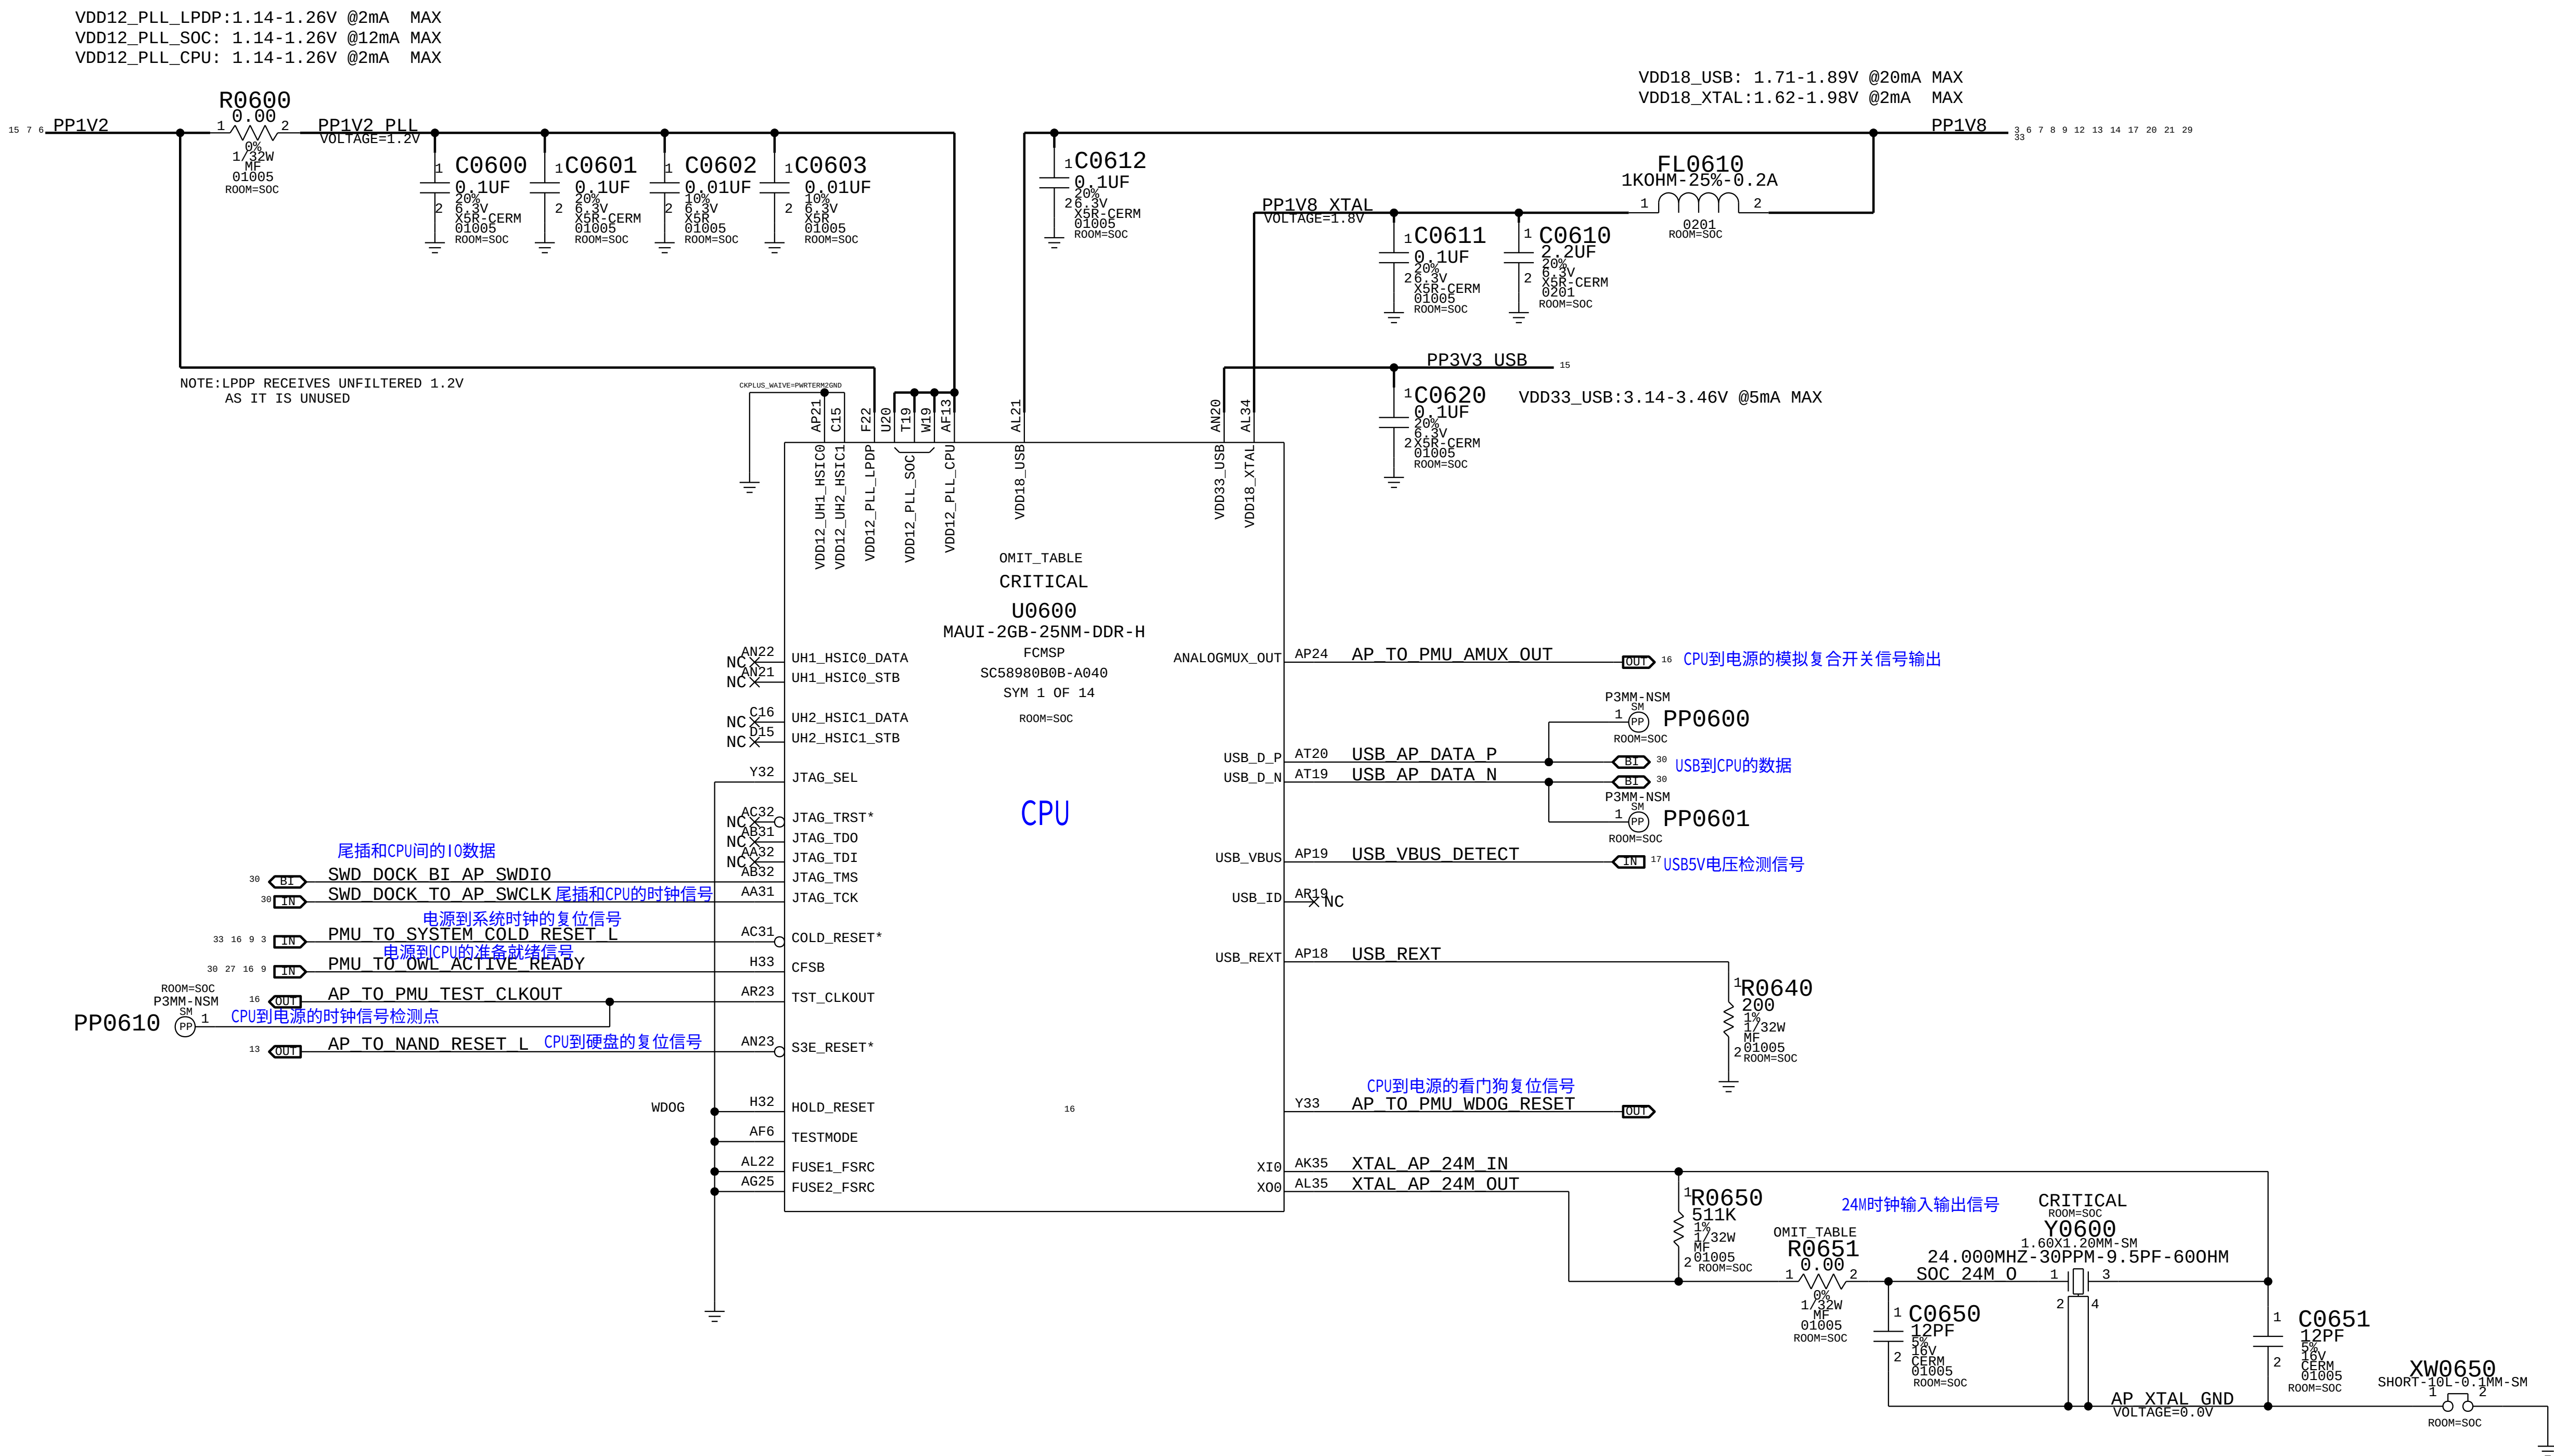

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188



MAUI - CAMERA & DISPLAY INTERFACES

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

D

D

C



C

B

B

A


A

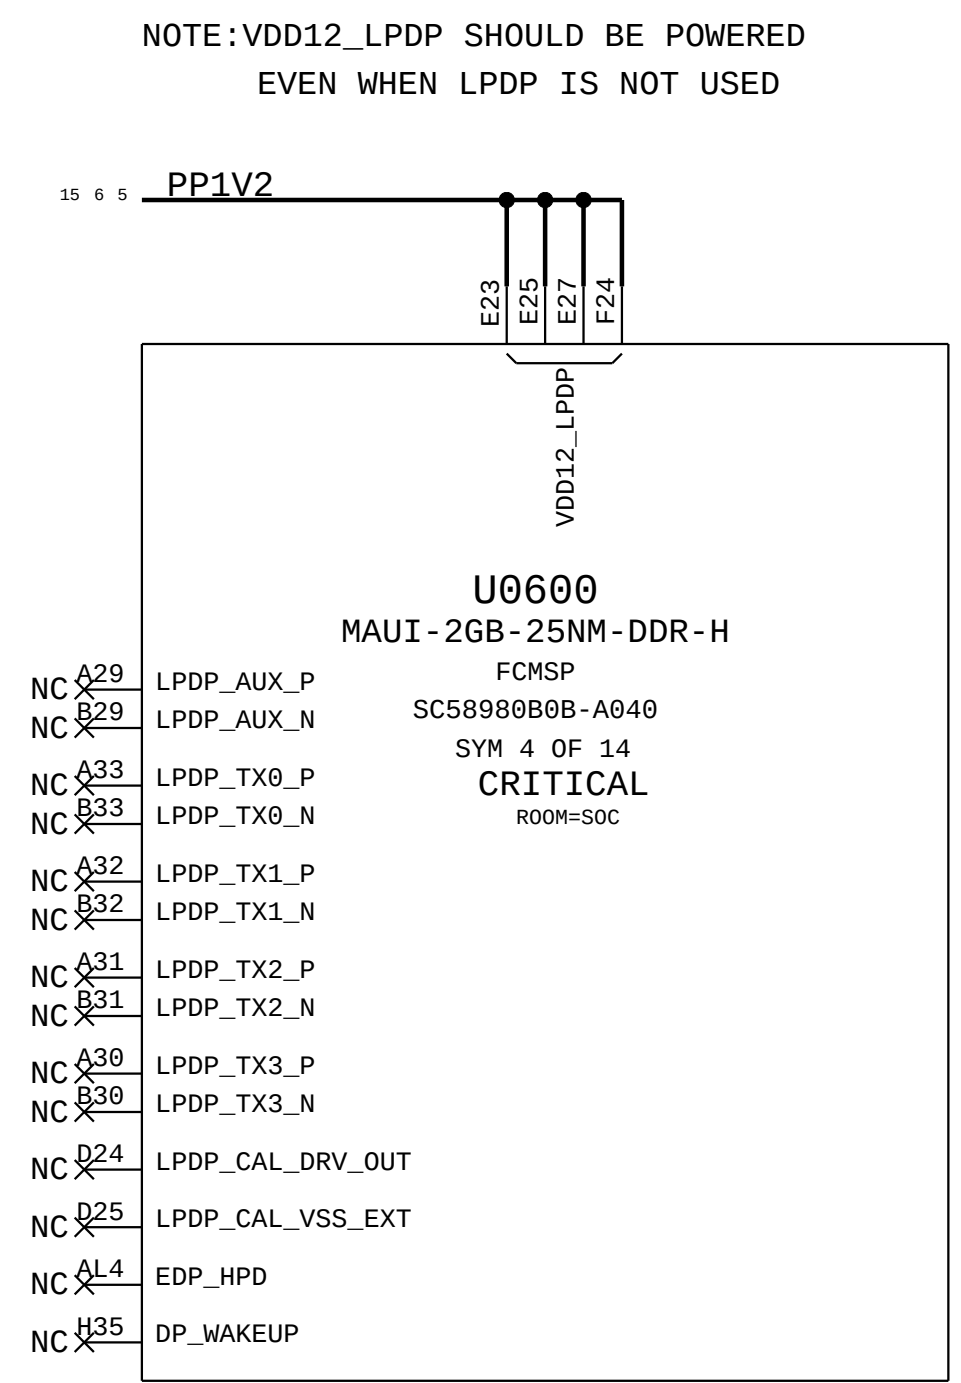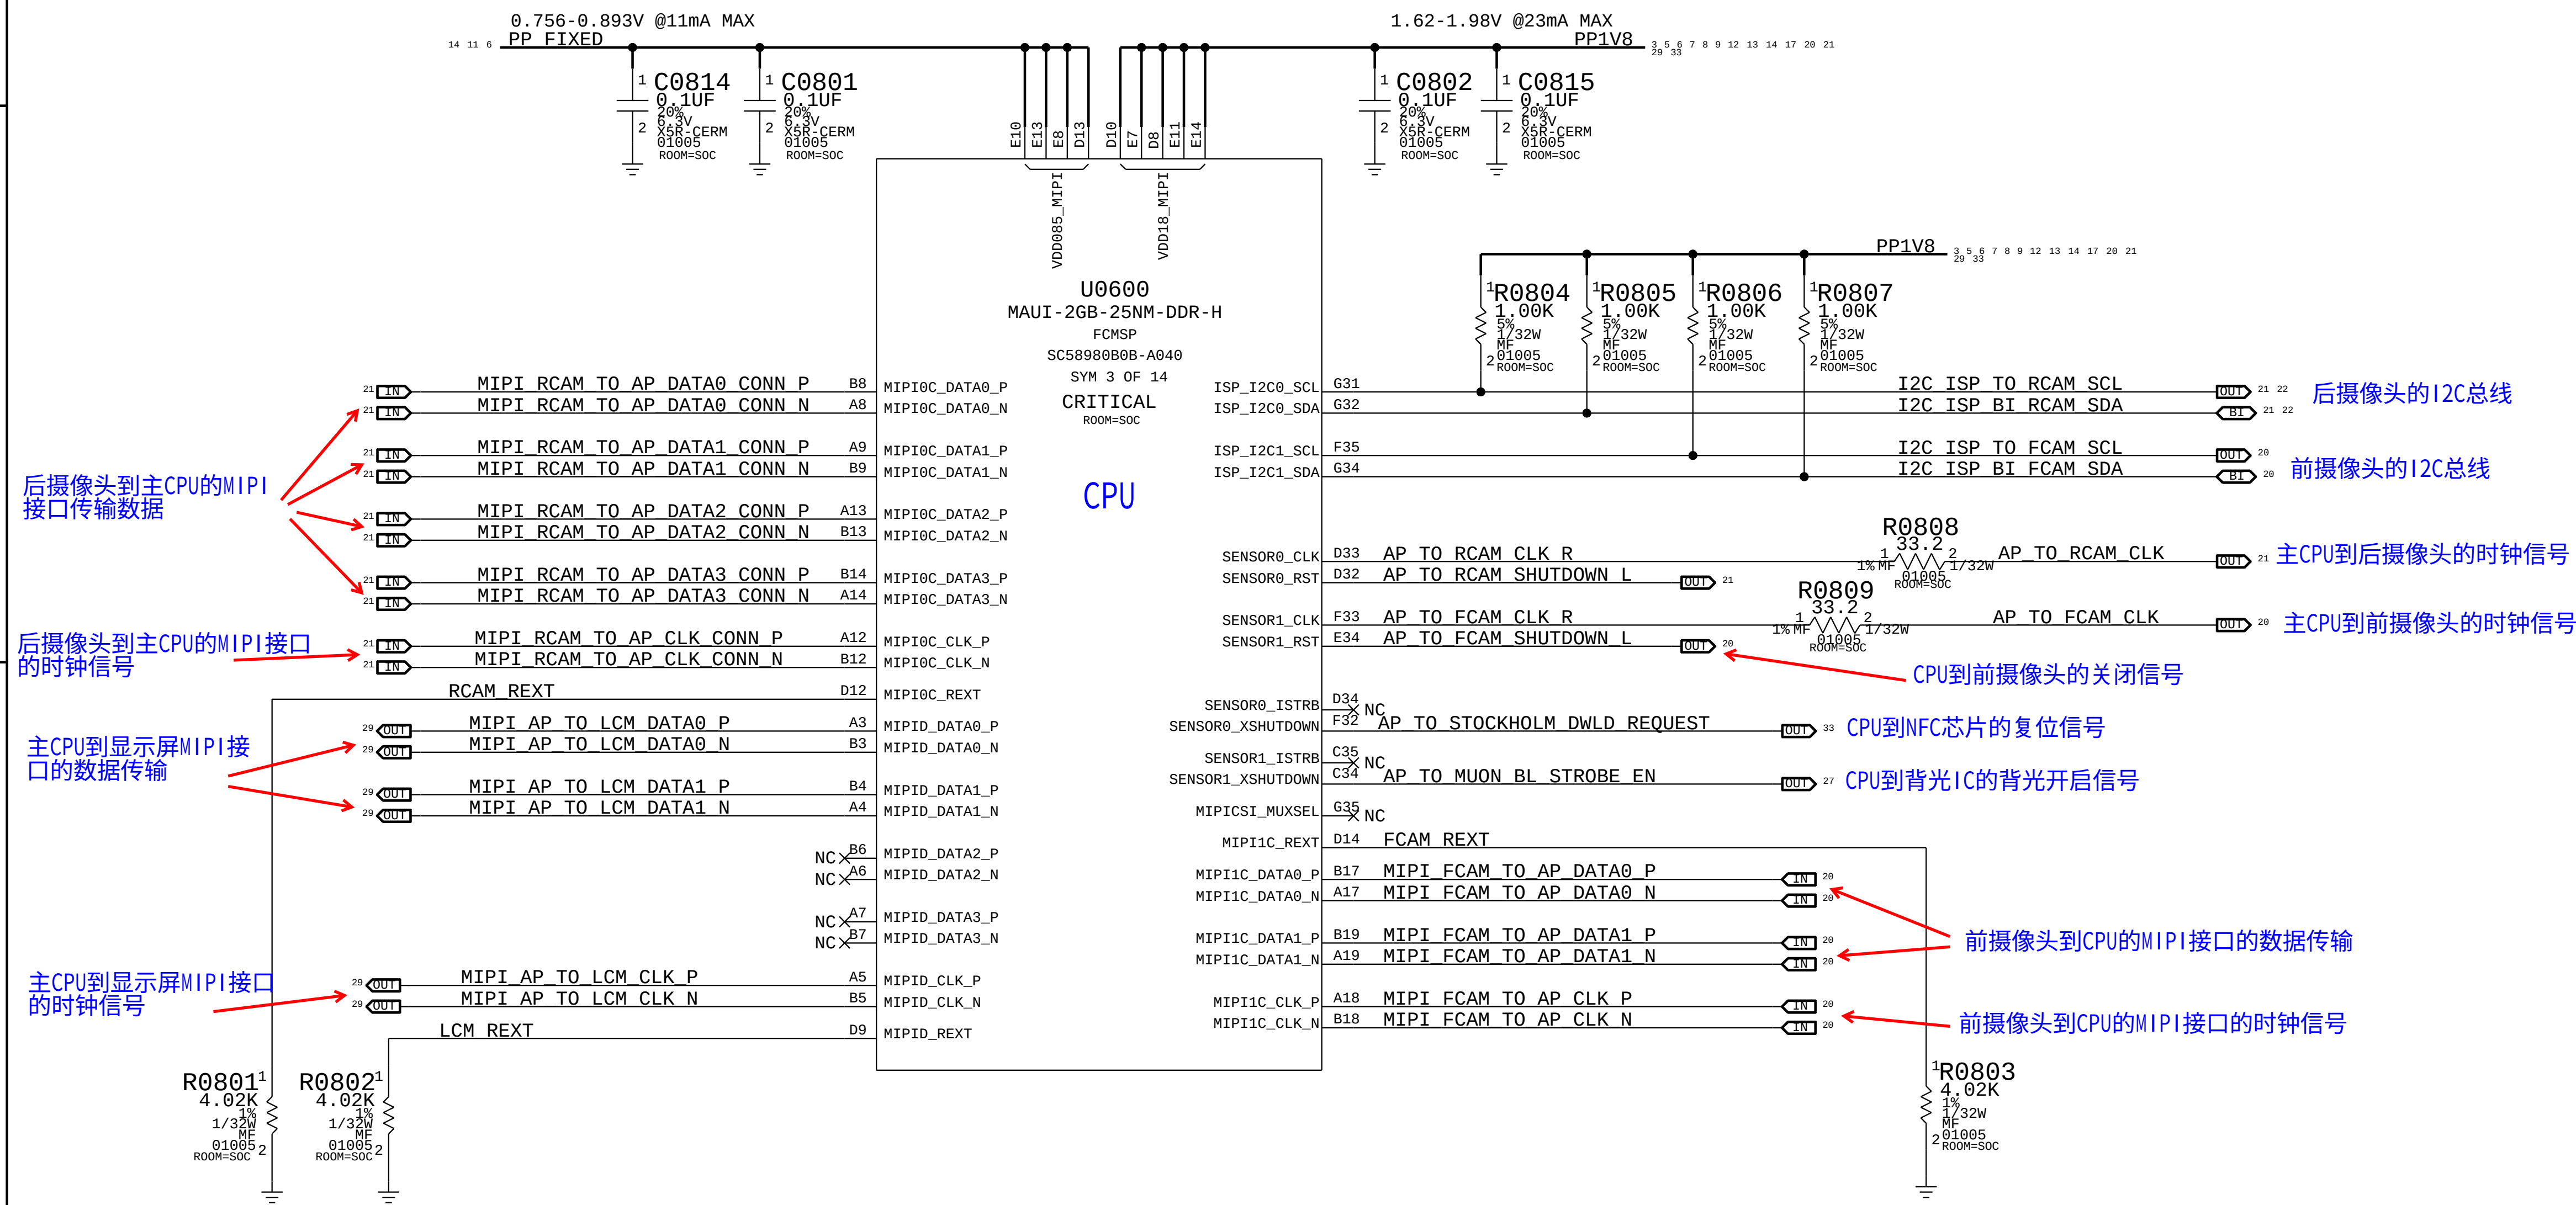


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

2	03SV X5R 0201-1 ROOM-60C	U
---	-----------------------------------	---



1/32W
MF
81905
ROOM=SOC

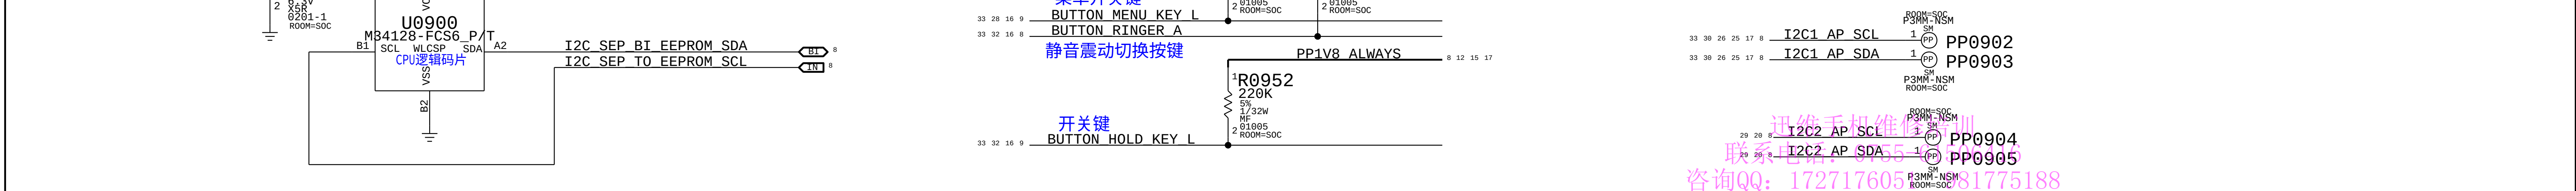


I2C PROBE POINTS

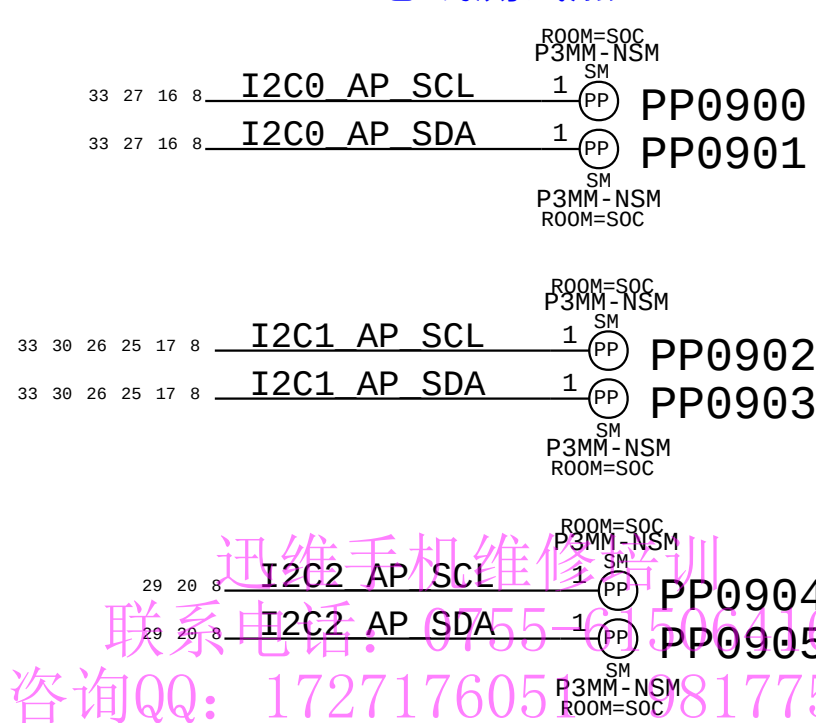

POWER STATE CONTROL PROBE POINTS

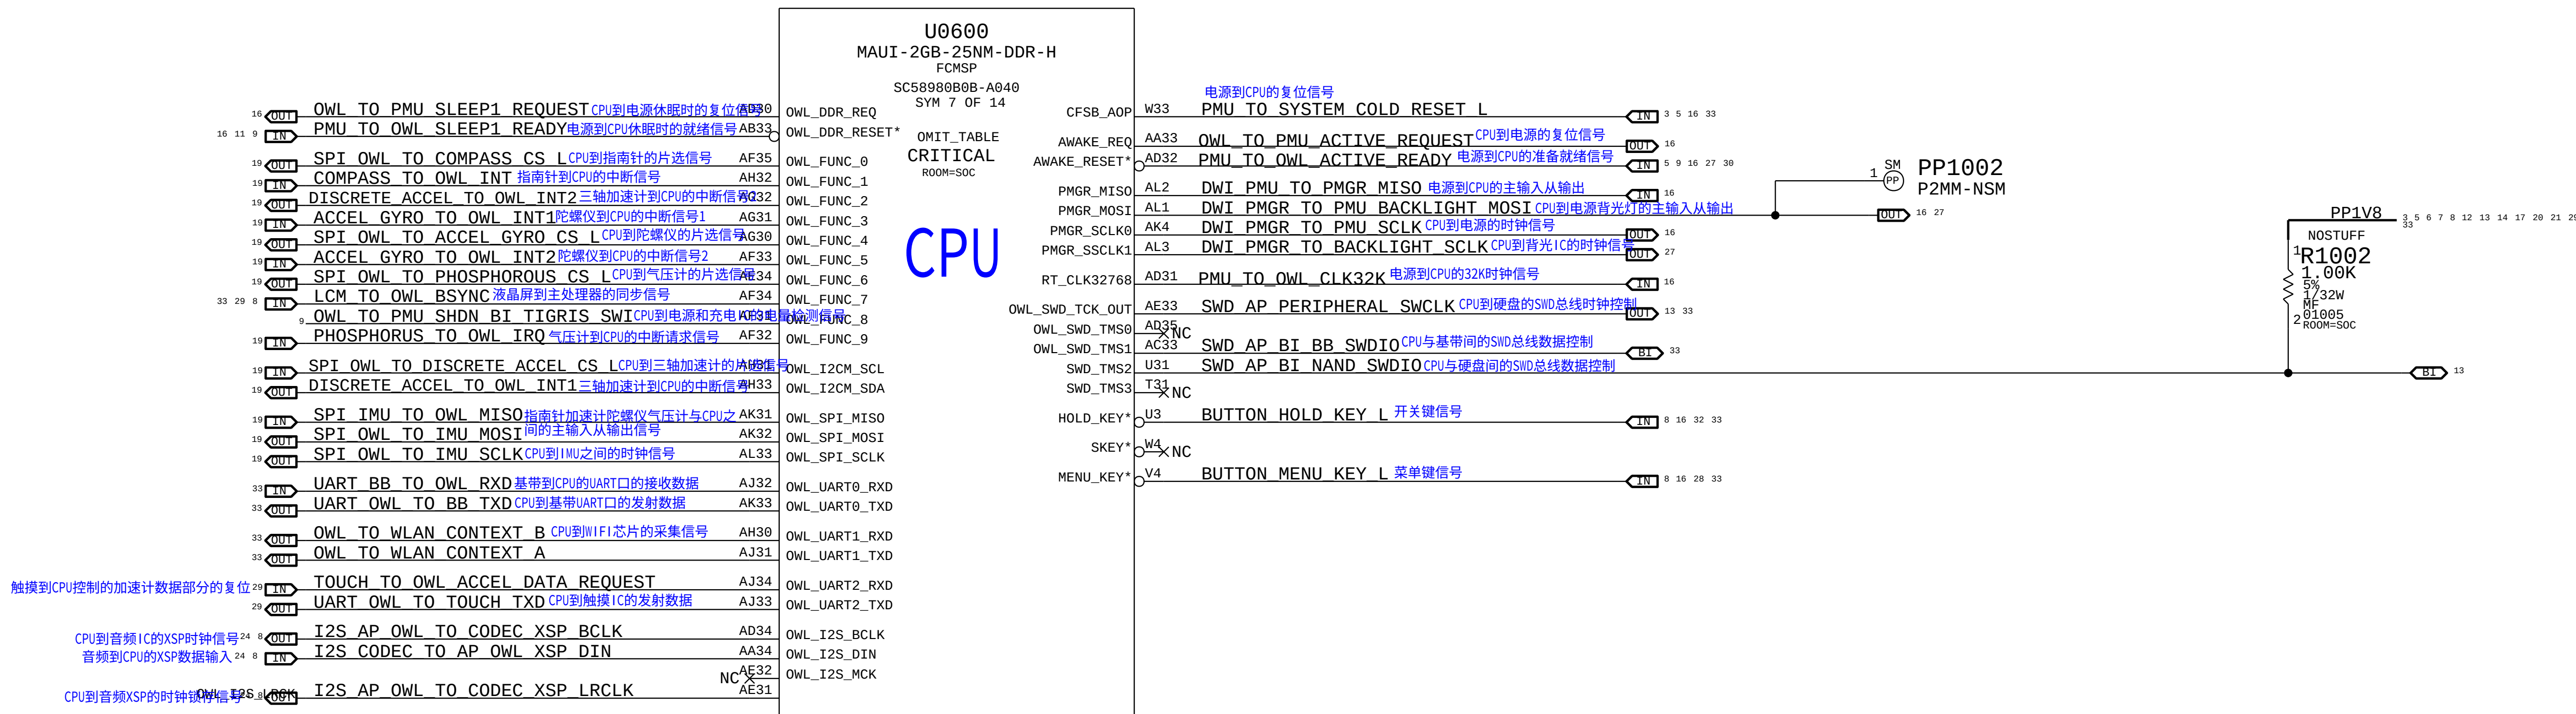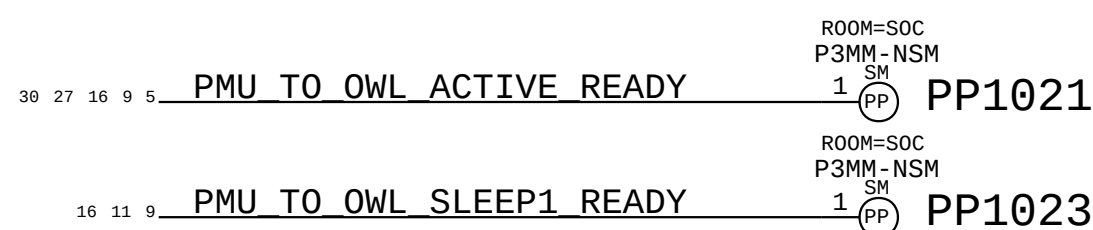

OWL SYSTEM SHUTDOWN OPTION

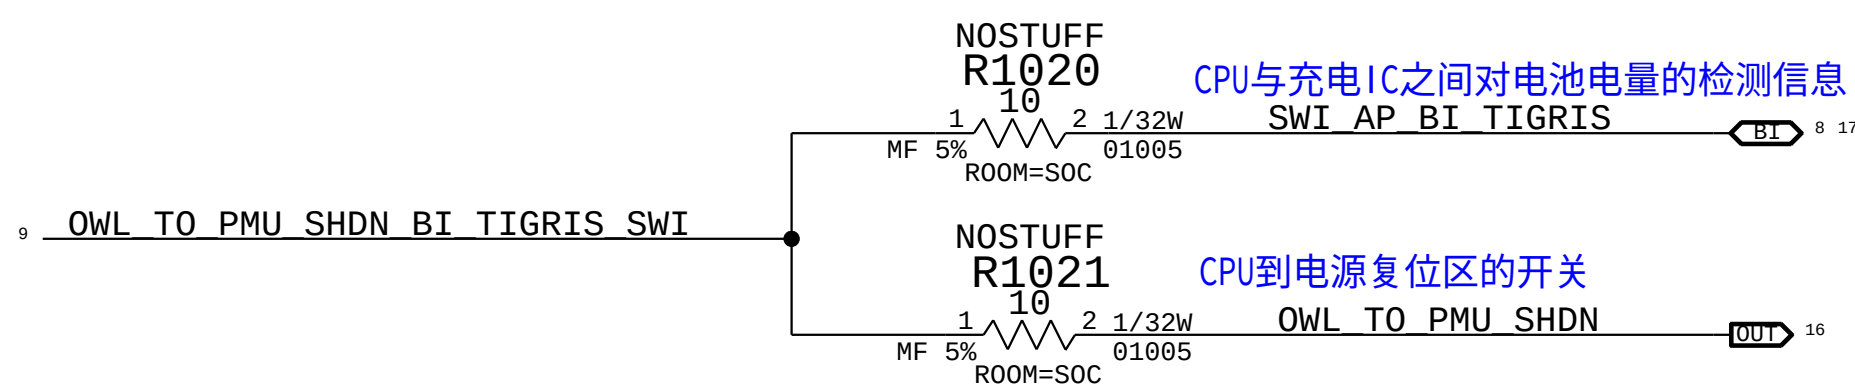


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188


MAUI - CPU, GPU & SOC RAILS

迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188

0.8V电压

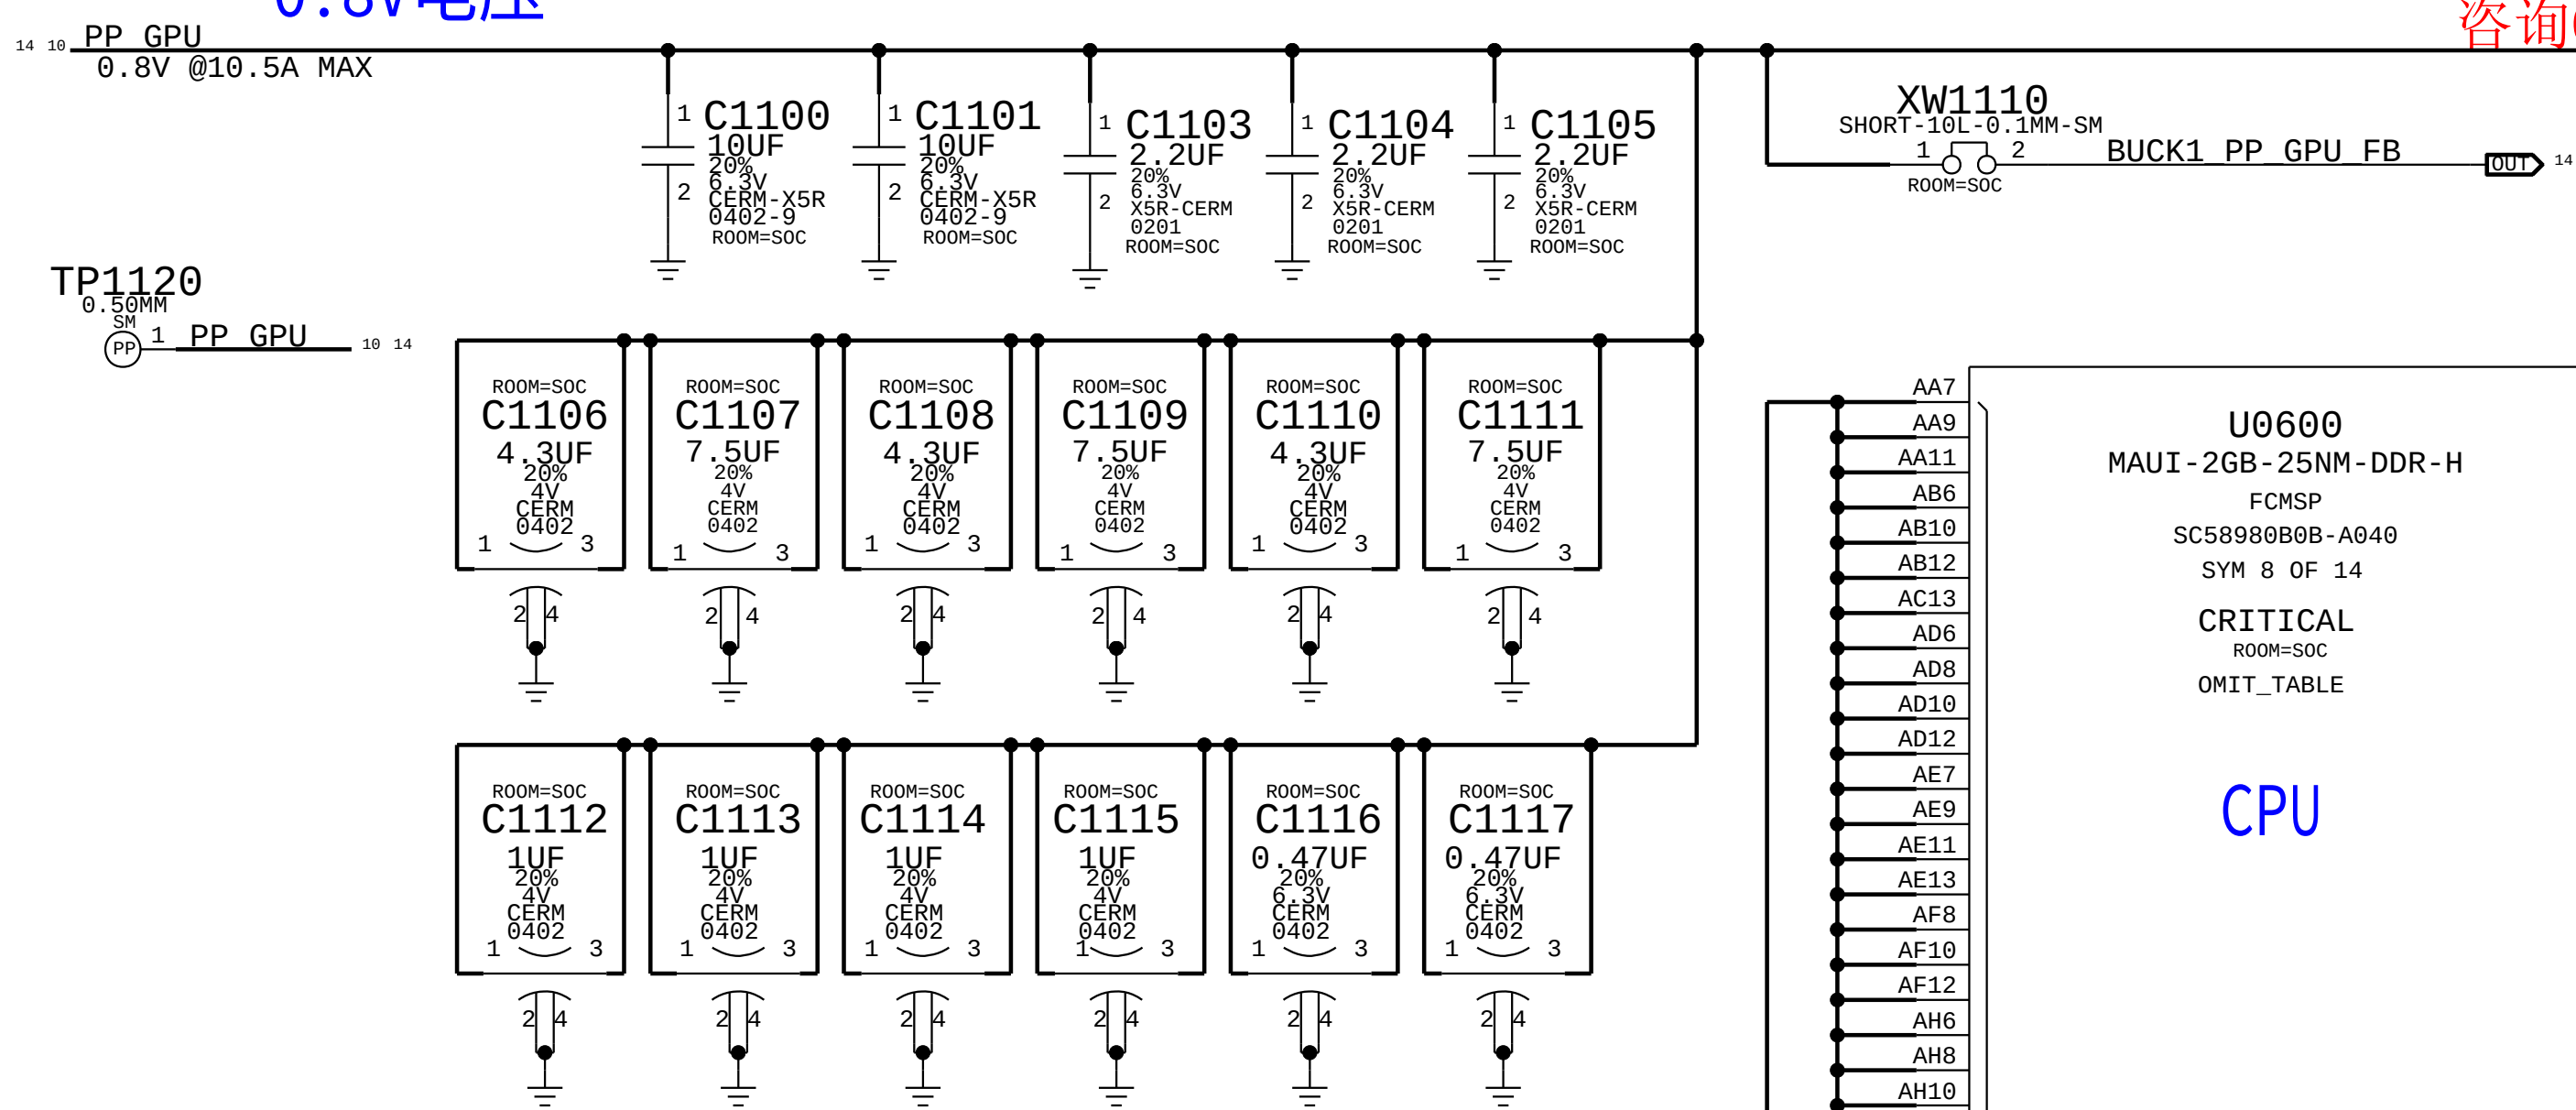

0.6-0.9-1.0V电压

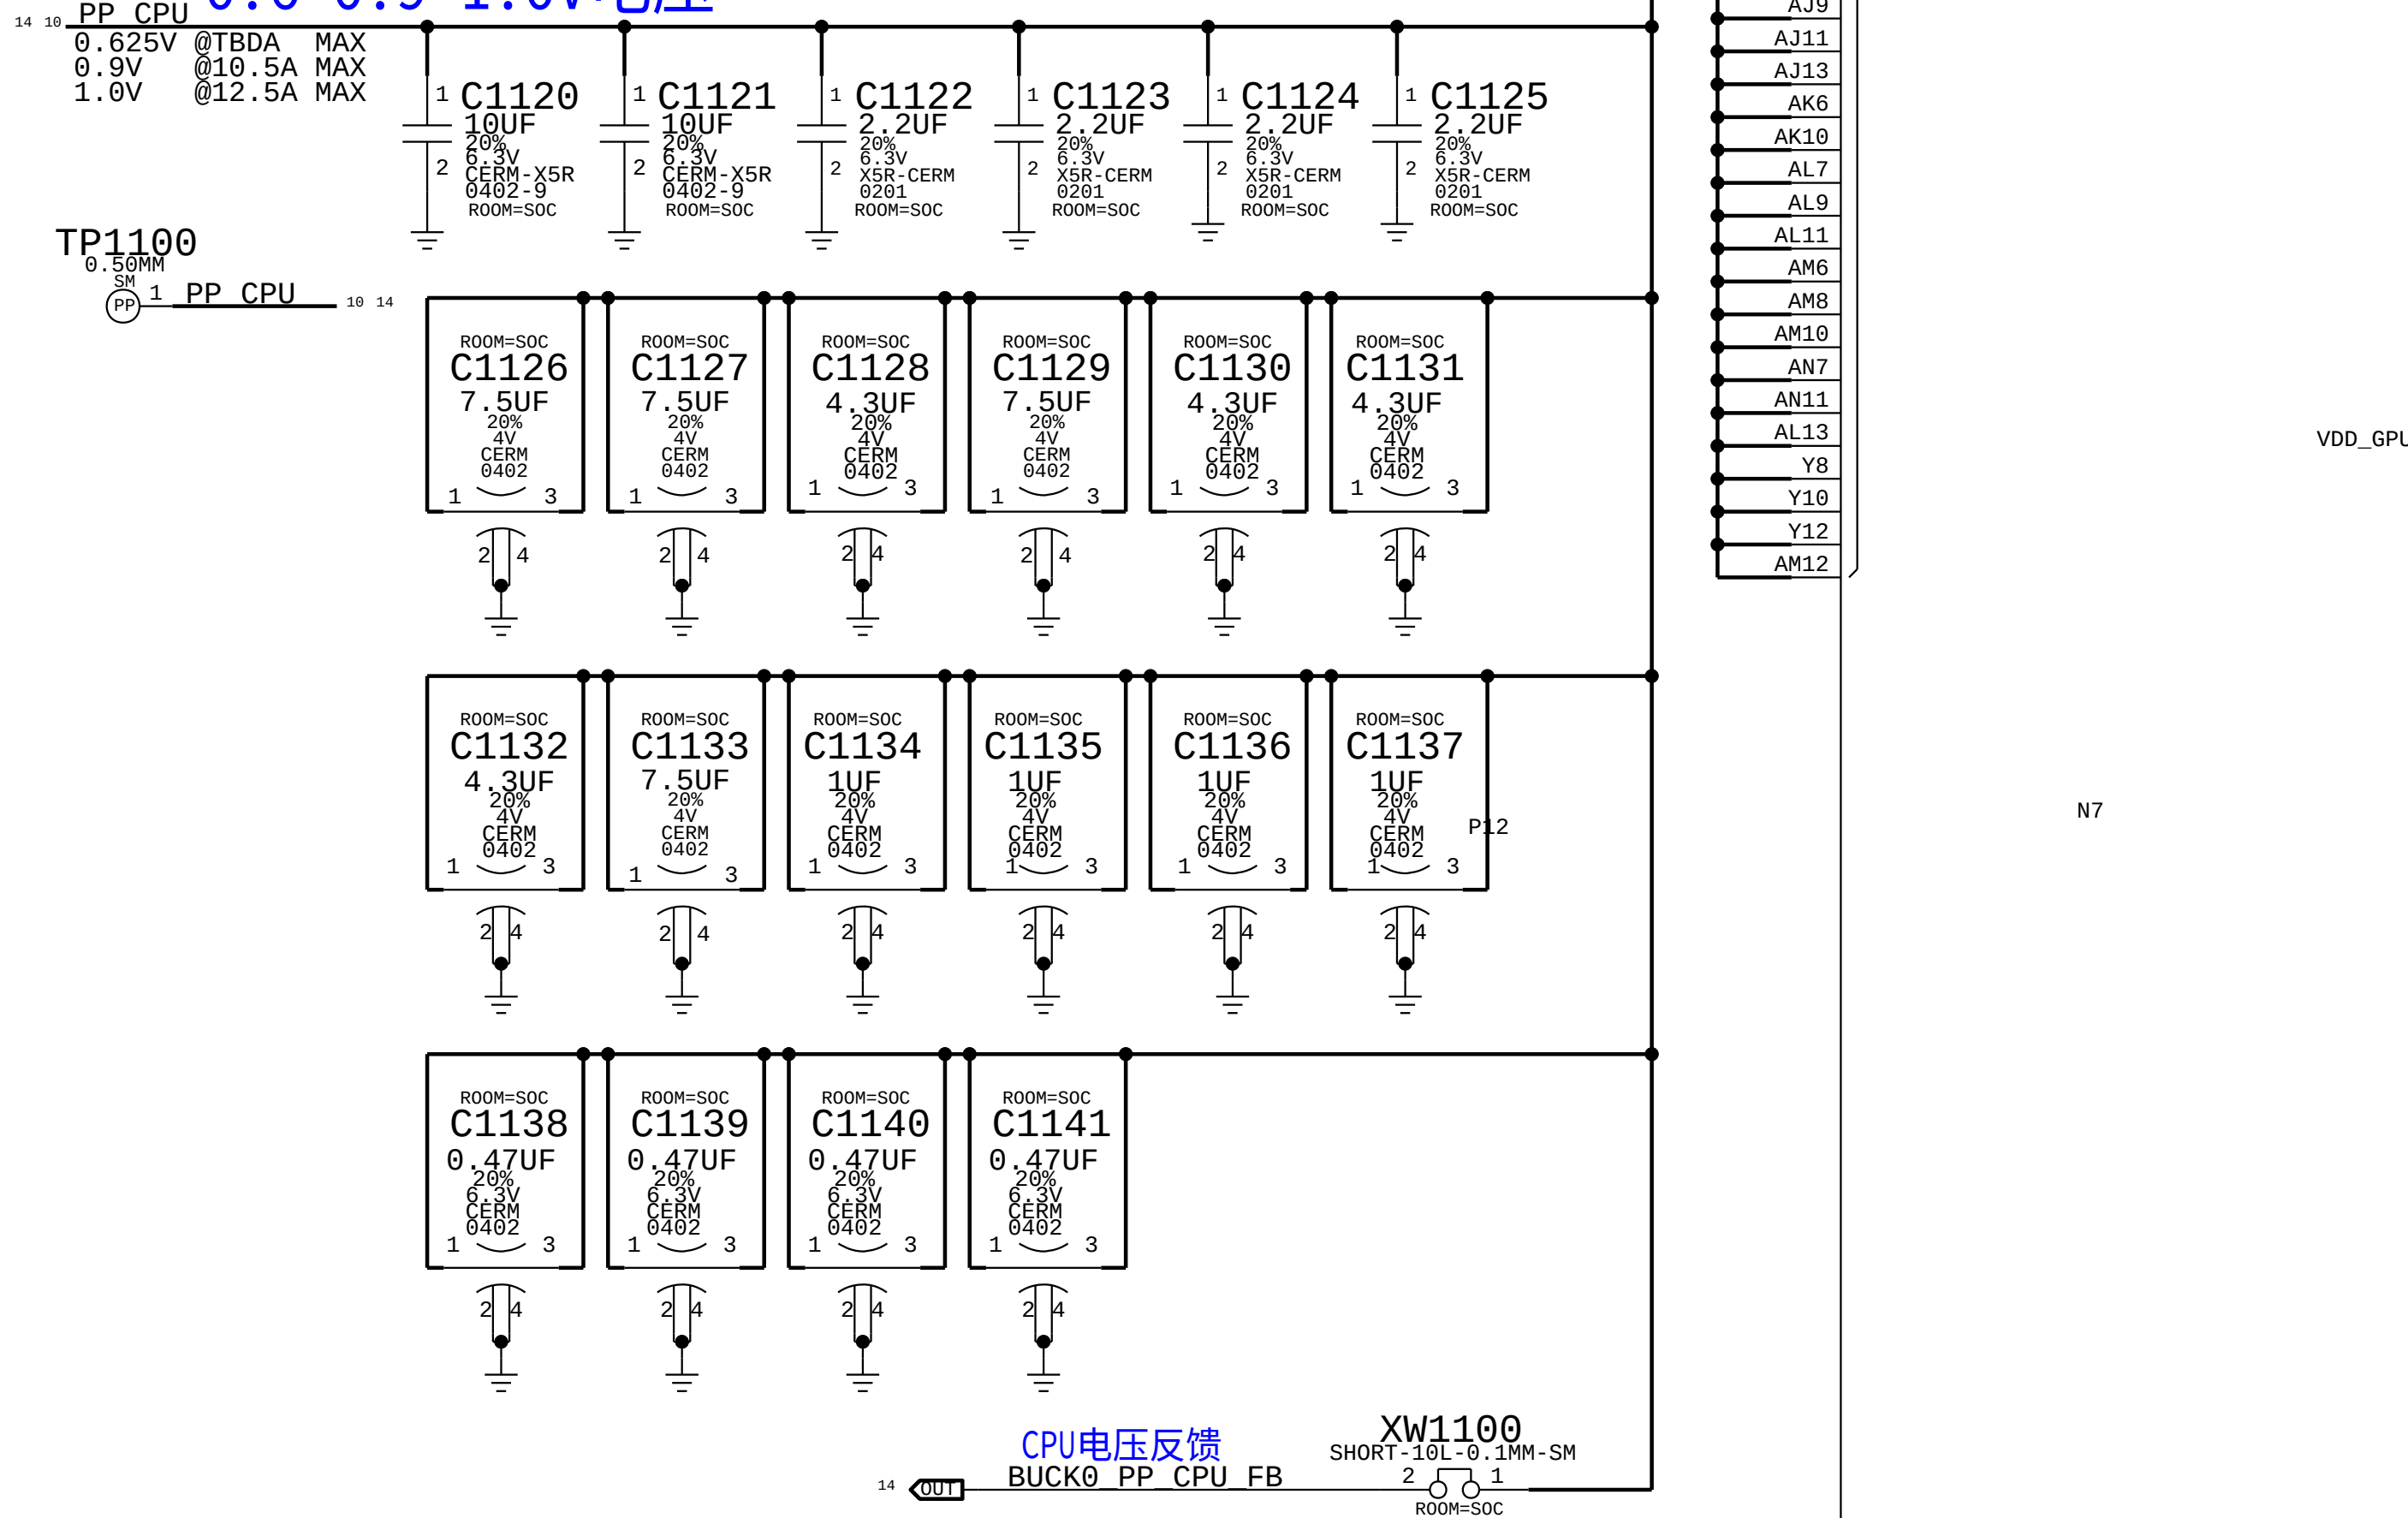


CPU电压检测

GPU电压检测

NOTE: AP_GPU_SENSE_P PROBE LOCATION @ R2205.2

CPU

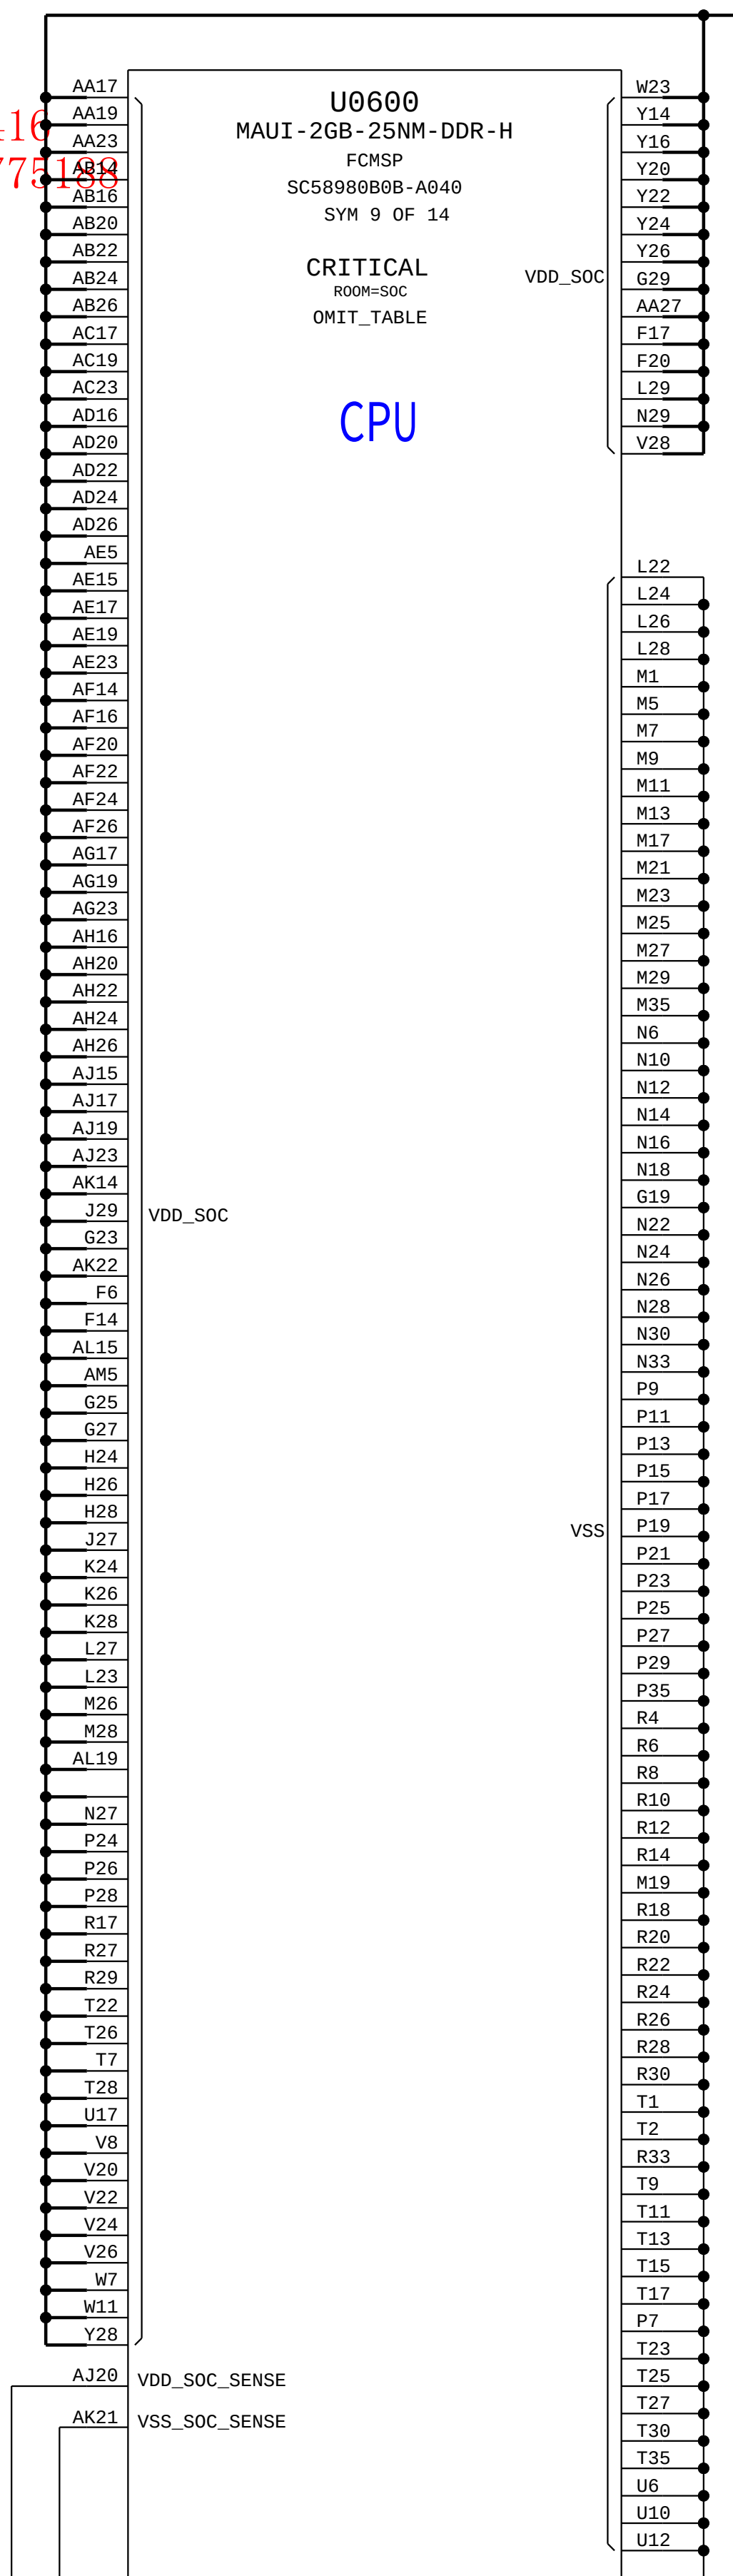

MAUI - POWER SUPPLIES

迅维手机维修培训
联系电话：0755-61506416
咨询QQ: 1727176051 981775188

D

D

C


C

B

B

A

A

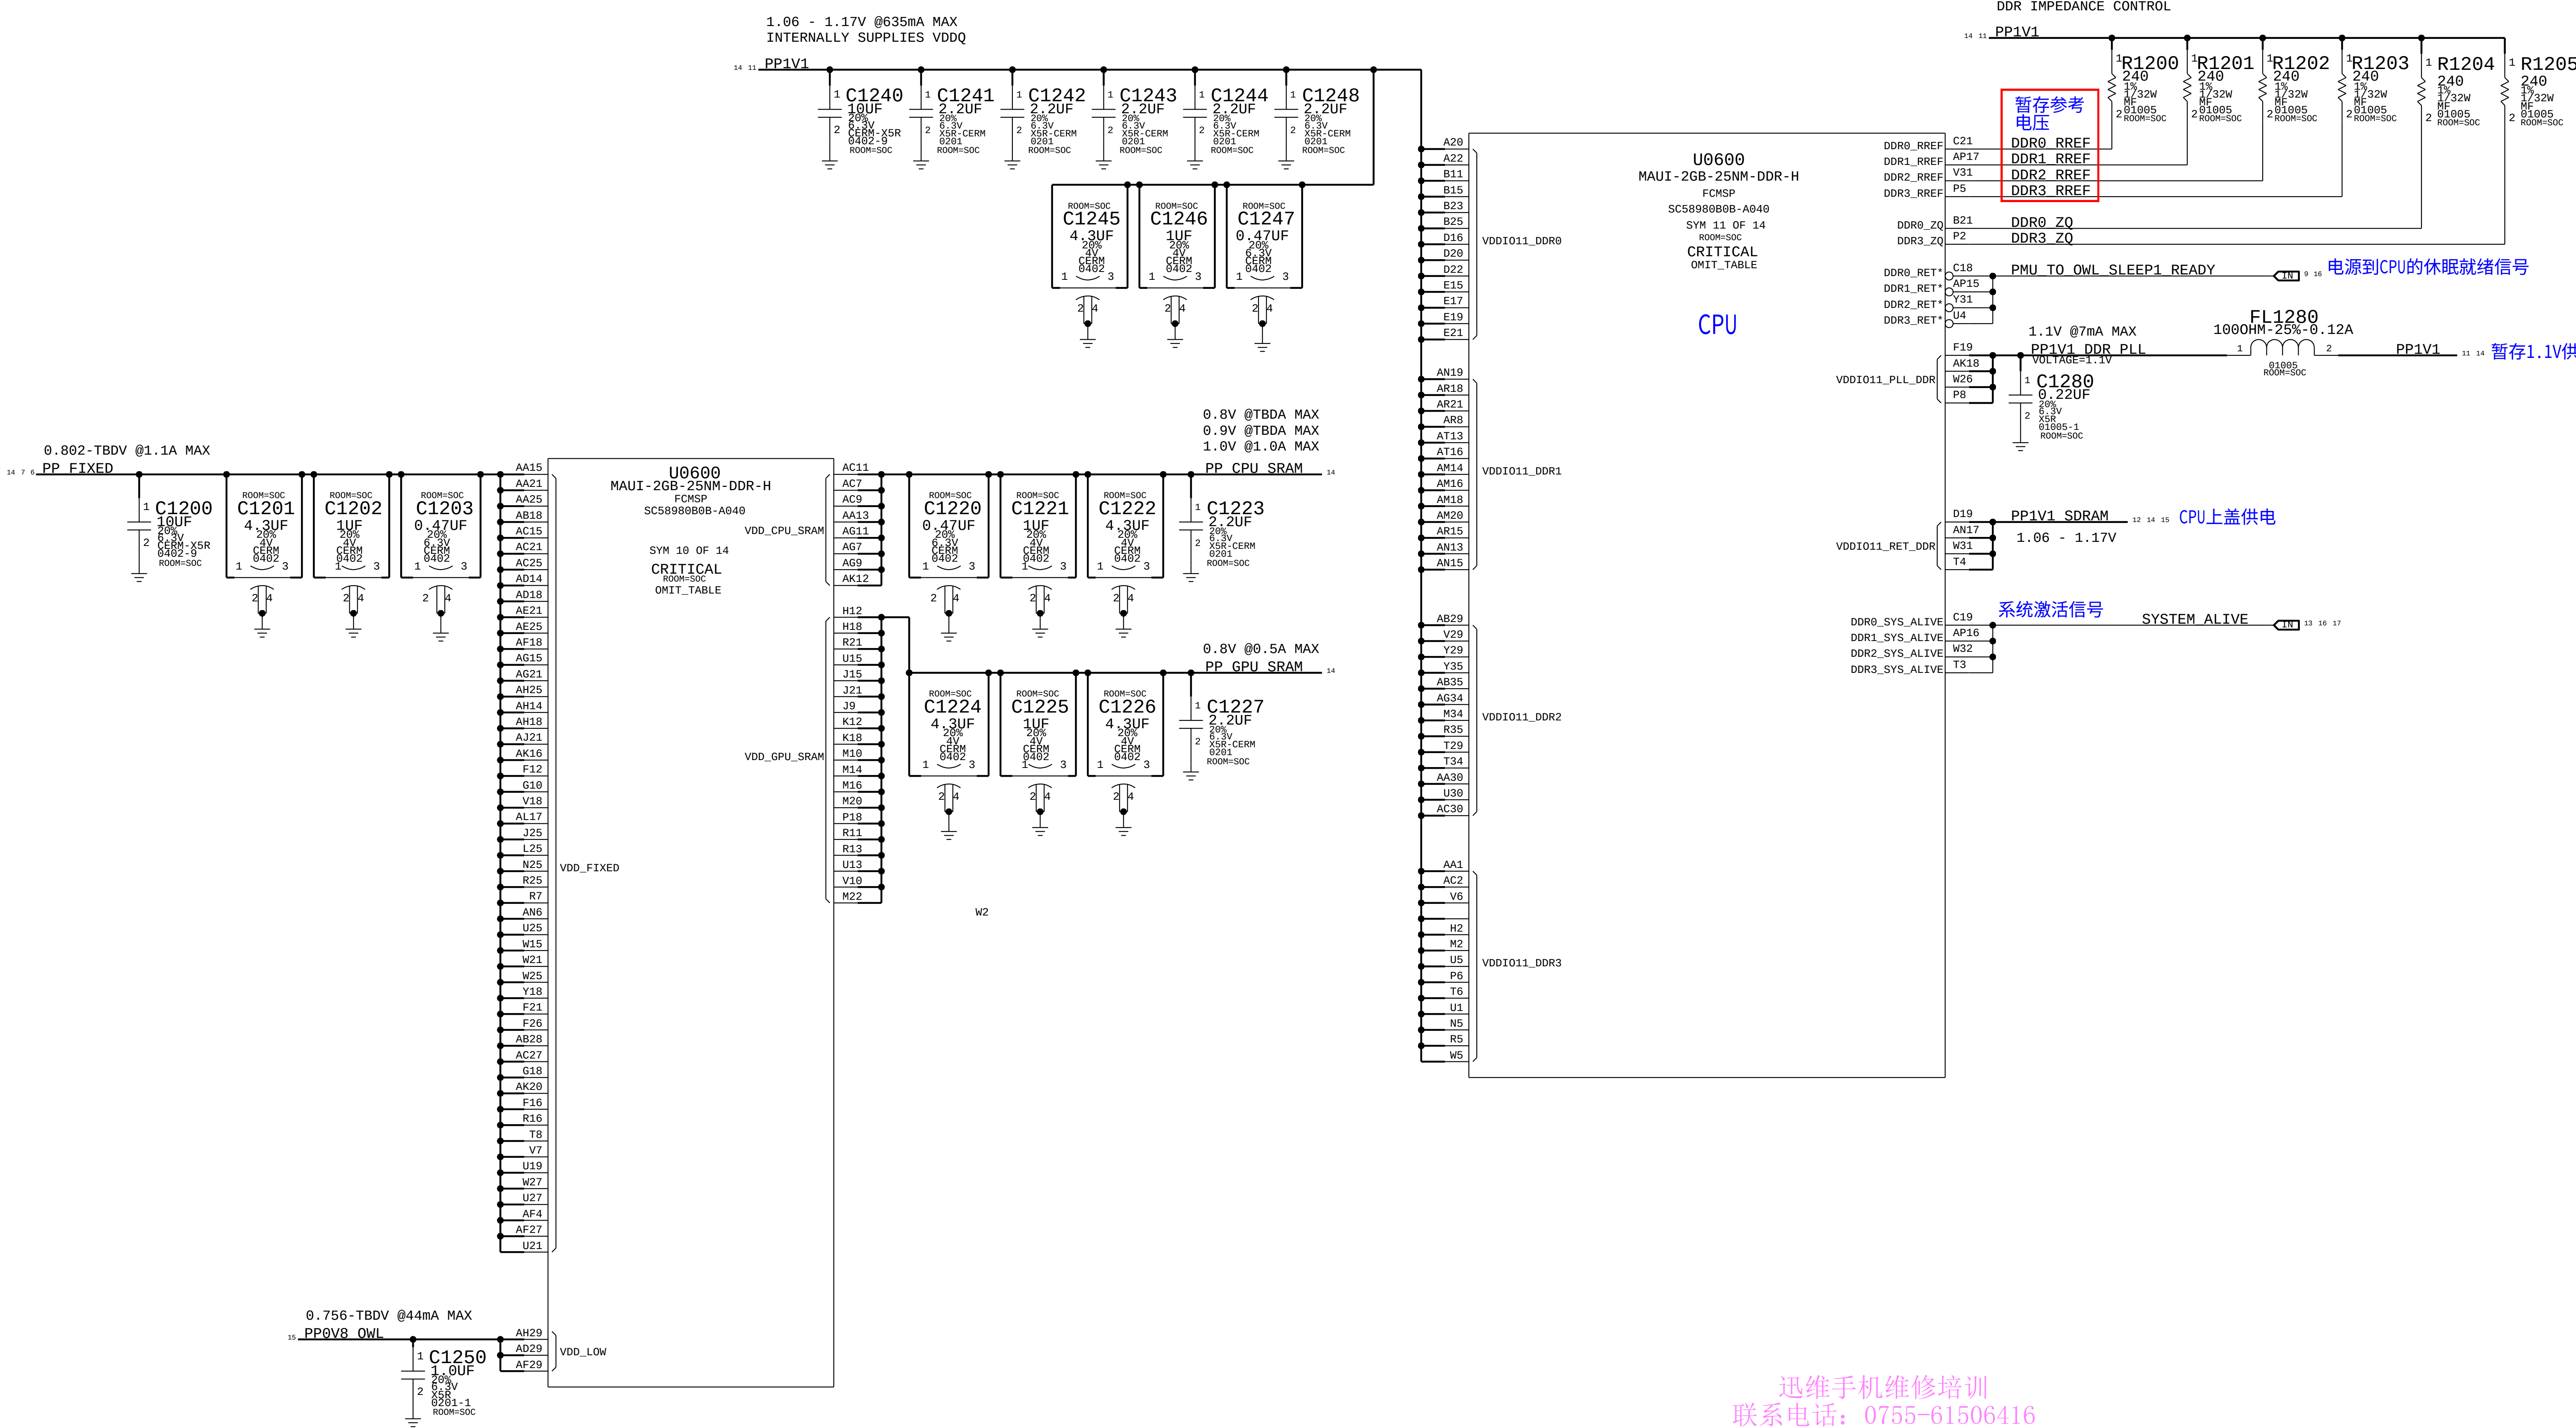

迅维手机维修培训
联系电话：0755-61506416
咨询QQ: 1727176051 981775188

MAUI - POWER SUPPLIES

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

1.8V上盖供电

1.70-1.95V @100mA(TBD) MAX

PP1V8 SDRAM

1.06-1.17V @1.3A(TBD) MAX

PP1V1 SDRAM

1.62-1.98V @41mA MAX

PP1V8

陀螺仪加速计指南针气压计
区域供电1.62-1.98V

1.8V待机

PP1V8 ALWAYS 1.62-1.98V @1mA MAX

PP1V8


VDD18_FMON : 1.62-1.98V @1mA MAX
VDD18_UVD : 1.62-1.98V @5mA MAX
VDD18_AMUX : 1.62-1.98V @1mA MAX
VDD18_TSADC : 1.645-1.89V @2mA MAX

CPU

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

S3E NAND

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

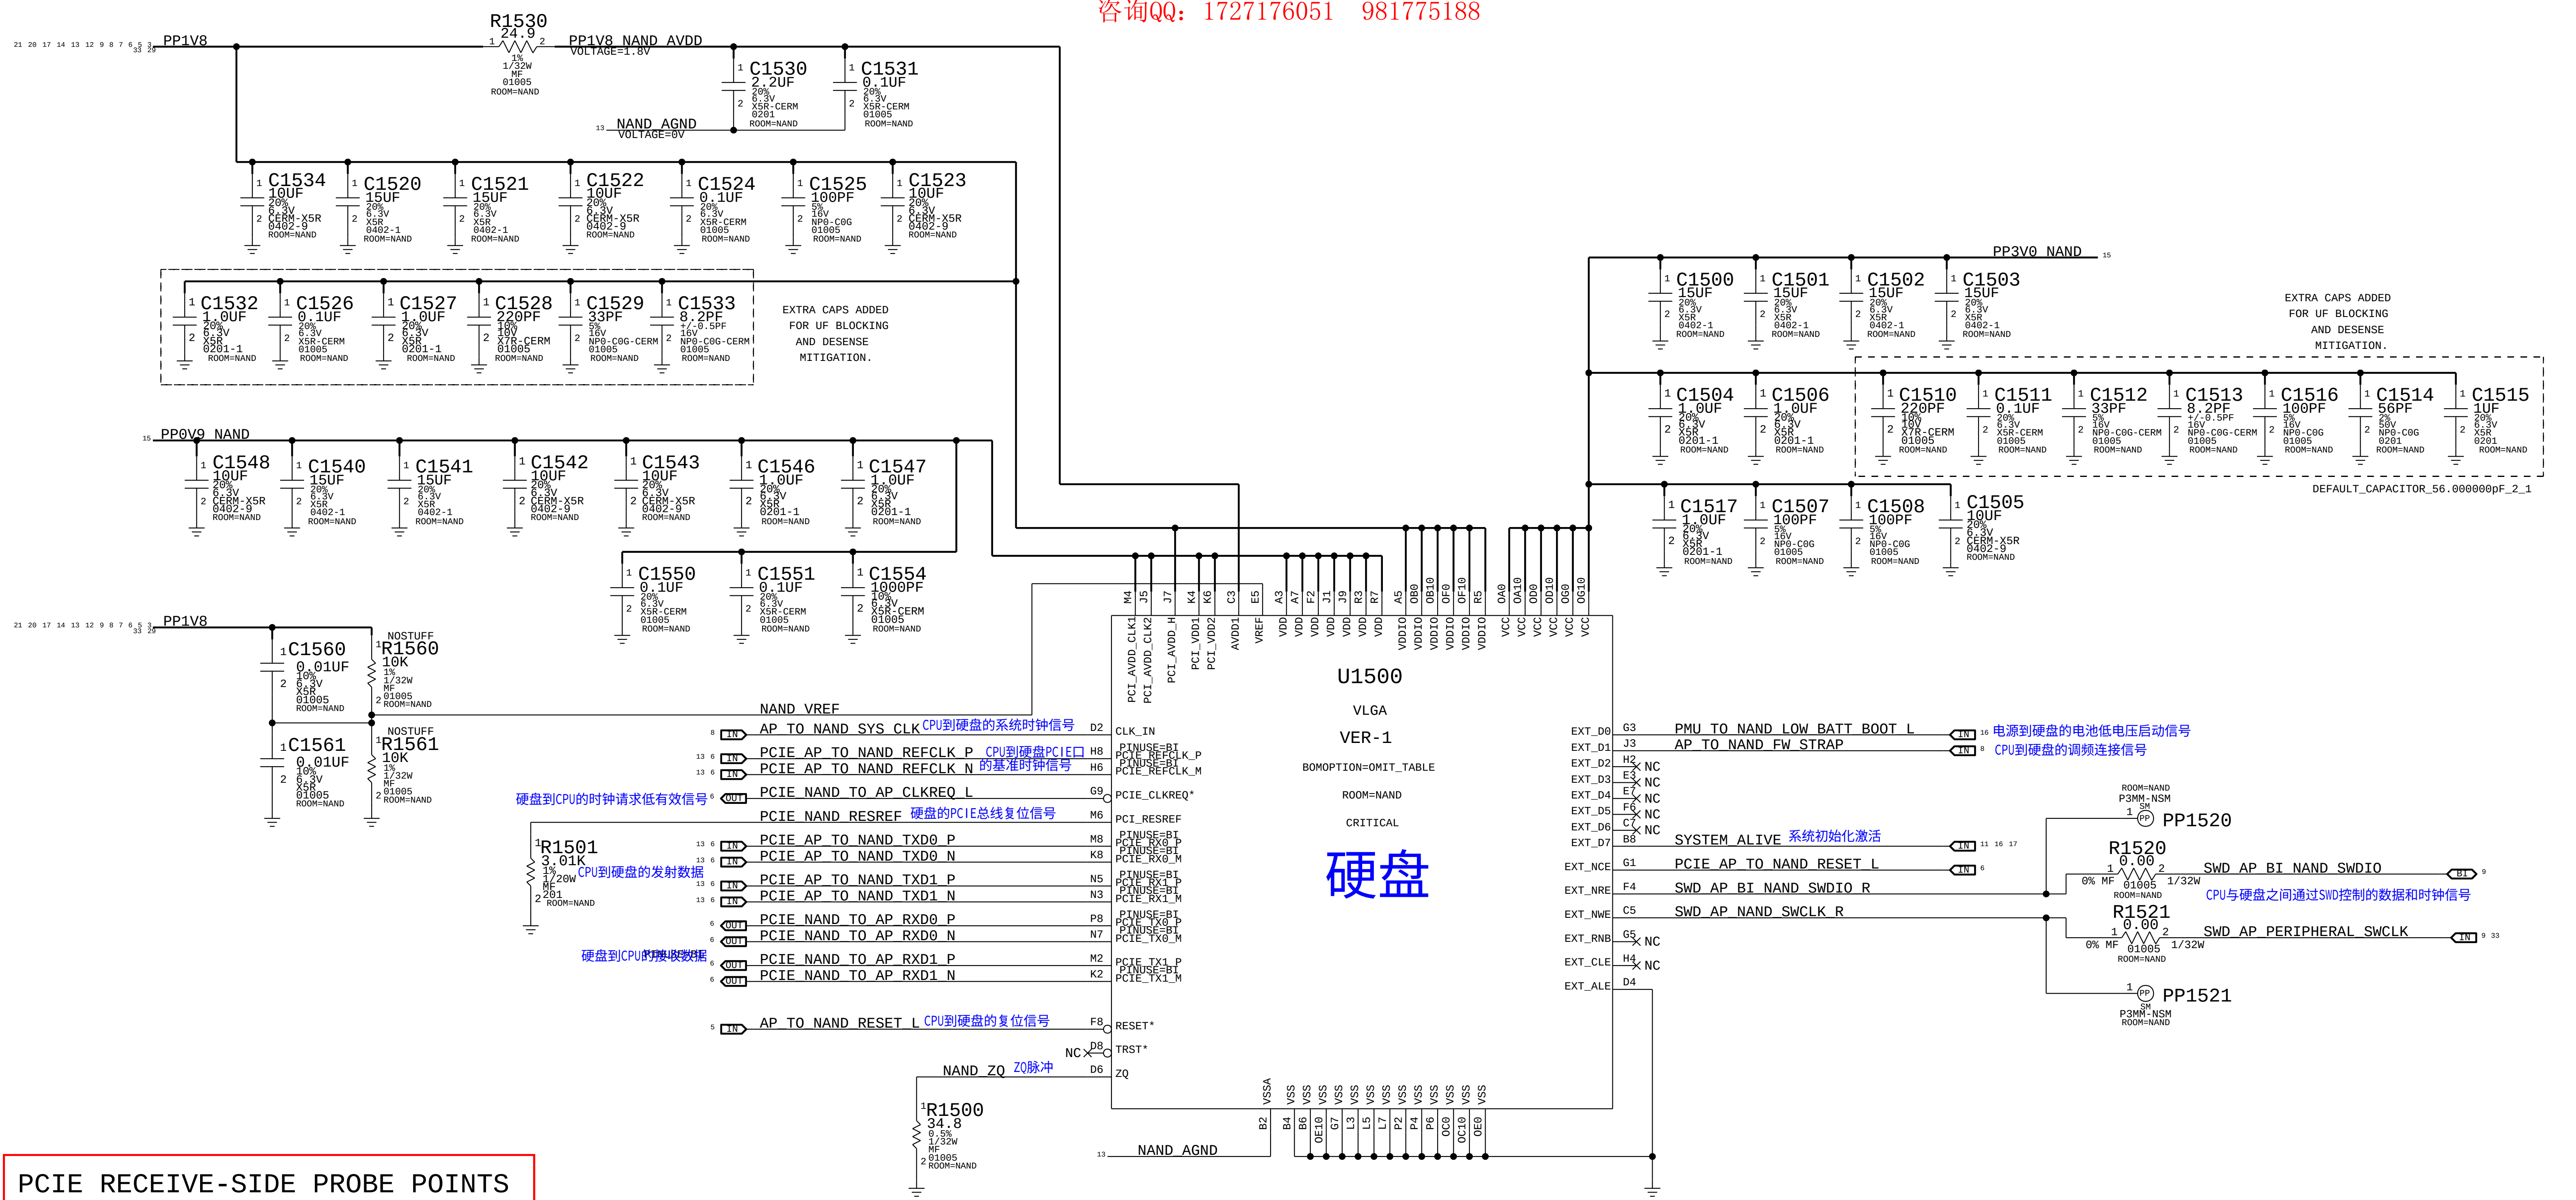


PCIE RECEIVE-SIDE PROBE POINTS		
PCIE总线测试点		
13 6	PCIE AP TO NAND REFCLK P	ROOM=NAND P3MM-NSM 1 PP1500
13 6	PCIE AP TO NAND REFCLK N	ROOM=NAND P3MM-NSM 1 PP1501
13 6	PCIE AP TO NAND TXD0 P	ROOM=NAND P3MM-NSM 1 PP1502
13 6	PCIE AP TO NAND TXD0 N	ROOM=NAND P3MM-NSM 1 PP1503
13 6	PCIE AP TO NAND TXD1 P	ROOM=NAND P3MM-NSM 1 PP1504
13 6	PCIE AP TO NAND TXD1 N	ROOM=NAND P3MM-NSM 1 PP1505


硬盘

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

ANTIGUA PMU - Buck Supplies

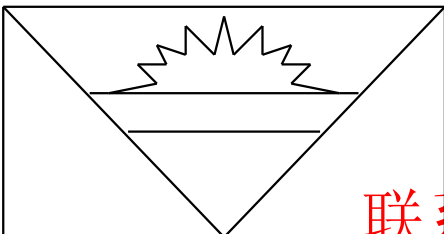


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

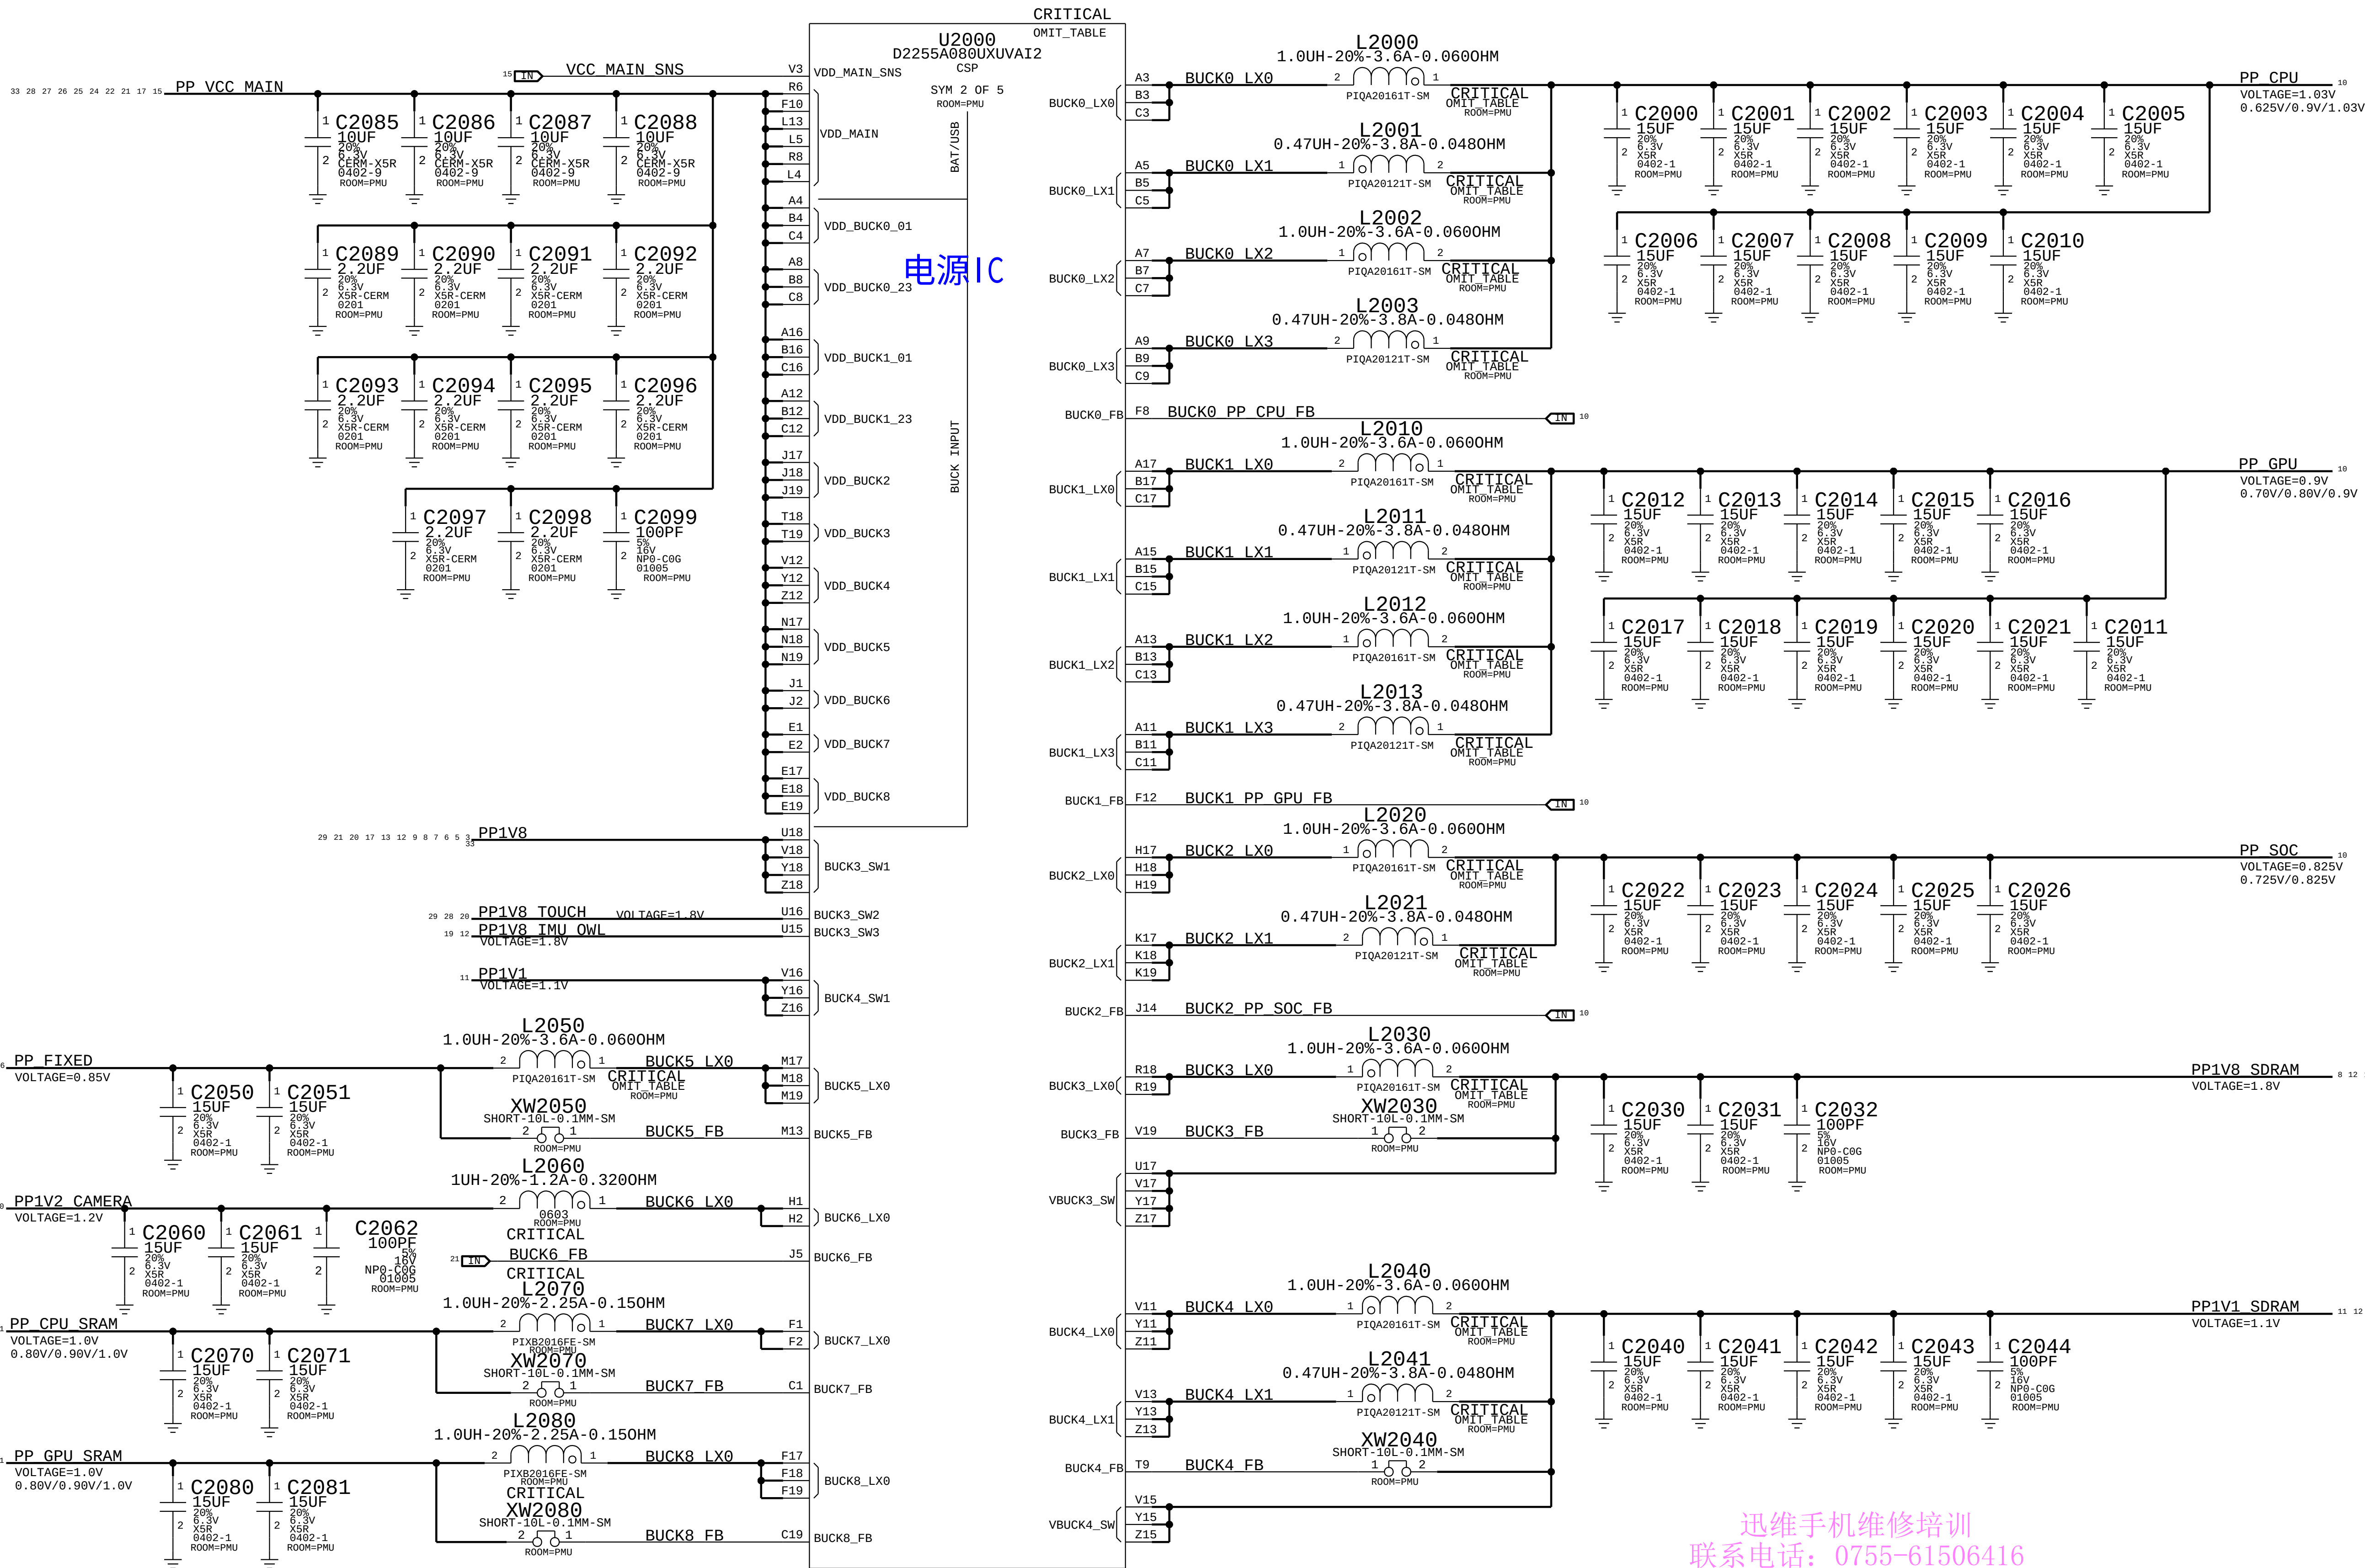

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188


ANTIGUA PMU - LD0s

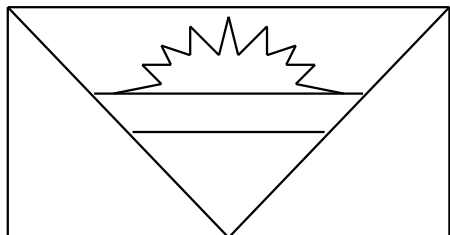

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188


ANTIGUA LDO SPECS

LDO#	ADJ. RANGE	ACCURACY	MAX. CURRENT
LD01 (A)	2.5-3.3V	+/-1.4%	50mA
LD02 (B)	1.2-2.0V	+/-2.5%	50mA
LD03 (A)	2.5-3.3V	+/-1.4%	50mA
LD04 (D)	0.7-1.2V	+/-2.5%	100mA
LD05 (F)	2.5-3.3V	+/-2.5%	1000mA
LD06 (C1)	1.2-3.6V	+/-2.5%	150mA
LD07 (C)	2.5-3.3V	+/-25mV	250mA
LD08 (C)	2.5-3.3V	+/-25mV	250mA
LD09 (C)	2.5-3.3V	+/-25mV	250mA
LD010 (G)	0.7-1.2V	+/-5.5%	1335mA
LD011 (C)	2.5-3.3V	+/-25mV	250mA
LD012 (E)	1.8V	+/-5%	10mA
LD013 (C)	2.5-3.3V	+/-25mV	250mA
LD014 (H)	0.8-1.5V	+/-2.5%	250mA
LD015 (B)	1.2-2.0V	+/-2.5%	50mA

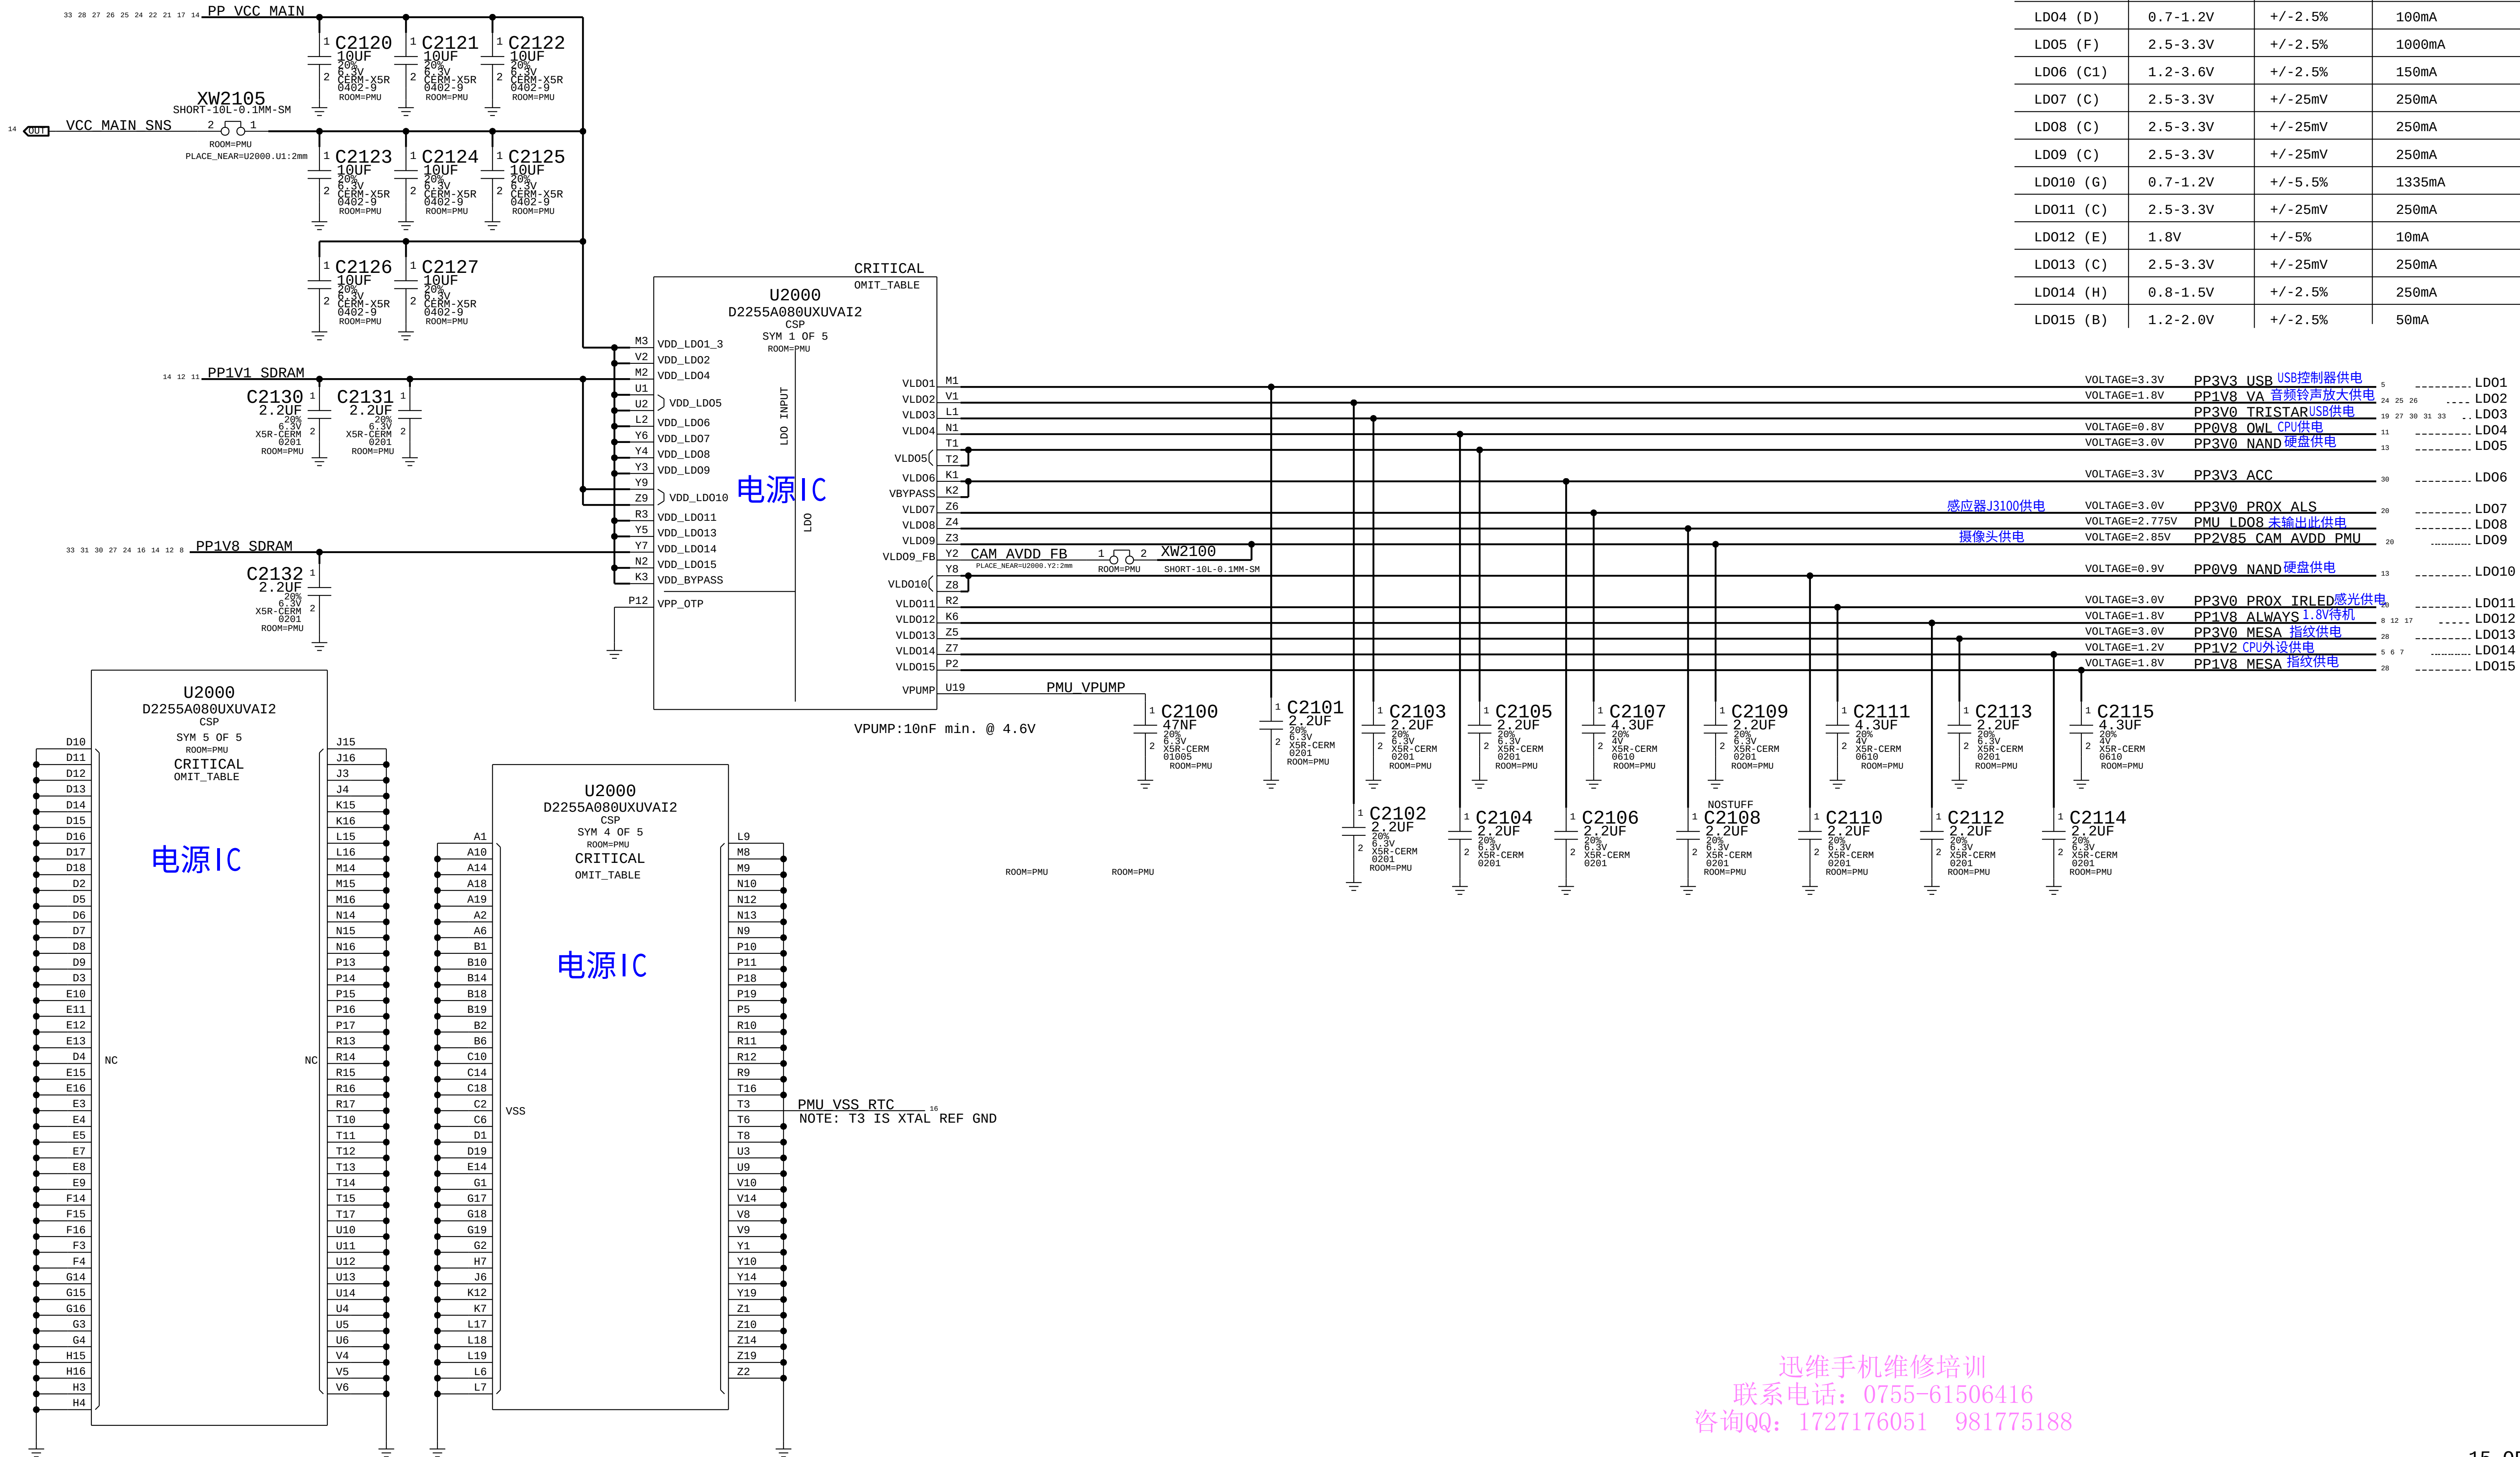


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

ANTIGUA PMU - GPIOs, NTCs

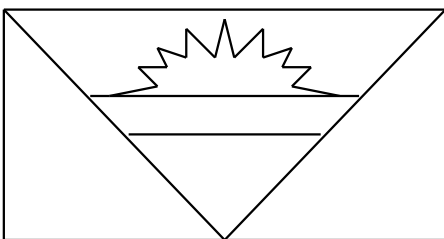

迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188

CONTROL PIN NOTES:
NOTE (1): INPUT PULL-DOWN 100-300k
NOTE (2): INPUT PULL-DOWN 1M
NOTE (3): INPUT PULL-UP OR DOWN 100k-300k
NOTE (4): OUTPUT OPEN-DRAIN, REQUIRES PULL-UP

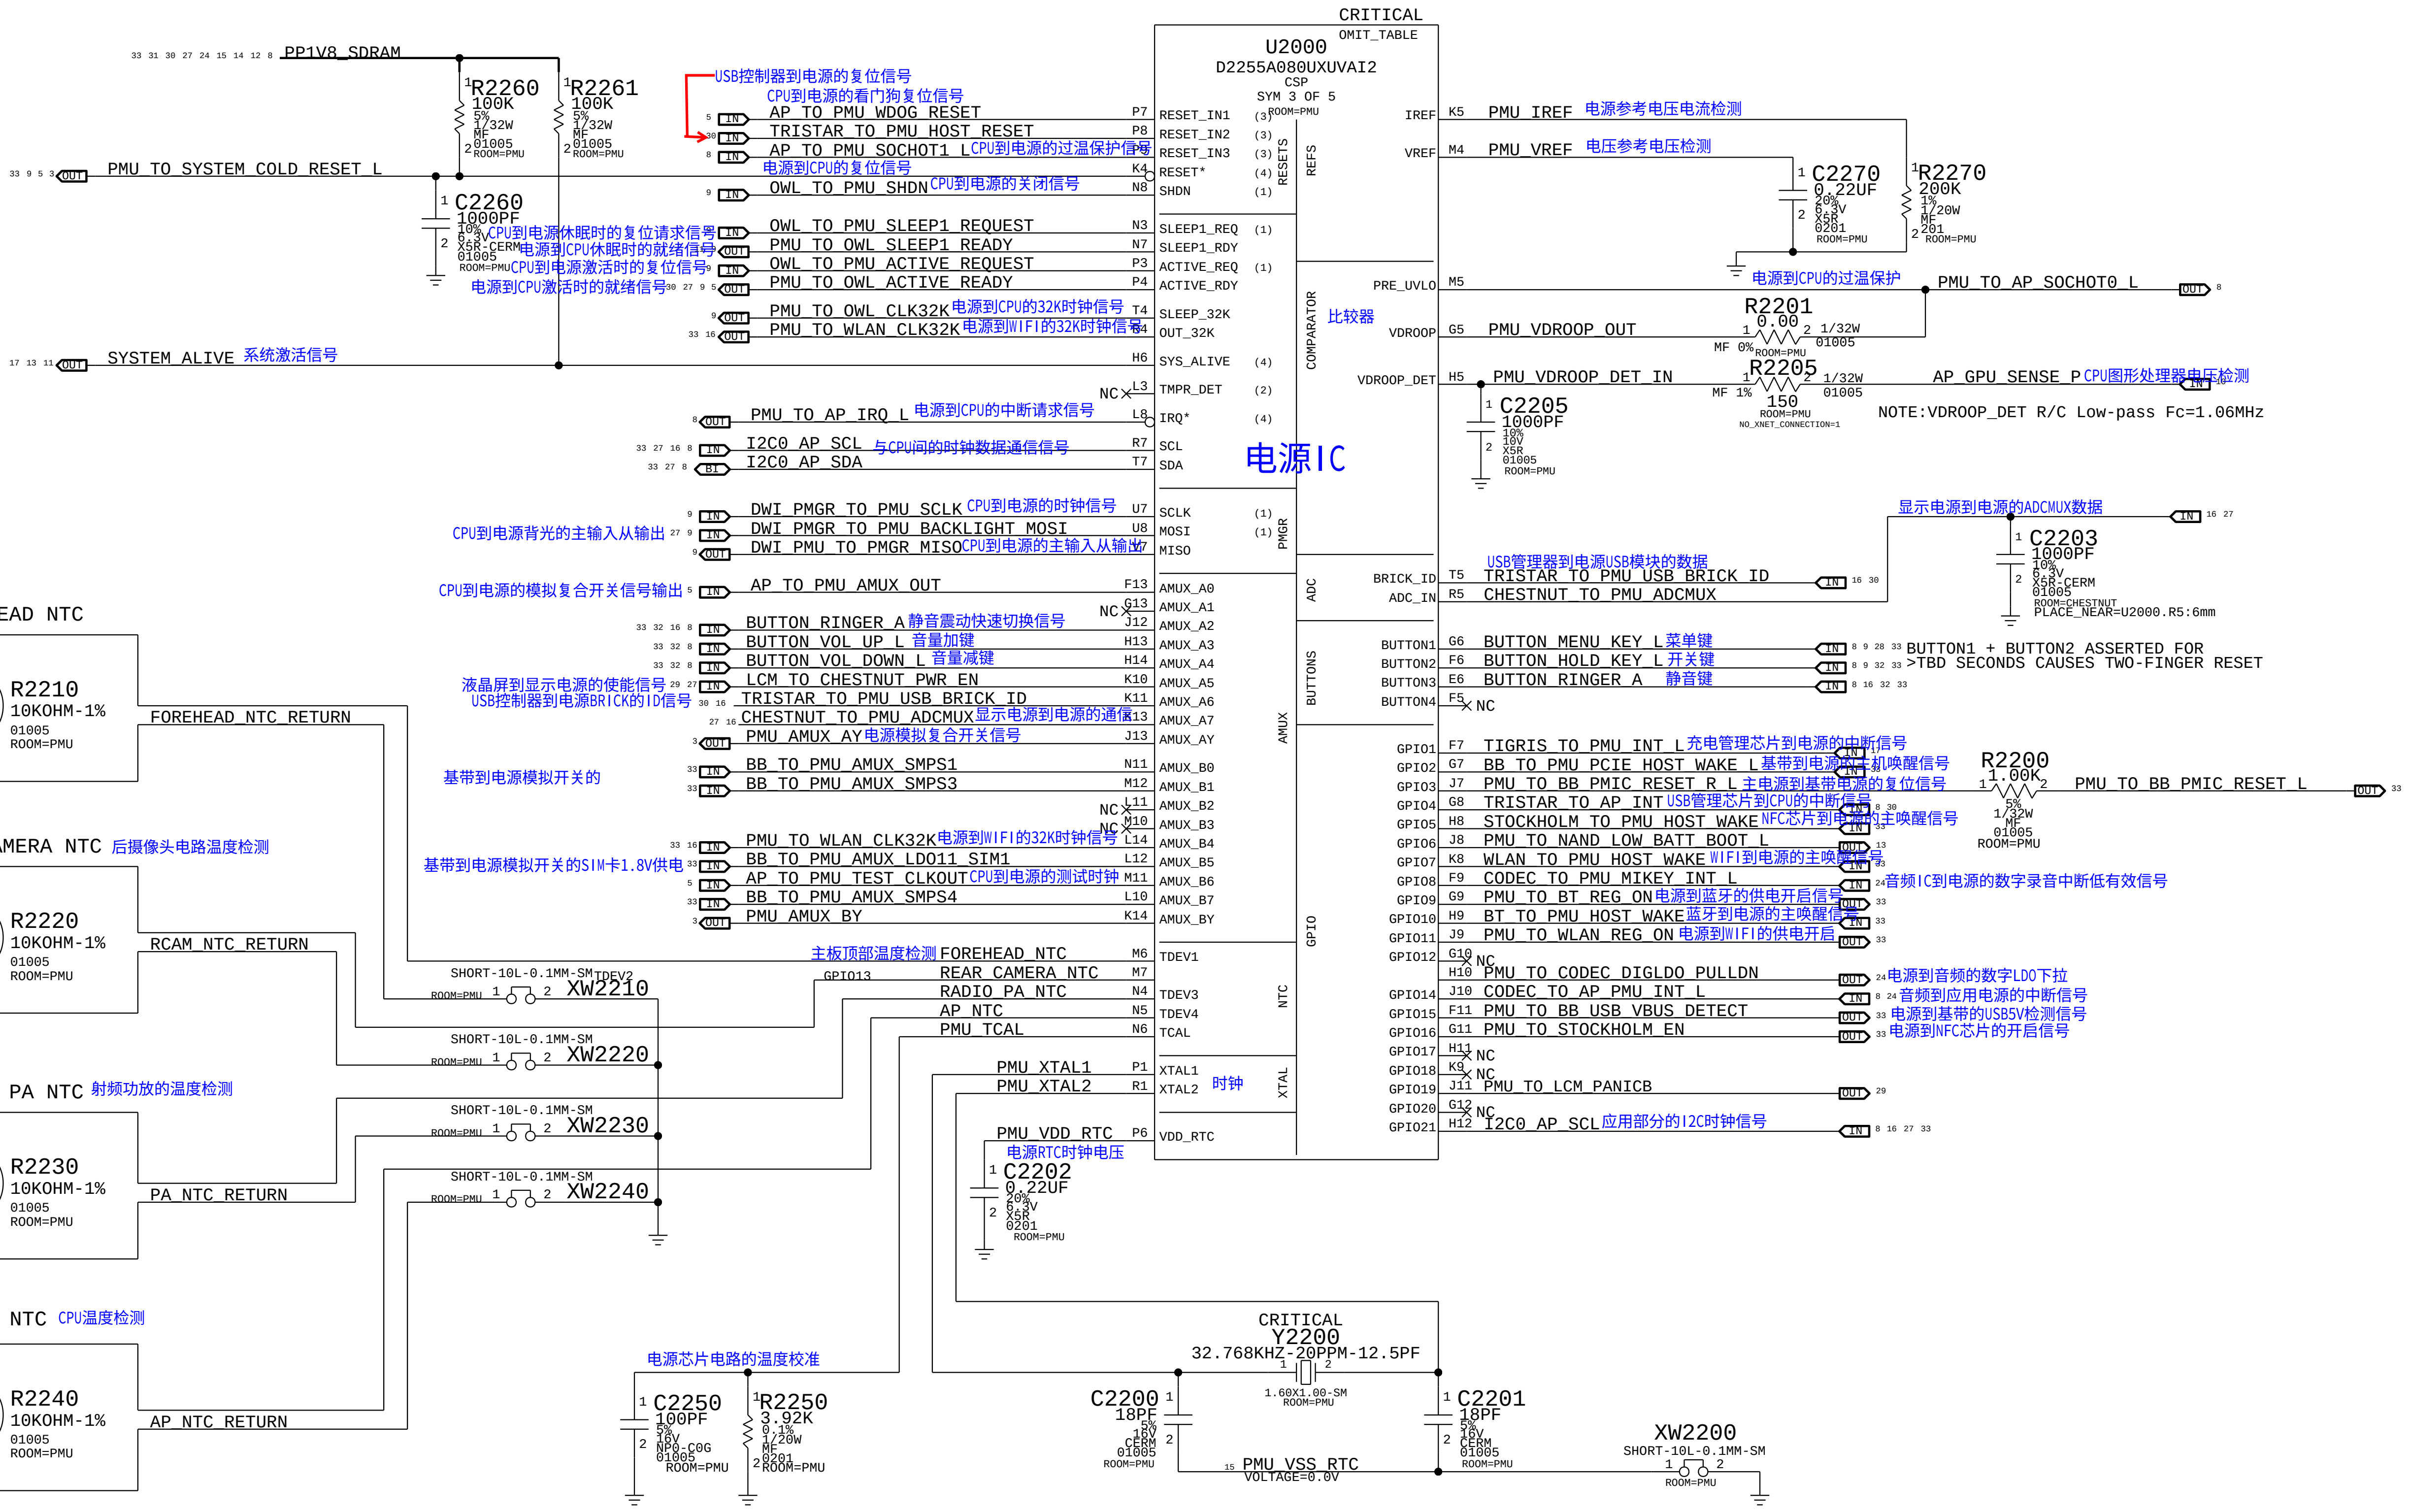

NOTE:100PF CAPS ARE THE SAMPLING CAPS FOR PMU ADC

迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

APN: 343S00033






迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

BATTERY CONNECTOR

THIS ONE ON MLB ---> 516S00104 (RCPT)
516S00105 (PLUG)

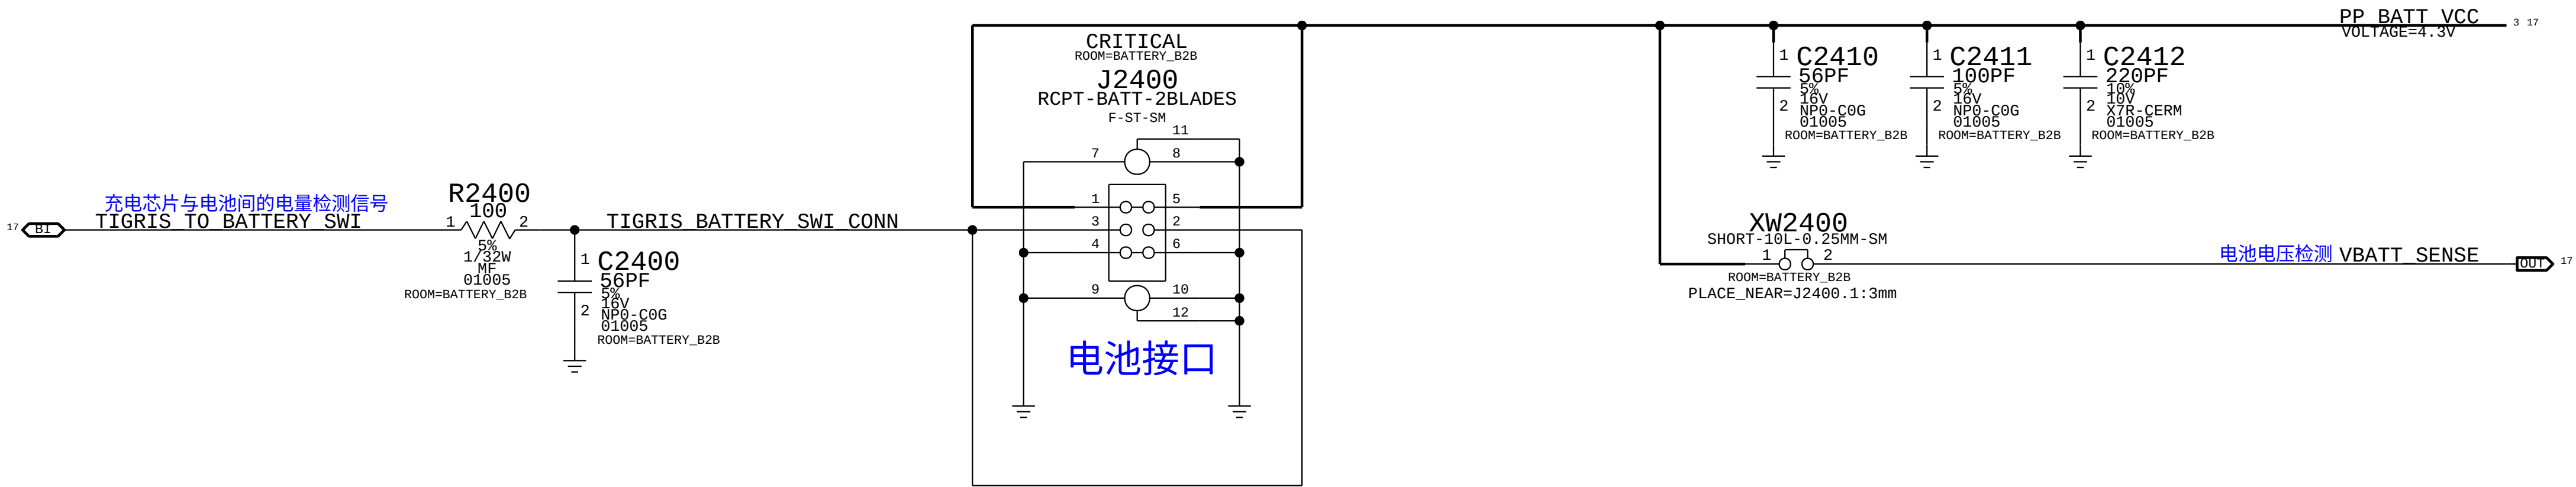


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188


CARBON - ACCEL & GYRO

INVENSENSE (APN: 338S00017, 338S00087)

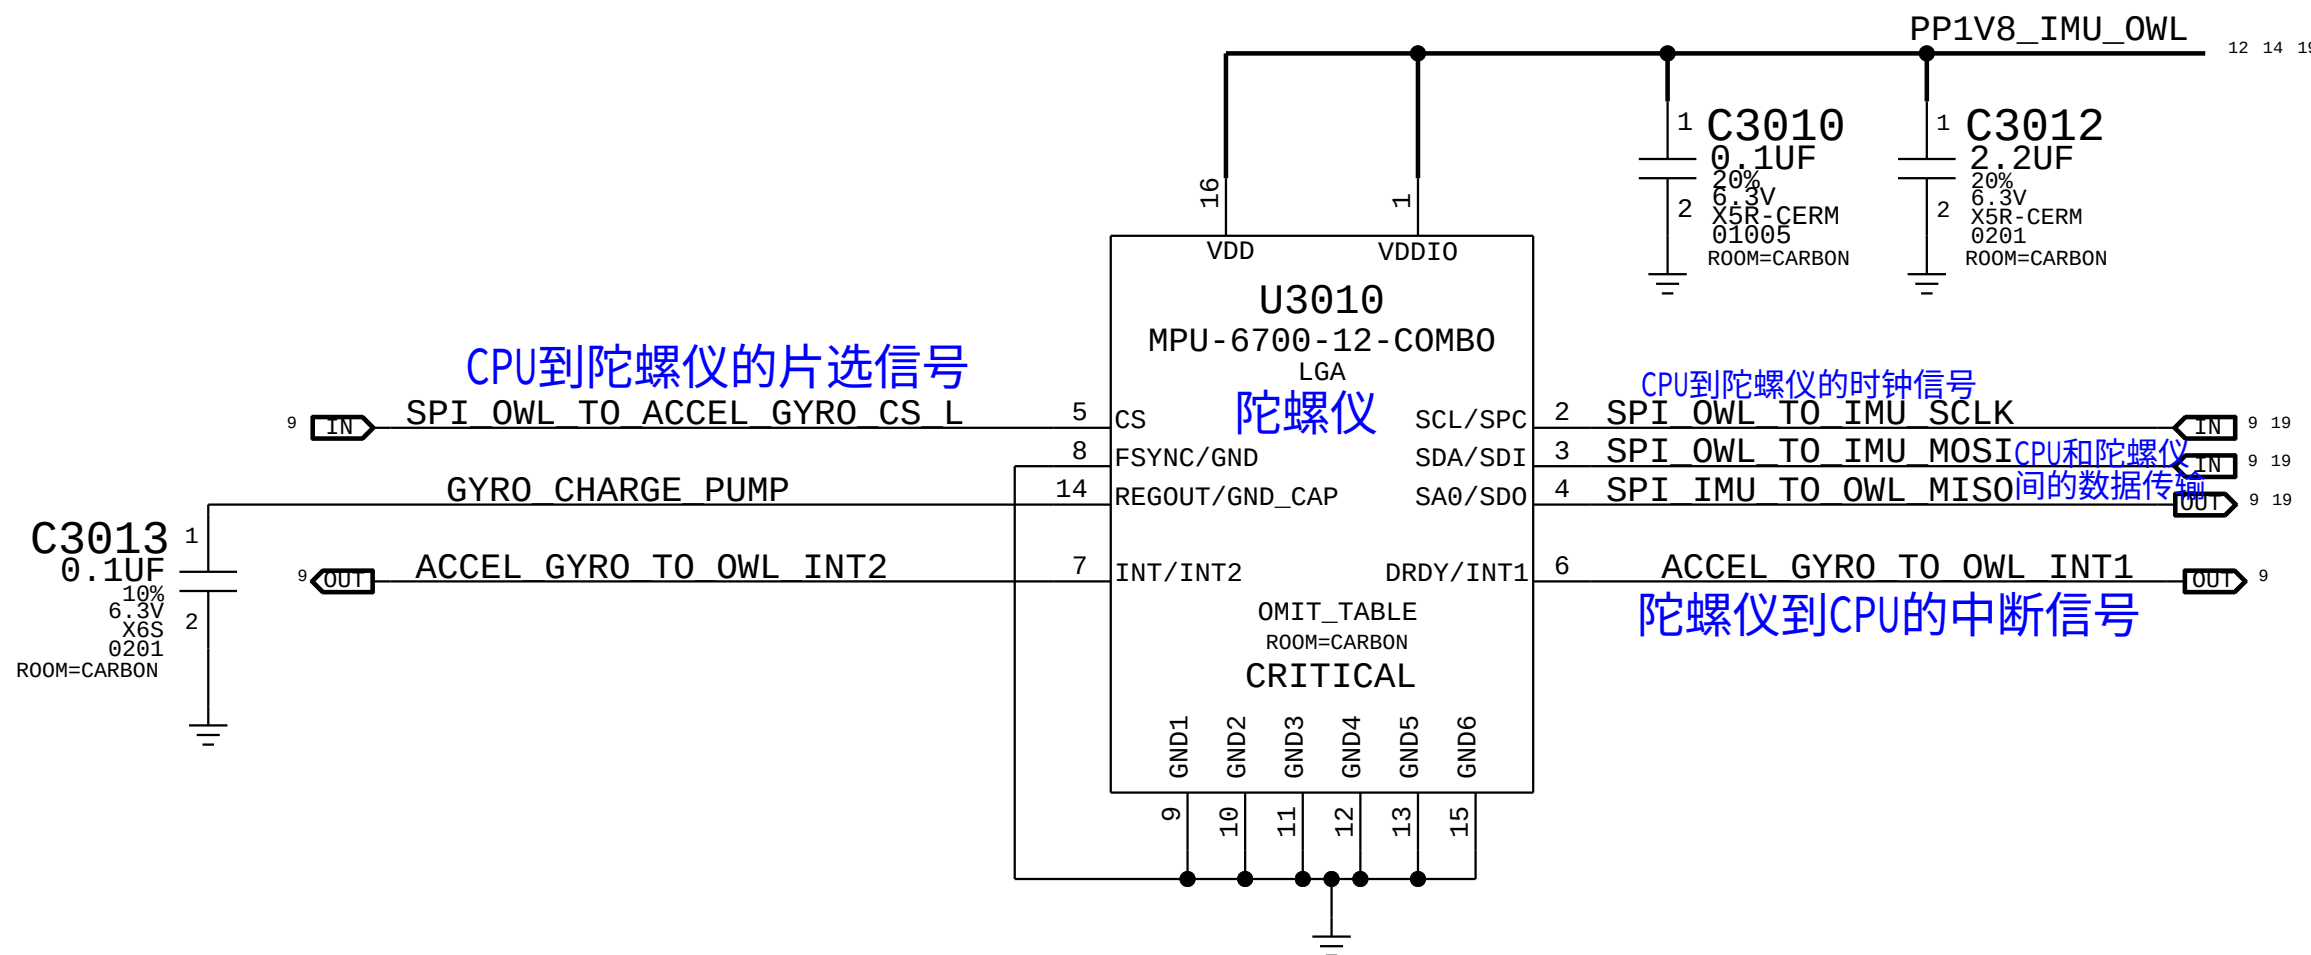


MAGNESIUM - COMPASS

ALPS (APN:338S00084)

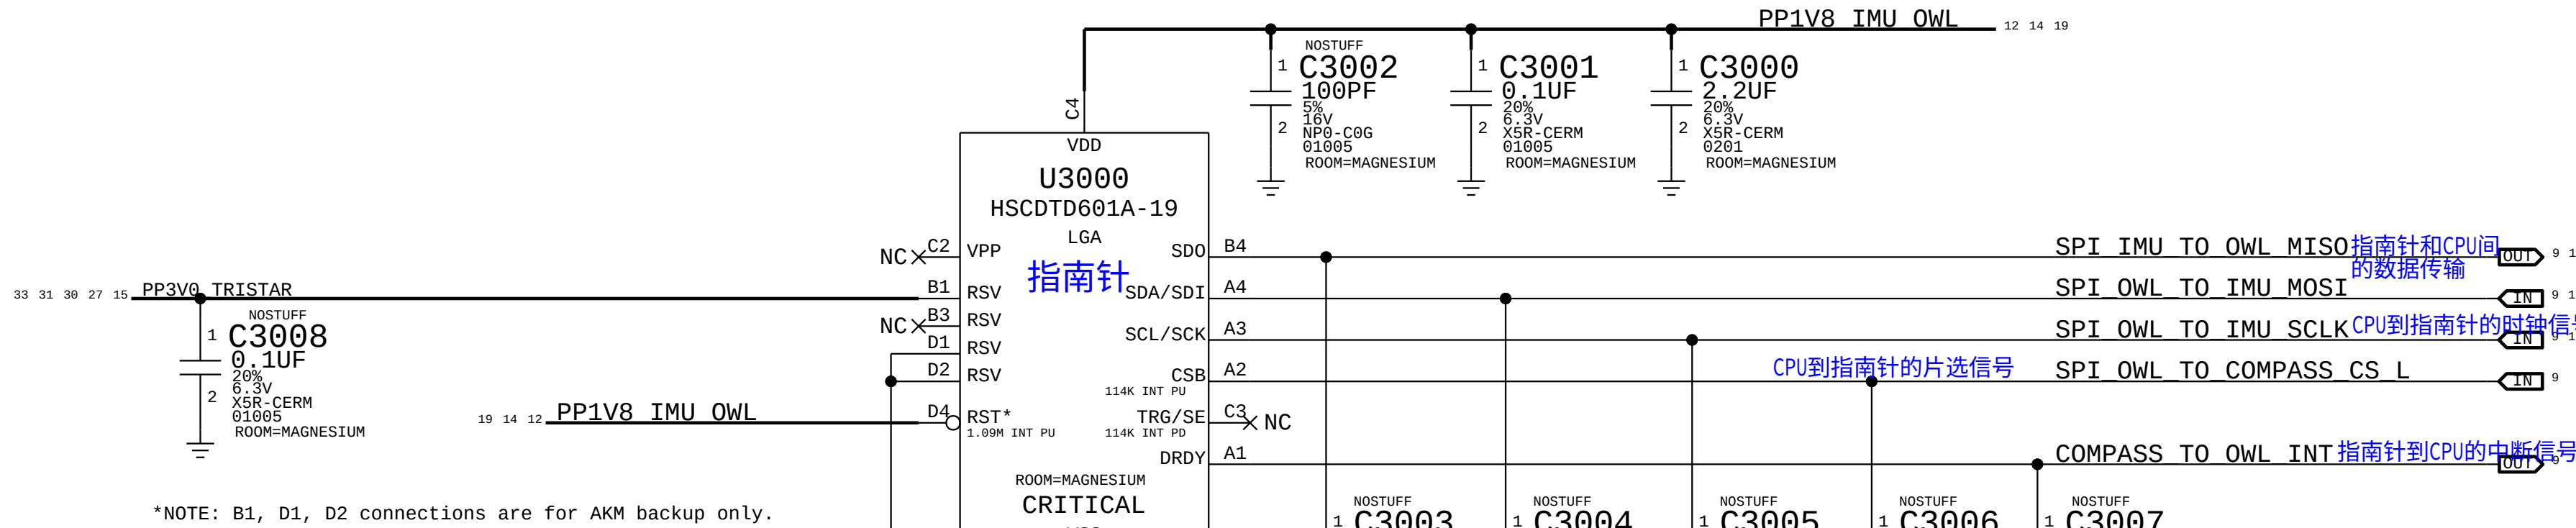


DISCRETE ACCEL

BOSCH (APN: 338S1163)

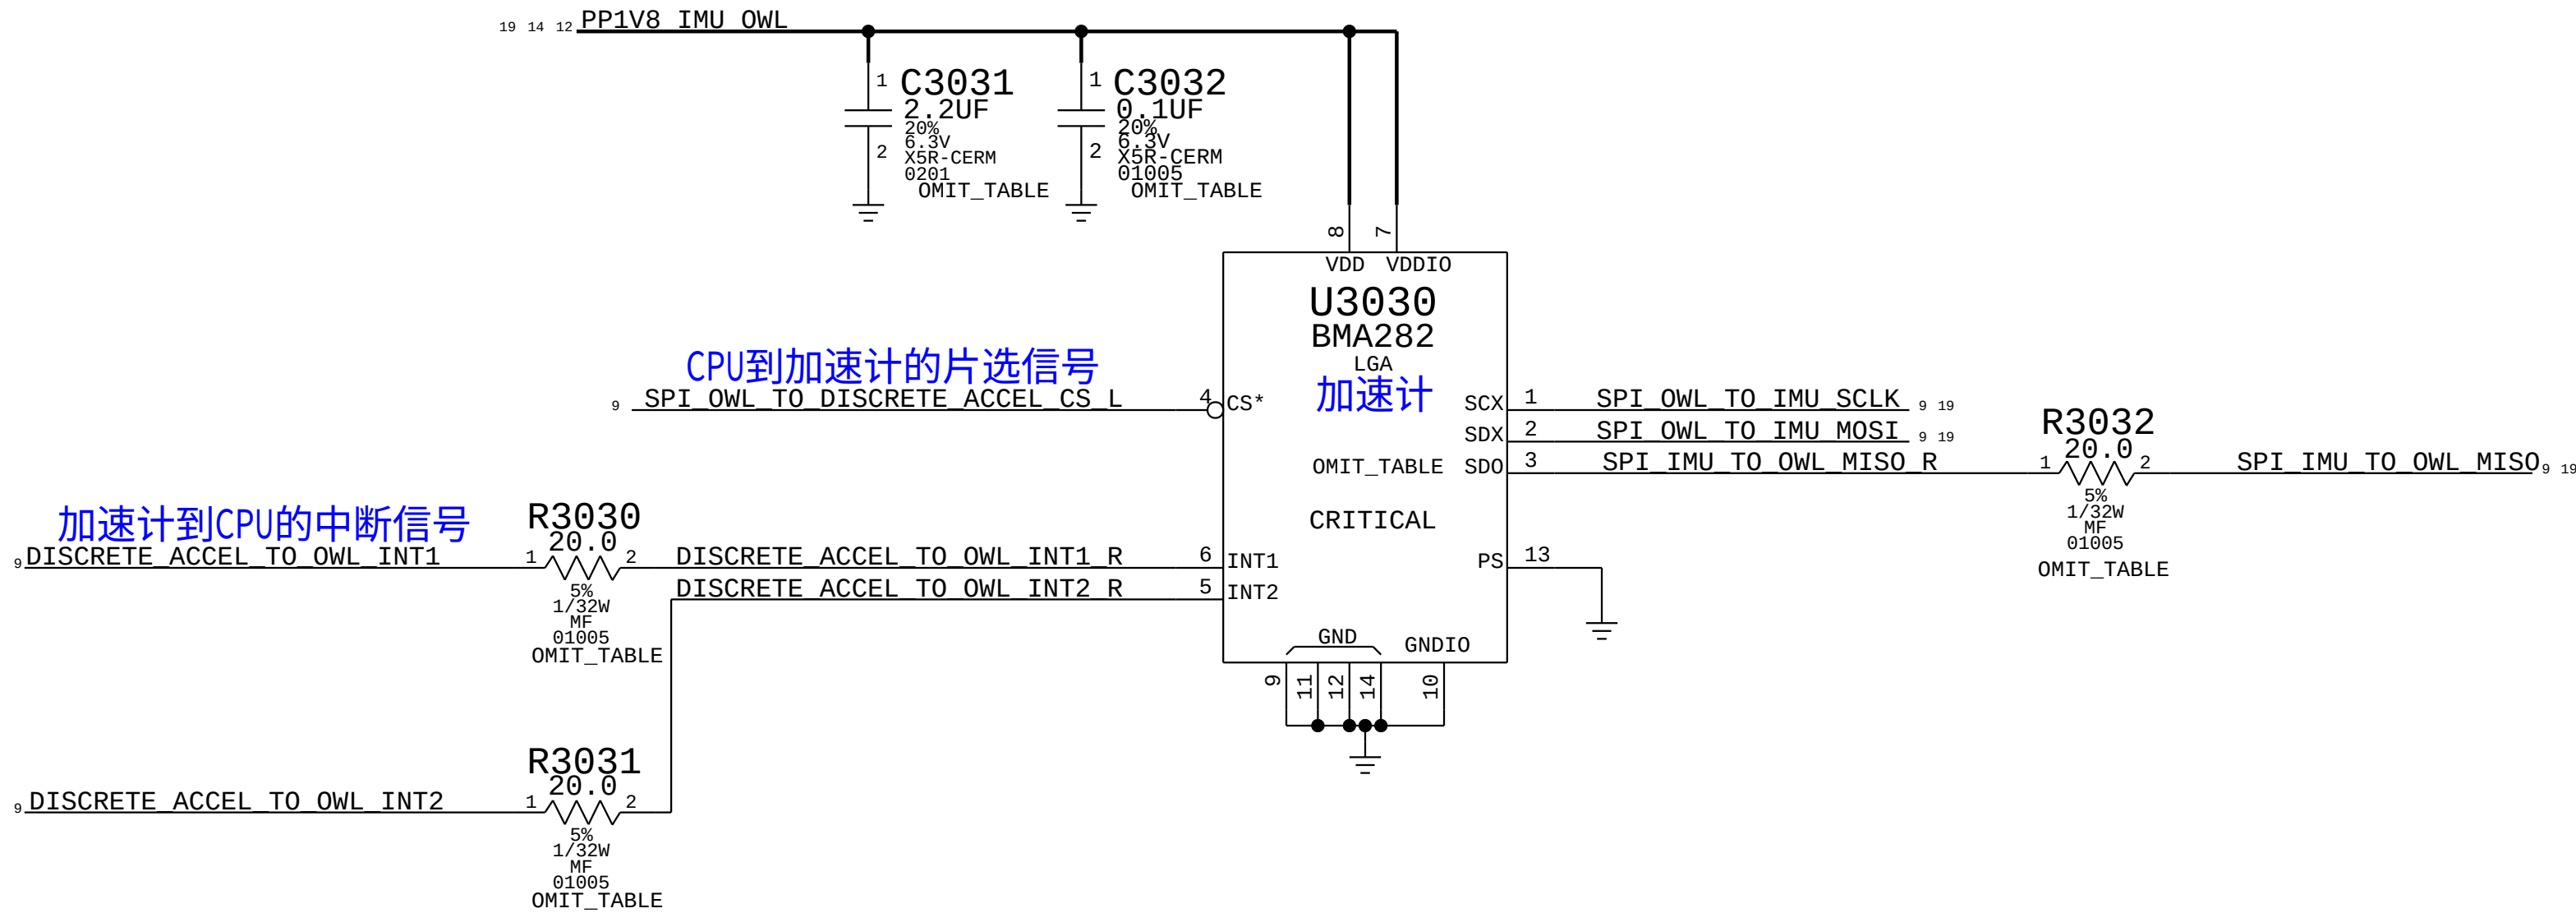

PHOSPHOROUS


BOSCH (APN:338S00044)

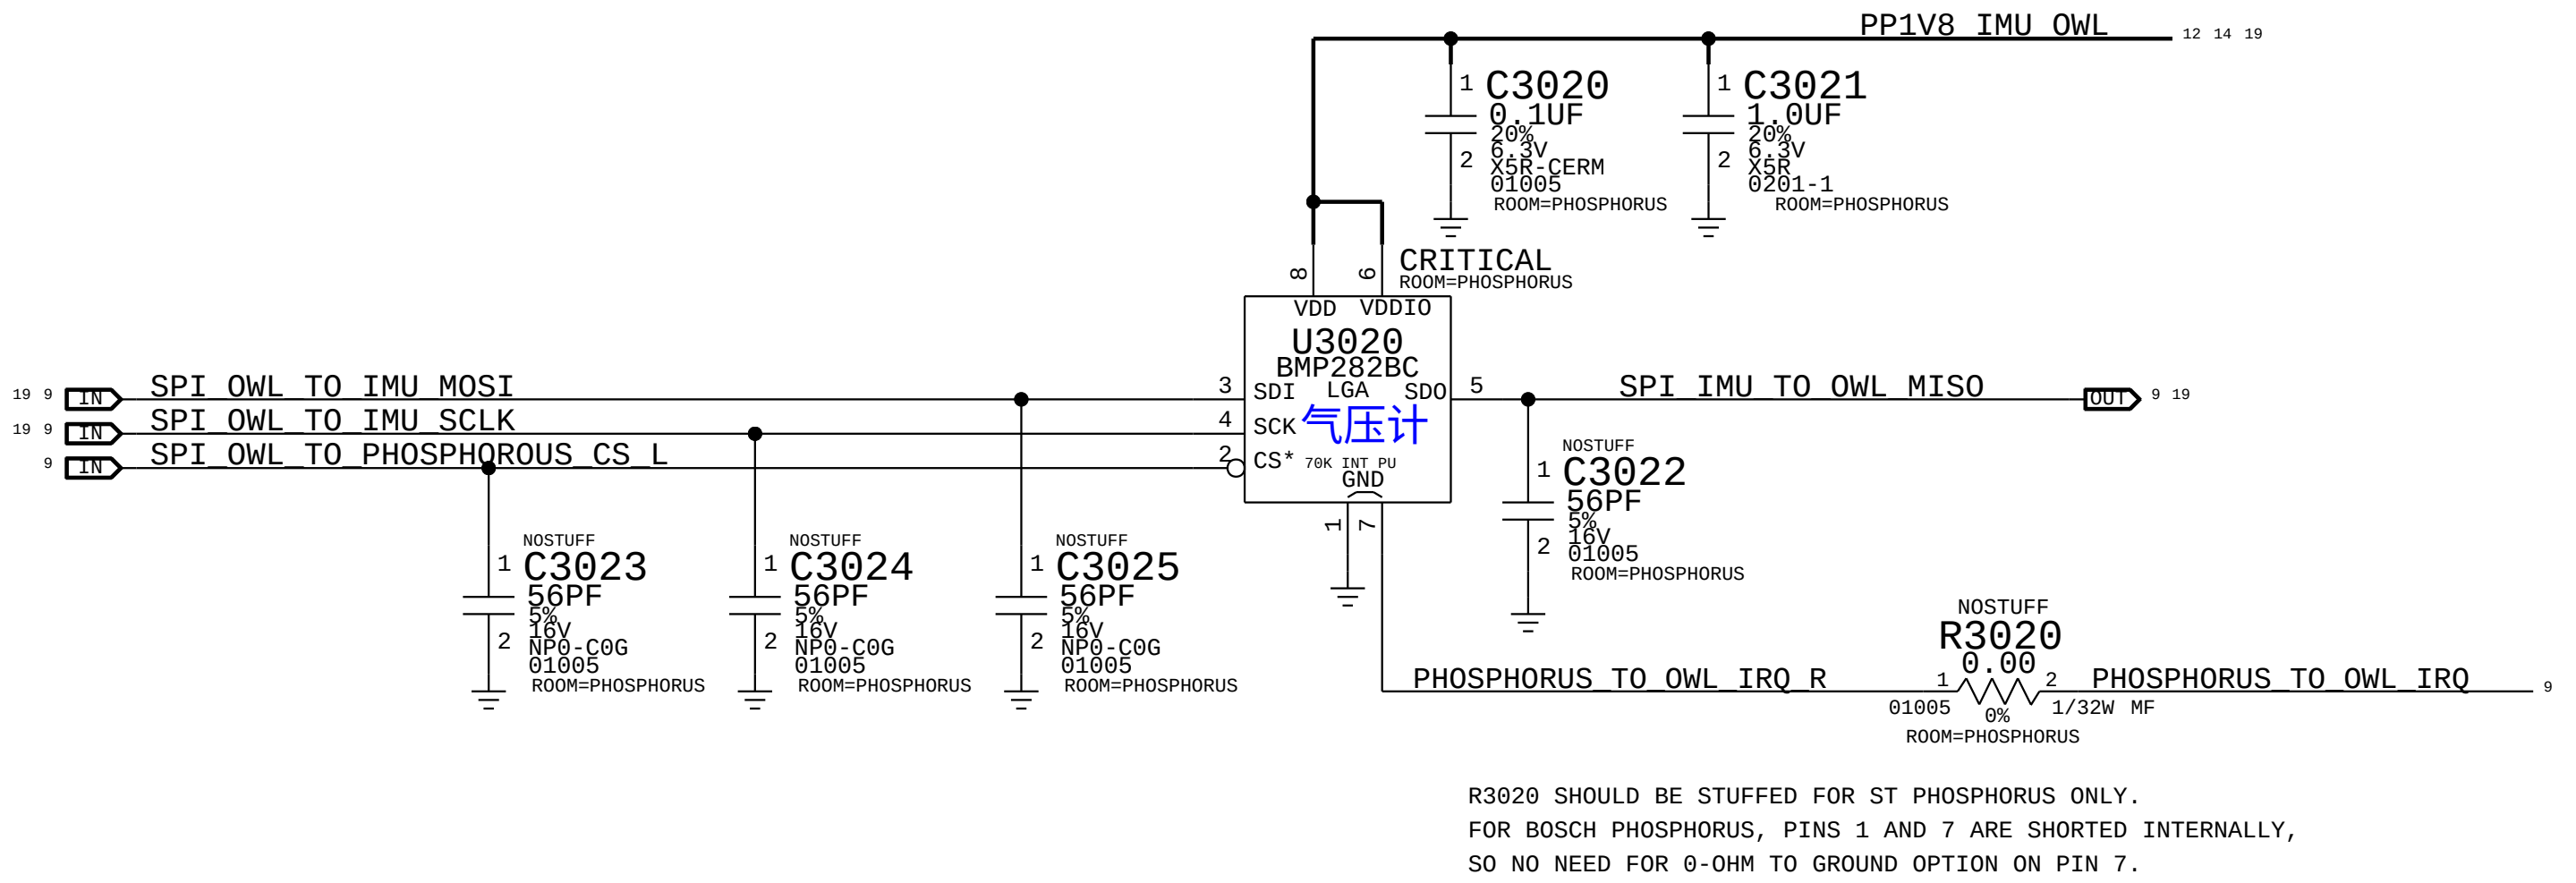


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

FOREHEAD FLEX (FCAM)


CAMERA POWER 摄像头电源

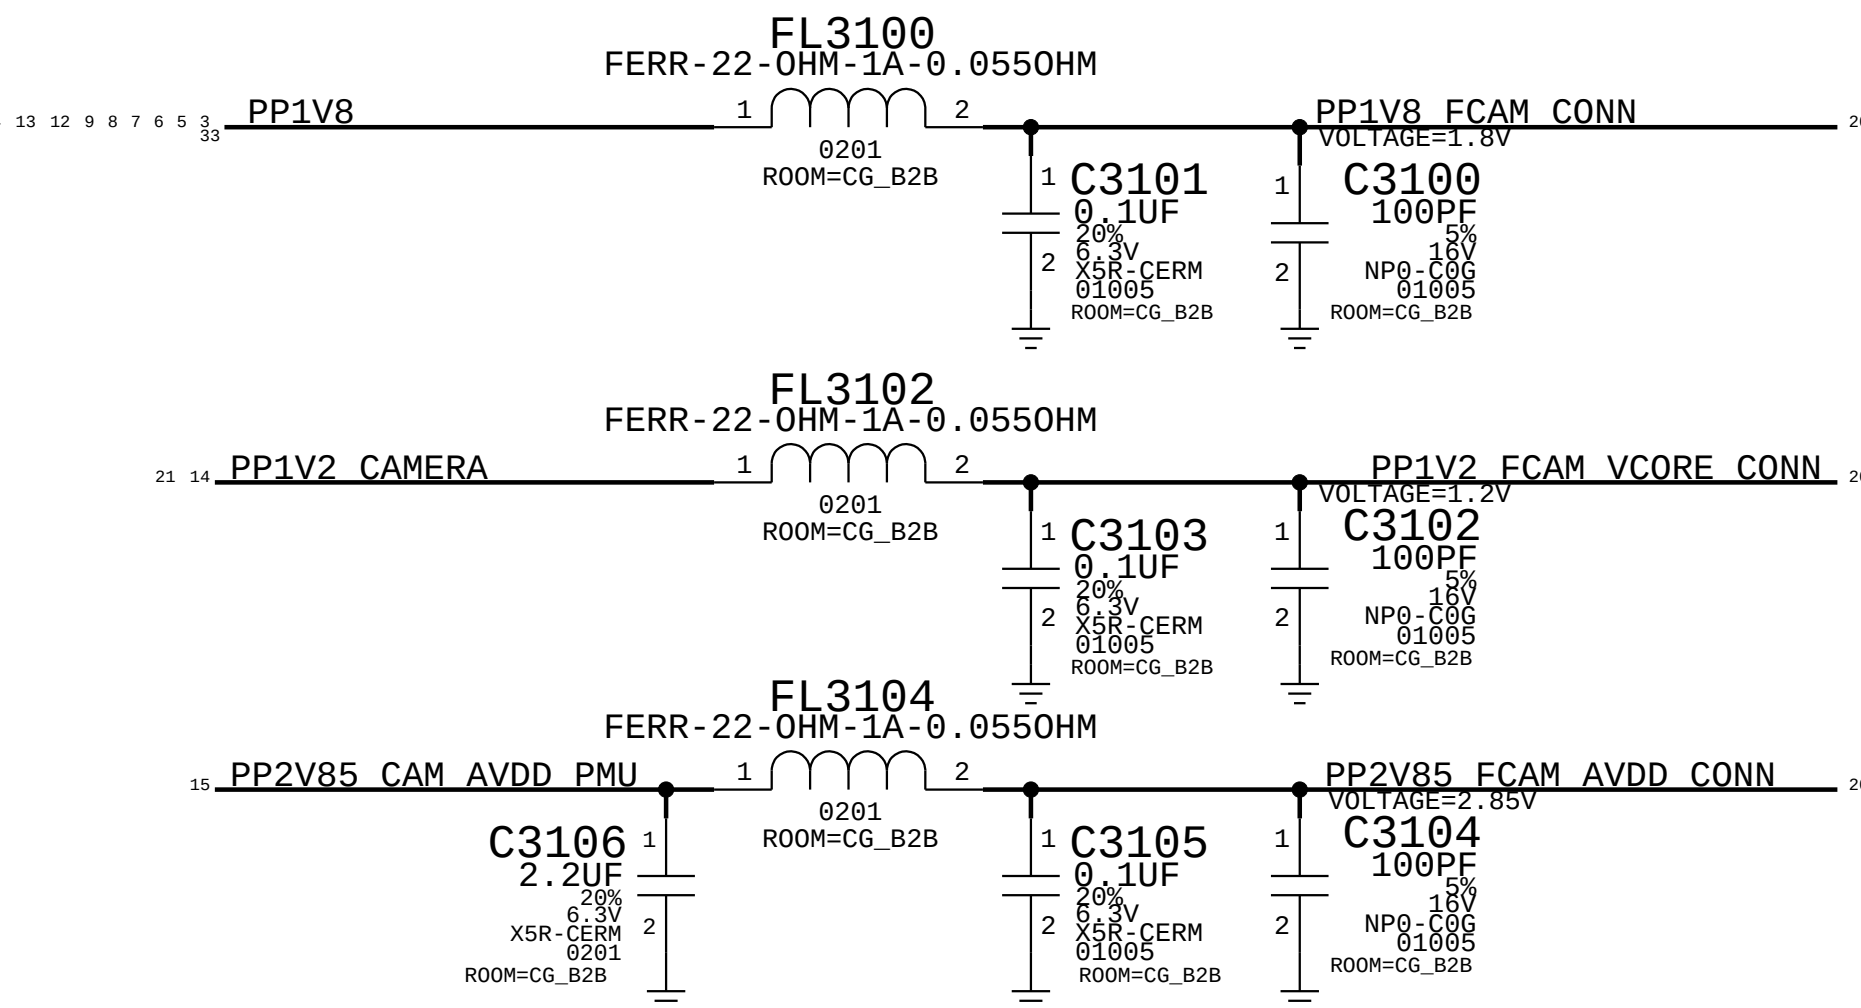


CAMERA I/O 摄像头输入输出

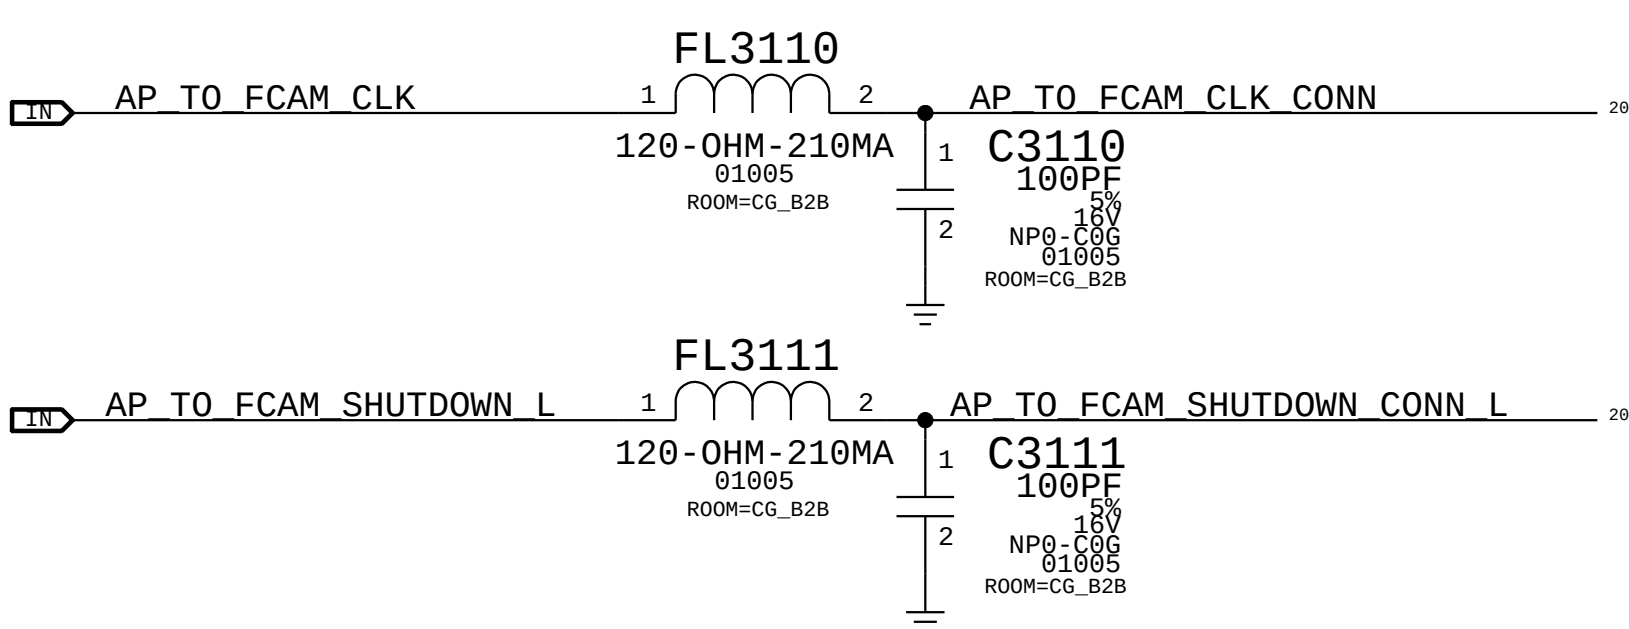


CAMERA MIPI

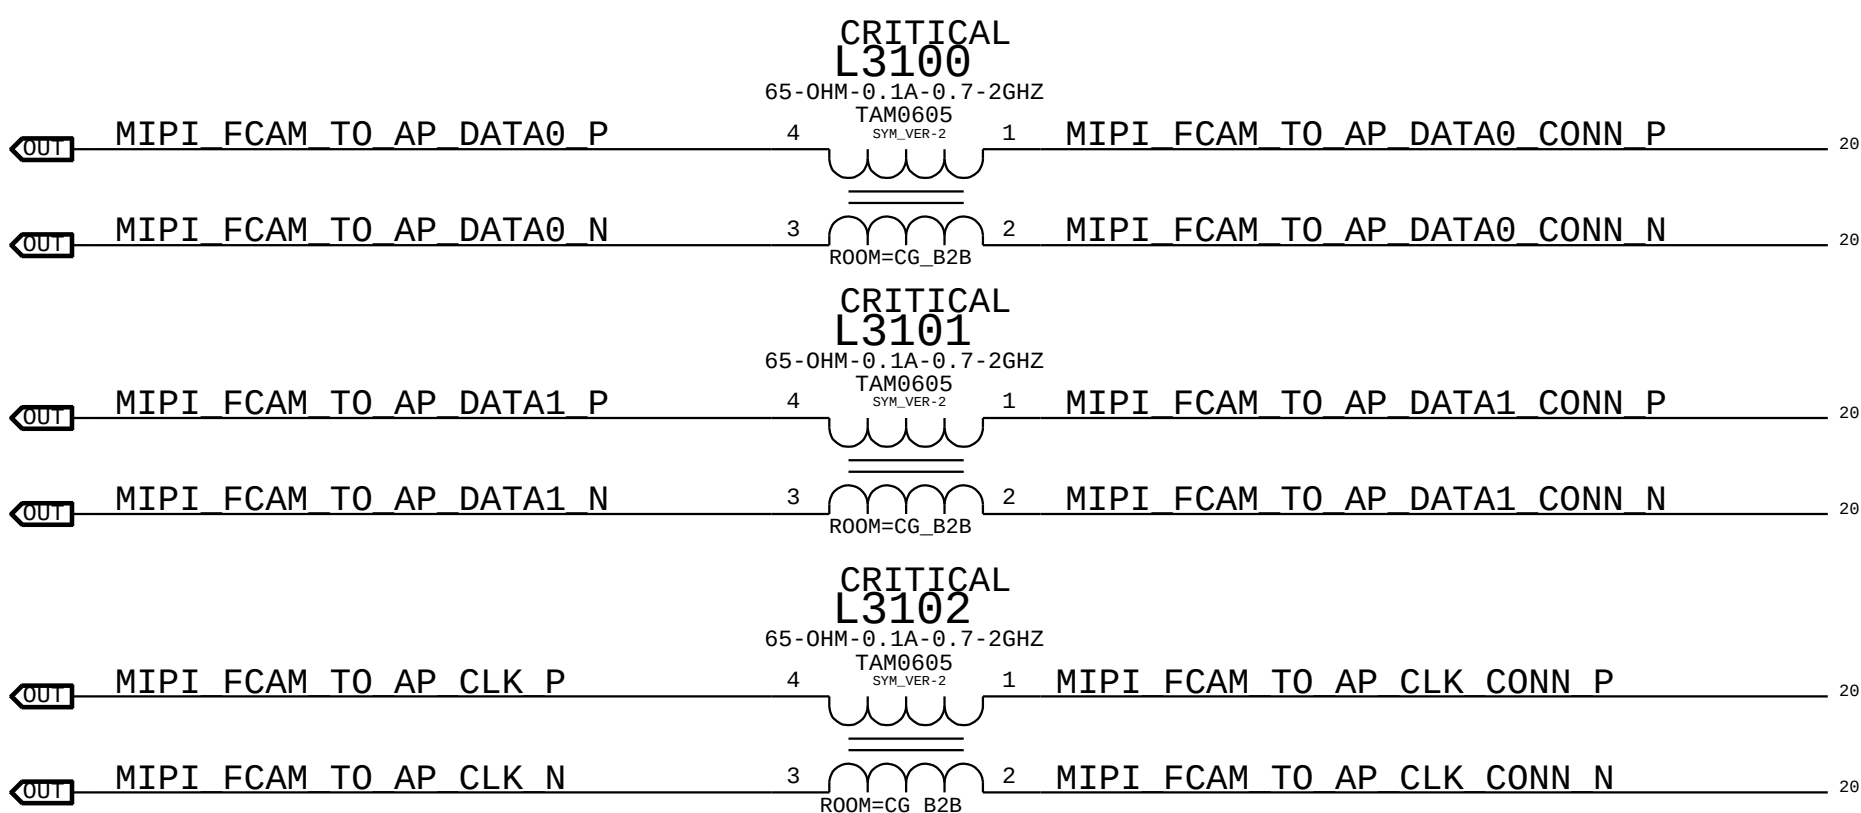


PROX & ALS POWER 光感电源

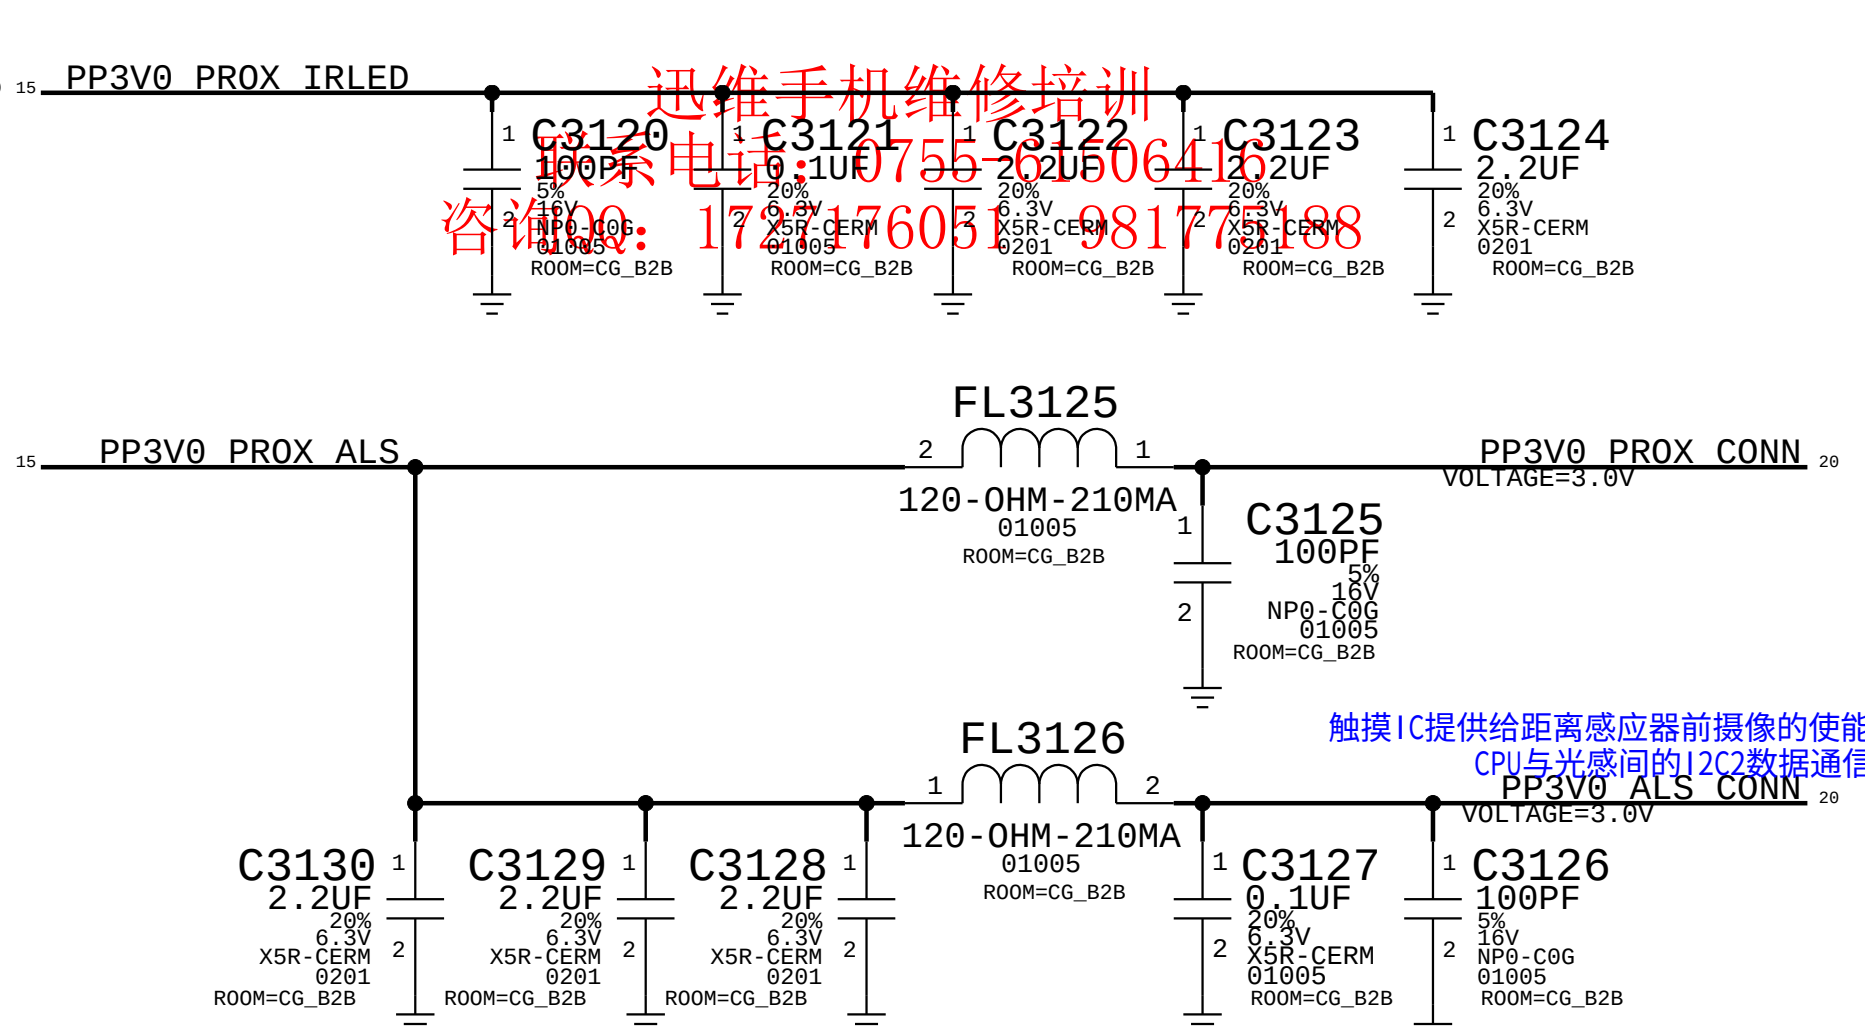

PROX & ALS INTERFACE 光感中断信号

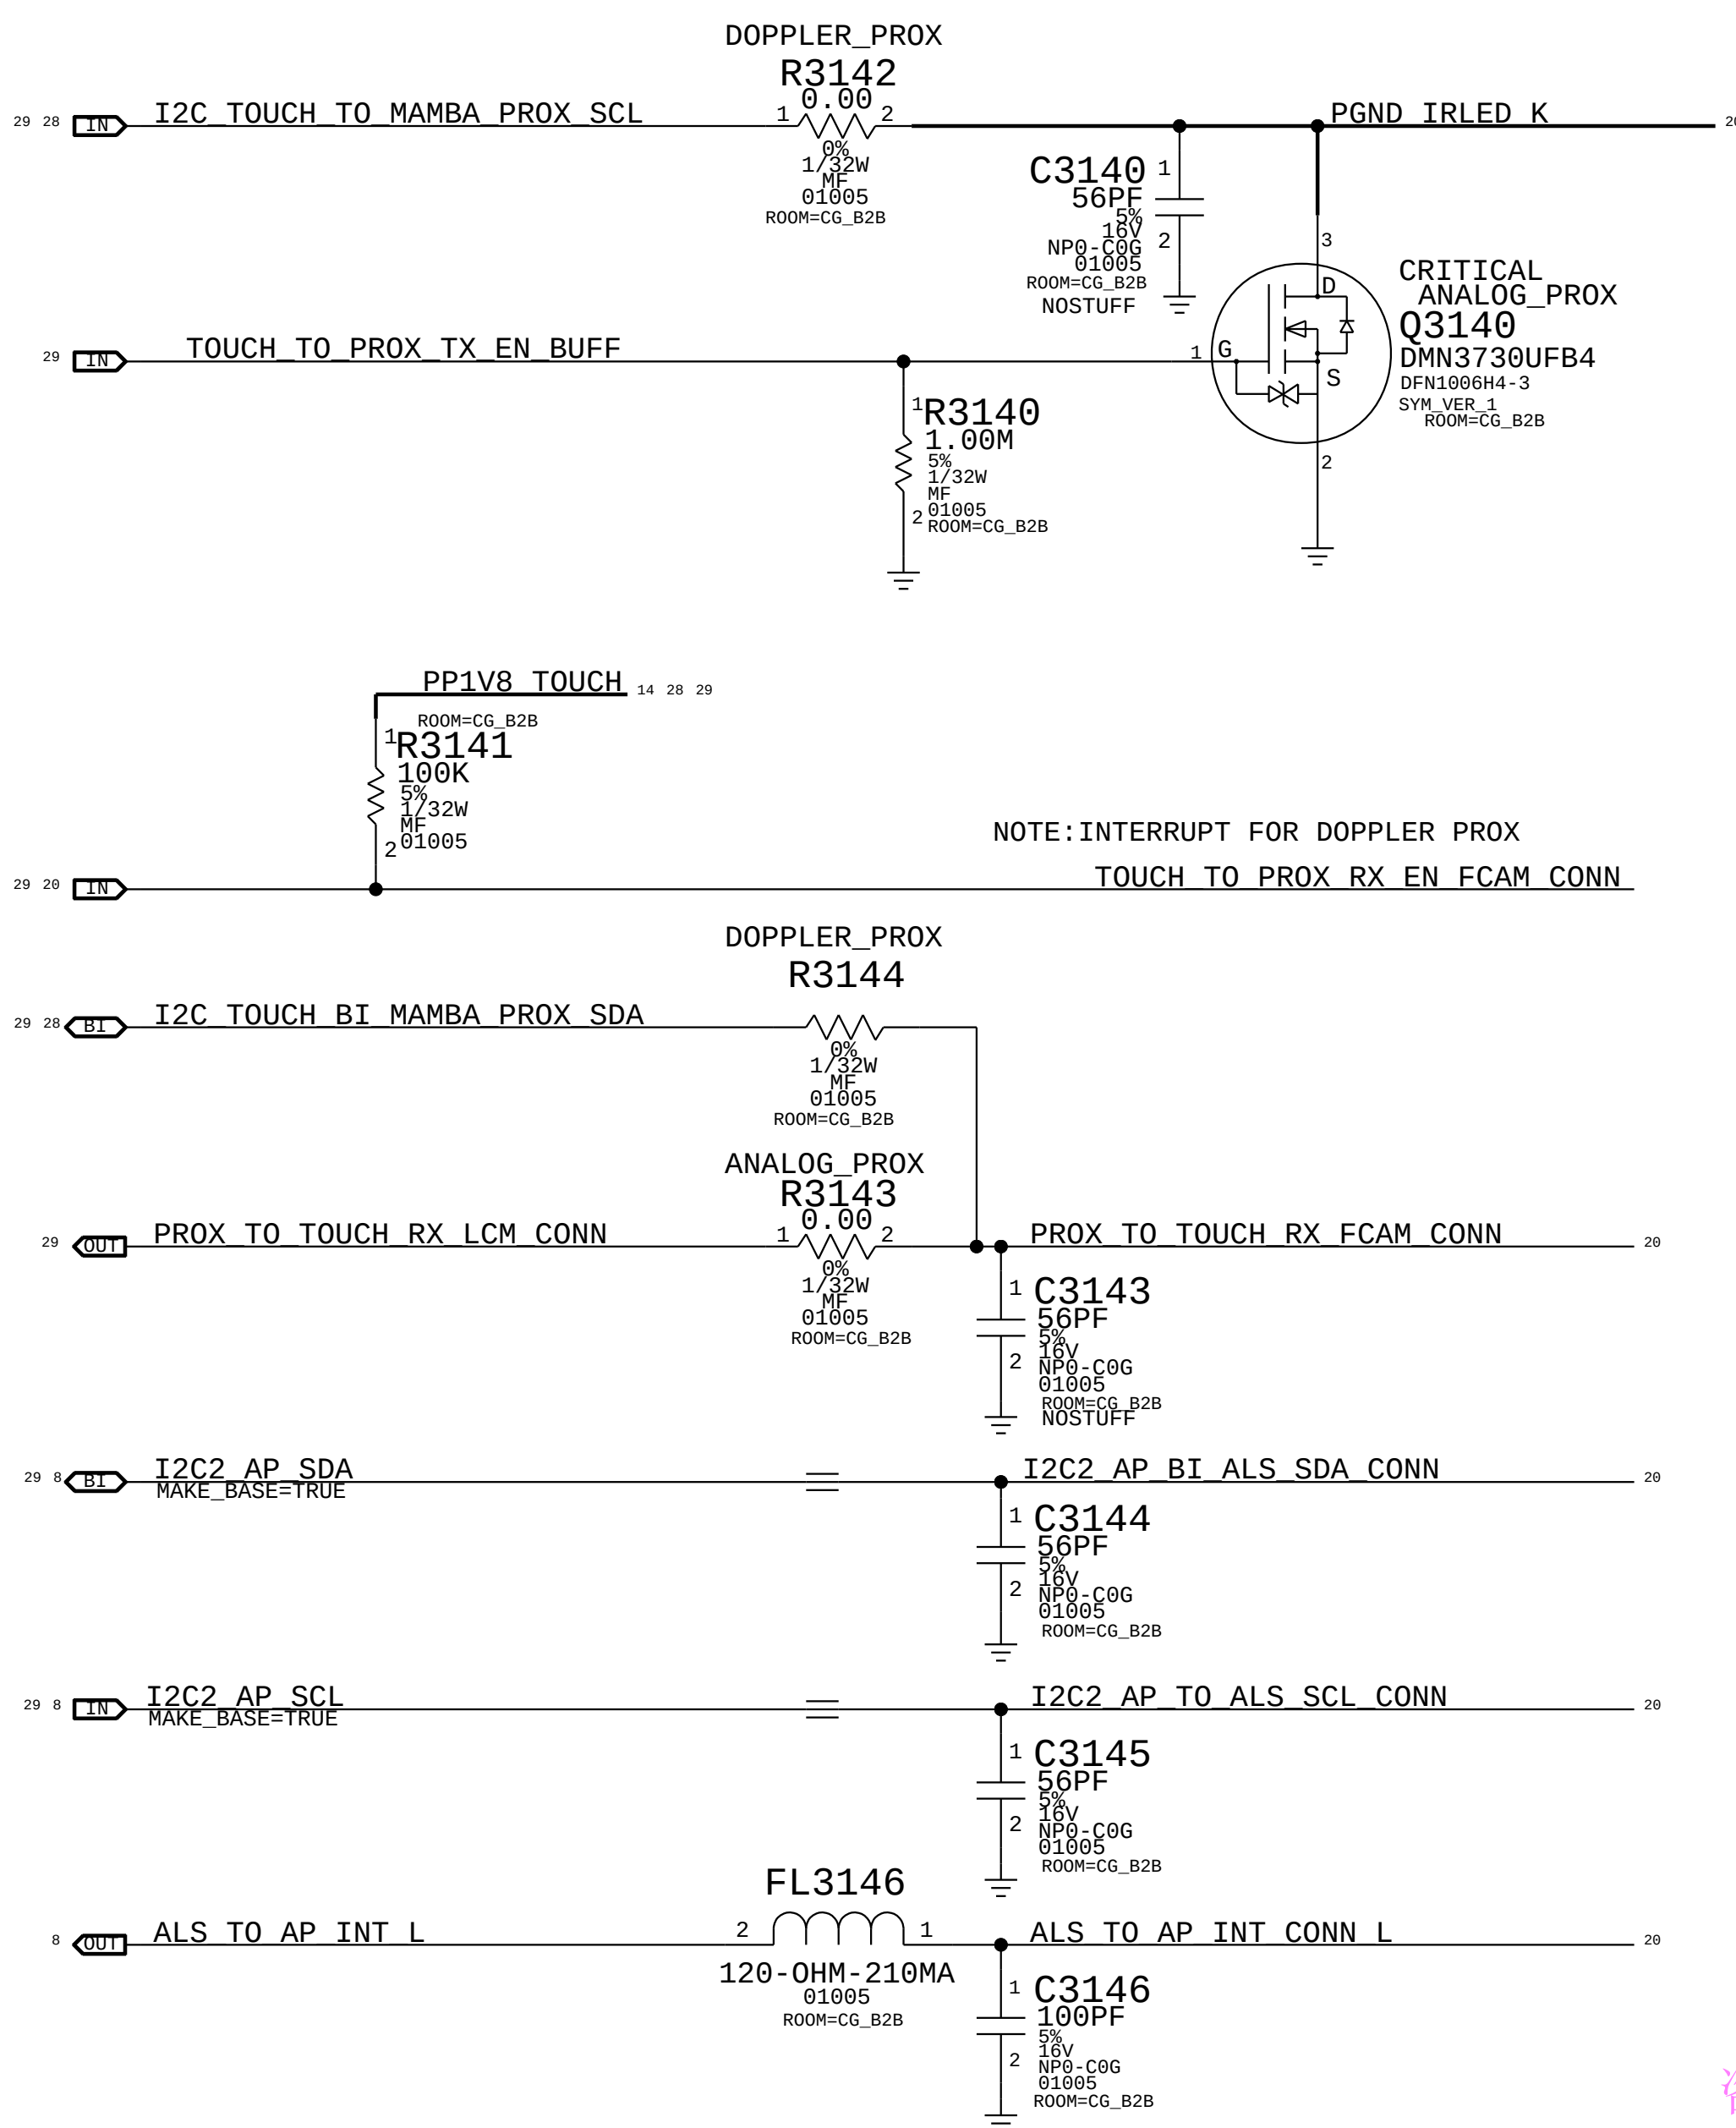

FOREHEAD CONNECTOR

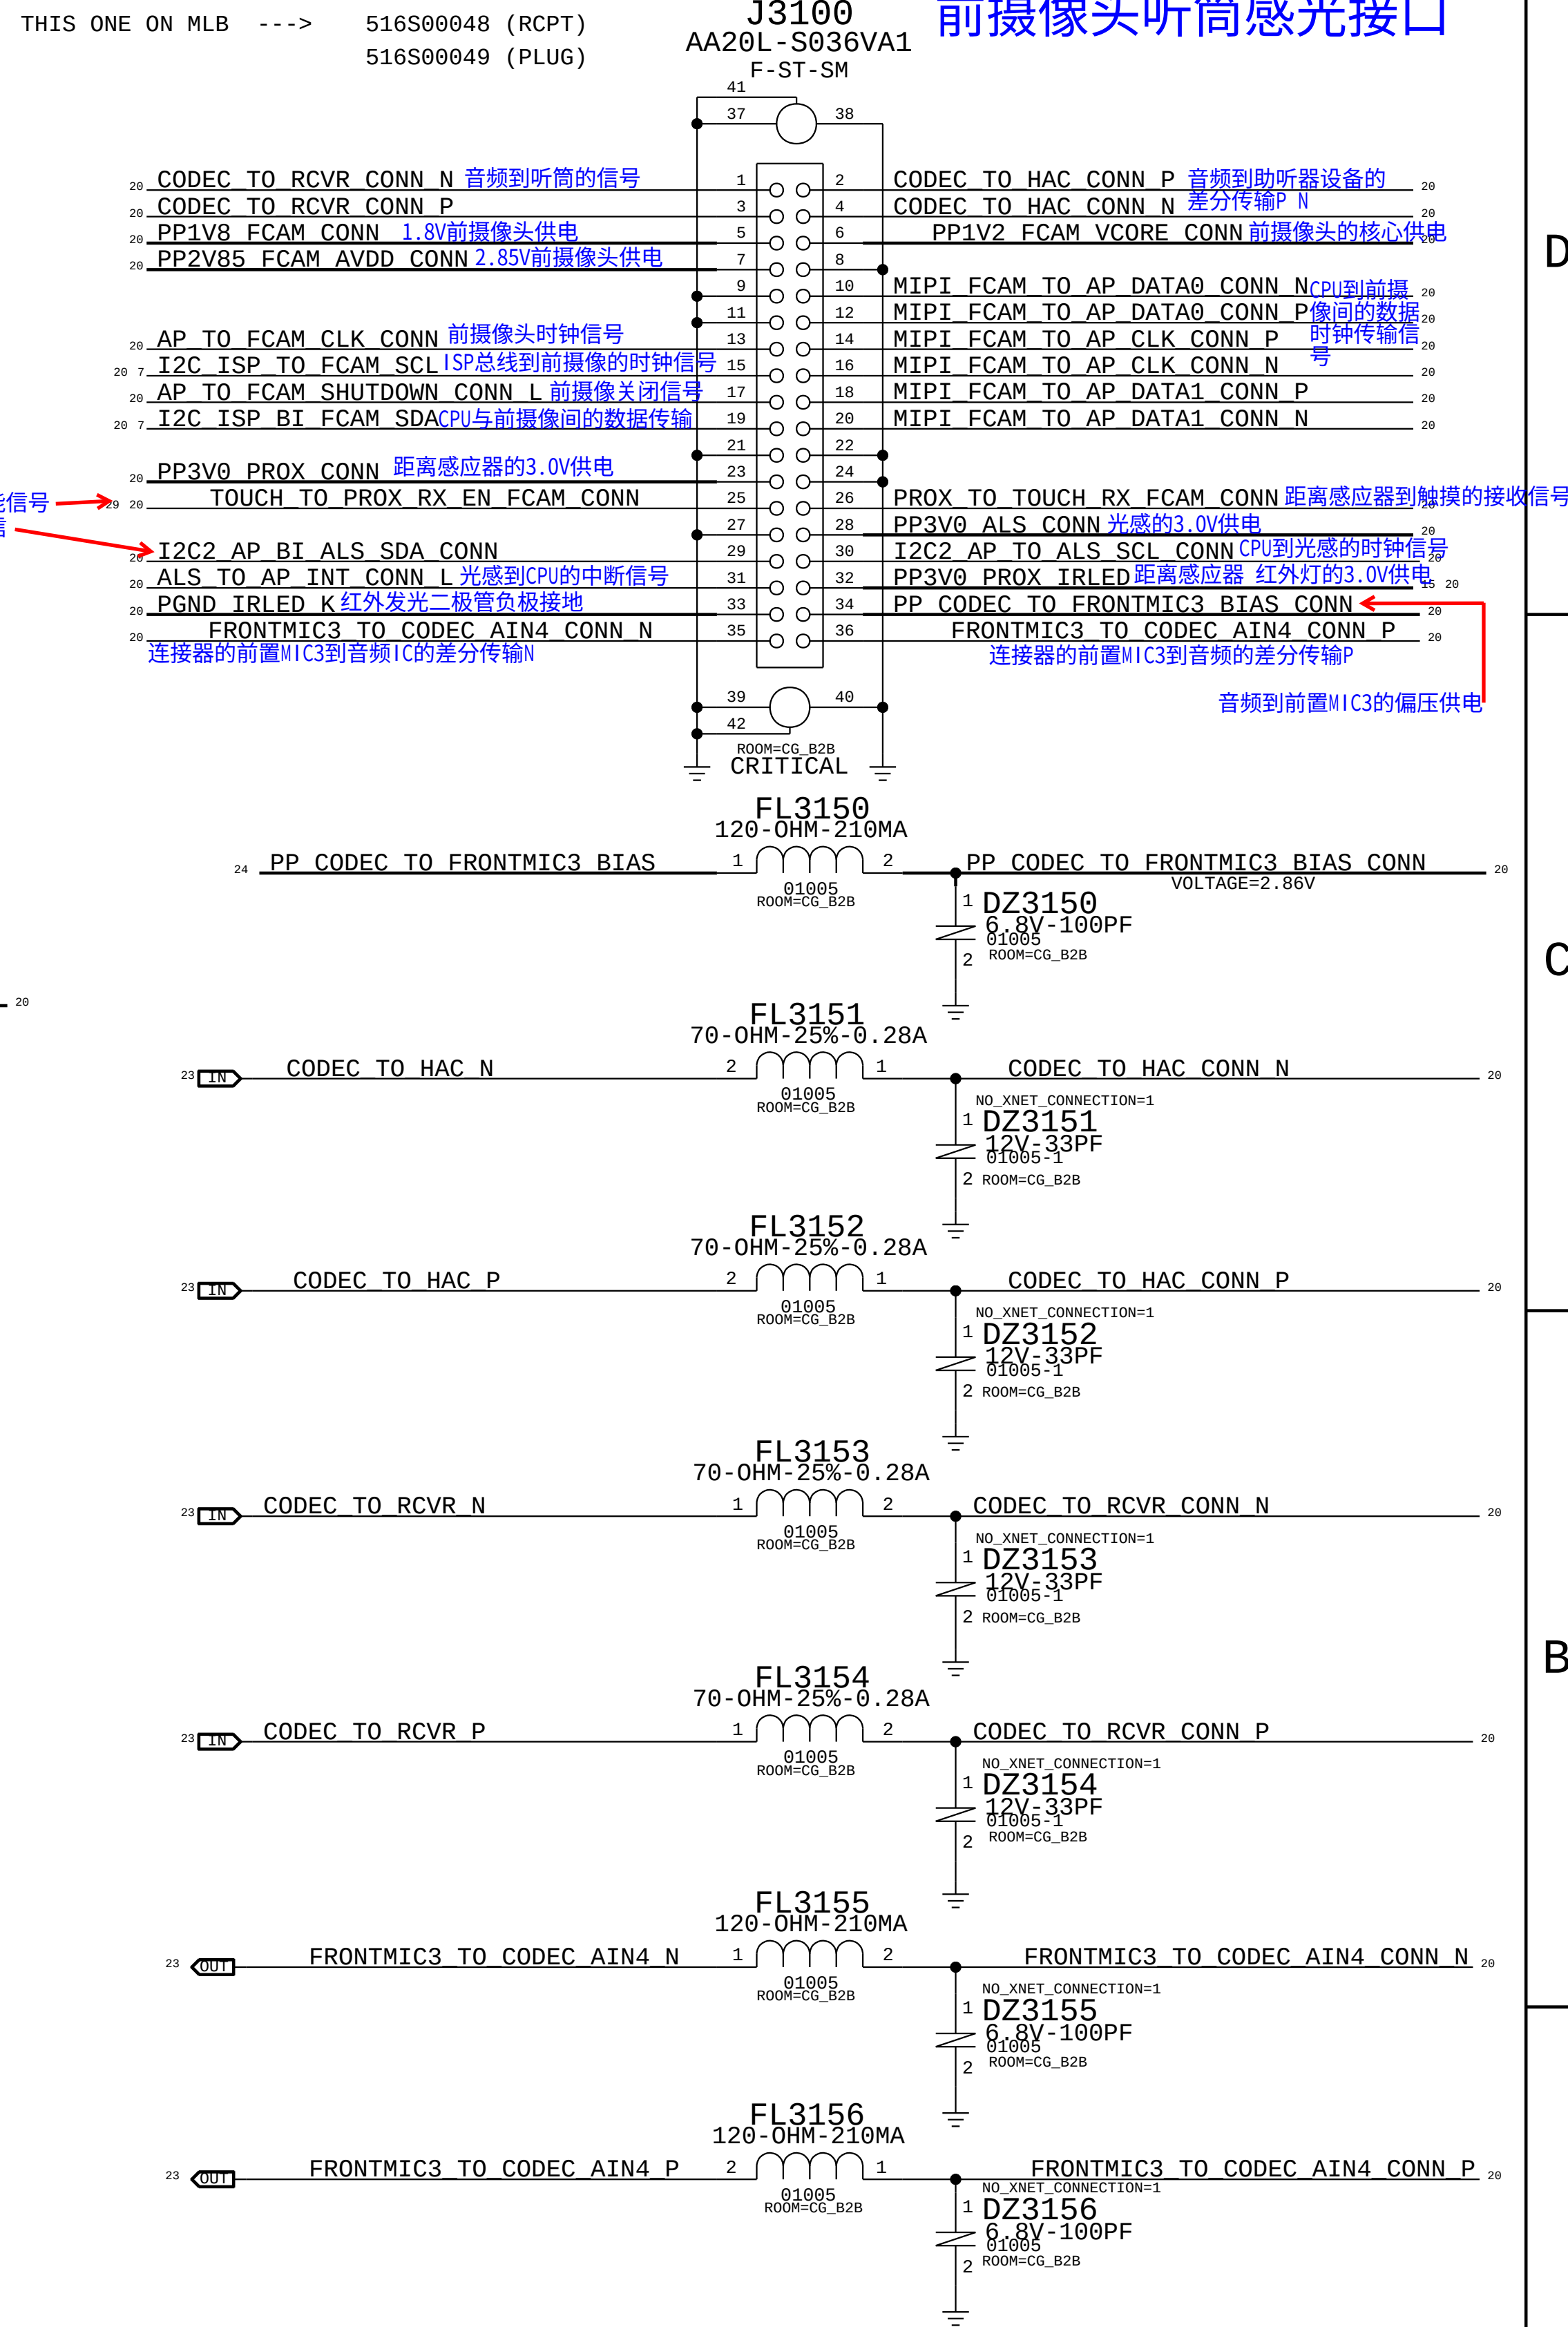

迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188



REAR CAMERA FLEX

后摄像头


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

RCAM CONNECTOR 后摄像头接口

CAMERA POWER

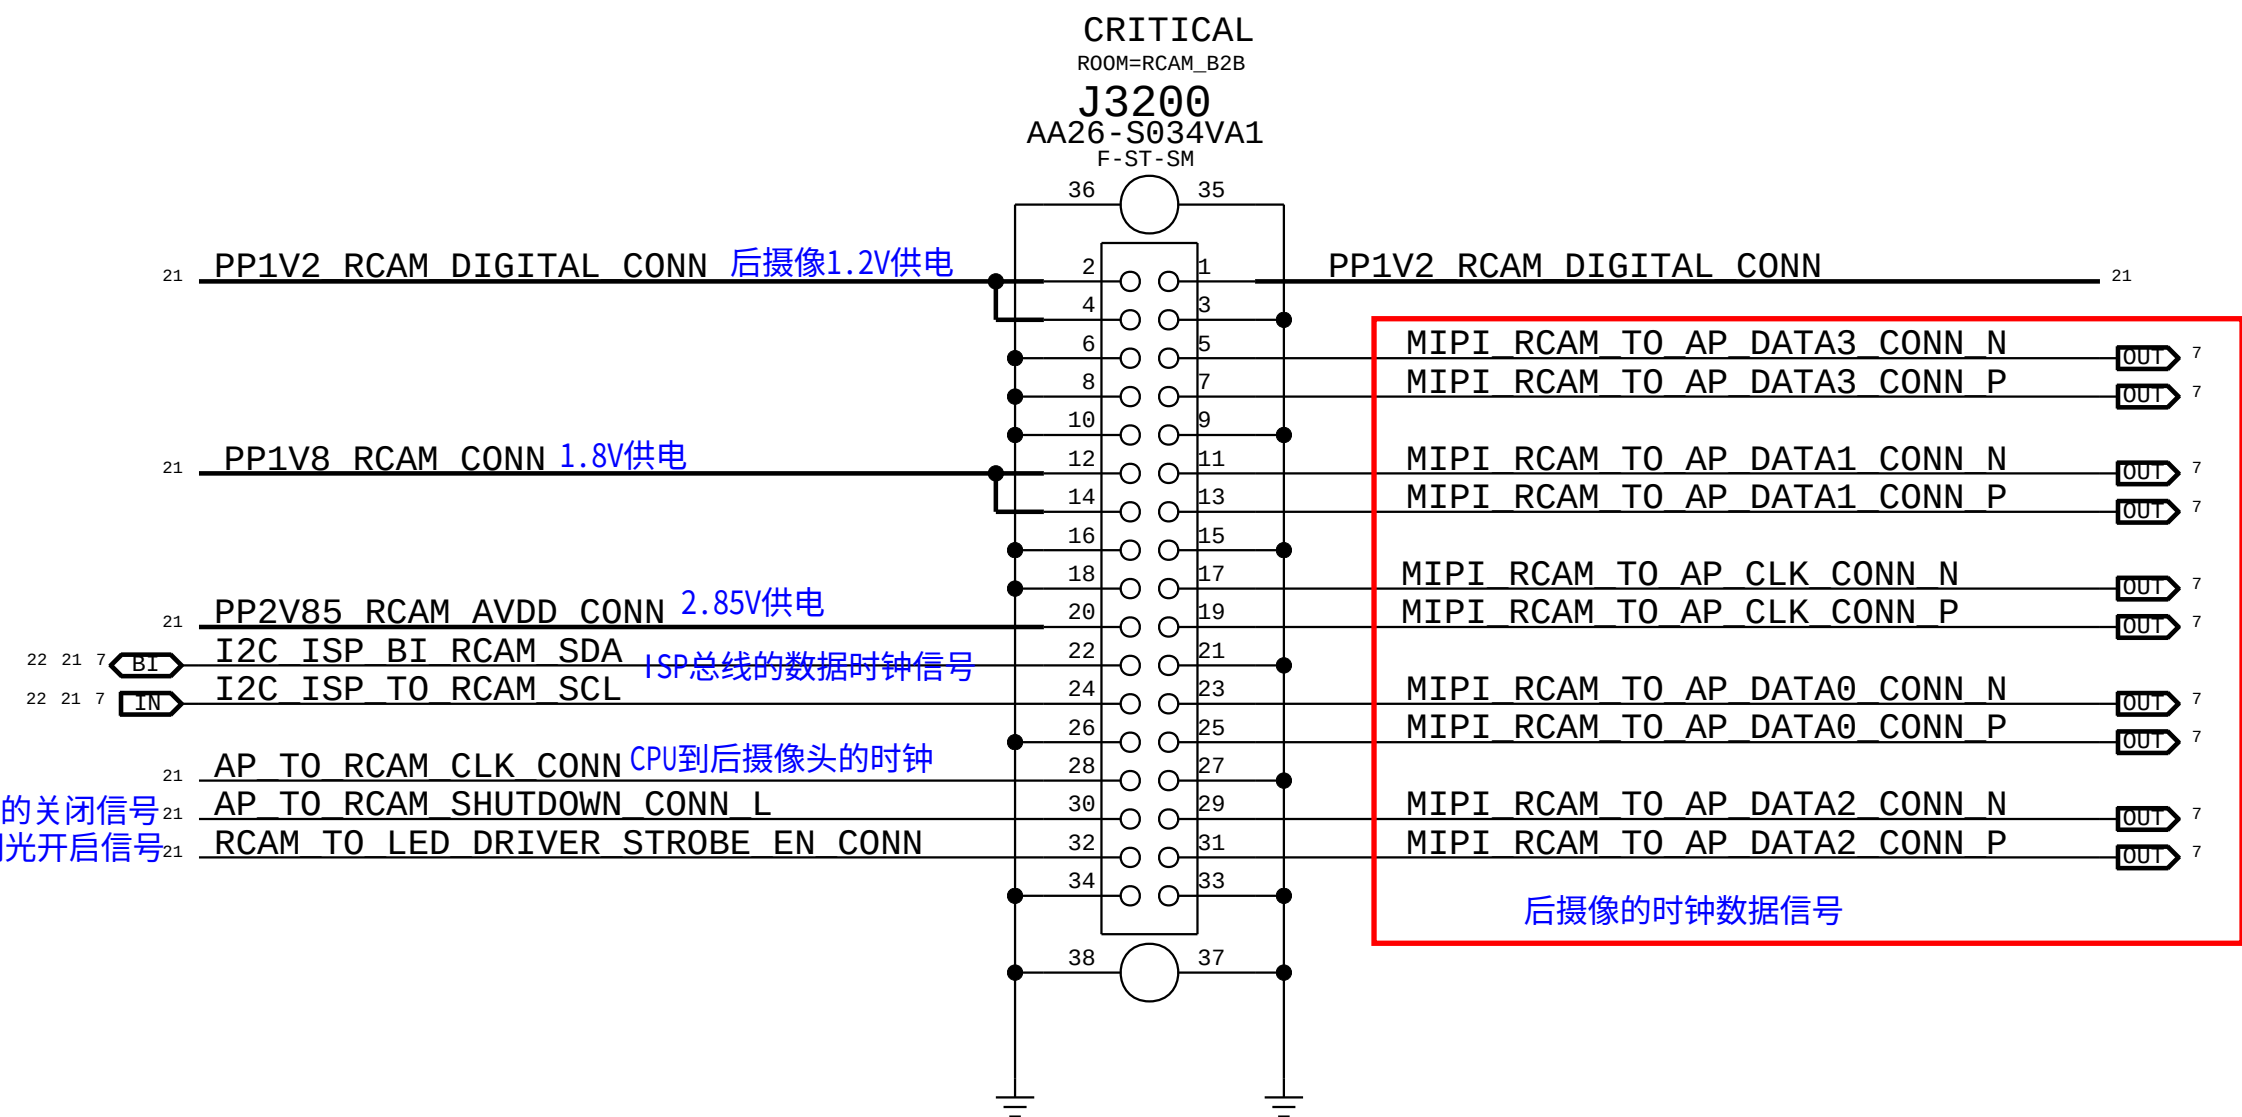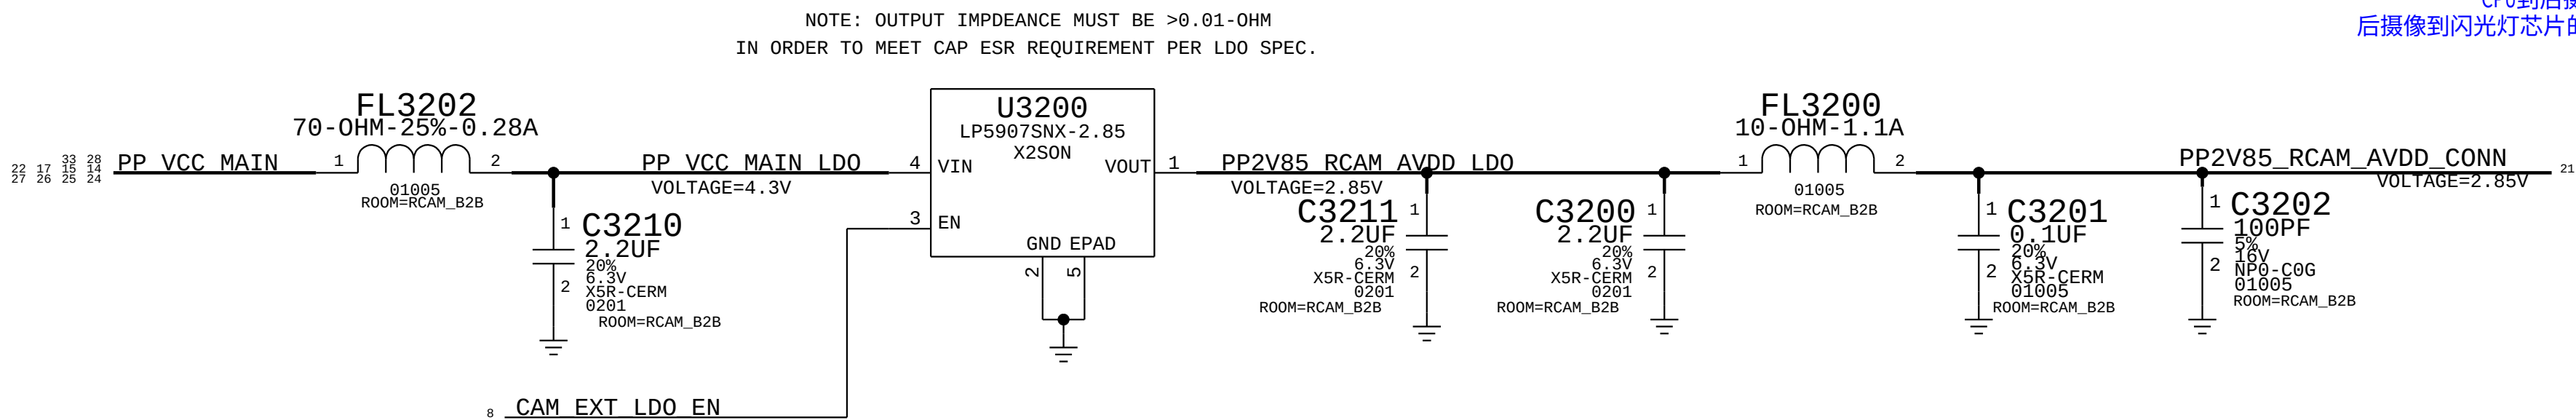

DIGITAL I/O

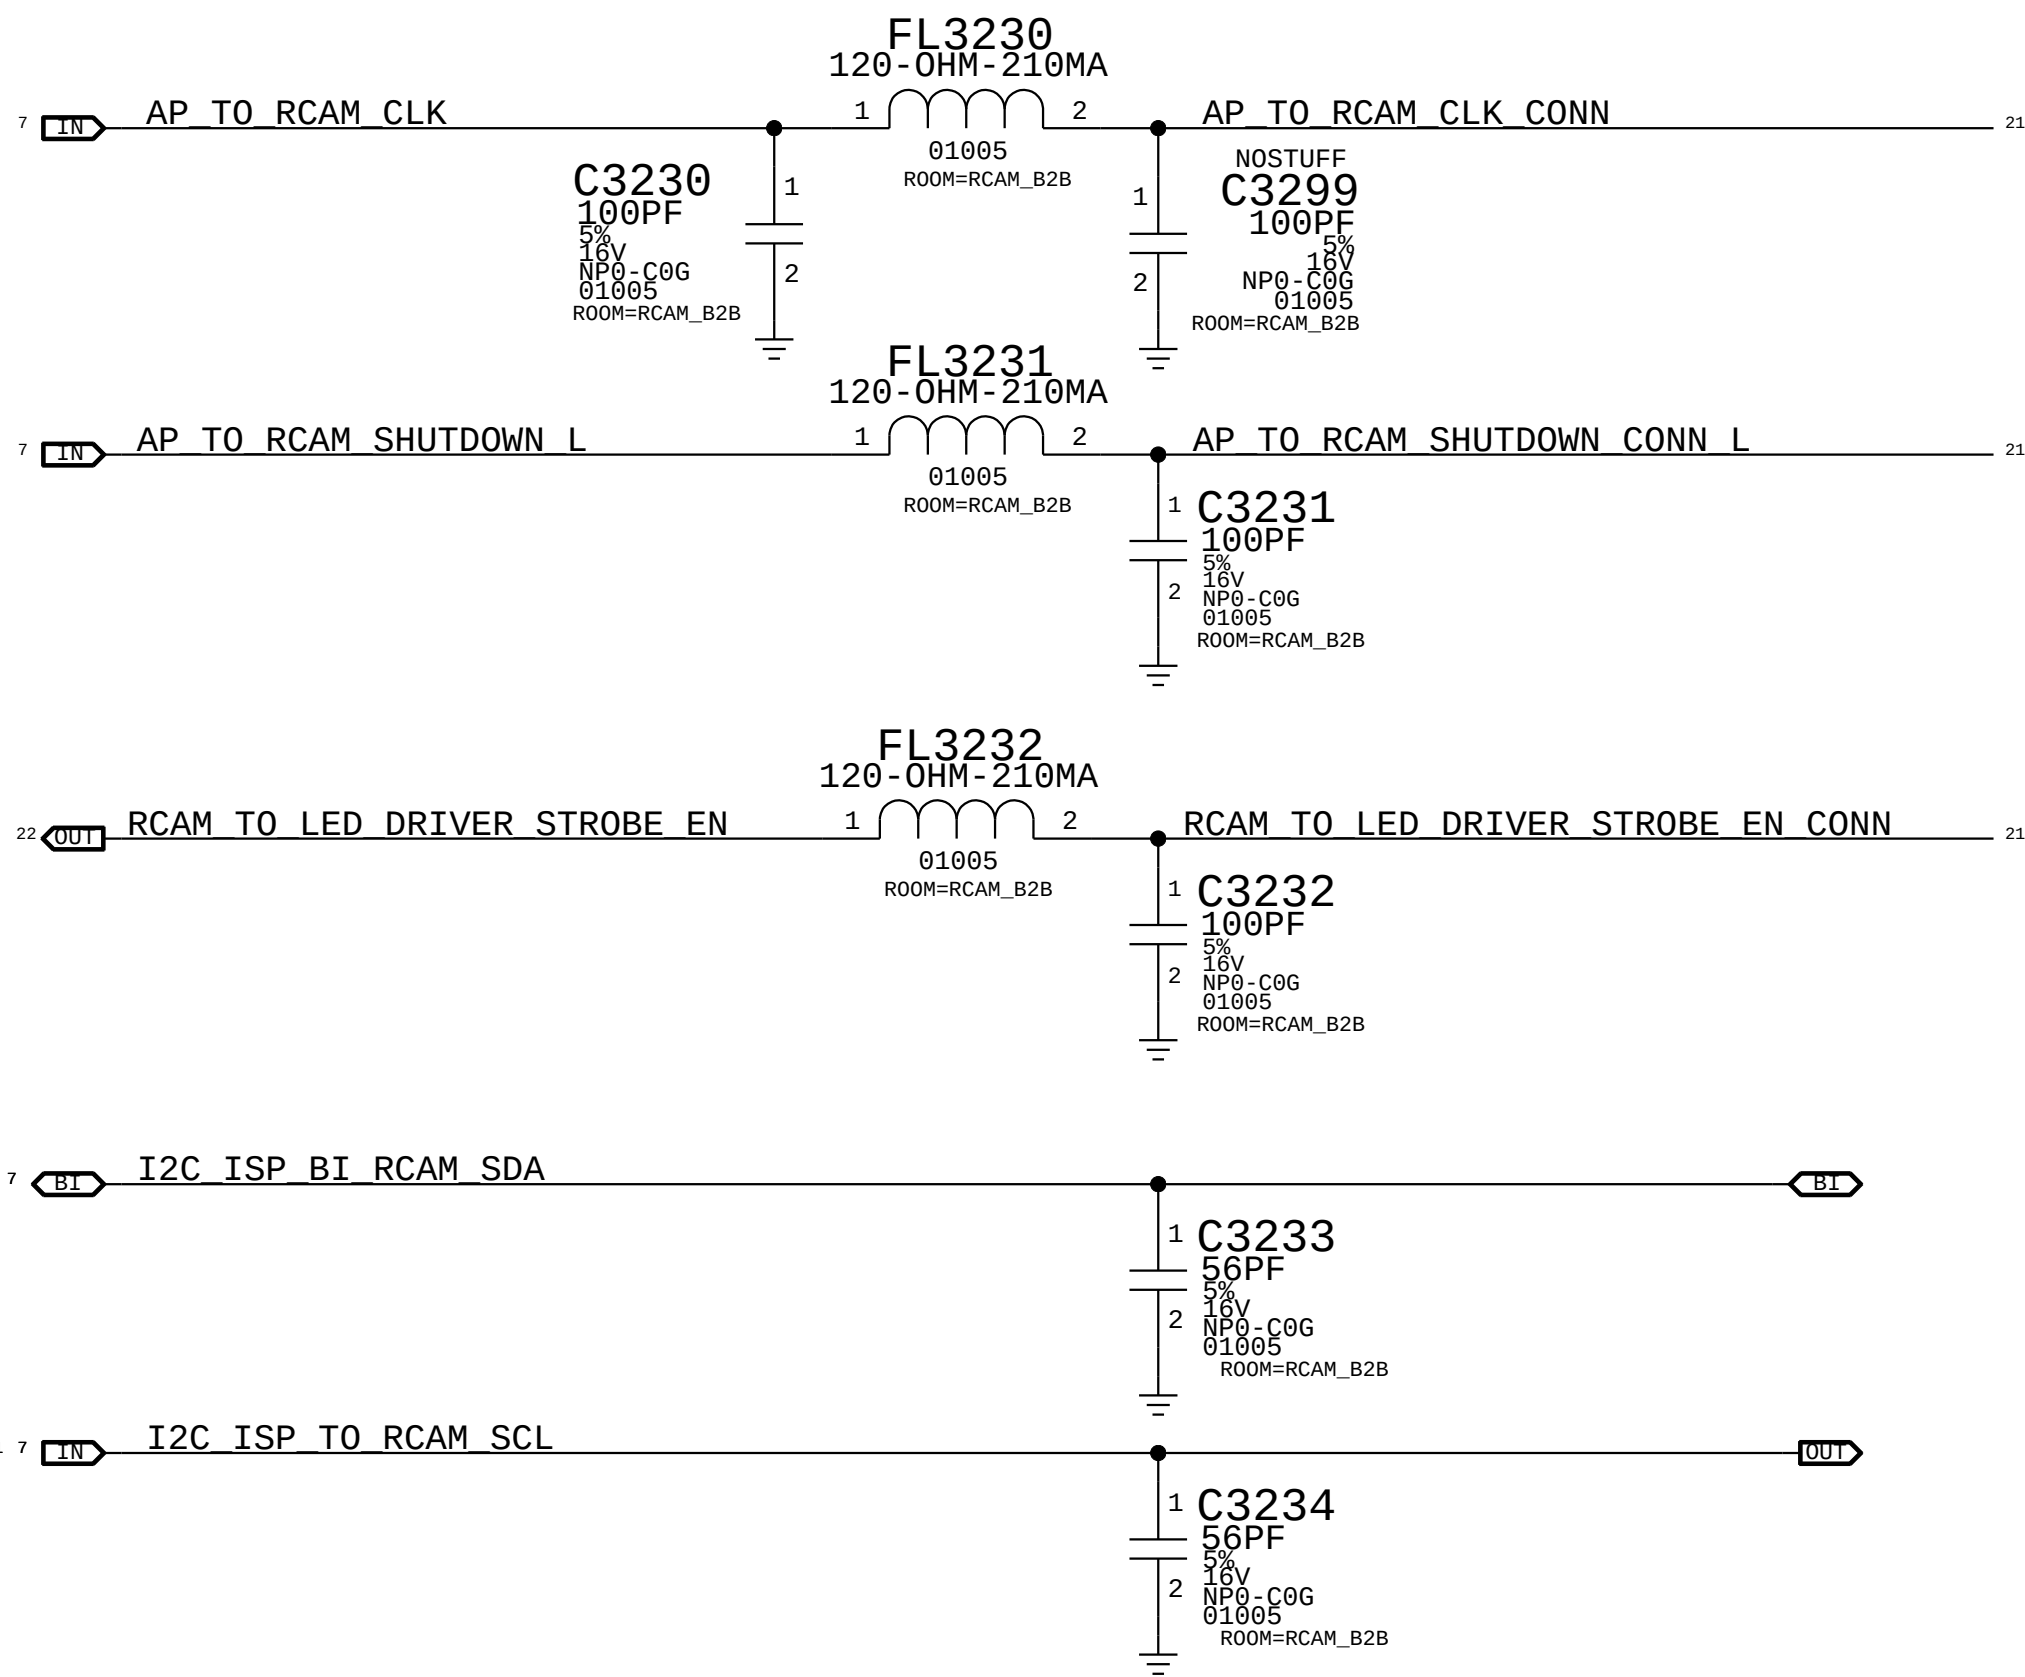


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

APN: 353S3899



迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188



迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188



迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188


APN: 338S1285



迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

ARC DRIVER

APN: 338S1285

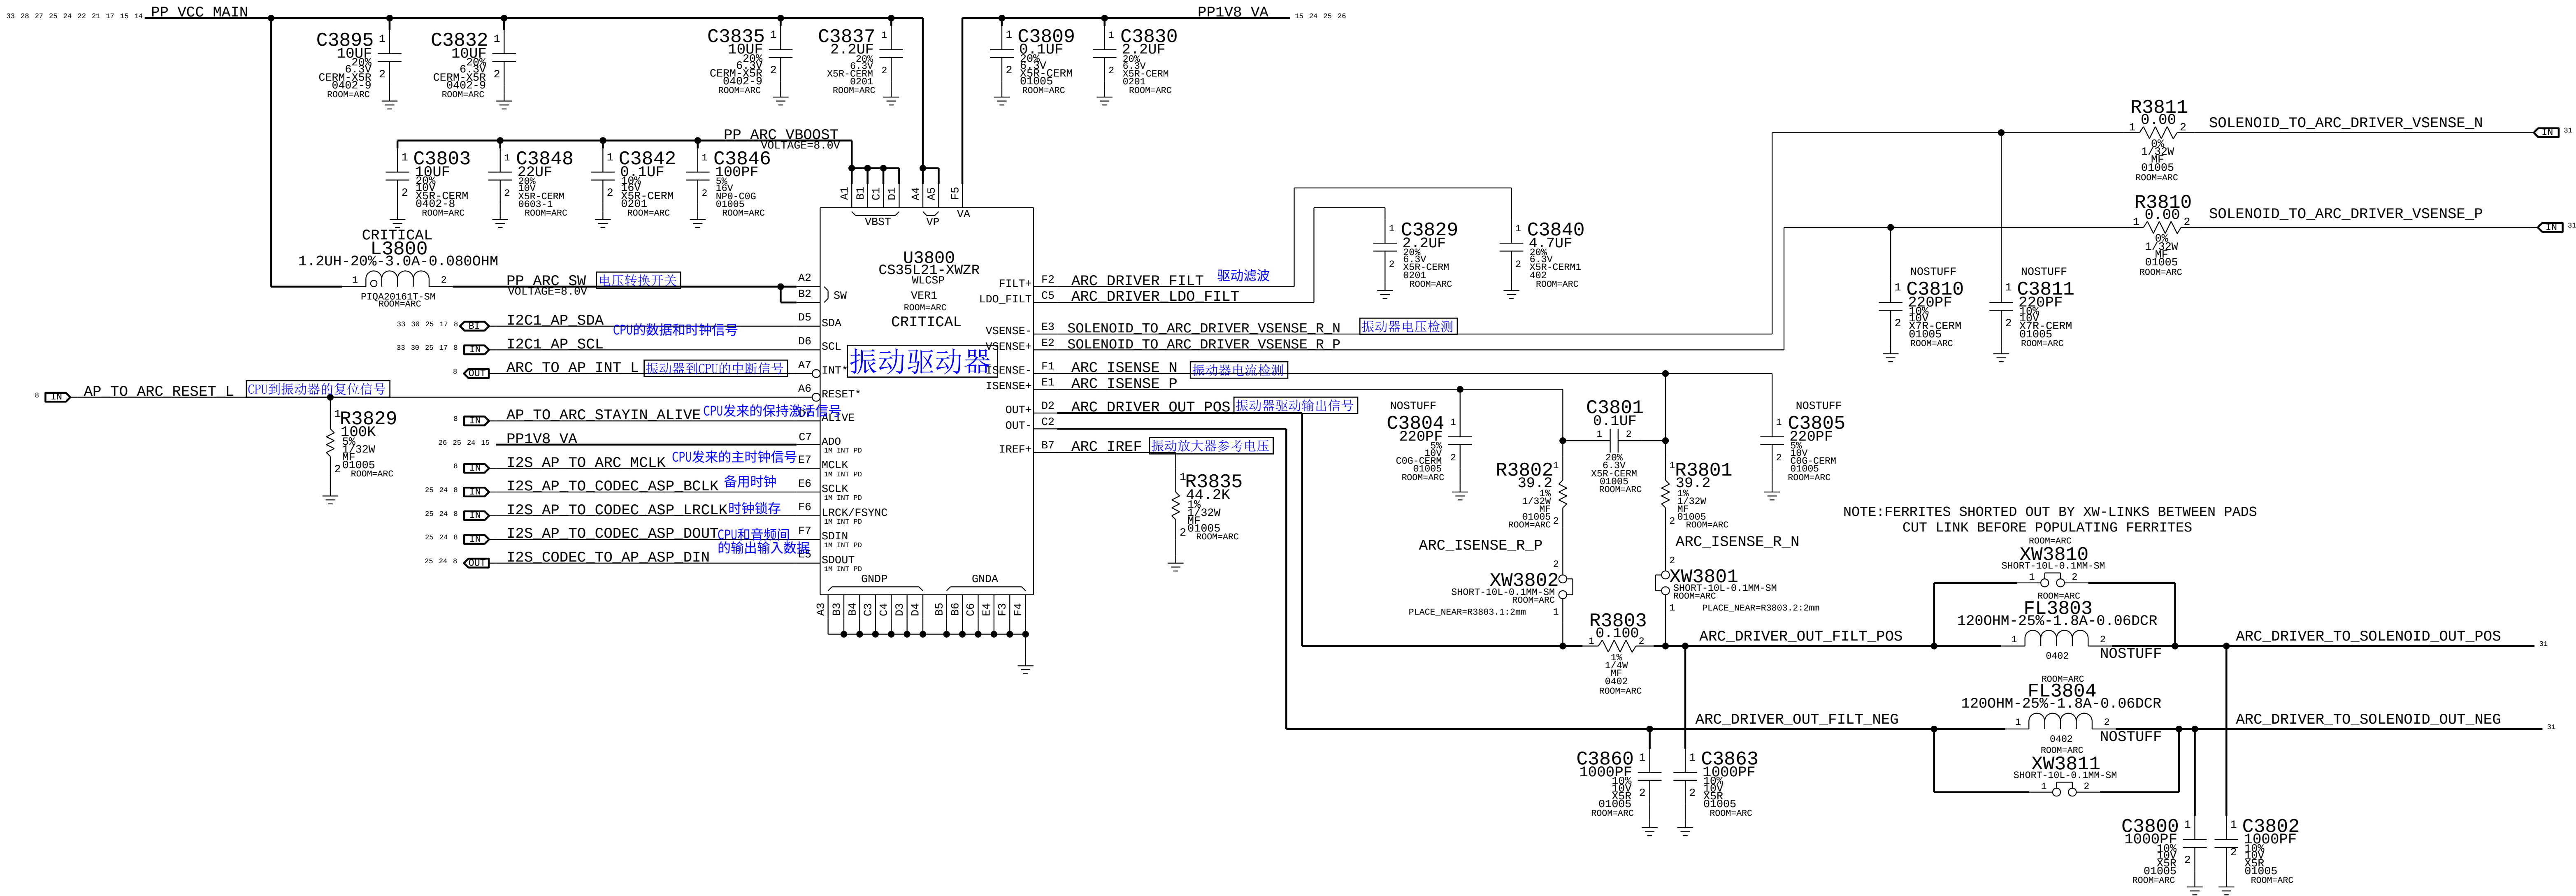


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

DISPLAY & TOUCH - POWER SUPPLIES

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188


CHESTNUT DISPLAY PMU

APN: 338S1172

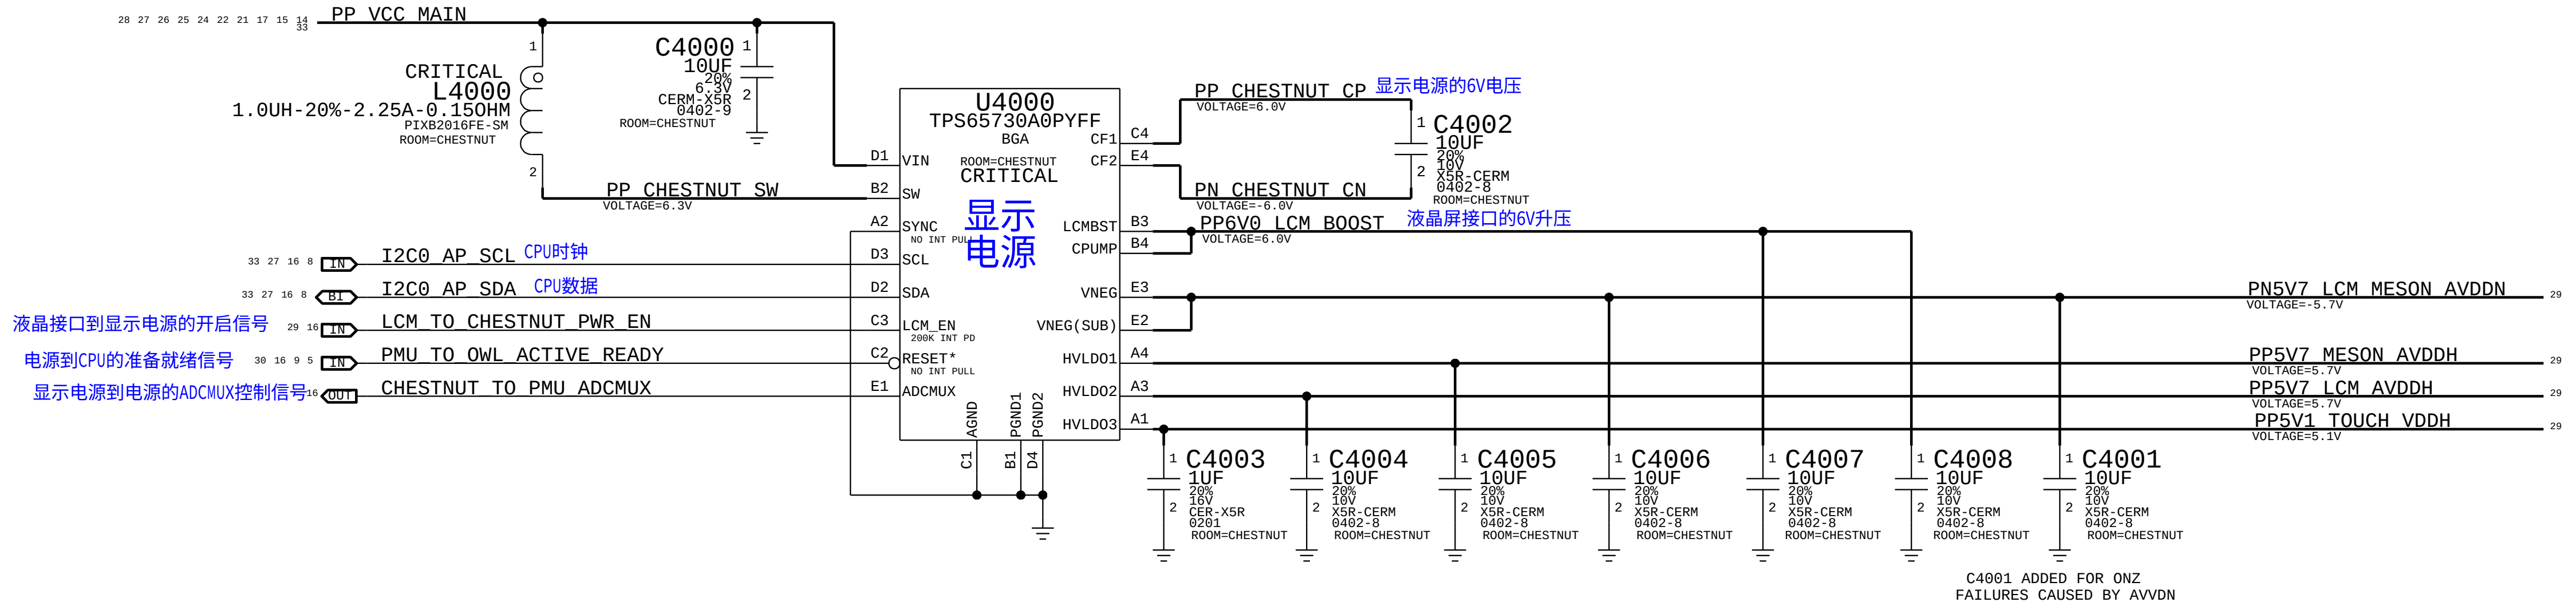


LED BACKLIGHT DRIVER

APN: 353S00407

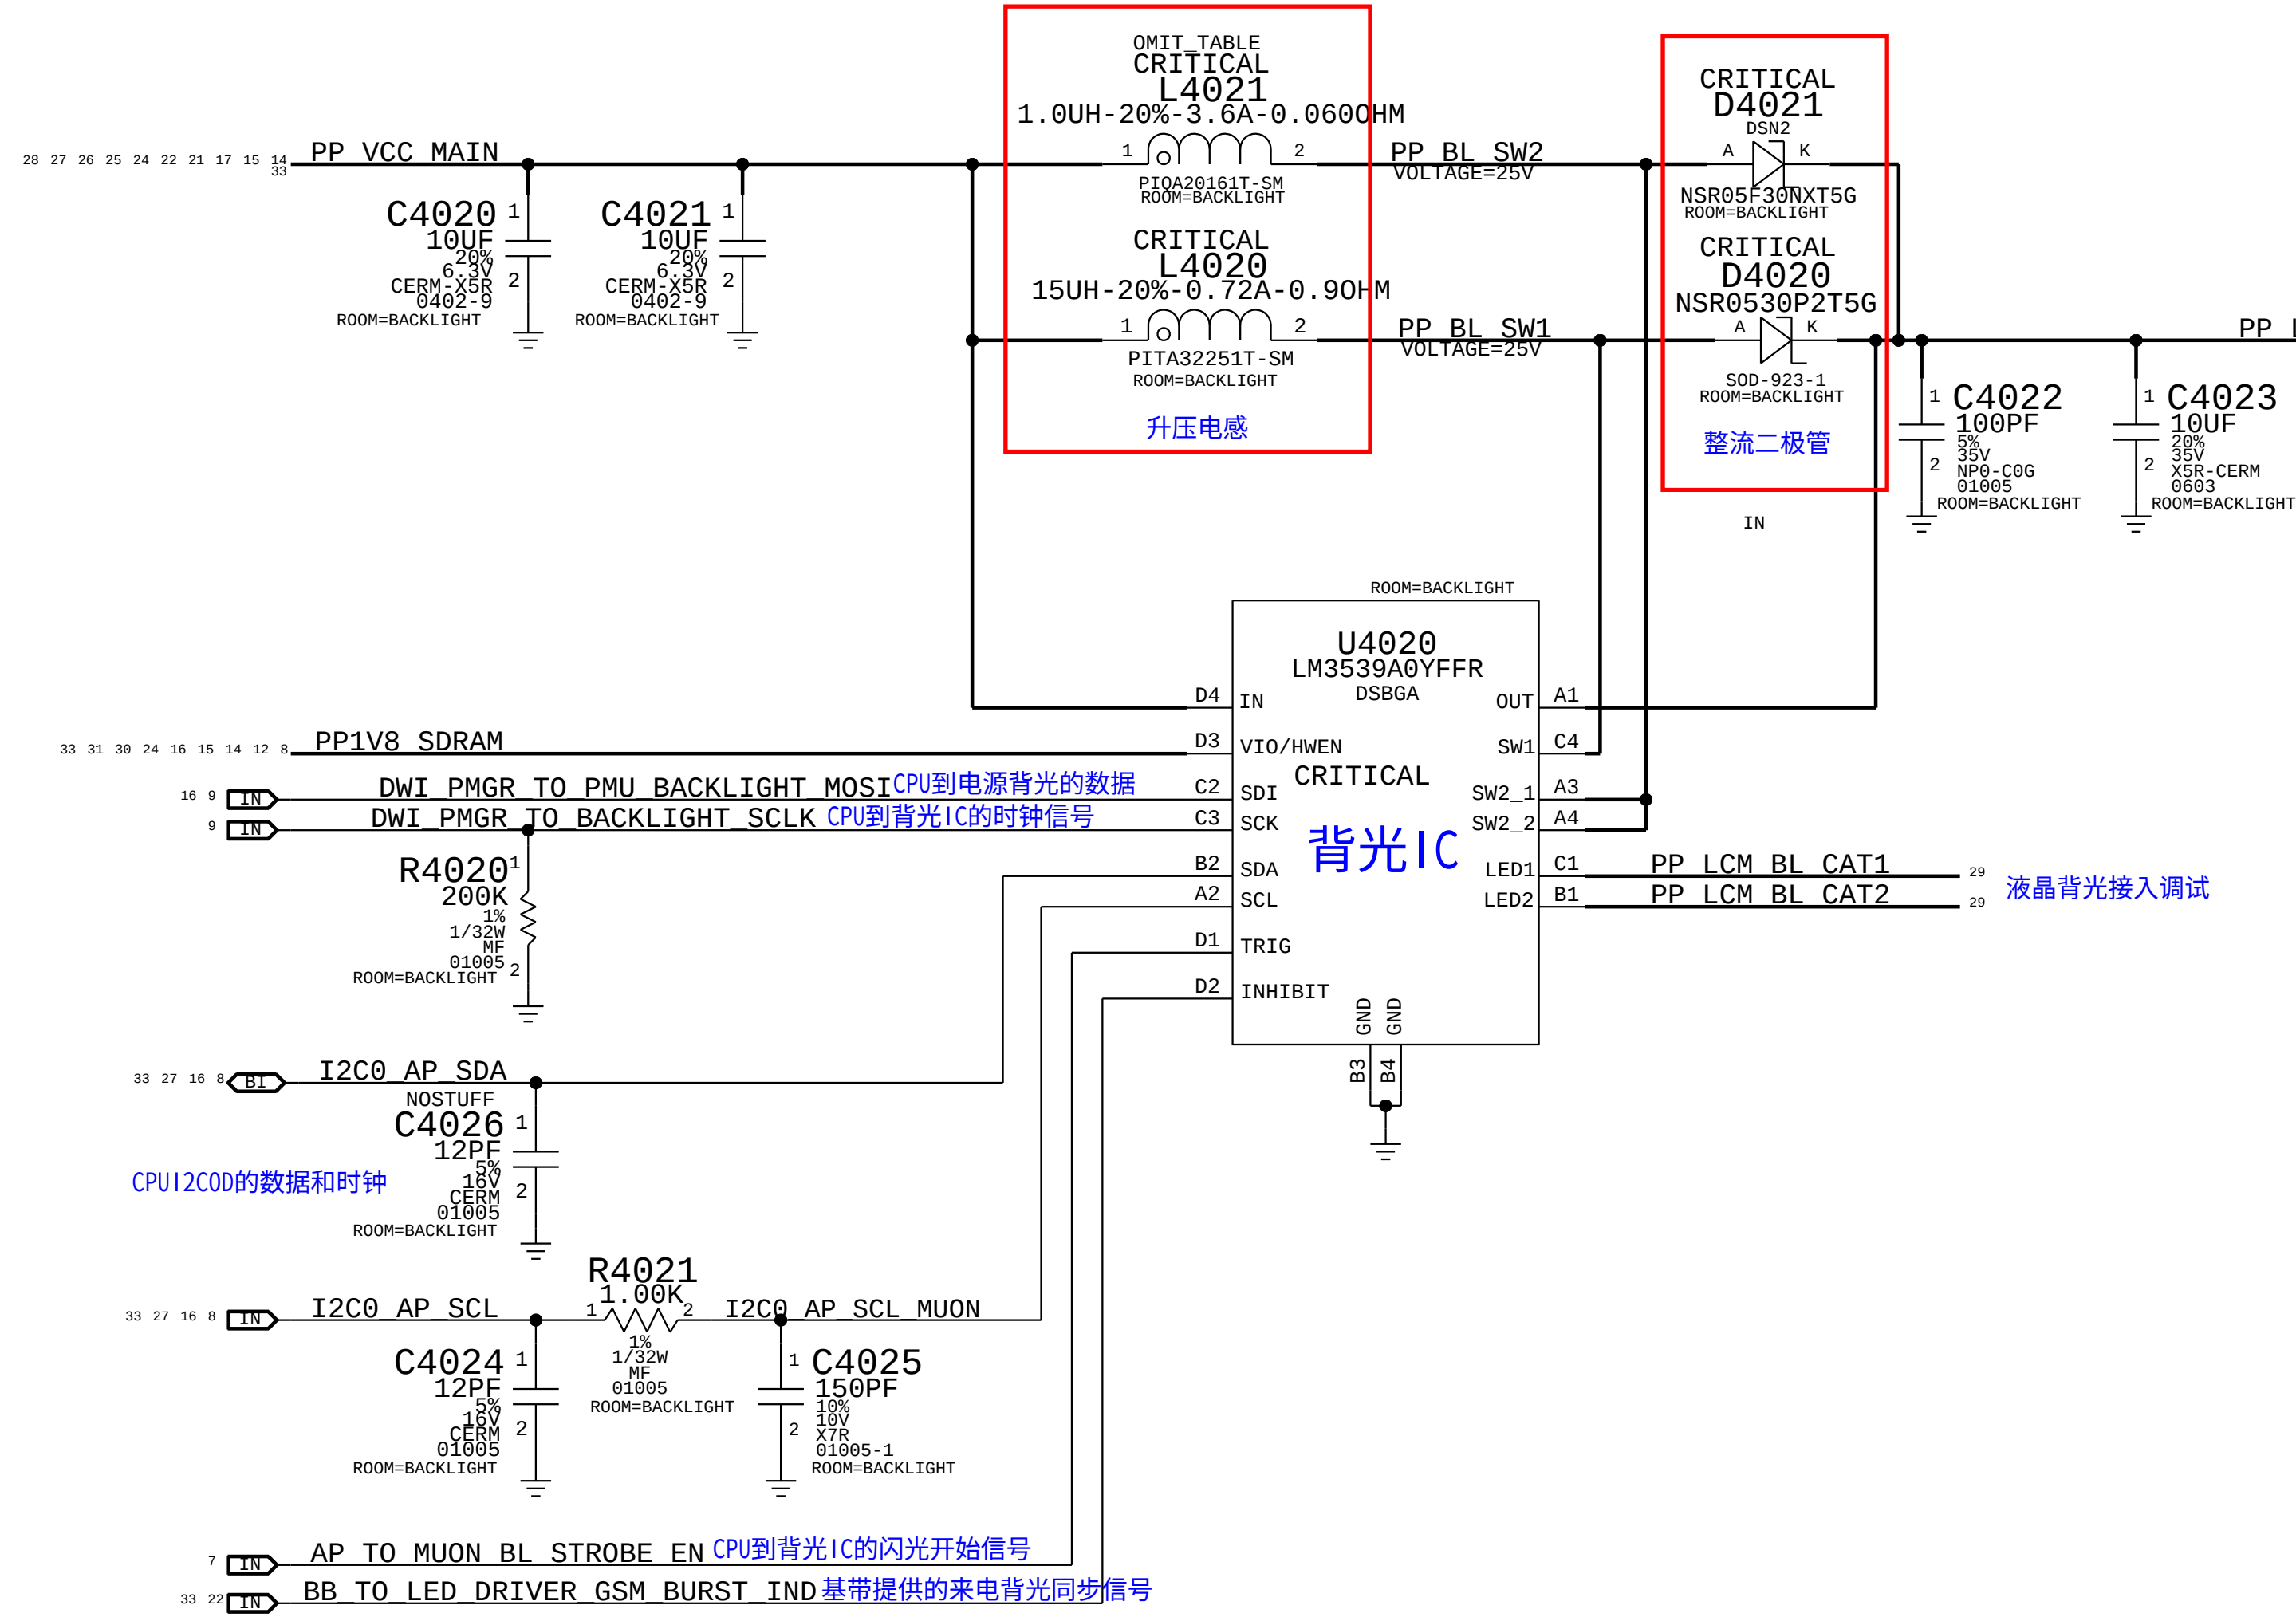

MOJAVE MESA BOOST

APN: 353S00671

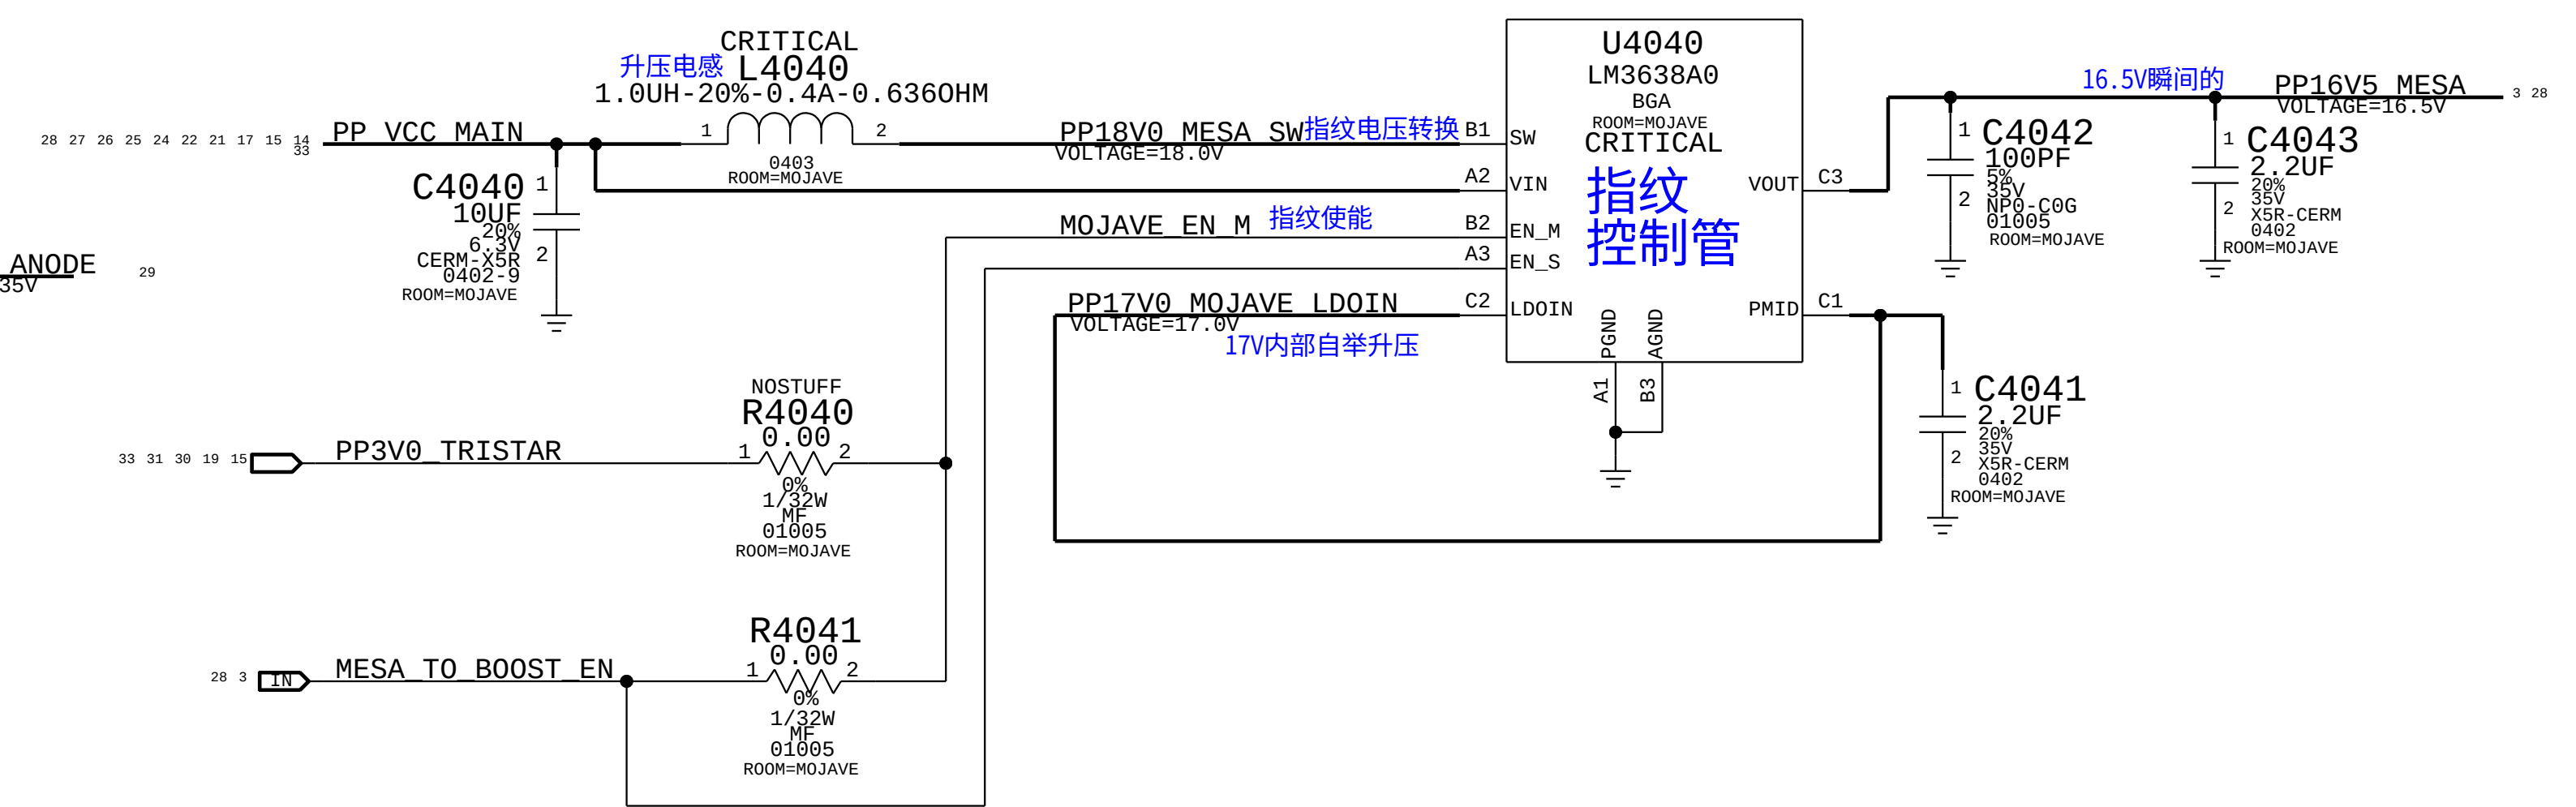

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

MAMBA & MESA (M&M) FLEX


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

MAMBA & MESA CONNECTOR

THIS ONE ON MLB ---> 516S00056 (RCPT)
516S00057 (PLUG)


CRITICAL
ROOM=MAMBA_MESA
J4100
BB35CRA223A
F-ST-SM

指纹 3D触摸连接座

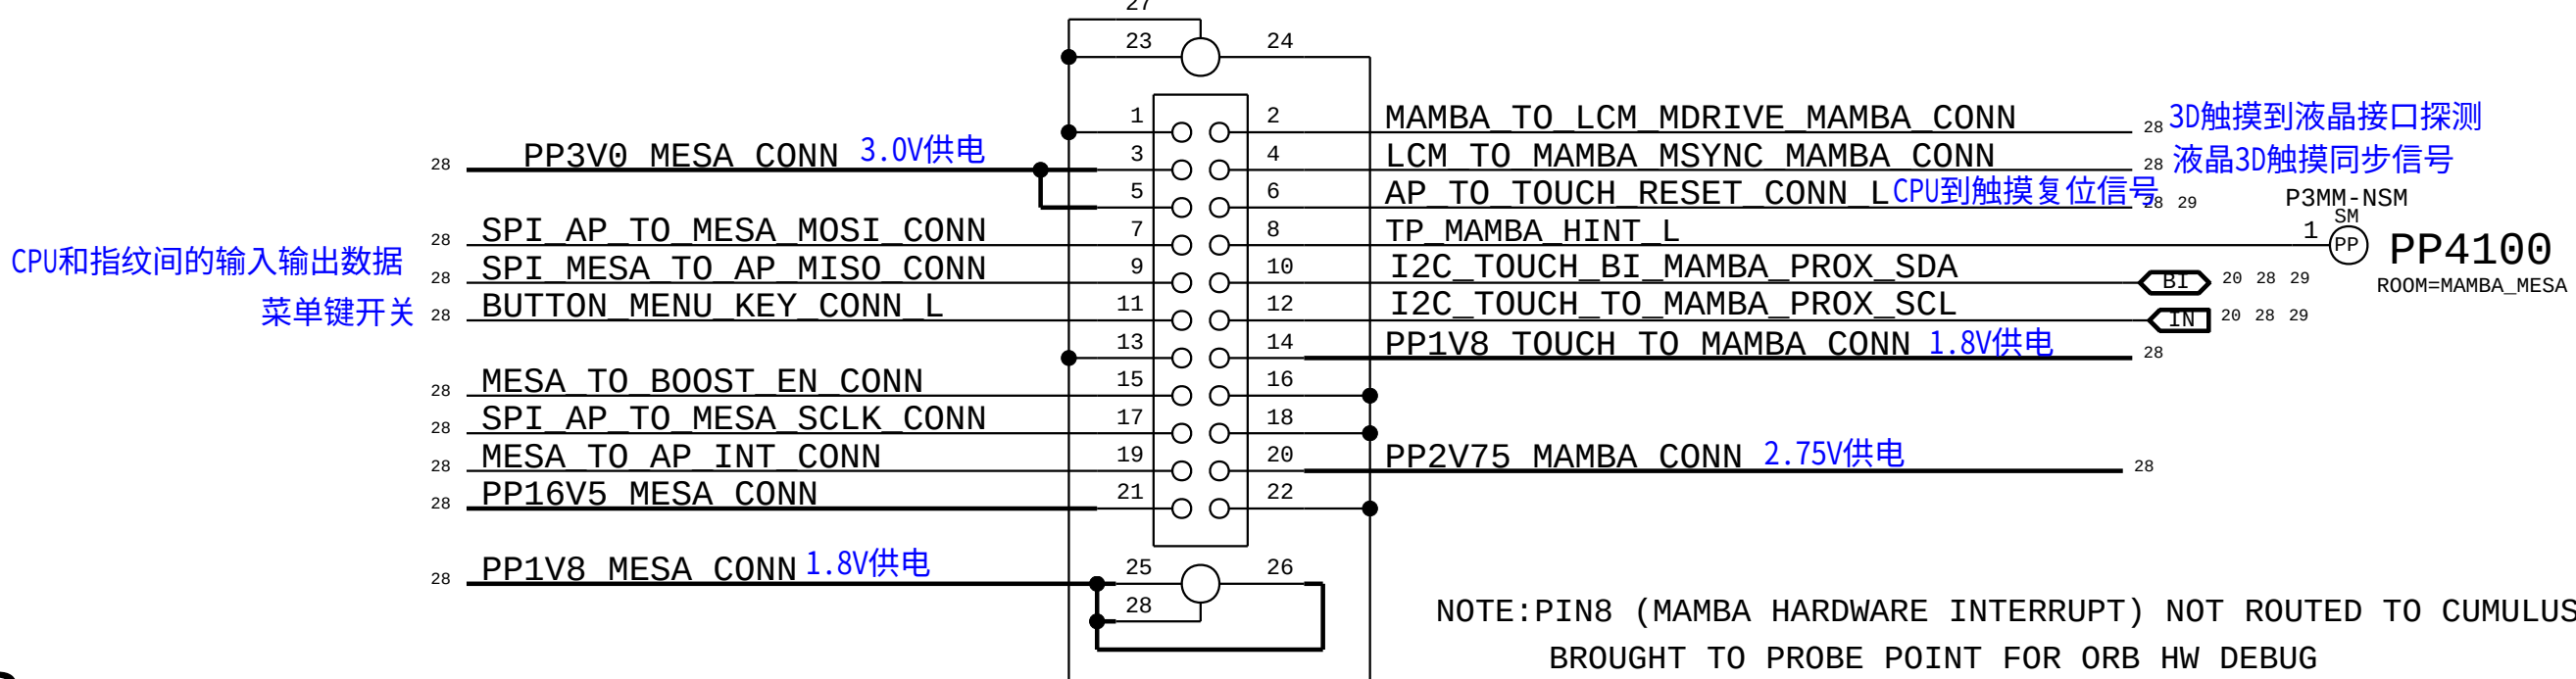


MAMBA POWER 3D触摸电源


NOTE: OUTPUT IMPDEANCE MUST BE >0.01-OHM
IN ORDER TO MEET CAP ESR REQUIREMENT PER LDO SPEC.

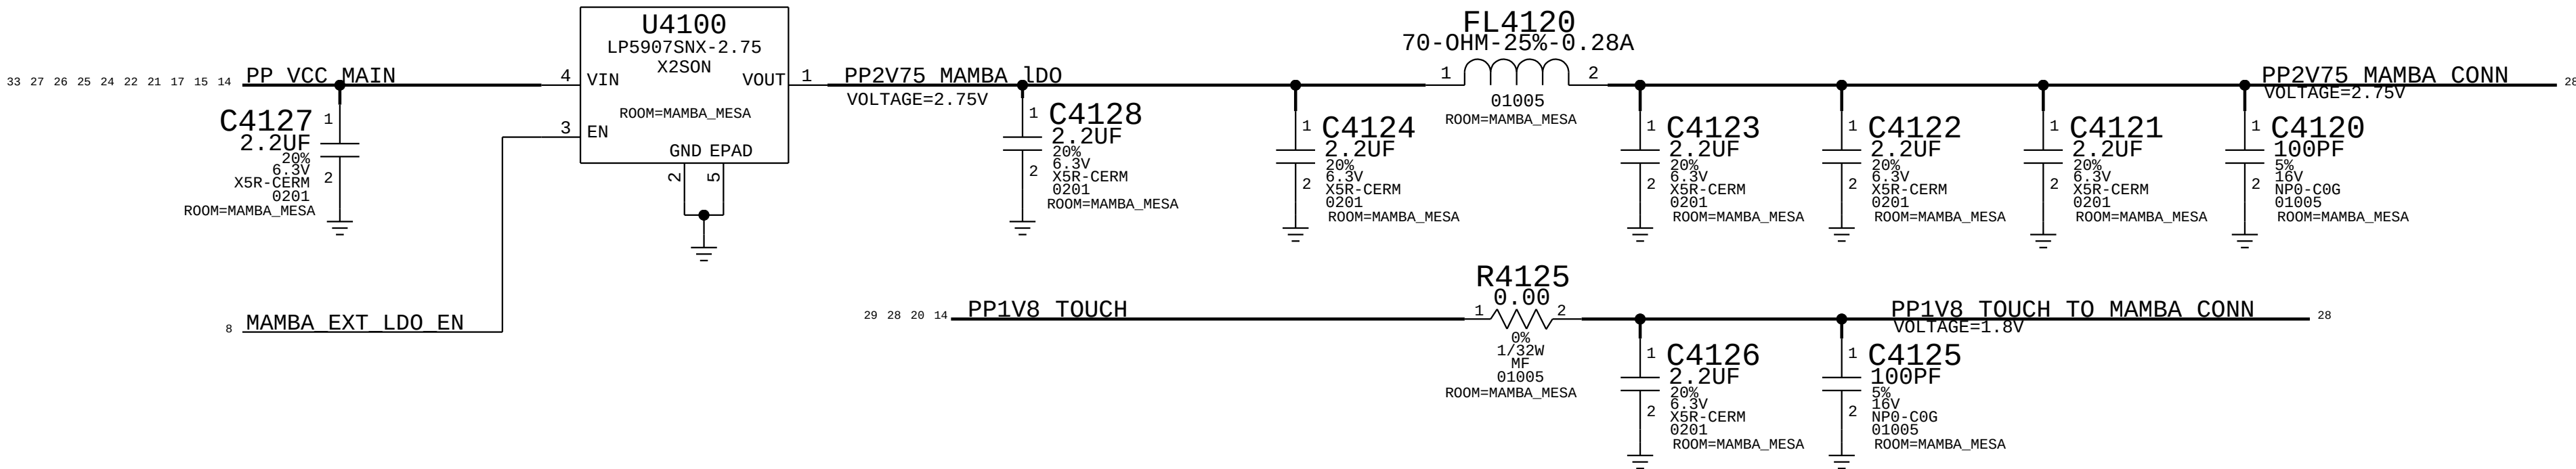


MAMBA DIGITAL I/O 3D触摸数字数据接口

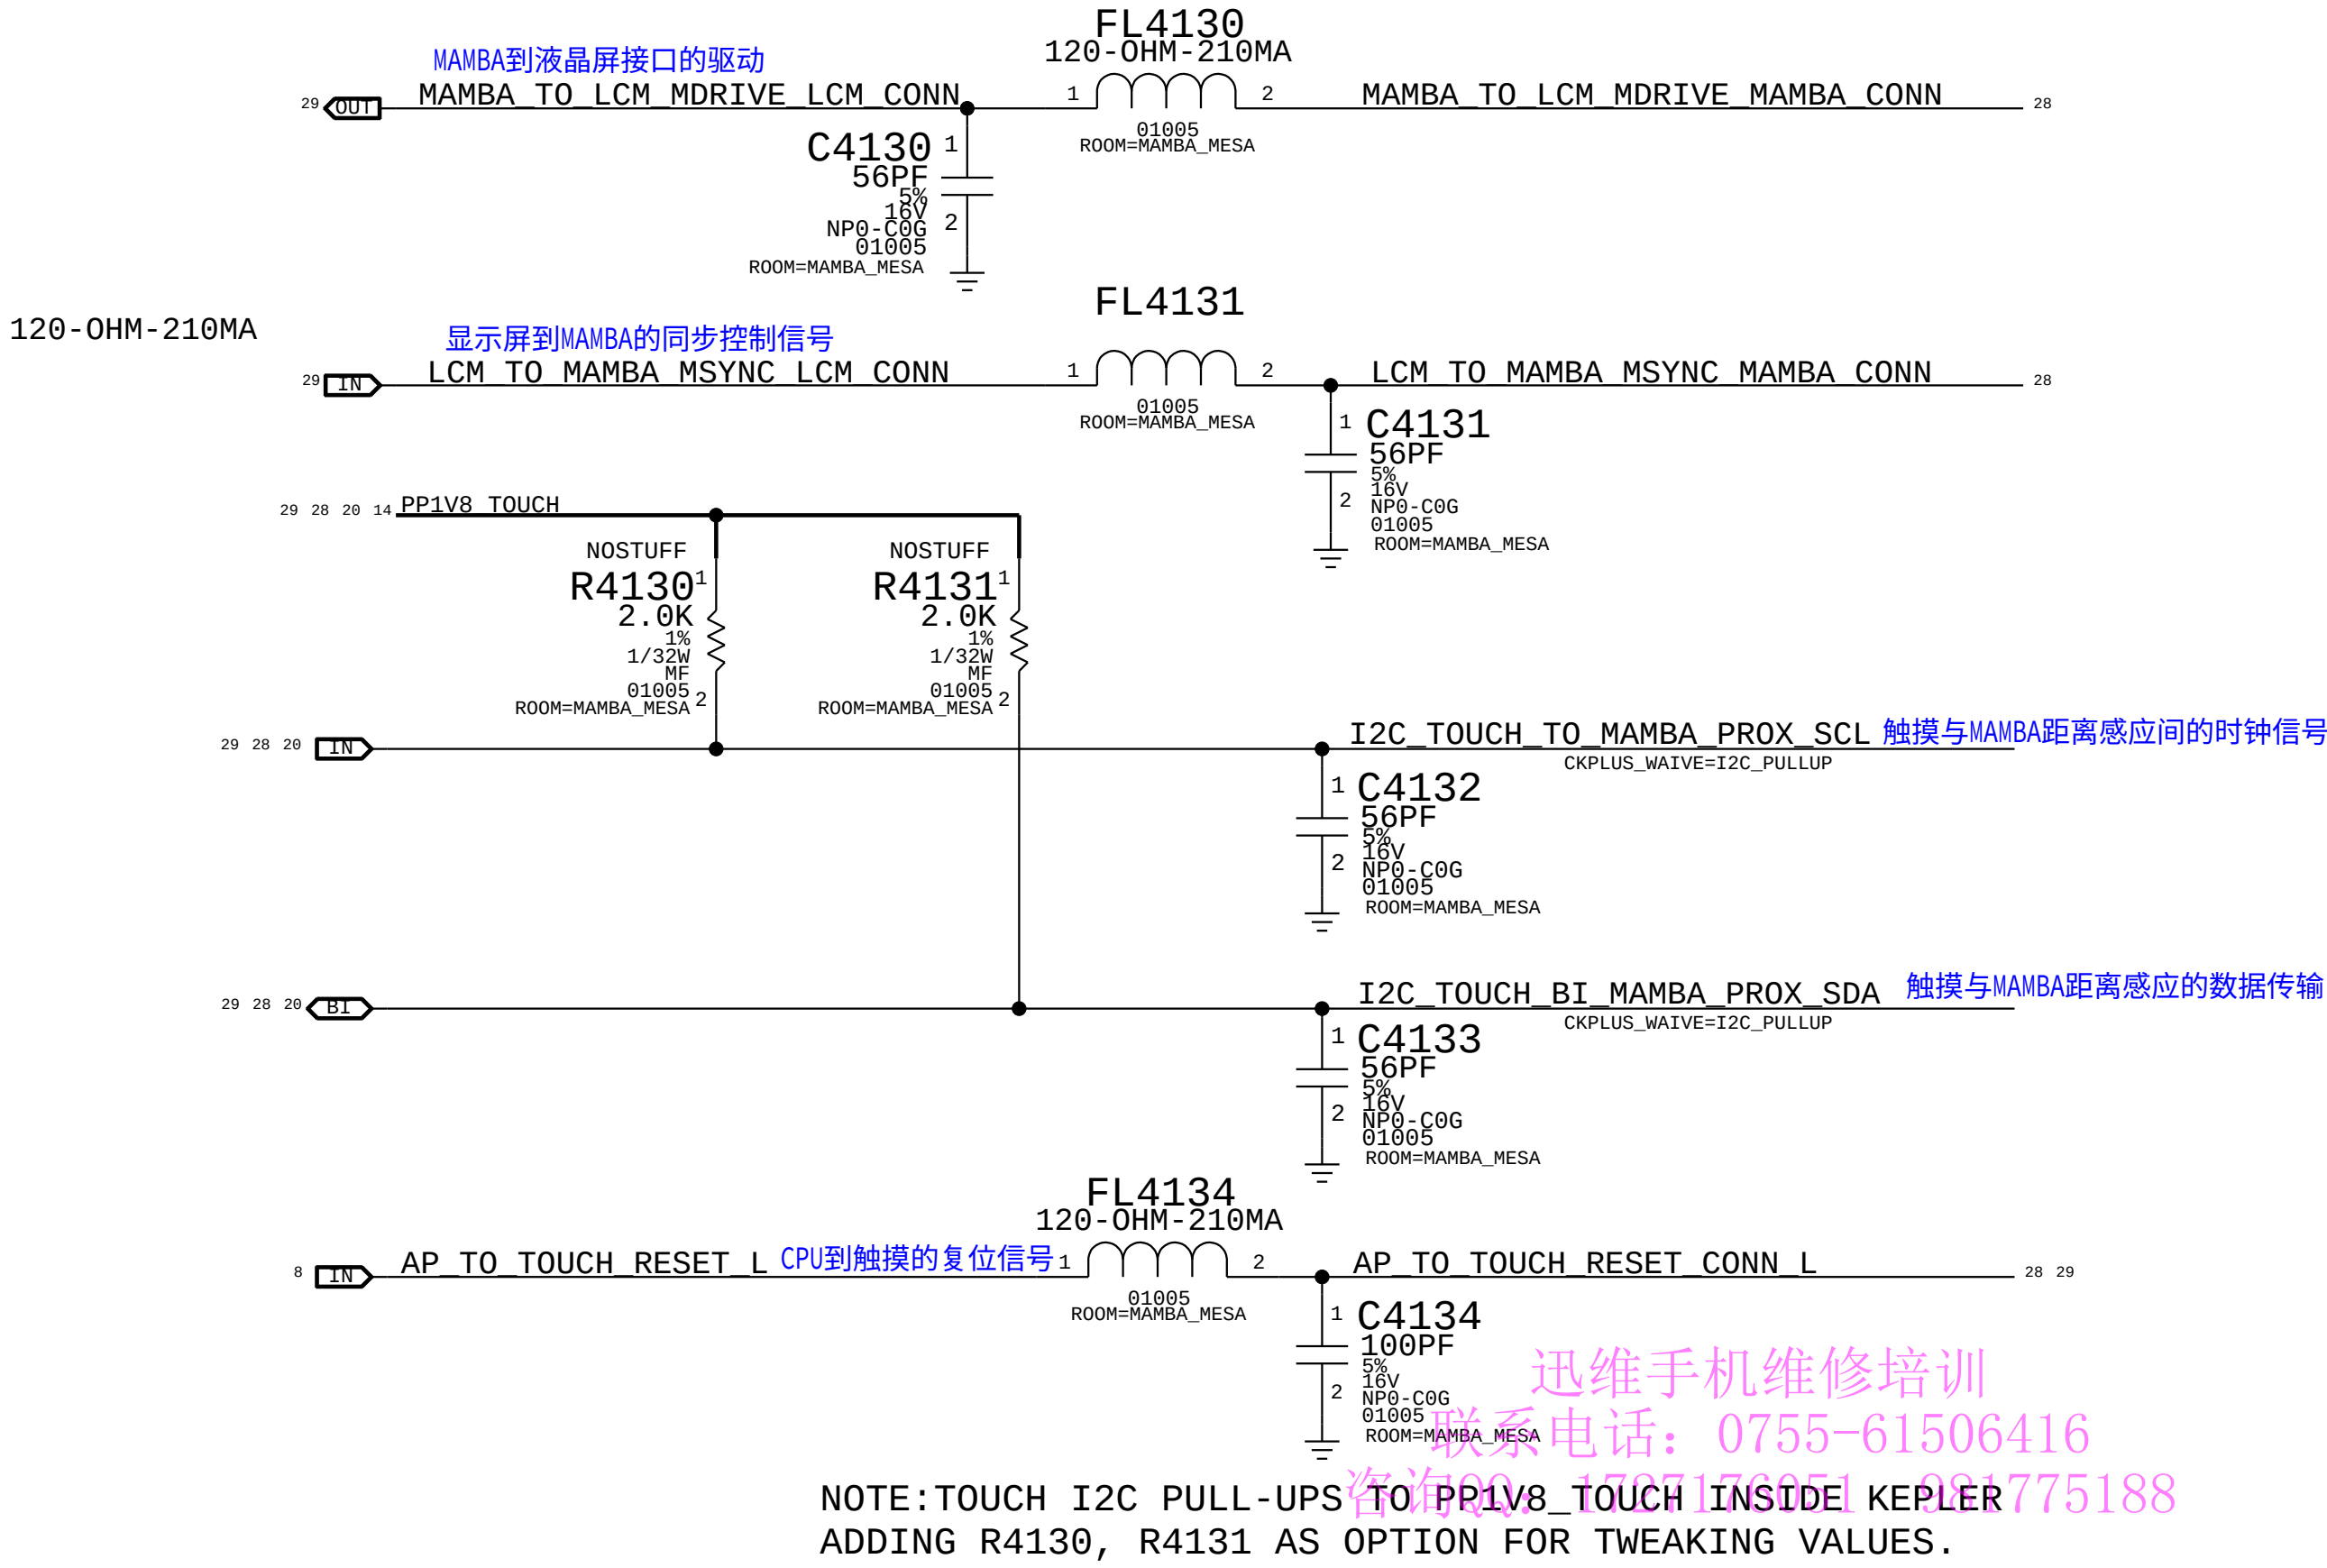

MESA POWER 指纹供电

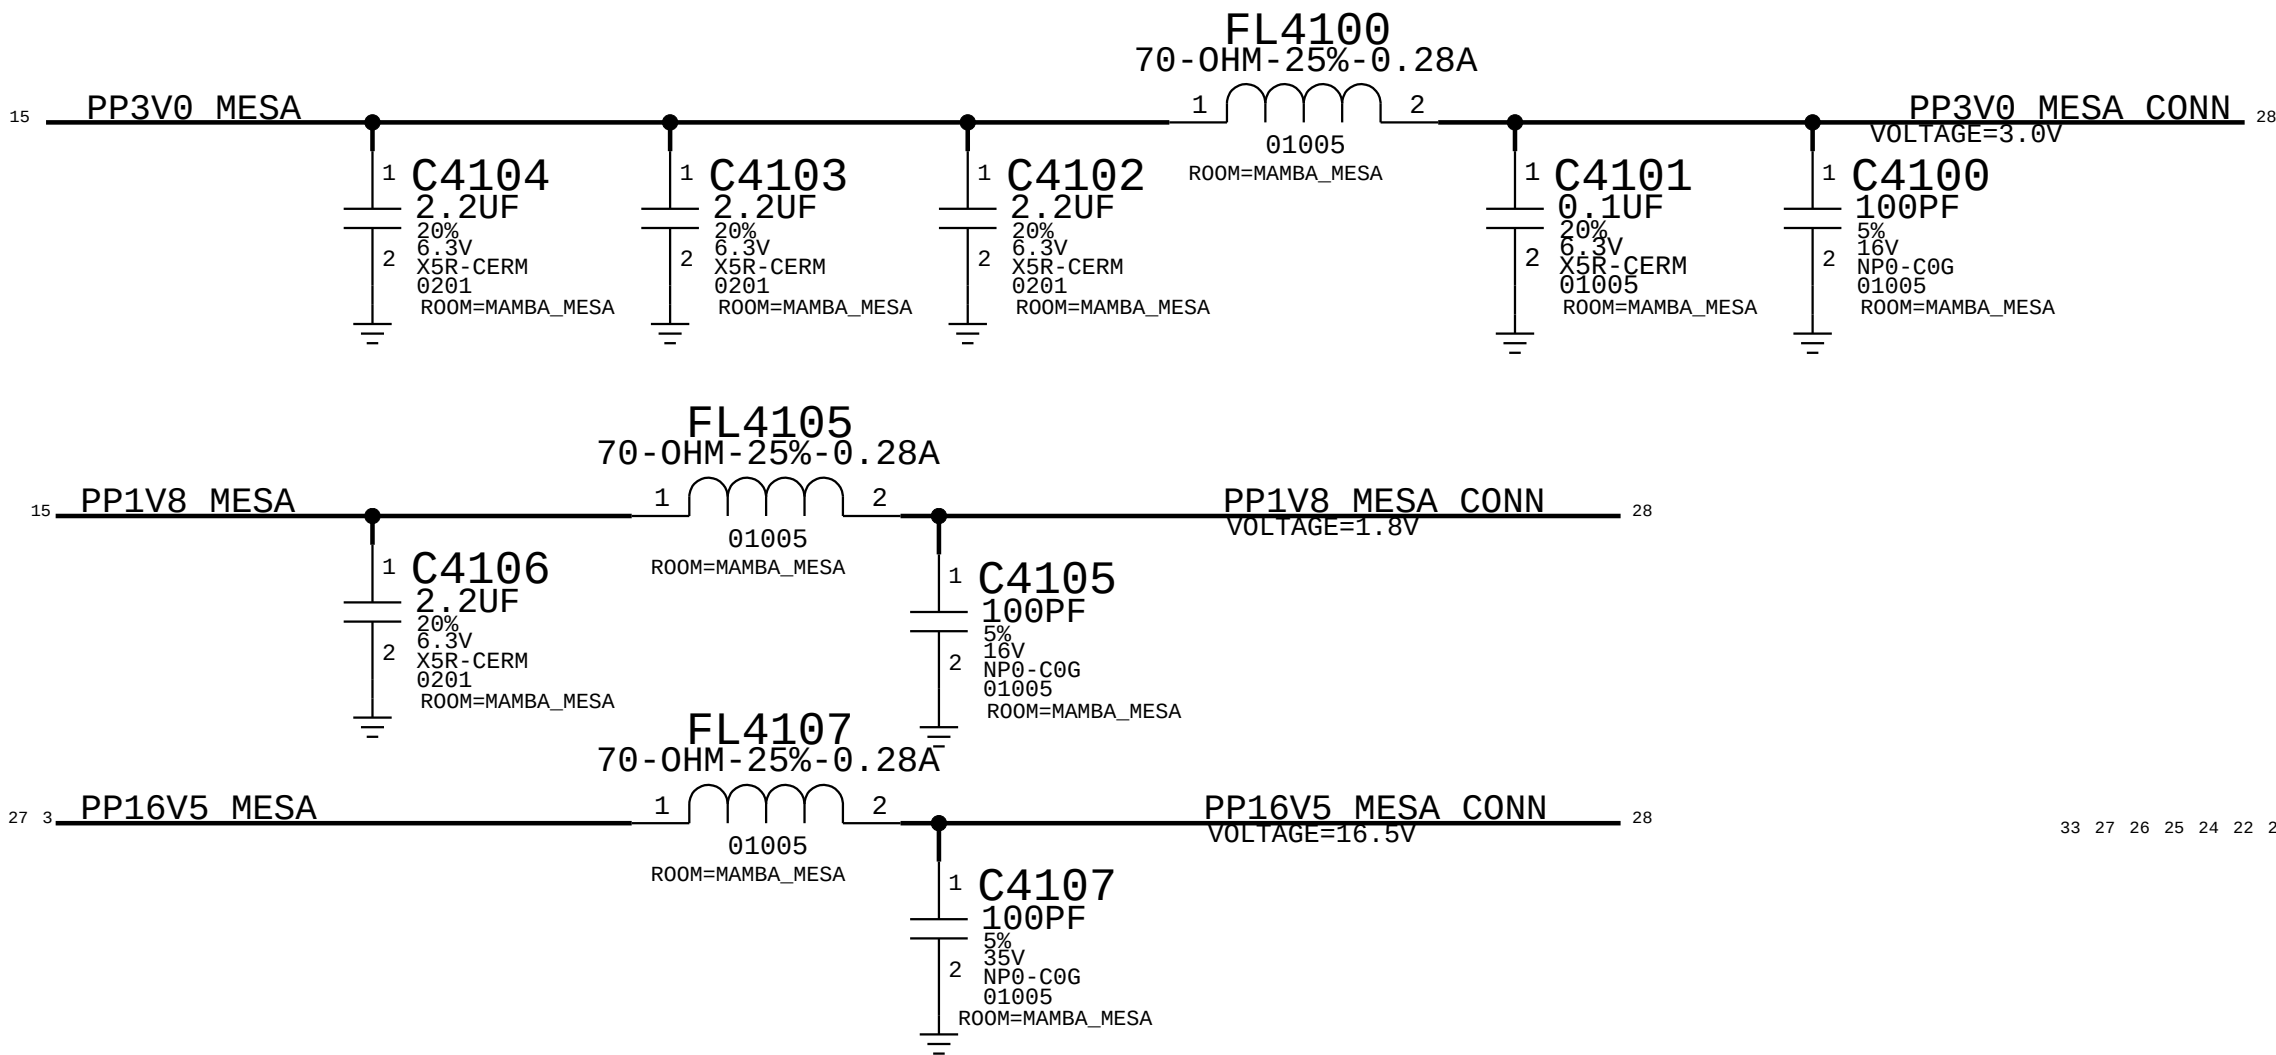

MESA DIGITAL I/O 指纹数据

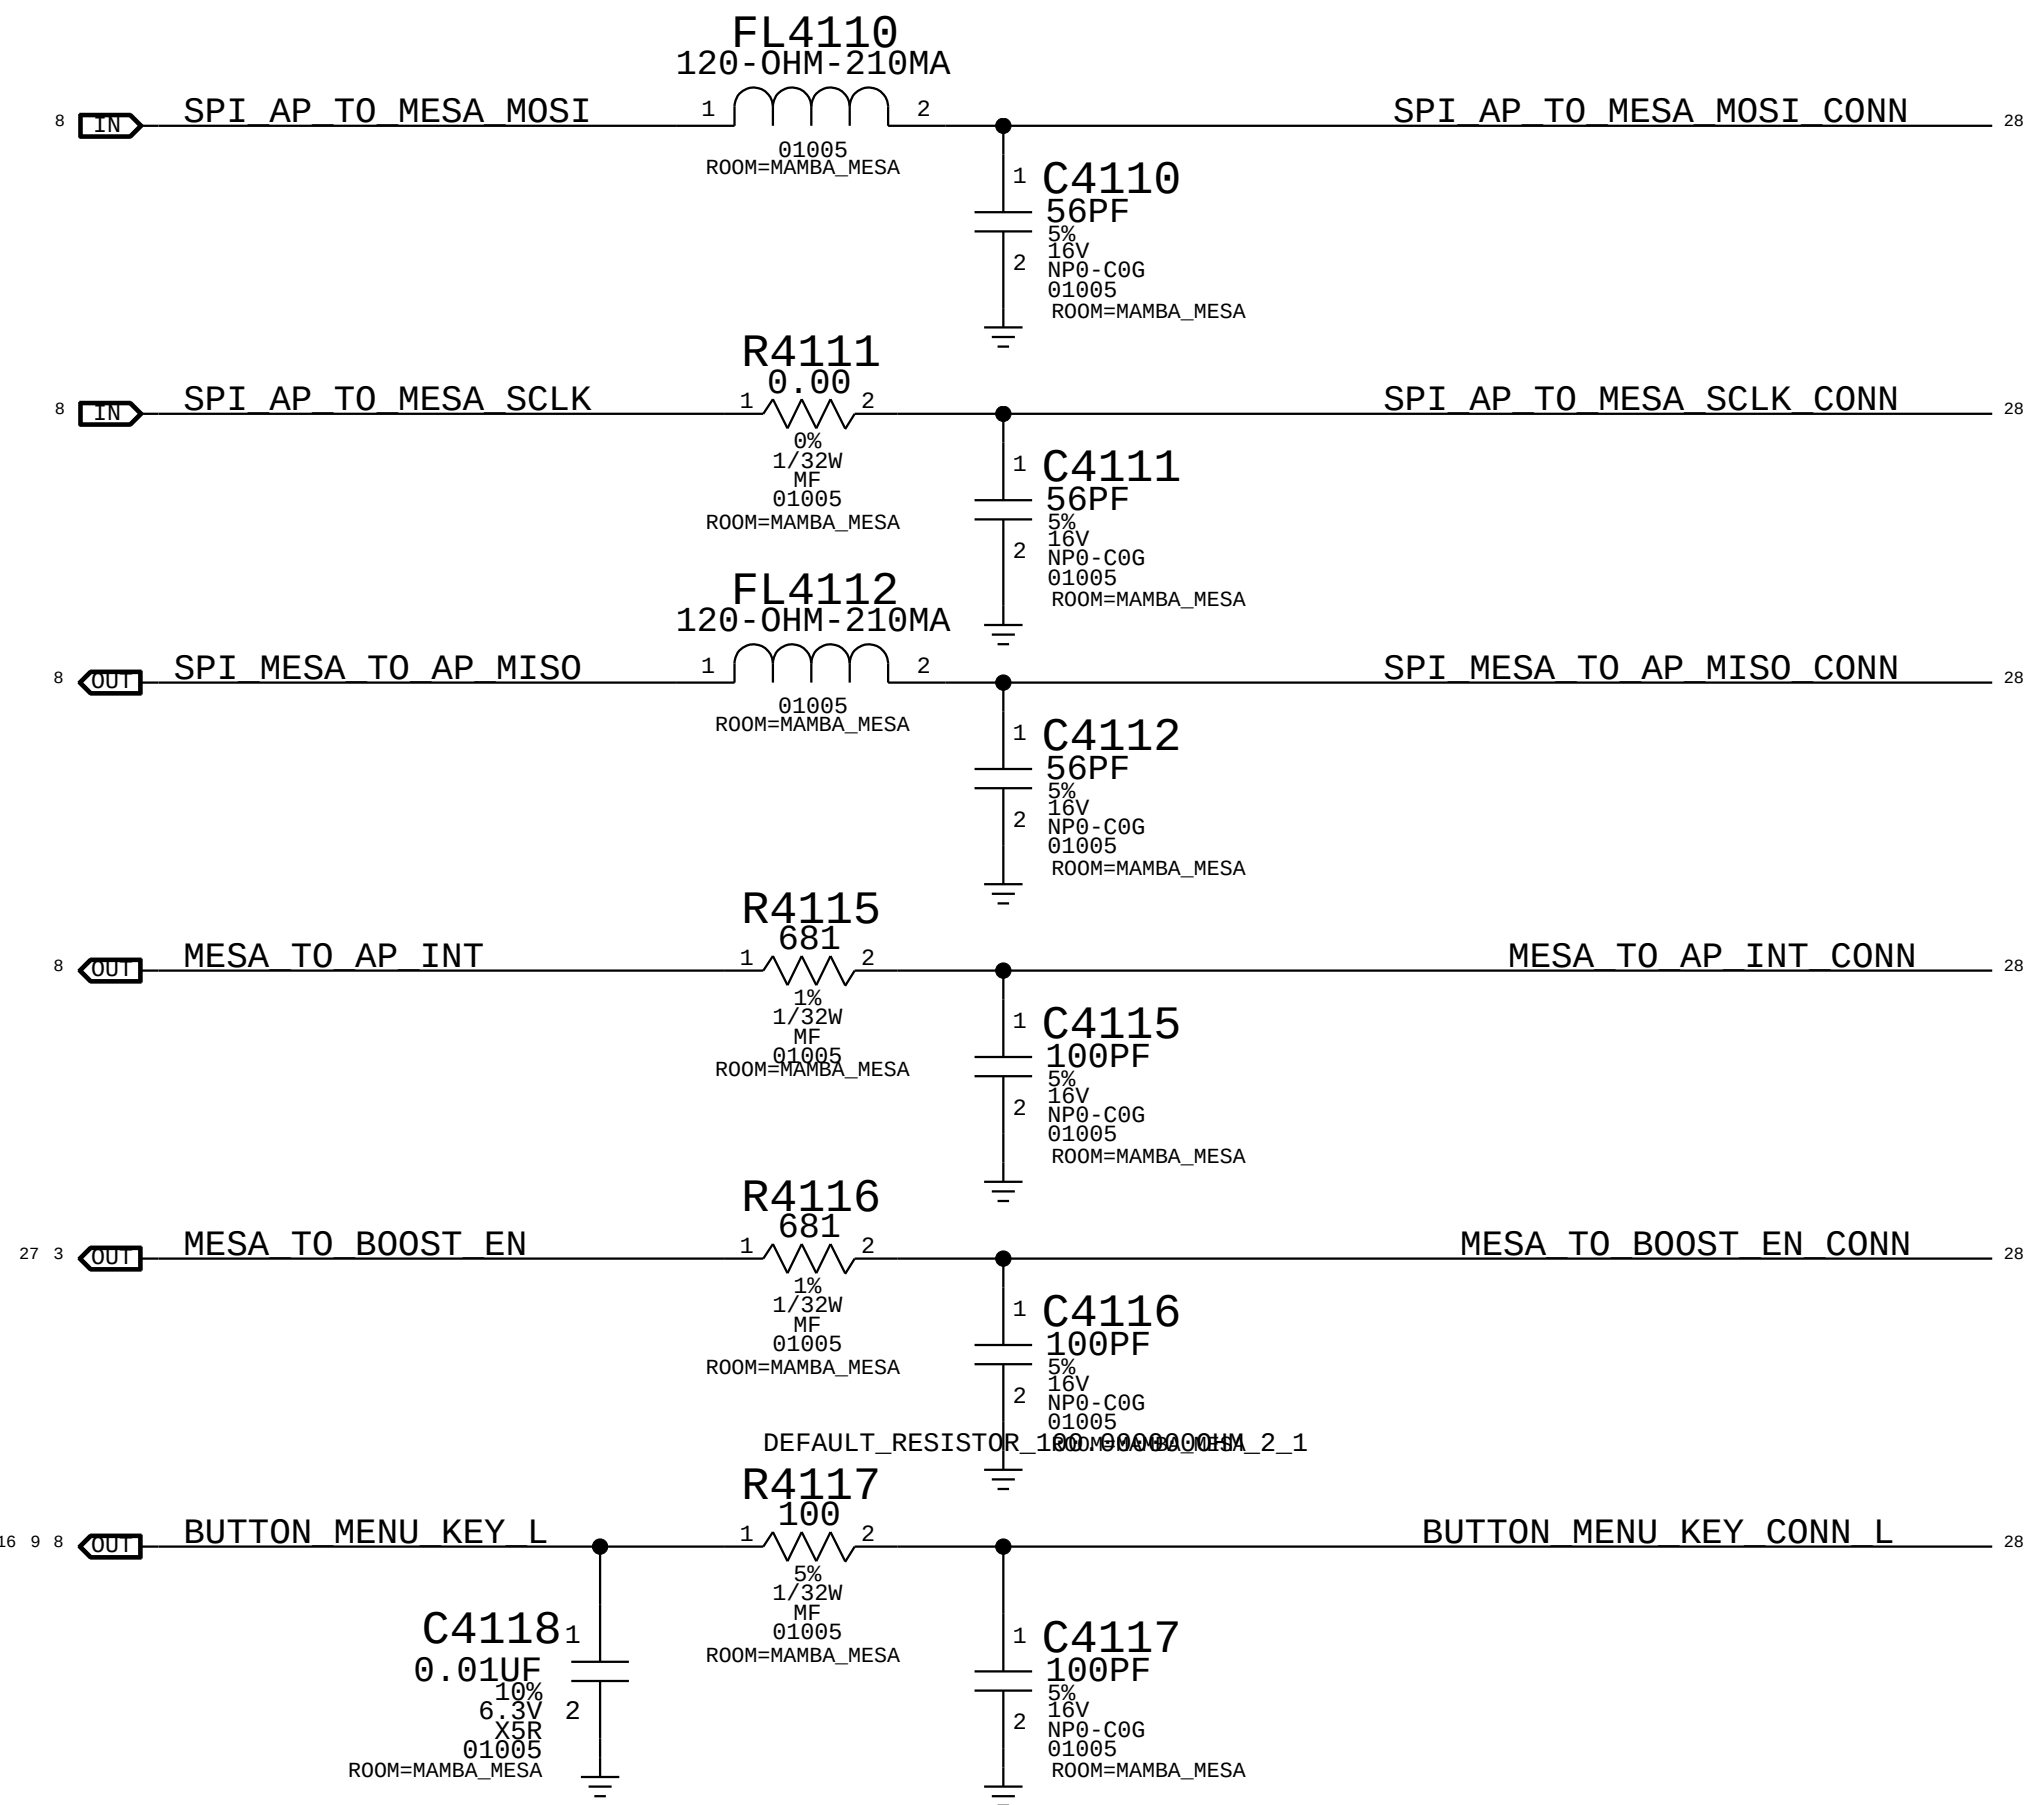


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188



DISPLAY & TOUCH FLEX 显示触摸线路


DISPLAY CONNECTOR

DISPLAY POWER

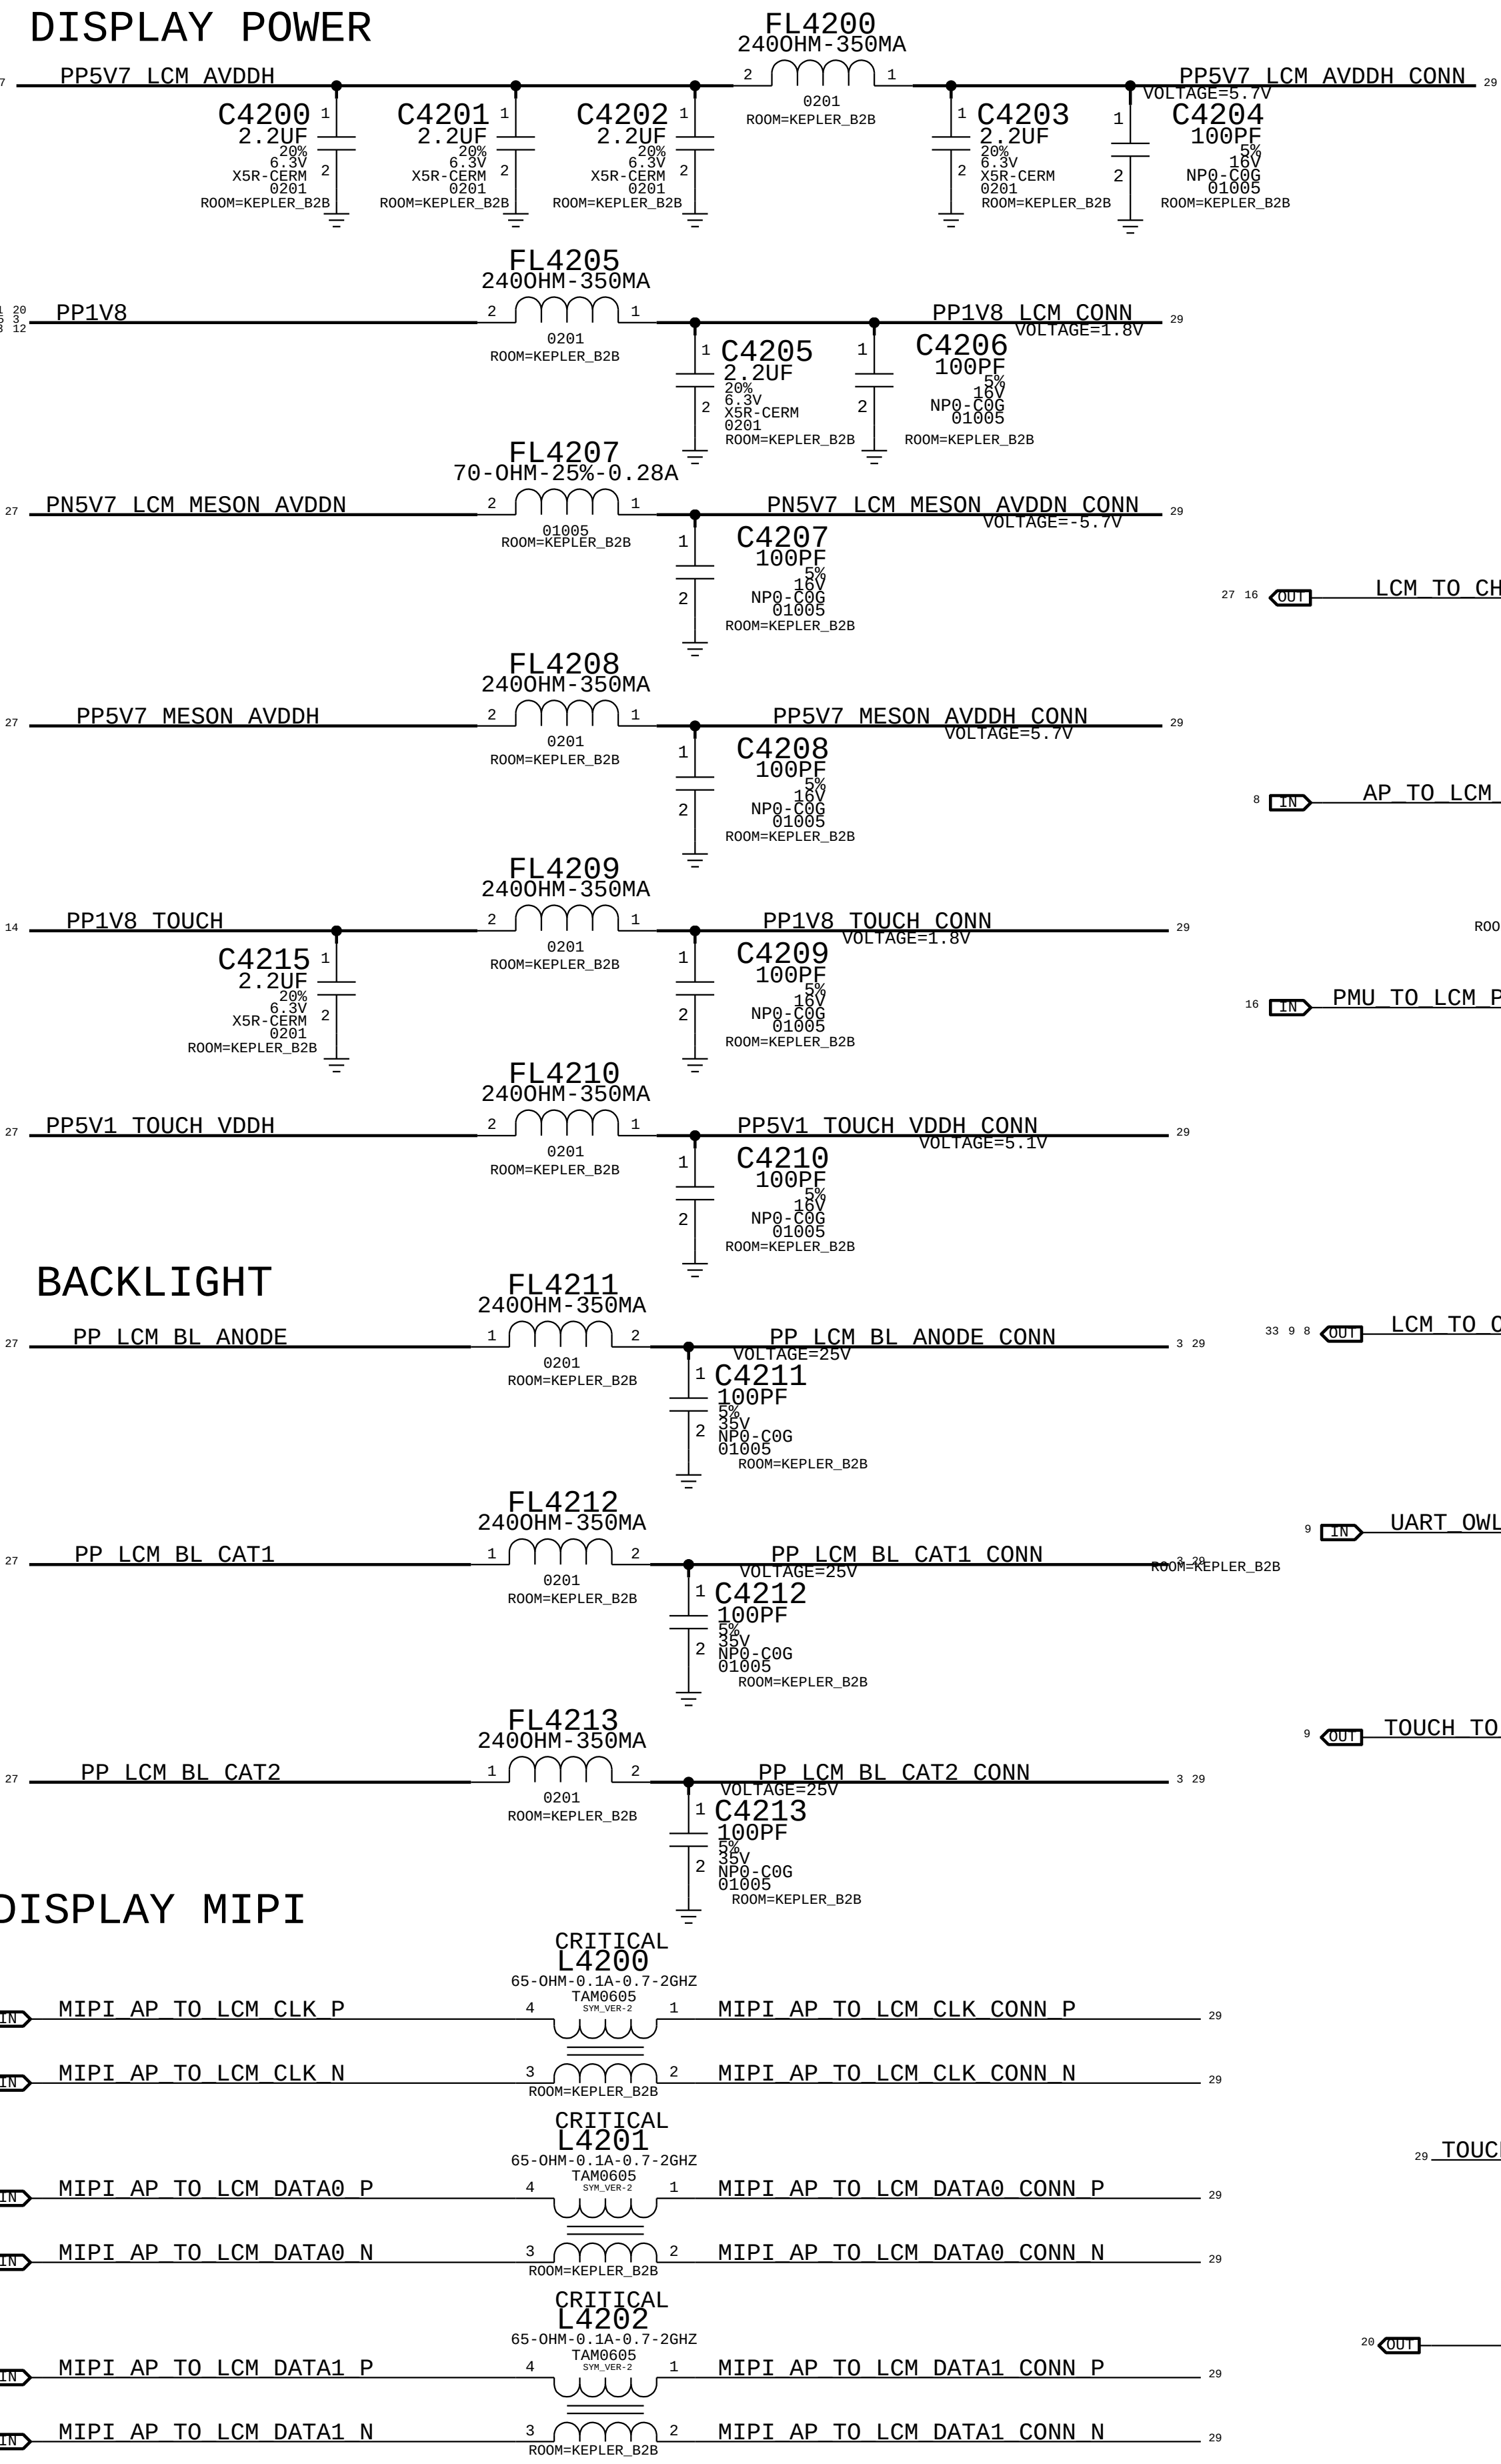


迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188


DISPLAY EEPROM I2C

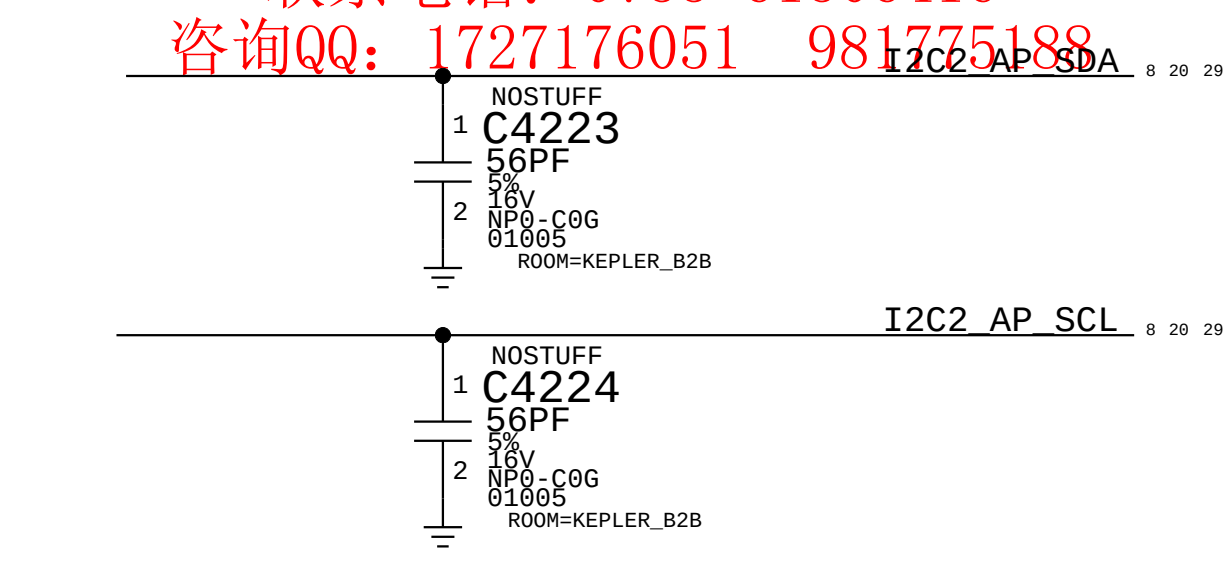


DISPLAY CONTROL SIGNALS

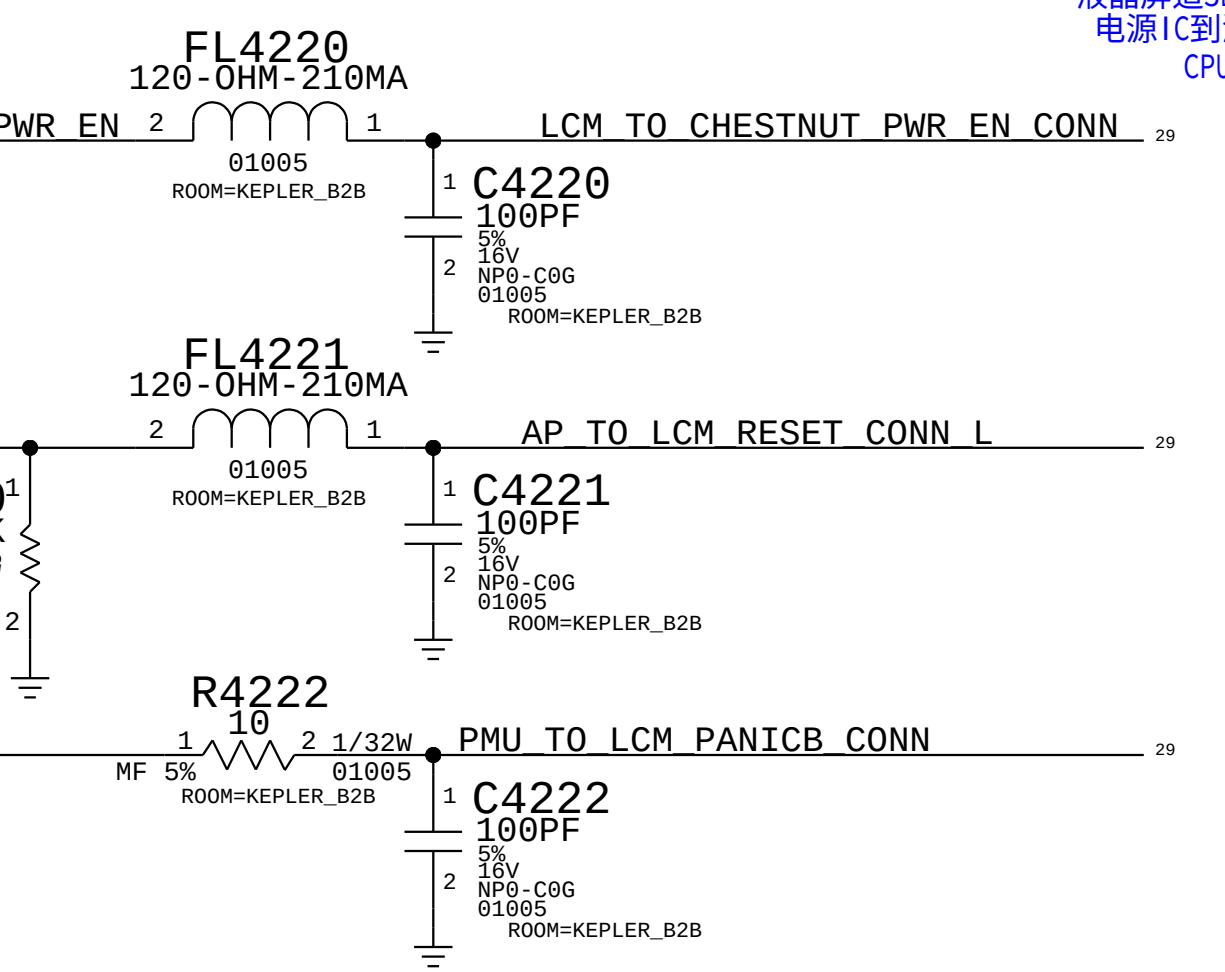


OWL TO TOUCH INTERFACE

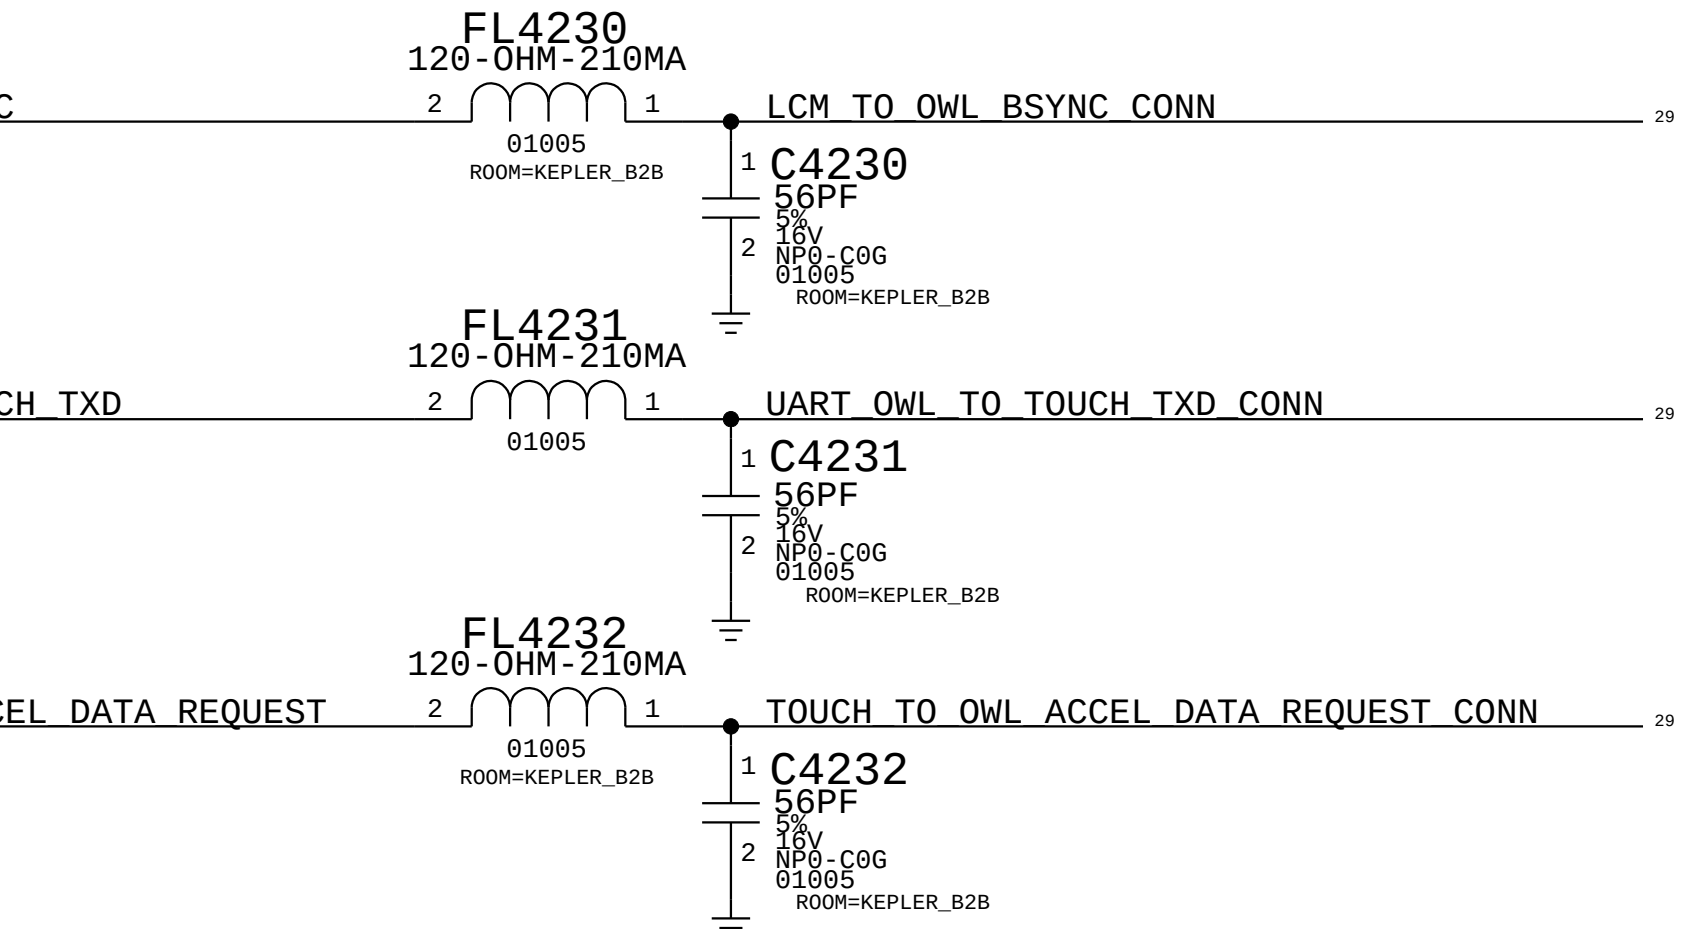


PROX TO TOUCH INTERFACE

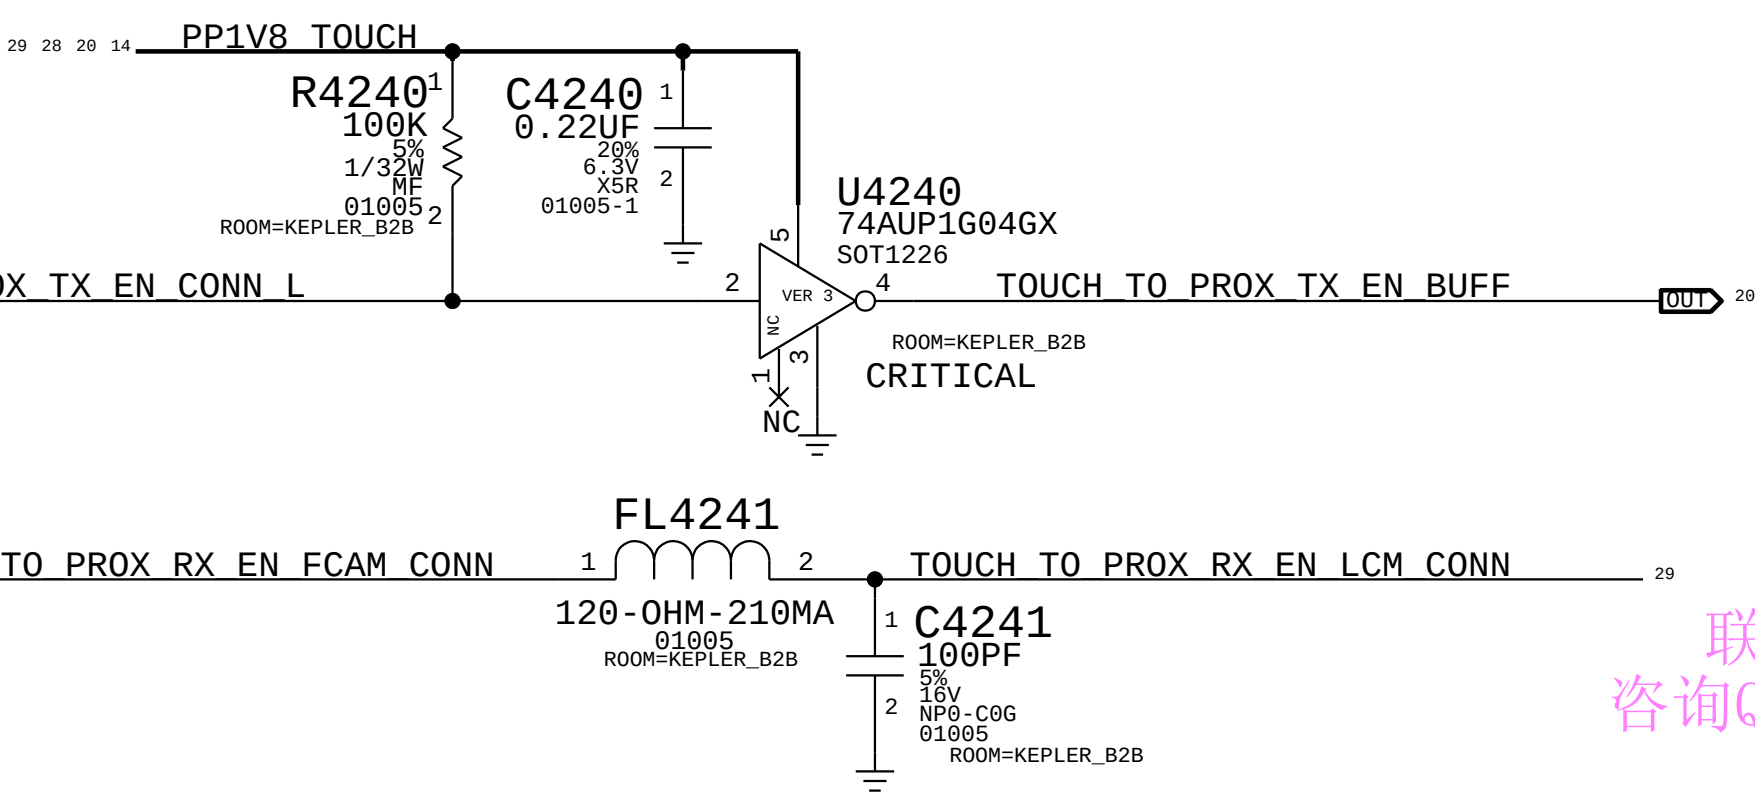

显示触摸连接座

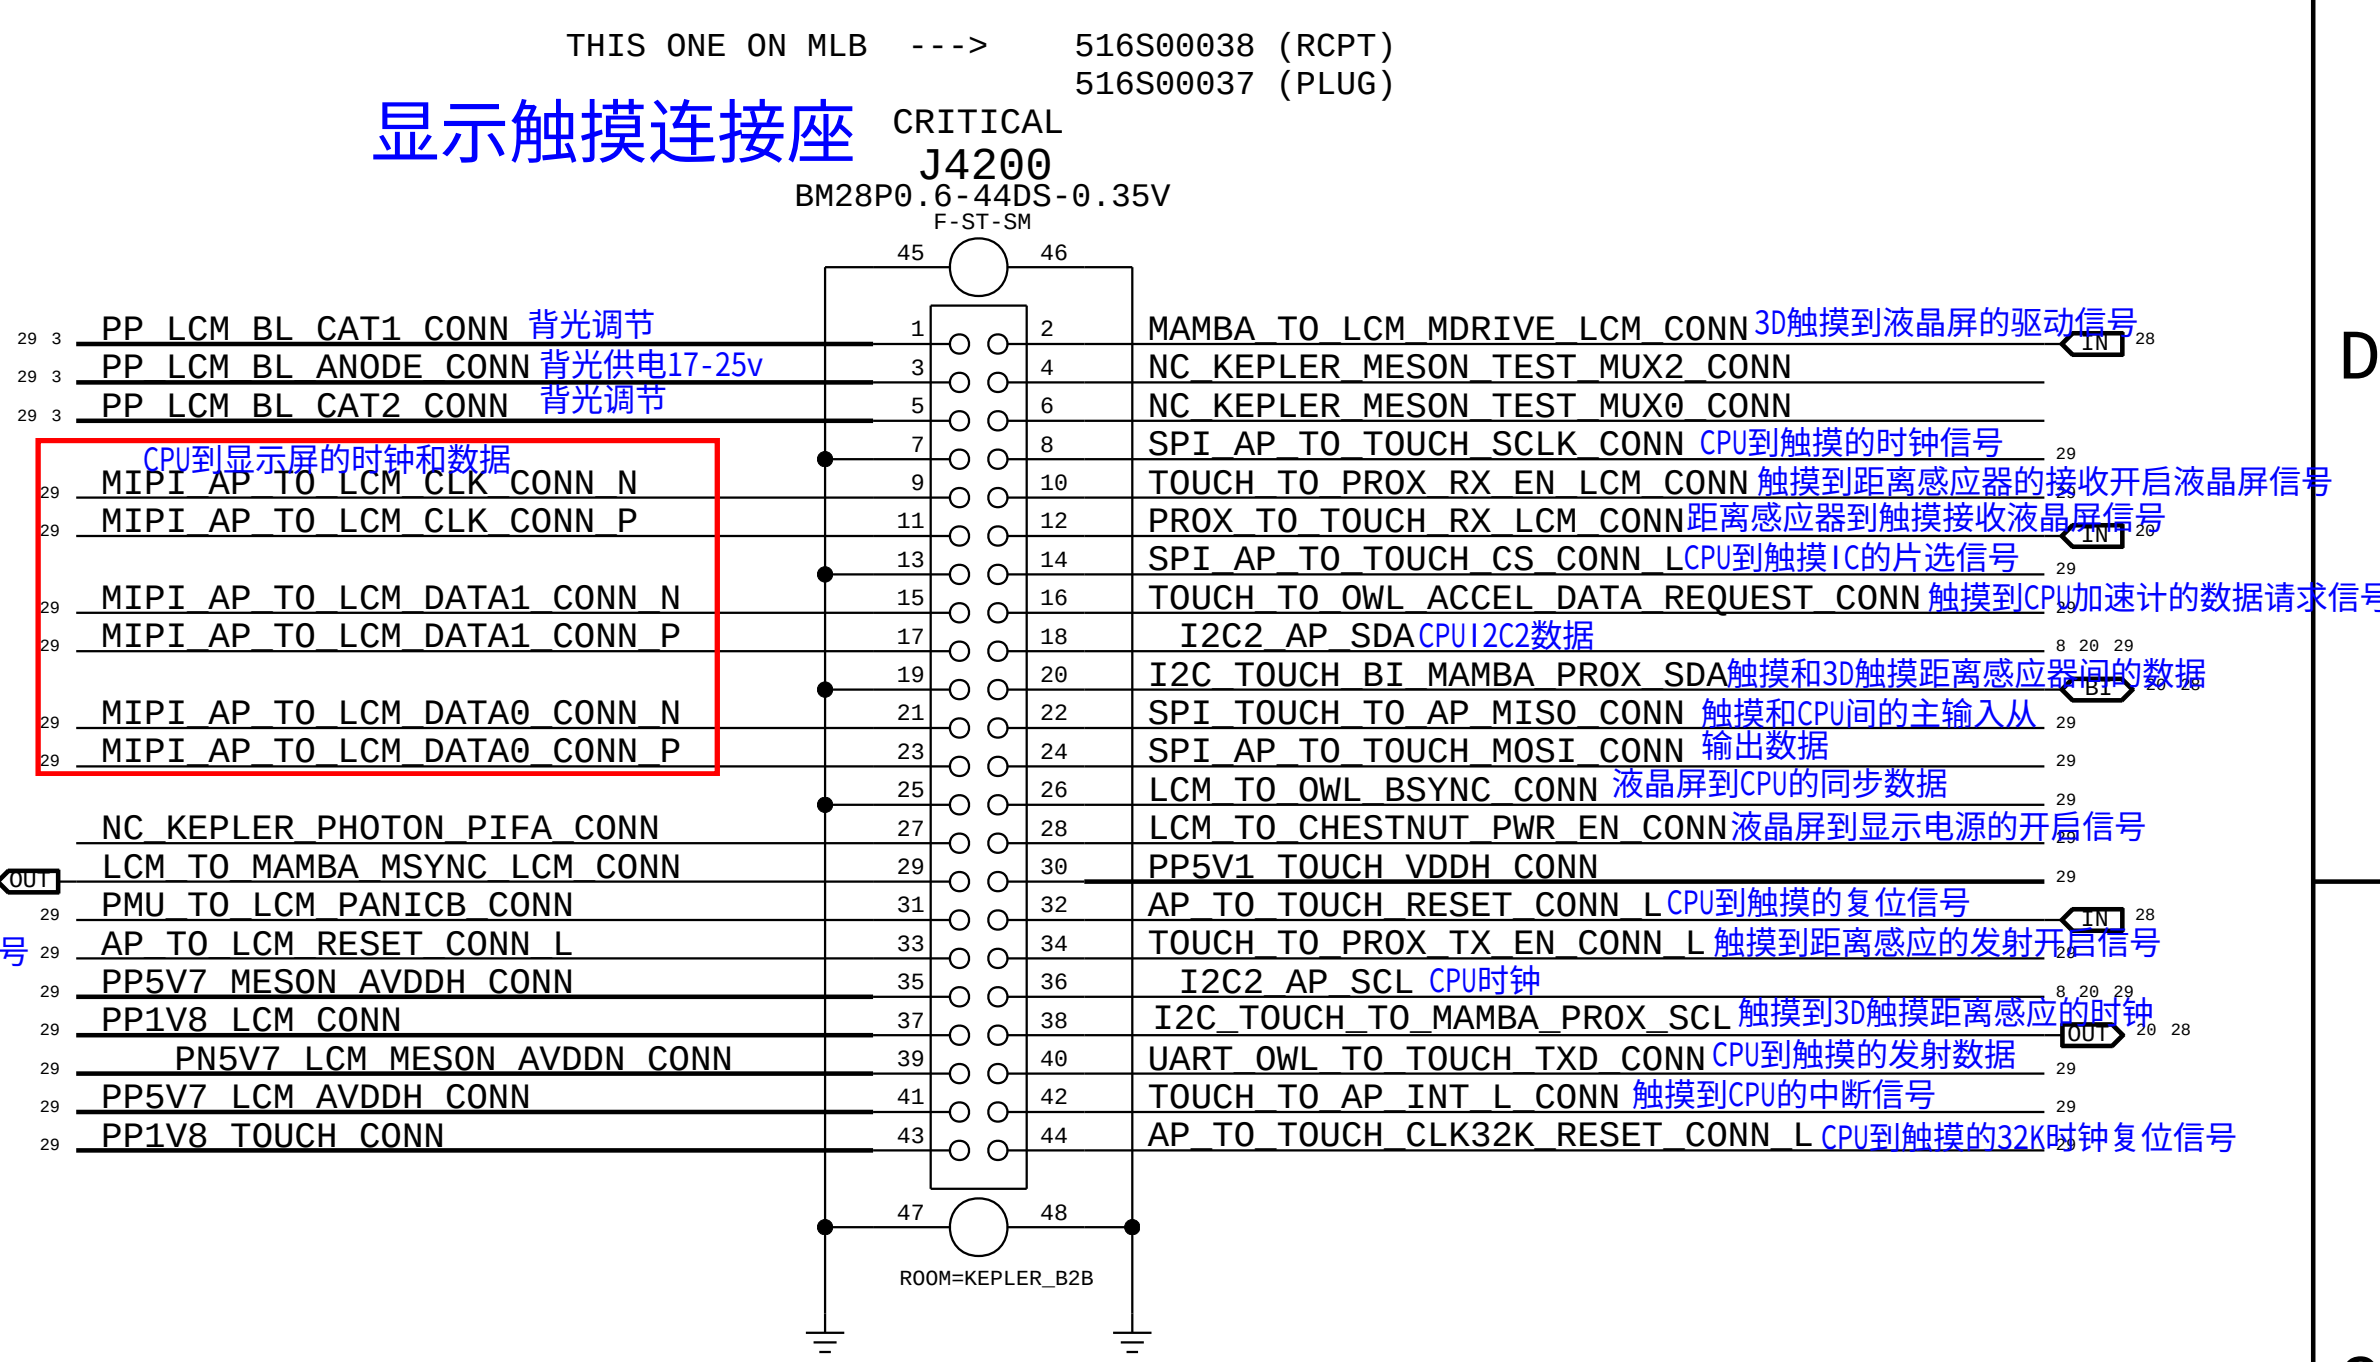


AP TO TOUCH INTERFACE

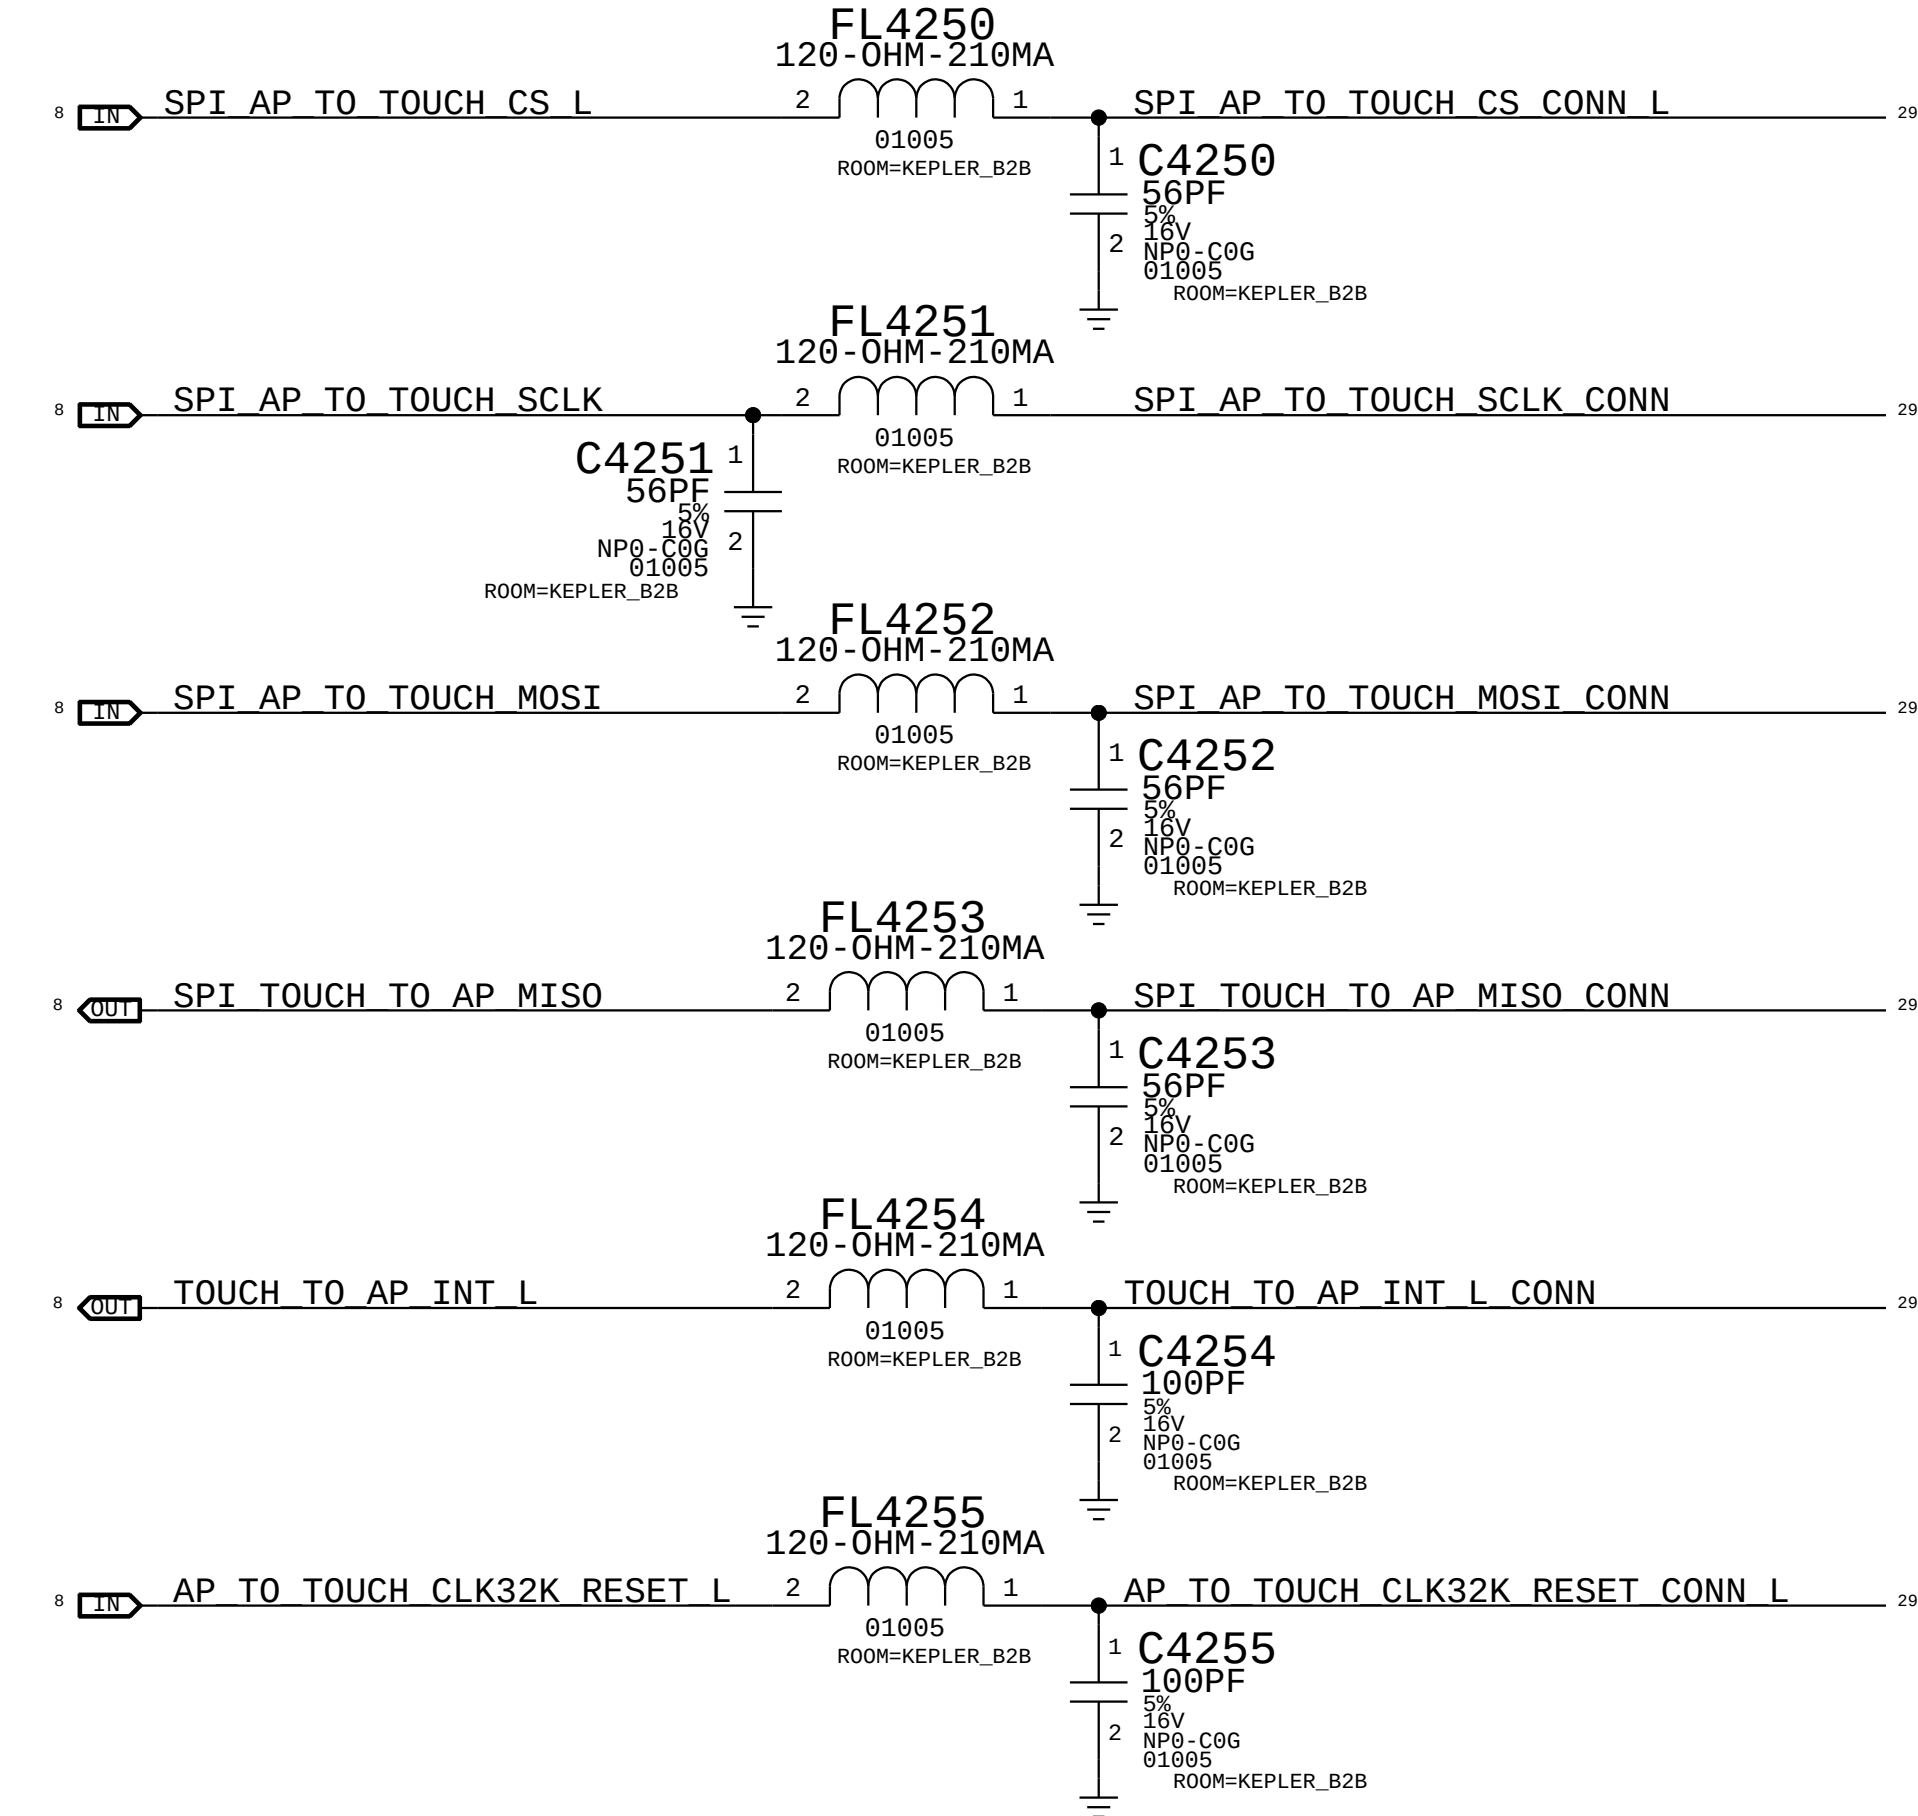

迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188




迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

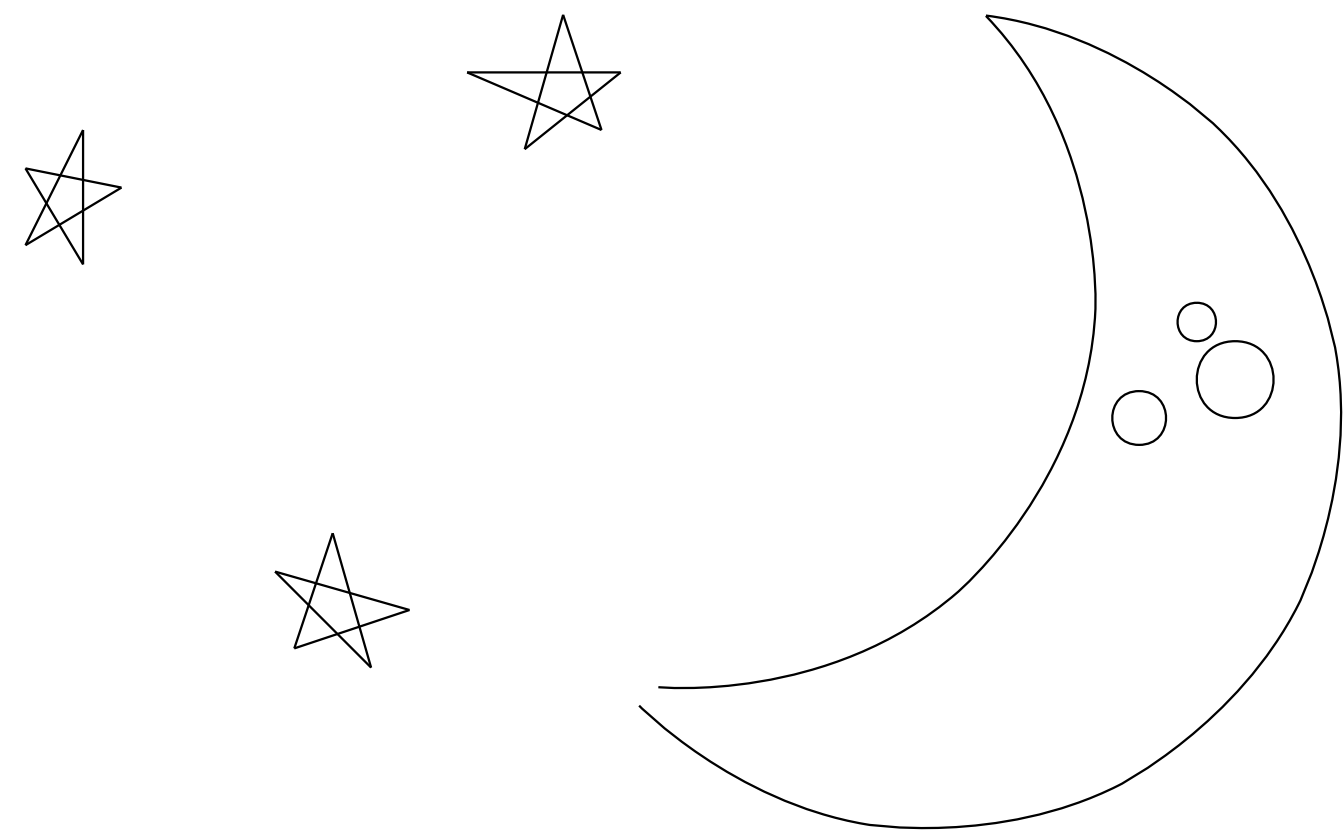

TRISTAR 2 (A3)

APN: 343S0695

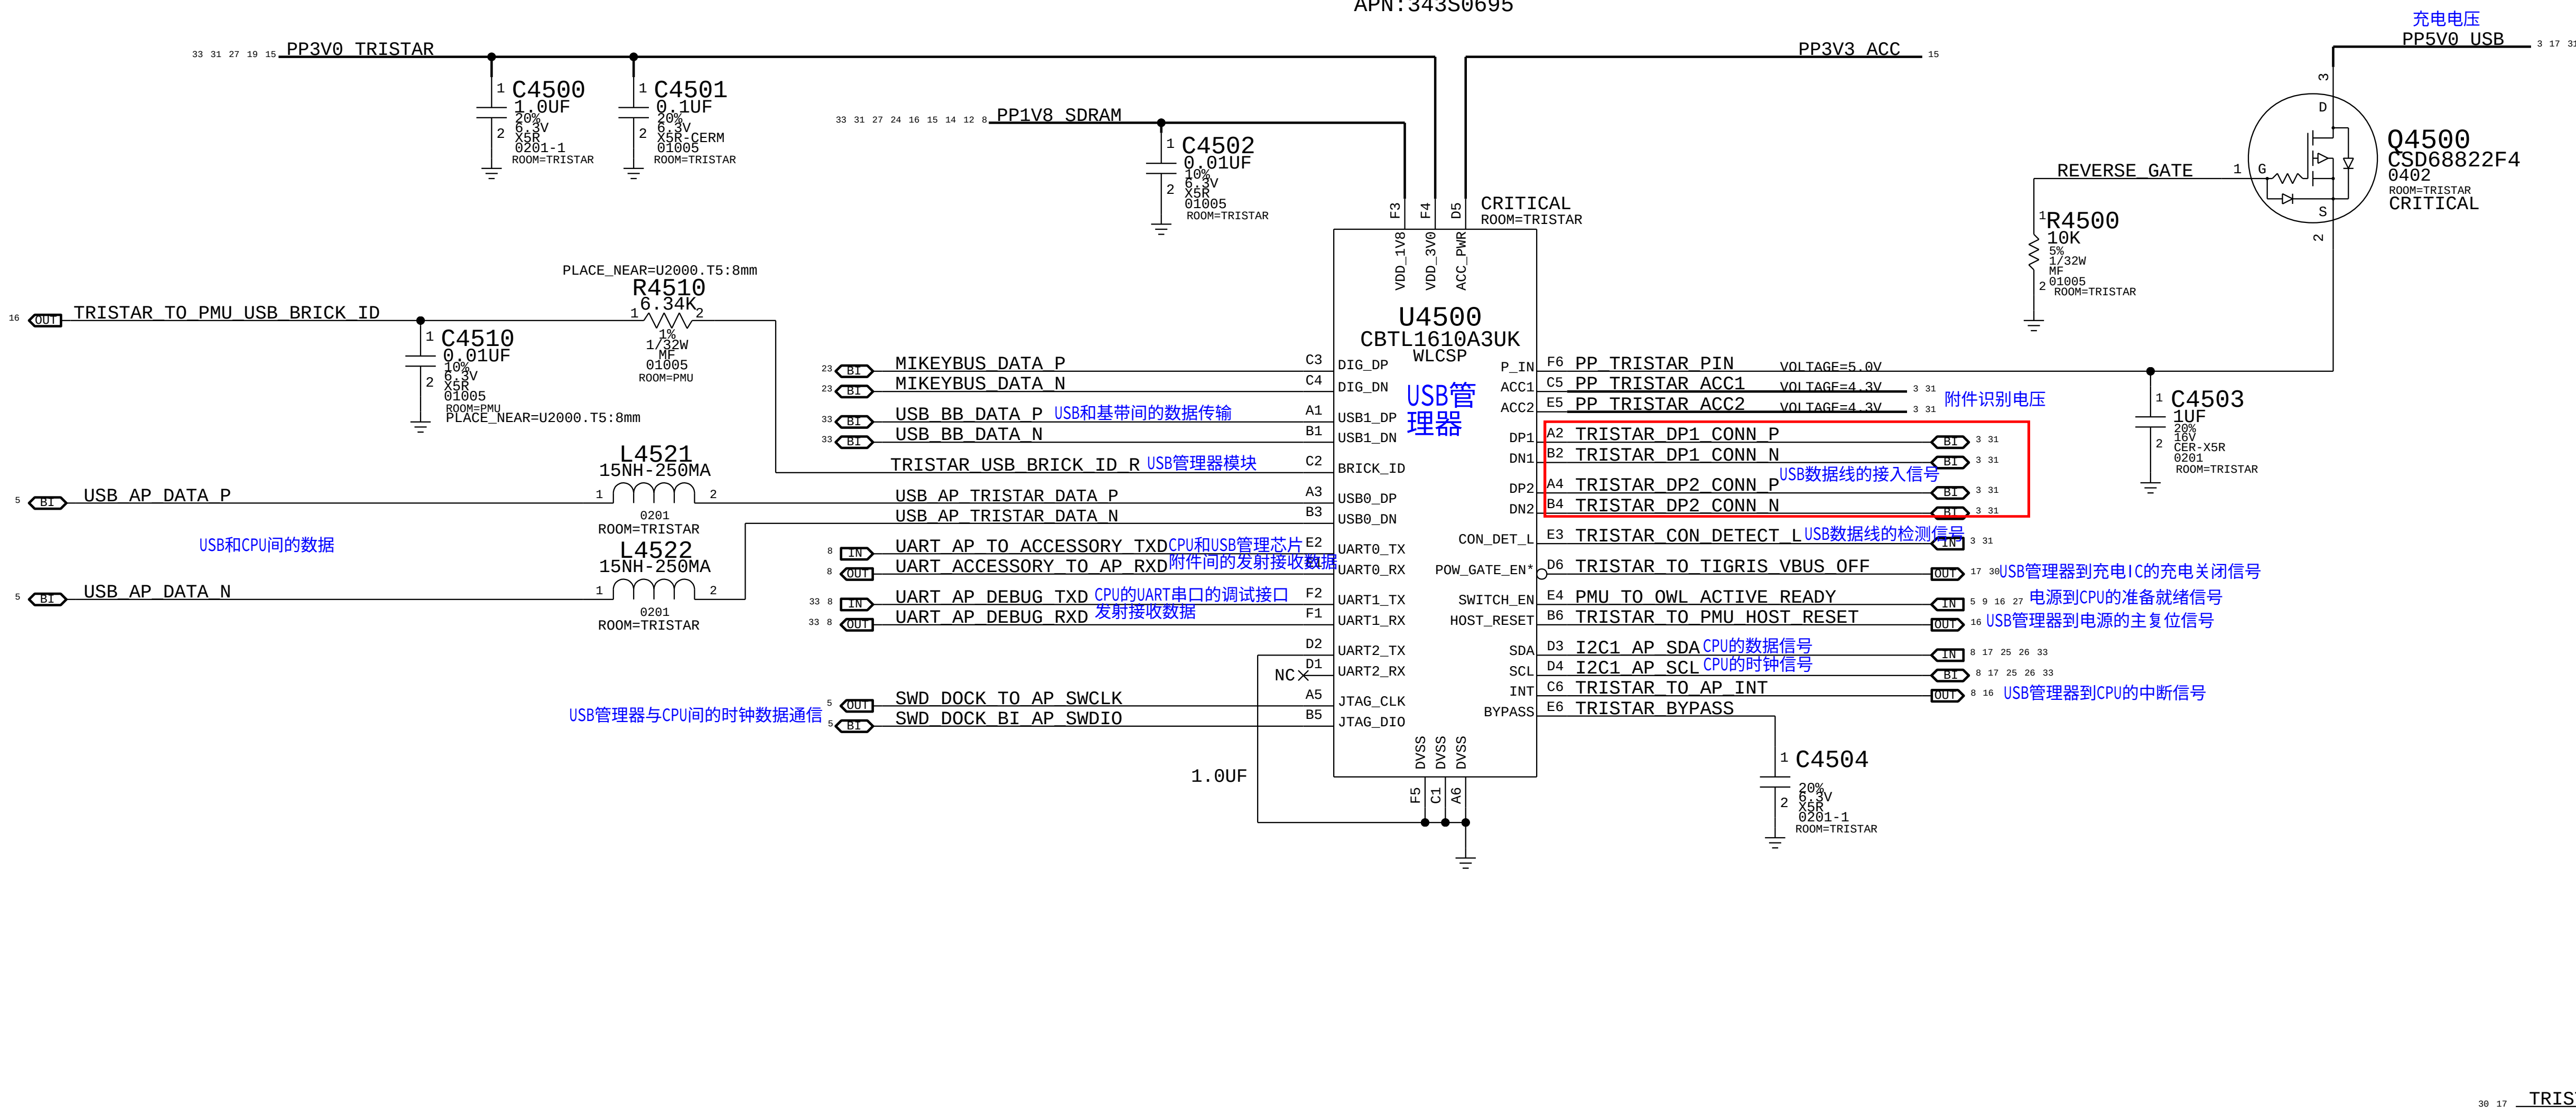

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188



DOCK FLEX CONNECTOR

AUDIO JACK


ANTENNA

DOCK FLEX CONNECTOR


THIS ONE ON MLB ---> 516S00033 (RCPT)
516S00034 (PLUG)

尾插连接座


CRITICAL
ROOM=DOCK_B2B
J4600
24-5859-040-XXX-829
F-ST-SM

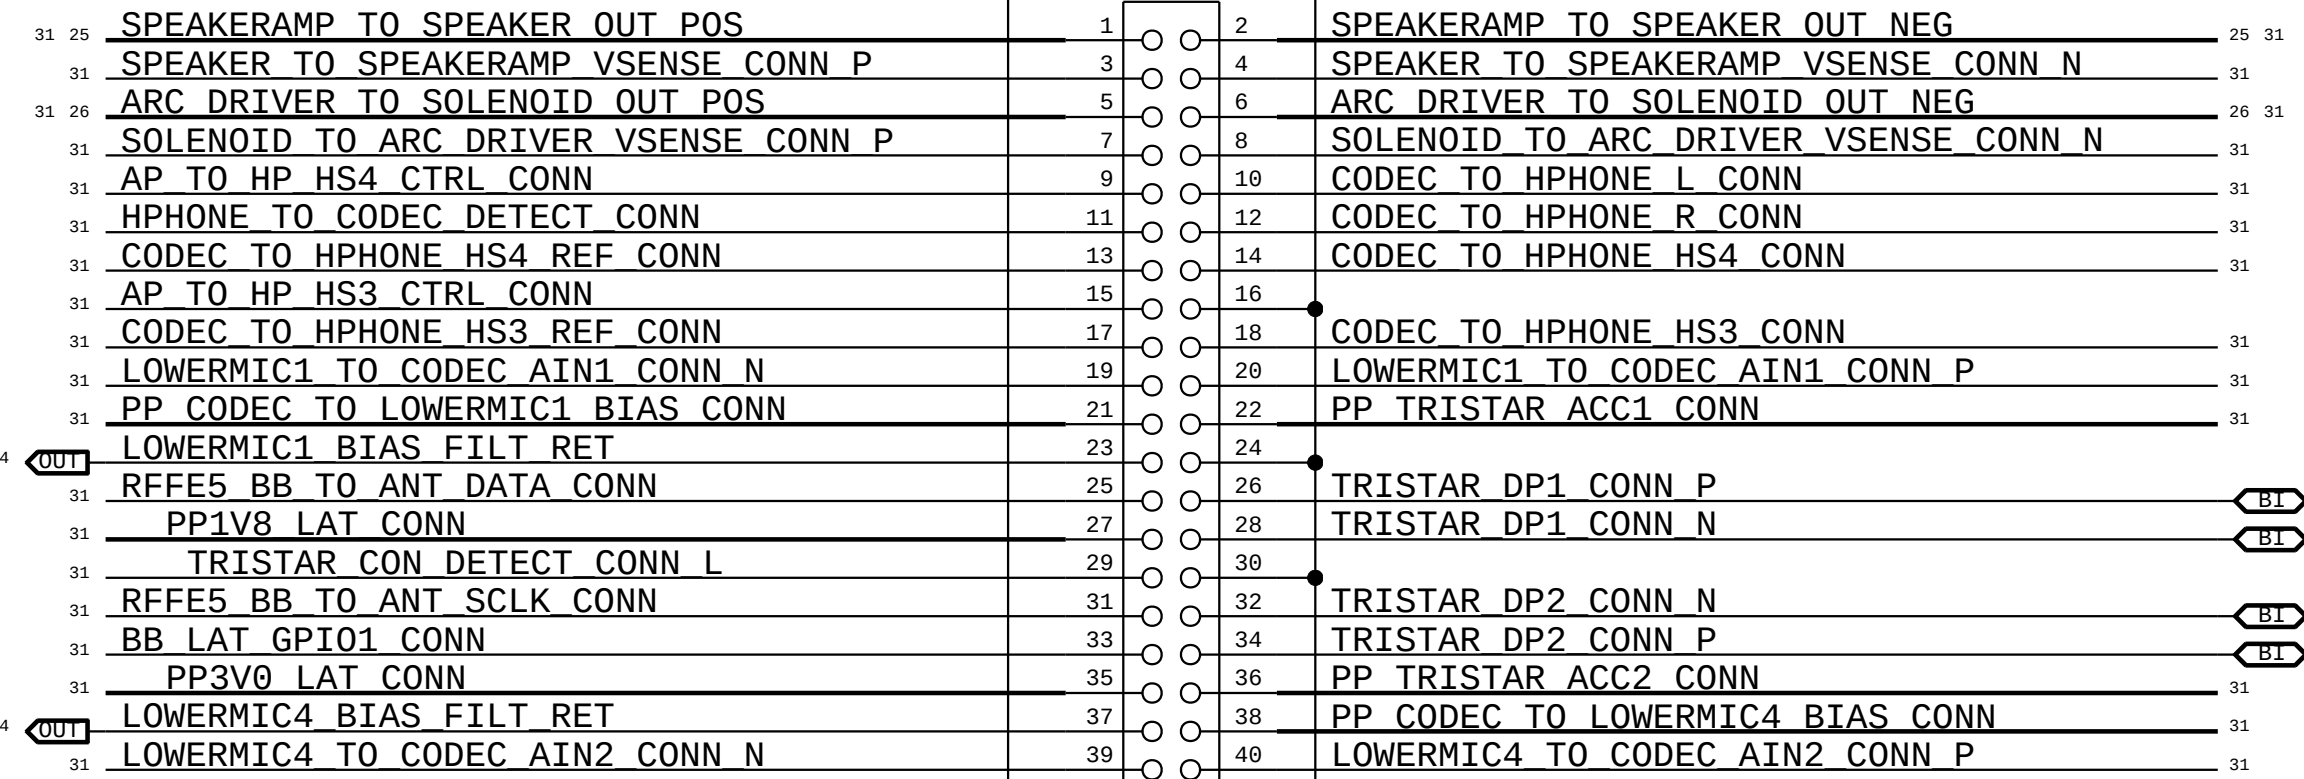


TRISTAR

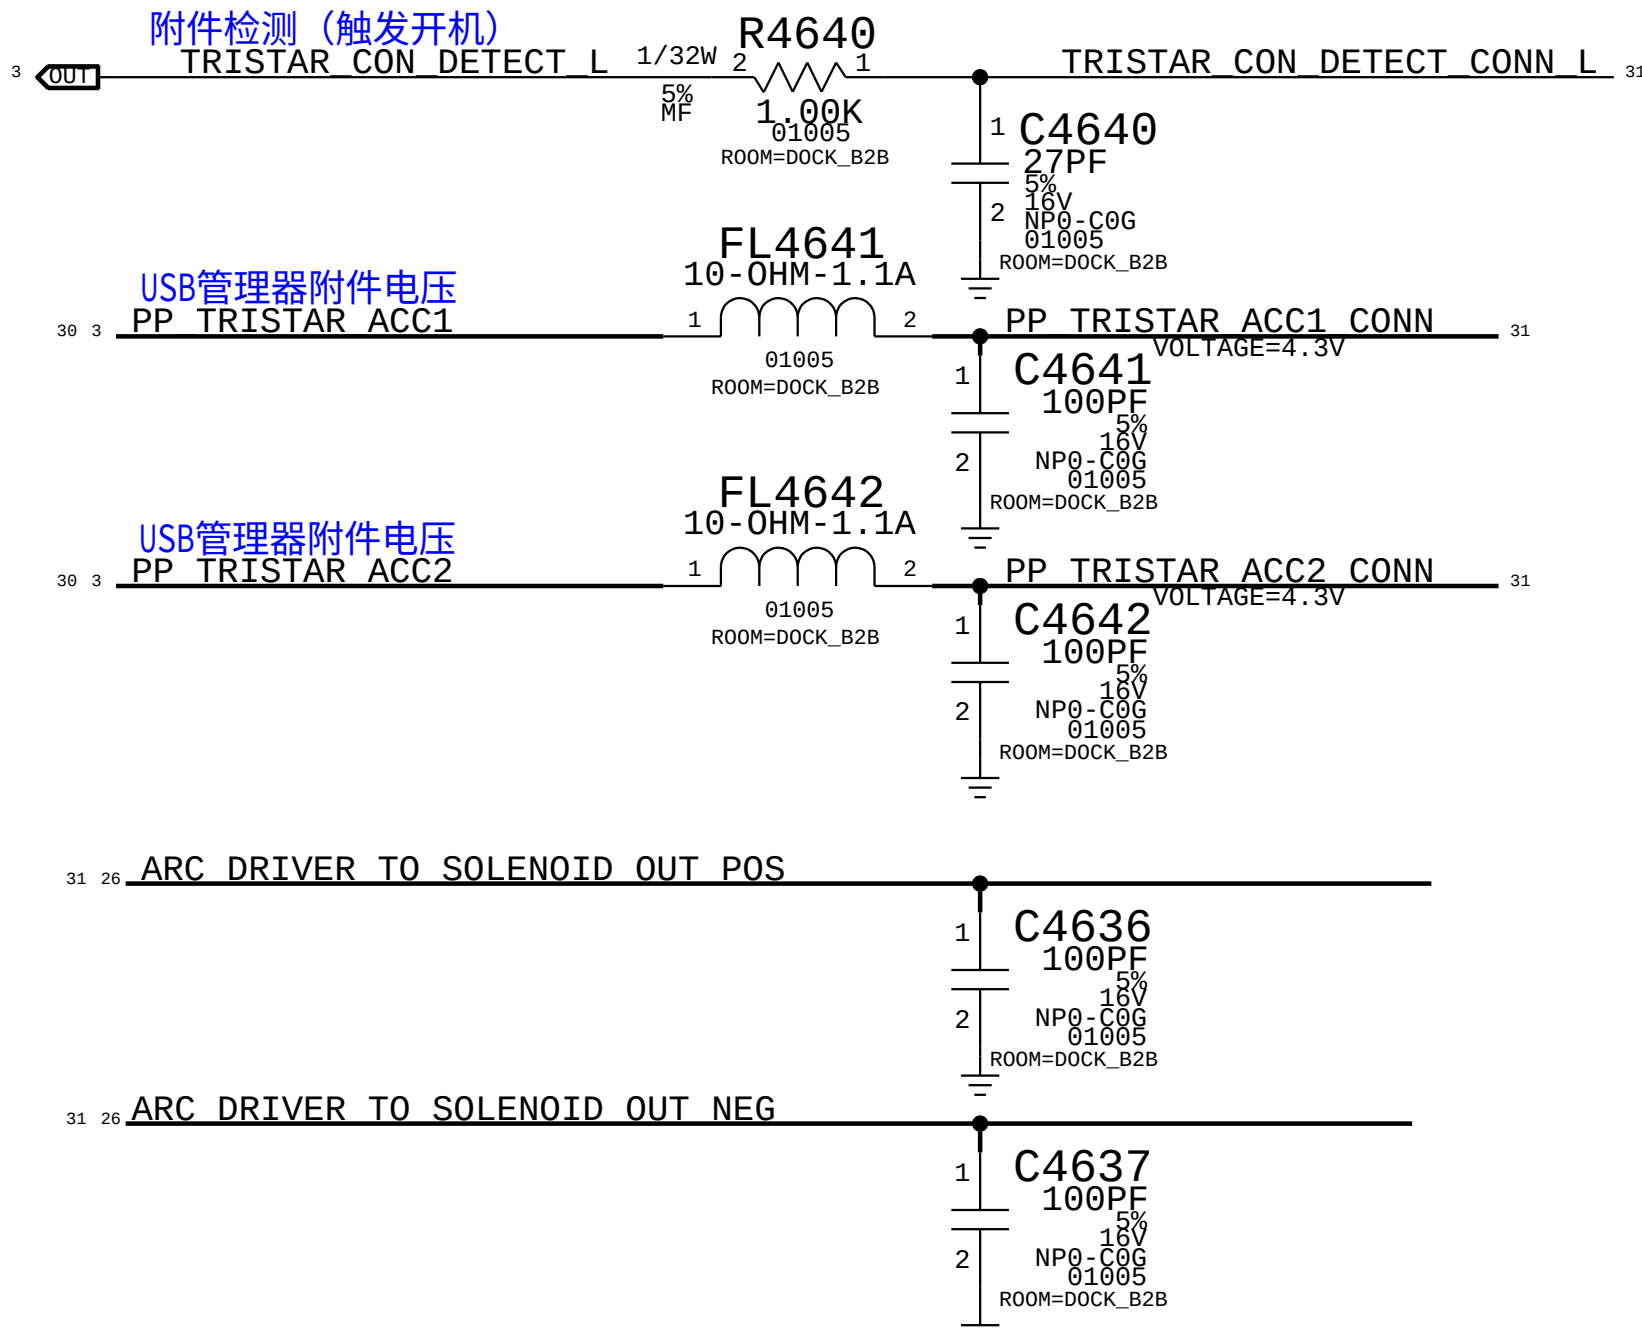

迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188

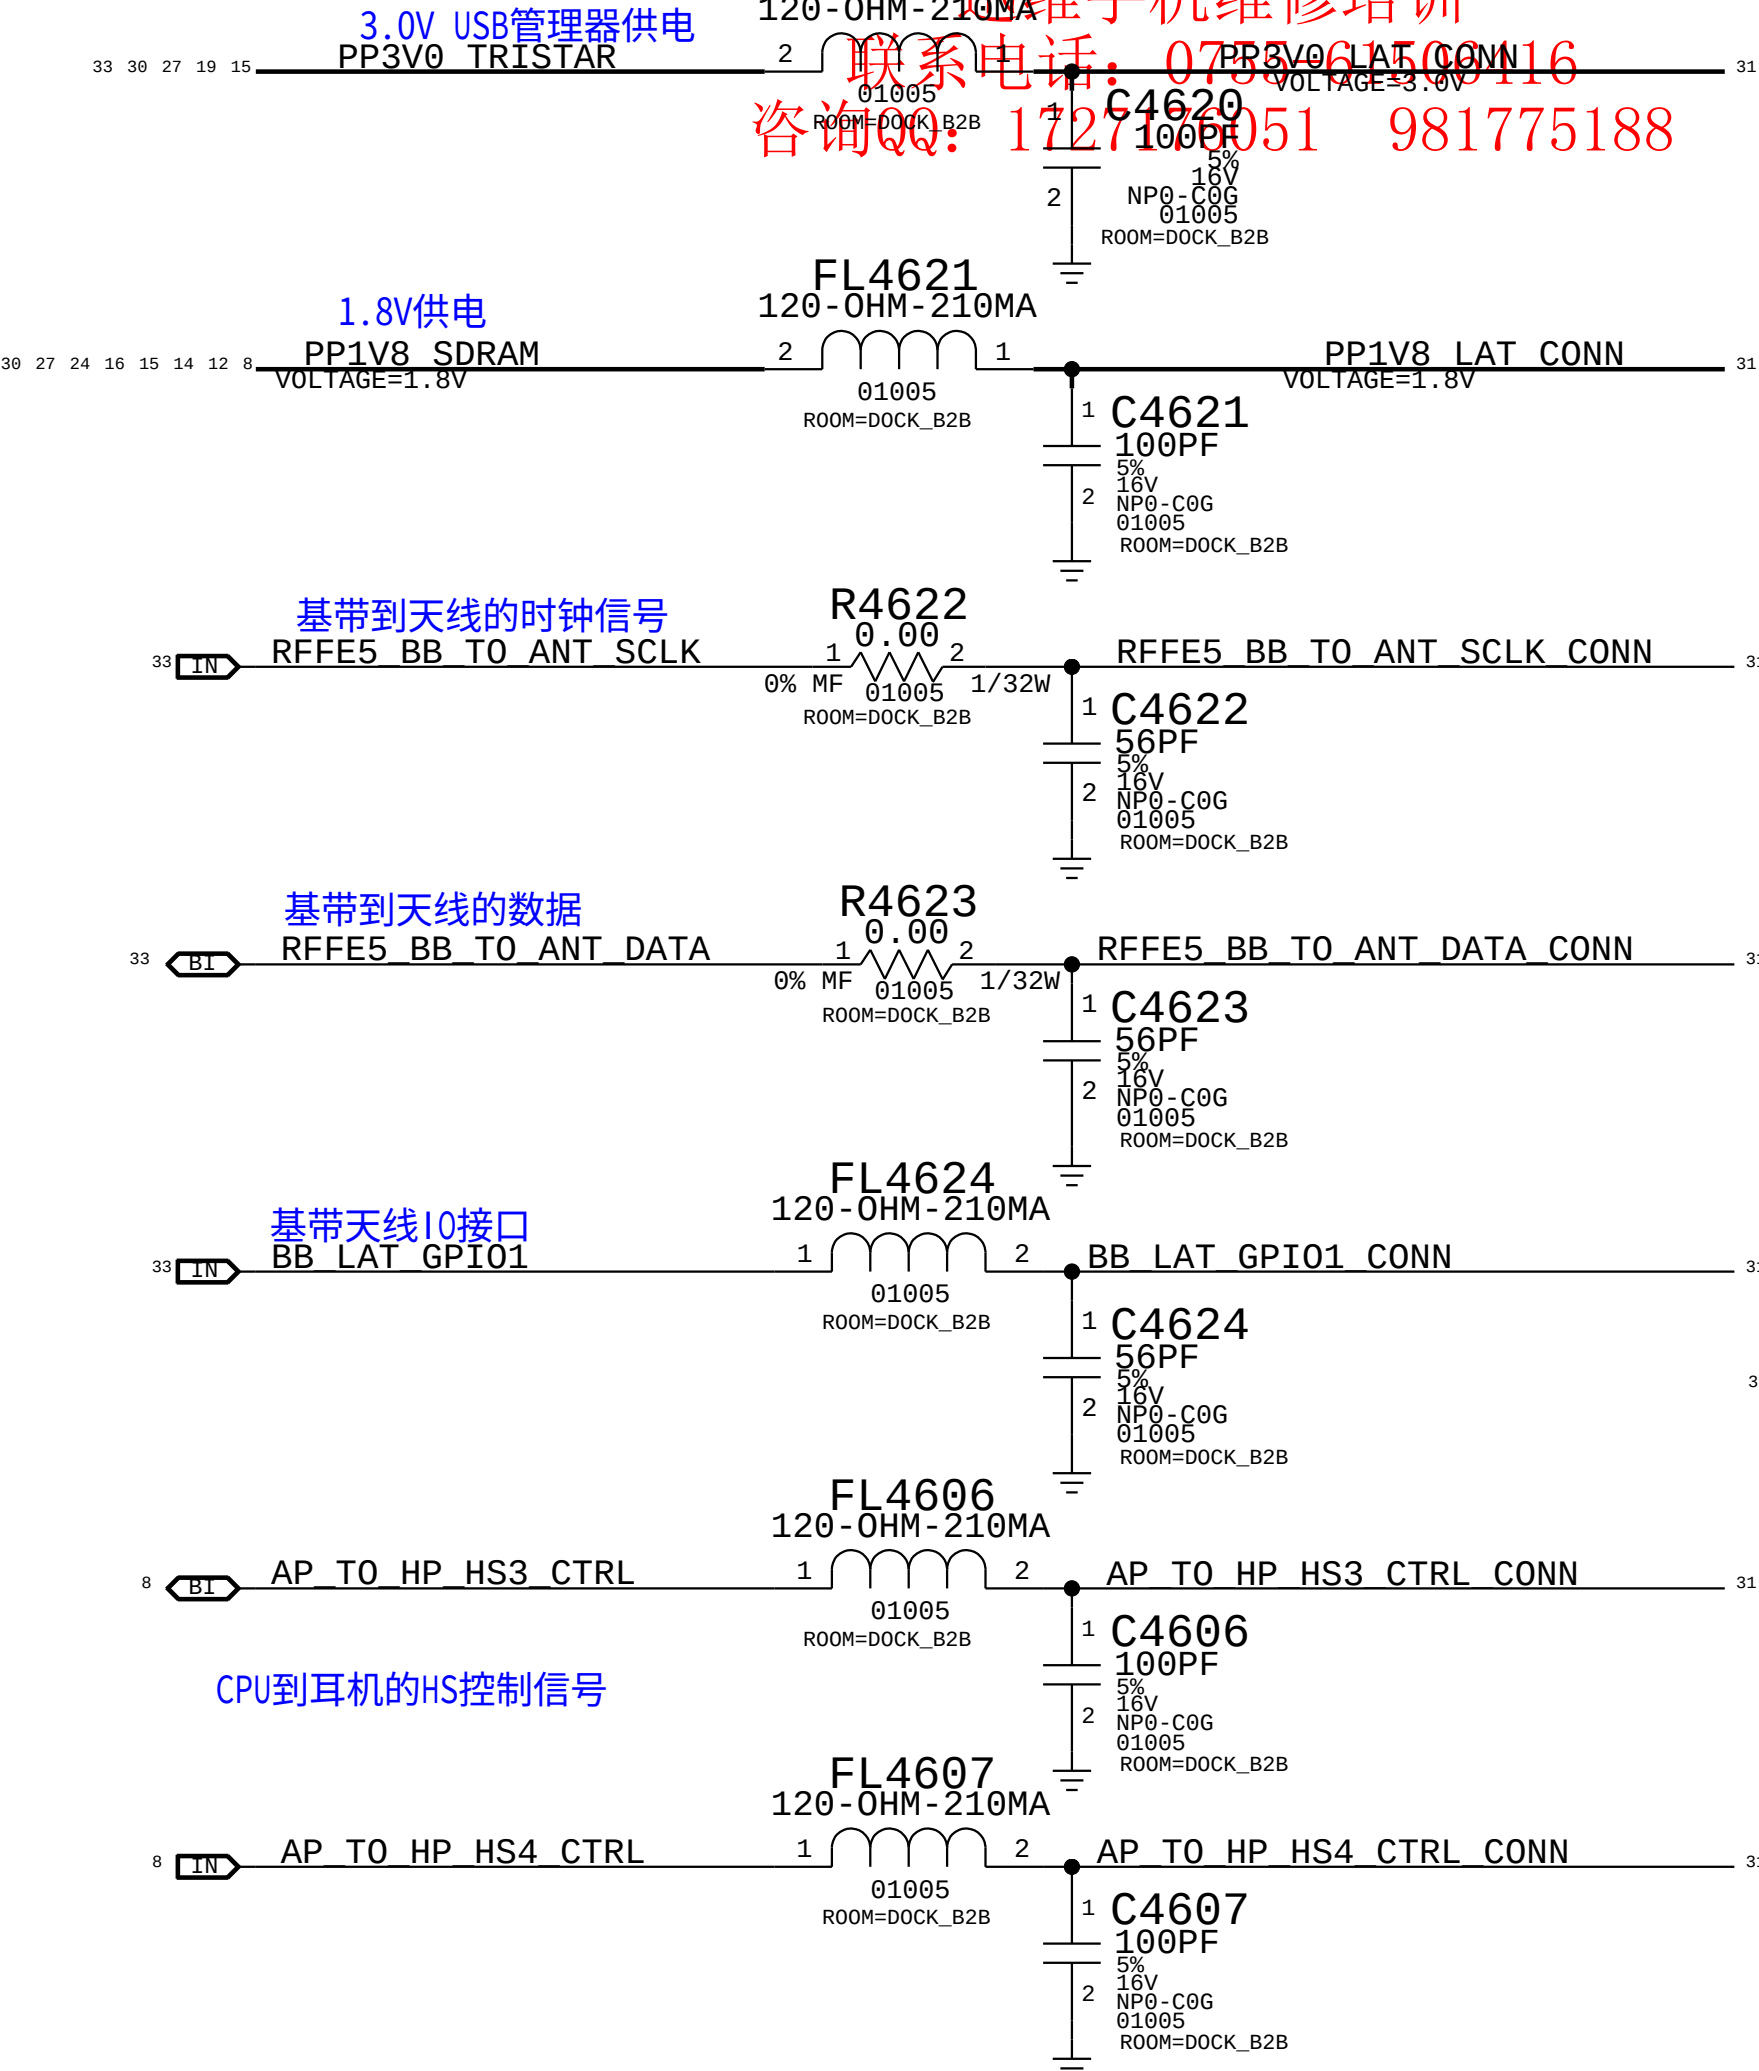

SPEAKER/ARC

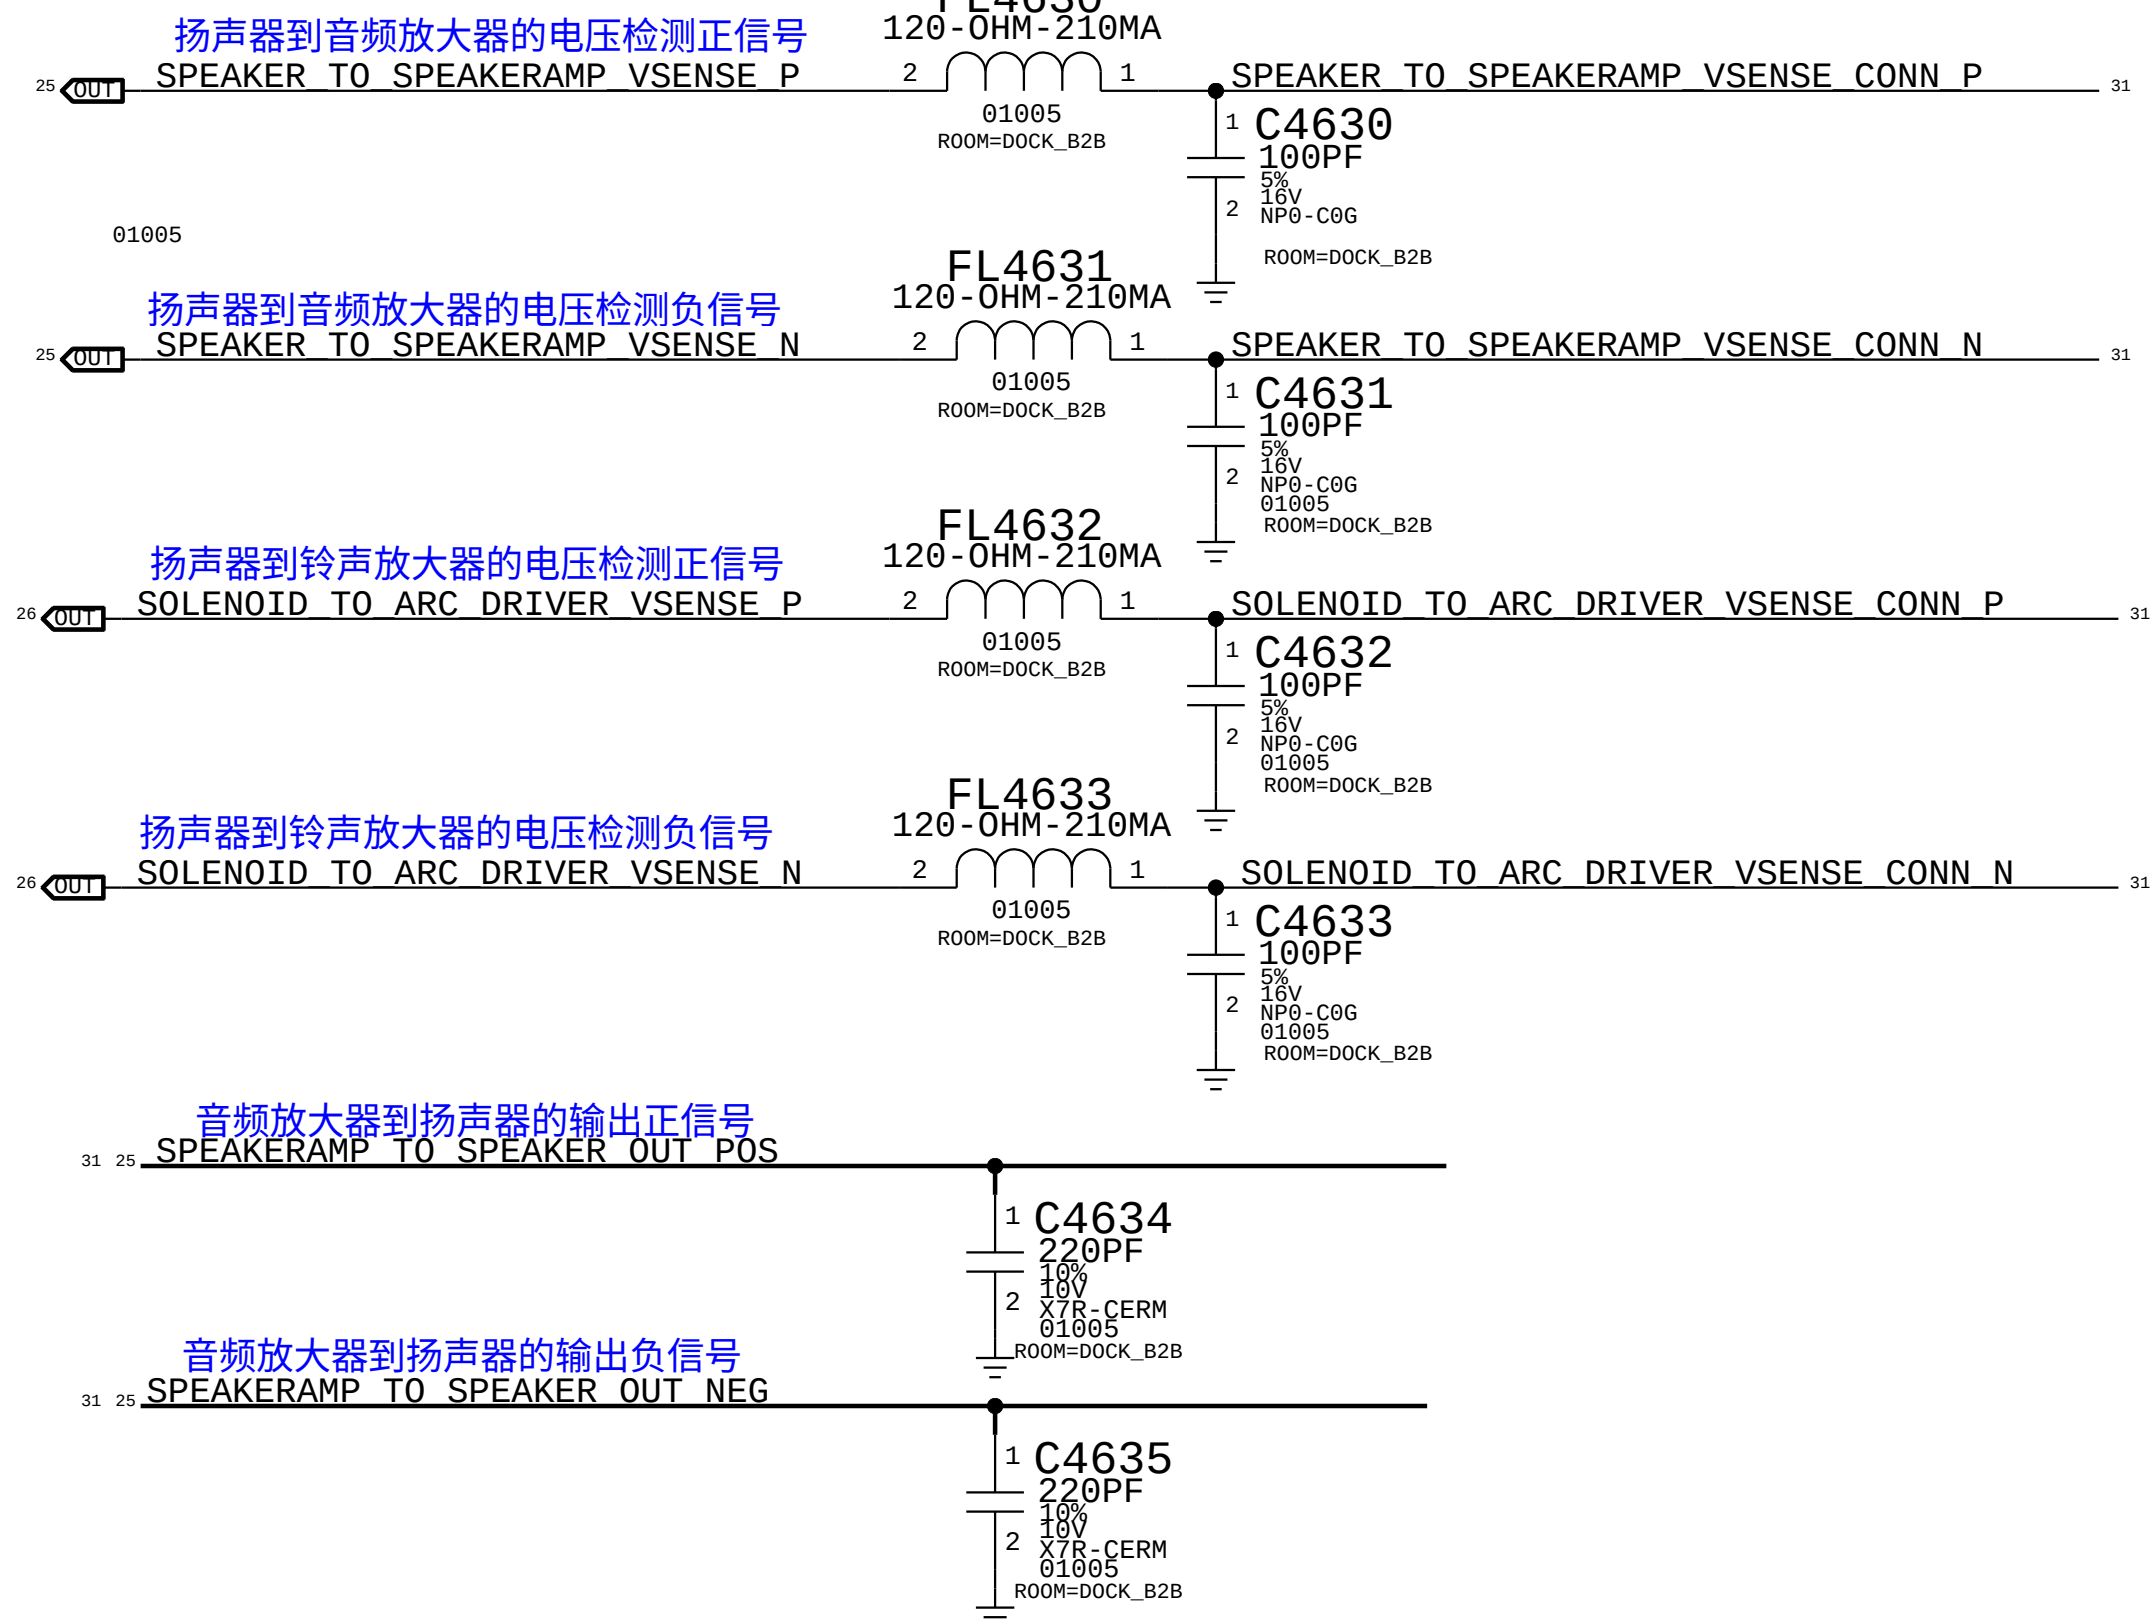

D

C

B

A

D

C

B

A

BUTTON FLEX


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

BUTTON FLEX CONNECTOR

THIS ONE ON MLB ---> 516S00058 (RCPT)
516S00059 (PLUG)


开机音量键连接座

ROOM=BUTTON_B2B
CRITICAL
J4700
505066-1210
F-ST-SM

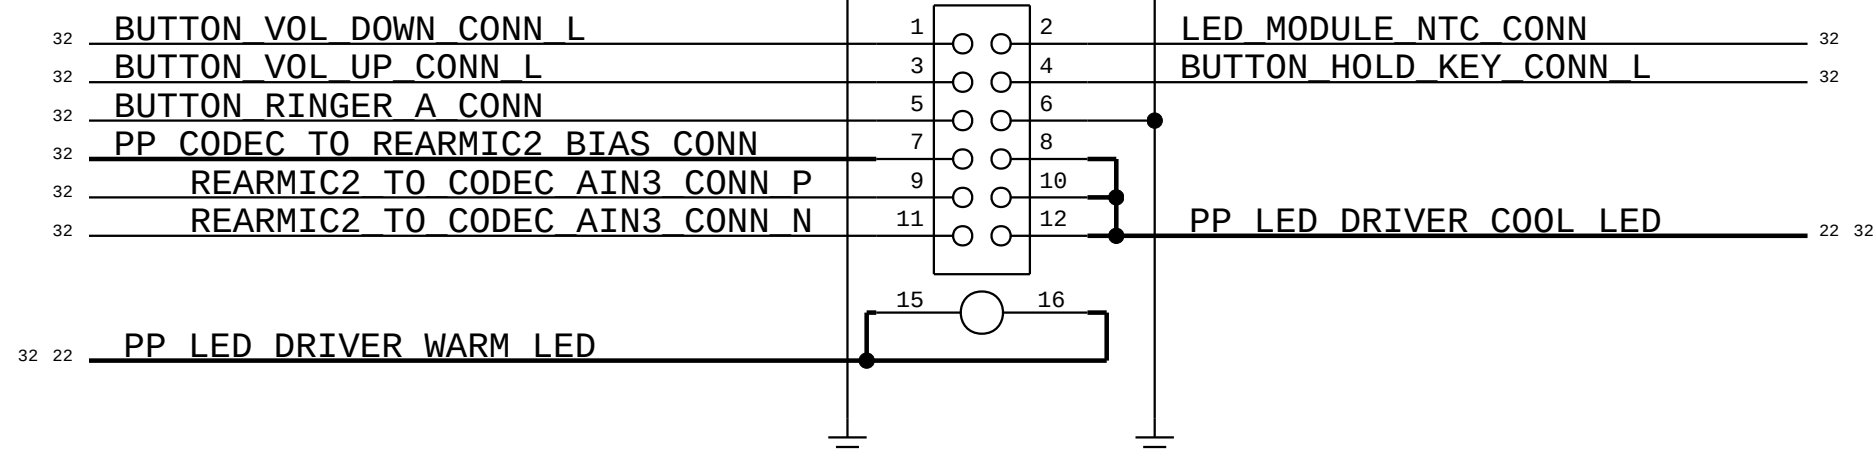

J4700损坏会造成不开机无反应无电流
音量键静音键不能用，闪光点手电筒不亮等故障

STROBE:
WARM LED
COOL LED
MODULE NTC

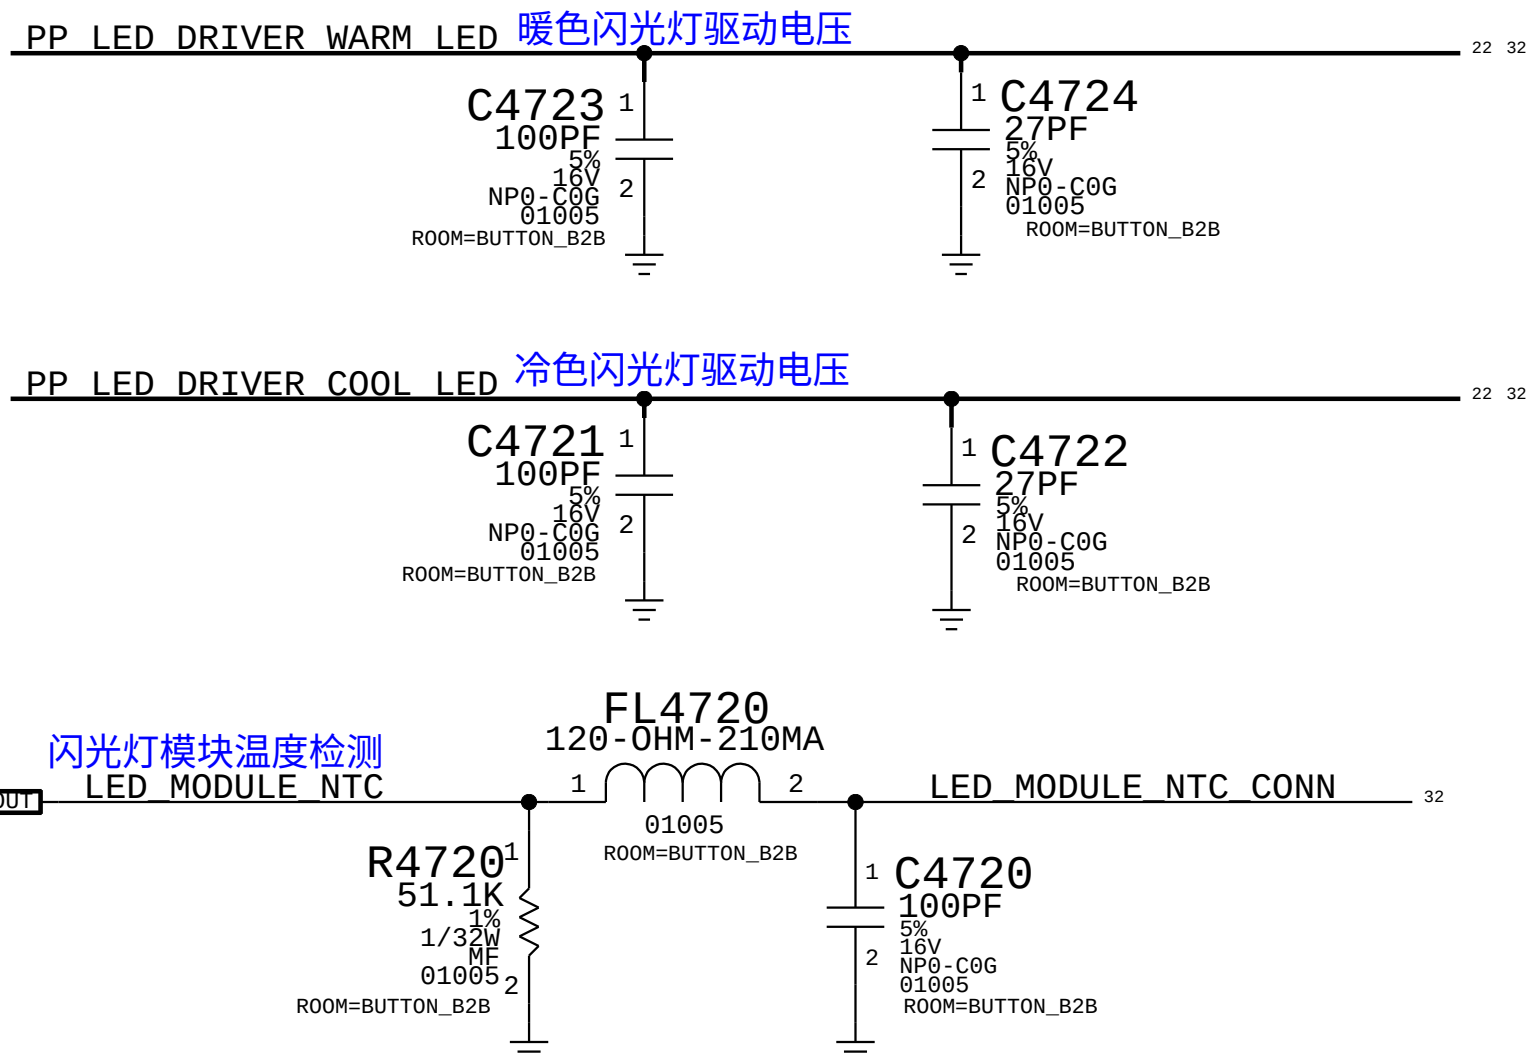



闪光灯模块温度检测
LED MODULE NTC

ROOM=BUTTON_B2B
FL4720
120-0HM-210MA
01005
R4720
51.1K
1/32W
01005-1
16V
01005
ROOM=BUTTON_B2B

C4720
100PF
5%
16V
NP0-C0G
01005
ROOM=BUTTON_B2B

MIC2
ANC REF MIC

BUTTONS:
HOLD
RINGER
VOL UP/DOWN

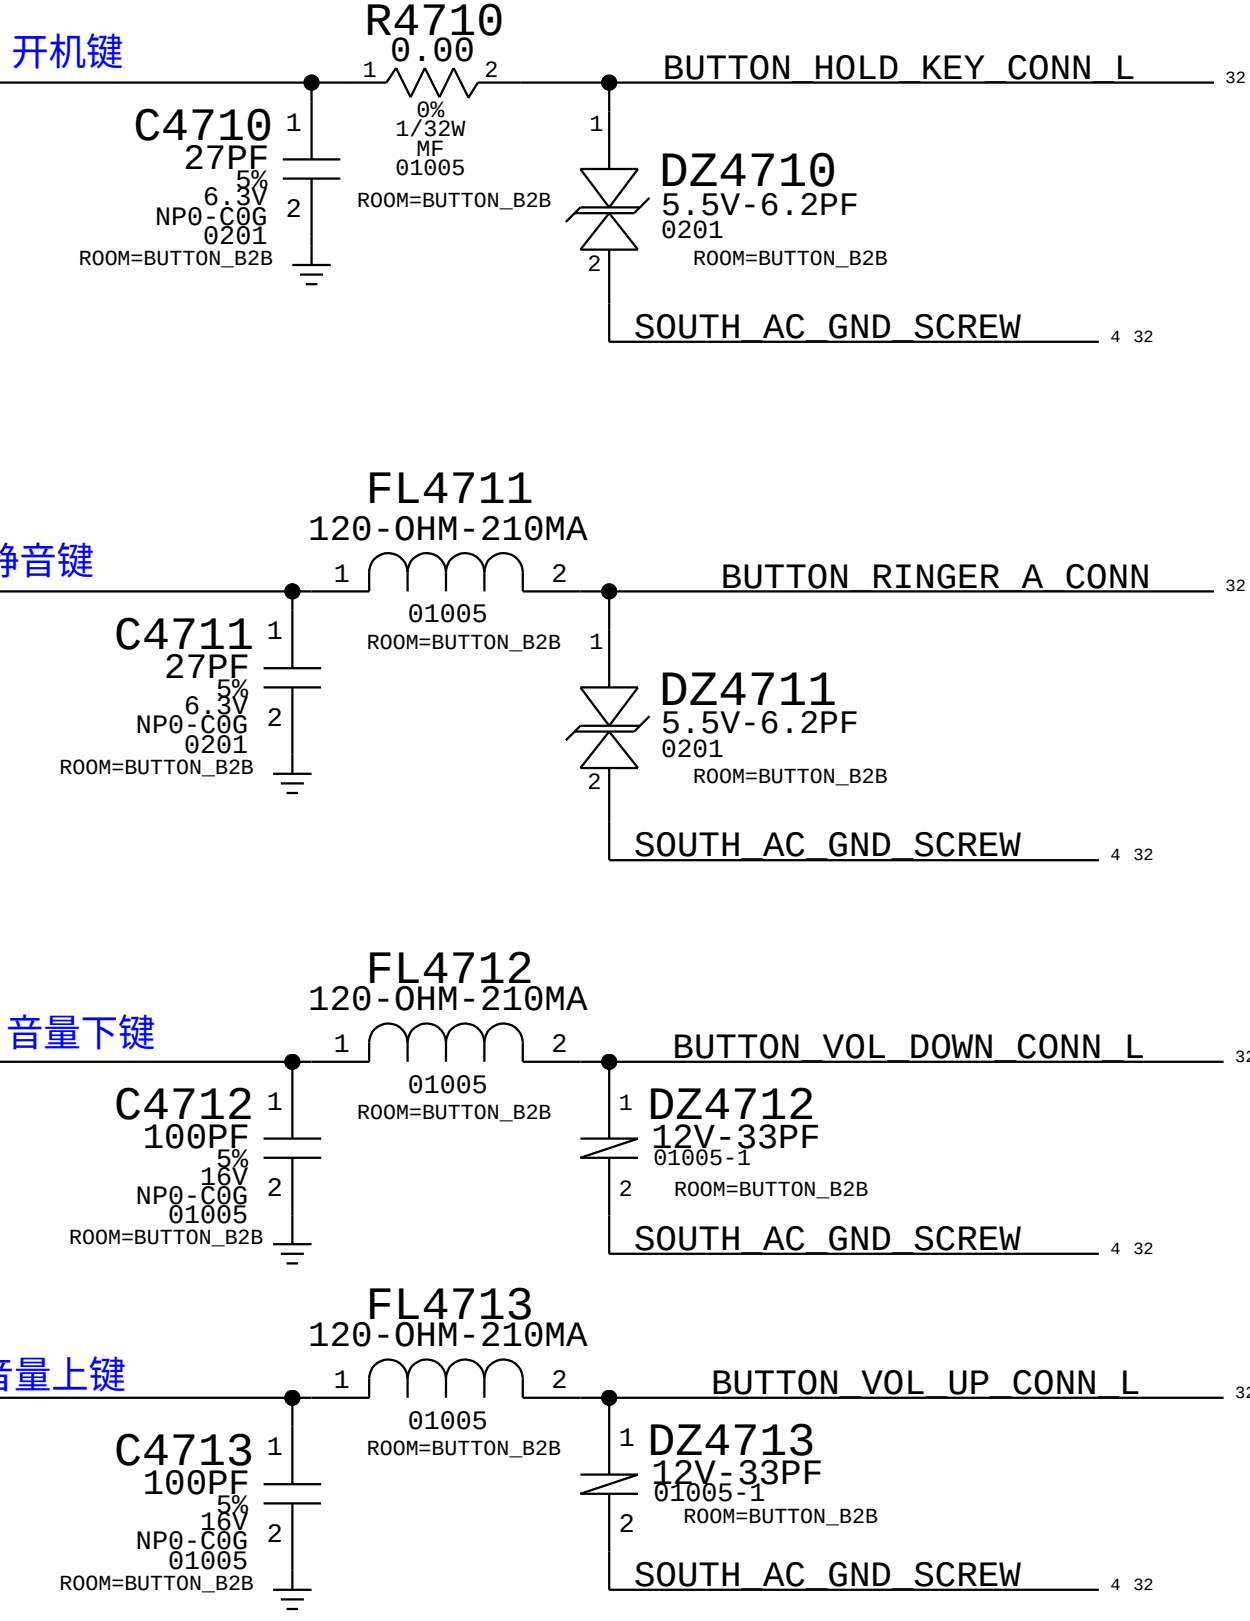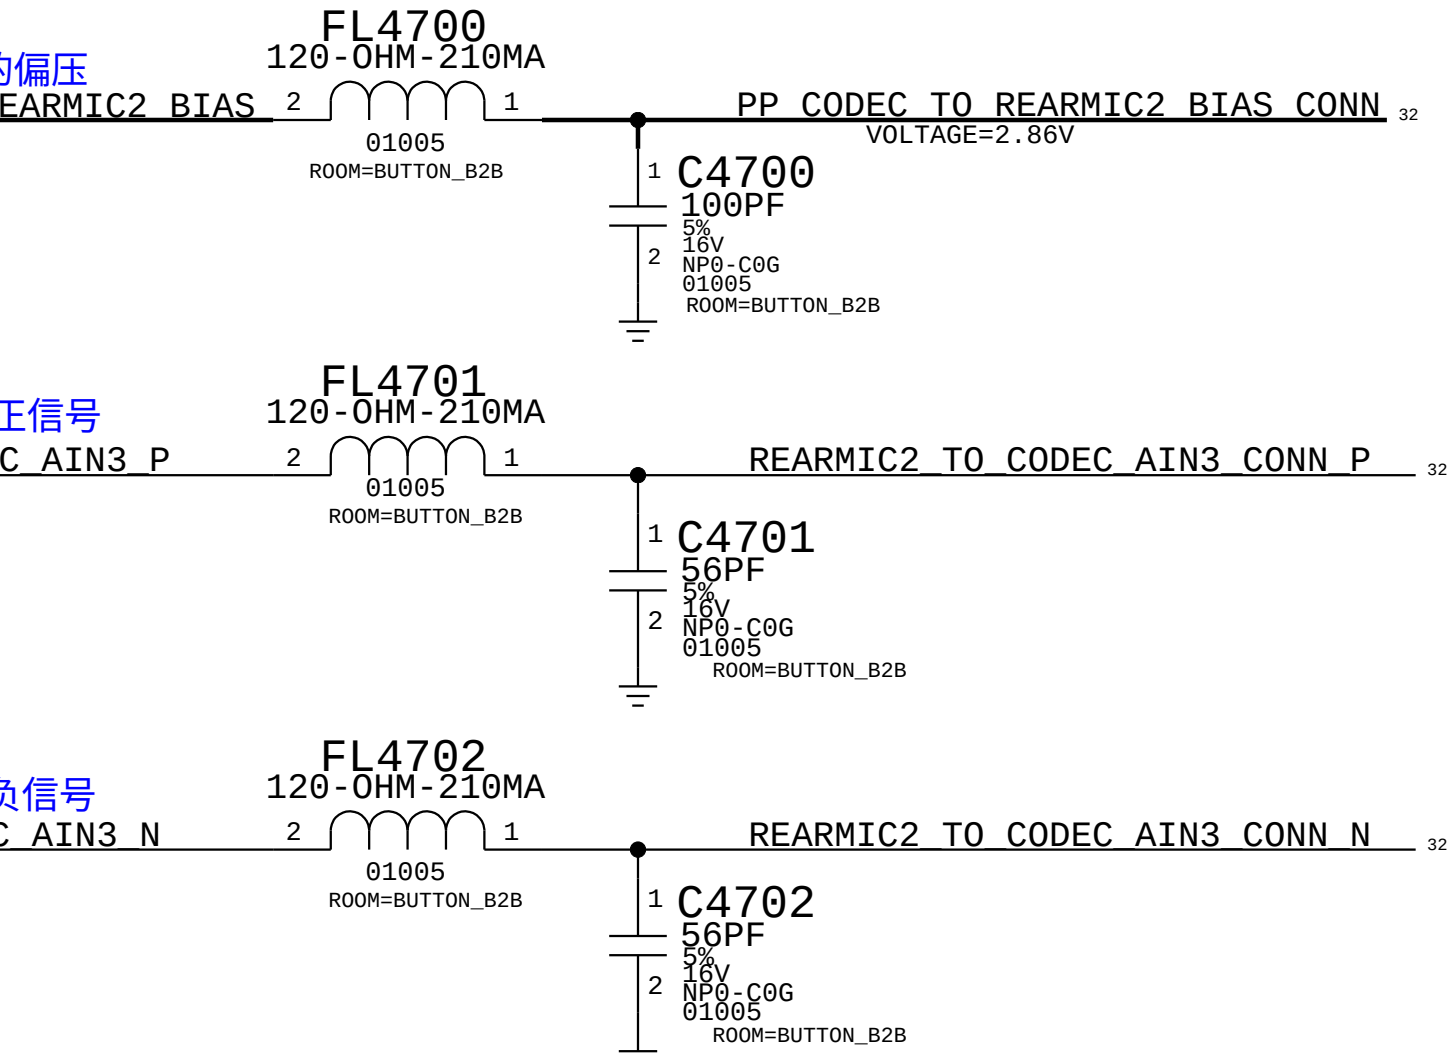



迅维手机维修培训

联系电话：0755-61506416

咨询QQ：1727176051 981775188

基带 WIFI 蓝牙 NFC

(此页是信号转换，不是IC)

MIS-NAMED NET. GPS_TIME_MARK ACTUALLY GOES FROM AP TO BB.

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188



N71-SPECIFIC RADIO PAGE 2

DIVERSITY LNA


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

D

C


B

A

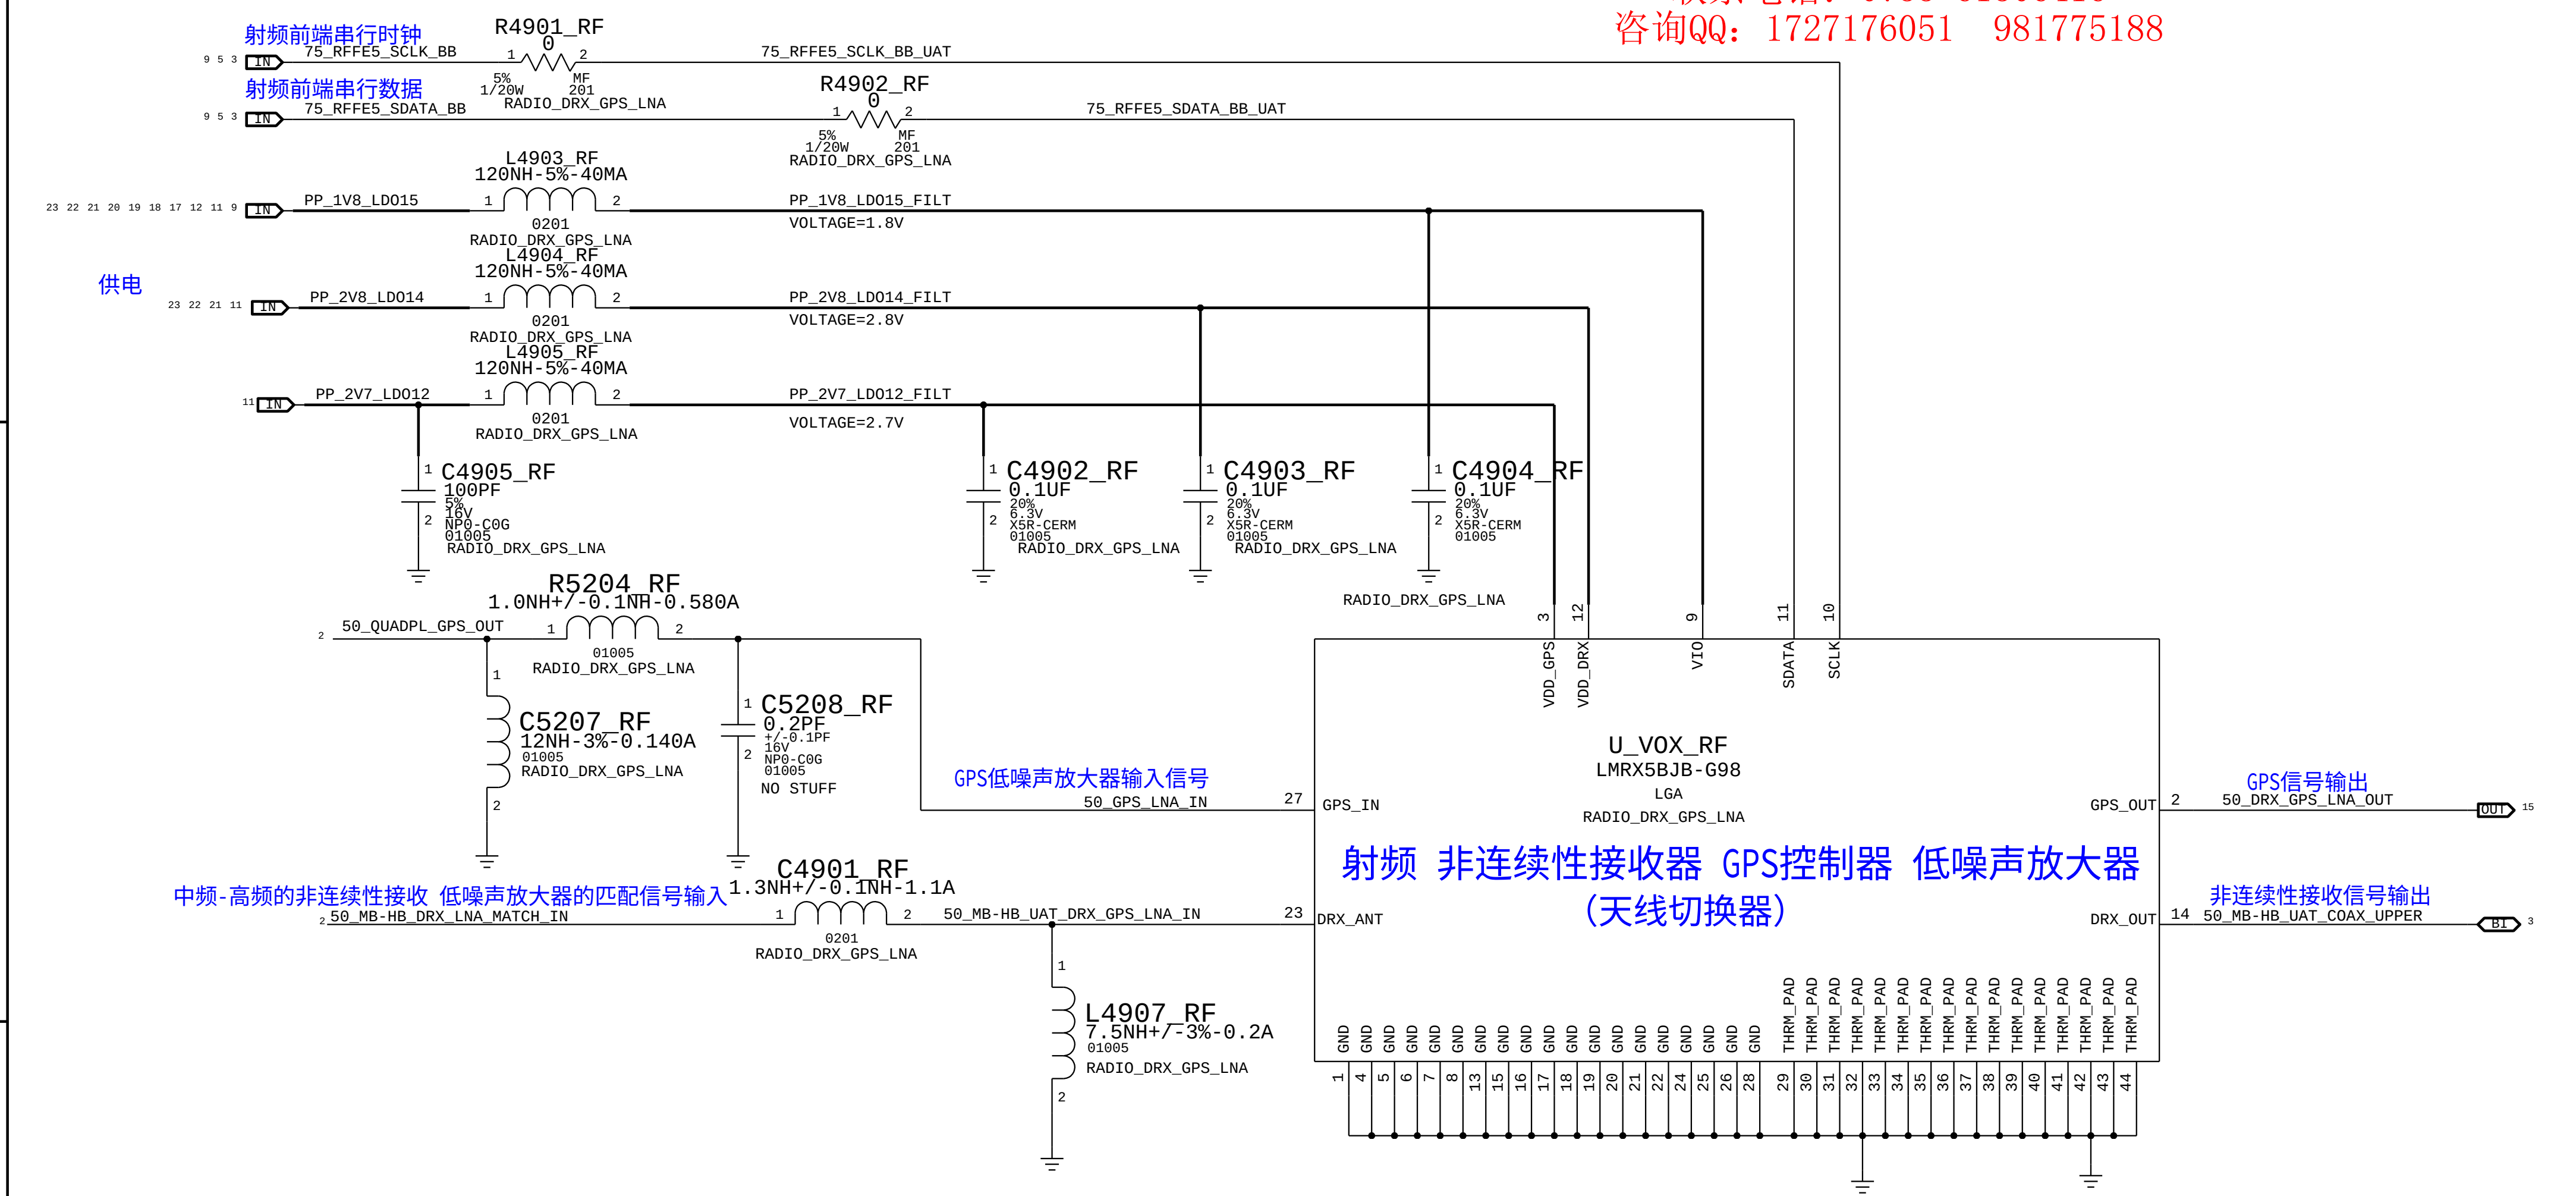

WIFI ANT FEED

WIFI天线反馈

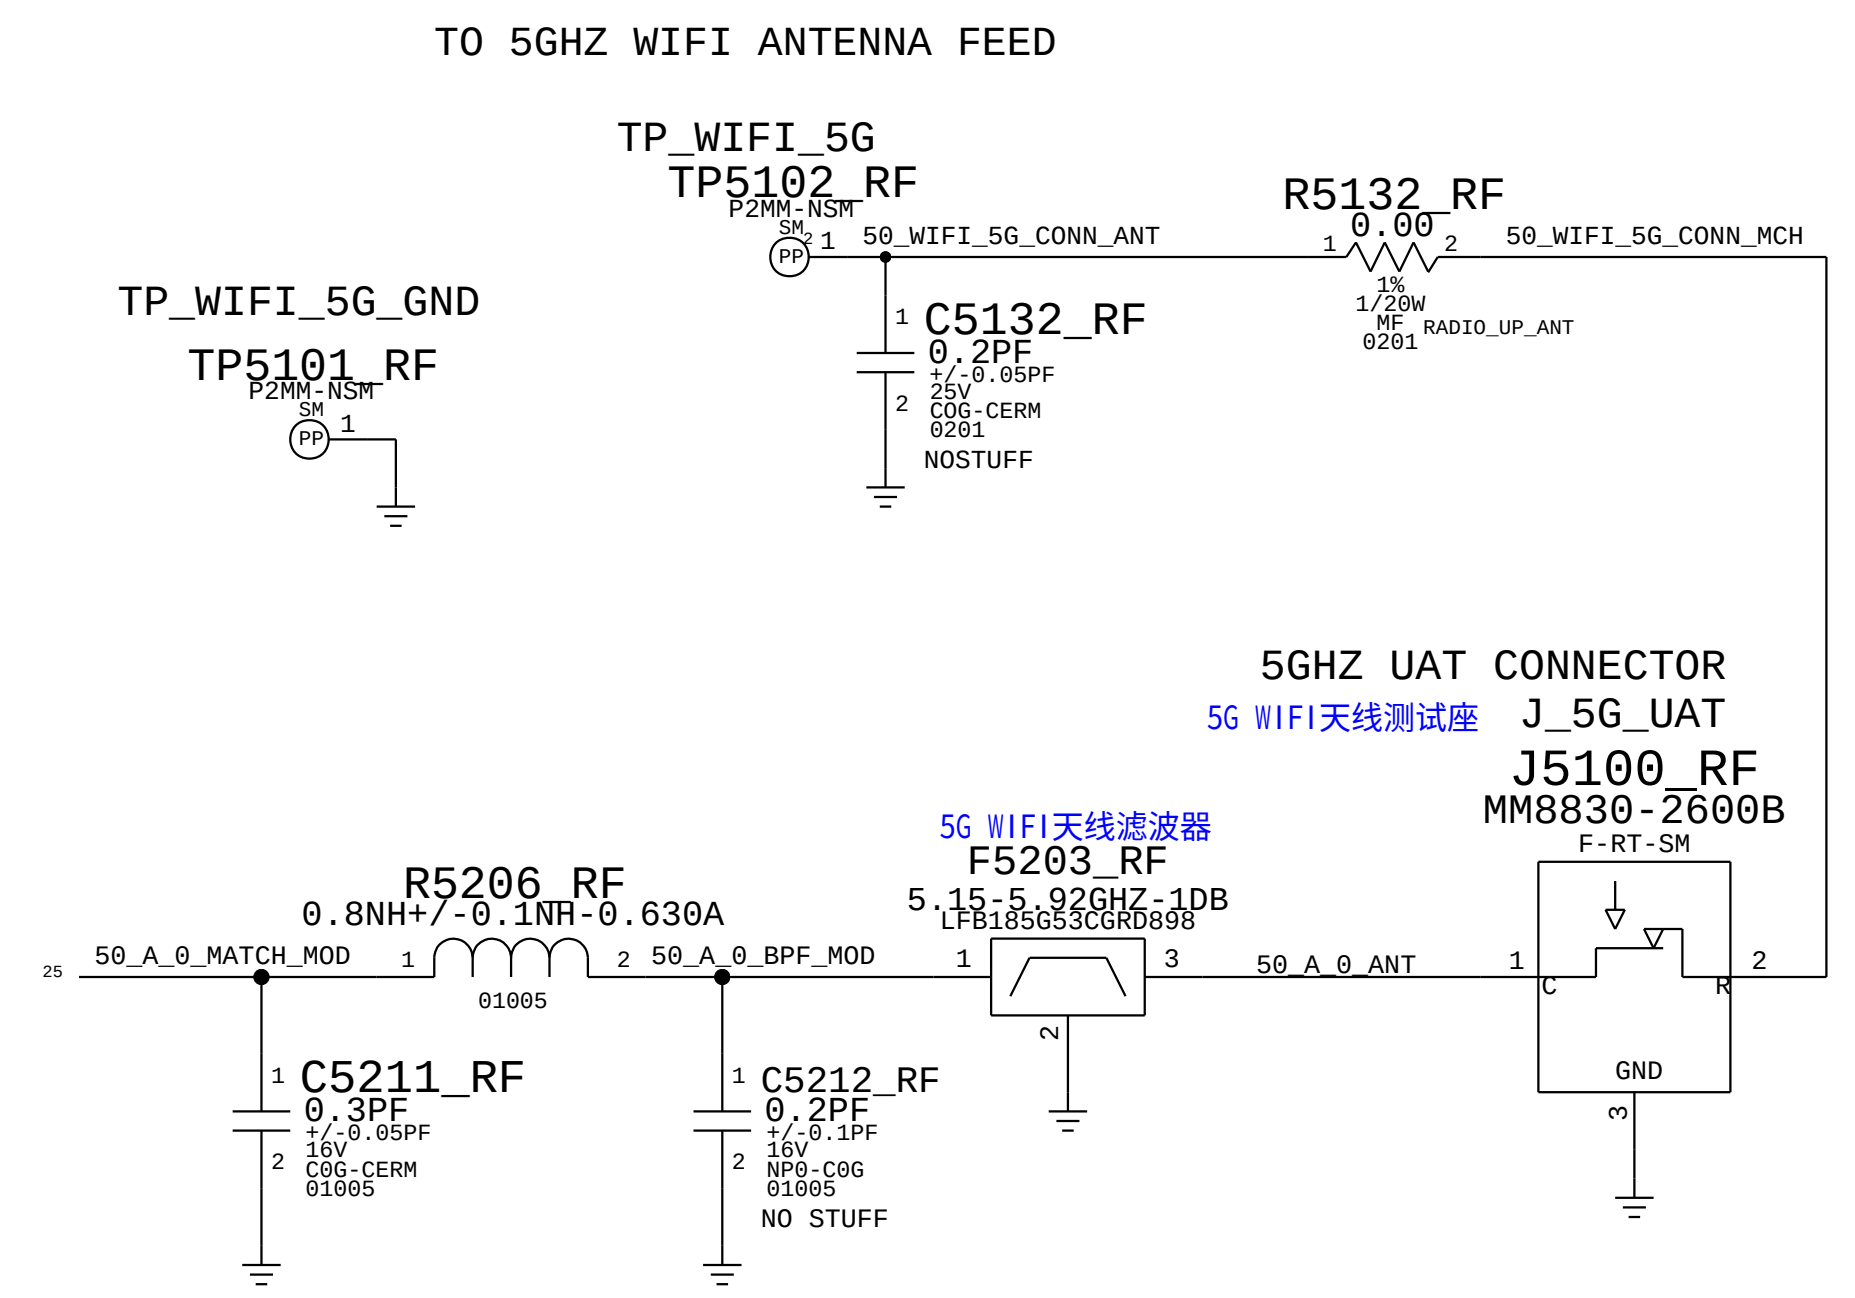


ANT

上部天线馈送信号
5G WIFI天线信号

UAT ANT FEED

测试天线反馈

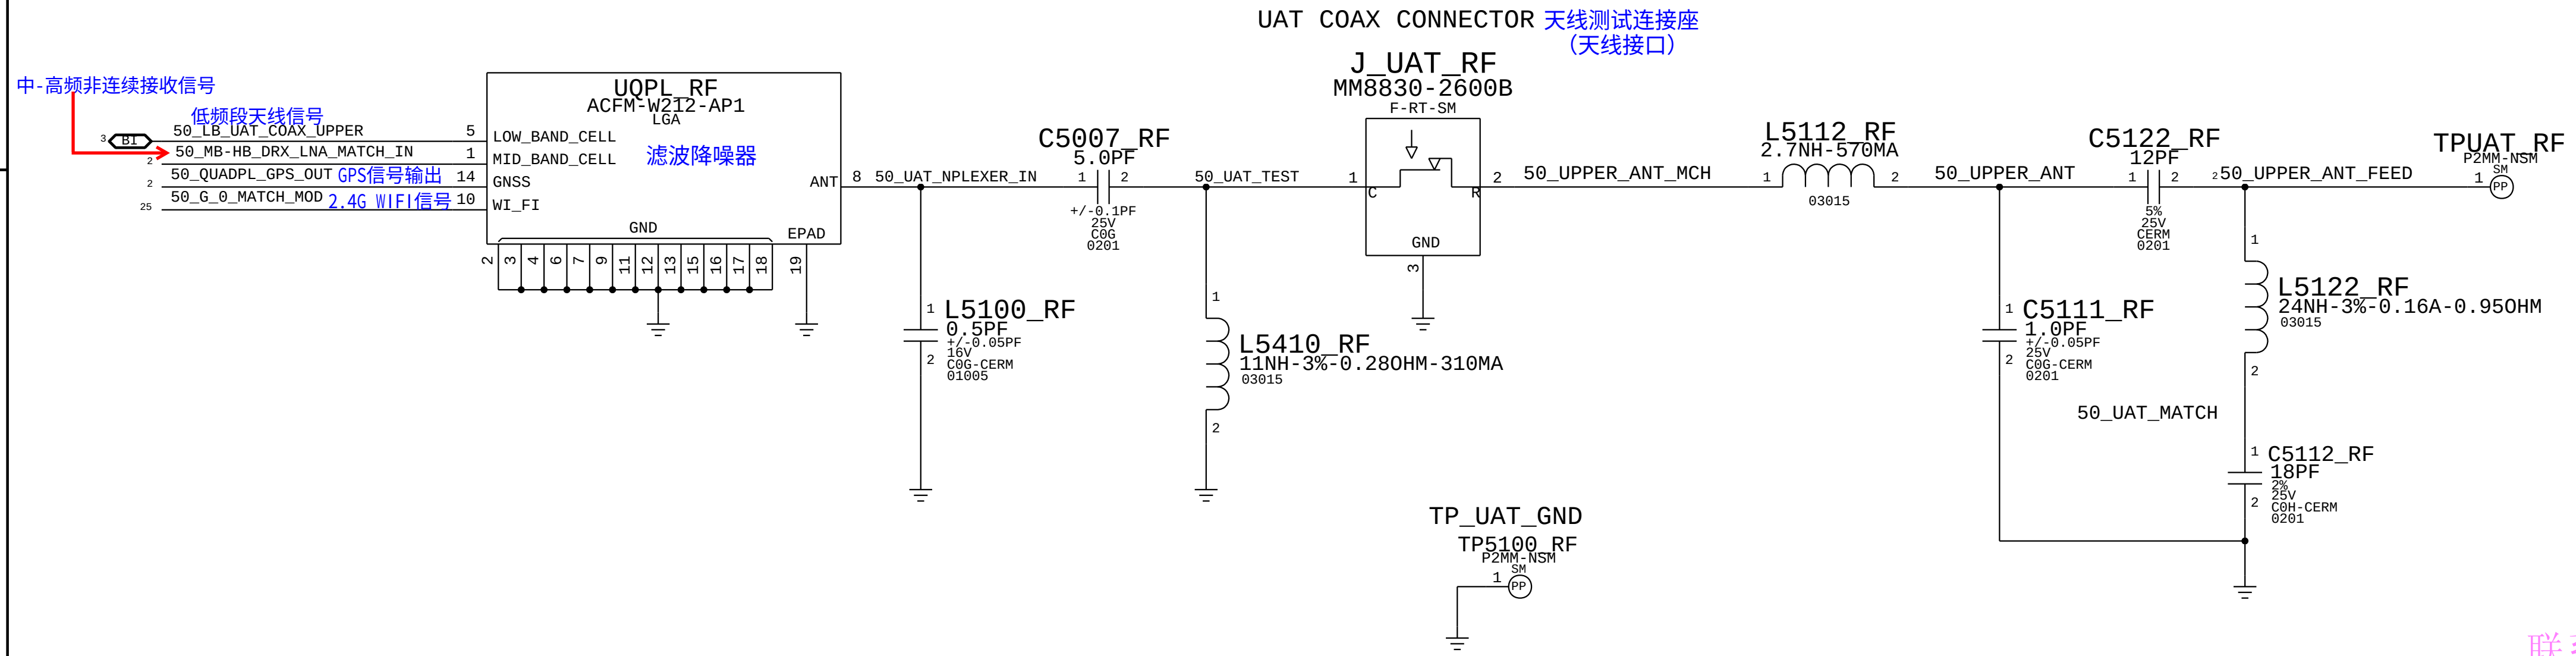

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188




N71-SPECIFIC RADIO PAGE 3

ANTENNA FEEDS AND CONNECTORS

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

UAT TUNER 频道调节器

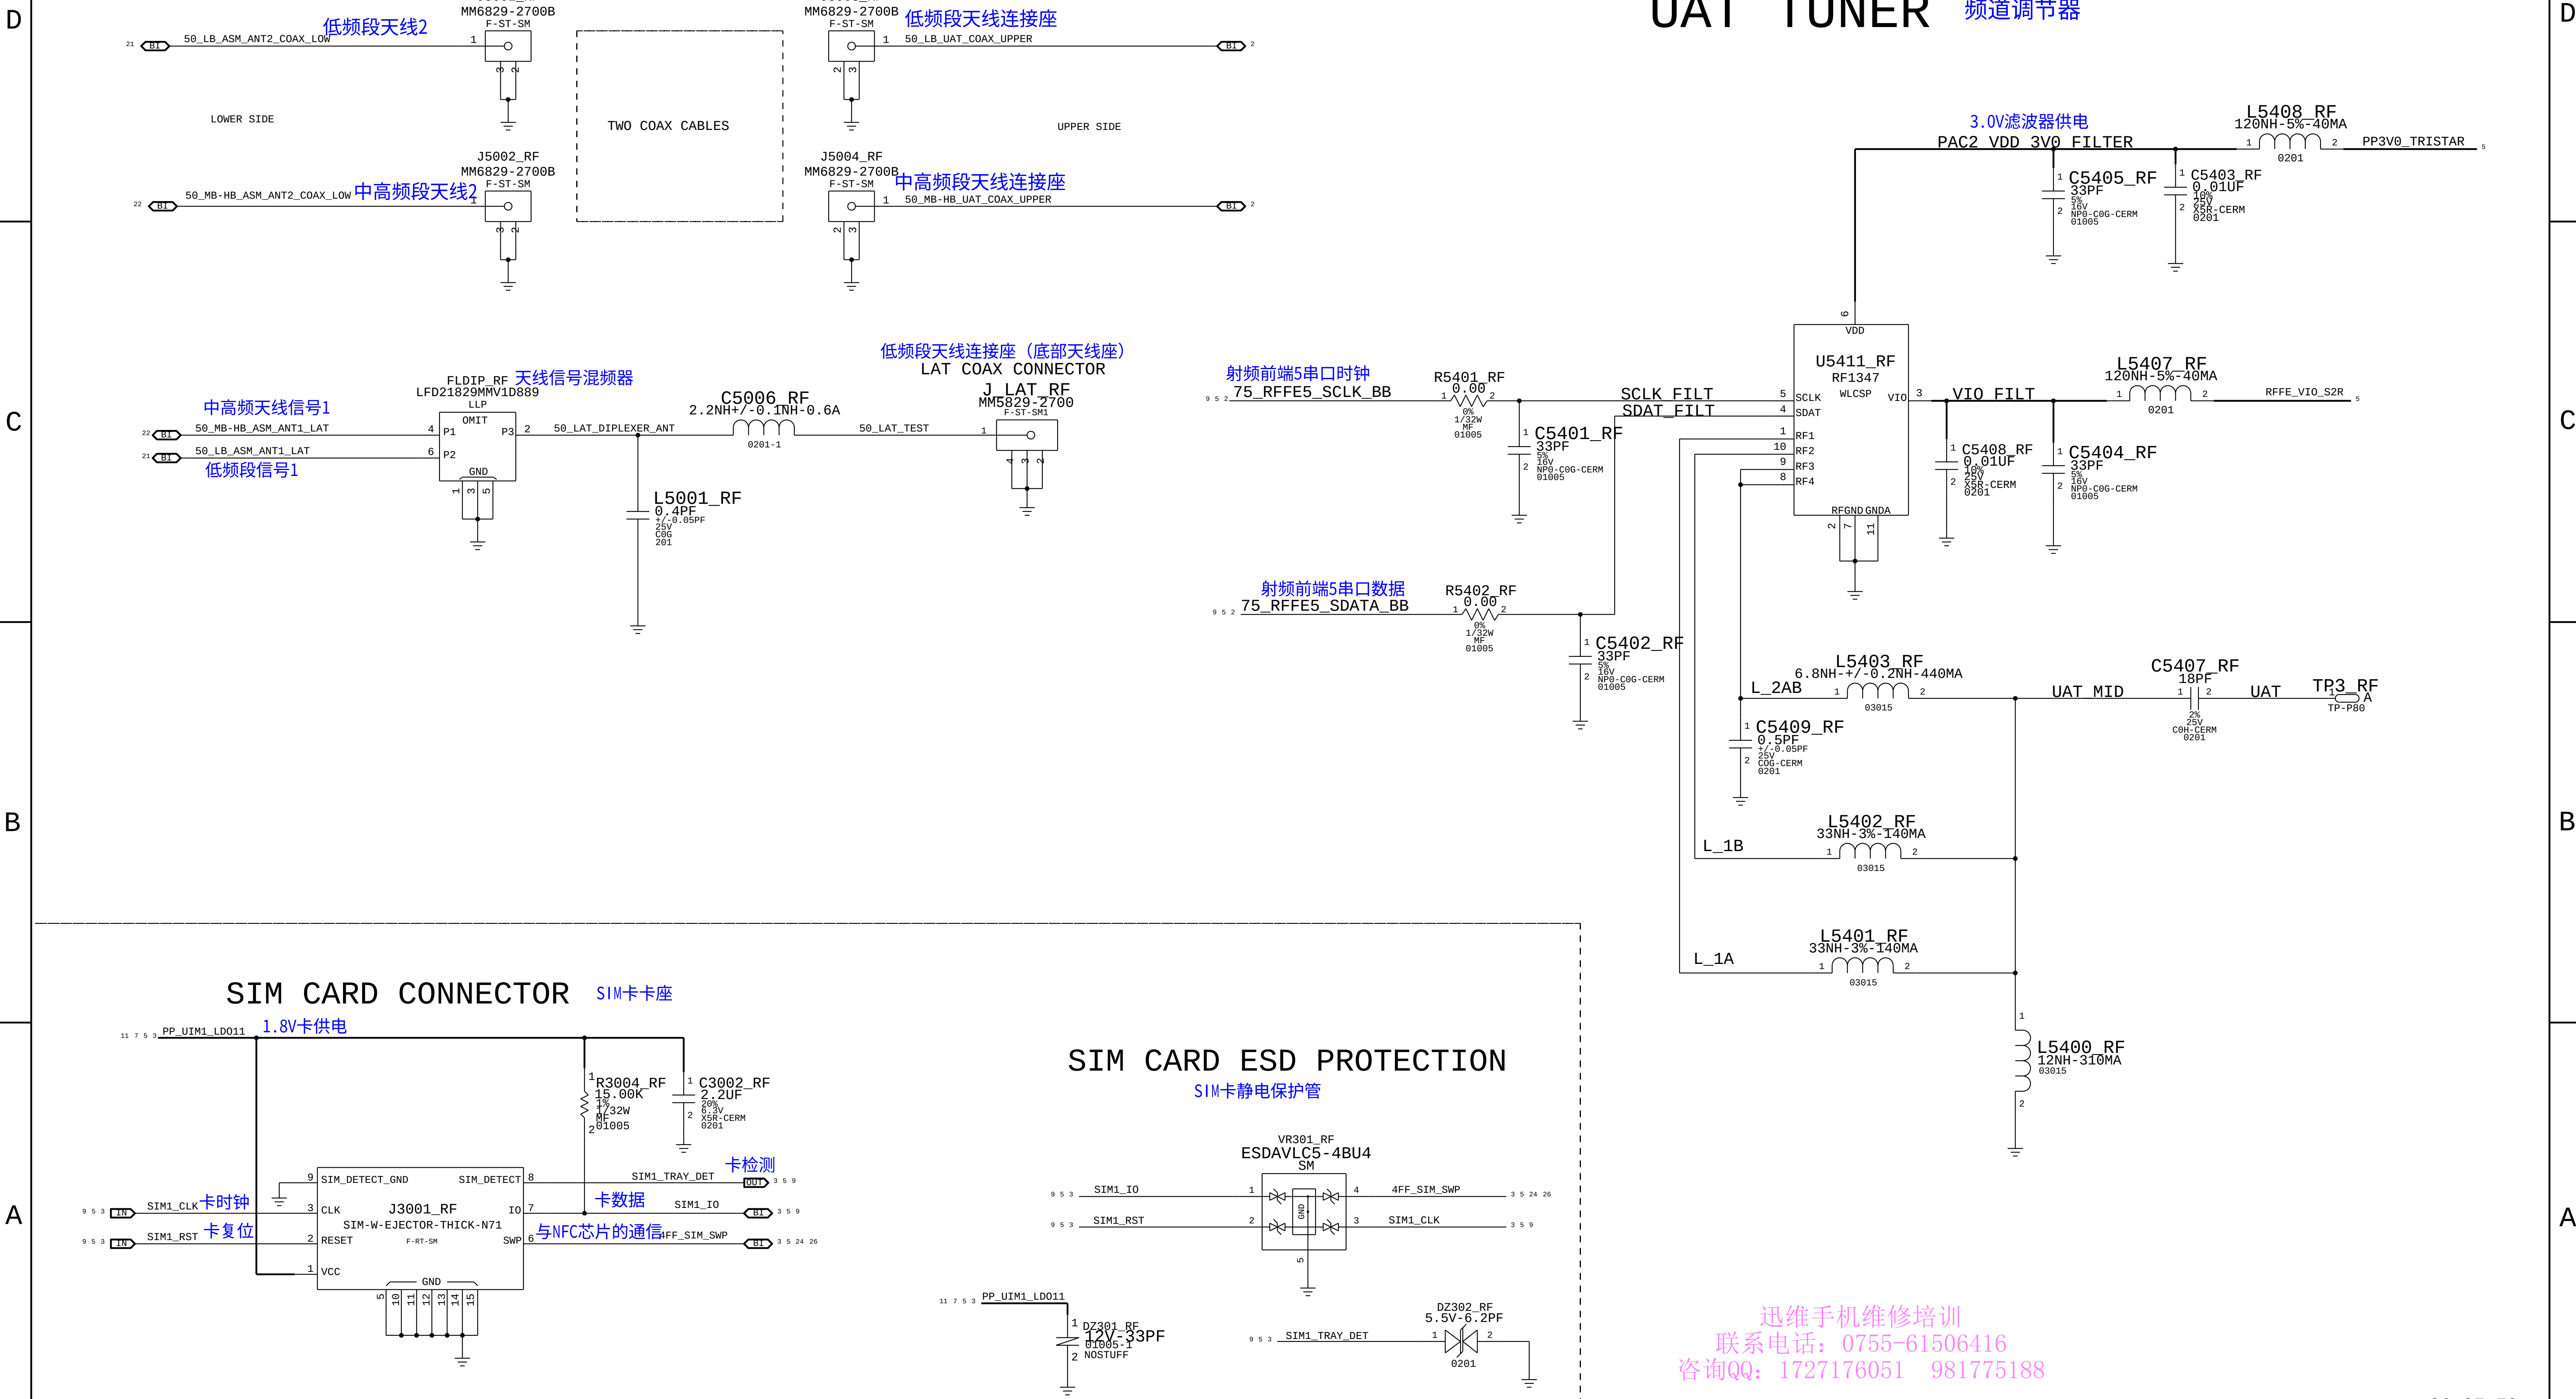

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188




8		7		6		5		4		3		2		1		CHINAFOX			
N71-SPECIFIC RADIO PAGE 4																			
迅维手机维修培训 联系电话：0755-61506416 咨询QQ：1727176051 981775188																			
D																		D	
2.4G WIFI天线滤波电路																			
WLAN LAT 2.4GHZ BAW BPF																			
2.4G WIFI收发信号 50_G_1_MATCH_MOD 25 1 0.4NH+/-0.1NH-320MA L5205_RF 01005 2 50_G_1_BAW_TX_RX 1 NO STUFF L5202_RF 12NH-3%-0.140A 01005 2 GROUND F5201_RF WLAN-BT-LTE 885118 LGA INPUT OUTPUT 4 50_G_1_BAW_ANT 1 6.8NH-3%-0.210A L5204_RF 01005 2 GROUND 2.4G WIFI收发信号 C5203_RF 3.6PF 1 +/-0.1PF NP0-C0G 01005 2 50_G_1_DPLX 25 1 4.0NH+/-0.1NH-0.27A L5206_RF 01005 2 GROUND 37 OF 59																			
C																		C	
B																		B	
A																		A	
迅维手机维修培训 联系电话：0755-61506416 咨询QQ：1727176051 981775188																			
8		7		6		5		4		3		2		1					



BASEBAND: POWER 1

基带电源1

迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188

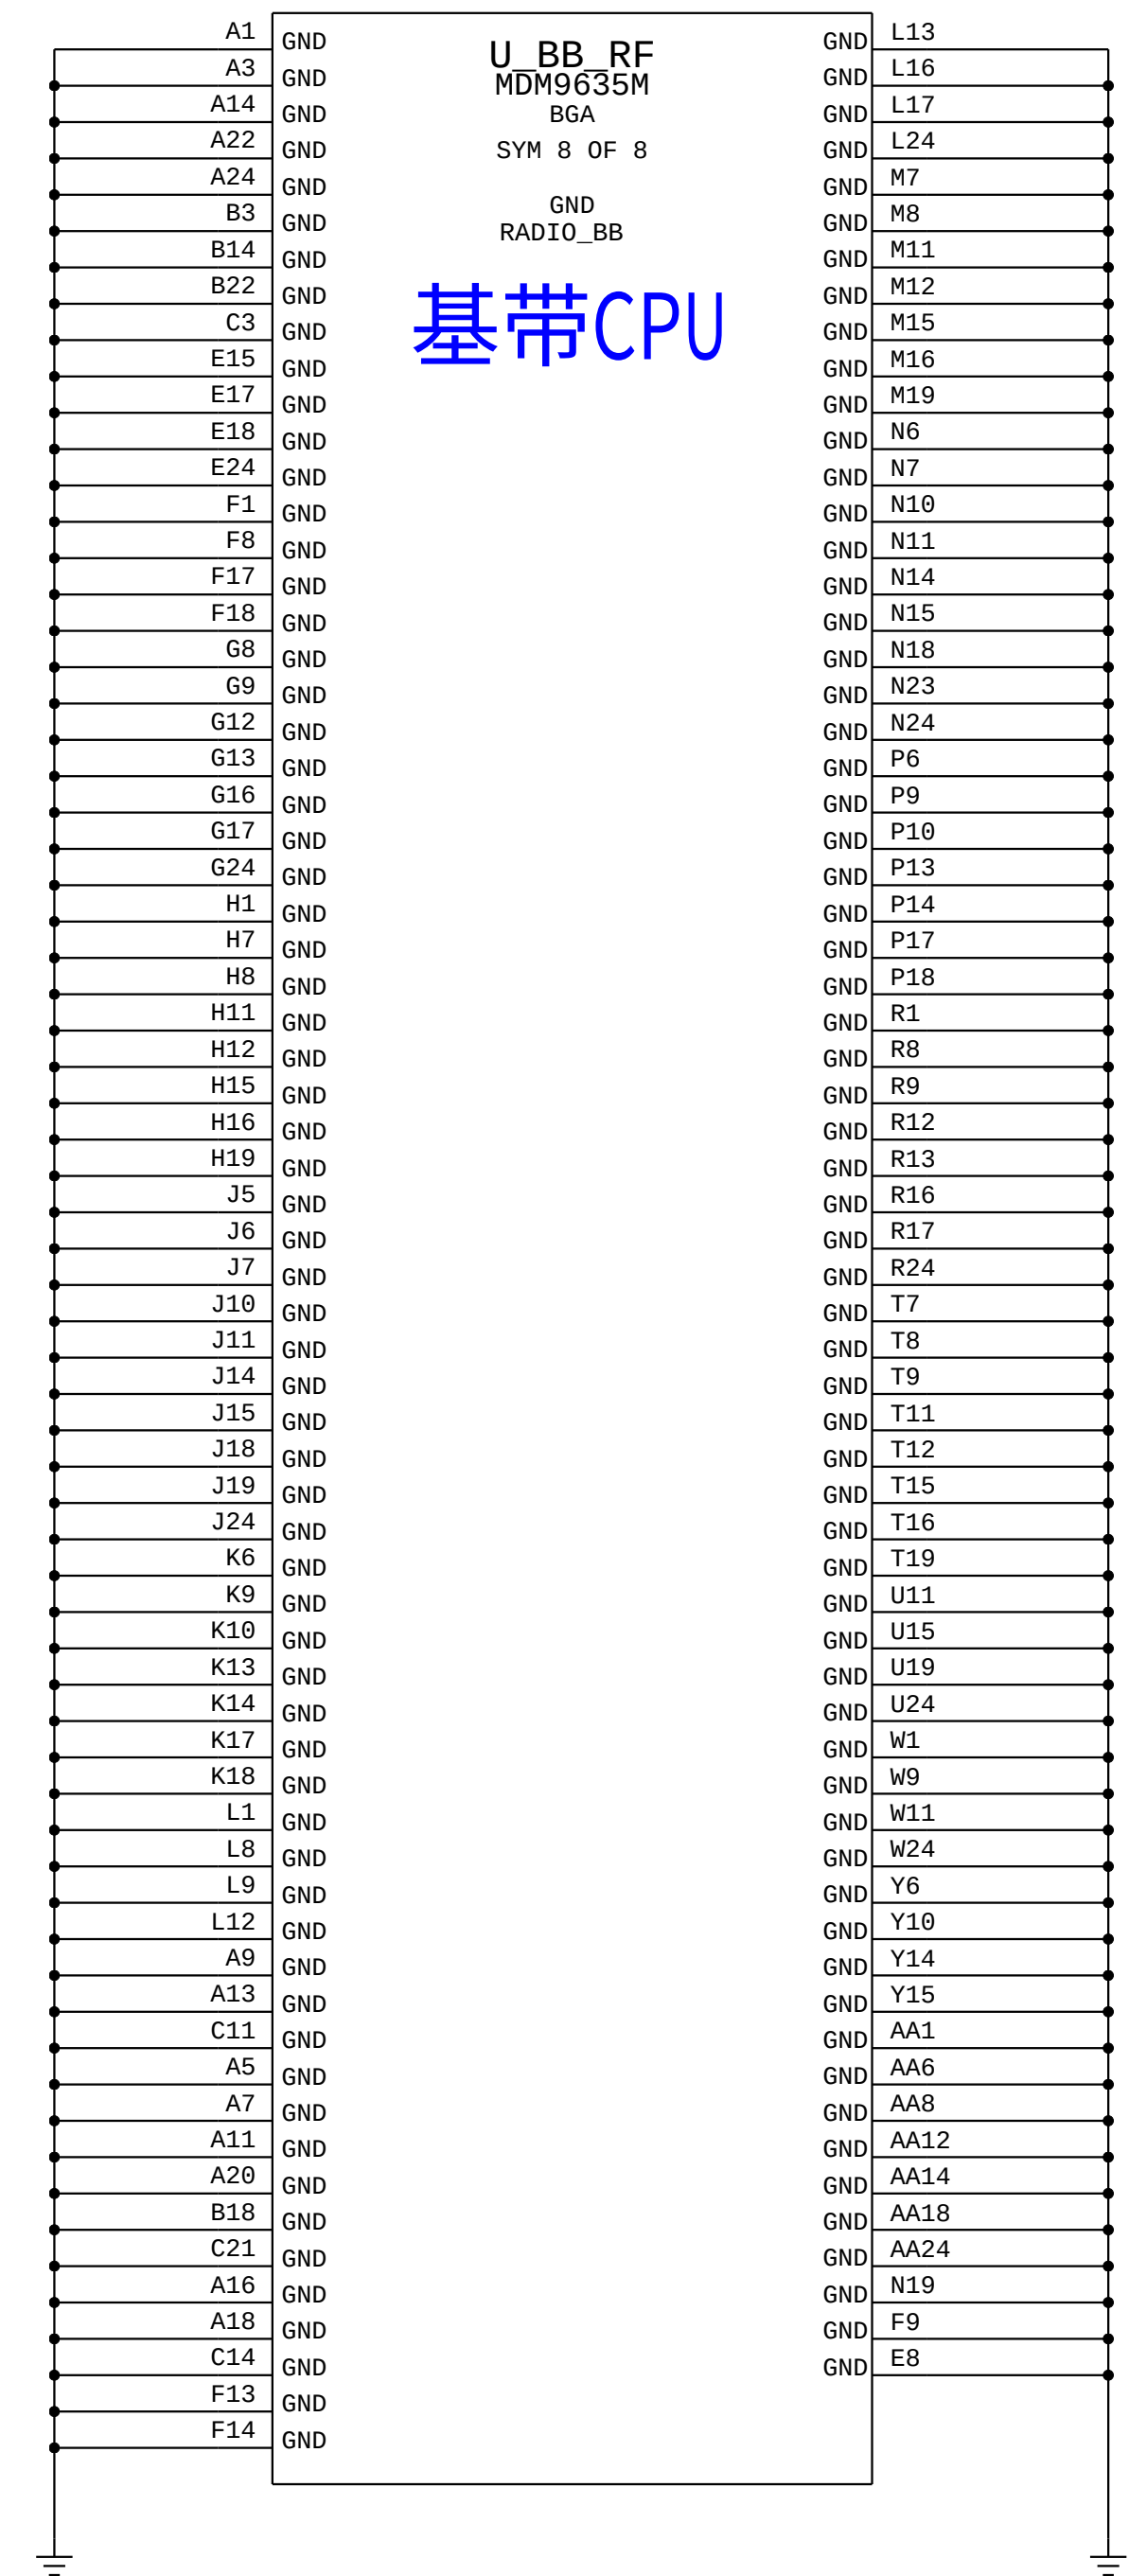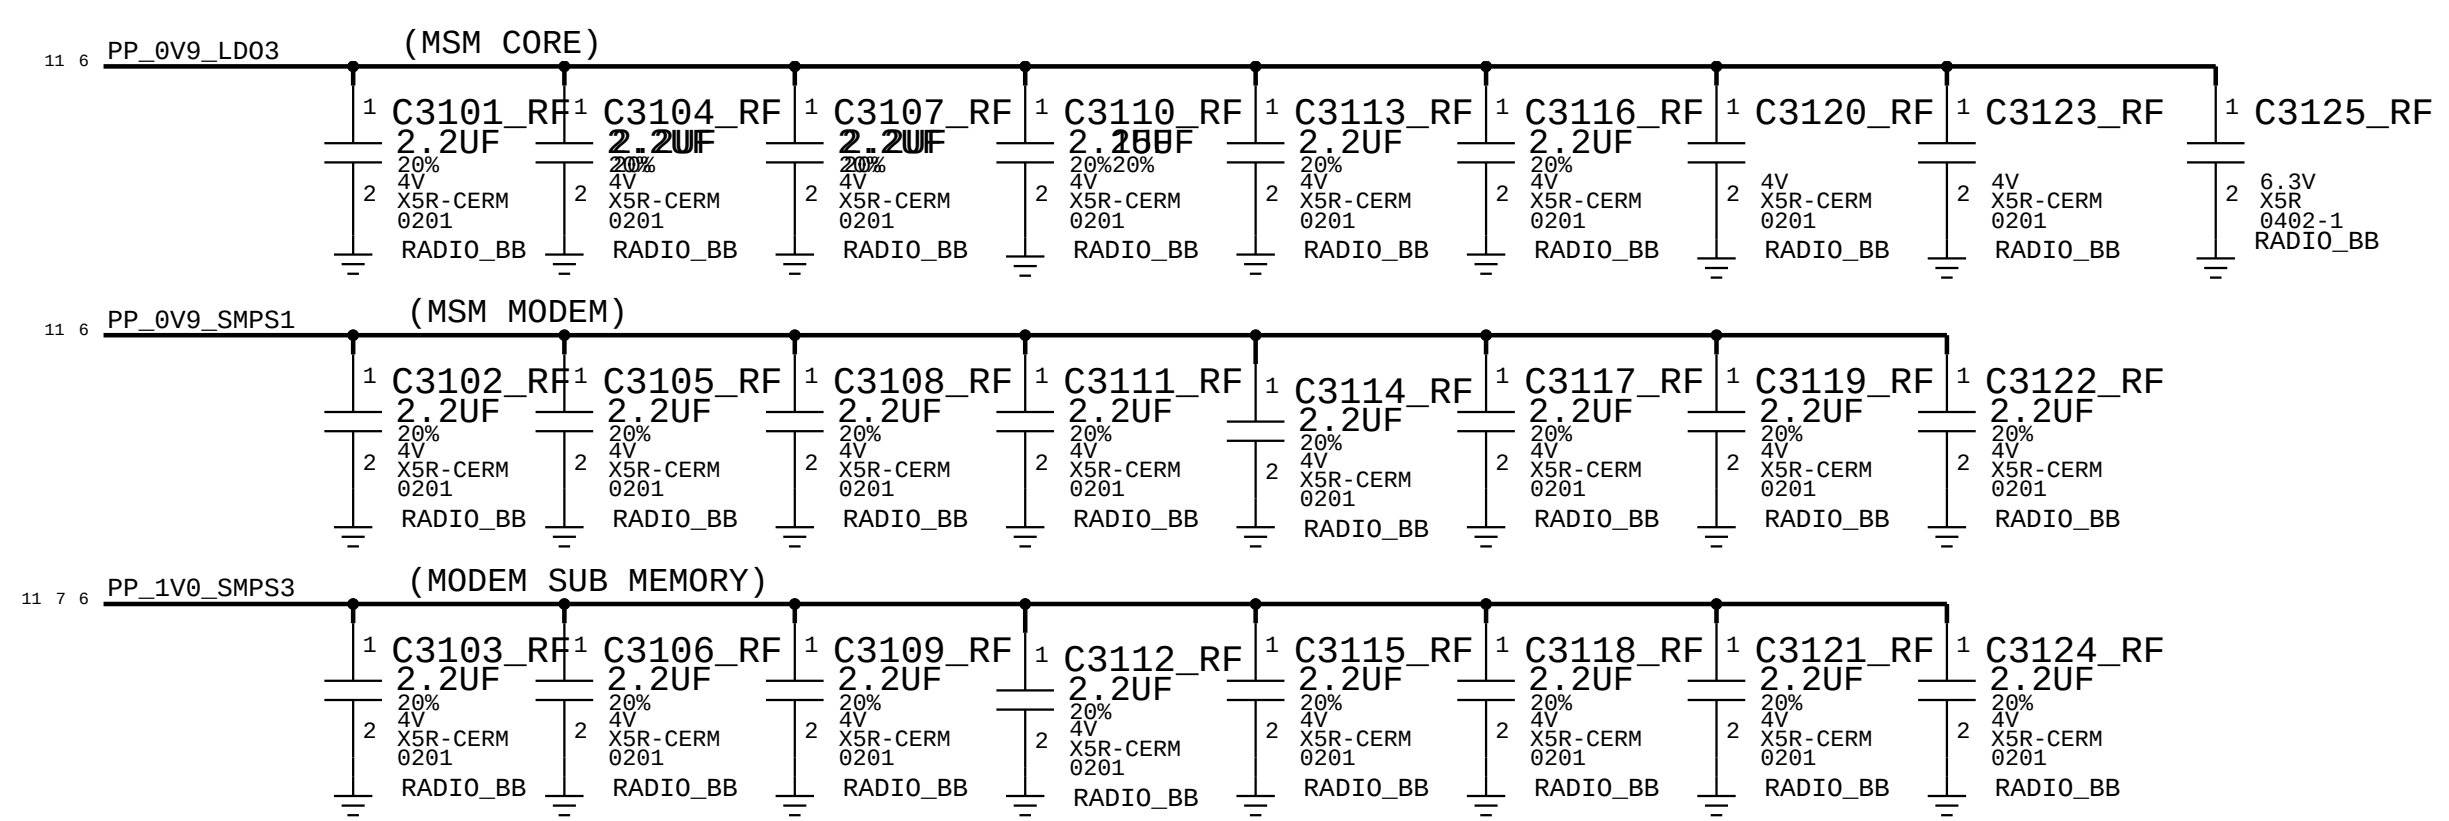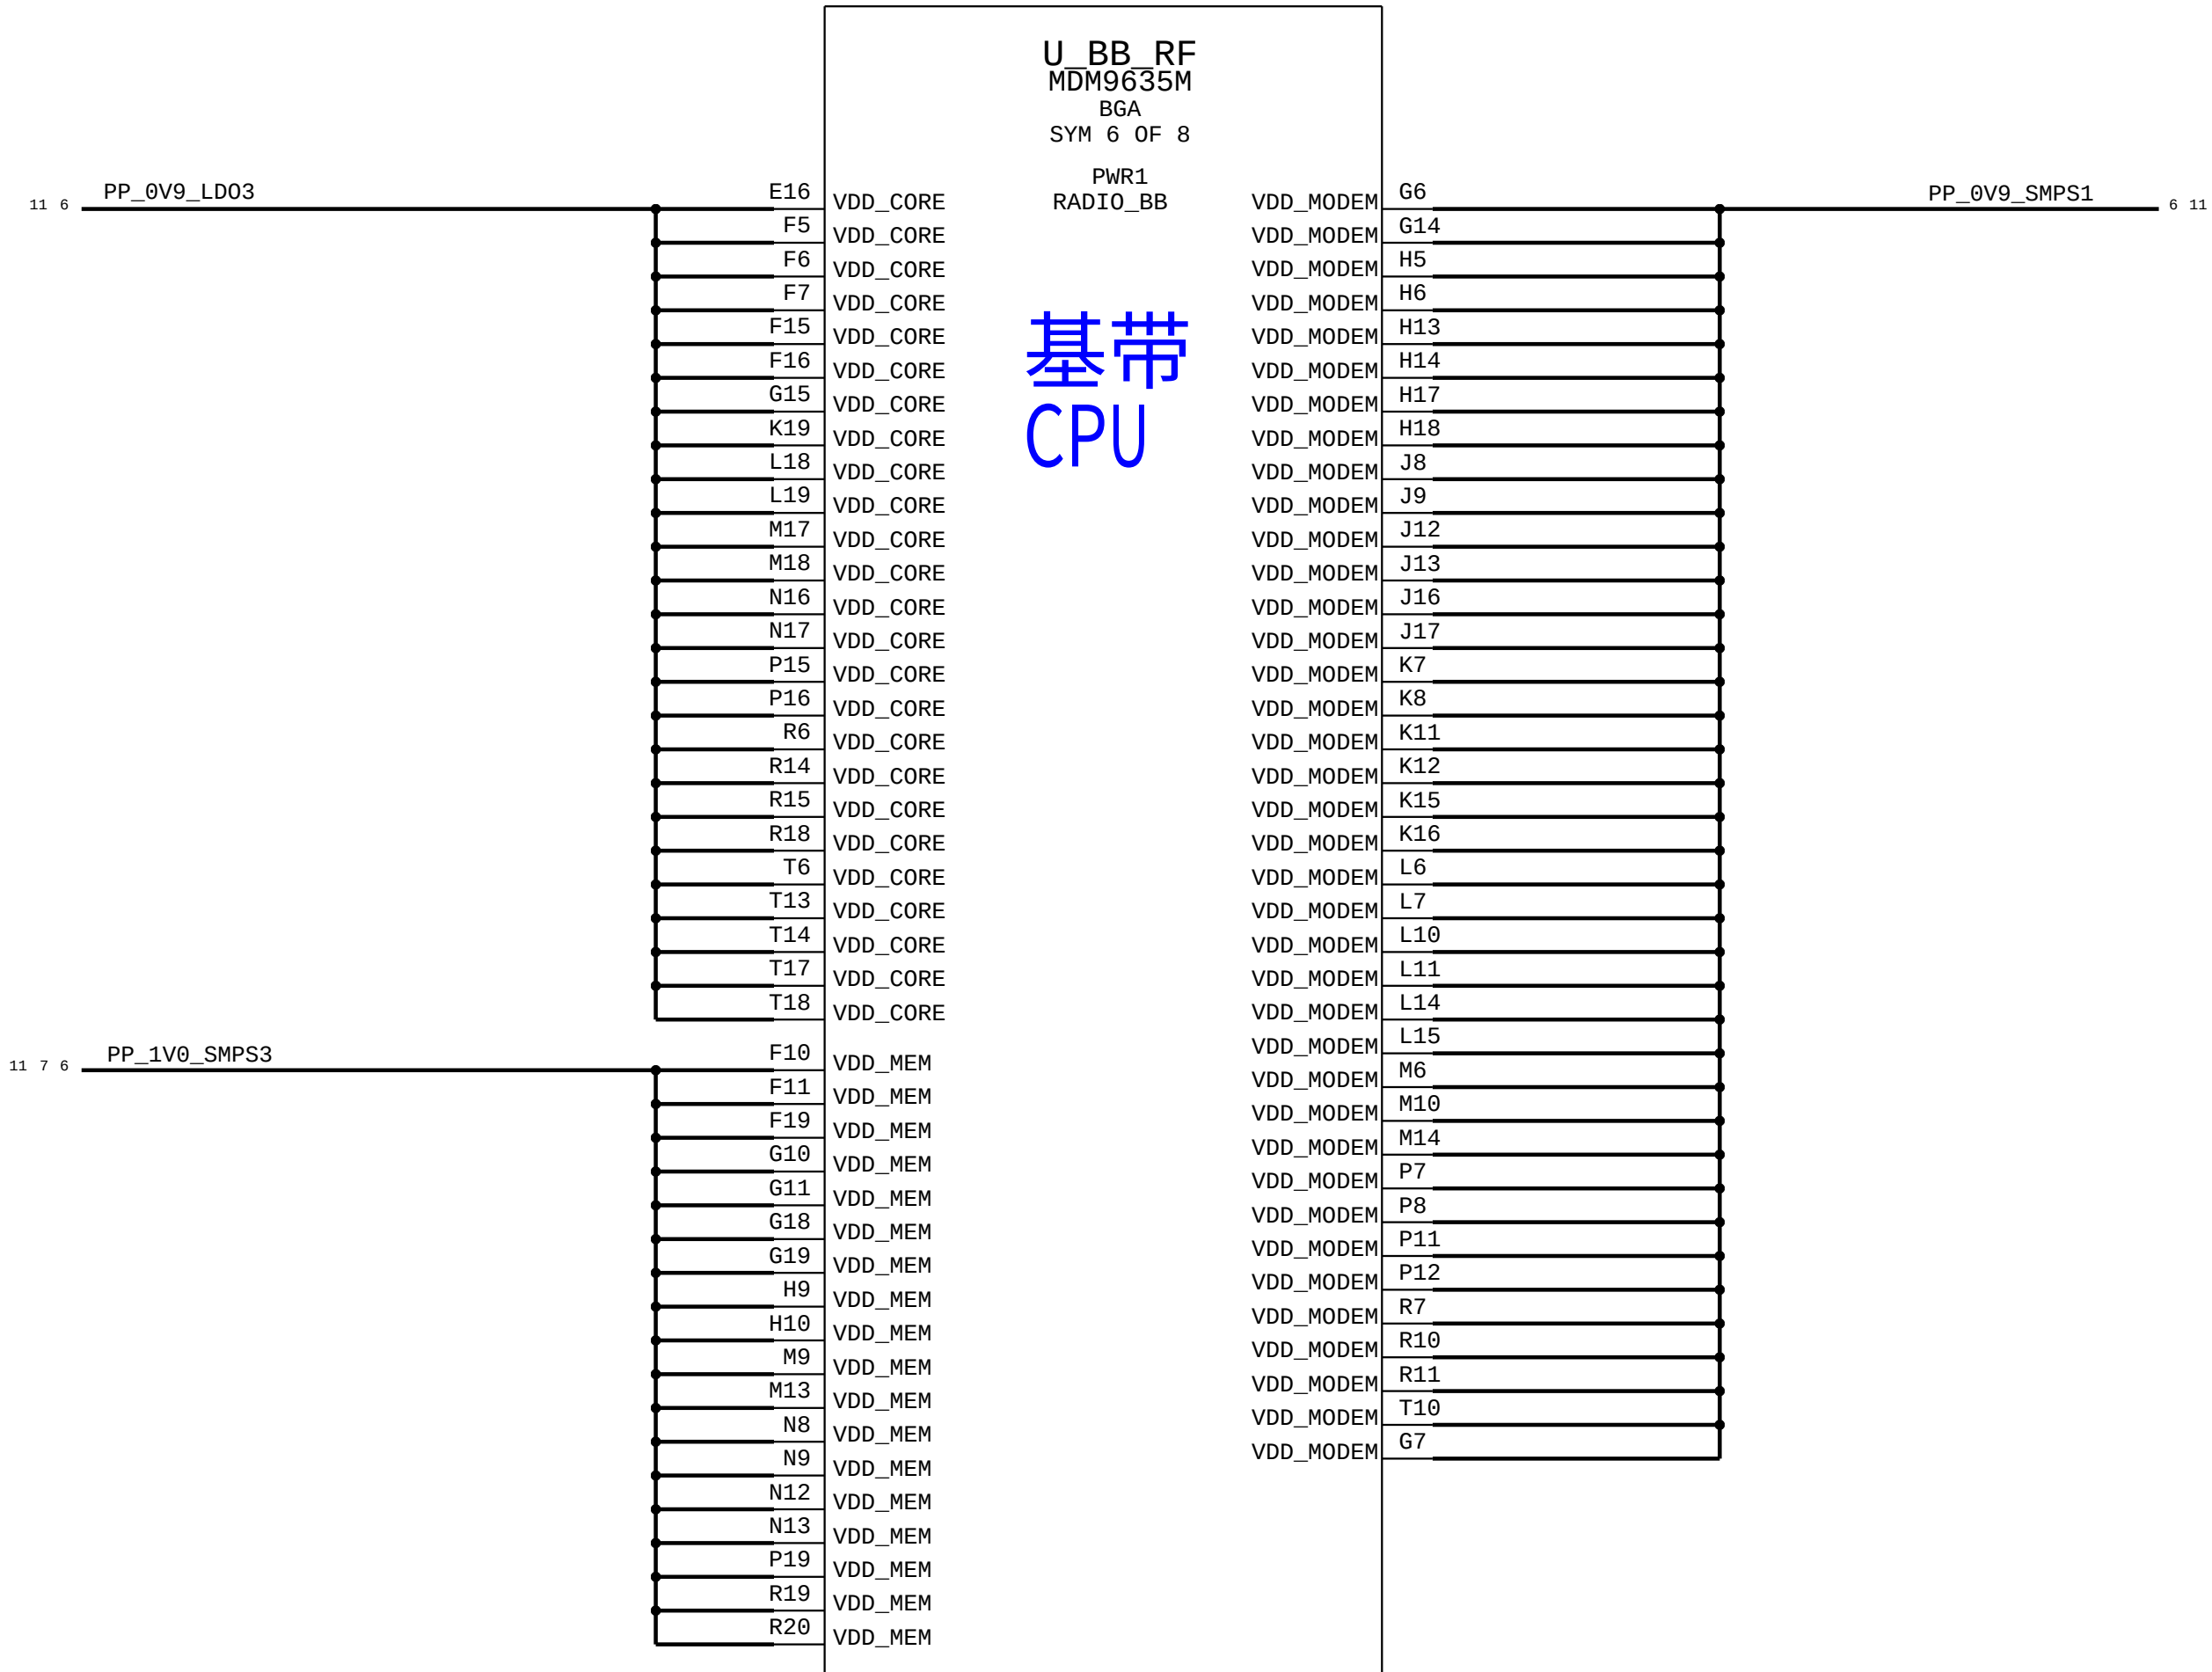

迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188




BASEBAND: POWER 2

基带电源2

迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188

U_BB_RF
MDM9635M
BGA
SYM 7 OF 8
PWR2
RADIO_BB

基带CPU

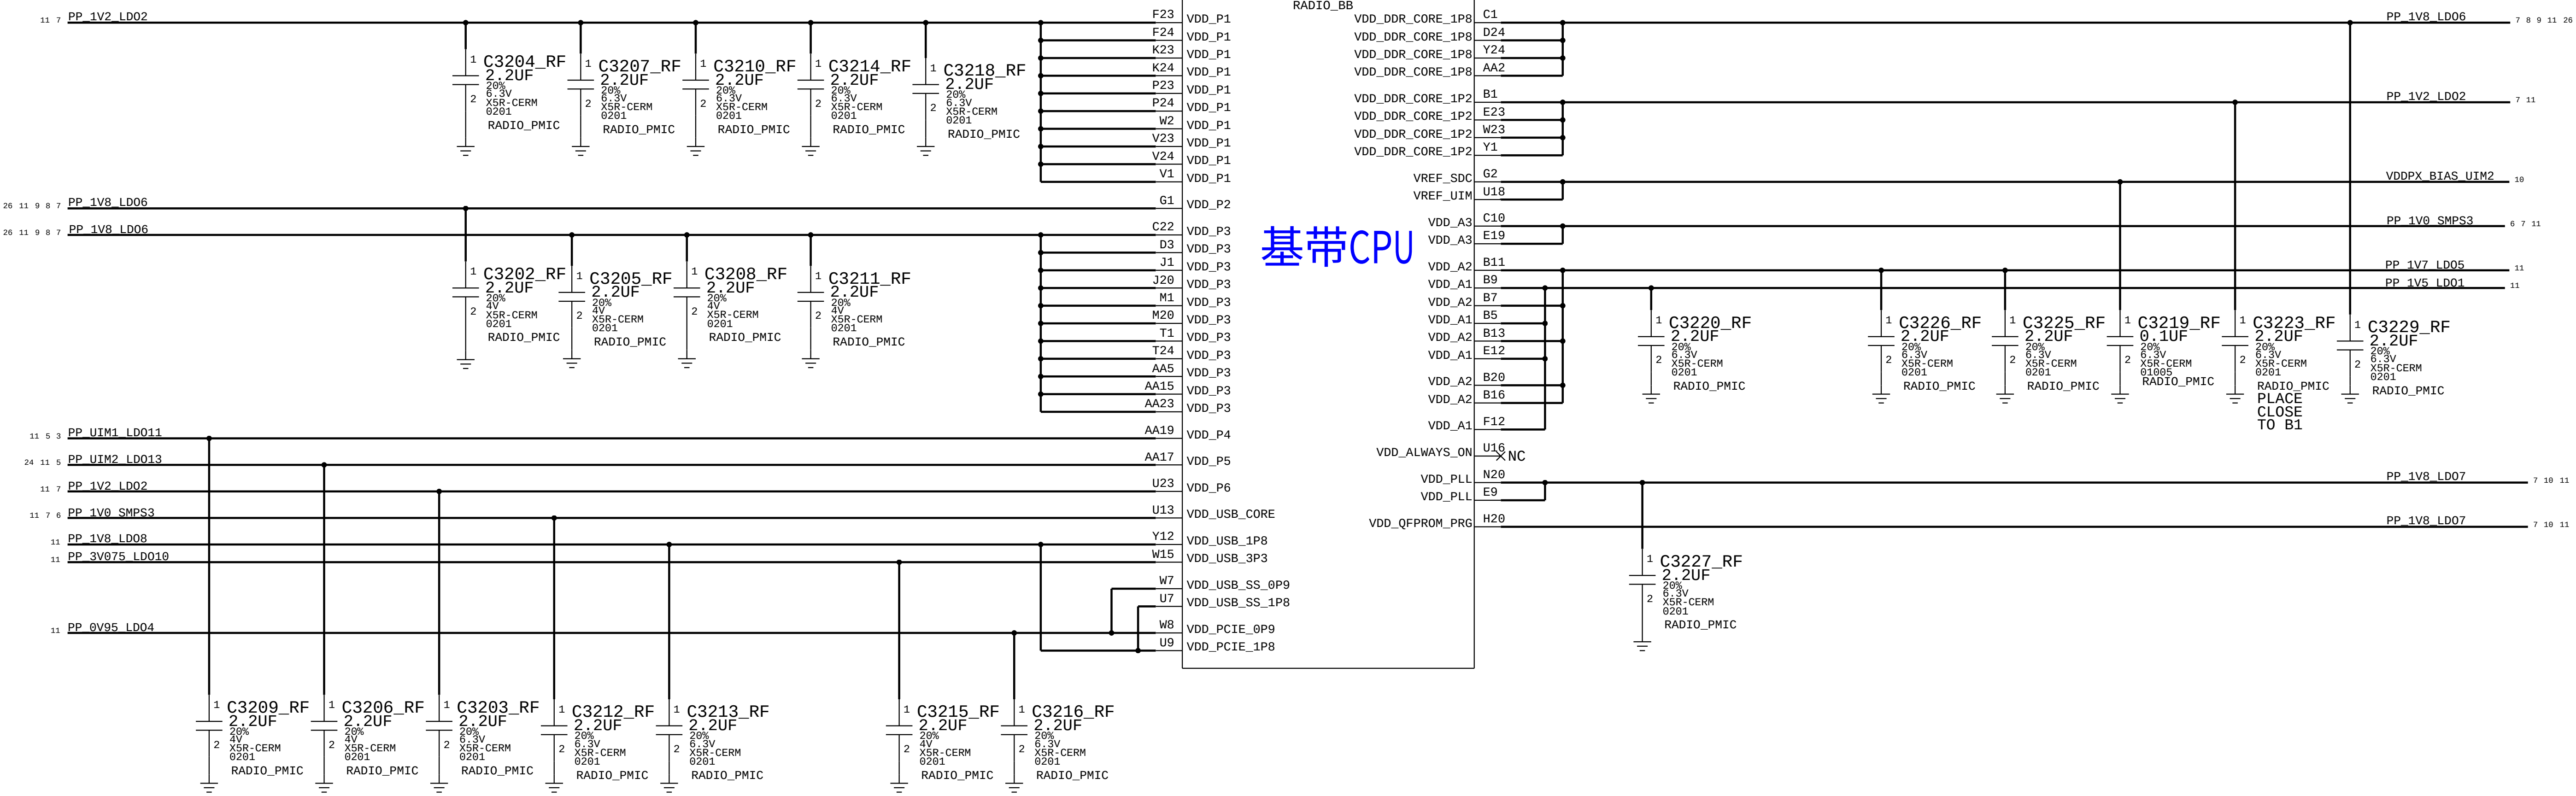

迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188

BASEBAND: CONTROL AND INTERFACES

基带：控制和接口

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

基带CPU

基带CPU

基带CPU

基带CPU

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

BASEBAND: GPIOs

迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188

基带CPU

缓冲器
BUFFER ON RFFE5
SCLK/SDATA_A IS OUTPUT

基带码片



迅维手机维修培训

联系电话: 0755-61506416
咨询QQ: 1727176051 981775188


PMU： CONTROL AND CLOCKS

HW_REV2_ID	R3502	R3503	CONFIG
1.80V	698K	-	MLB
0.12V	698K	51.1K	SELF GEN


HW_REV_ID	R3504	R3505	REVISION
0.10V	887K	51.1K	DEV1
0.30V	255K	51.1K	DEV2
0.50V	124K	51.1K	DEV3
0.70V	82.5K	51.1K	DEV4/PROTOMLB1
0.90V	51.1K	51.1K	PROTOMLB2
1.10V	31.6K	51.1K	DEV5/PROT01
1.20V	50K	100K	PROT02
1.31V	39K	105K	EVT
1.43V	13.3K	51.1K	EVT_ALT
1.55V	8.25K	51.1K	CARRIER BUILD
1.67V	3.92K	51.1K	DVT
1.80V	10K	-	PVT

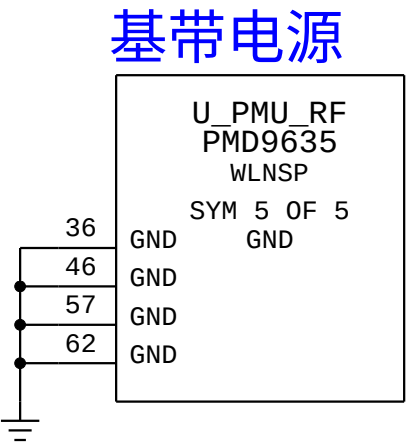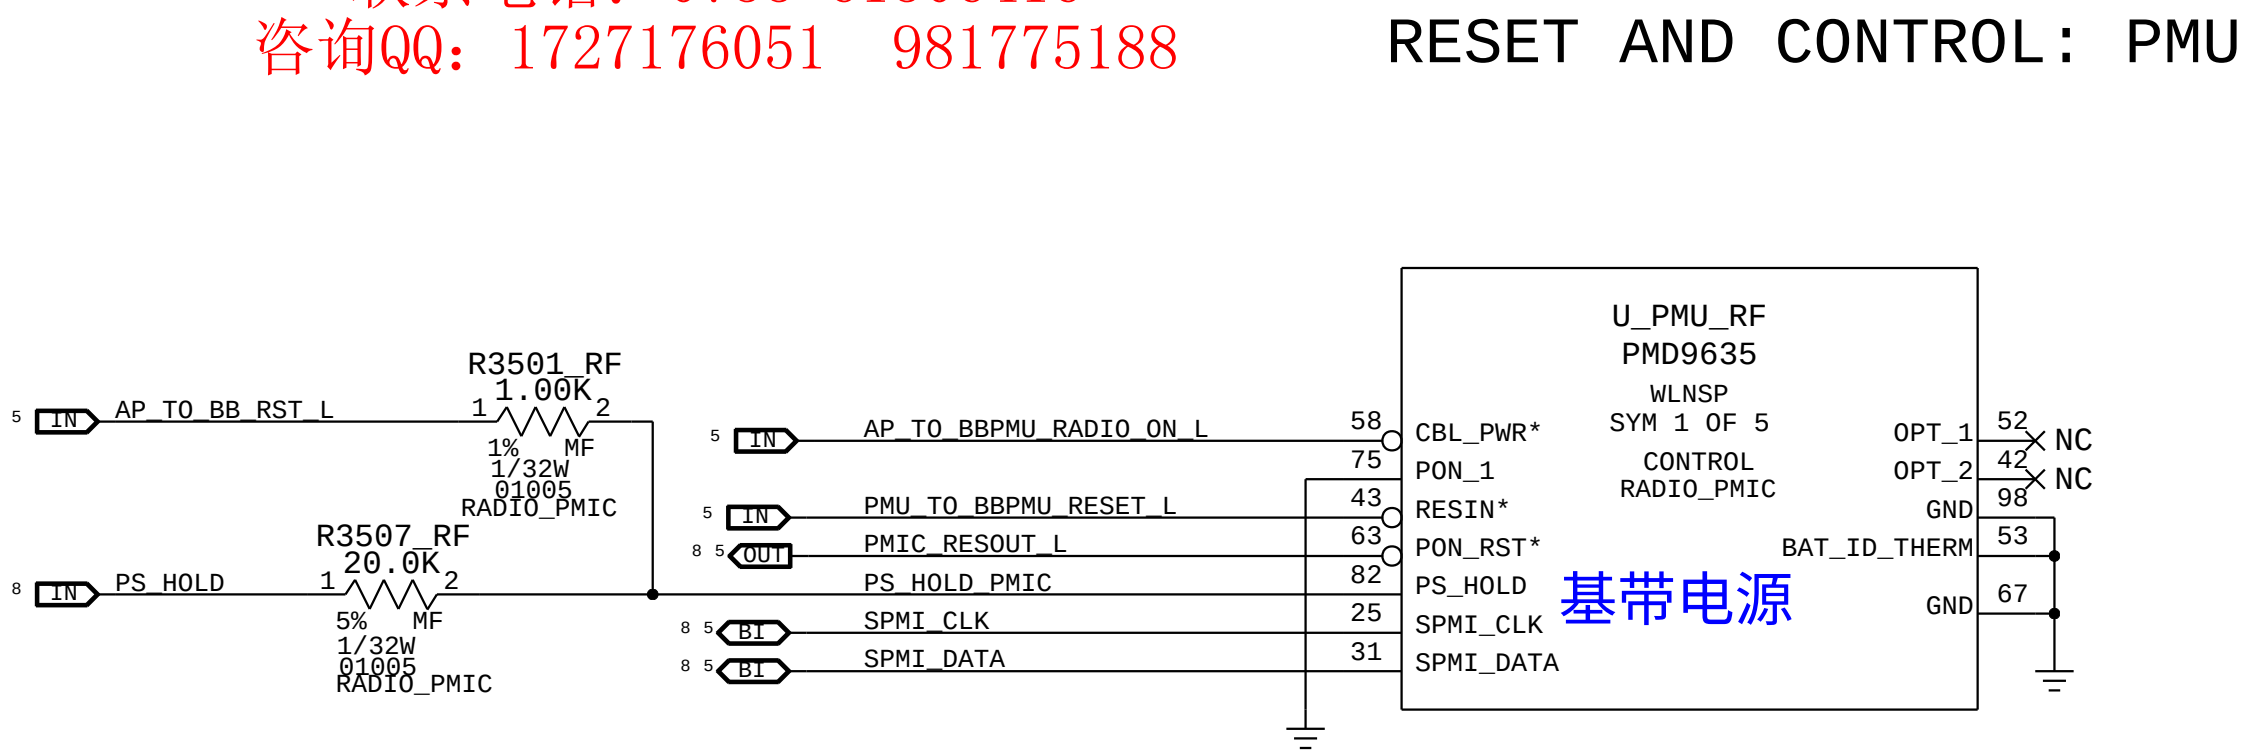

MPPS AND GPIOs: PMU


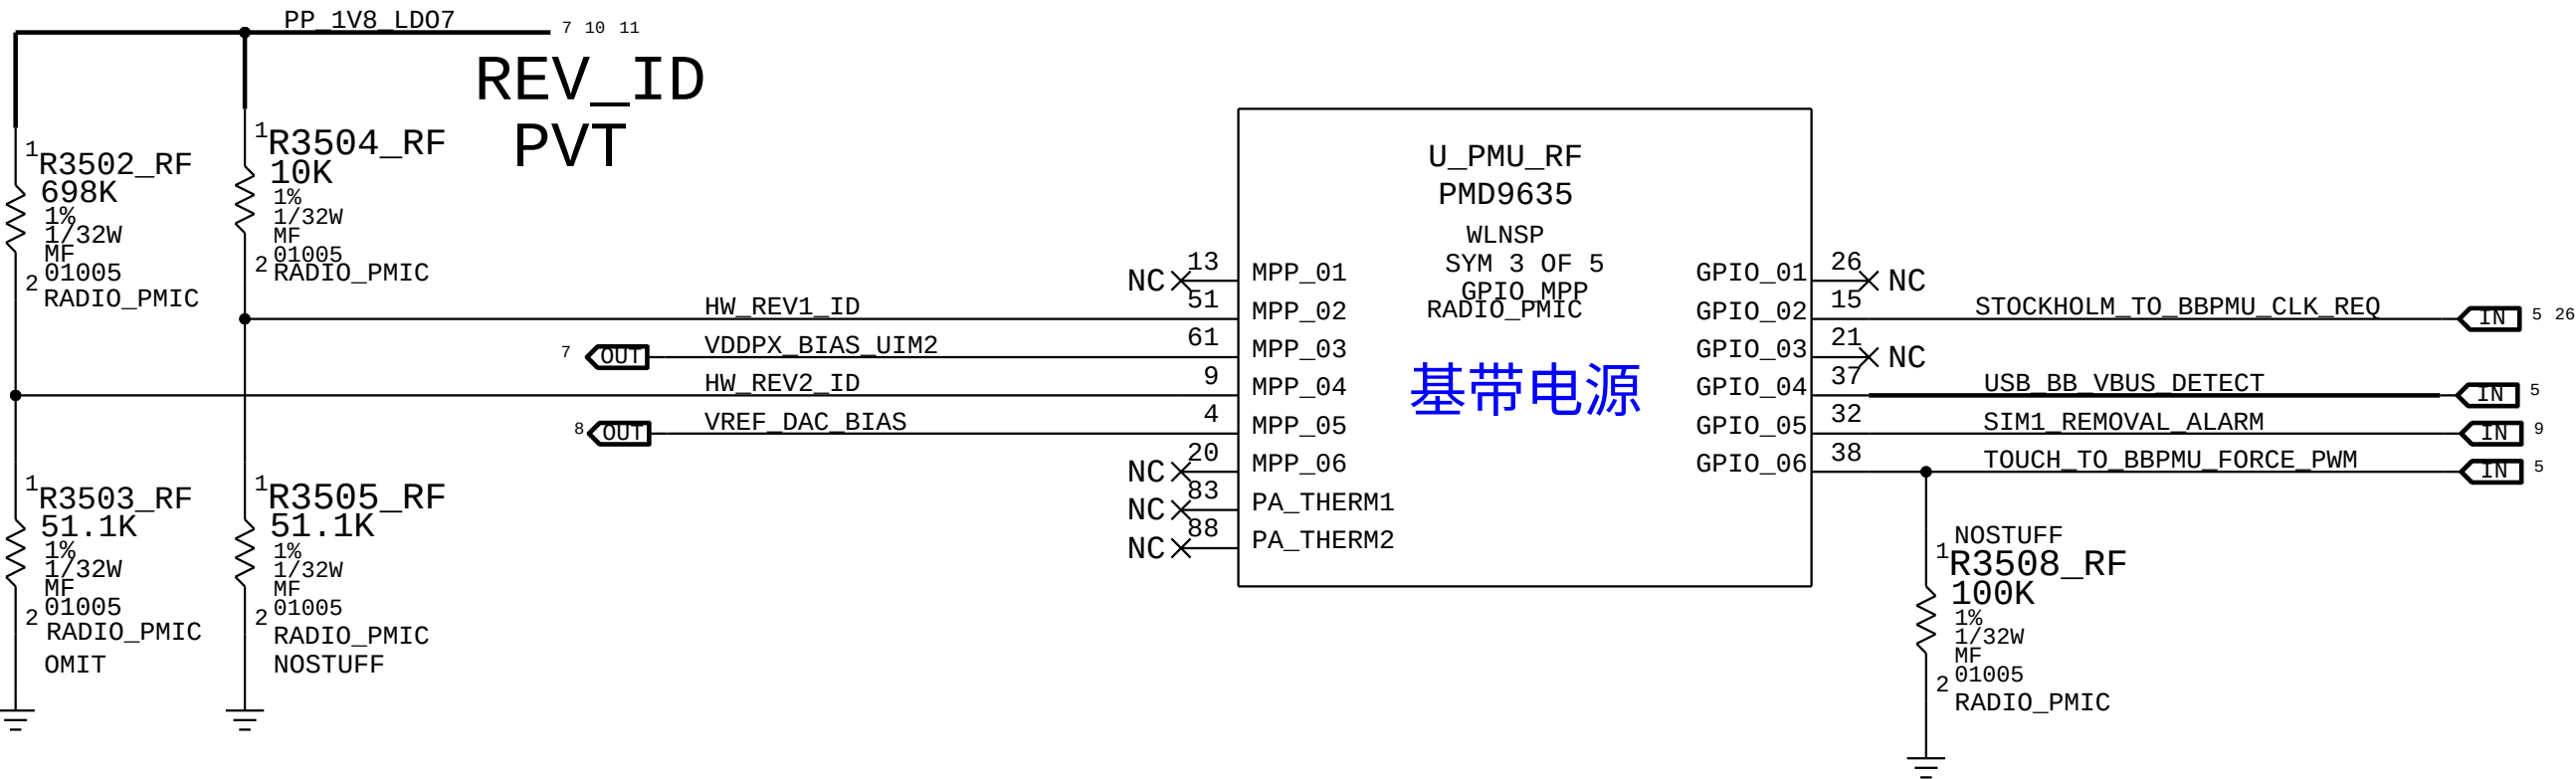


XTAL AND CLOCK: PMU

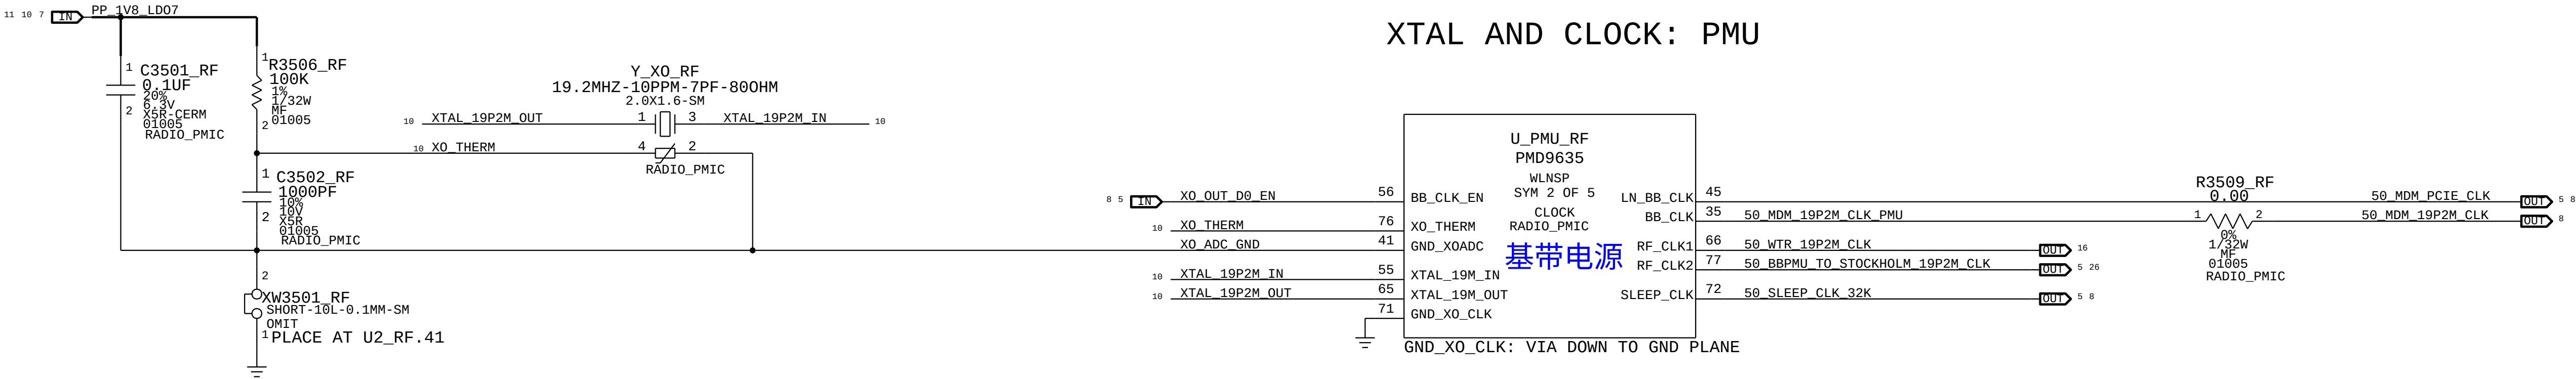

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

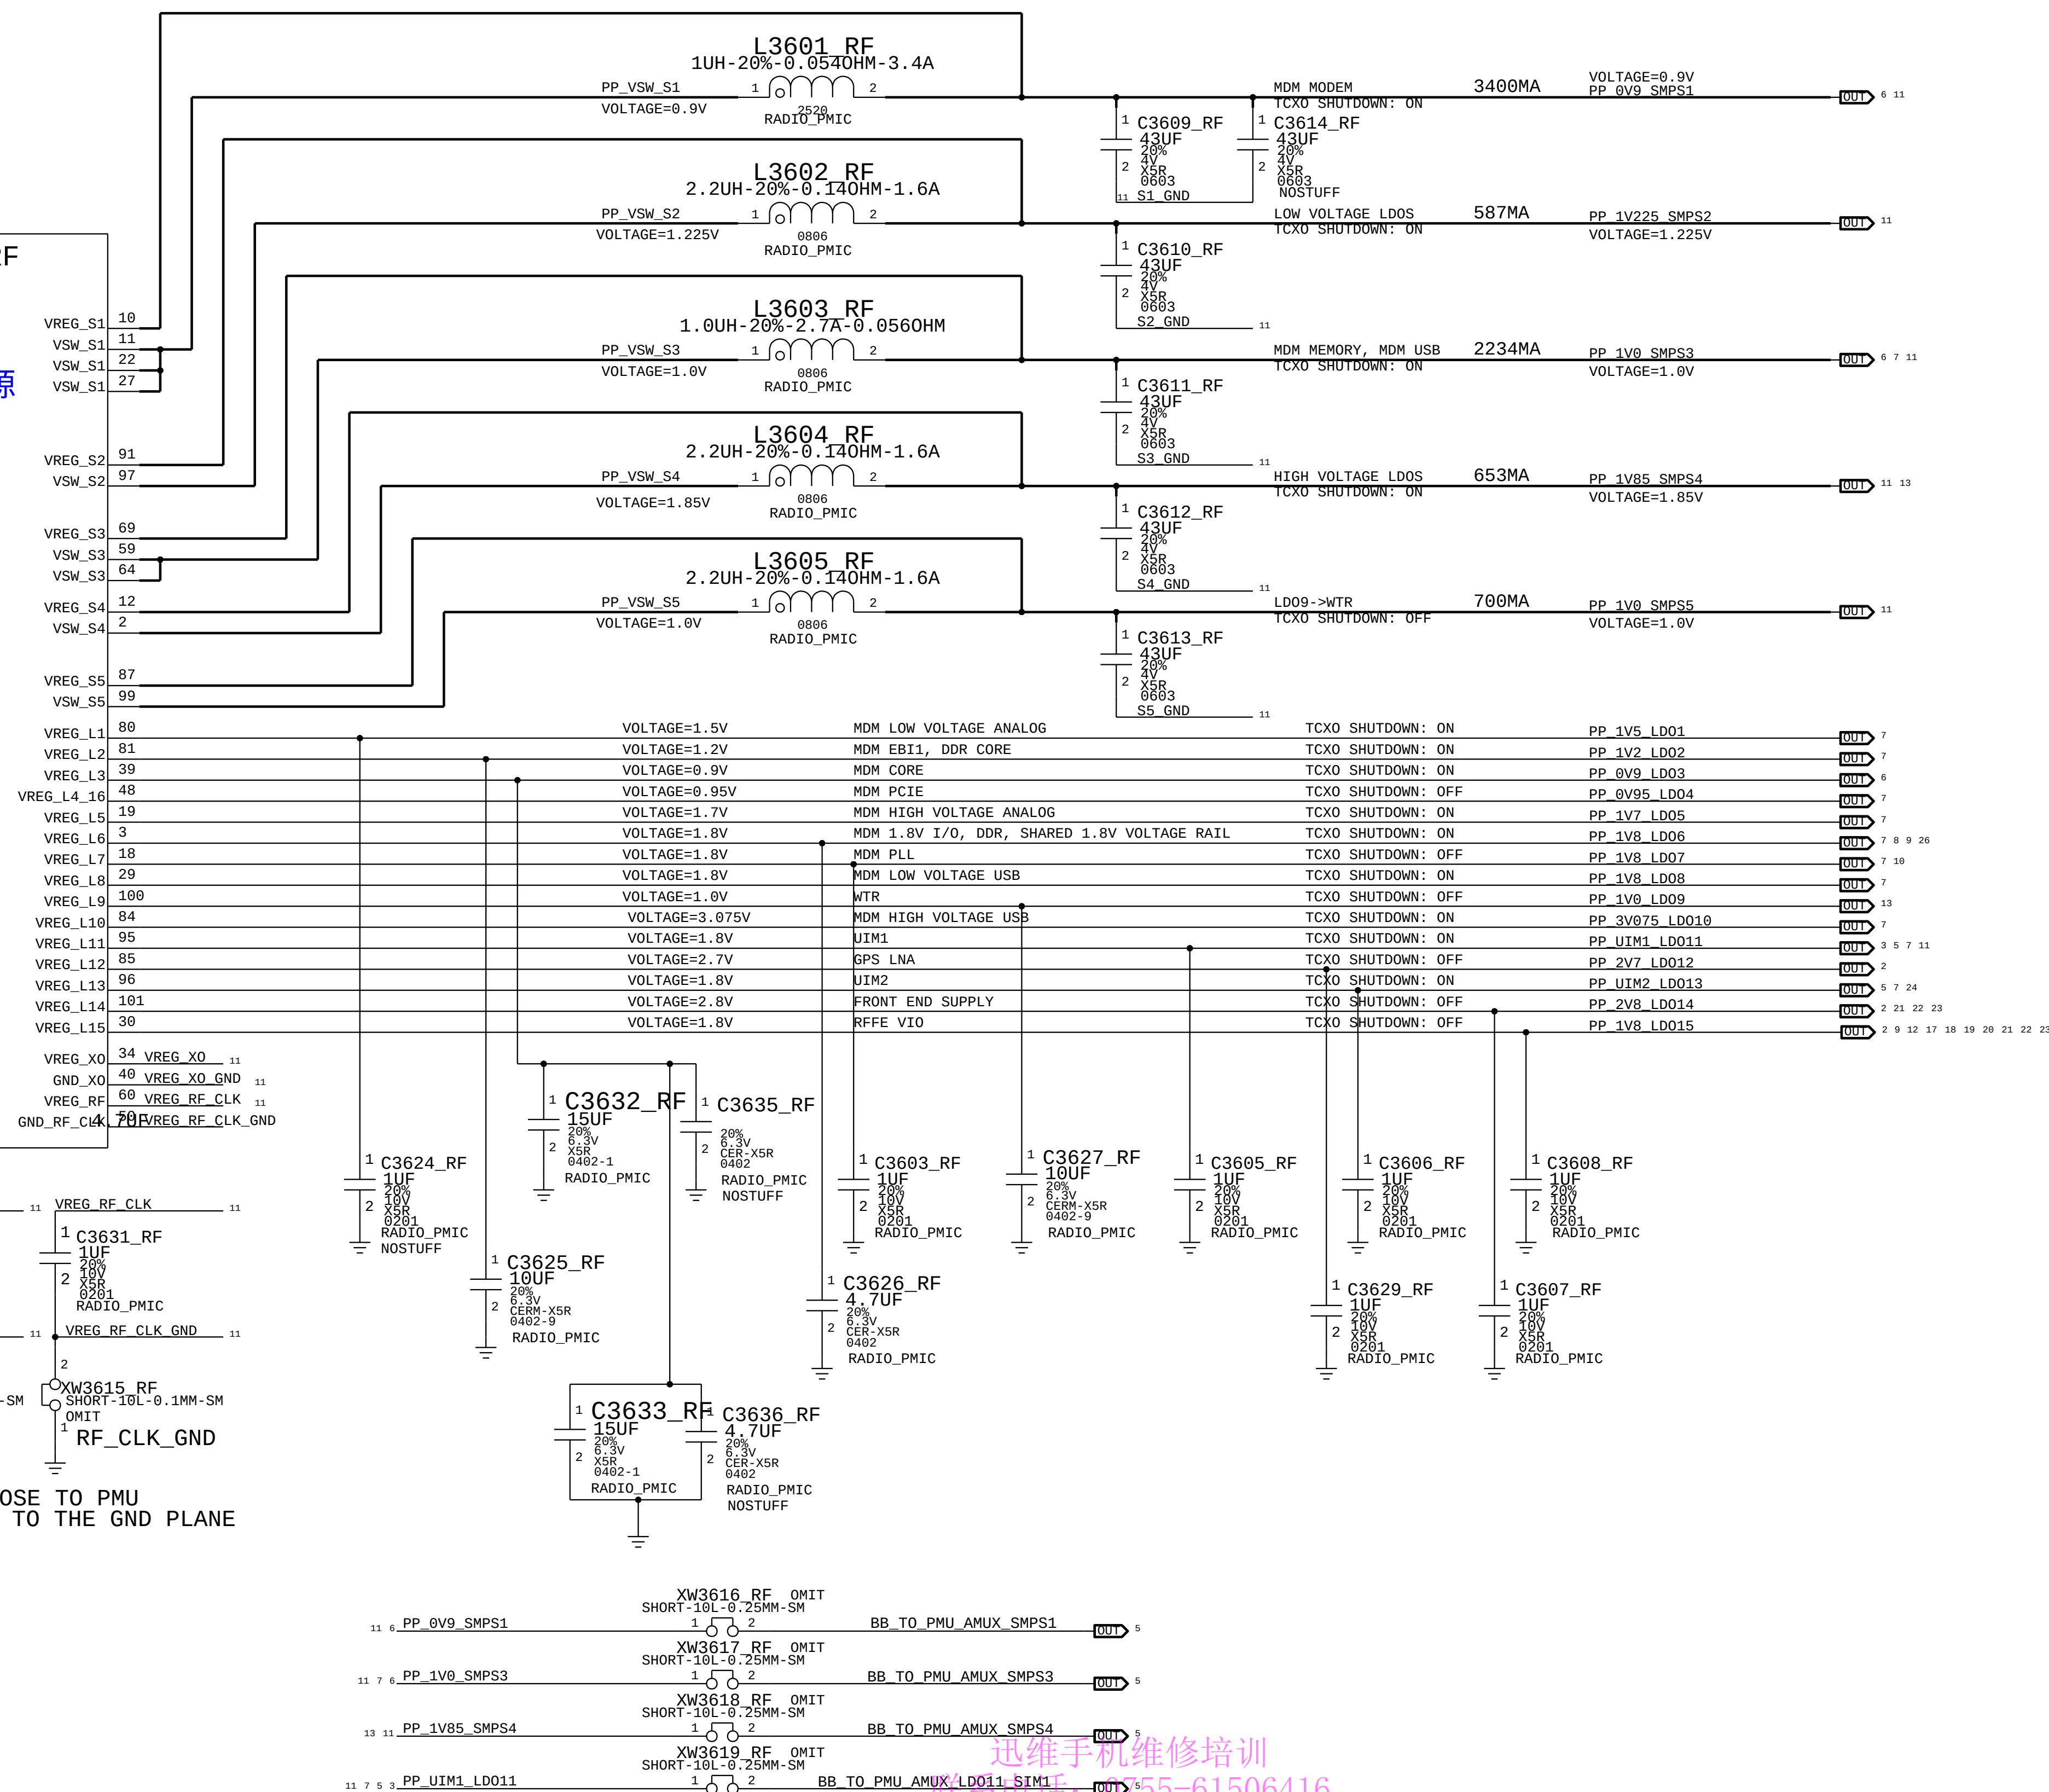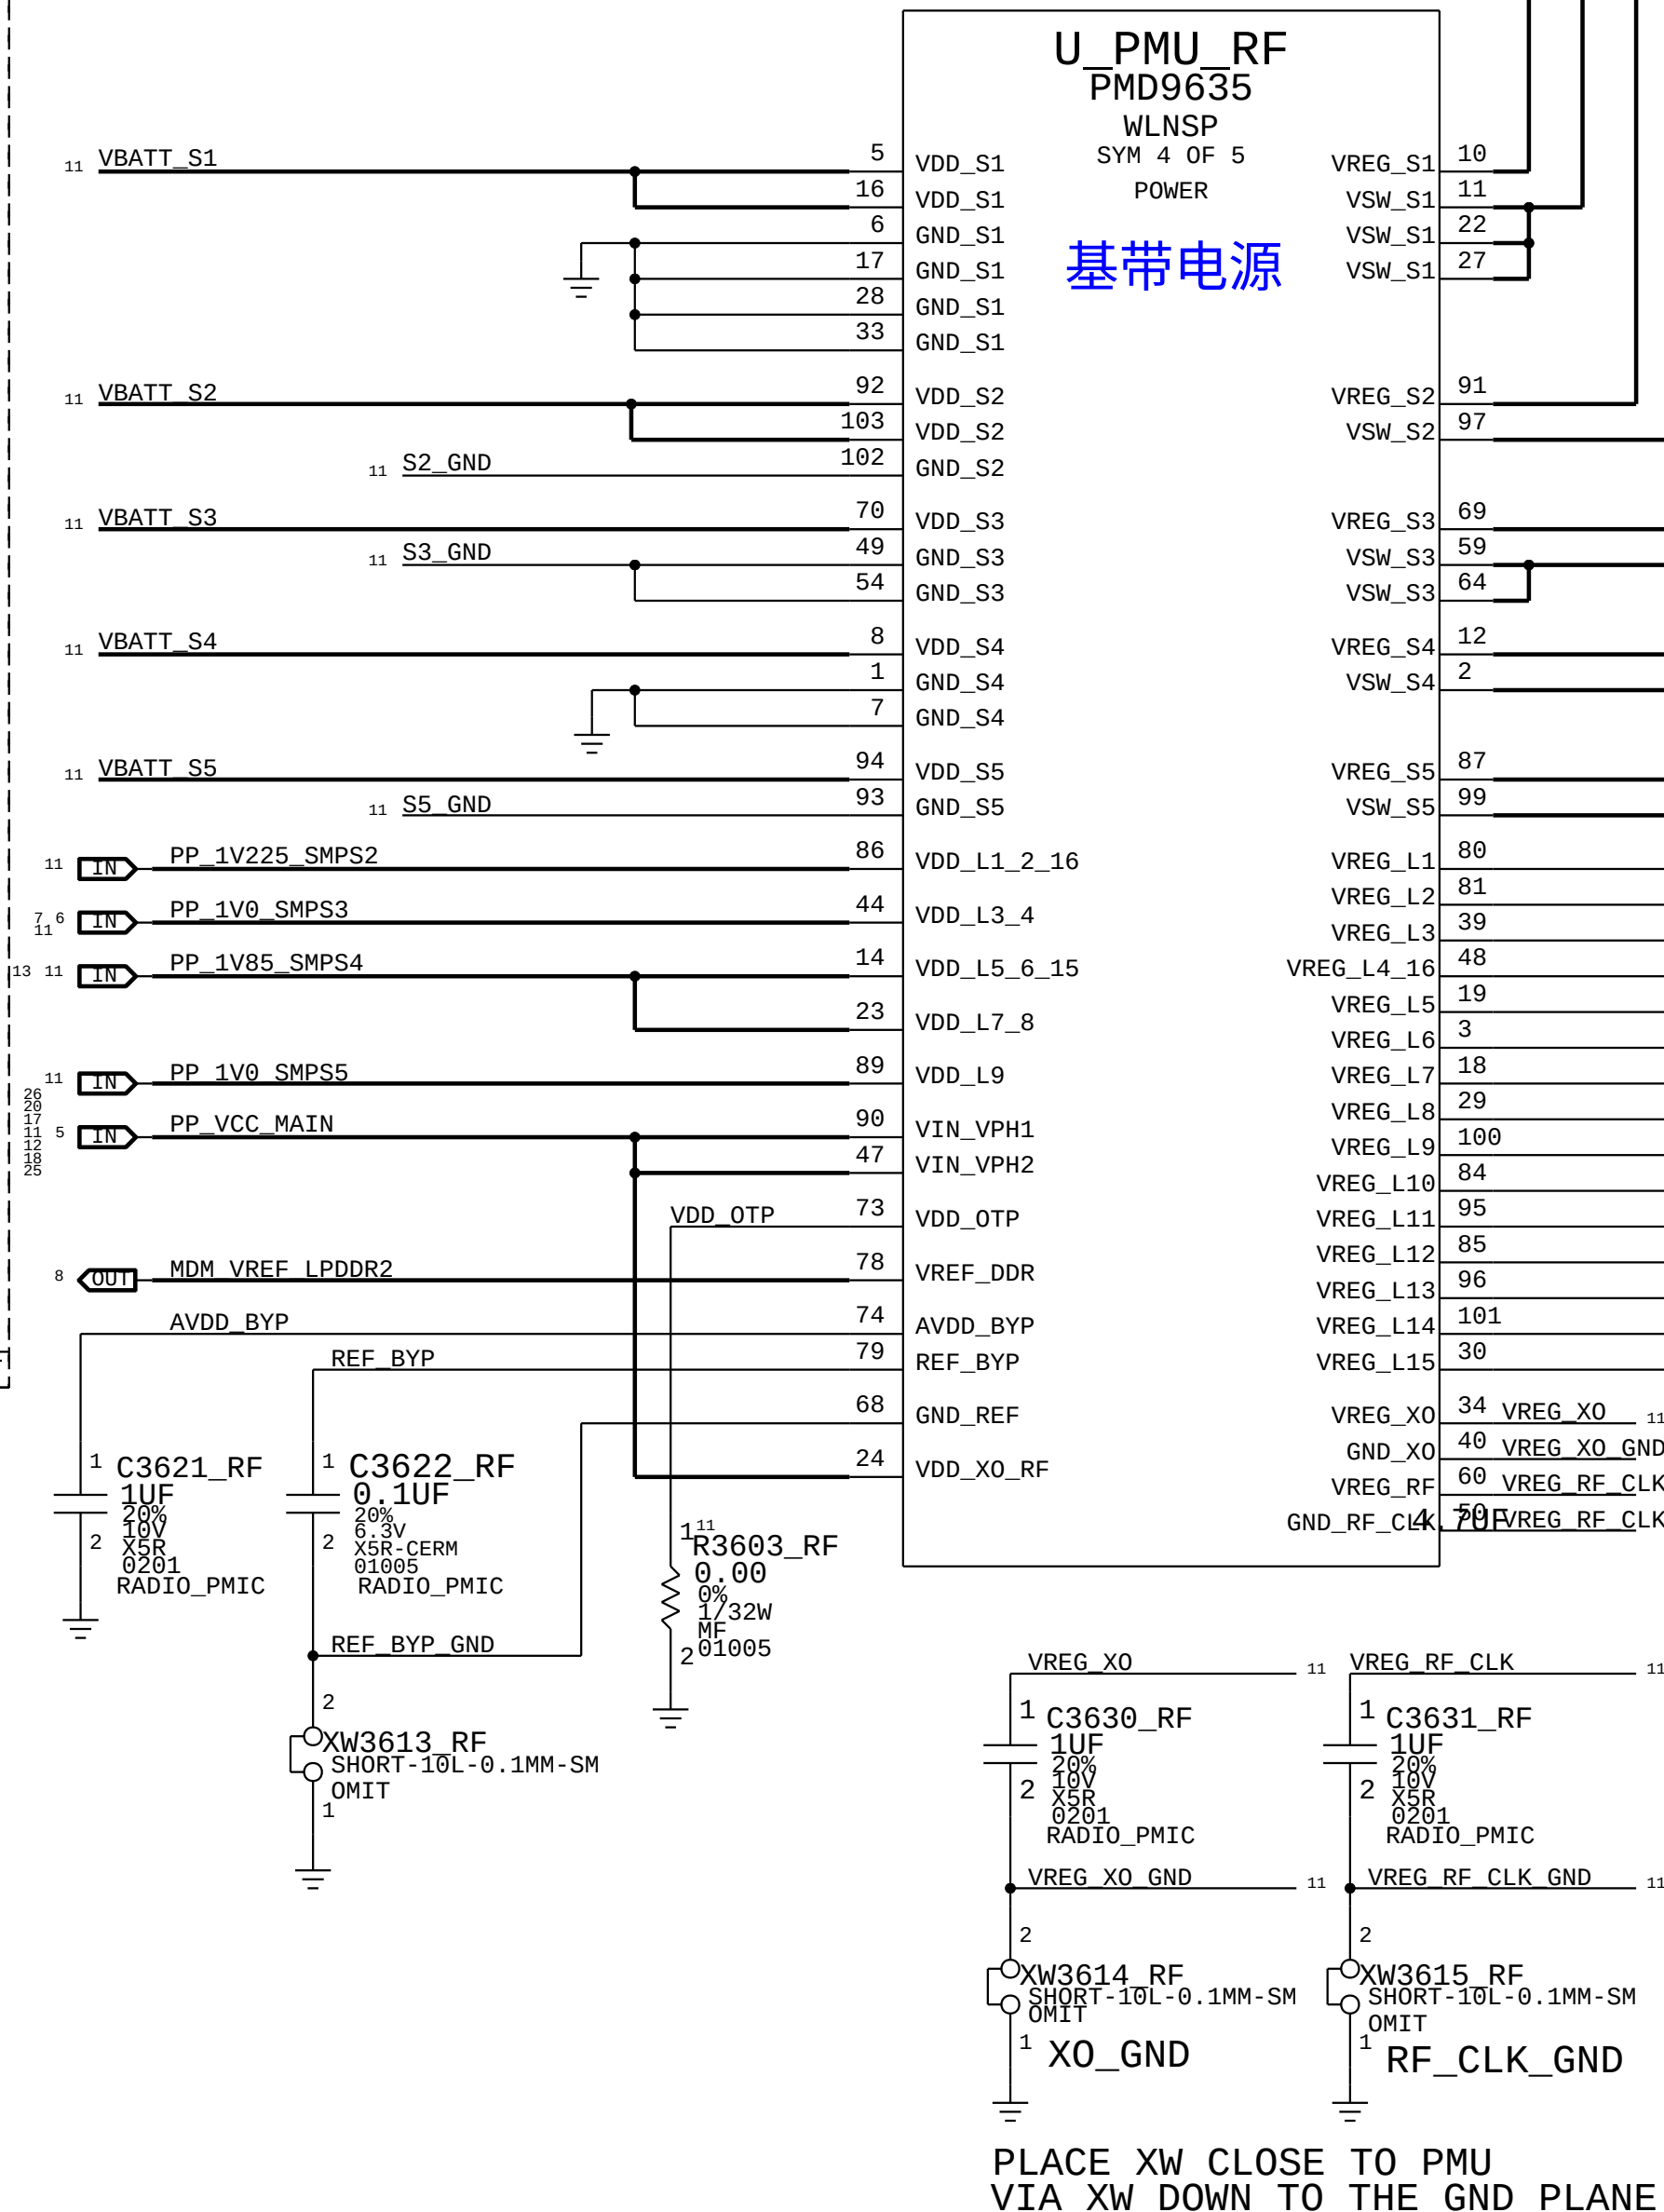




PMU： ET MODULATOR

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

此功放供电IC损坏会造成无信号或有信号打不出电话
通话断断续续，还会造成加电漏电大电流不开机

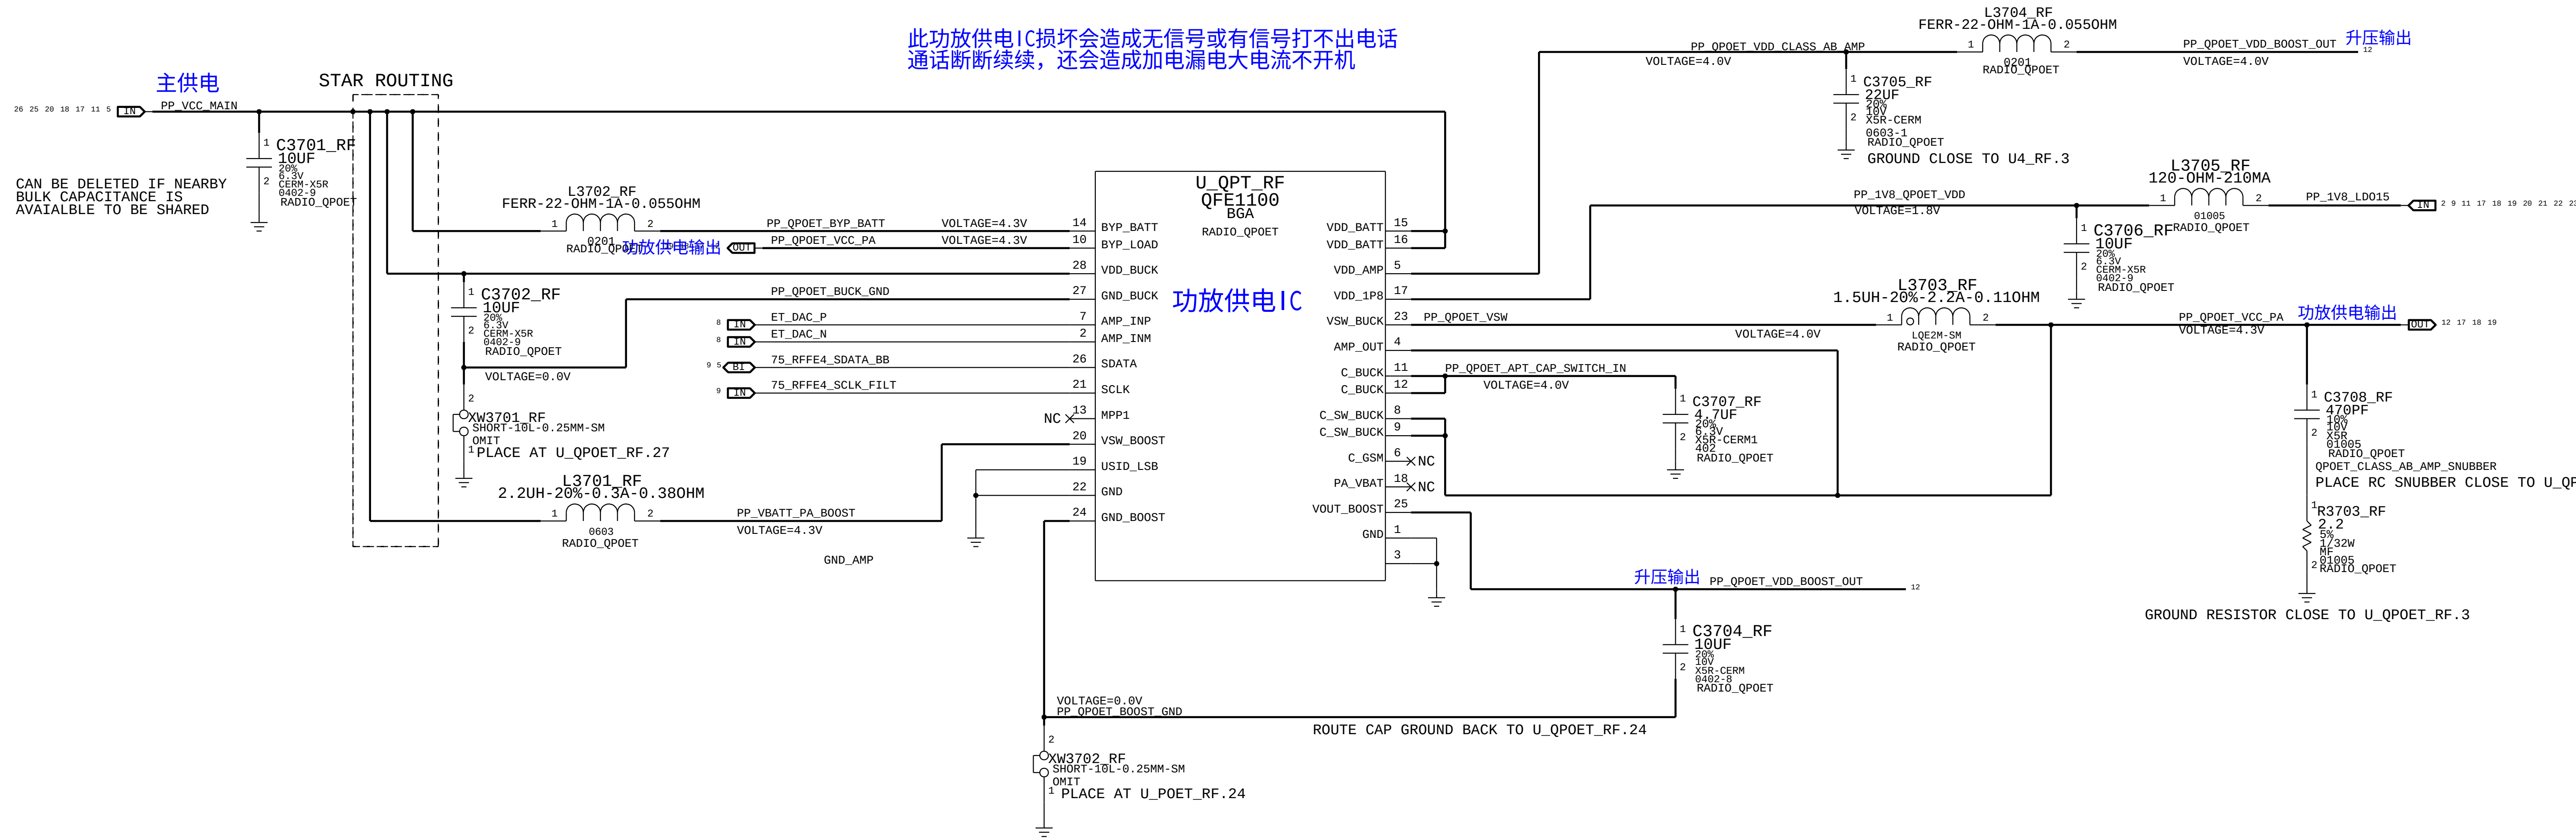


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

TRANSCEIVER: POWER

收发信机模块（射频模块）：电源

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

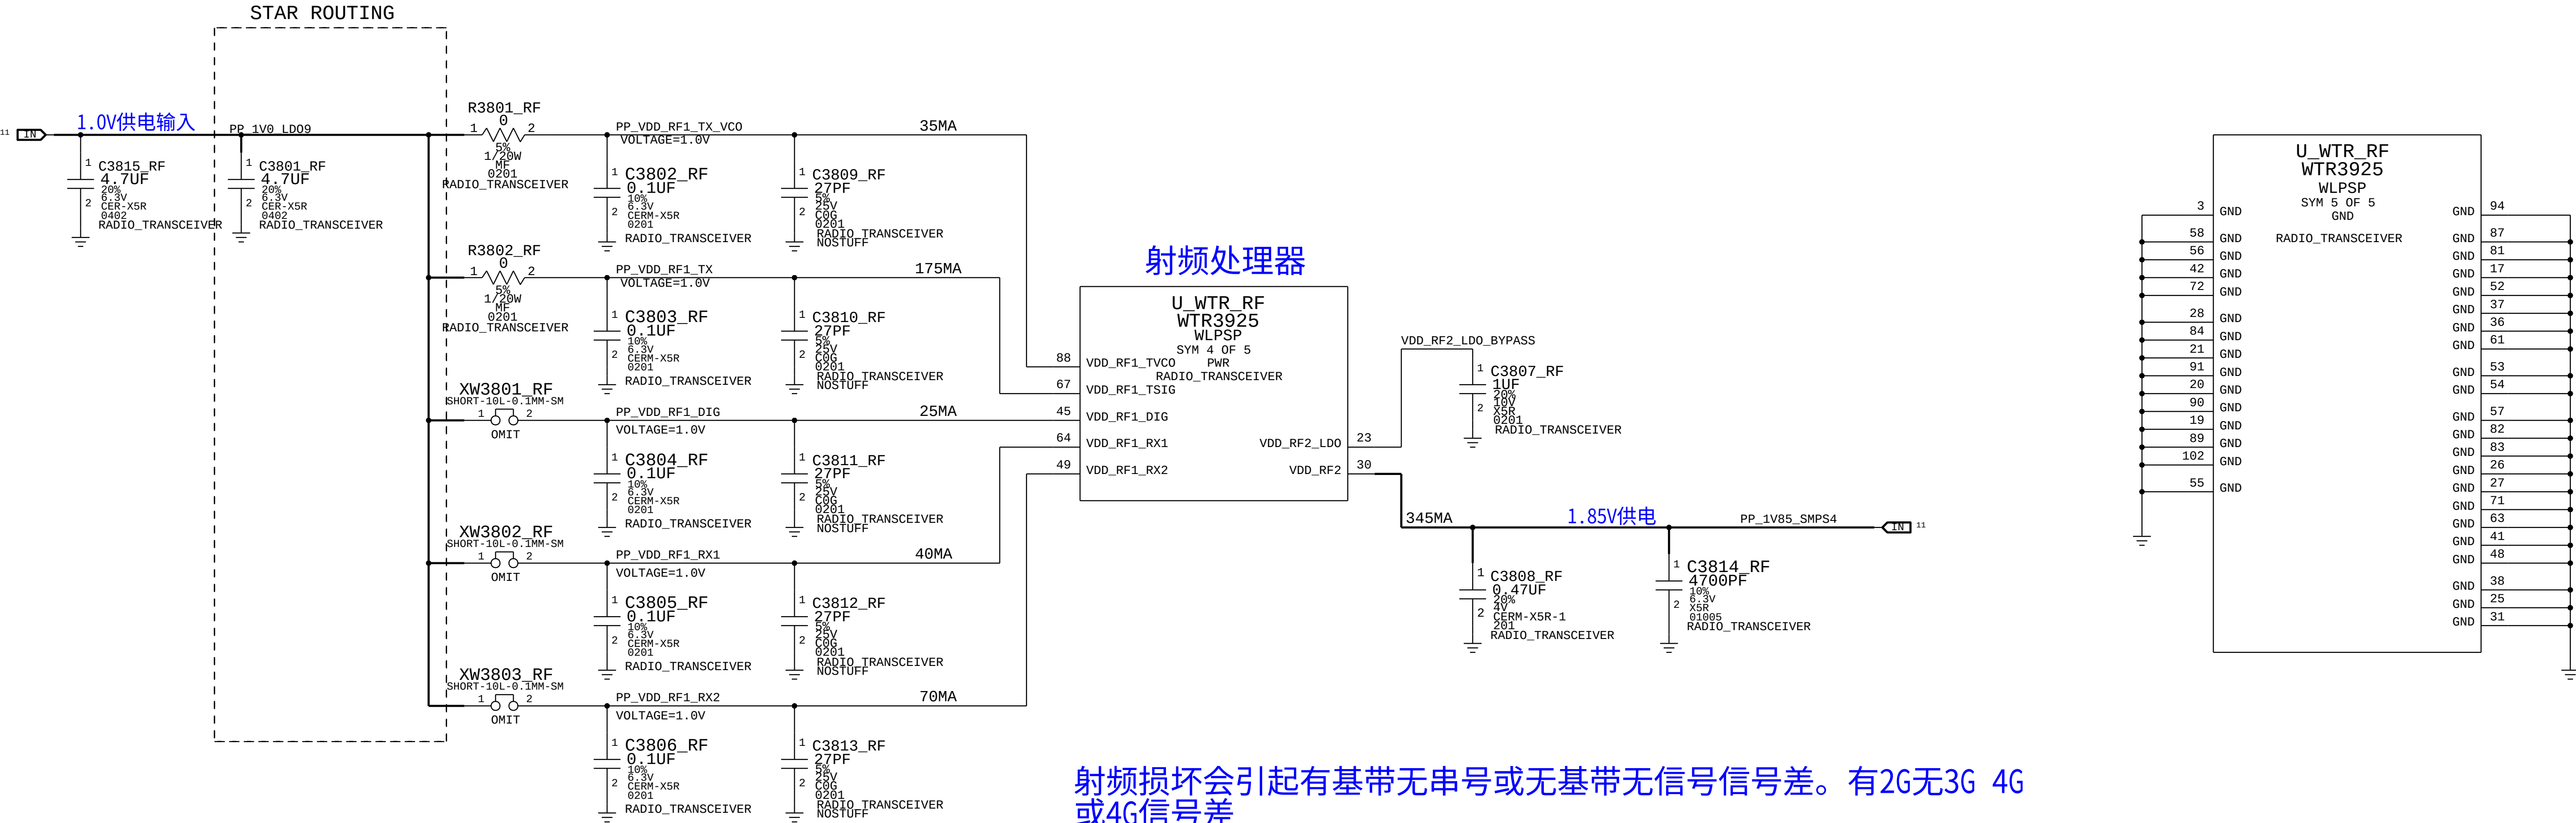

射频损坏会引起有基带无串号或无基带无信号信号差。有2G无3G 4G或4G信号差


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188



TRANSCEIVER: PRX PORTS

收发信机(射频模块)：PRX接口

DC BLOCKING CAP VALUES CANNOT BE MORE THAN 33PF

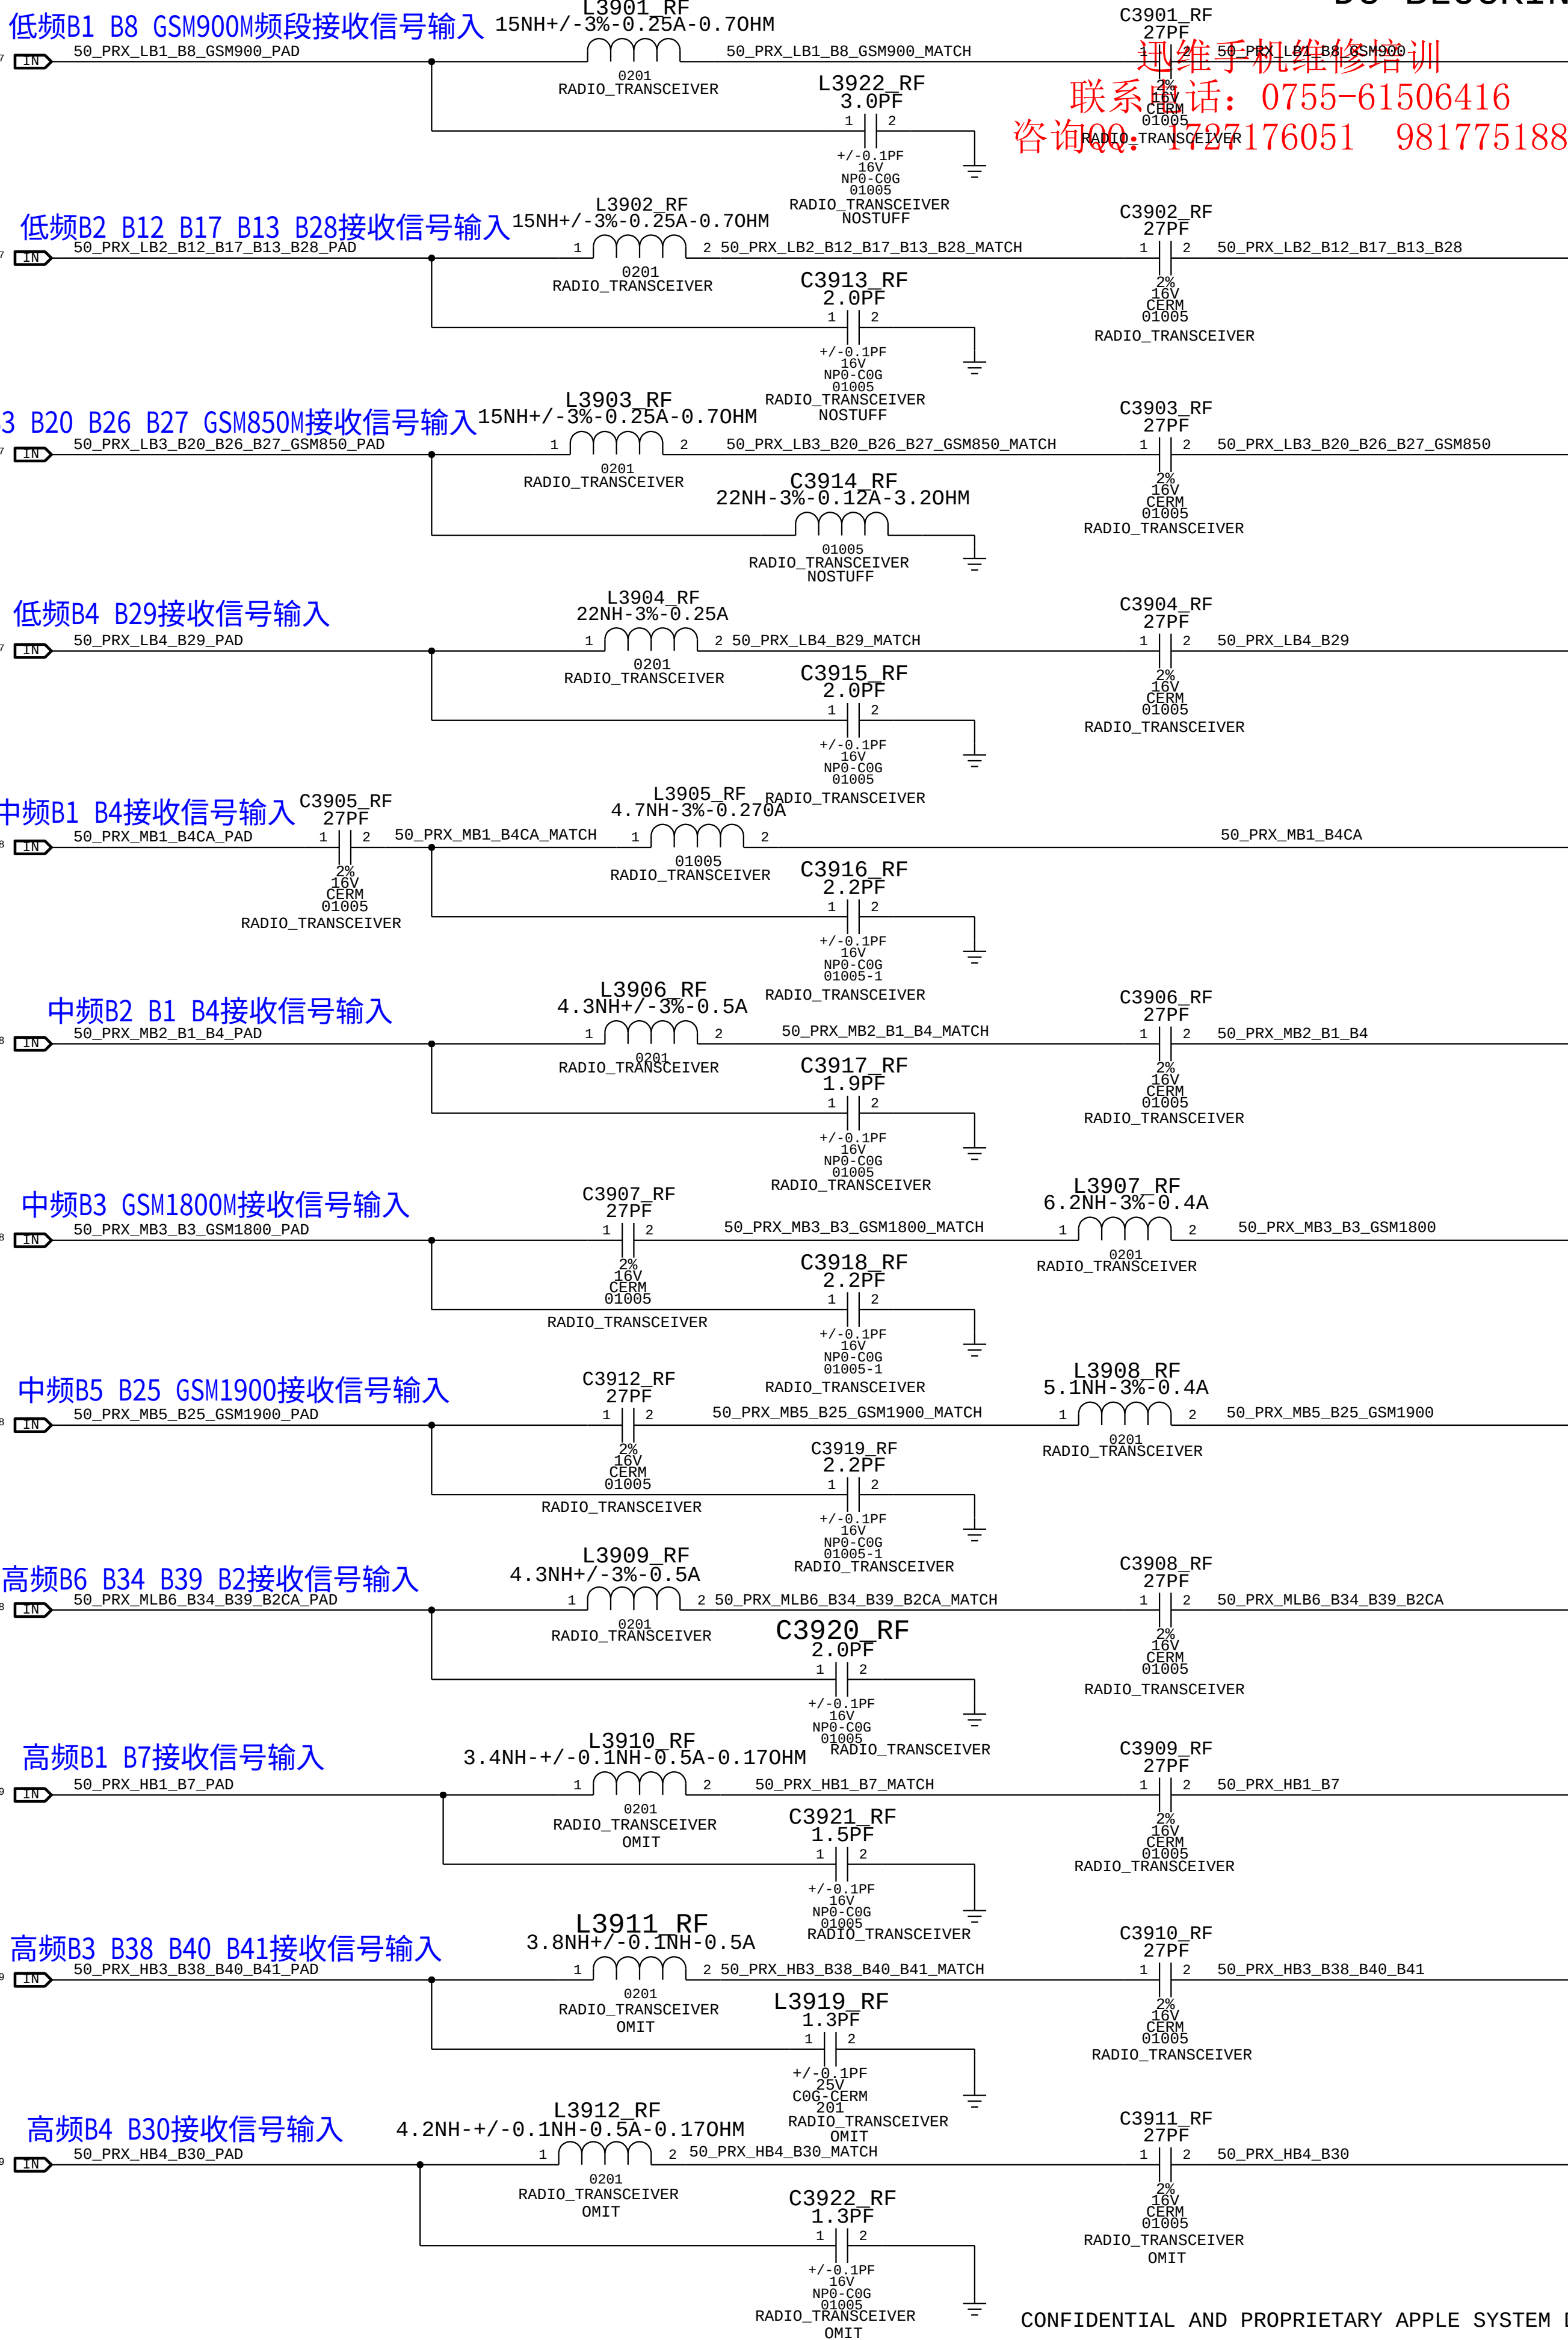

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

射频处理器

接收基带I/Q信号输出

50_PRX_MLB6_B34_B39_B2CA IS ASSIGNED TO MB4

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188



TRANSCEIVER: DRX/GPS PORTS

非连续性接收/GPS接口

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

DRX MODULE PORTS ARE DC BLOCKED

非连续性接收各个频道信号输入

射频处理器

非连续性接收基带I/Q信号输出

GPS接收基带I/Q信号输出

GSM发射相位数据输入

GPS FILTER GPS滤波器

PLACE NEAR U_WTR

DRX及GPS低噪声放大器输出信号输入

GPS接收信号输出

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188




TRANSCEIVER: TX PORTS

射频模块：发射接口

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188



B12/13 TX INTERSTAGE FILTER REMOVED

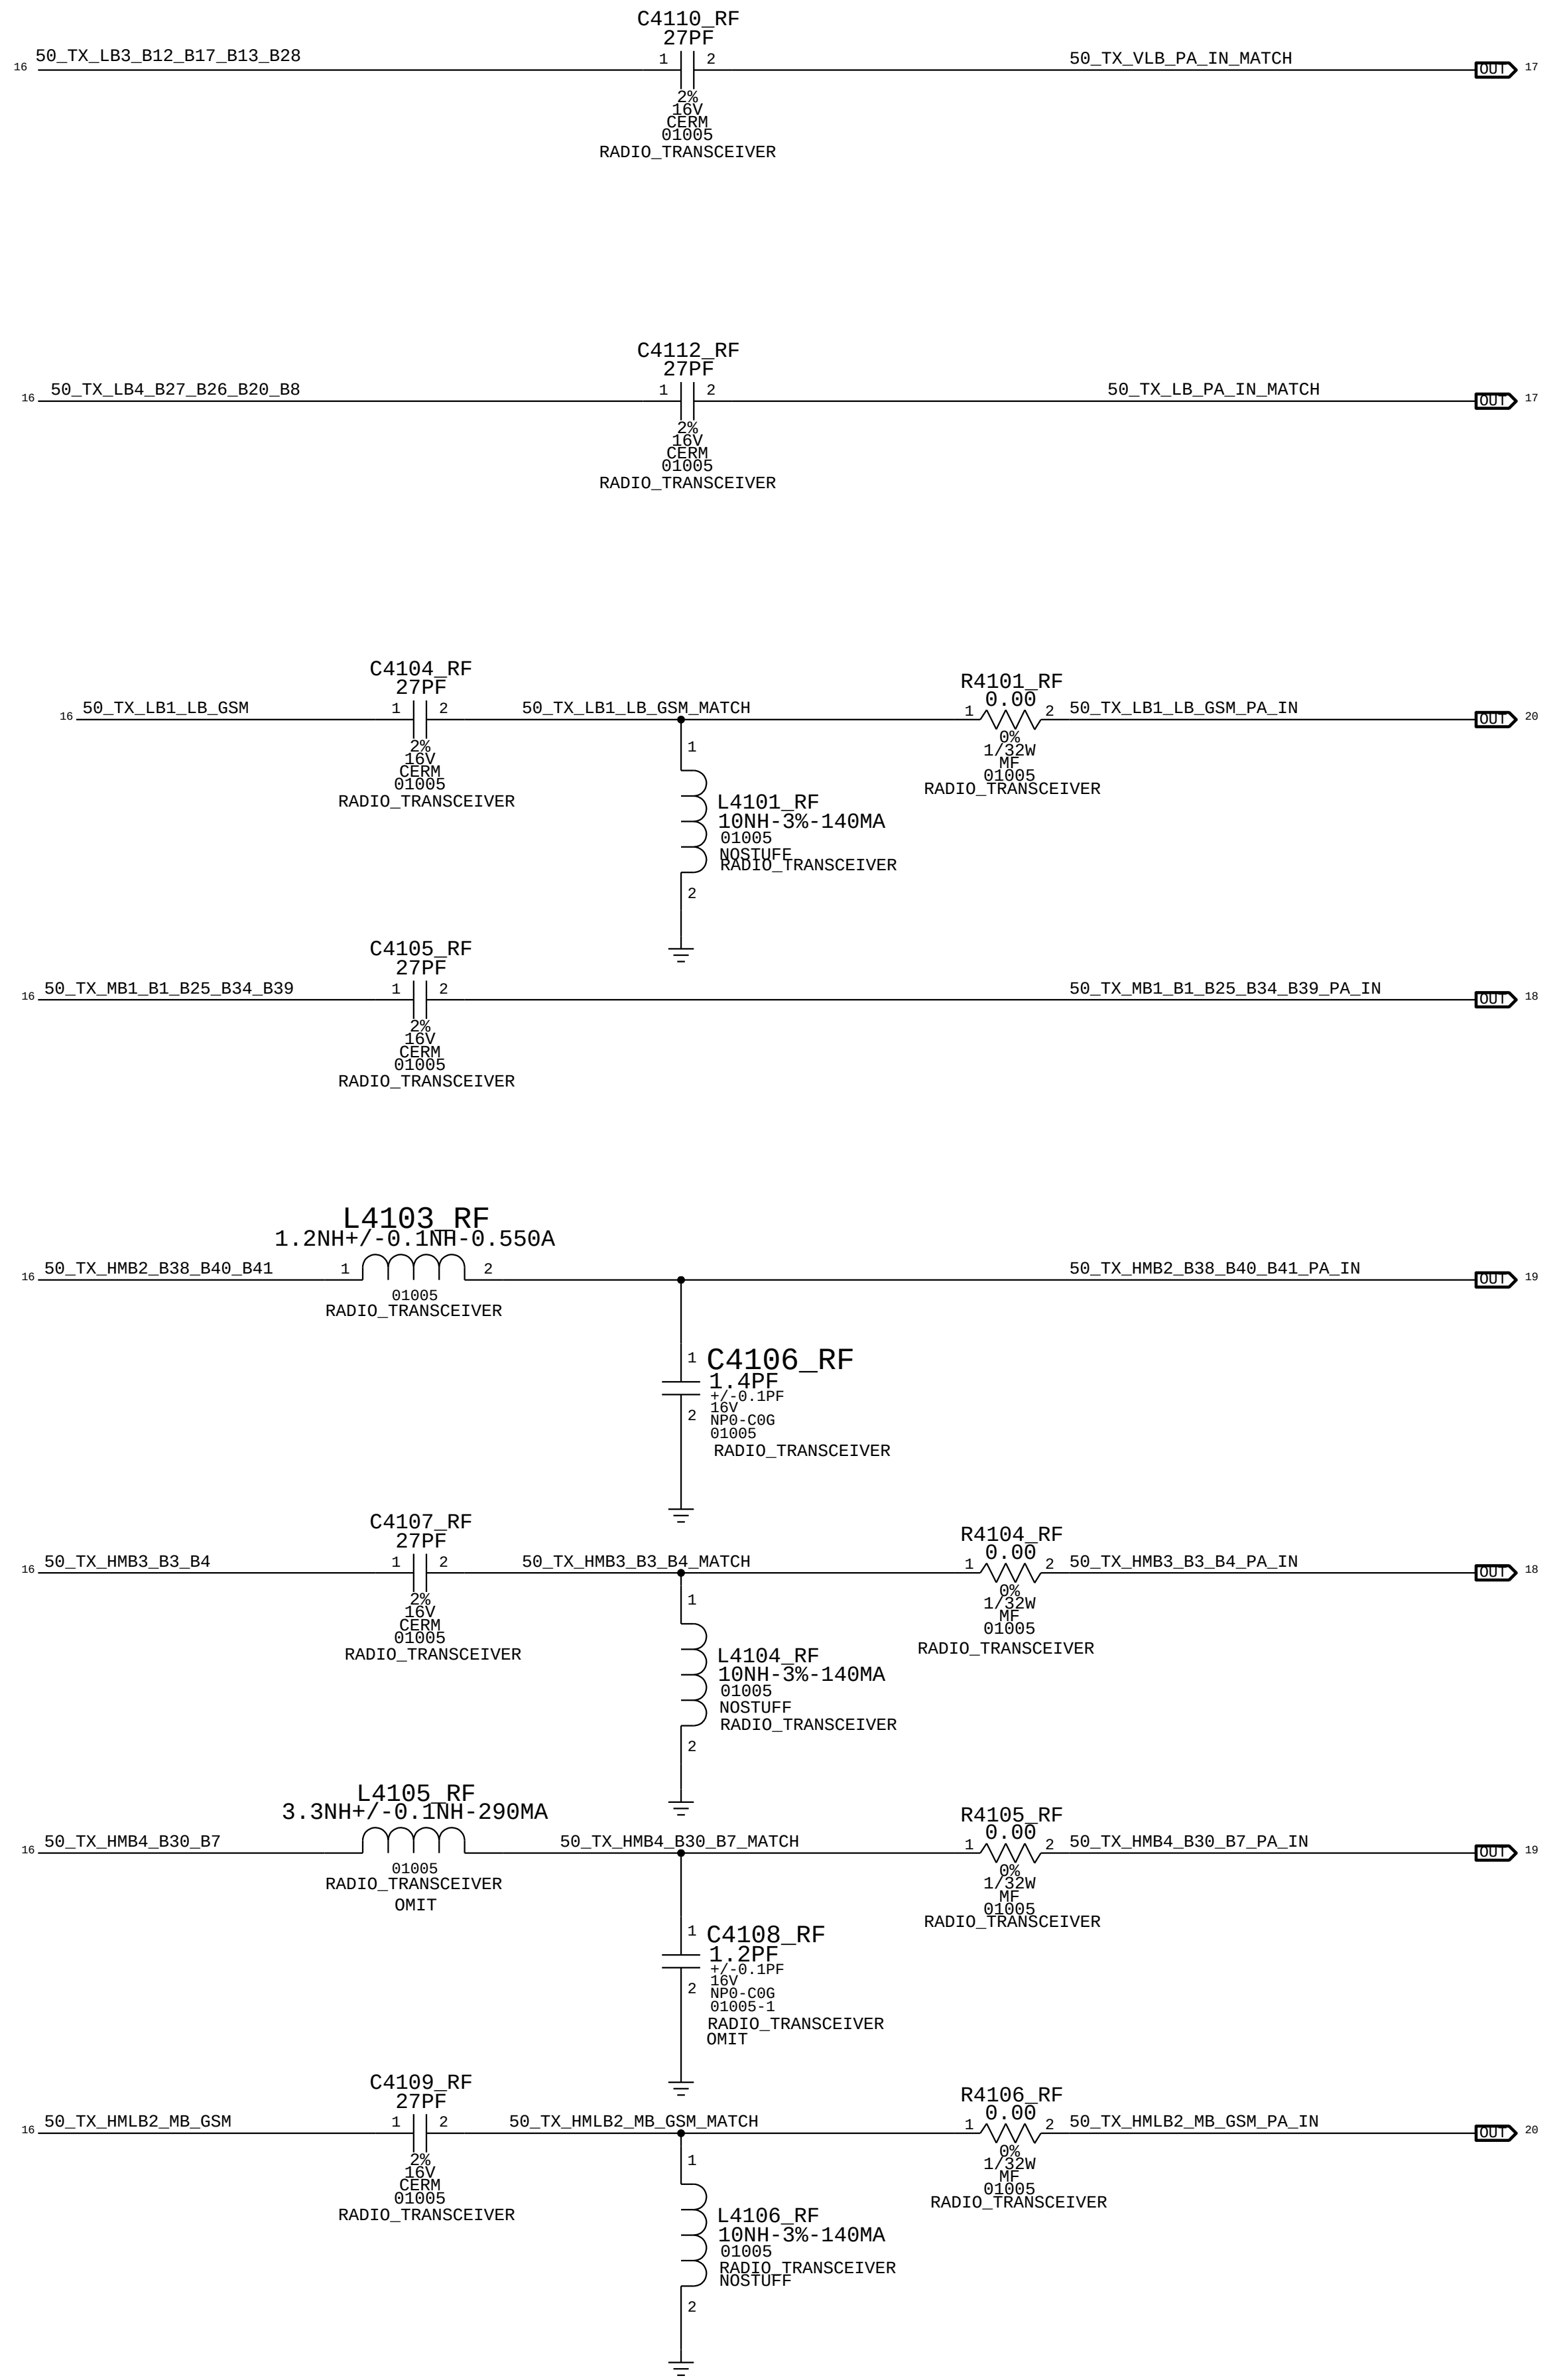


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188



LOW BAND PA+DUPLEXERS

低频段功放+双工器

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

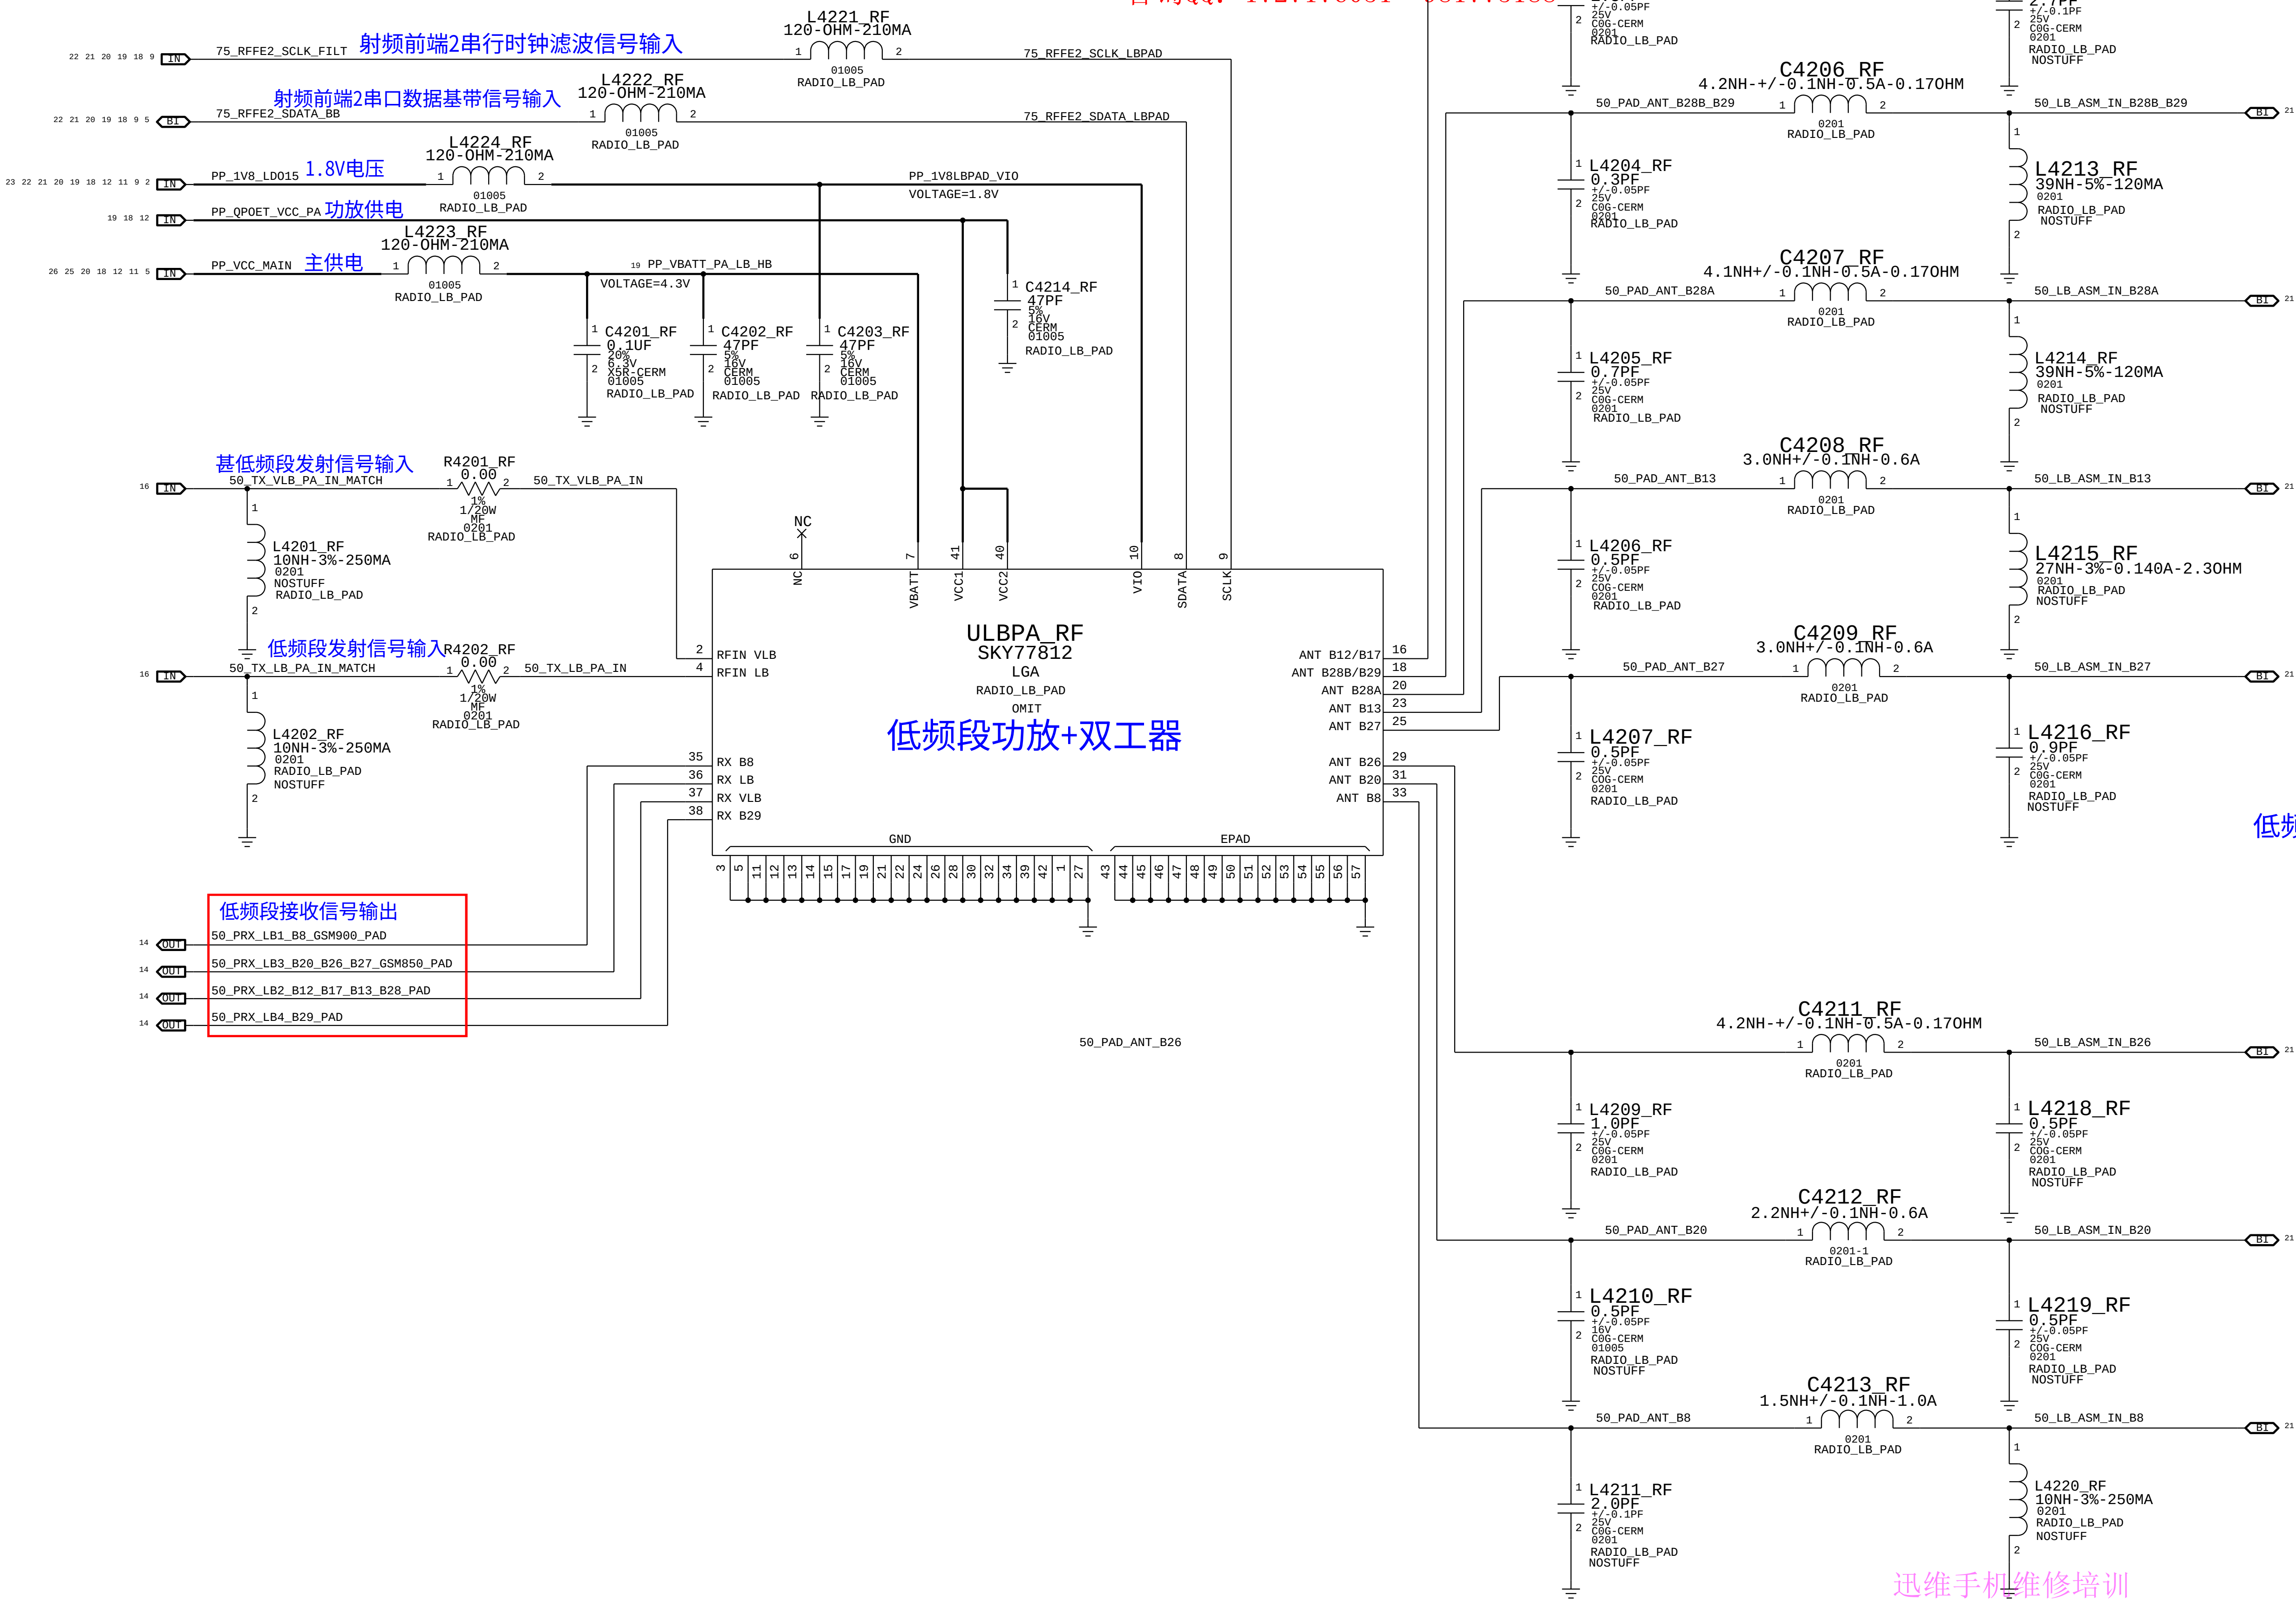

低频段接收信号输出

低频段功放+双工器

低频段收发信号

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188





HIGH BAND PA+DUPLEXERS

高频段功放+双工器

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

高频段功放+双工器


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188



2G PA

2G功放

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

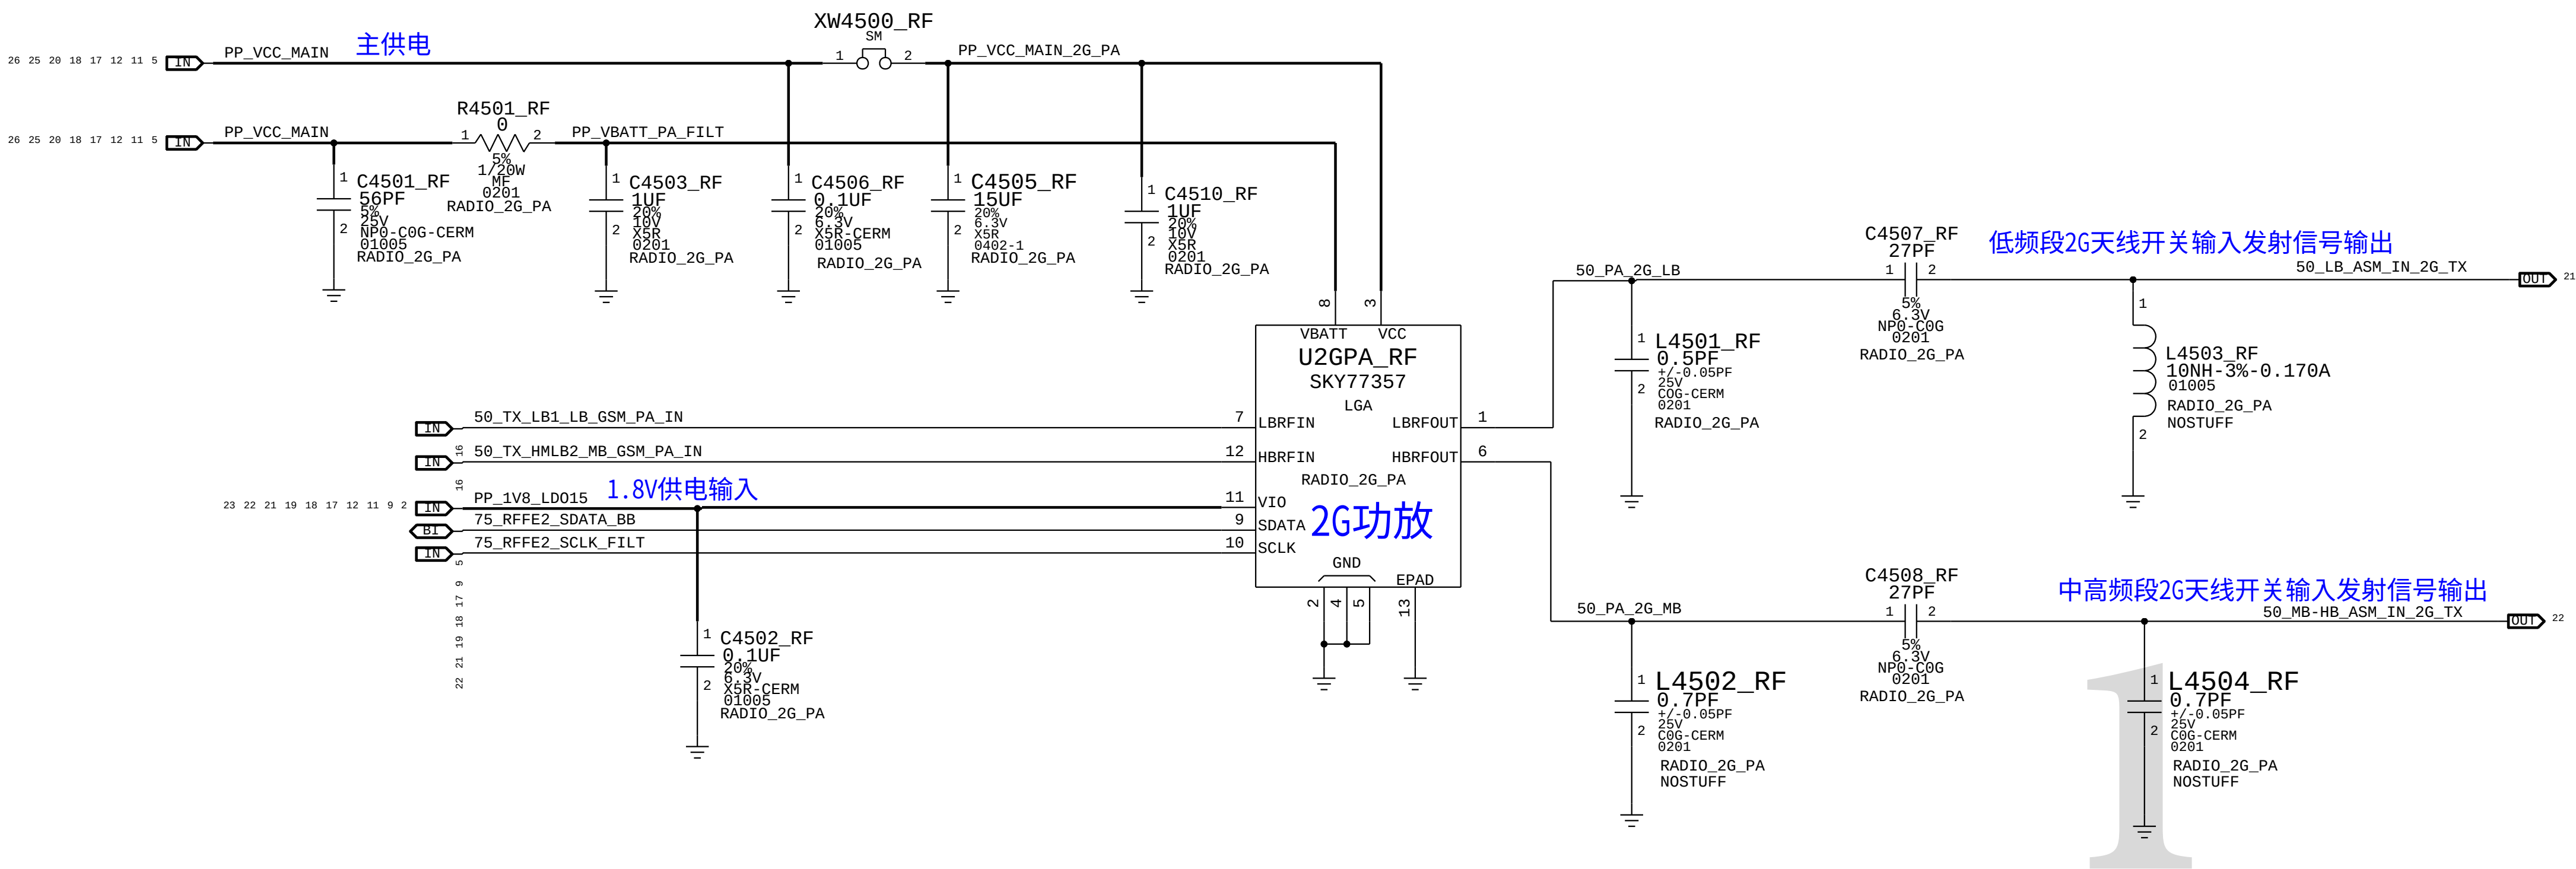

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

低频段天线开关模块



低频段天线开关模块

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188




MID-HIGH BAND ANTENNA SWITCH MODULE

中高频段天线开关模块

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

EVT ASM ASSIGNMENT:
B40B/B41C - TRX2
B30 - TDD3

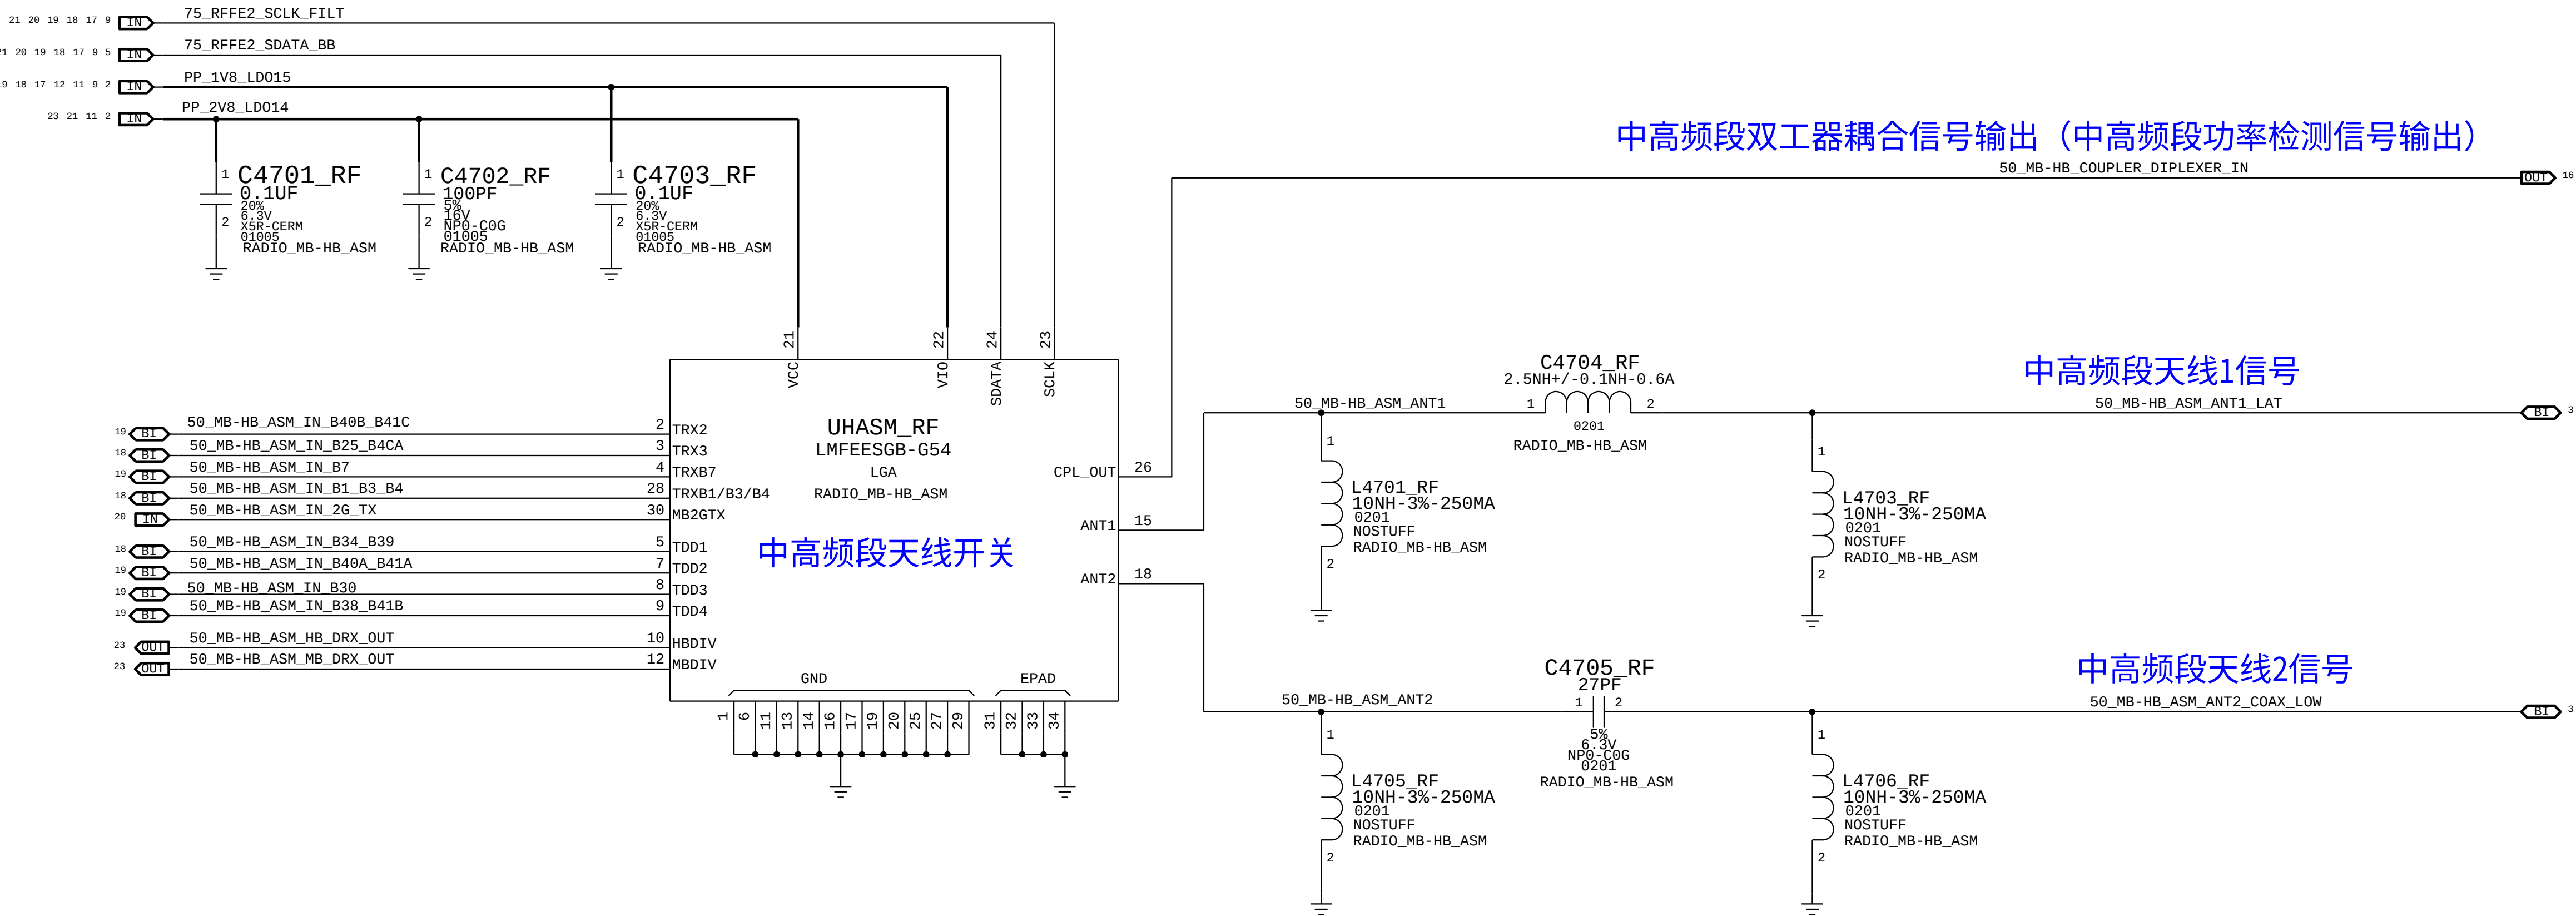


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188



DIVERSITY MODULE

非连续接收模块

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188


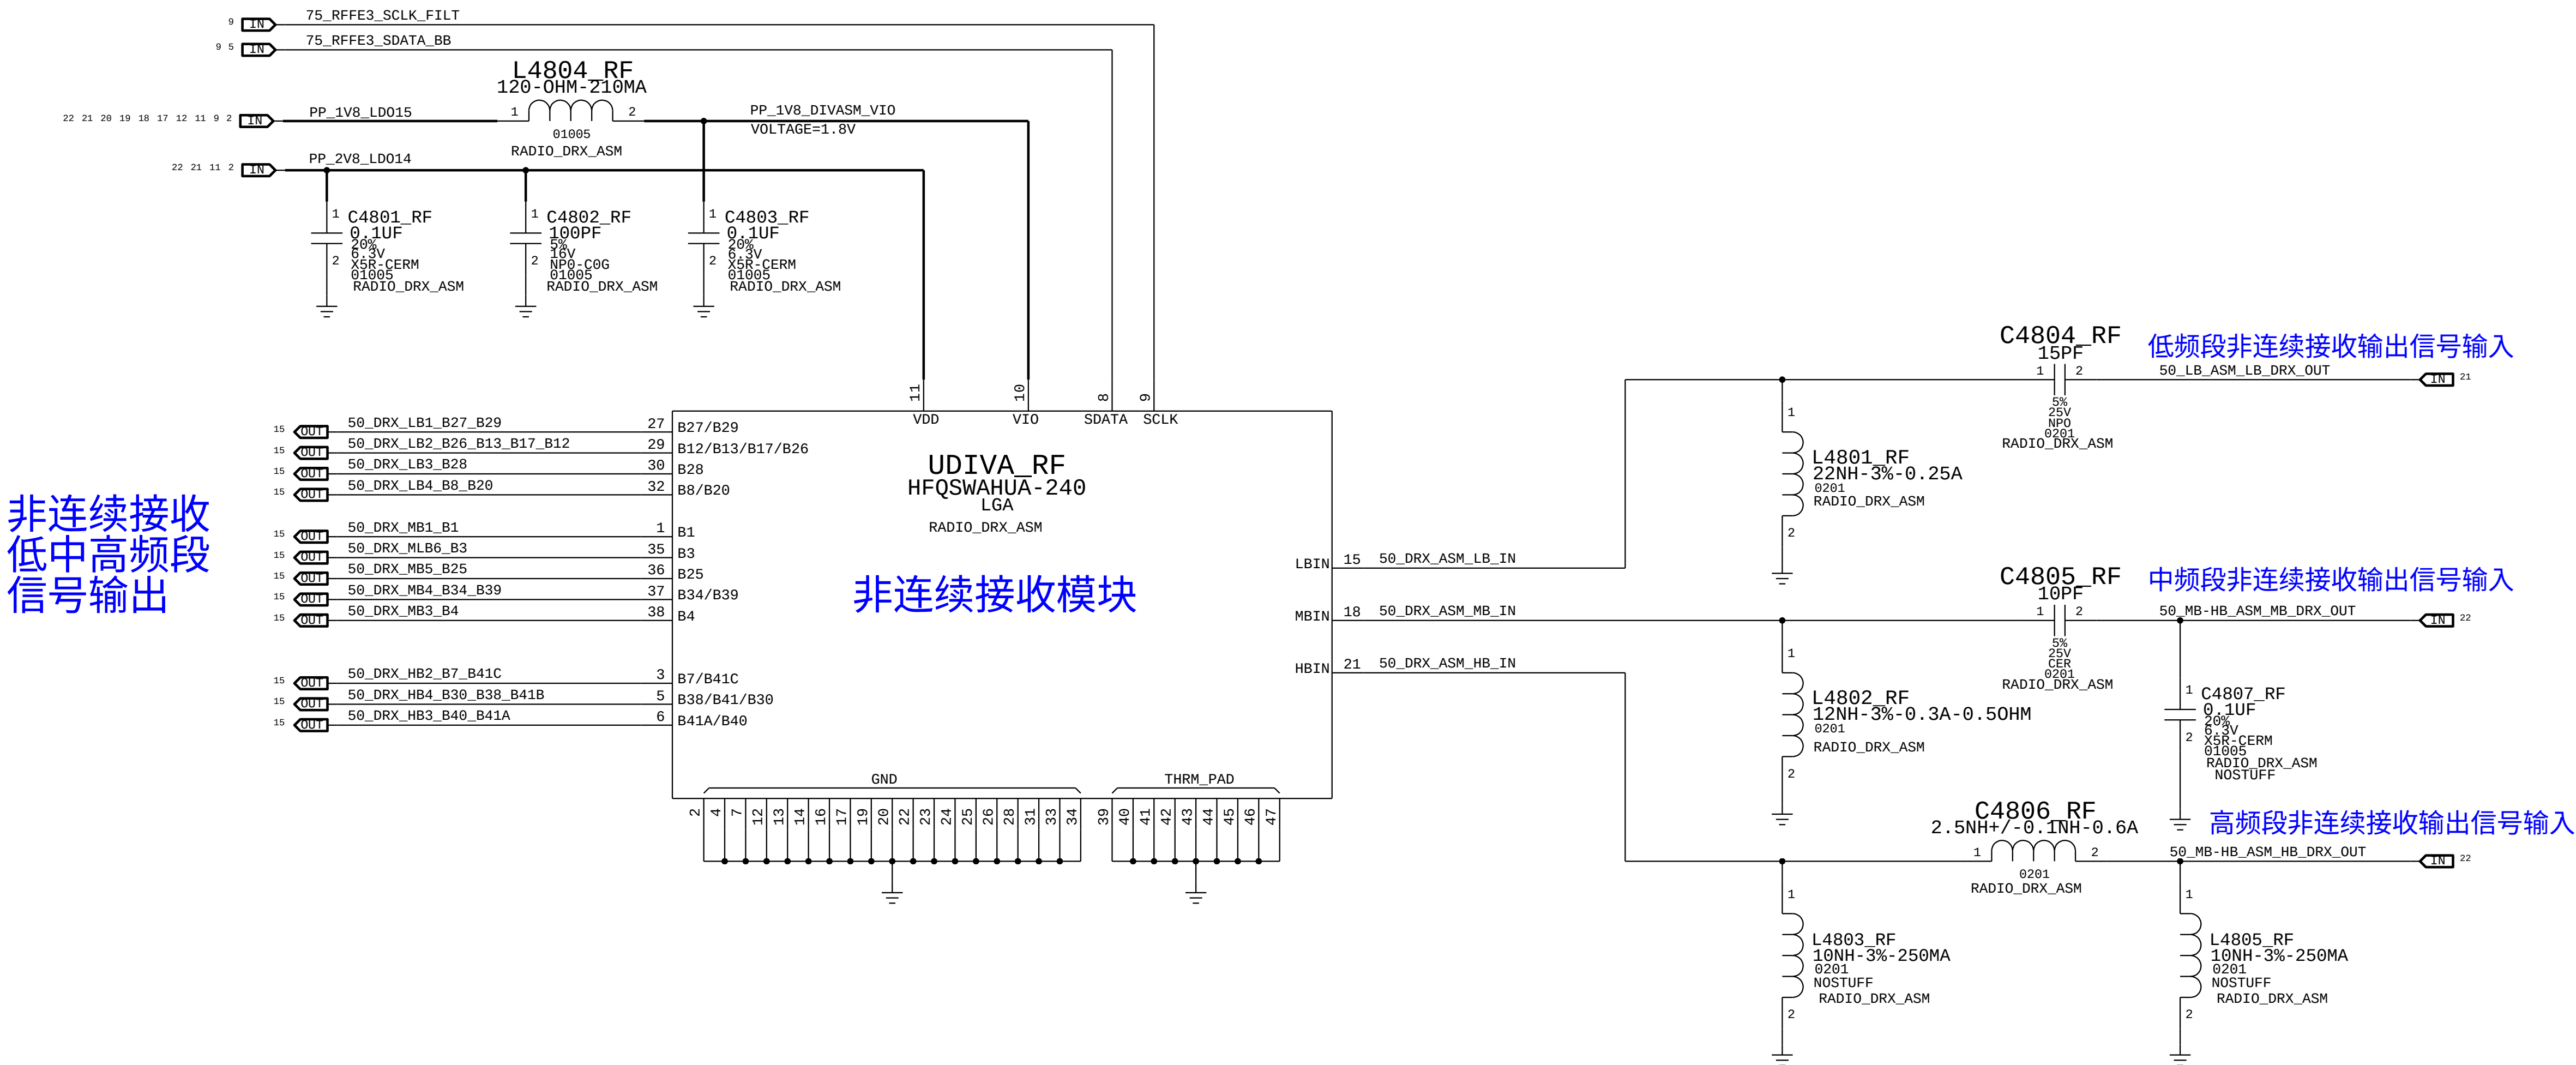


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188



SIM

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

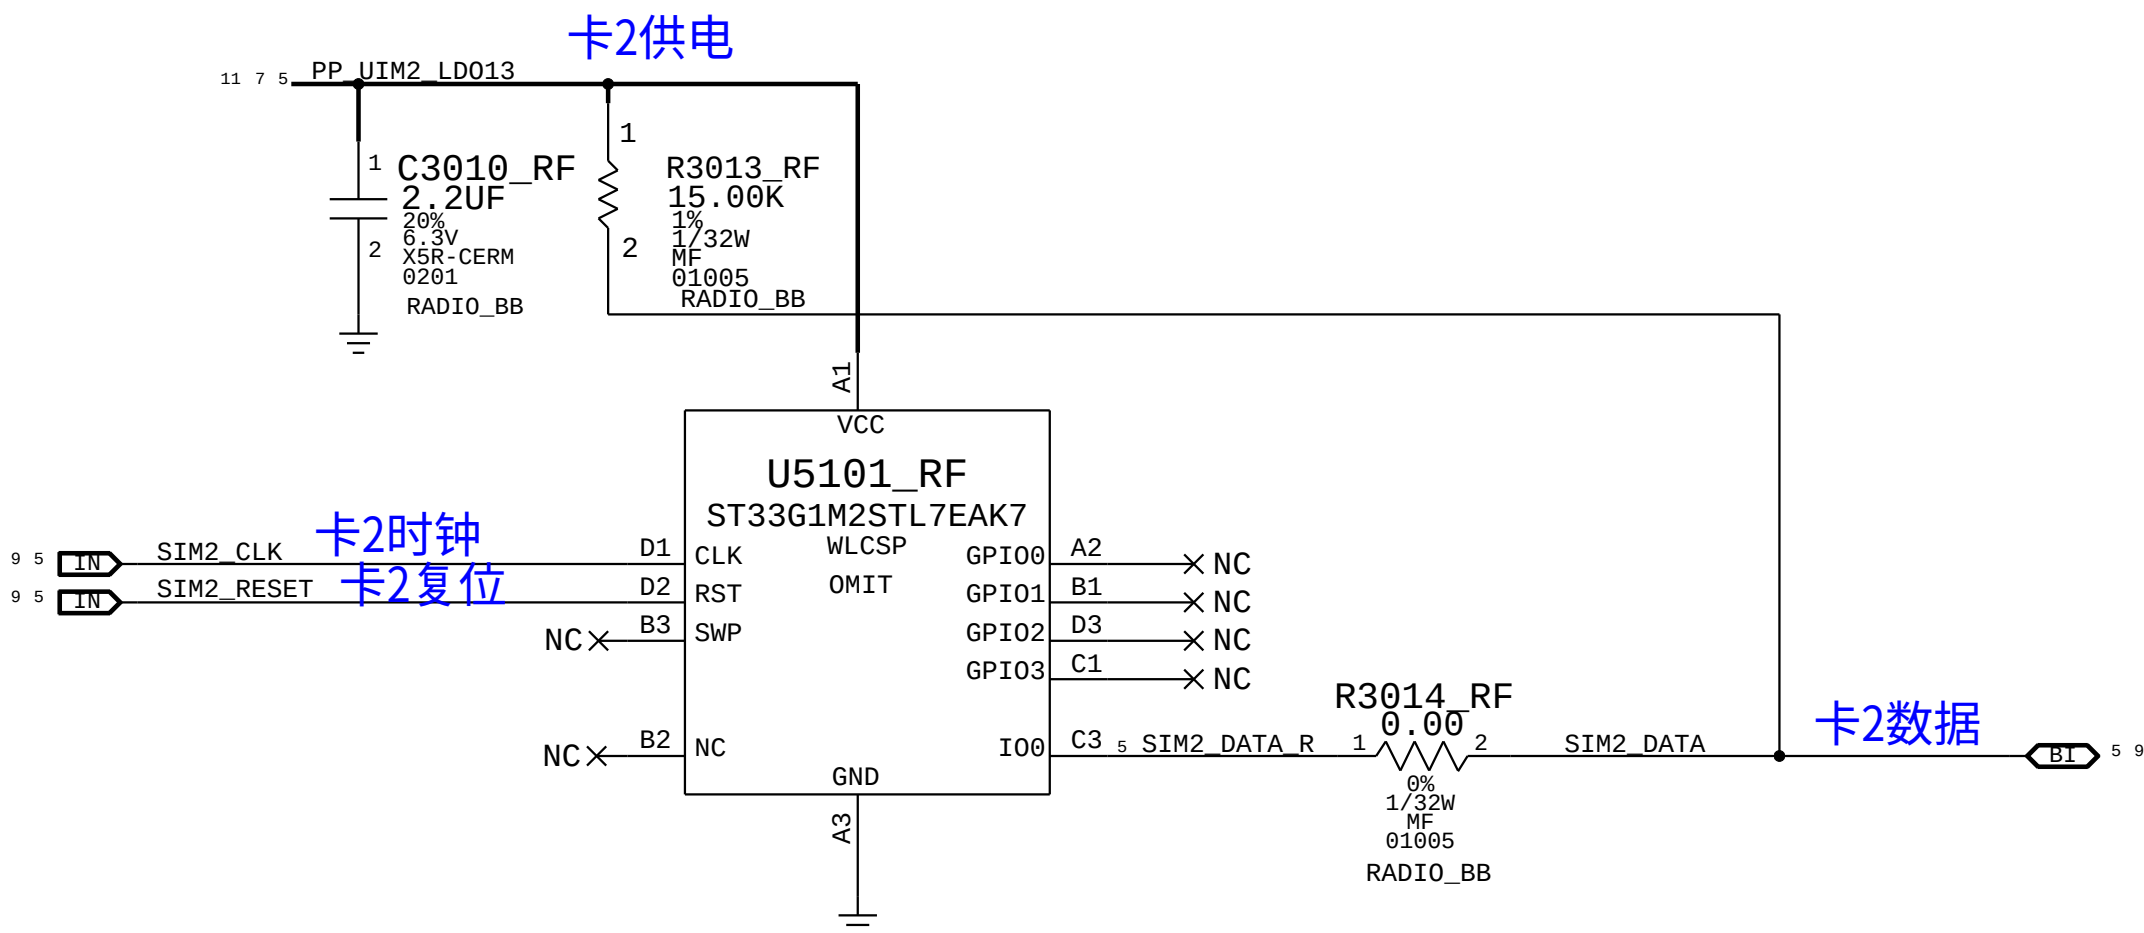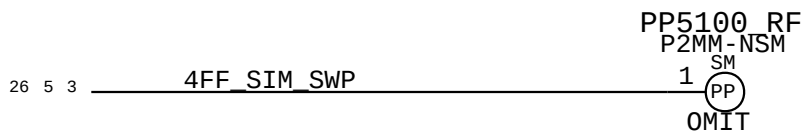


迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188


WIFI/BT

WIFI/蓝牙

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

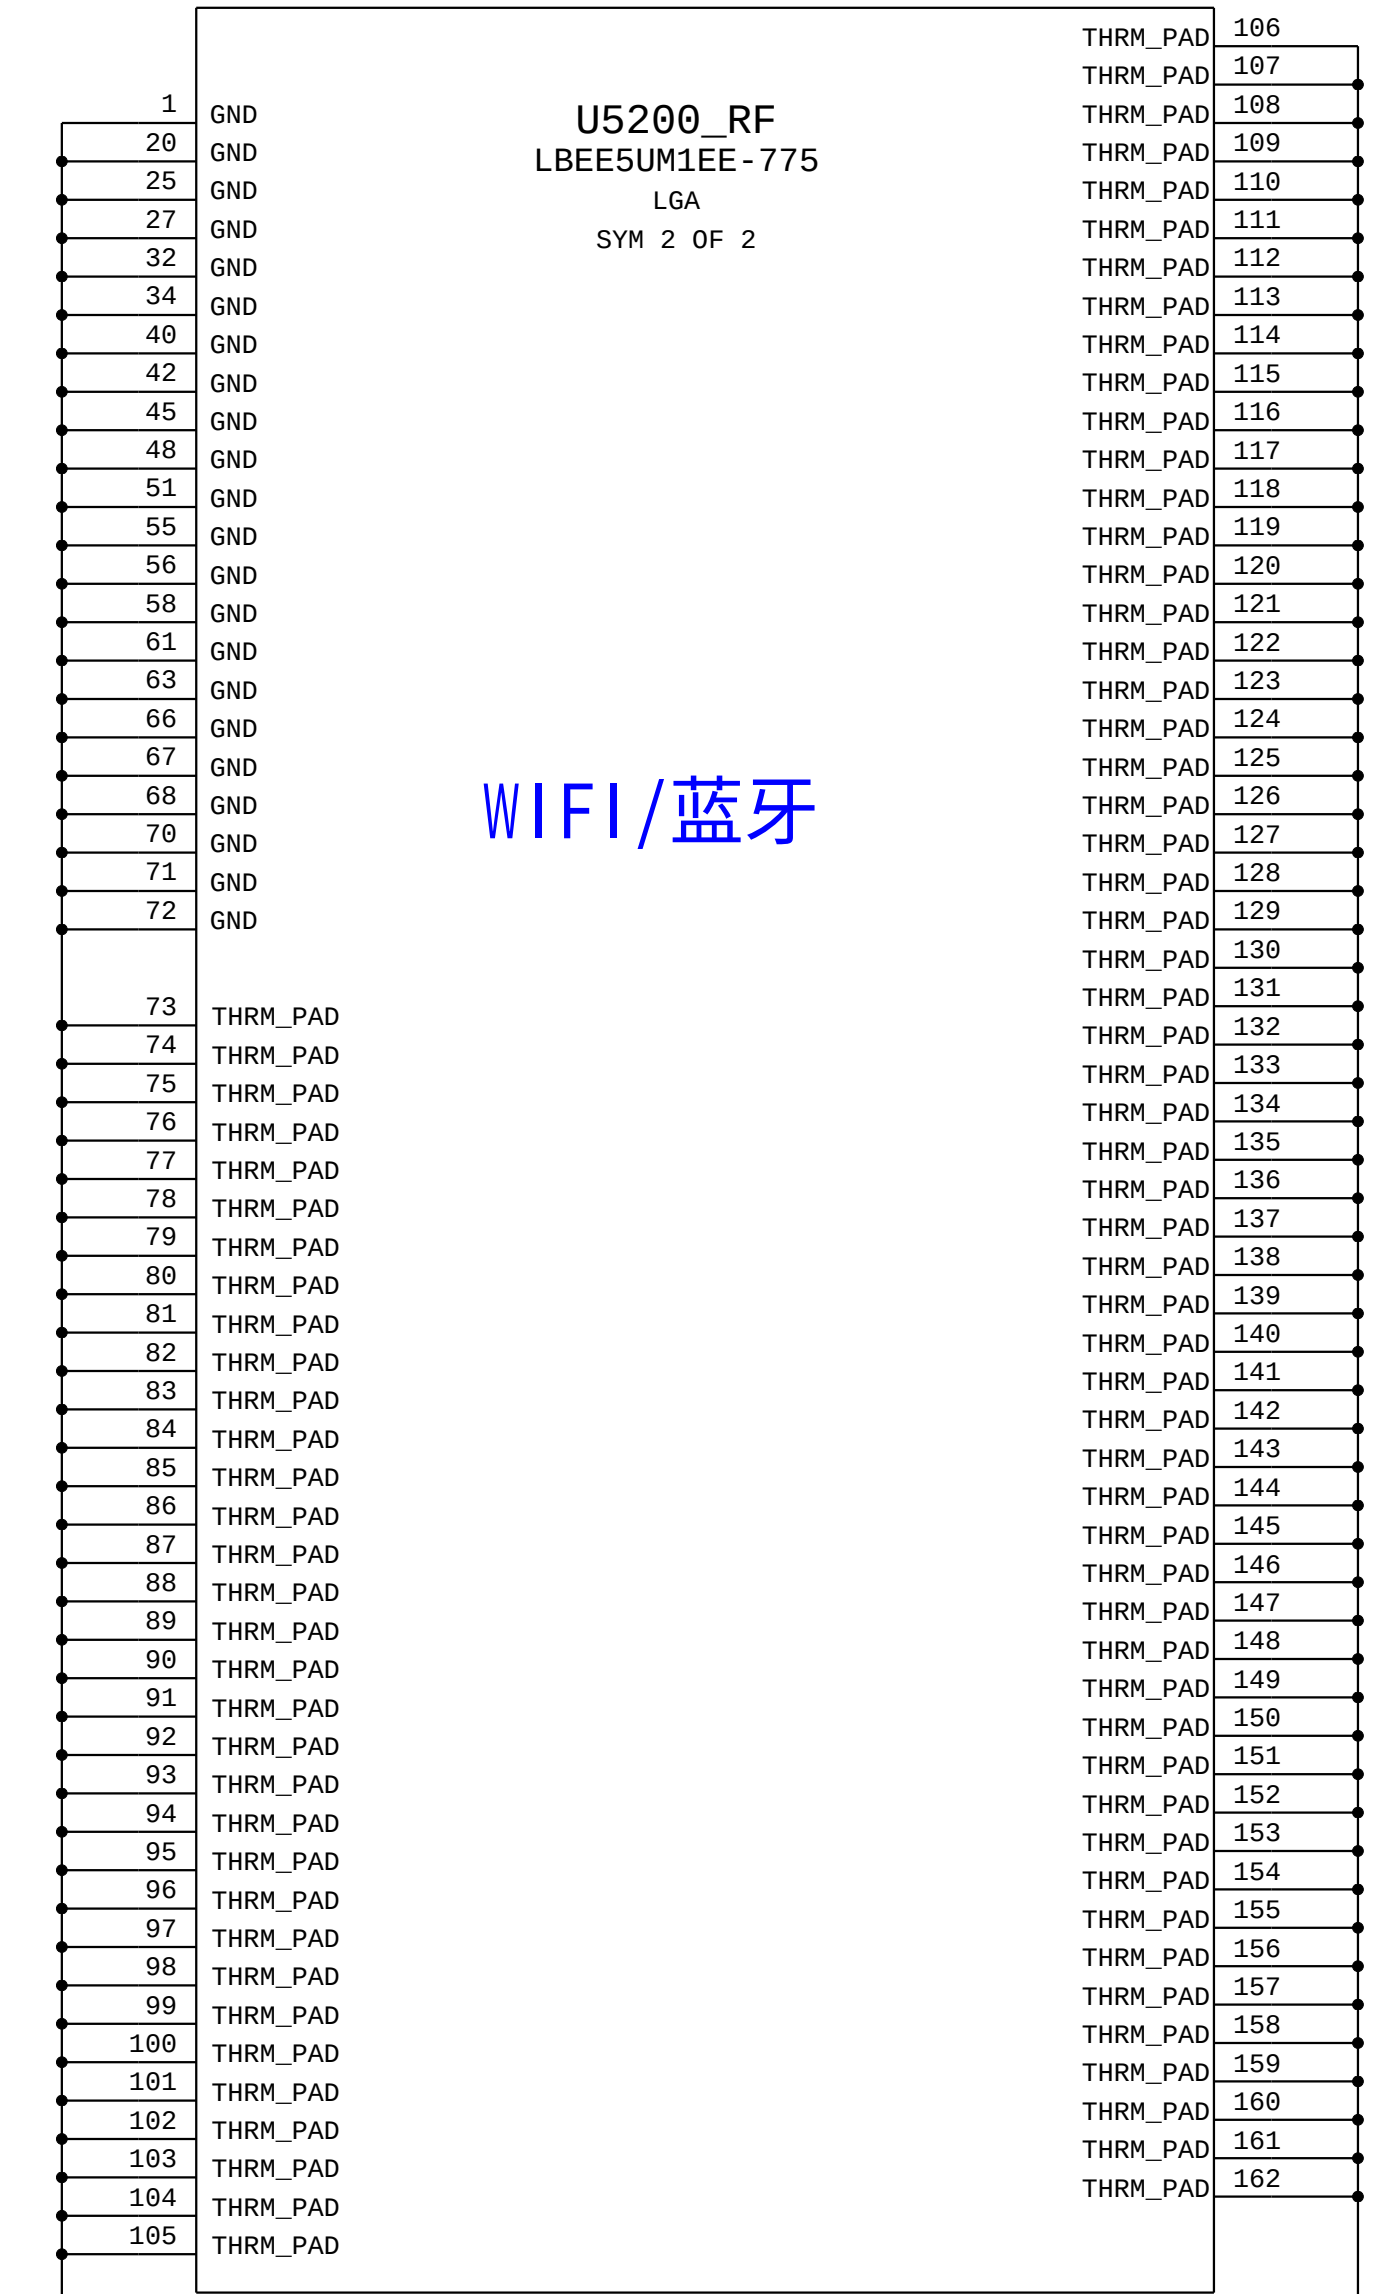


WIFI/蓝牙

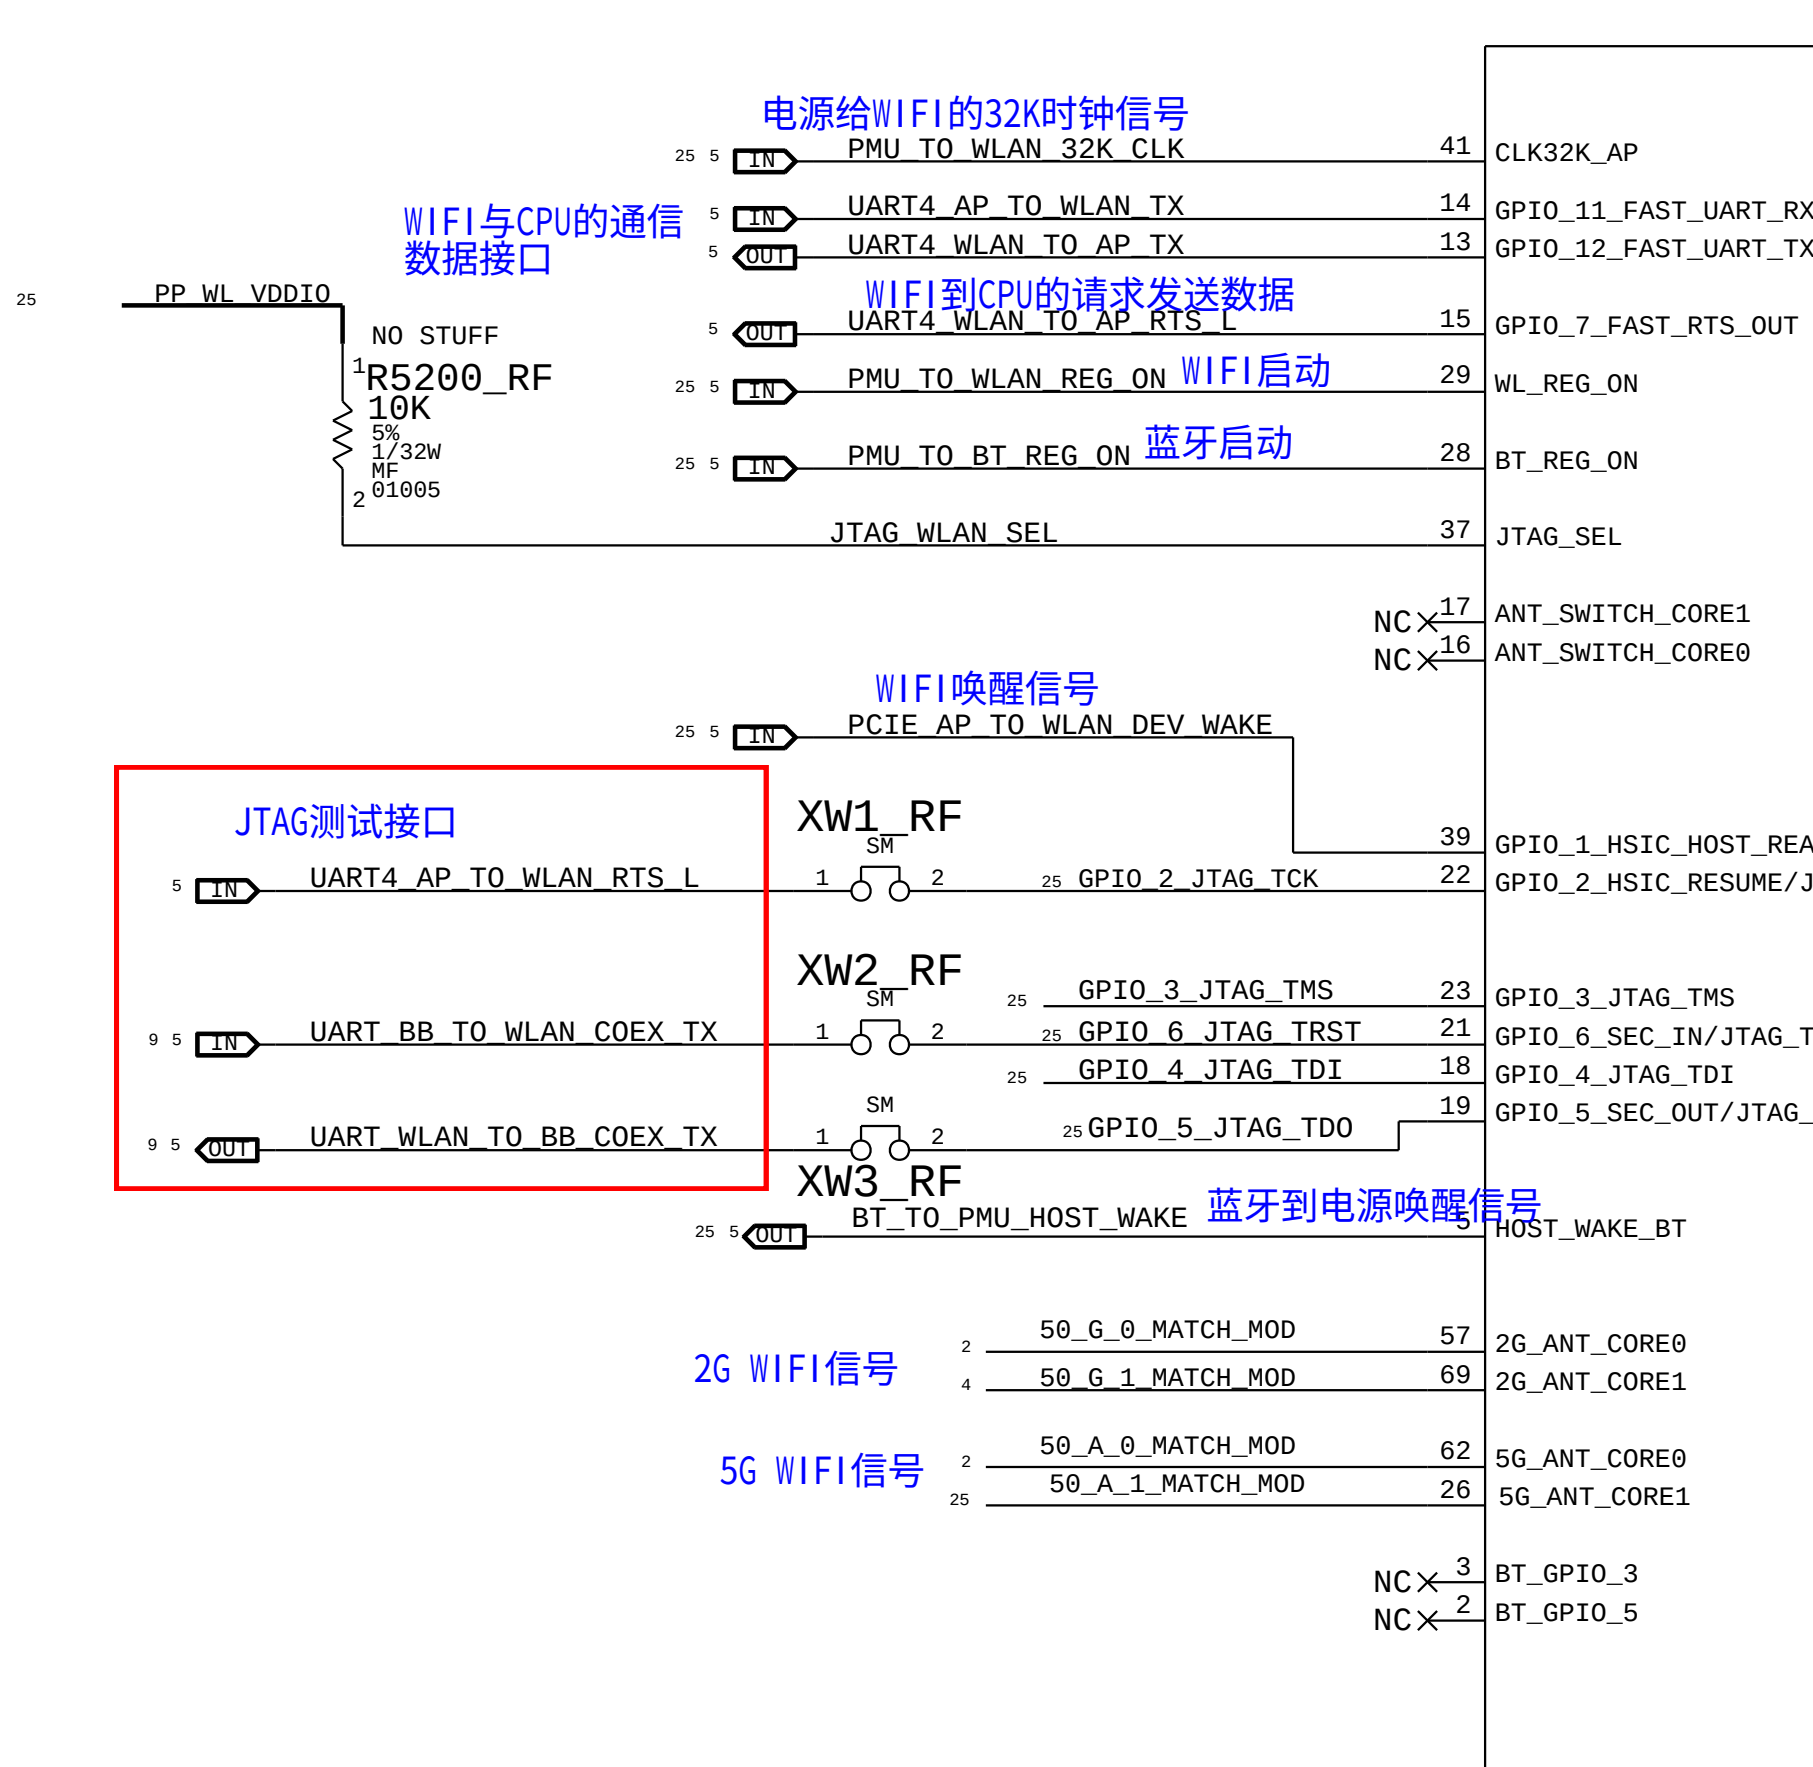

PART NUMBER

PART NUMBER	ALTERNATE FOR	BOM OPTION	REF DES	COMMENTS:
339S00043	339S00033		U5200_RF	ALT WIFI/BT MODULE

WIFI/蓝牙

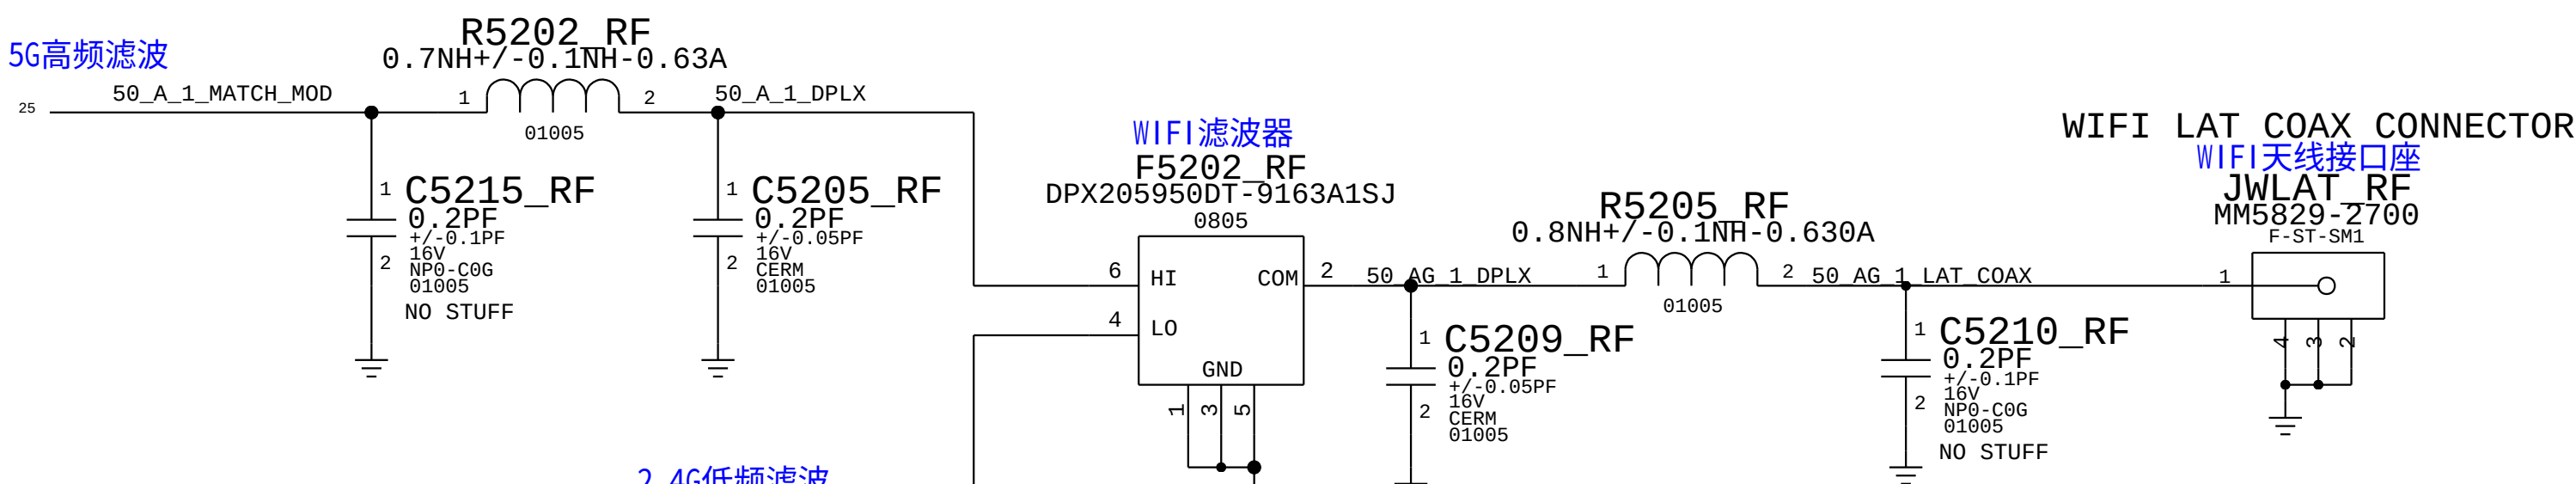


LAST UPDATED: 4/30/2014

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188

NFC模块

迅维手机维修培训
联系电话: 0755-61506416
咨询QQ: 1727176051 981775188

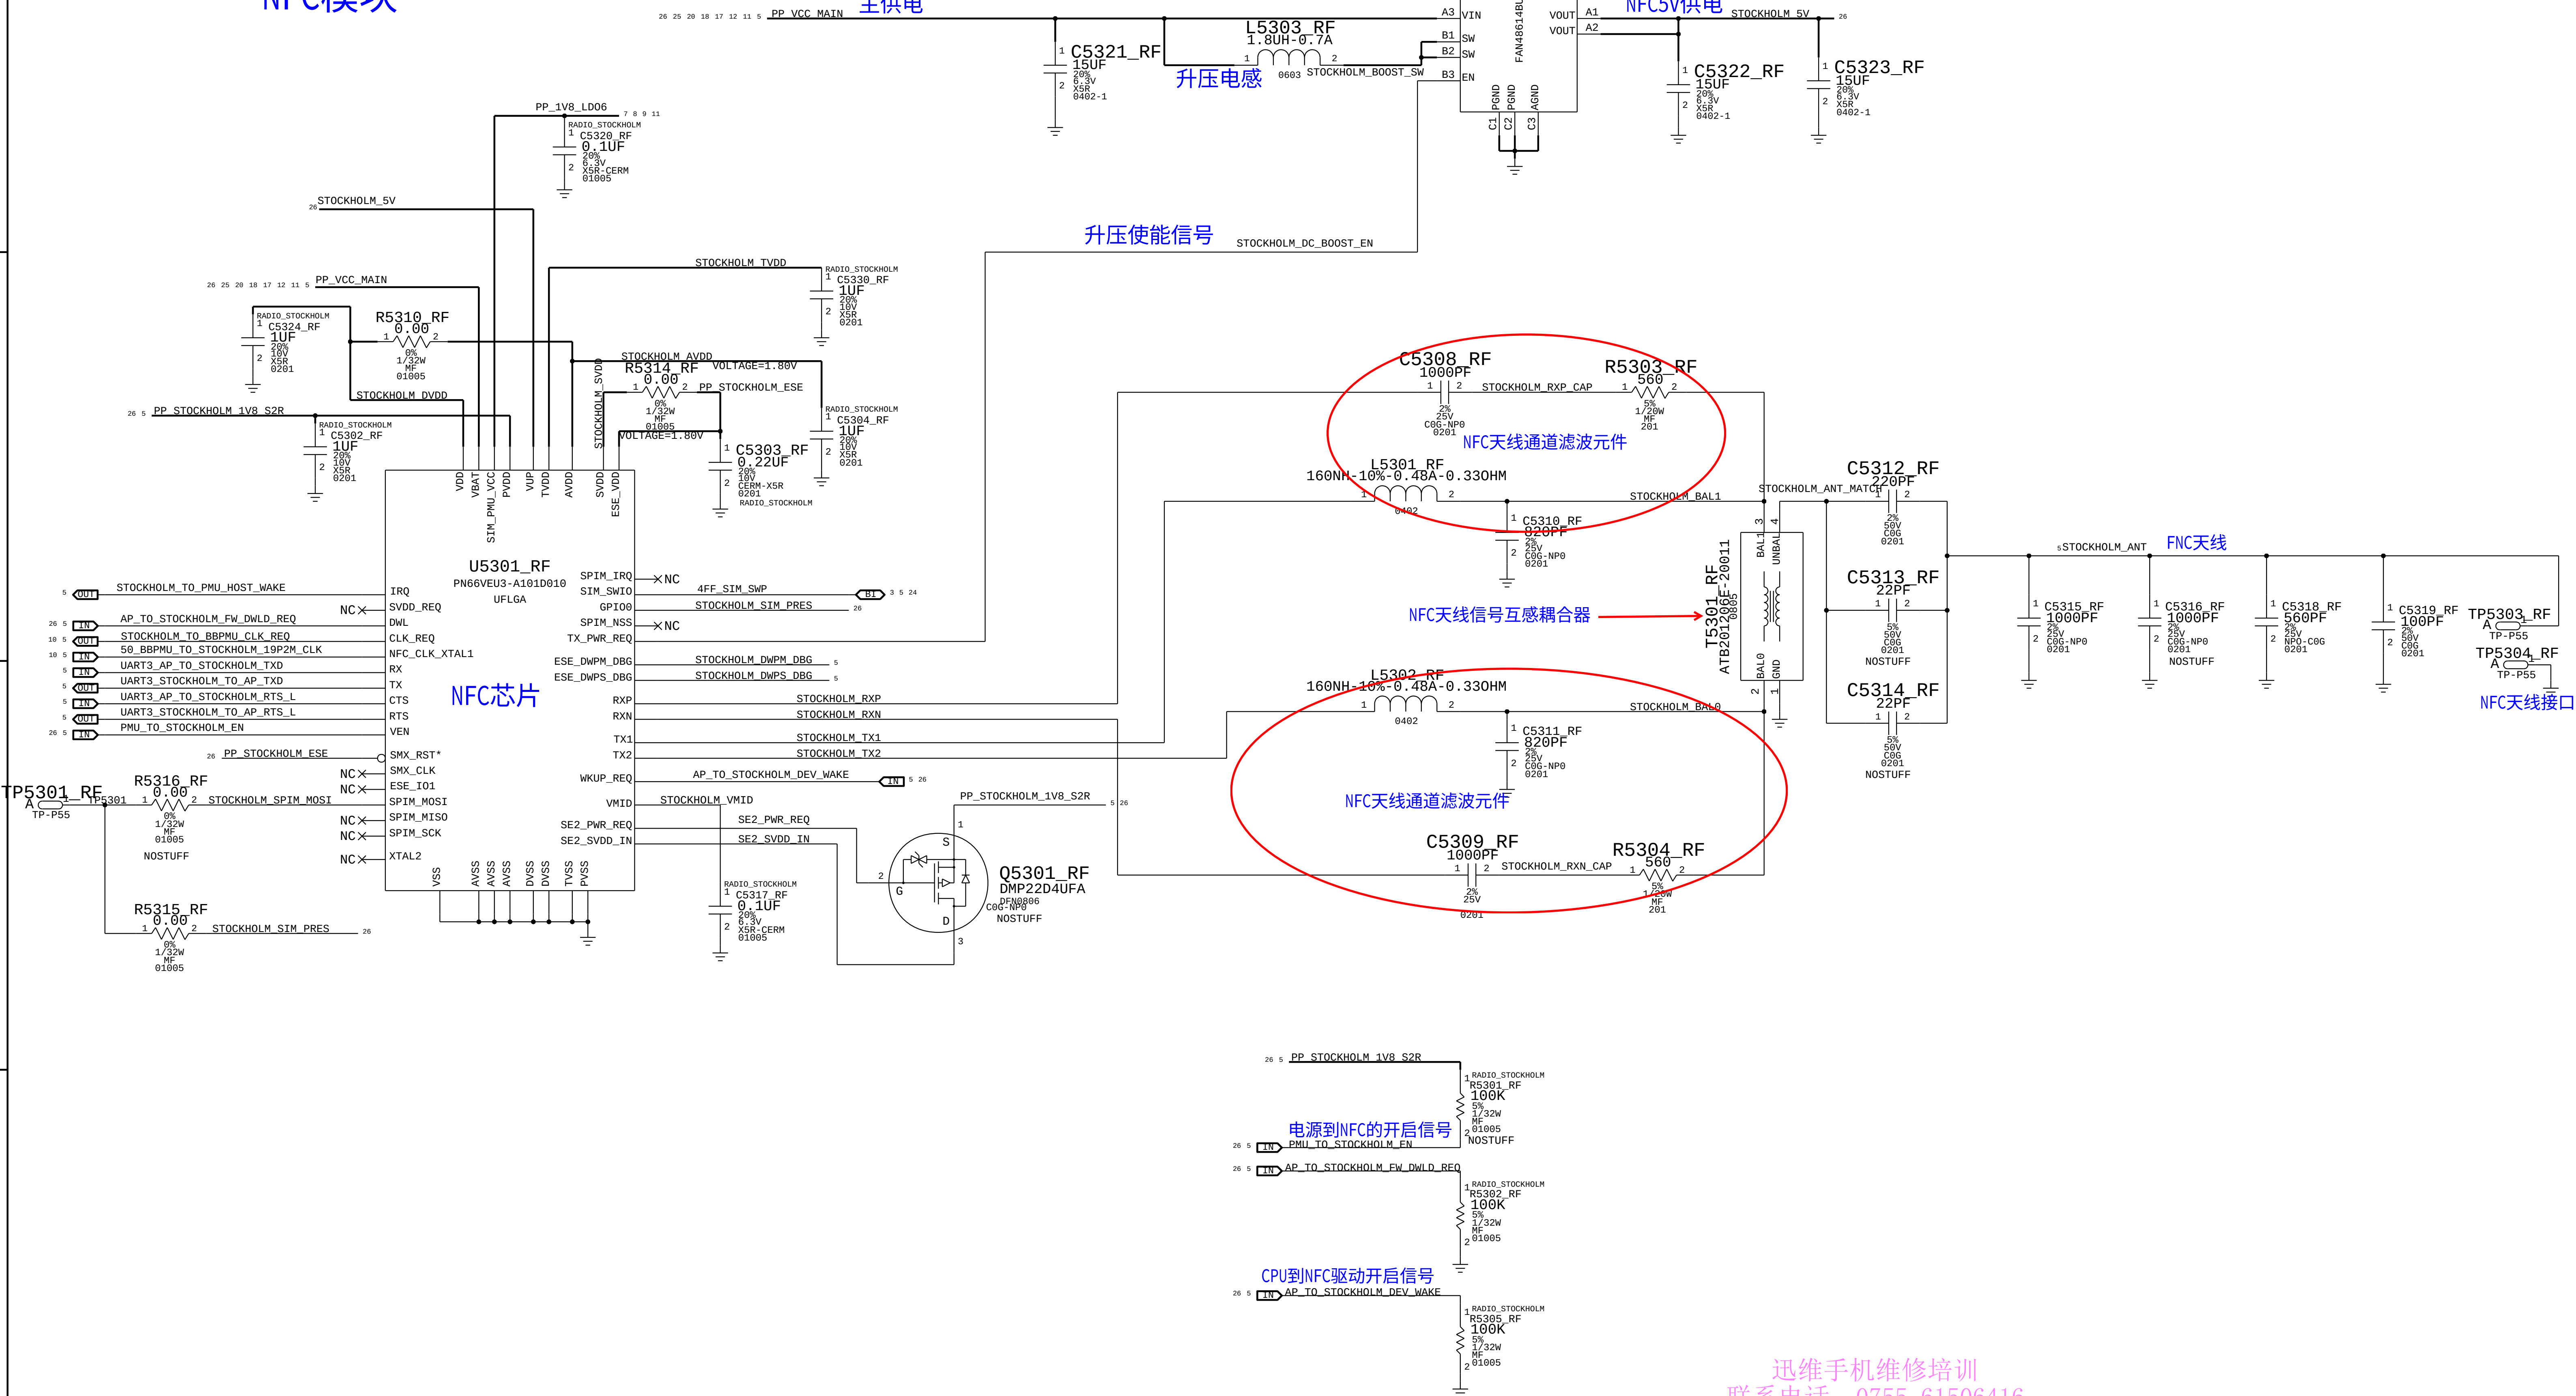

迅维手机维修培训
联系电话：0755-61506416
咨询QQ：1727176051 981775188