



8. Level 3 Repair

8-1. Components Layout

MAIN PBA (TOP SIDE)

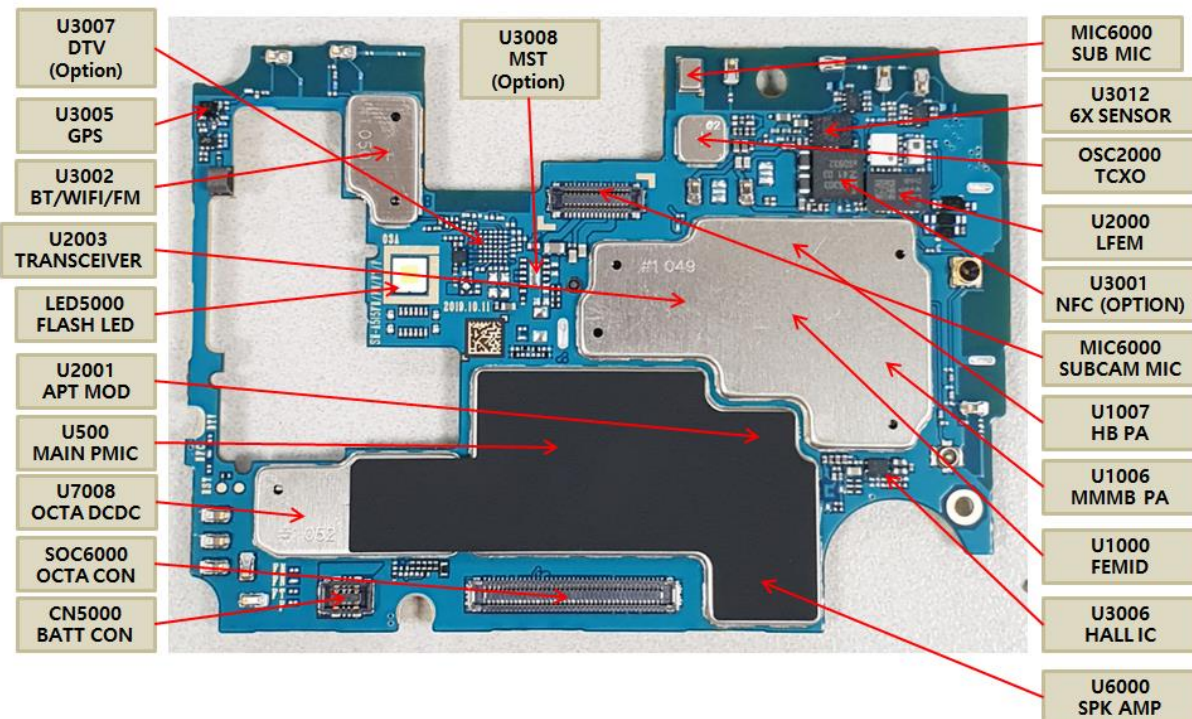


MAIN PBA (BOTTOM SIDE)

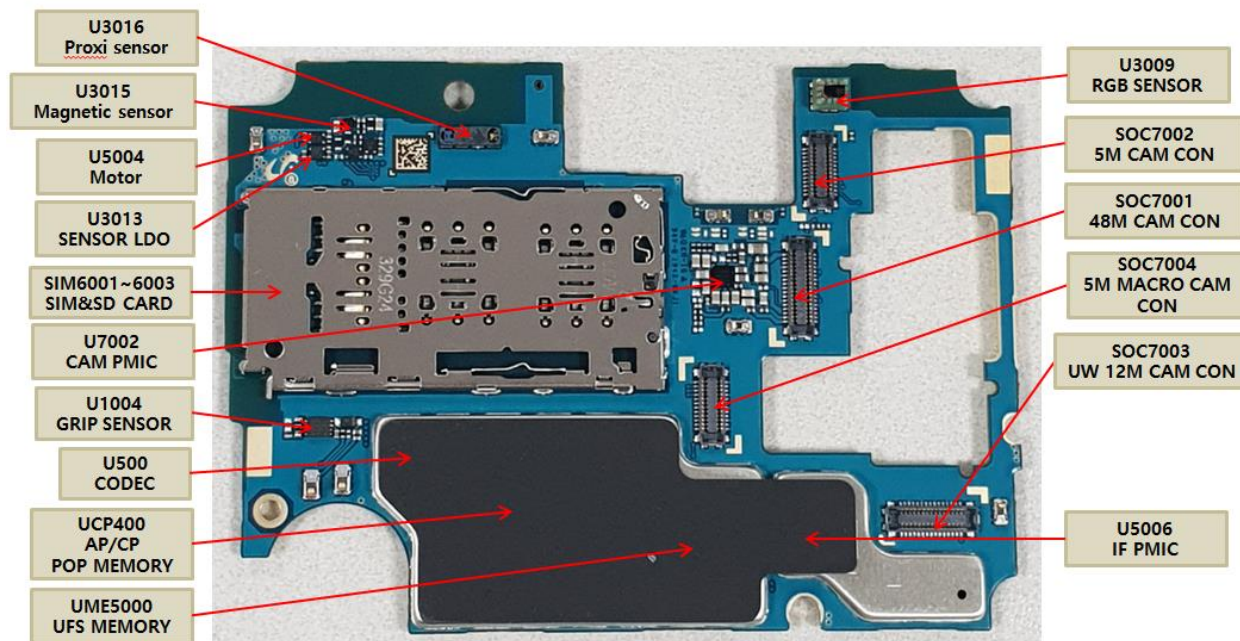


8. Level 3 Repair


SUB PBA (TOP SIDE)

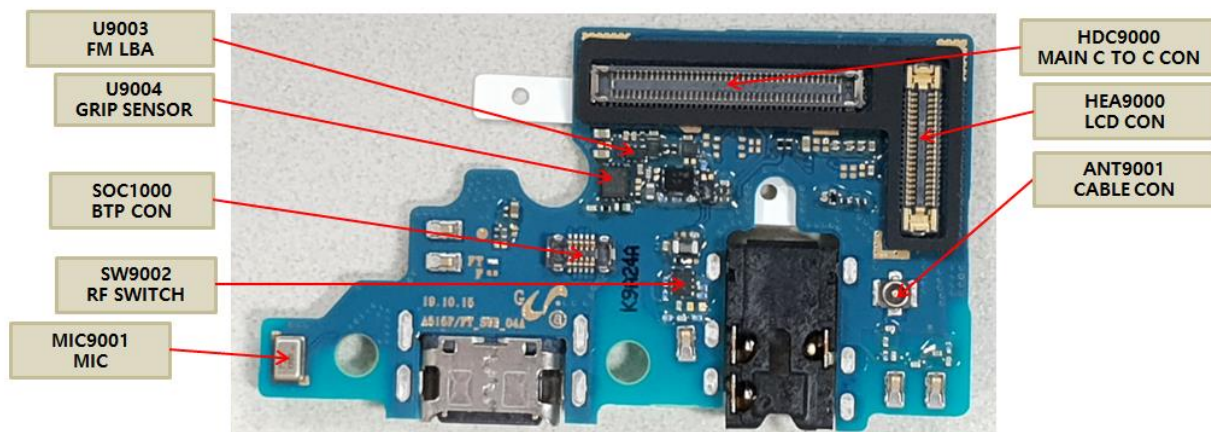

SUB PBA (BOTTOM SIDE)

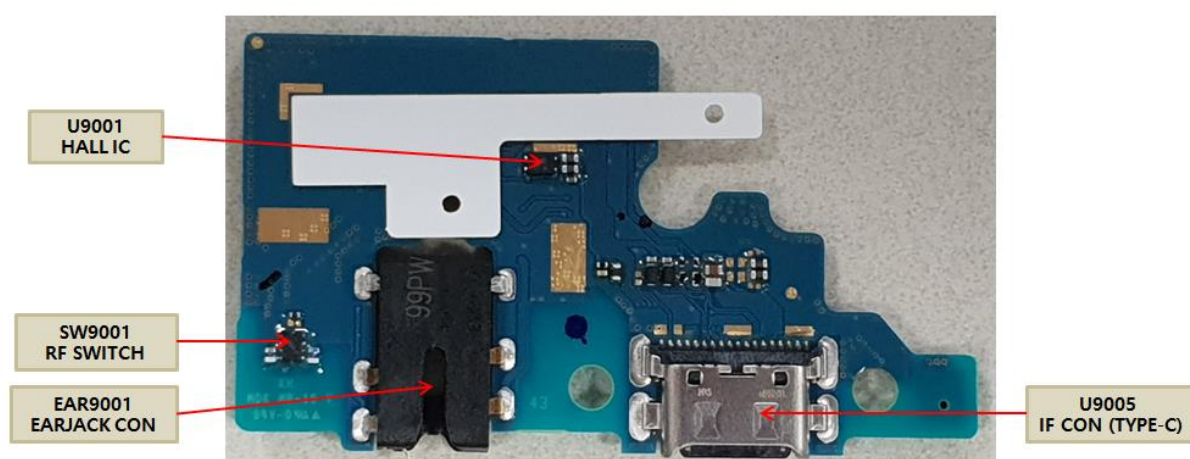

SM-A515F/DSM RF Block Diagram REV1.0

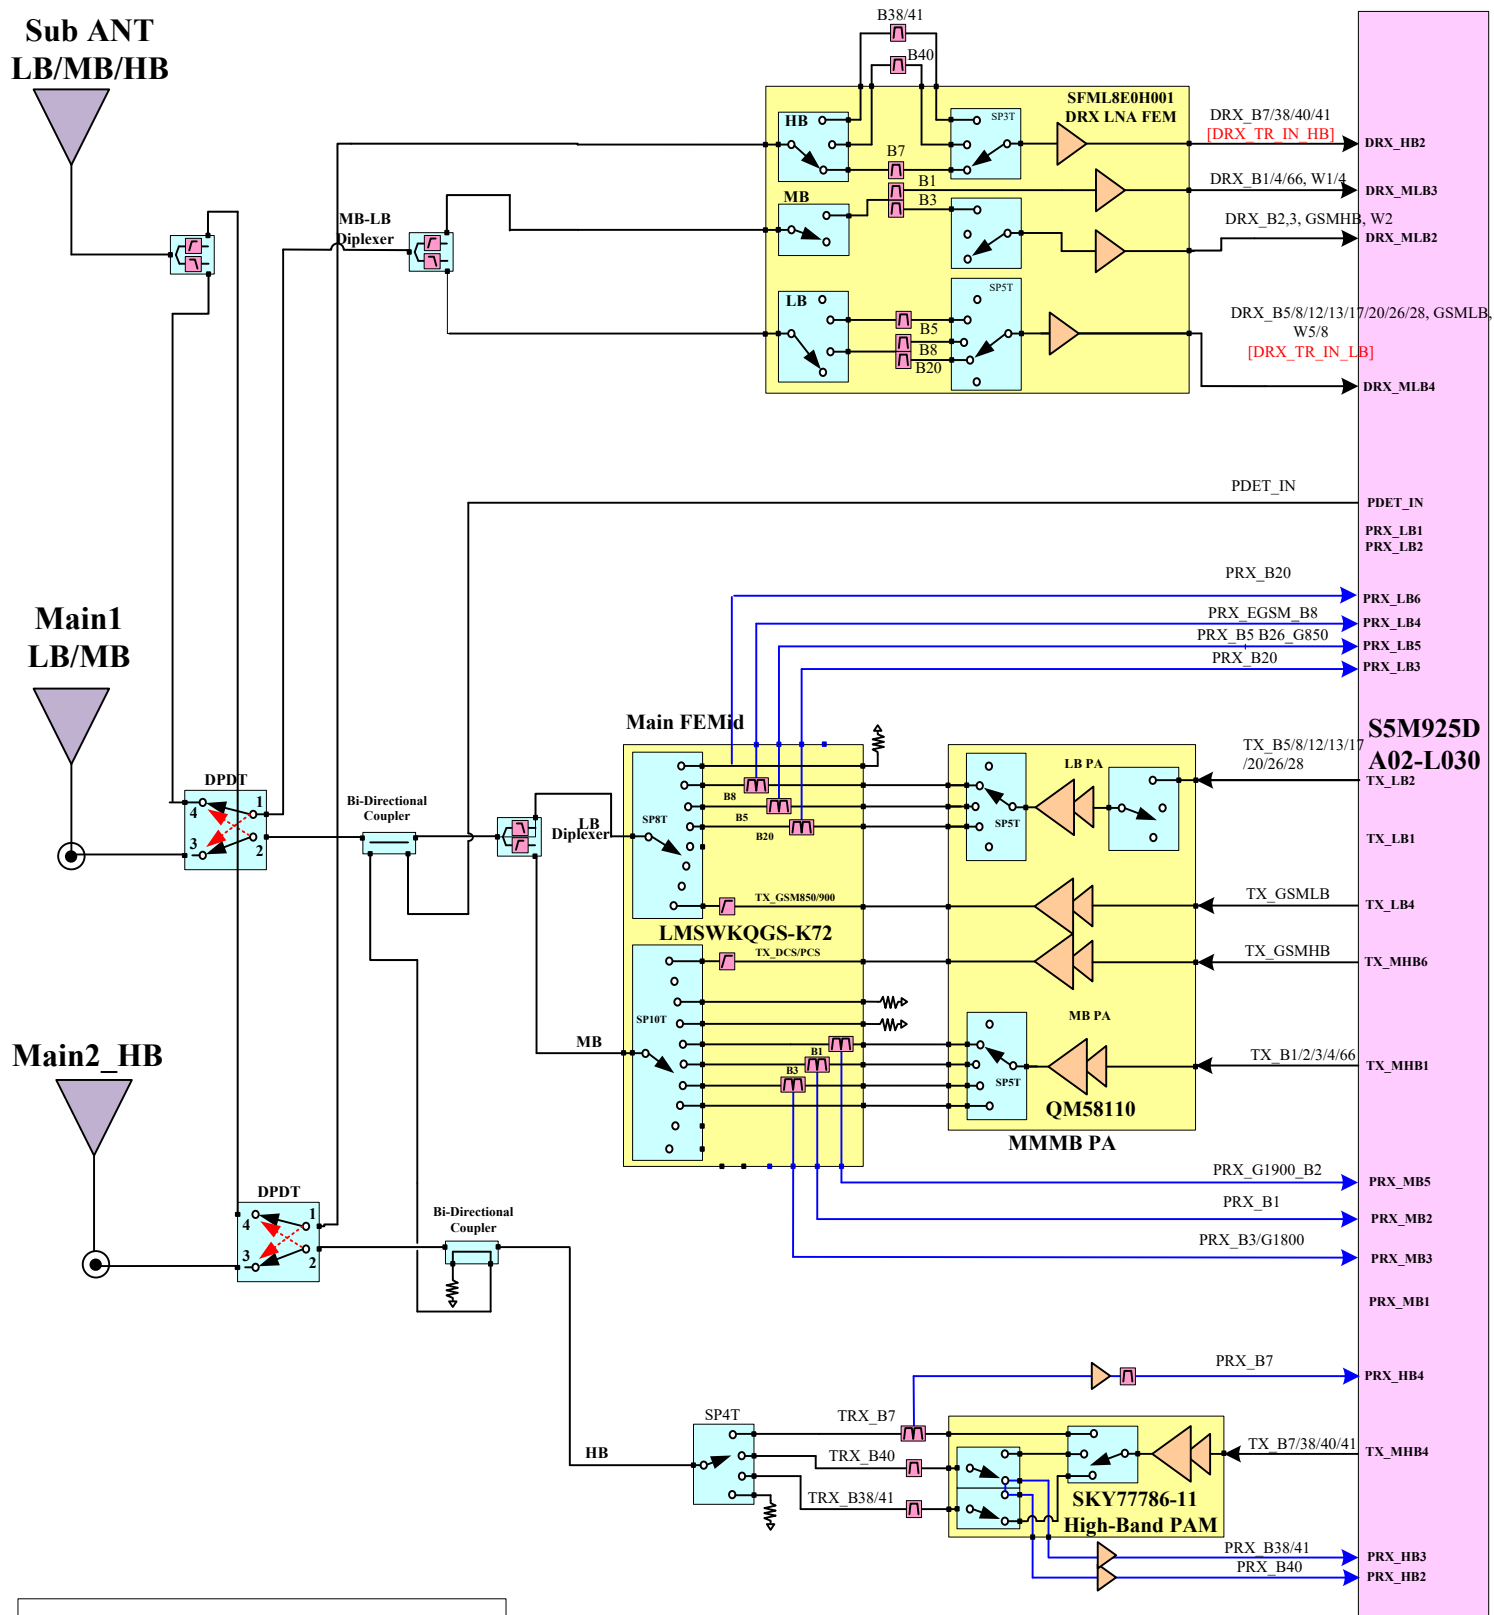

[SM-A515F/DSM RF Band]


2G : Quad

3G : W1,W2,W4,W5,W8

LTE FDD : B1/2/3/4/5/7/8/12/13
17/20/26/28


LTE TDD : B38/40/41


SM-A515F/DSM Connectivity Block Diagram

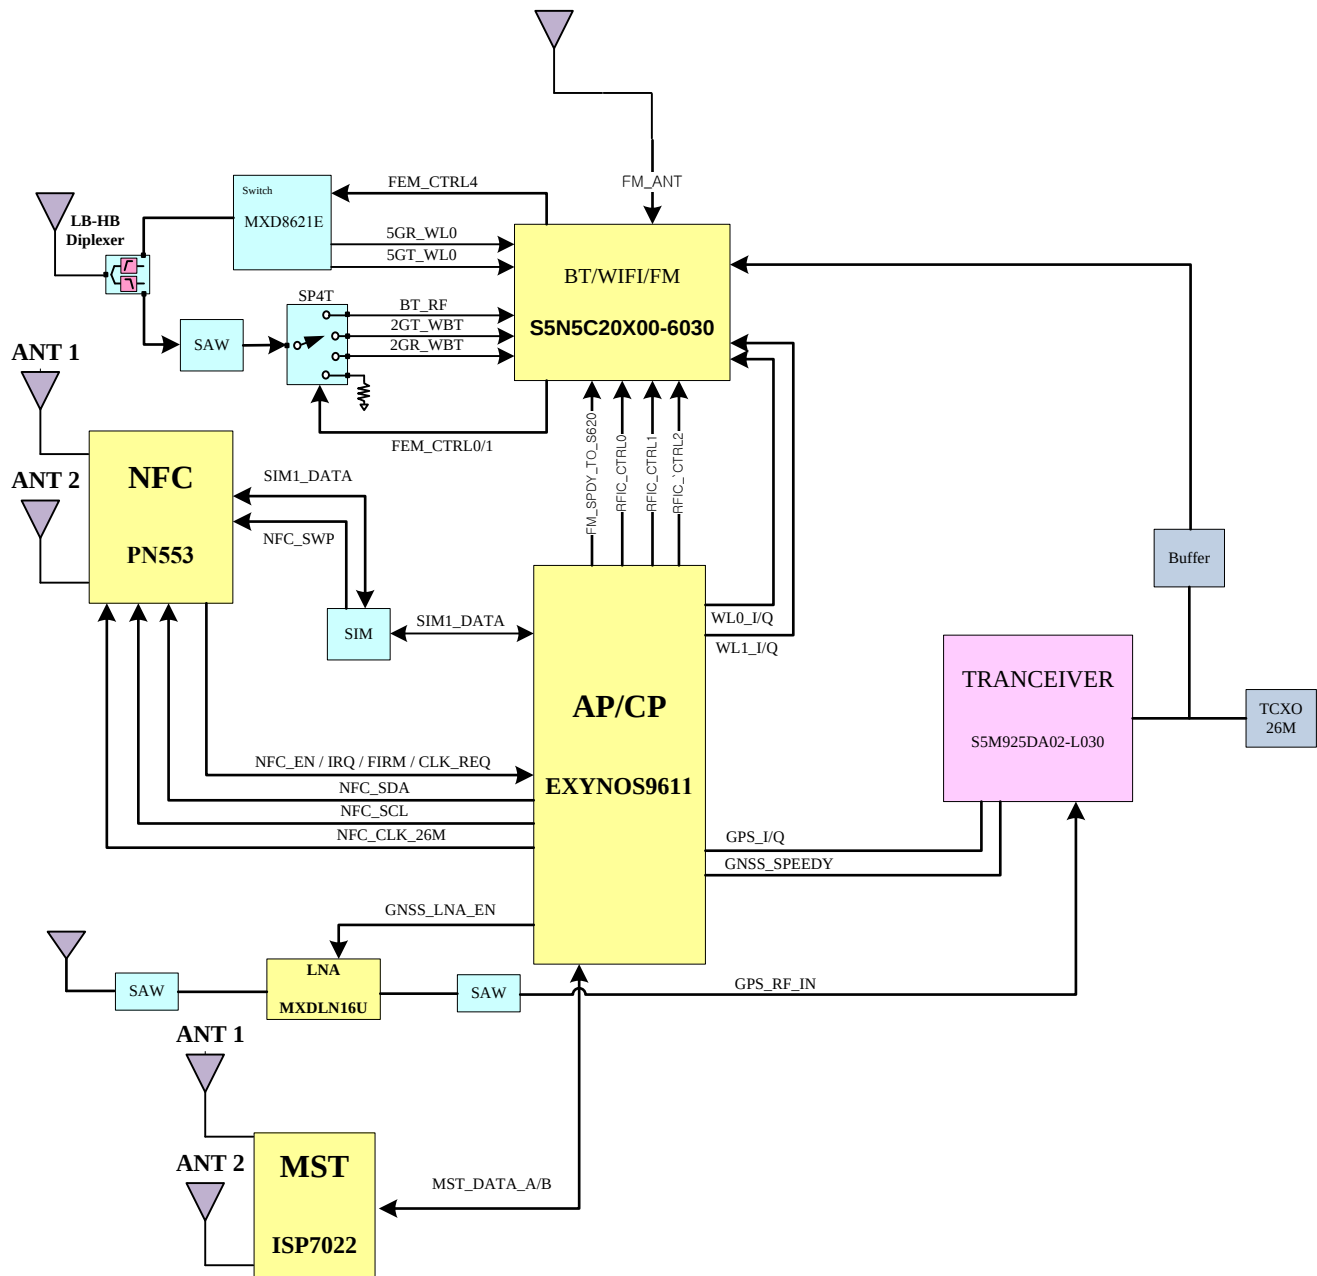

SM-A515F/DSM BB Block Diagram


SAMSUNG CONFIDENTIAL
THIS DOCUMENT CONTAINS CONFIDENTIAL
PROPRIETARY INFORMATION THAT IS
SAMSUNG ELECTRONICS CO.'S PROPERTY.
DO NOT DISCLOSE TO OR DUPLICATE FOR OTHERS
EXCEPT AS AUTHORIZED BY SAMSUNG.

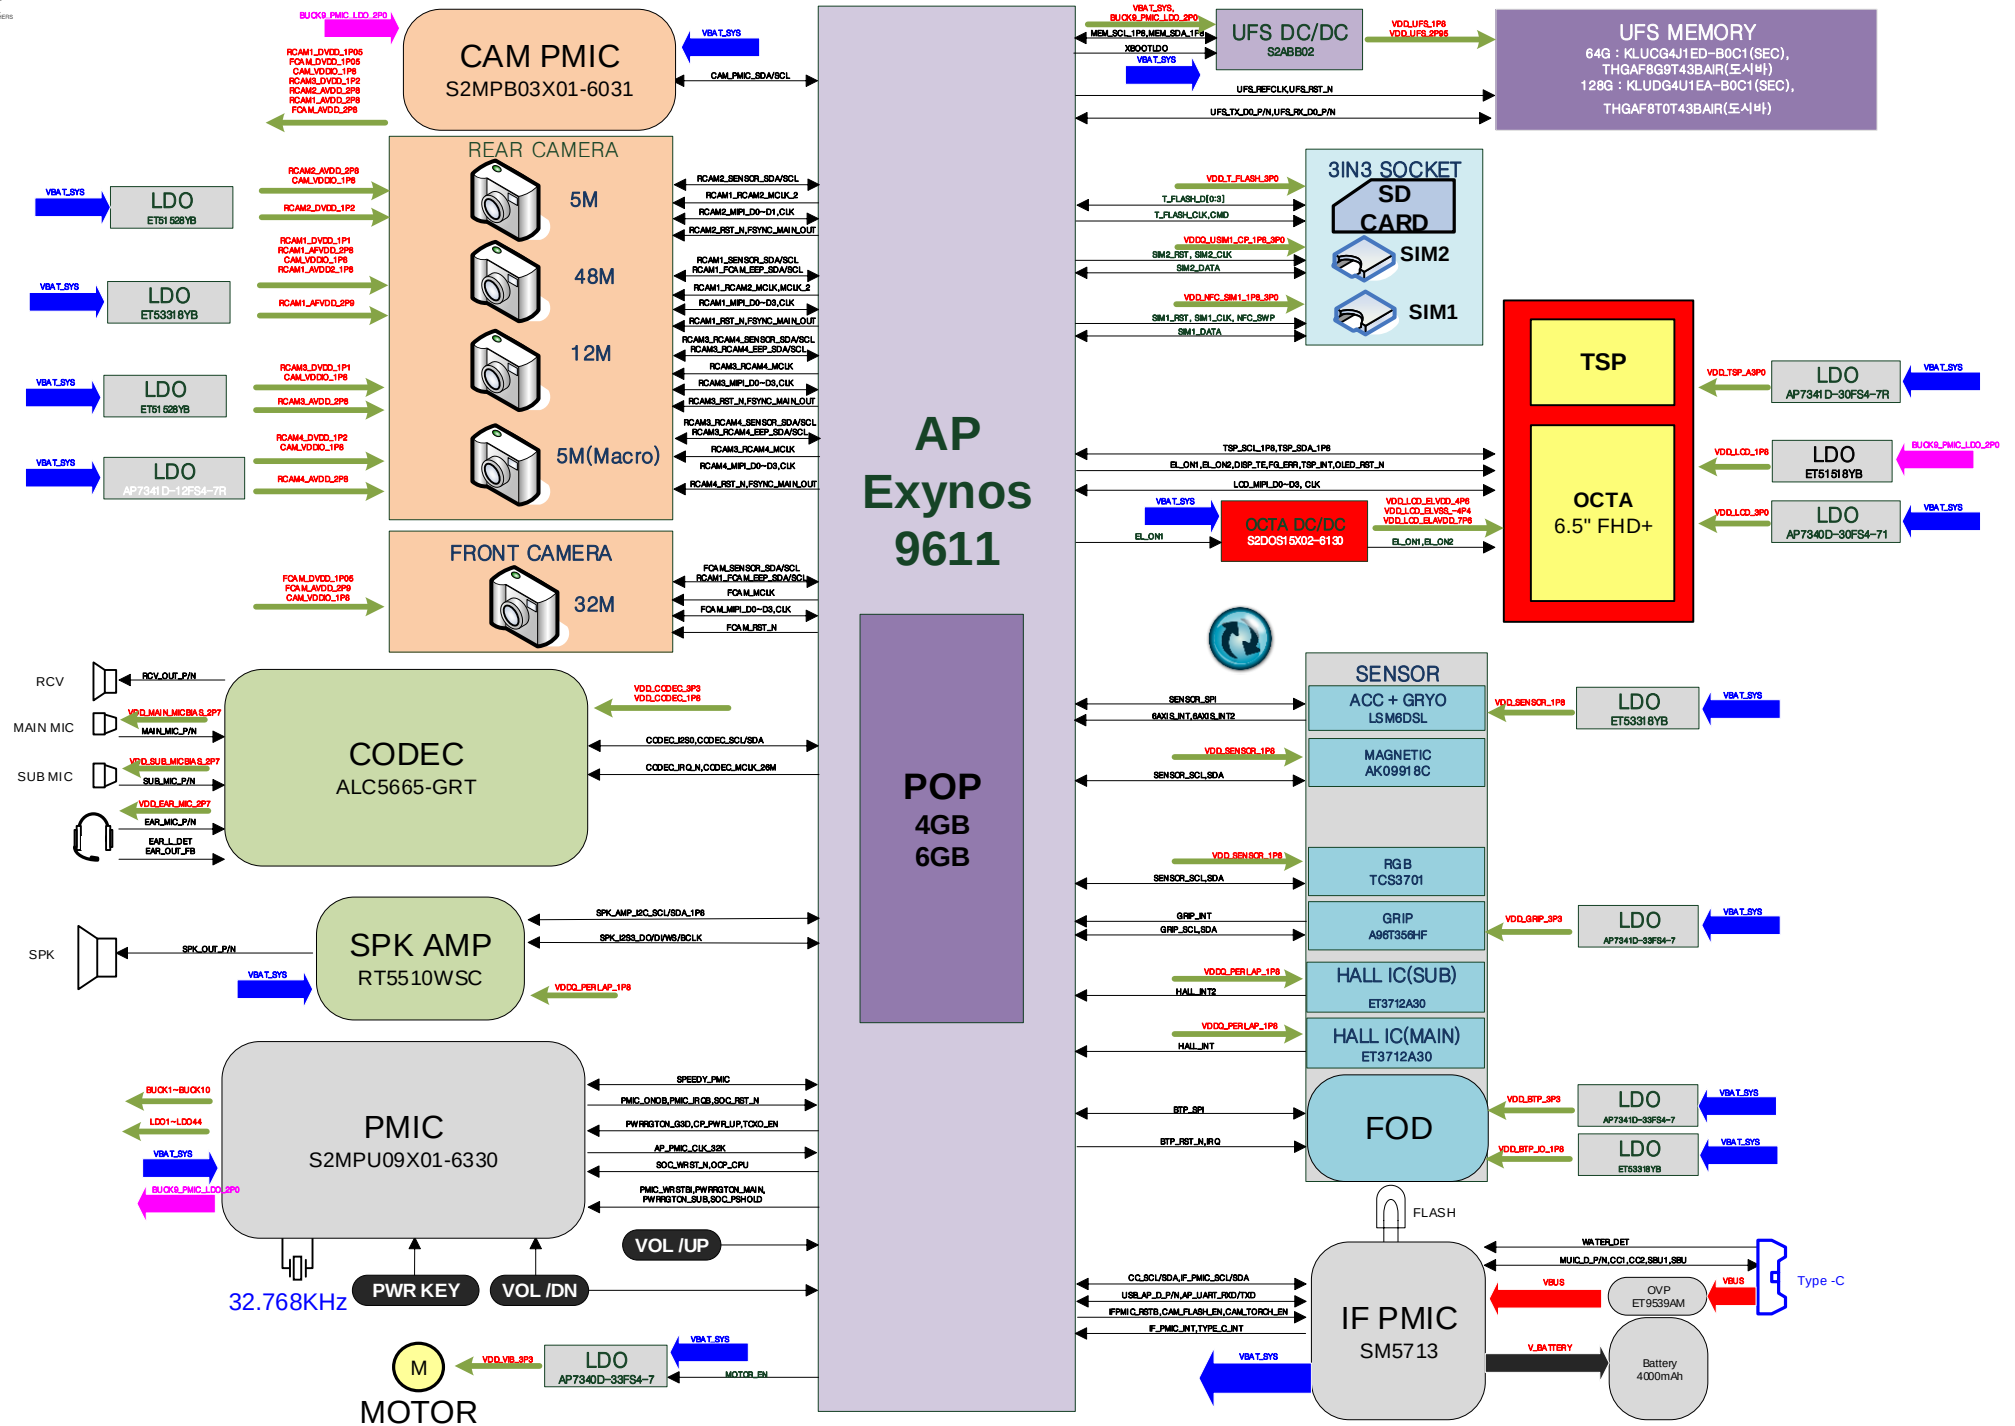

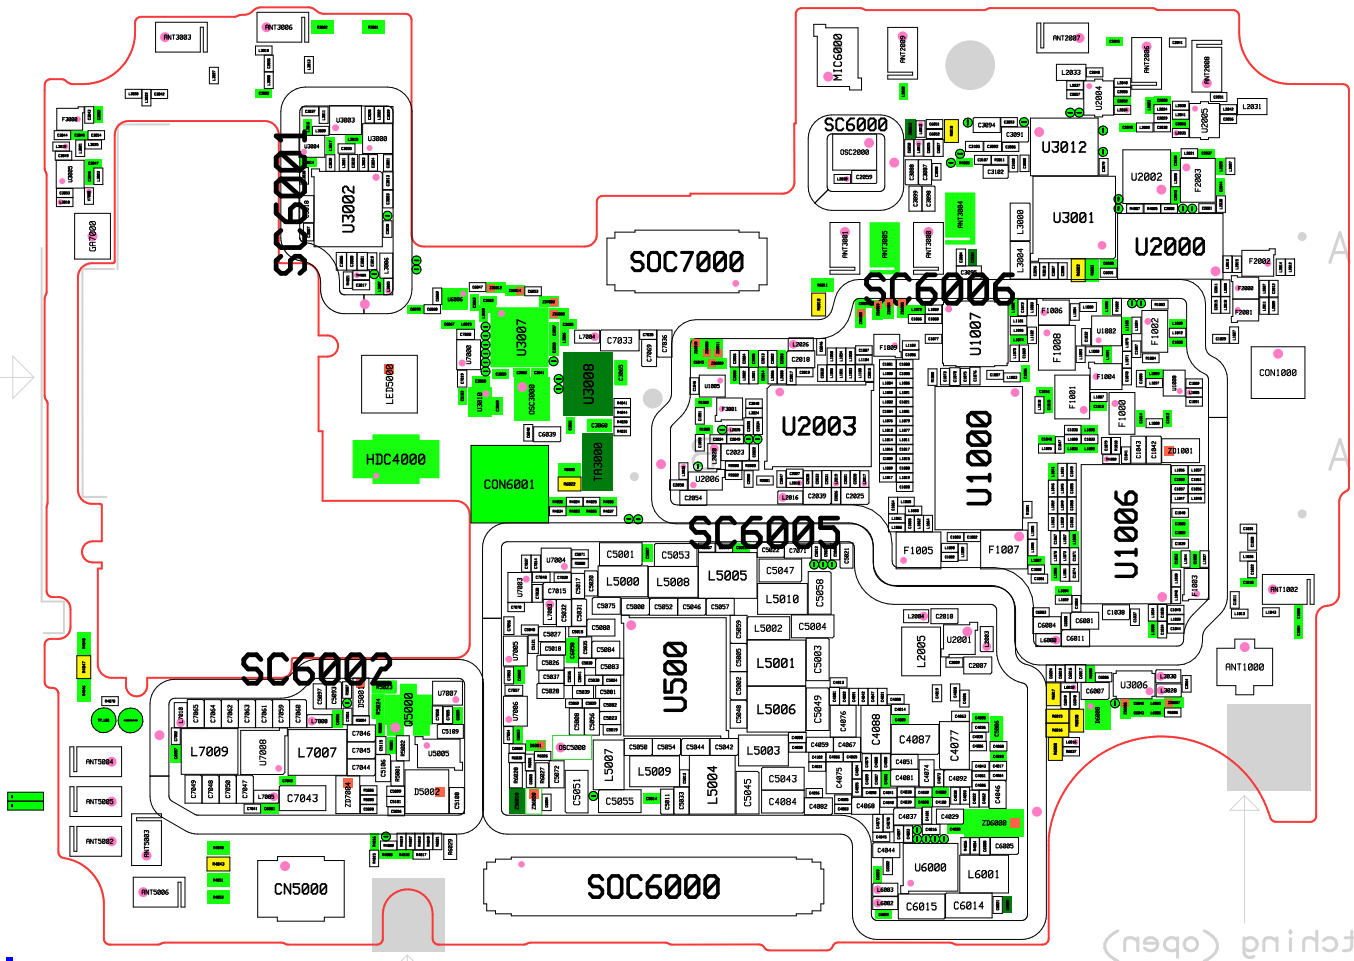

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

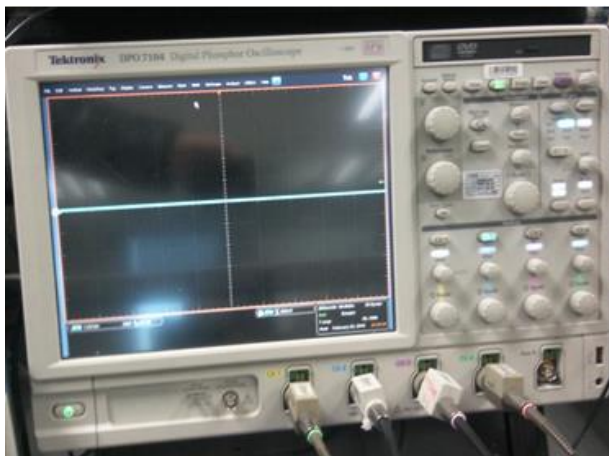

Oscilloscope




Digital Multimeter



Power Supply



+ driver, ESD Safe Tweezer

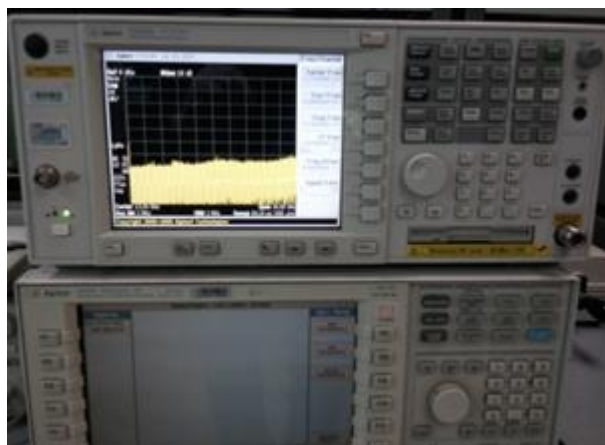


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Power On

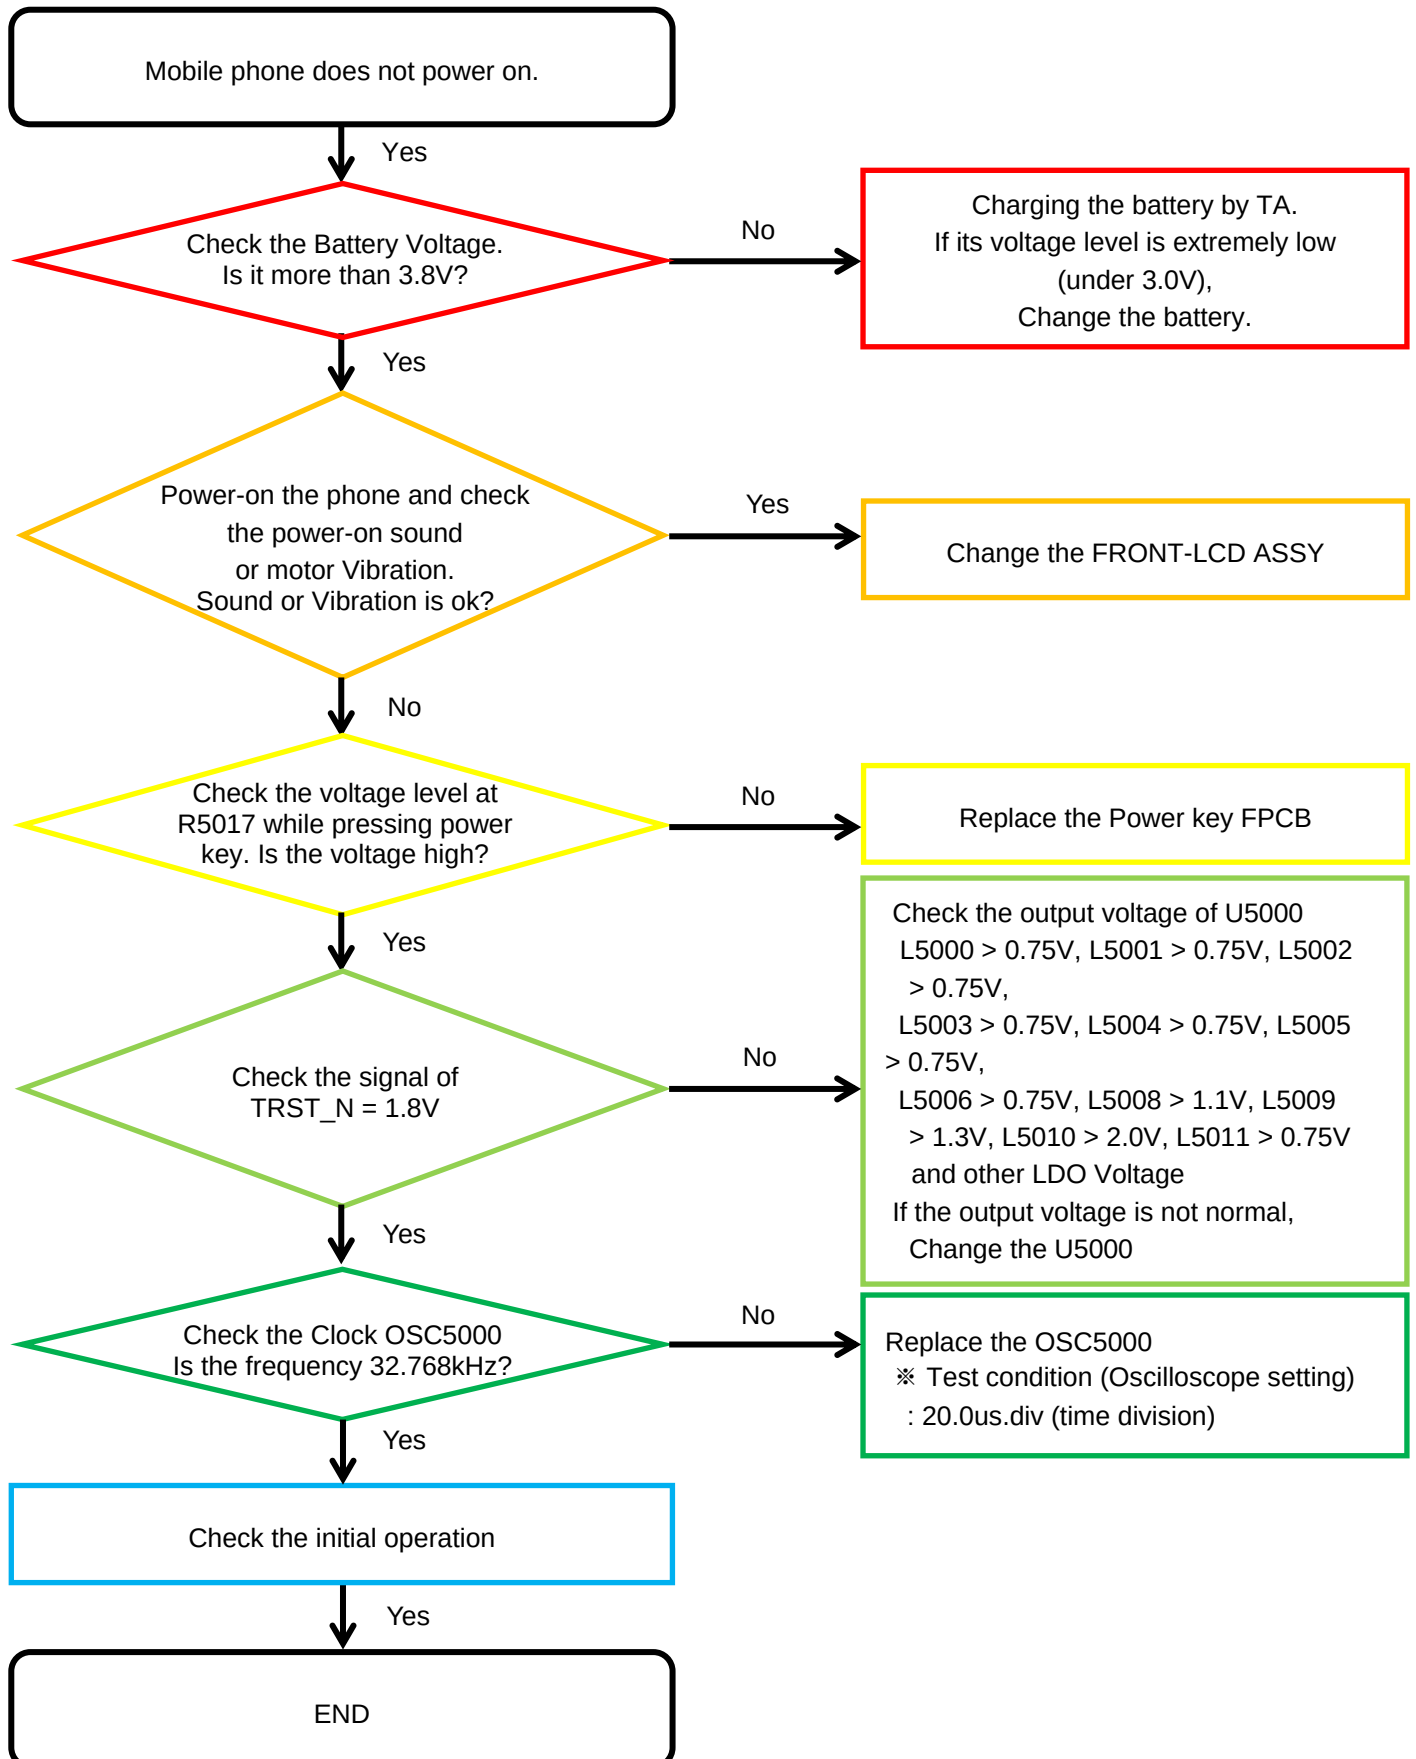


8. Level 3 Repair

8-4-2. Initial

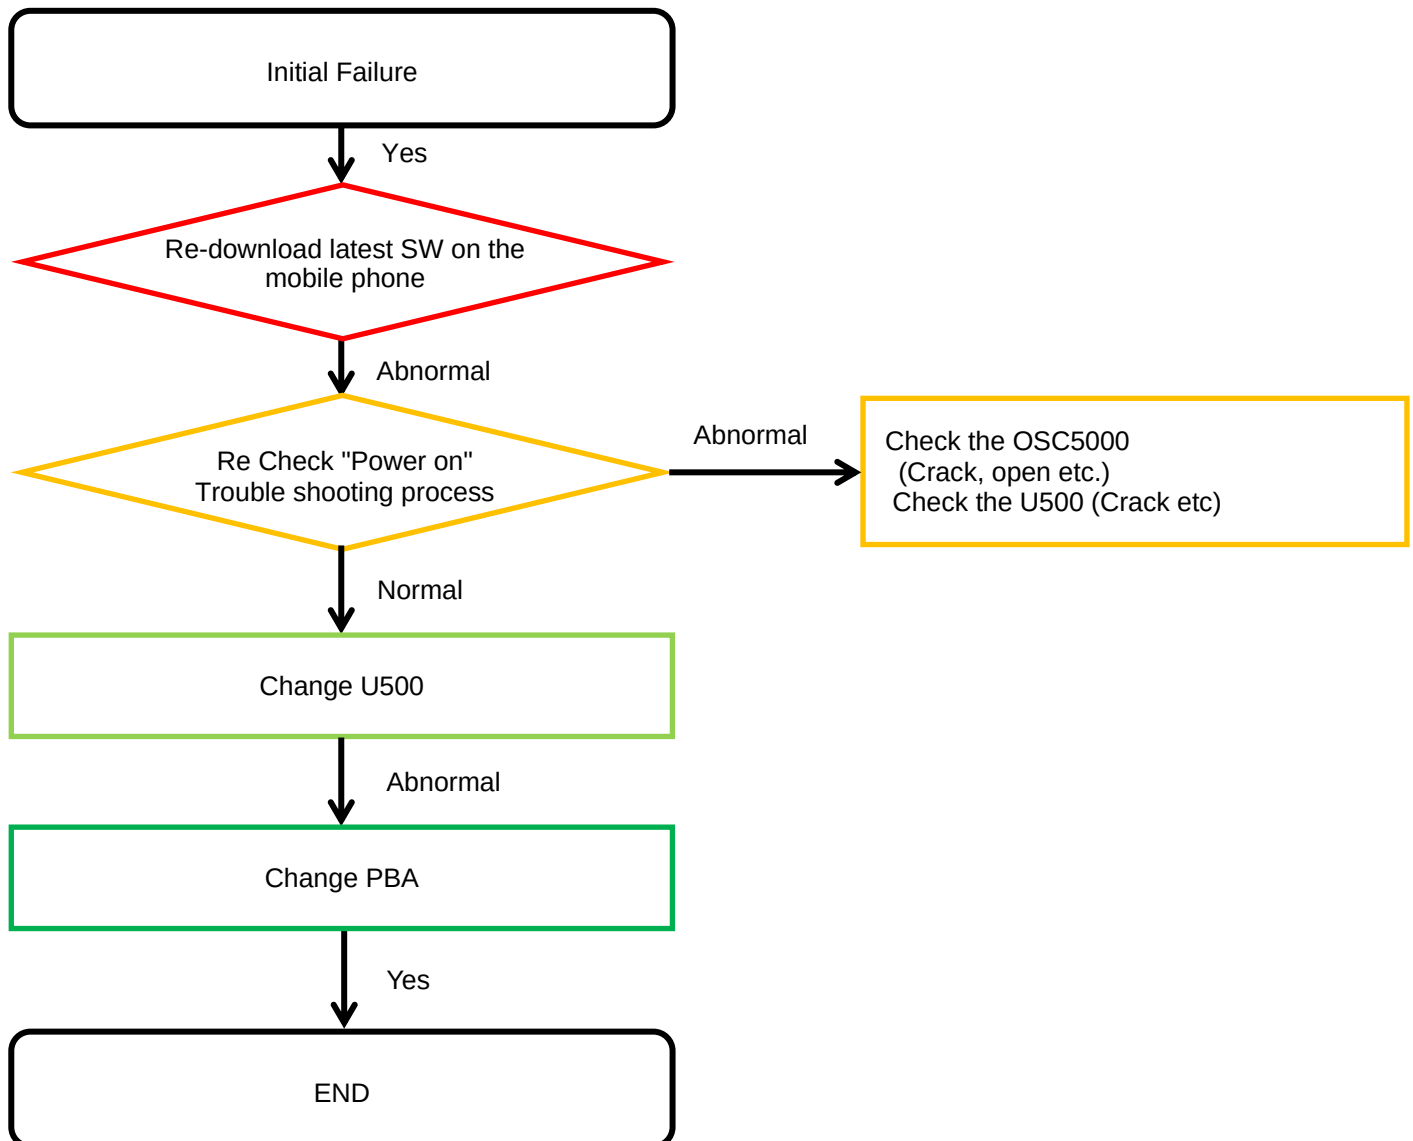


8. Level 3 Repair

8-4-3. No Service

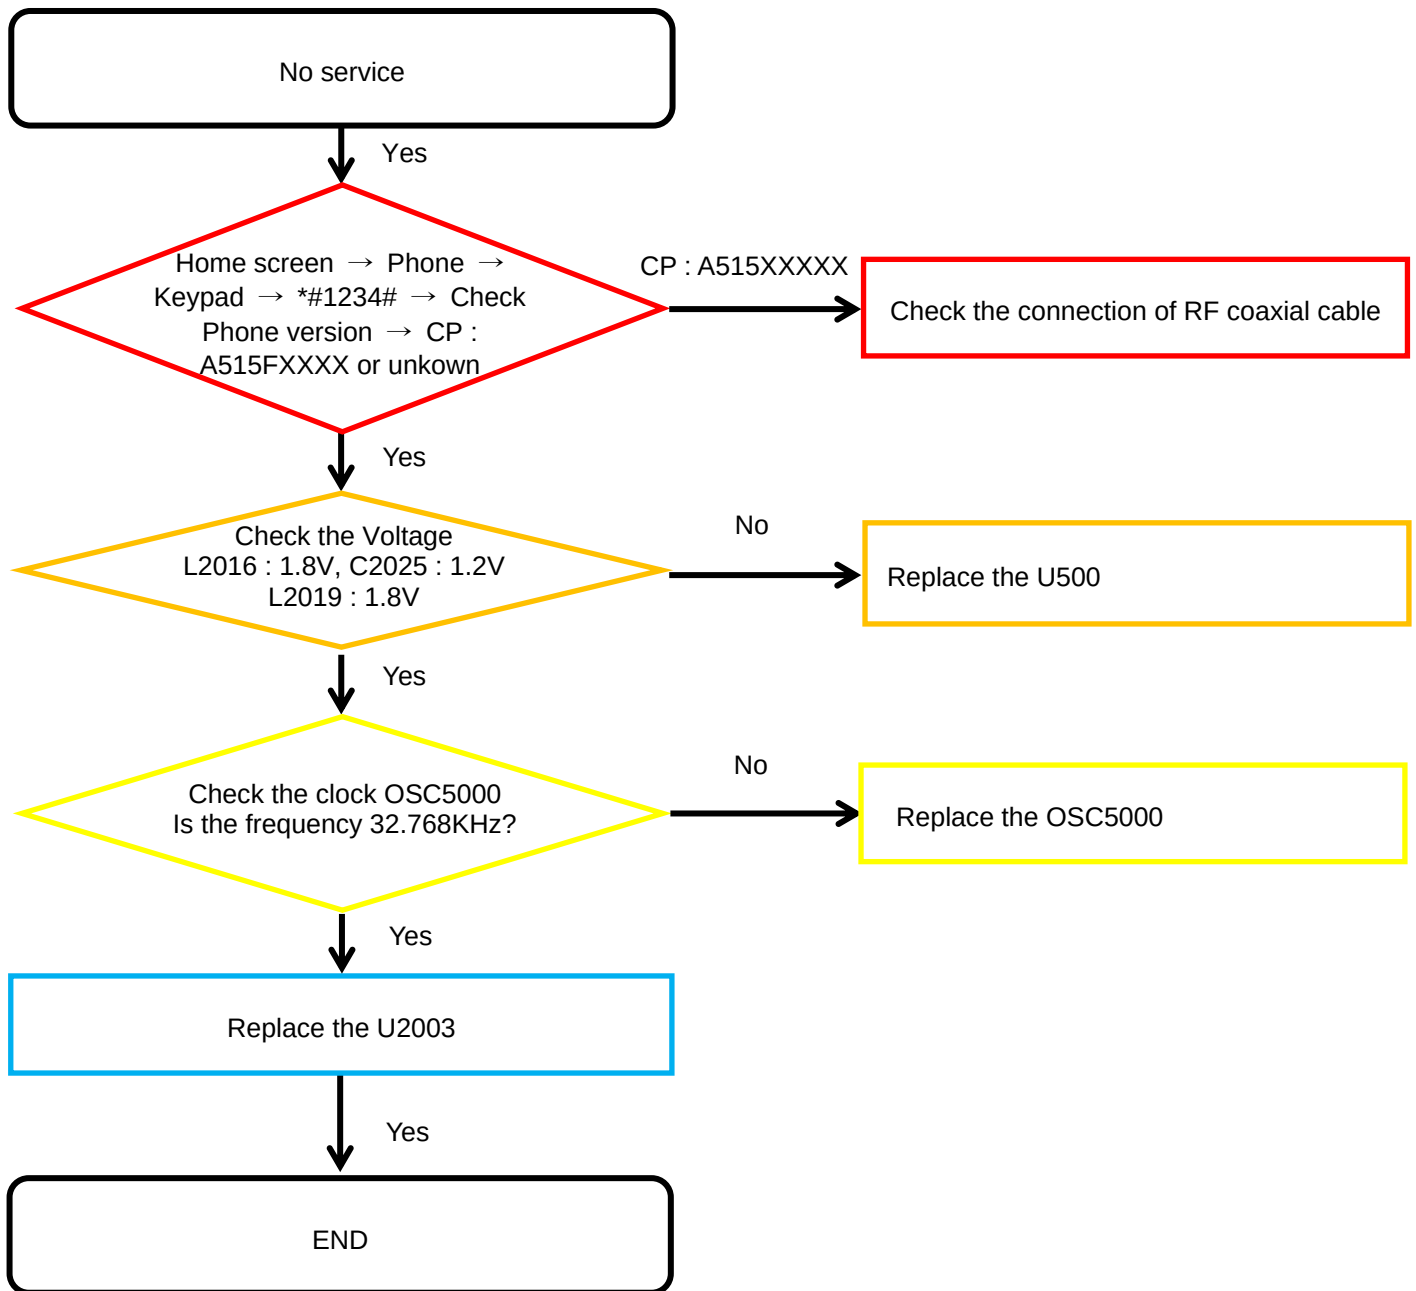


8. Level 3 Repair

8-4-4. SIM Part

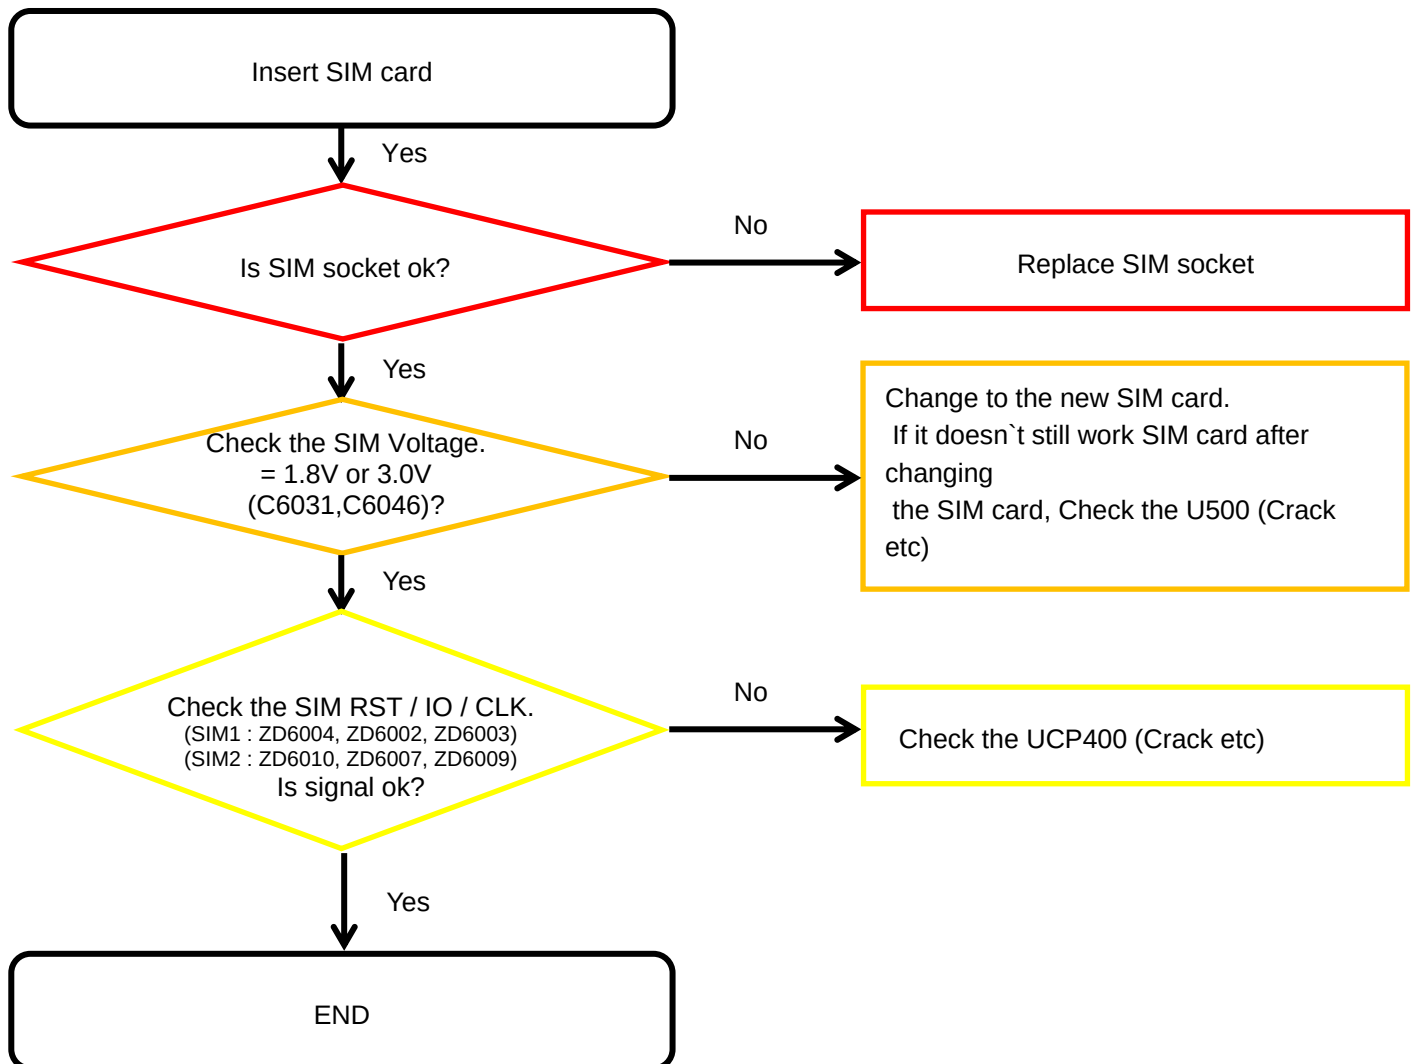


8. Level 3 Repair

8-4-5. T-Flash Part

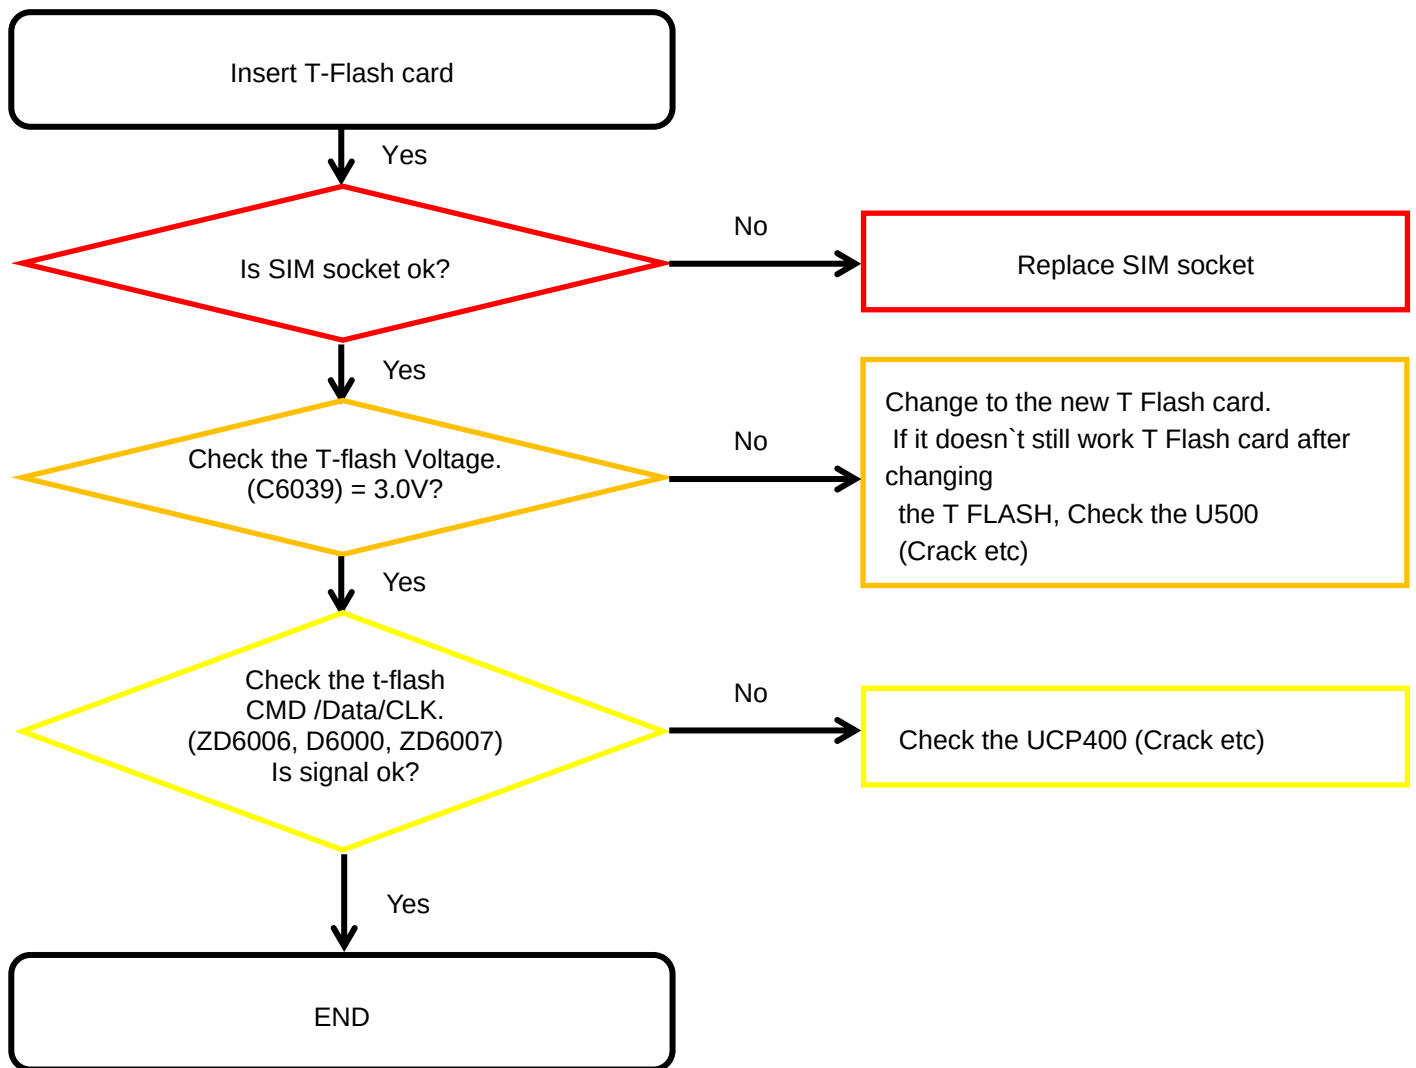


8. Level 3 Repair

8-4-6. Cable Charging Part

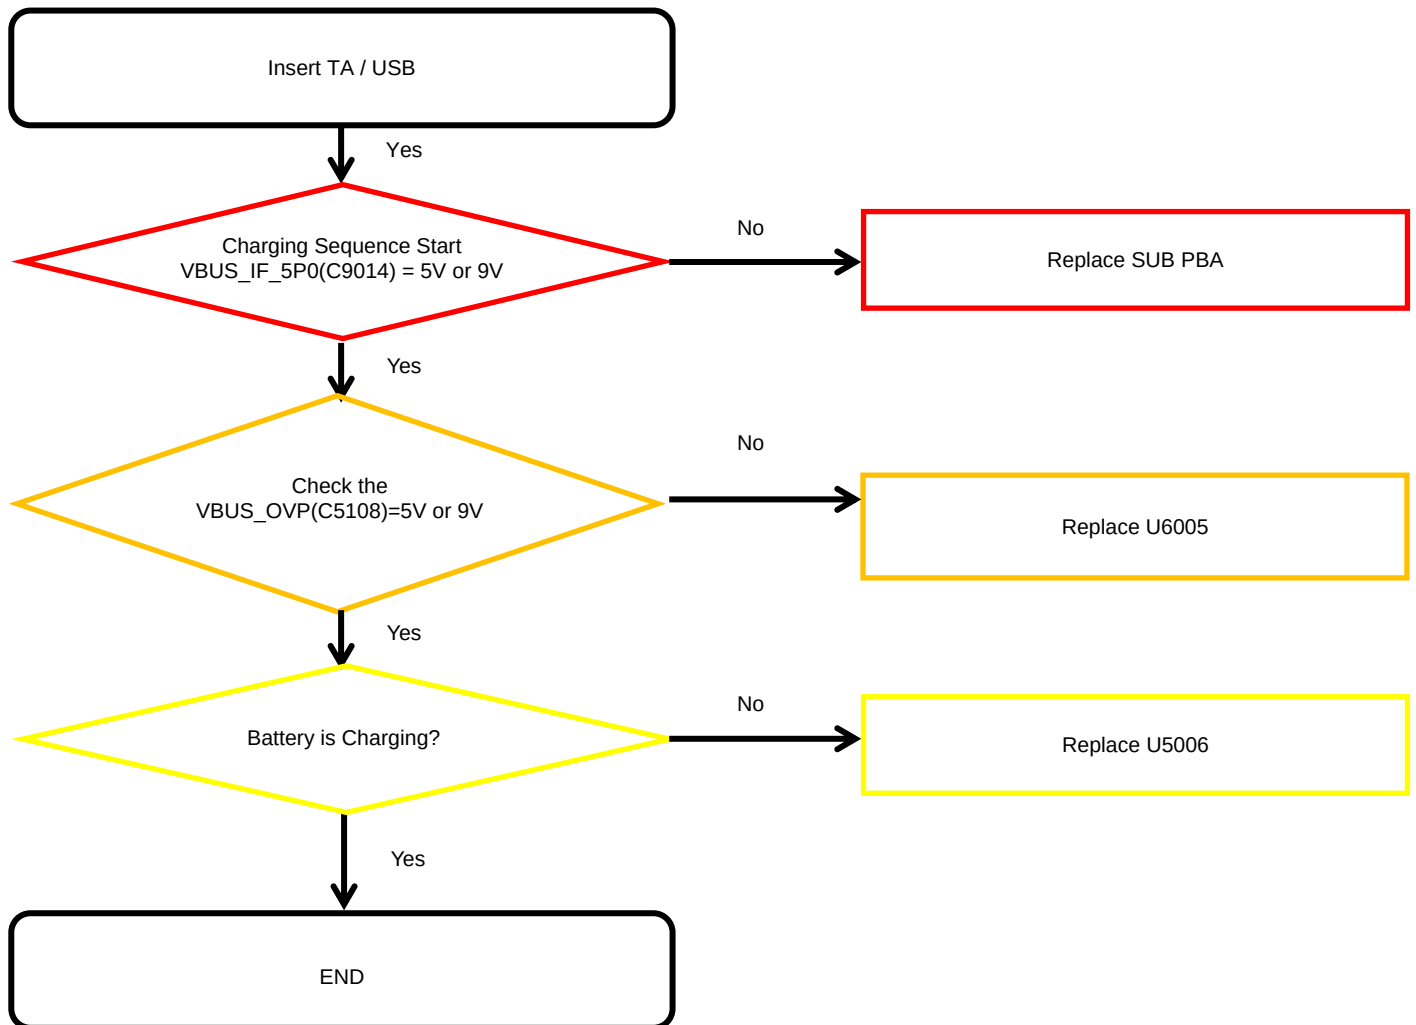


8. Level 3 Repair

8-4-7. OTG

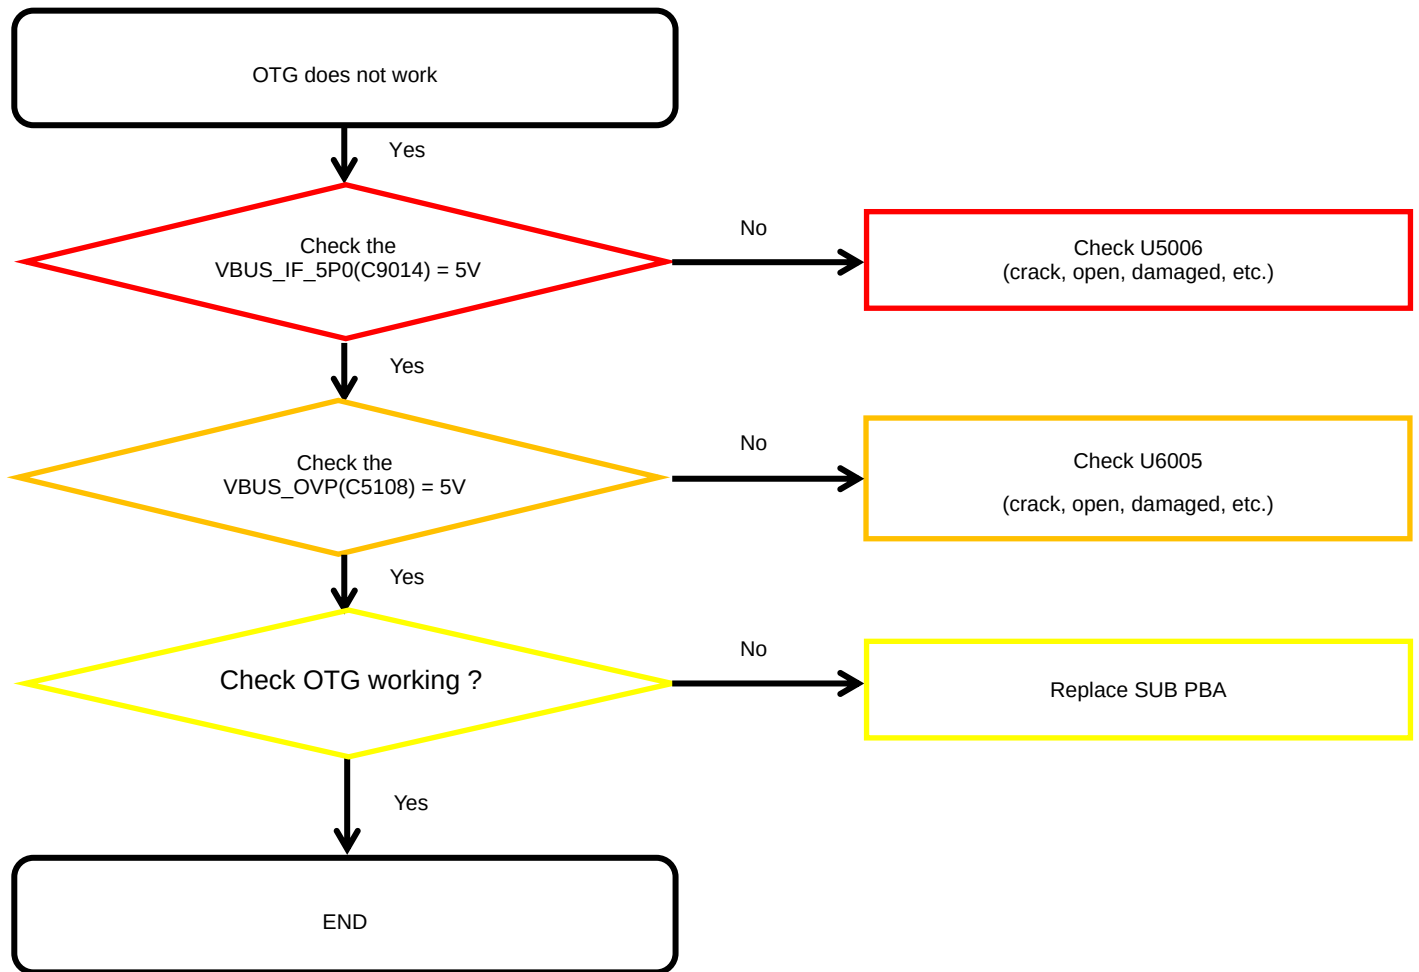


8. Level 3 Repair

8-4-8-1. Magnetic Sensor

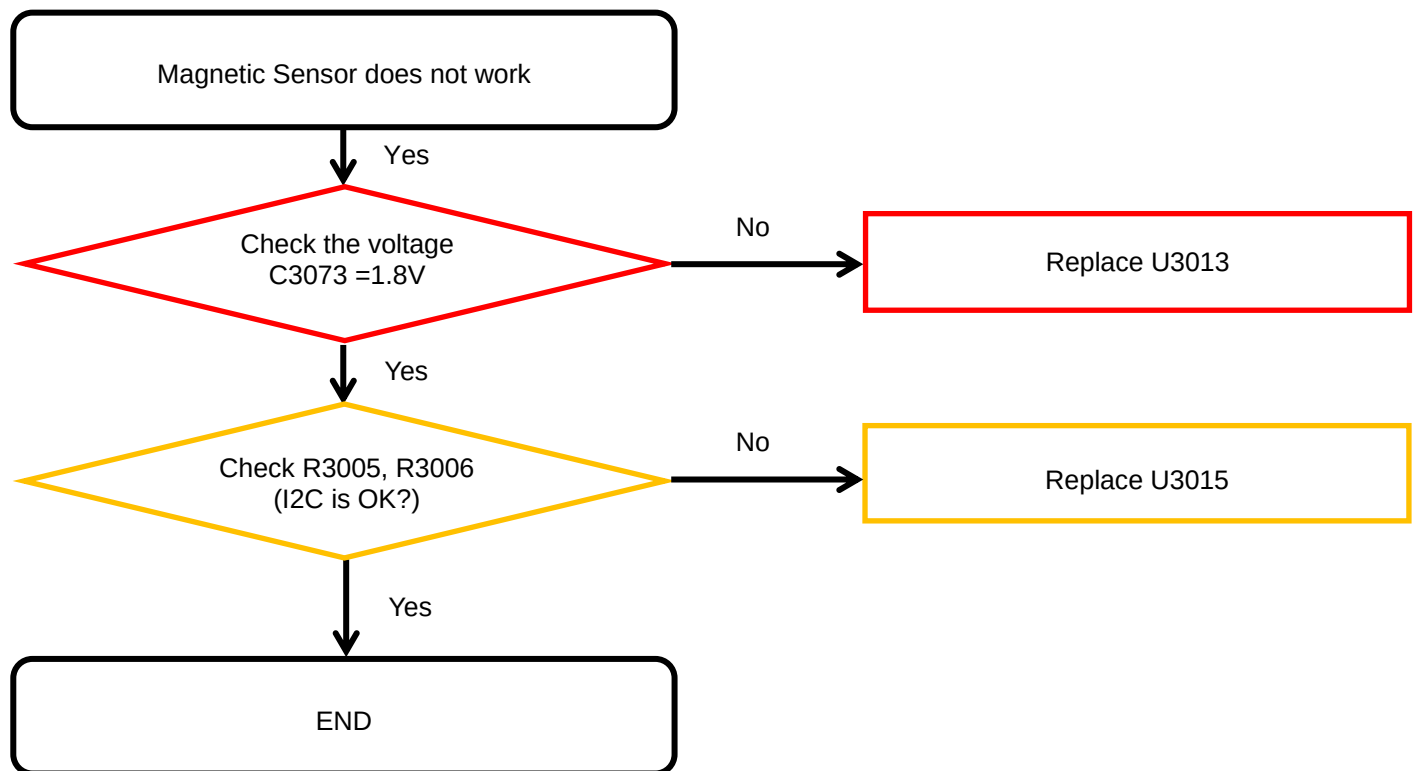


8. Level 3 Repair

8-4-8-2. 6Axis Sensor

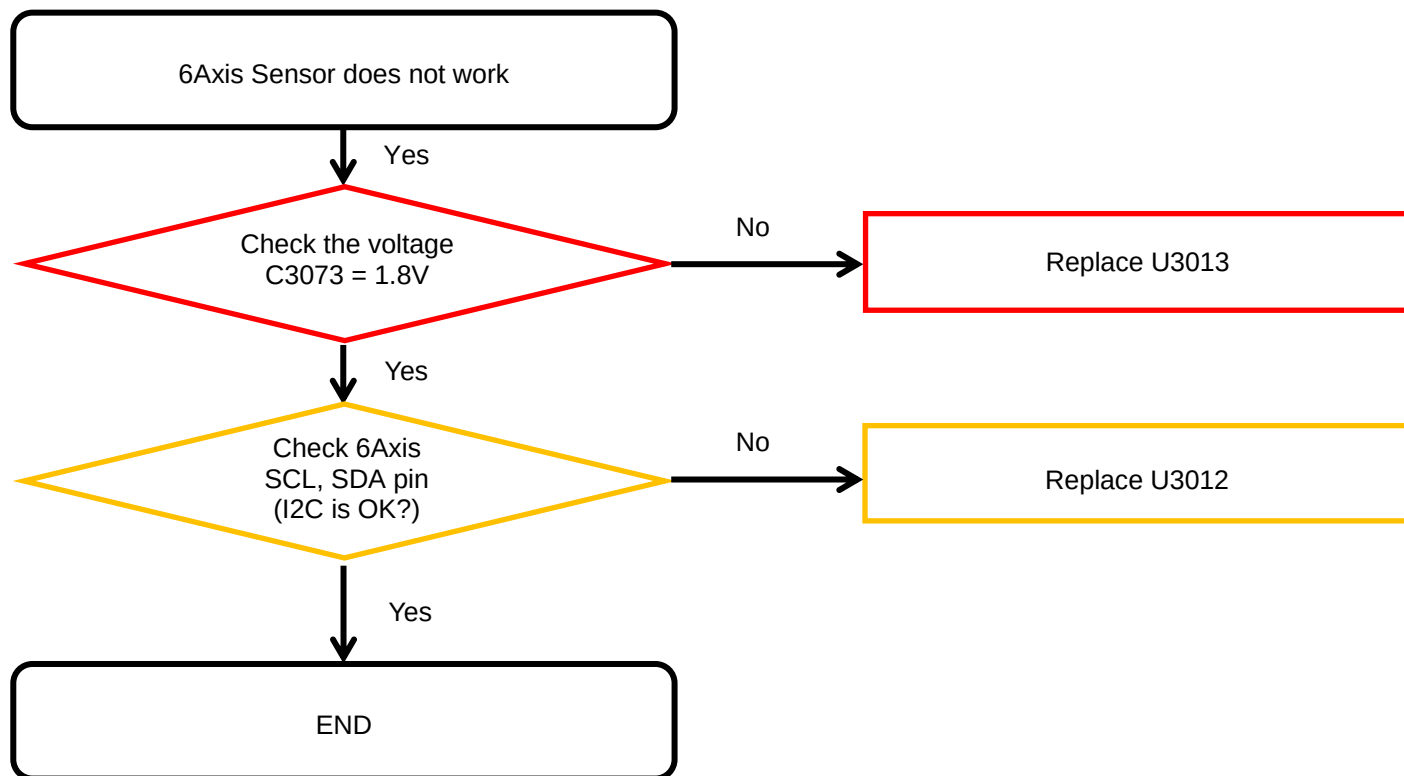


8. Level 3 Repair

8-4-8-3. Hall Sensor

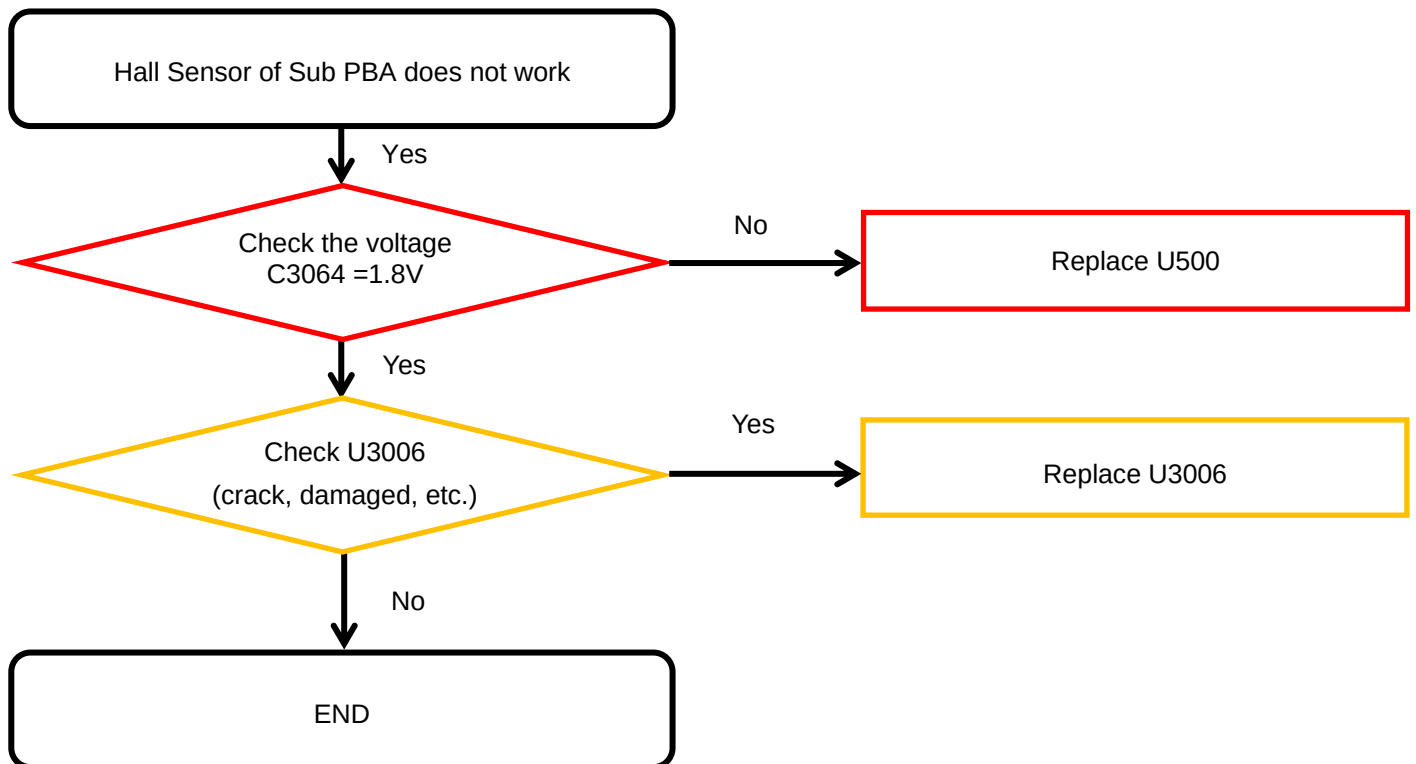


8. Level 3 Repair

8-4-8-4. Fingerprint Sensor

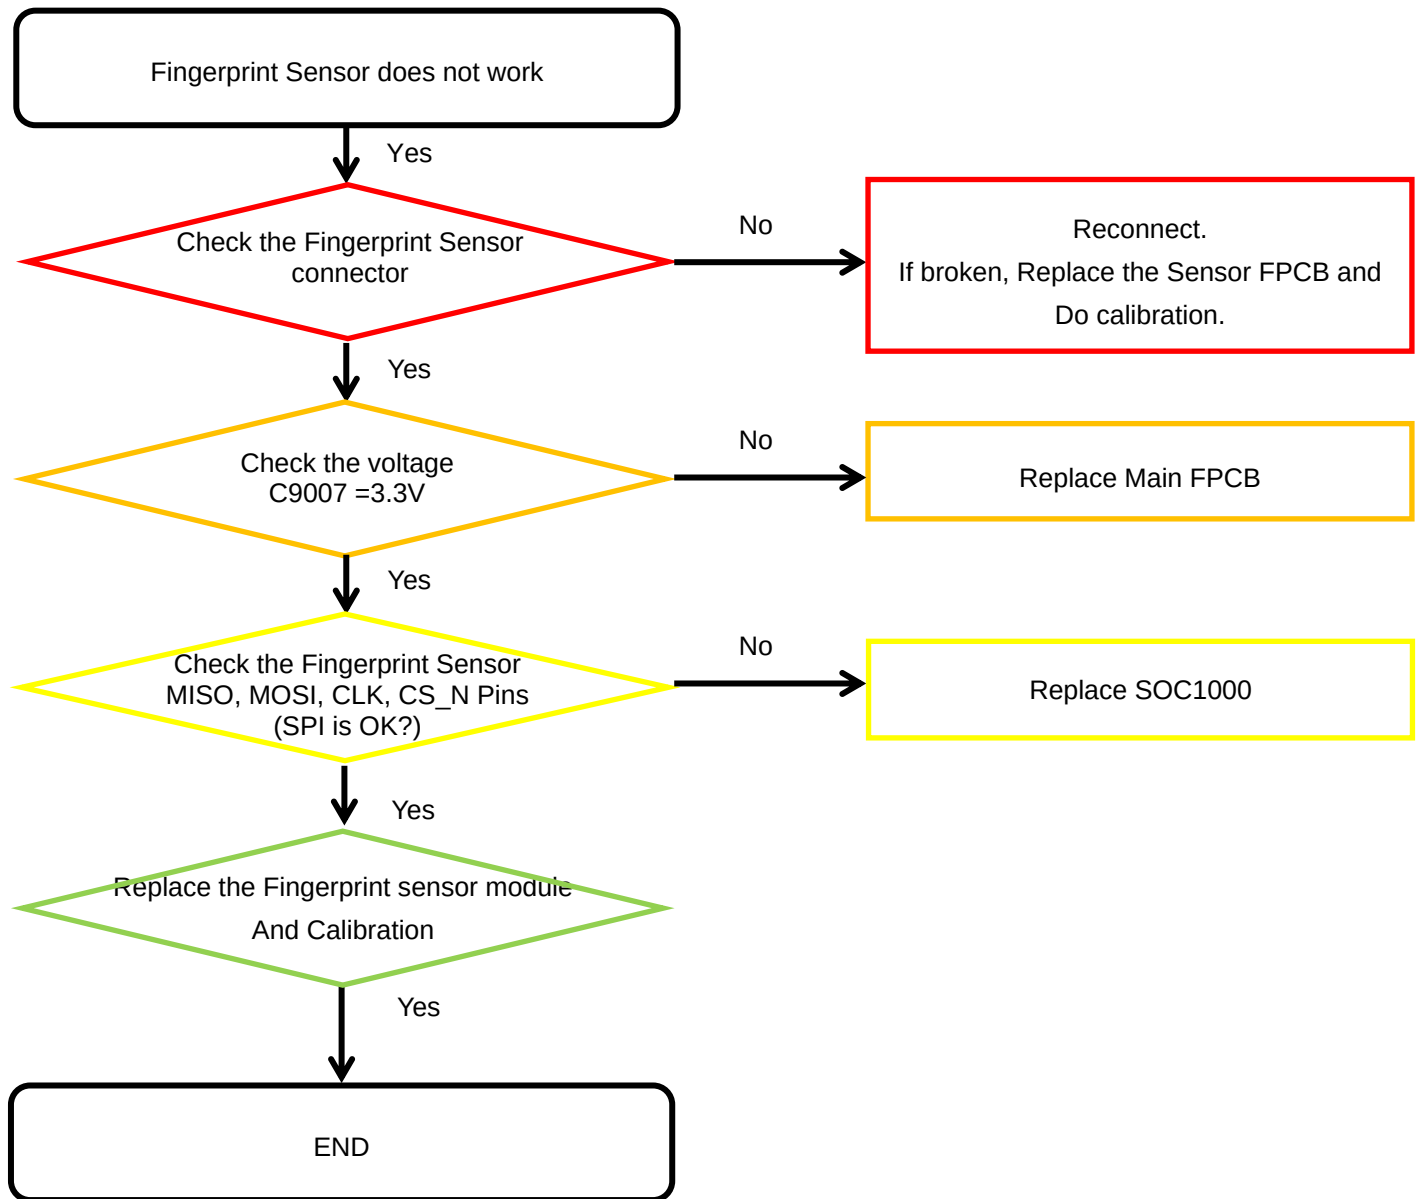


8. Level 3 Repair

8-4-9-1. Microphone Part - Main MIC

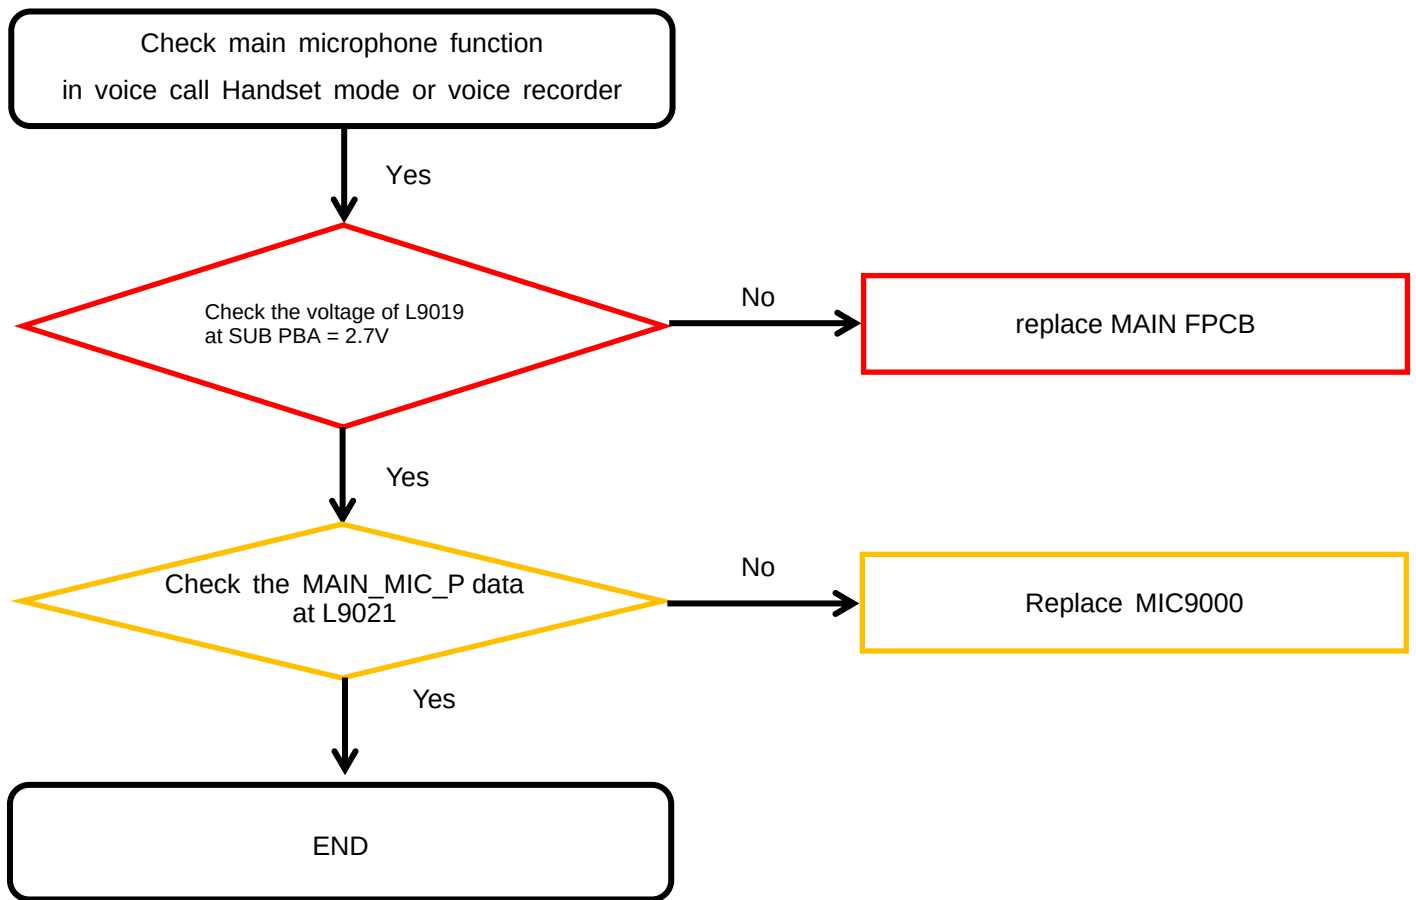


8. Level 3 Repair

8-4-9-2. Microphone Part - Sub(2nd) MIC

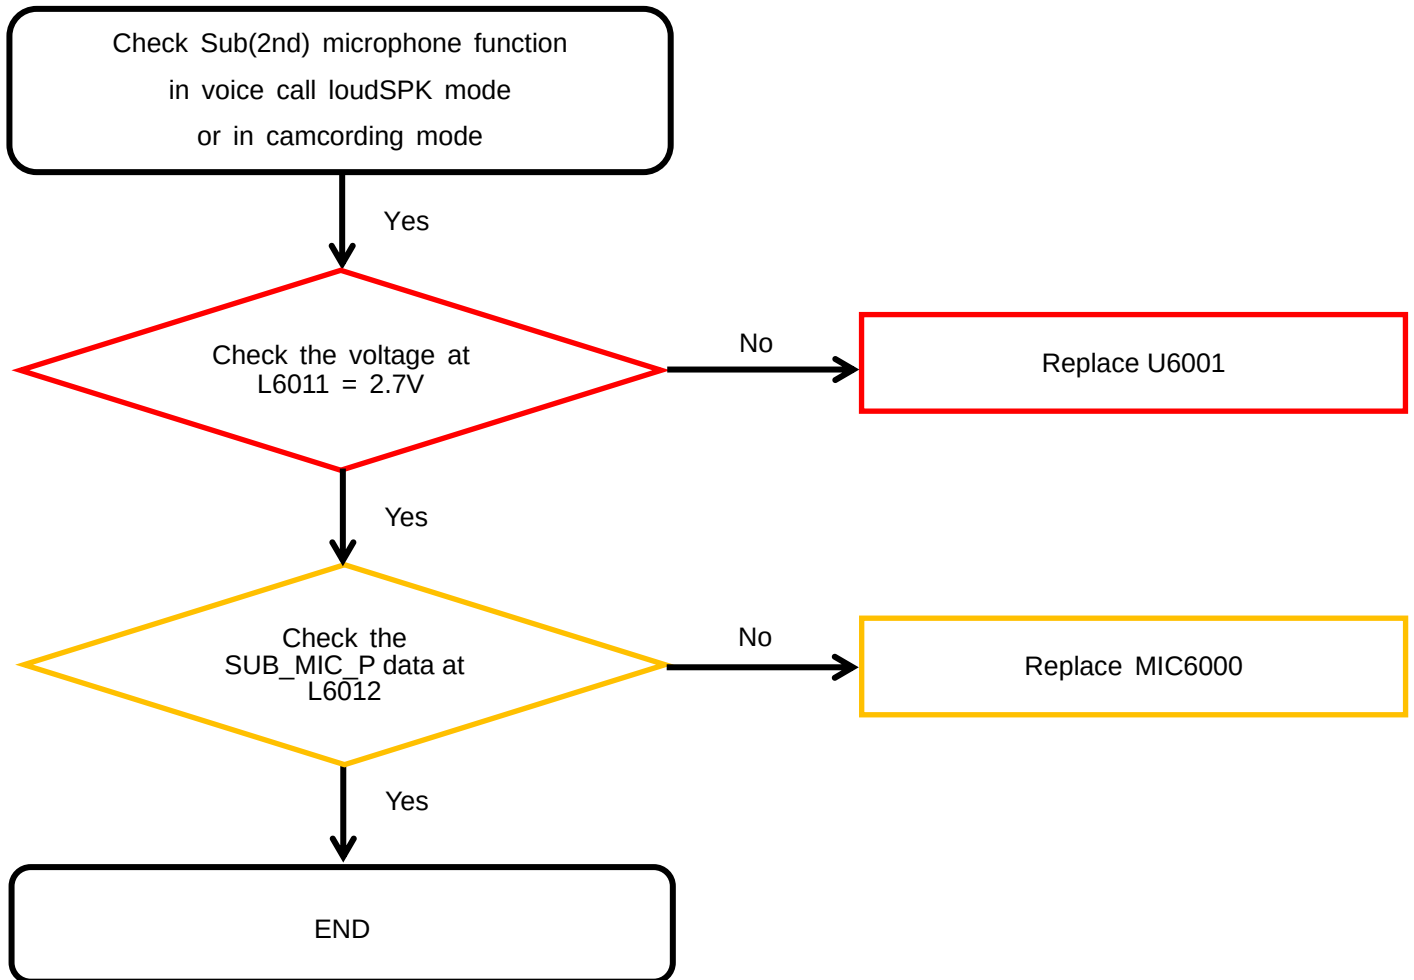


8. Level 3 Repair

8-4-10. Speaker Part

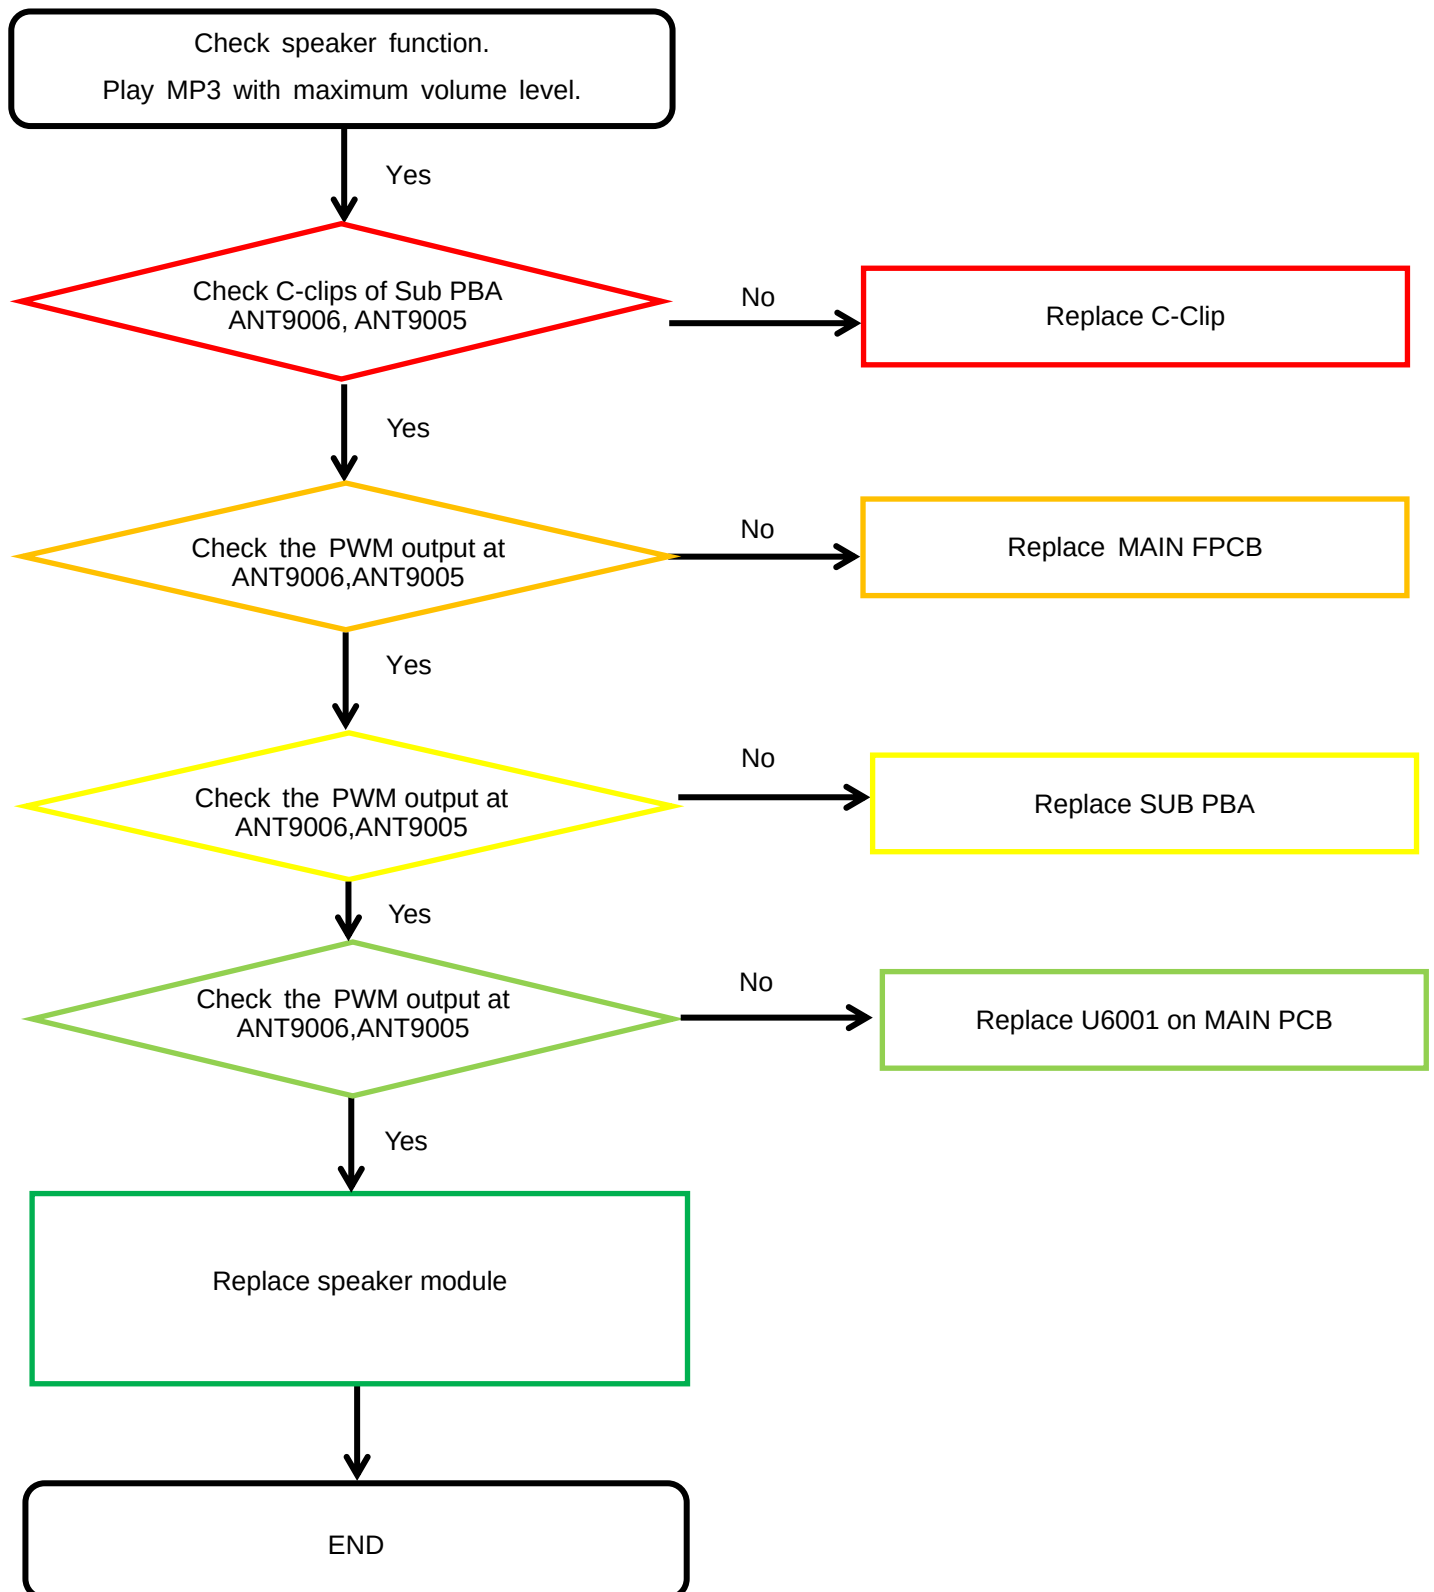


8. Level 3 Repair

8-4-11. Receiver Part

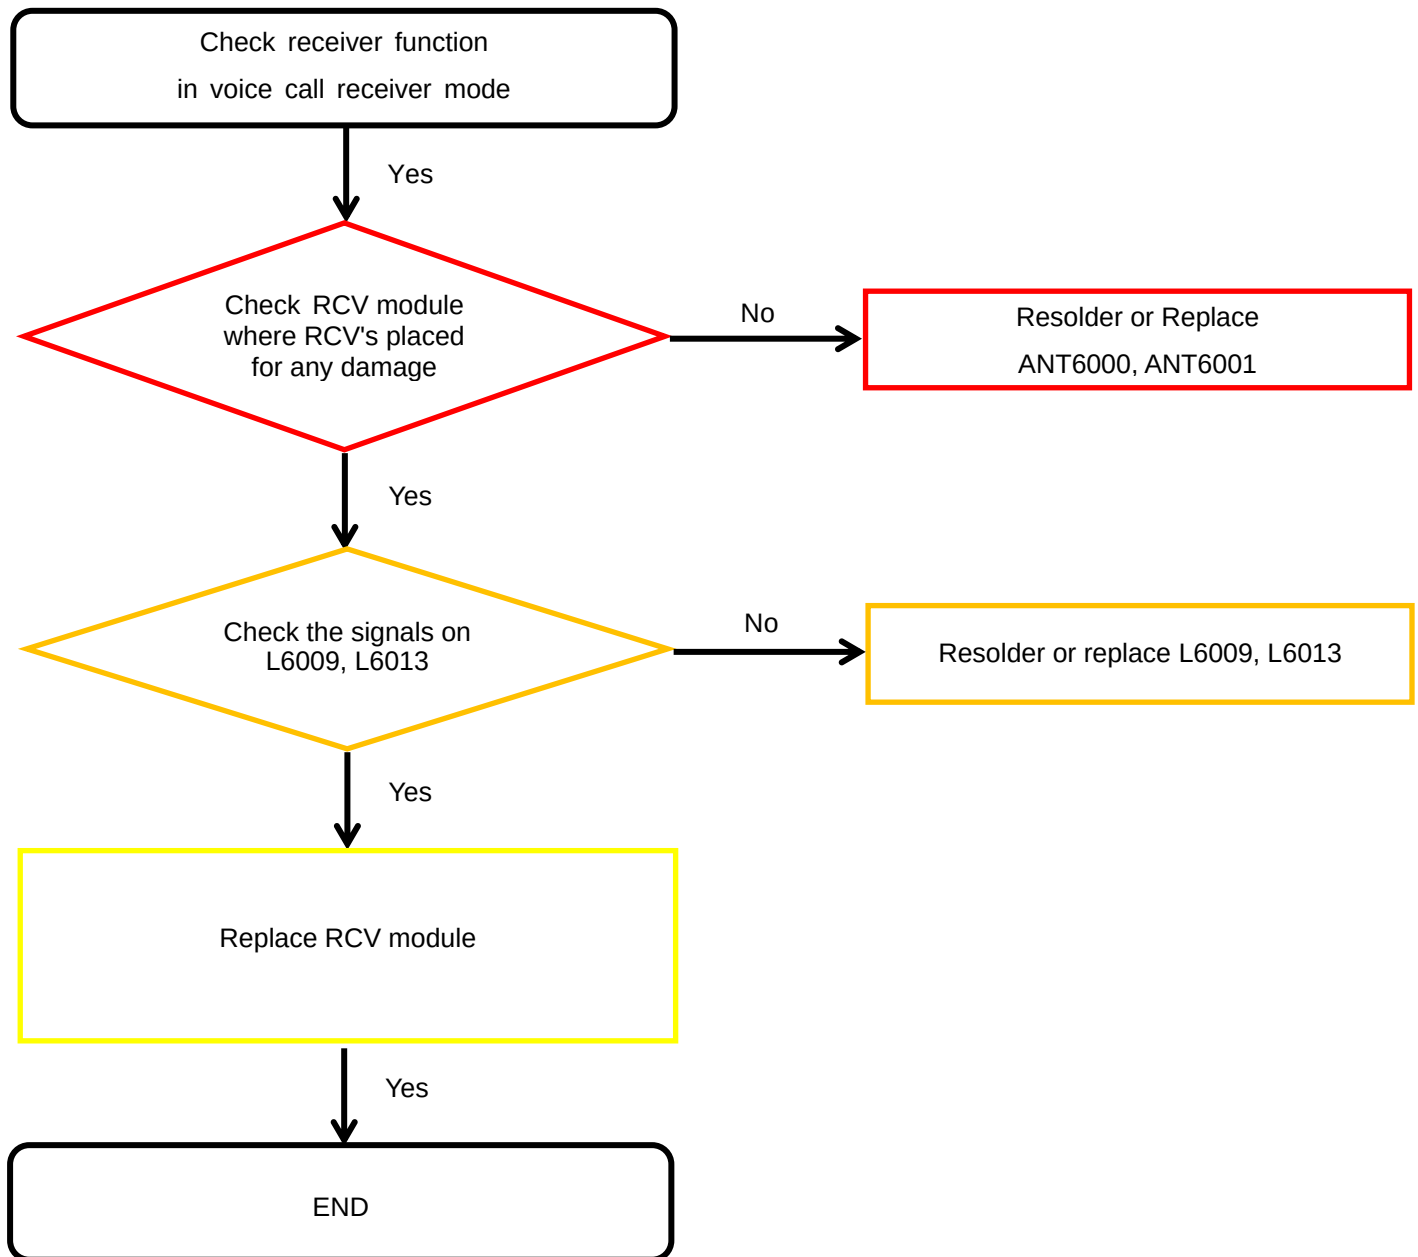


8. Level 3 Repair

8-4-12. BT/WIFI

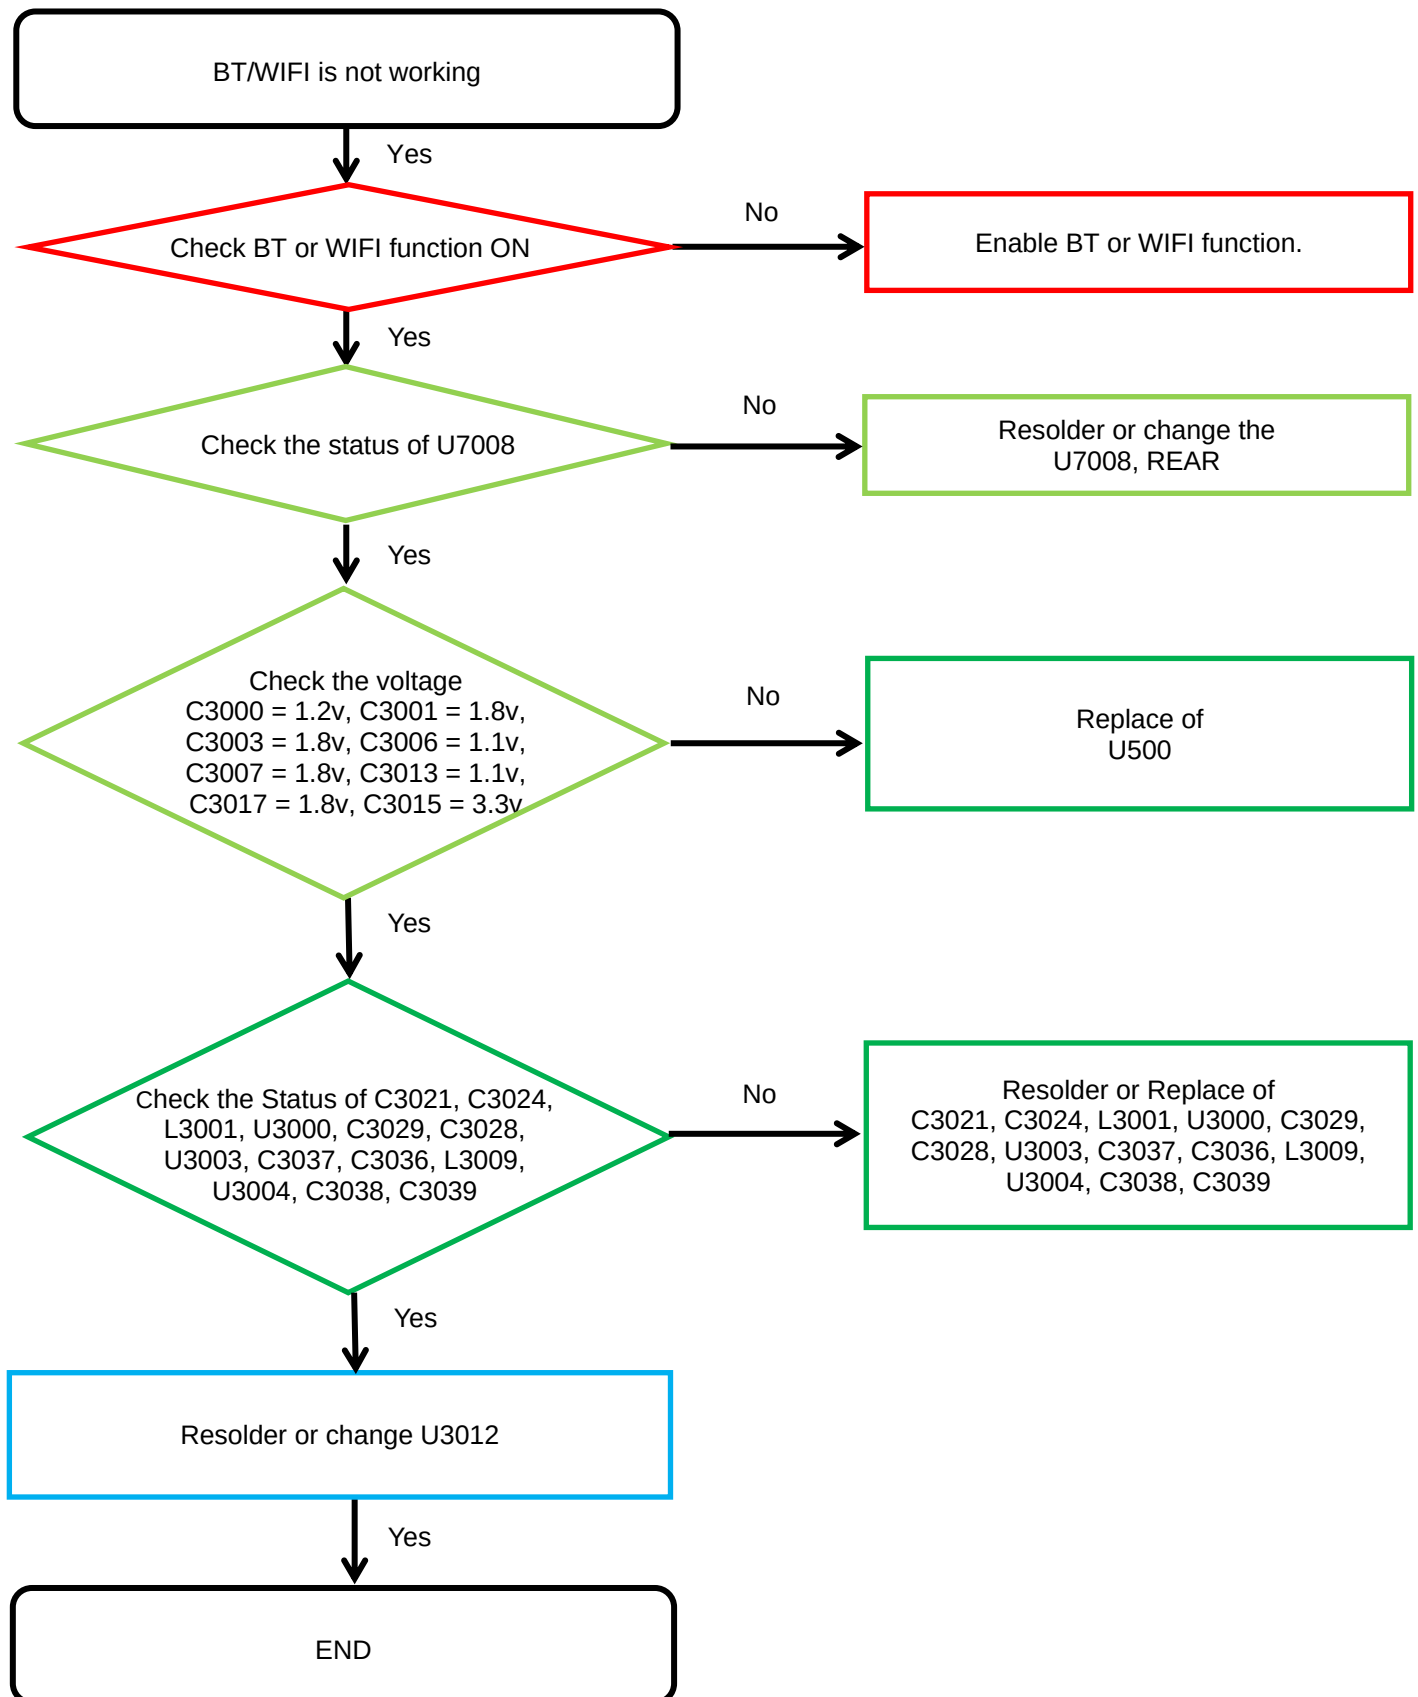


8. Level 3 Repair

8-4-13. GPS

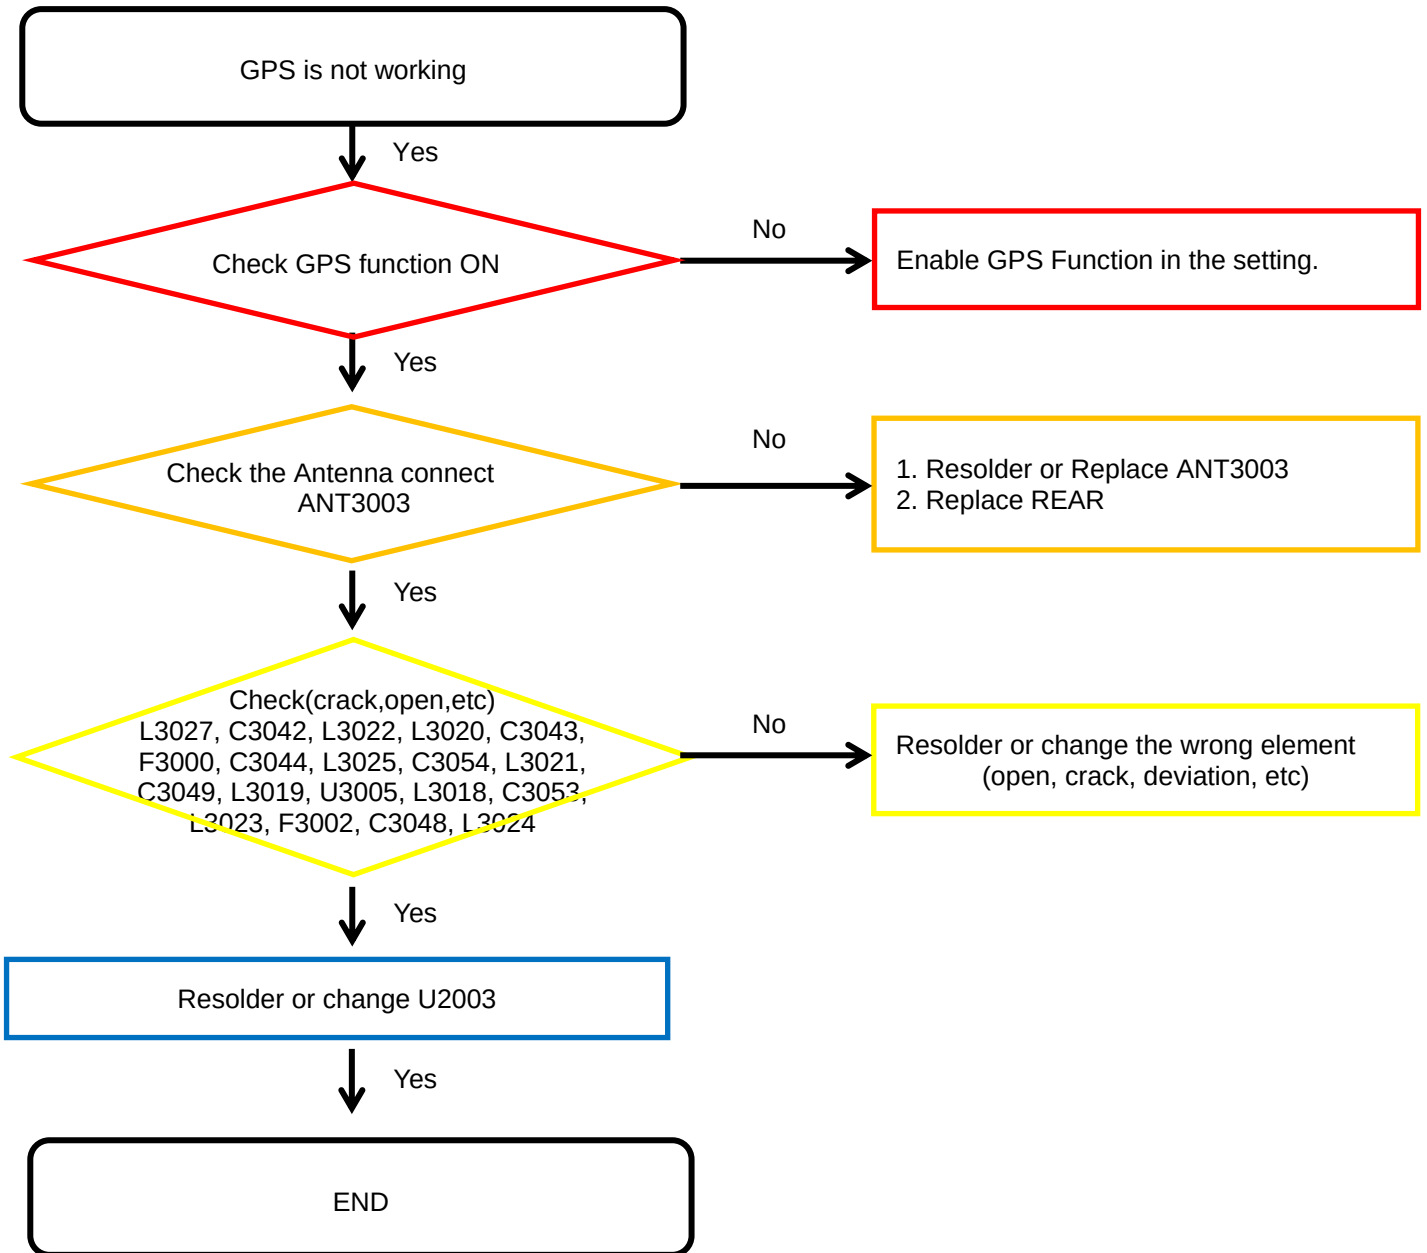


8. Level 3 Repair

8-4-14. NFC

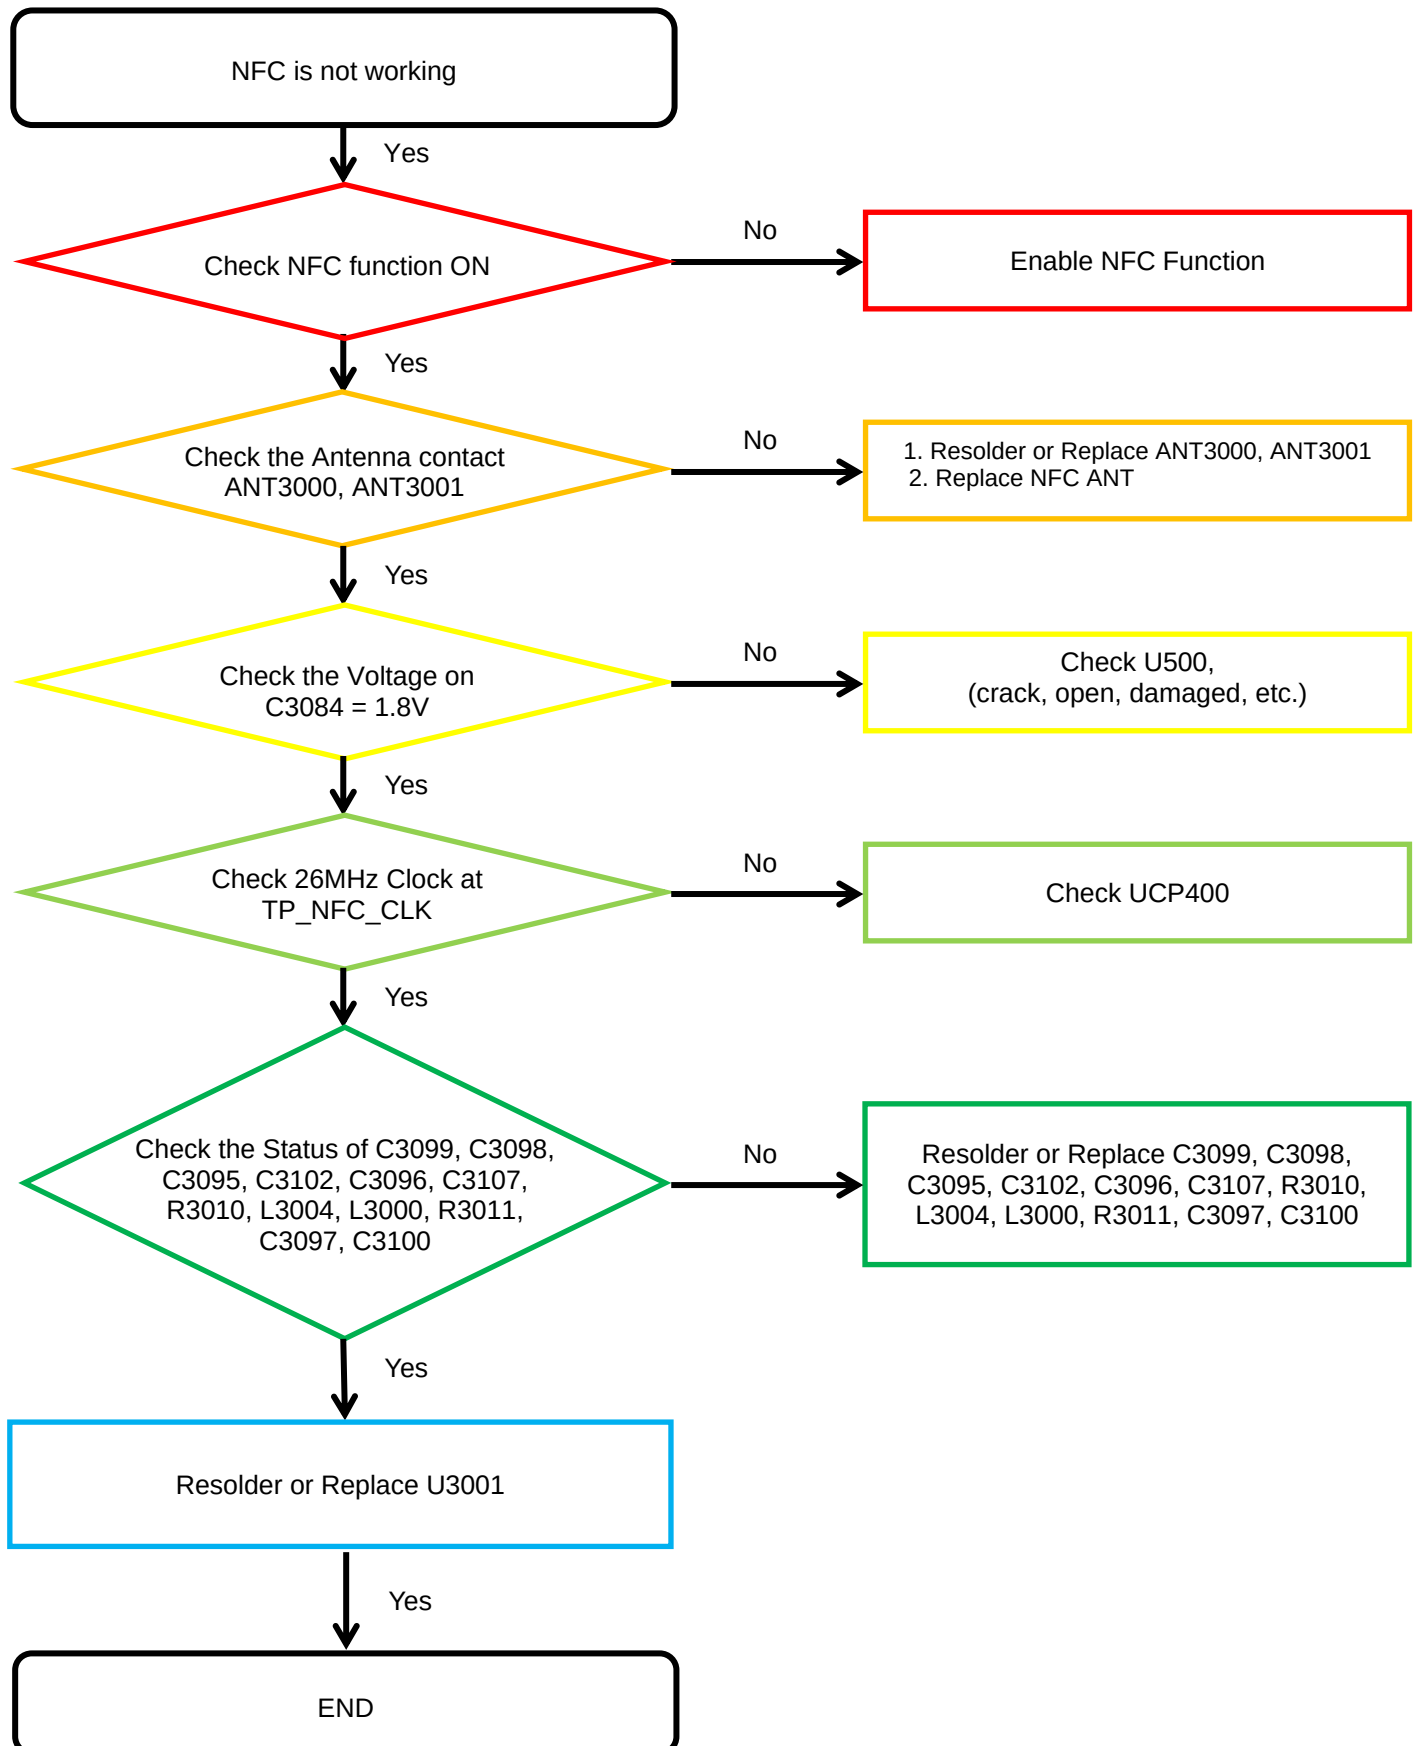


8. Level 3 Repair

8-4-15. MST

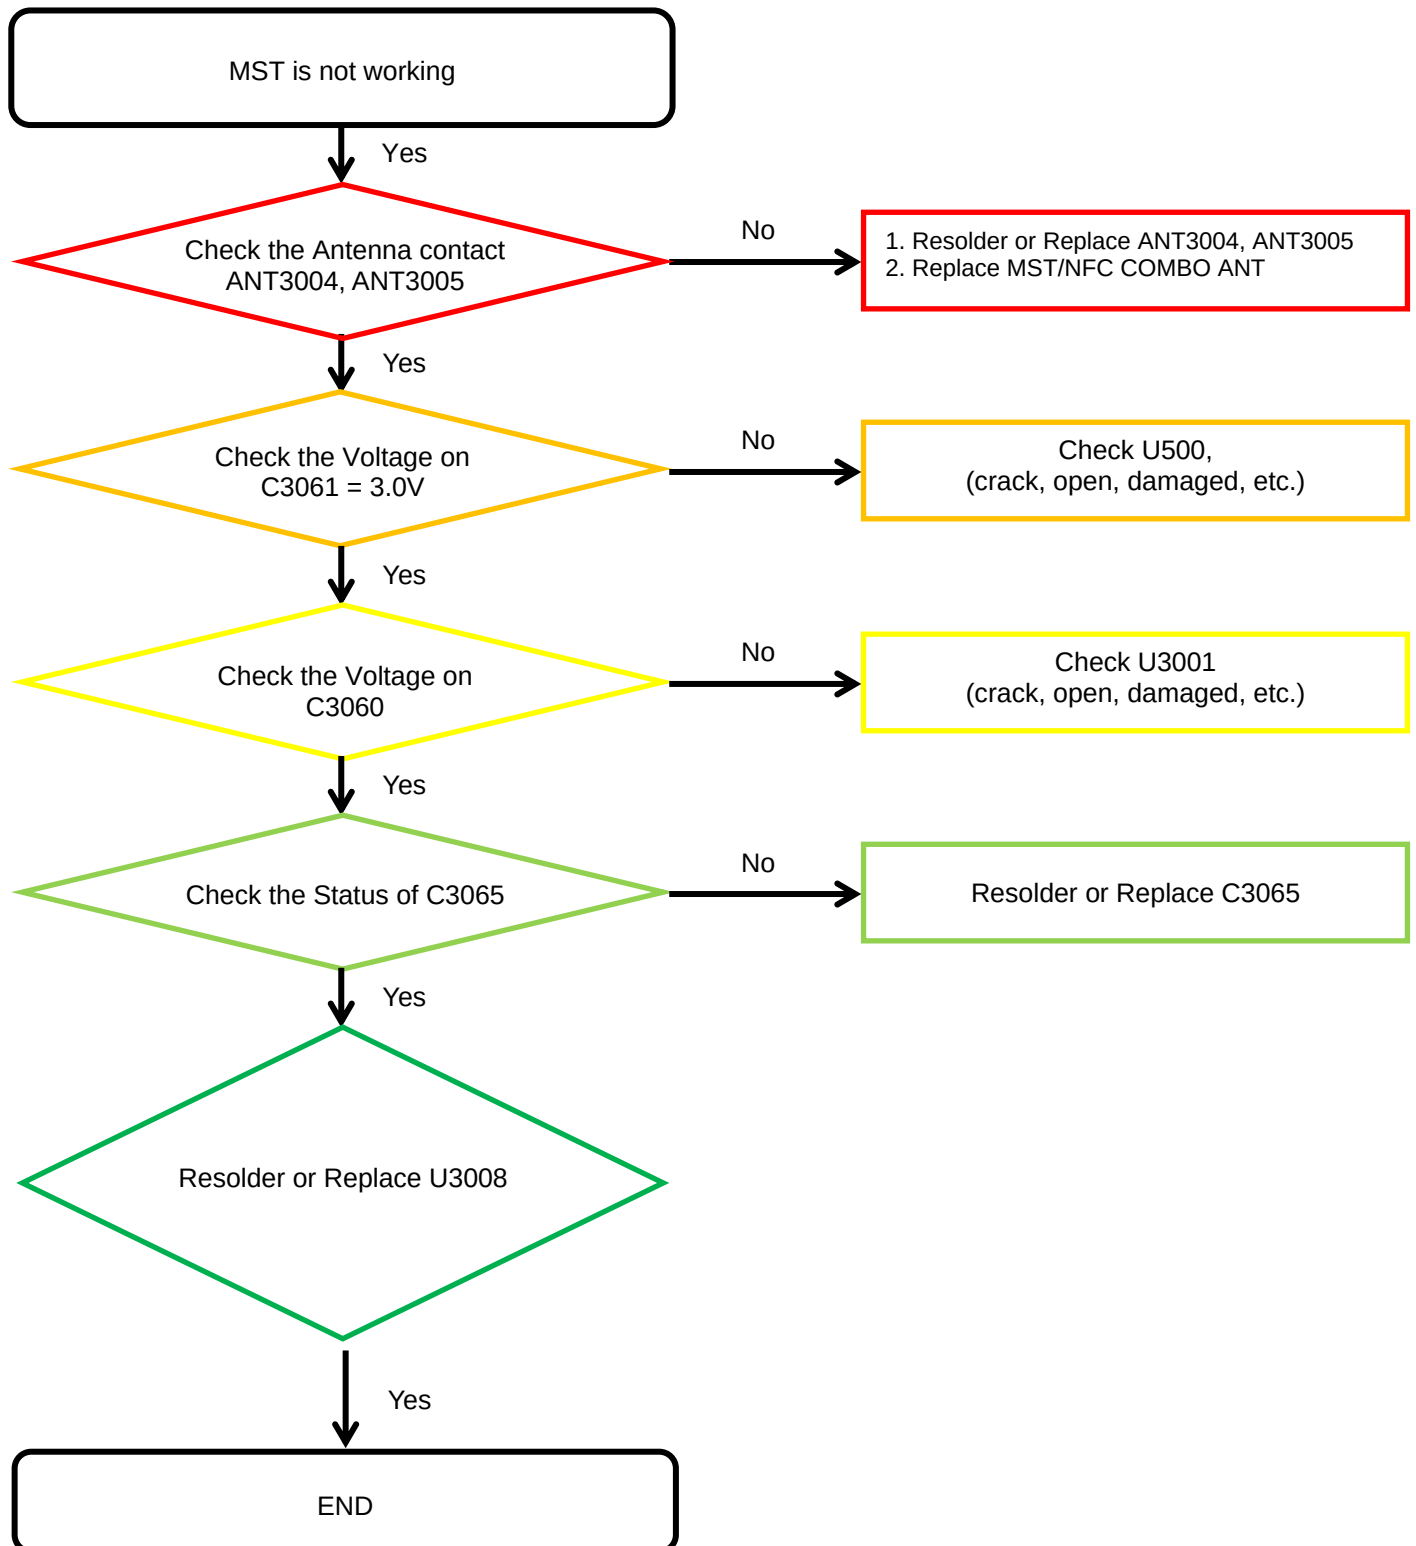


8. Level 3 Repair

8-4-16. FM radio part

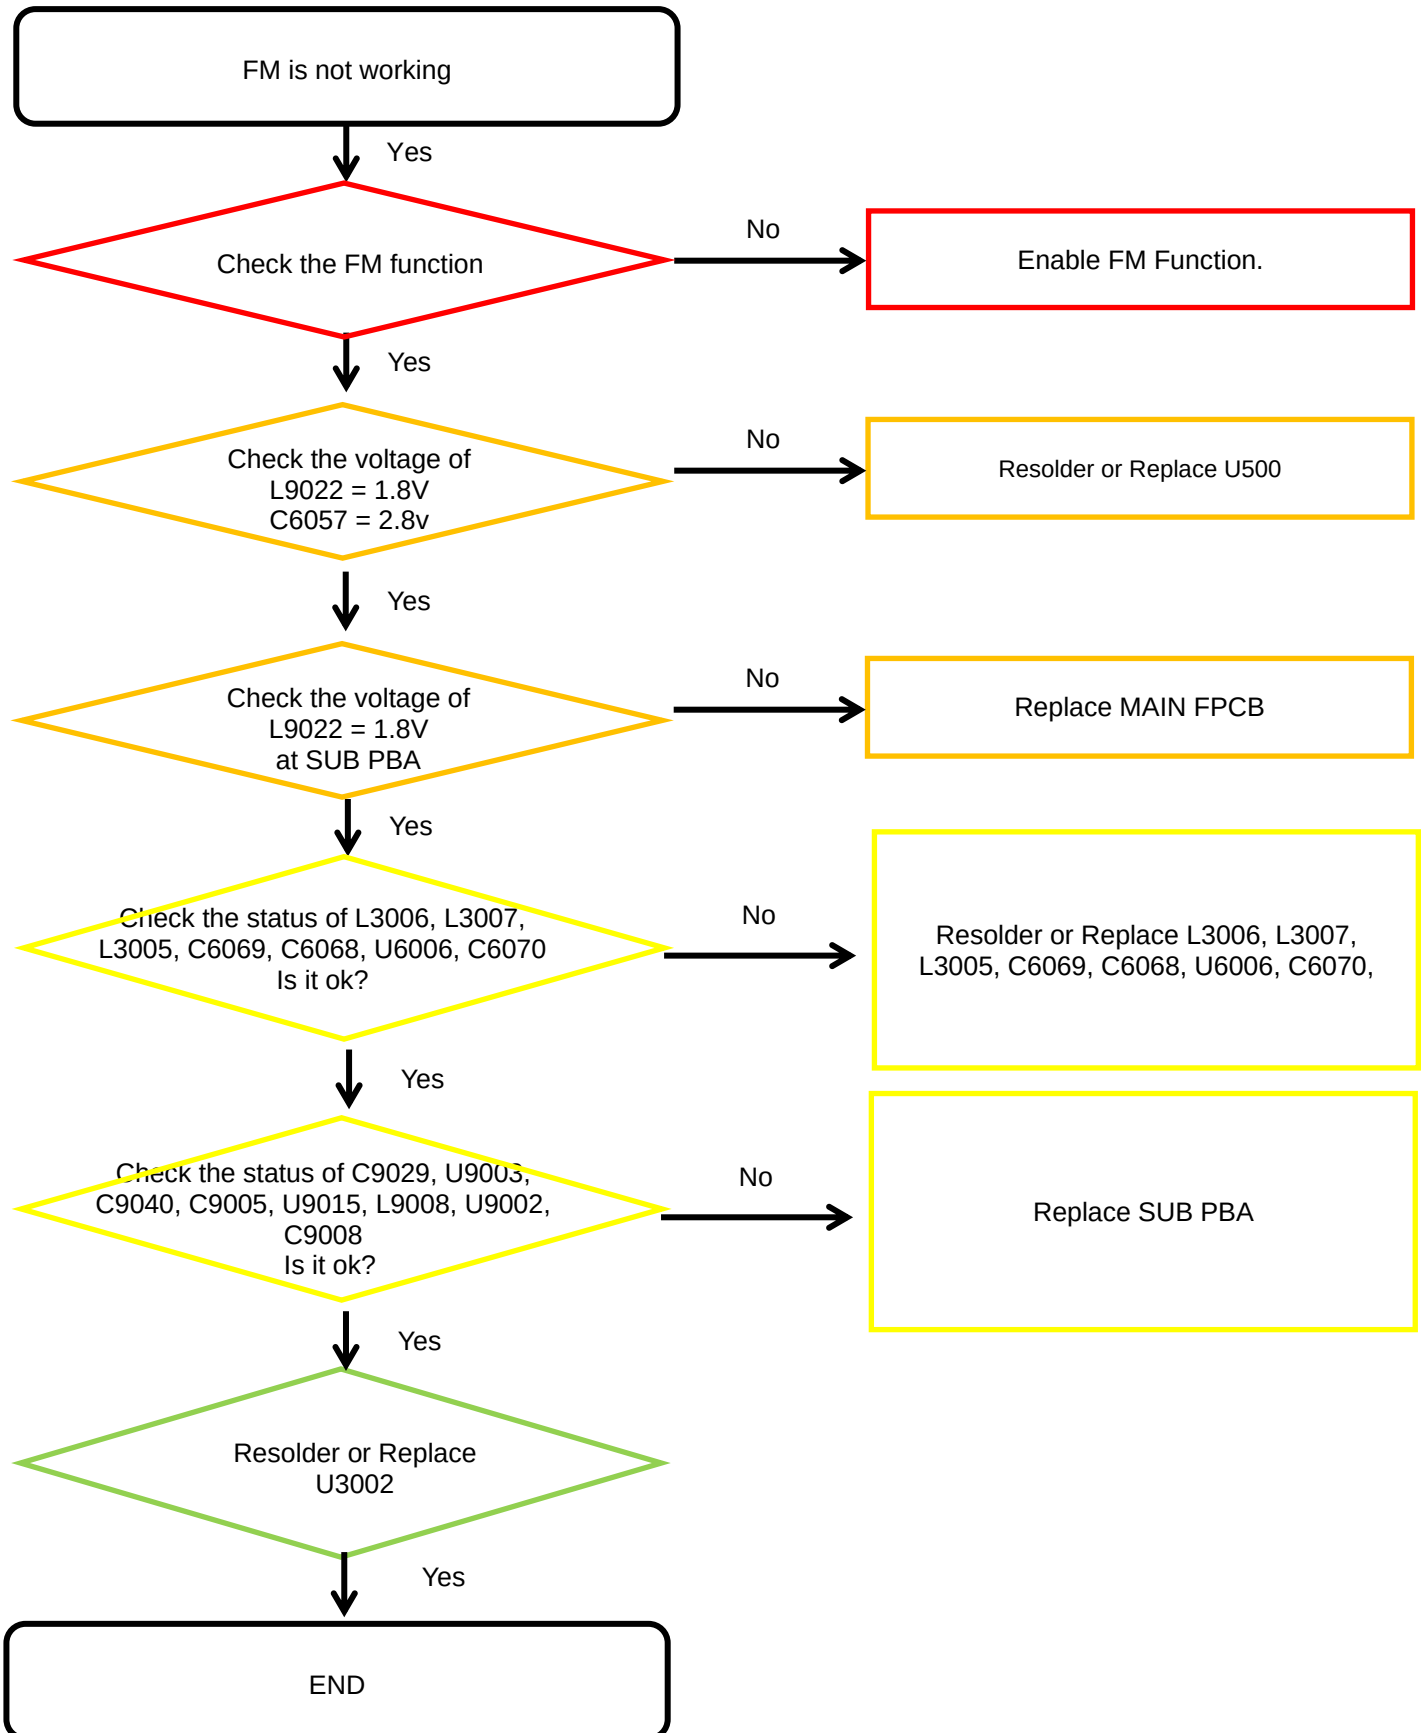


8. Level 3 Repair

8-4-17. DTV

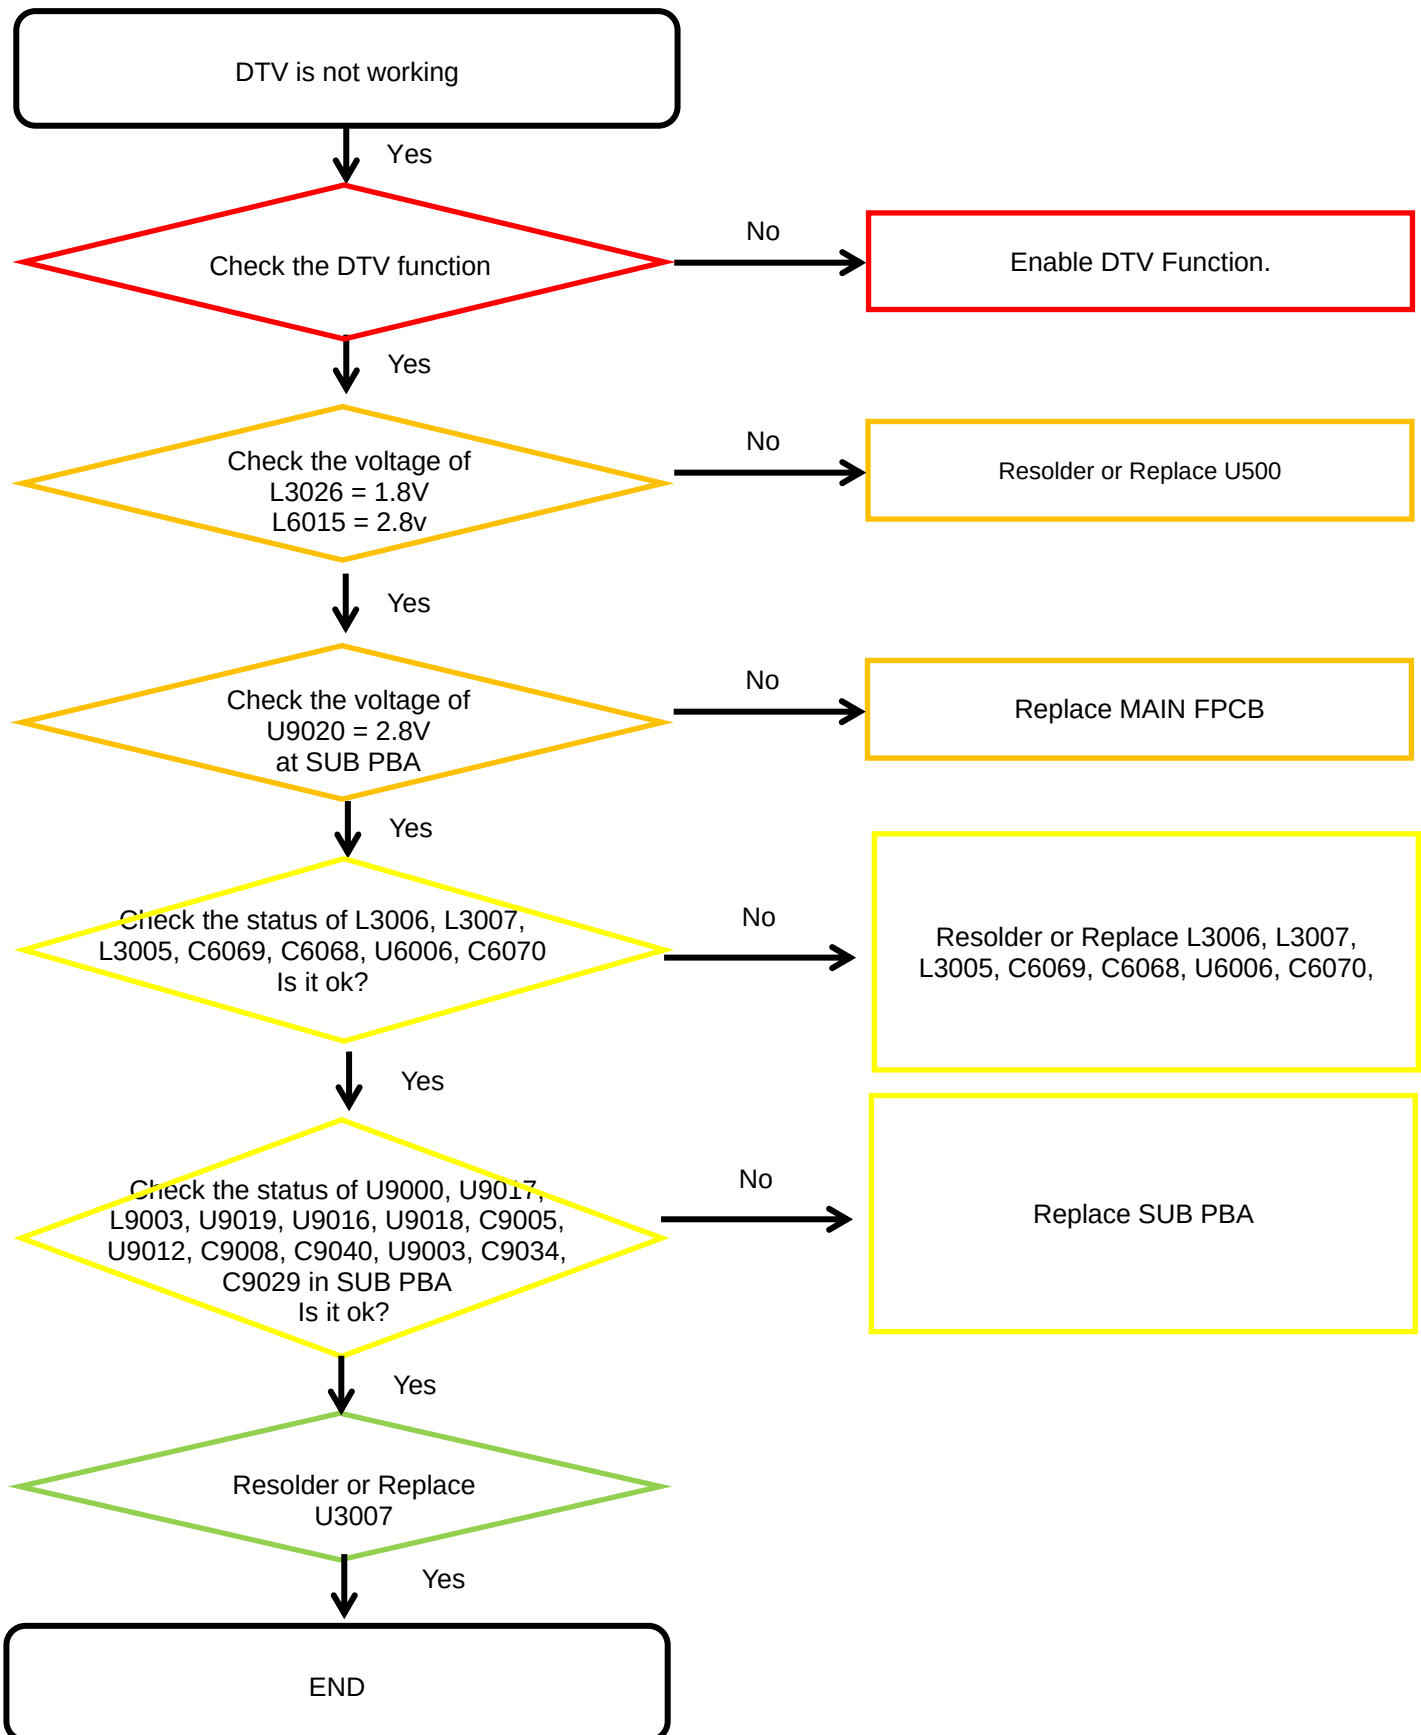


8. Level 3 Repair

8-4-18. Display

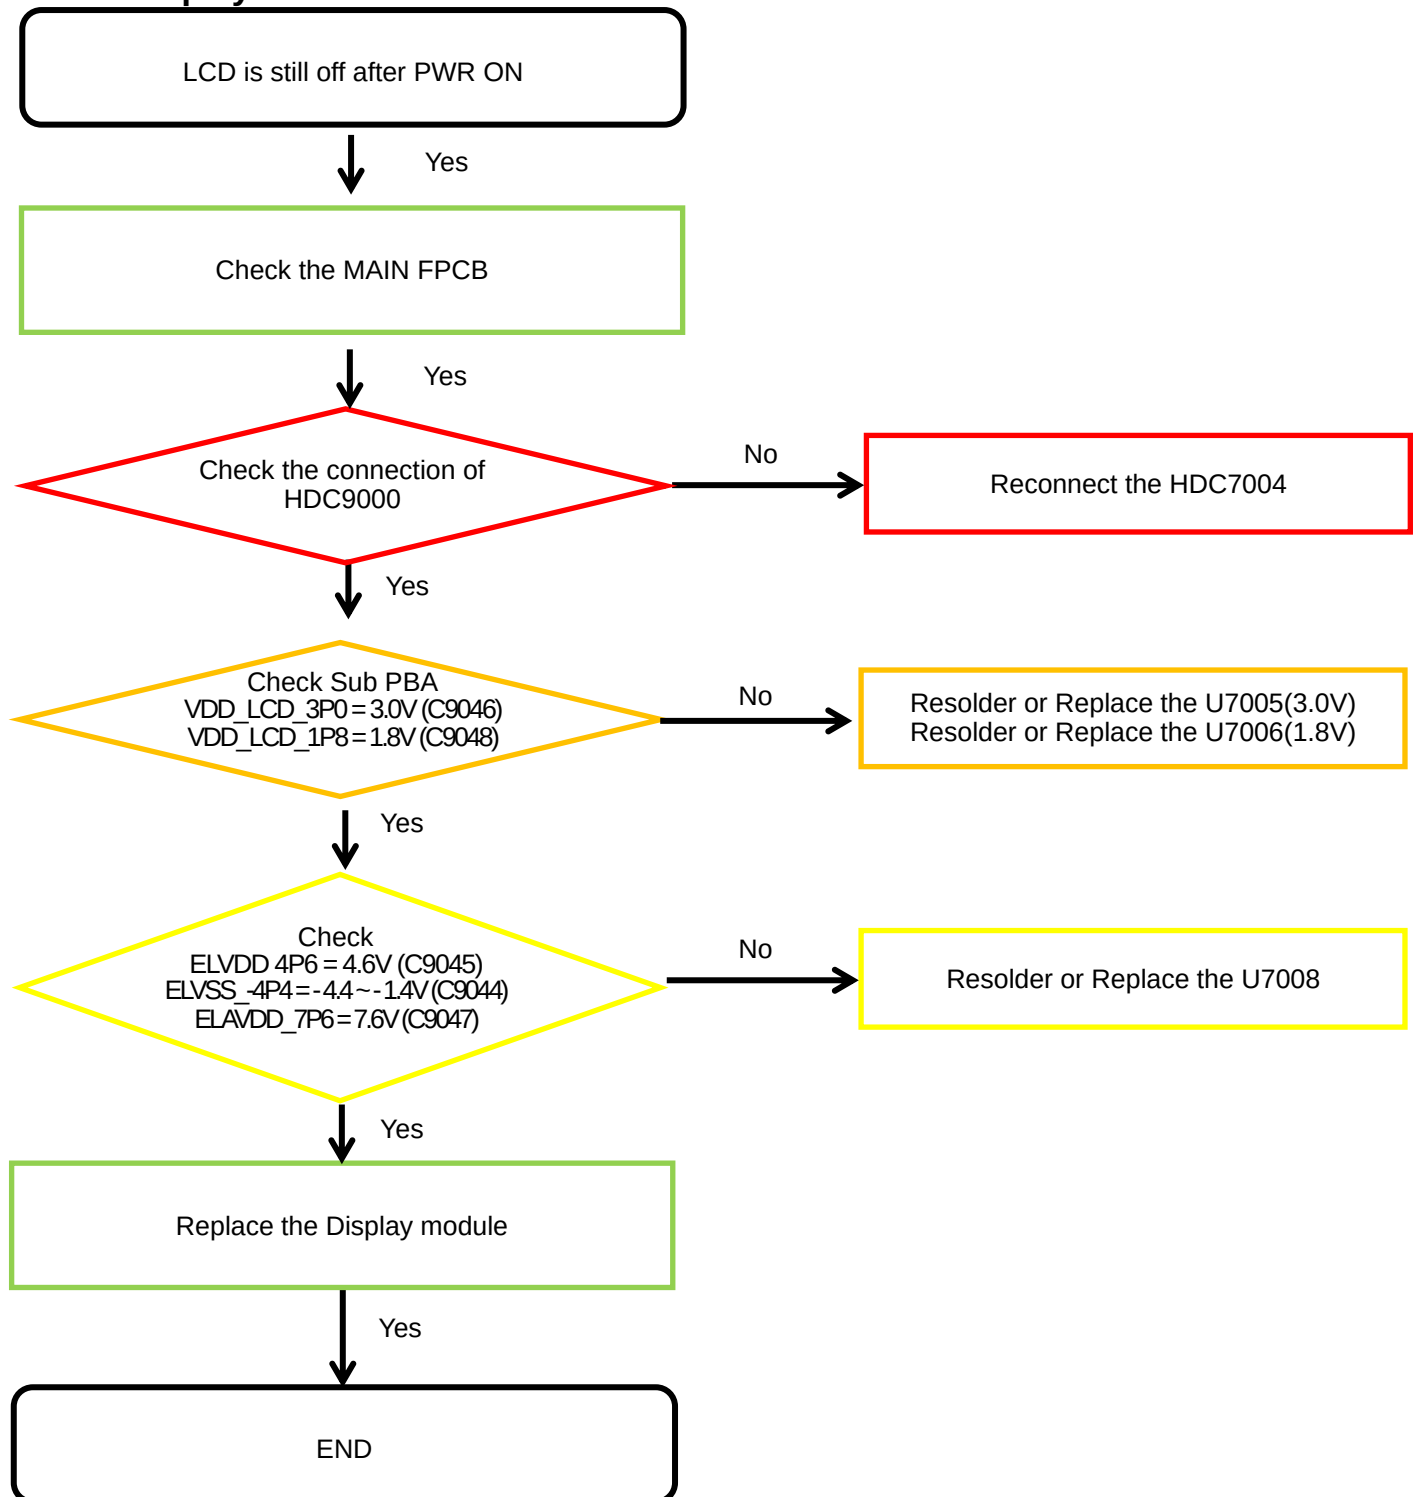


8. Level 3 Repair

8-4-19. Quad Camera

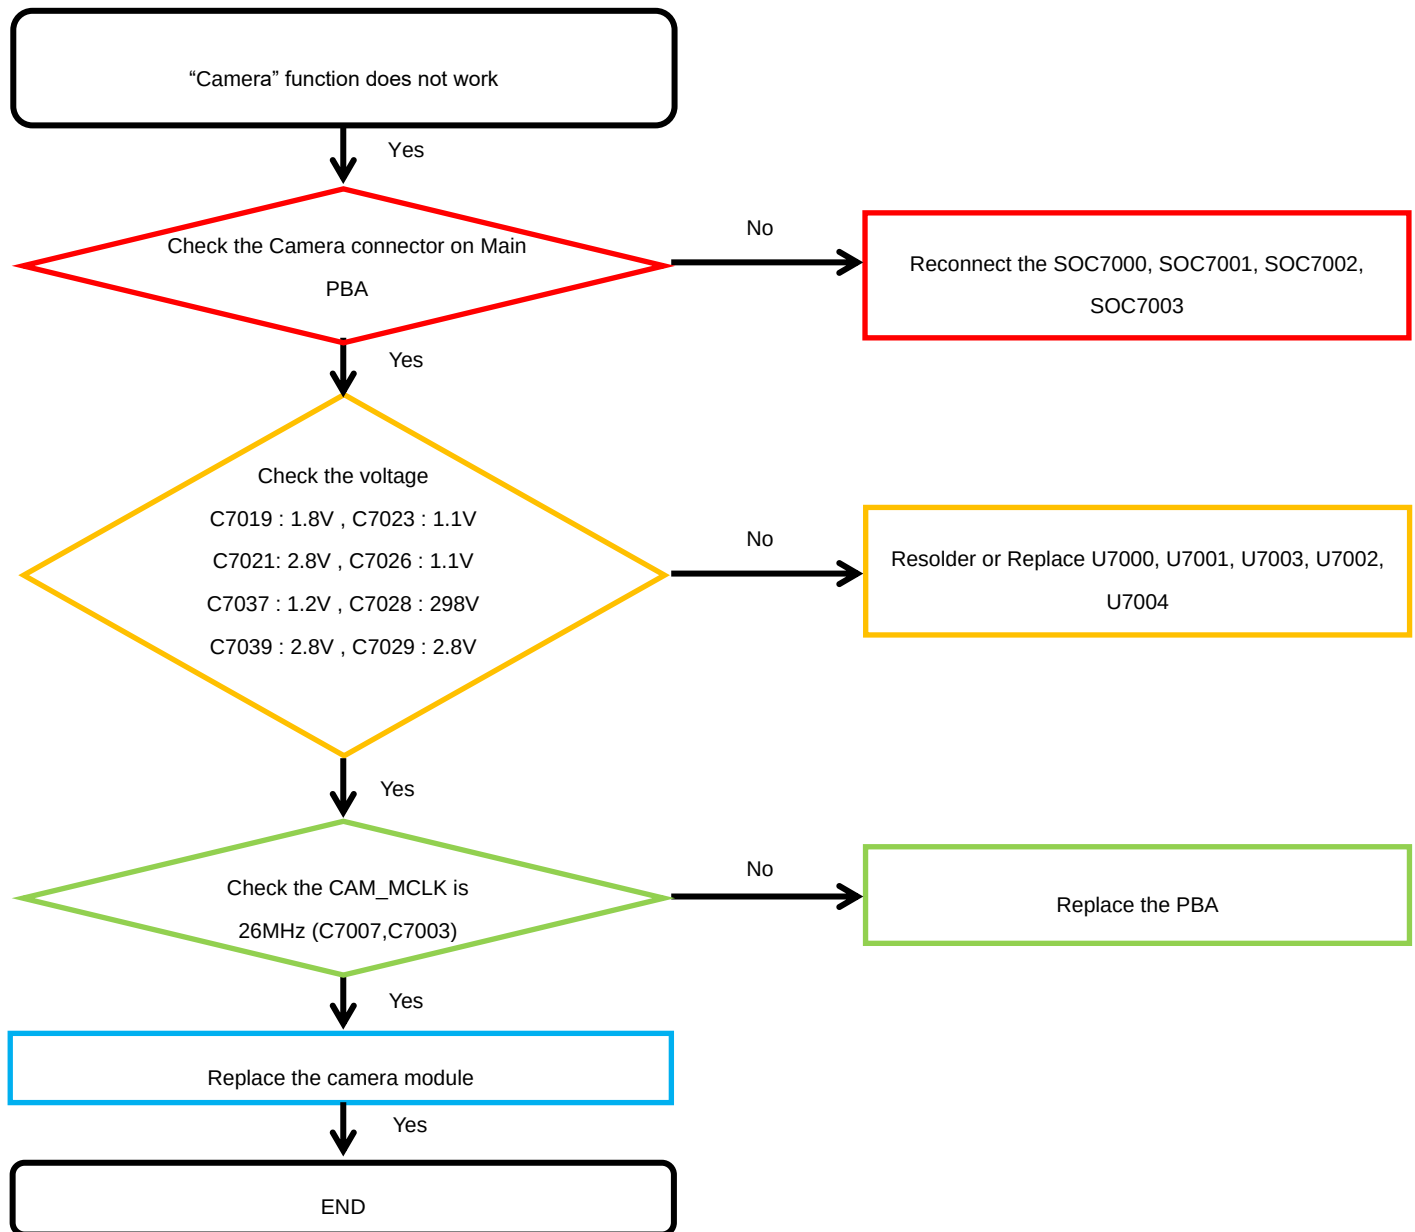


8. Level 3 Repair

8-4-20. VT CAMERA

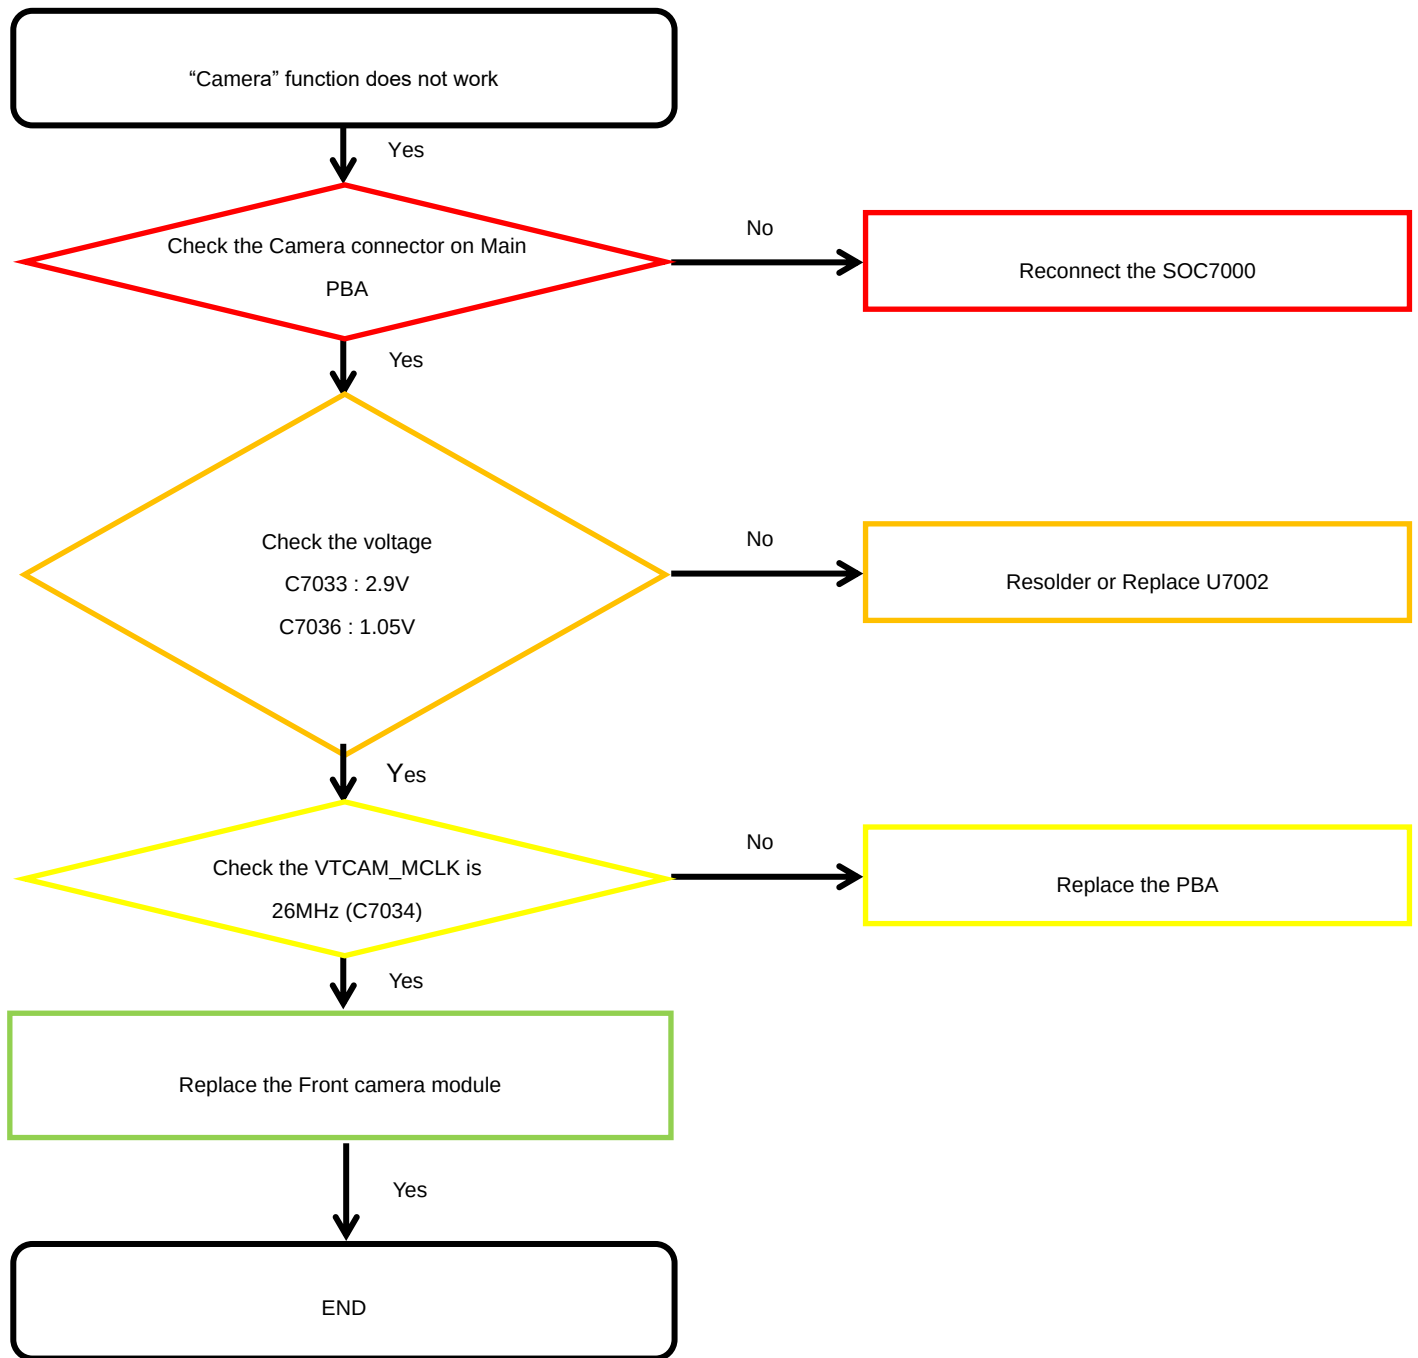


8. Level 3 Repair

8-4-21. Motor

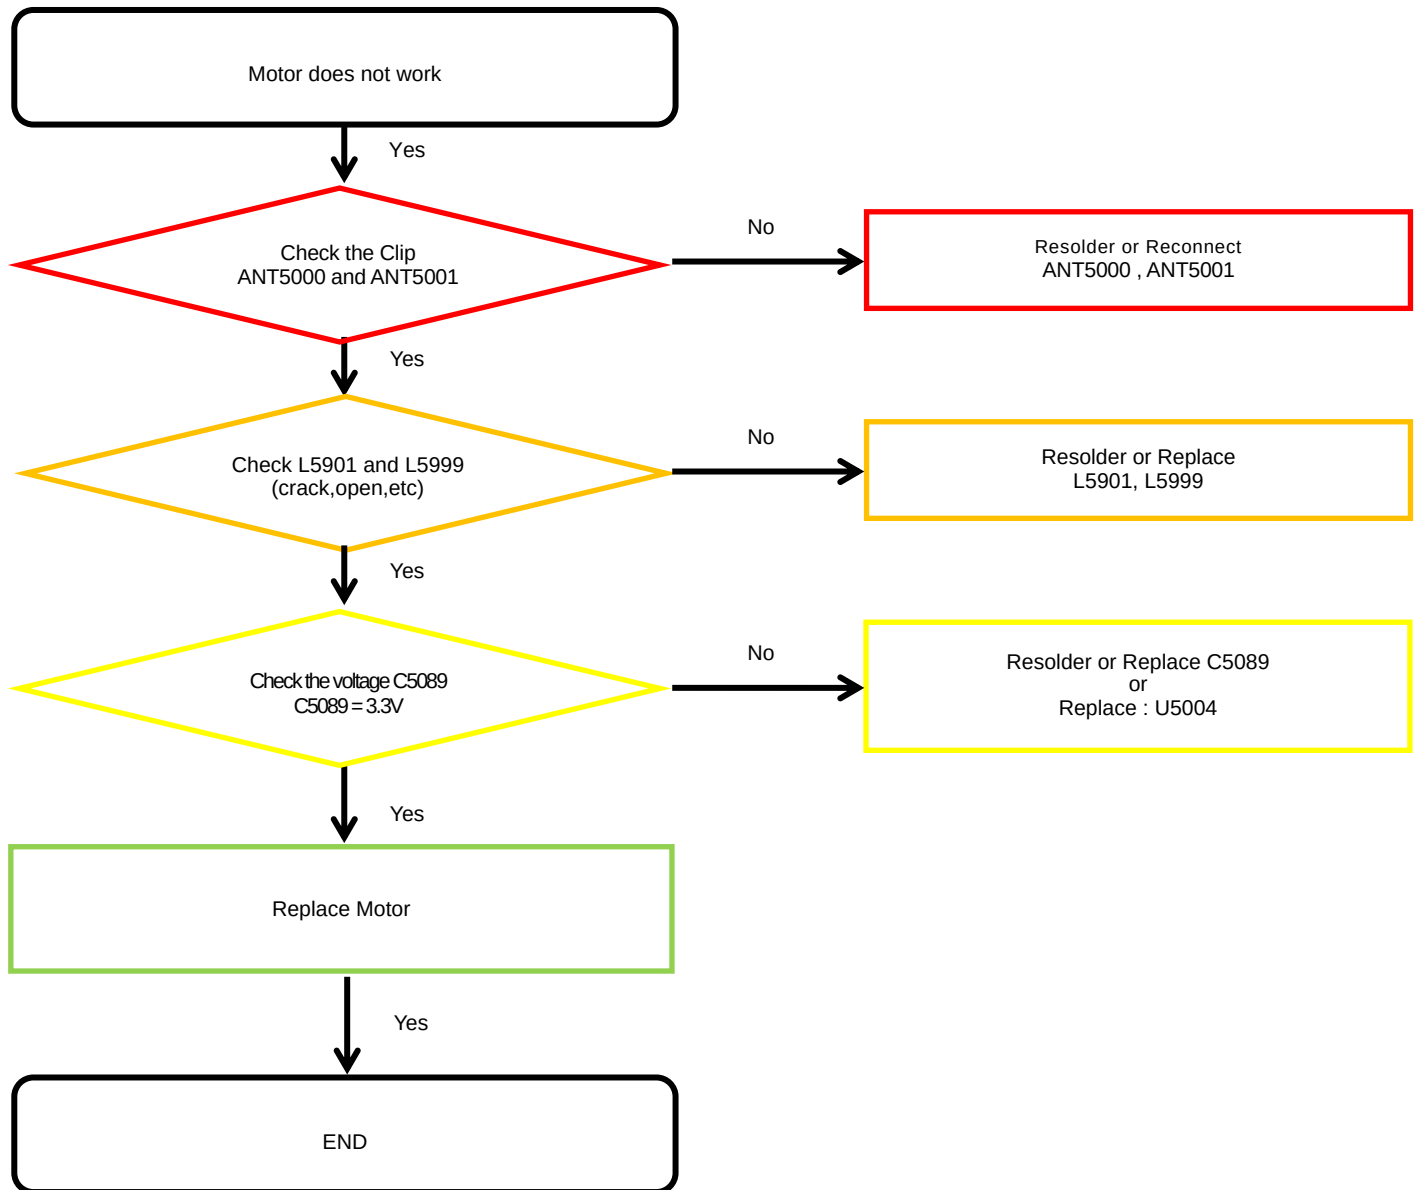


8. Level 3 Repair

8-4-22. GSM 850/900/1800/1900, WCDMA B1/2/4/5/8, LTE B1/2/3/4/5/8/12/13/17/20/26/28/66 PRx

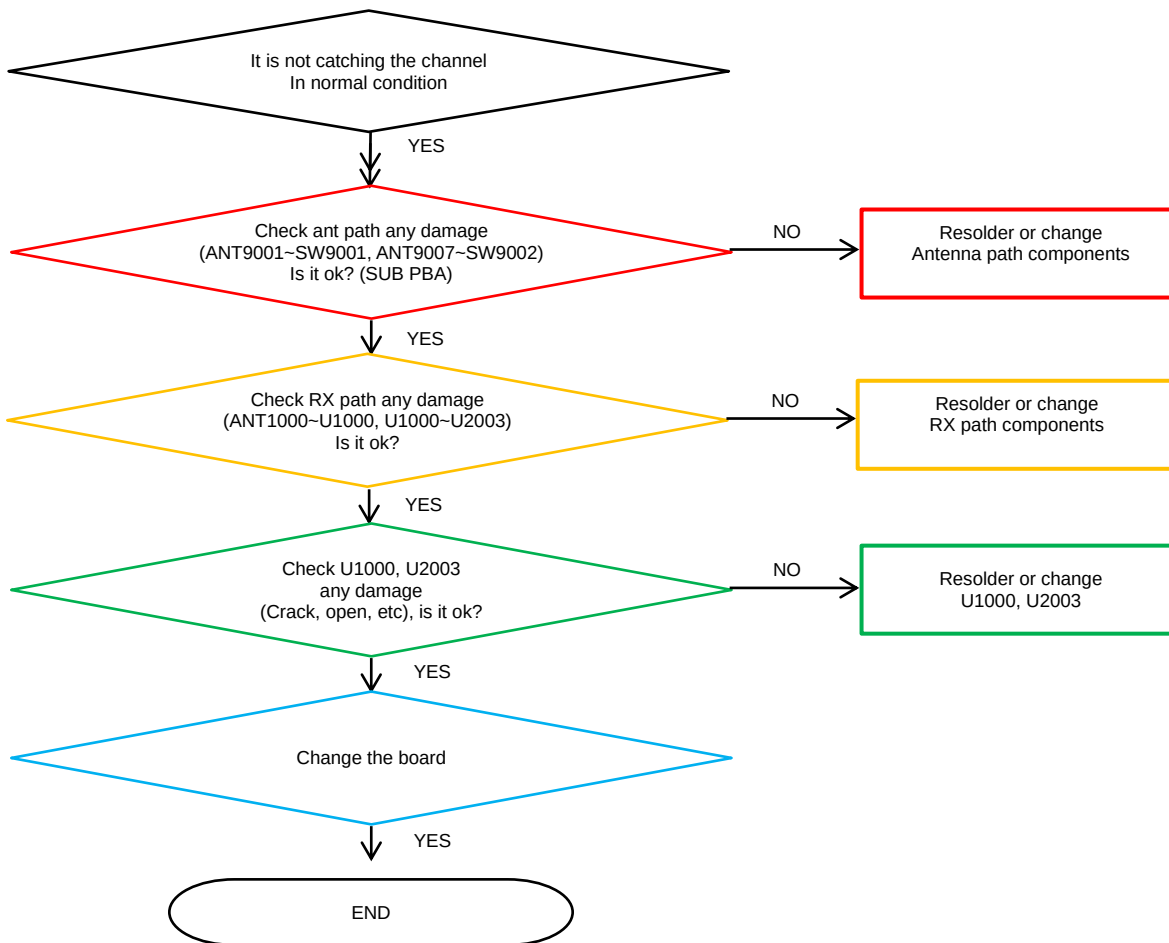


8. Level 3 Repair

8-4-23. LTE B7/38/40/41 PRx

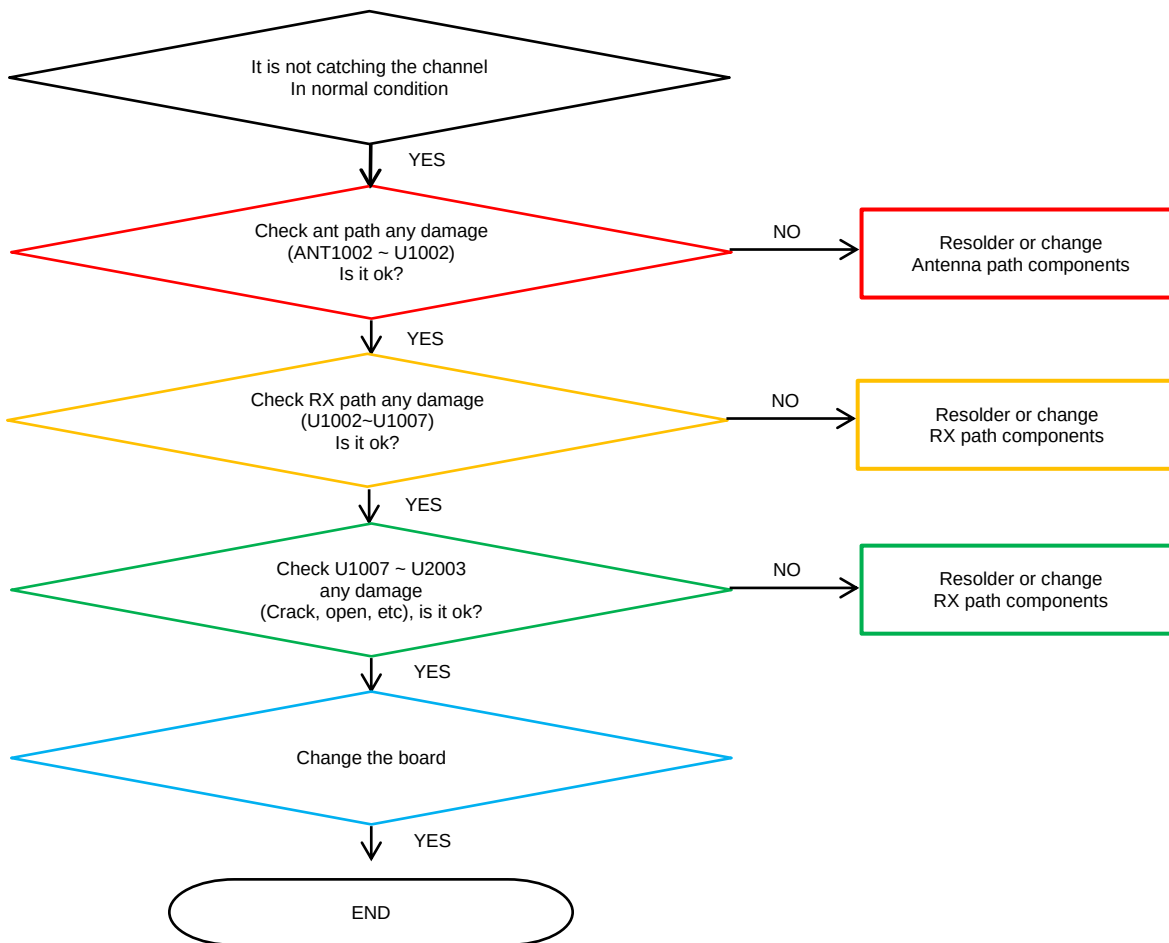


8. Level 3 Repair

8-4-24. GSM 850/900/1800/1900, WCDMA B1/2/4/5/8, LTE B1/2/3/4/5/8/12/13/17/20/26/28/66 DRx

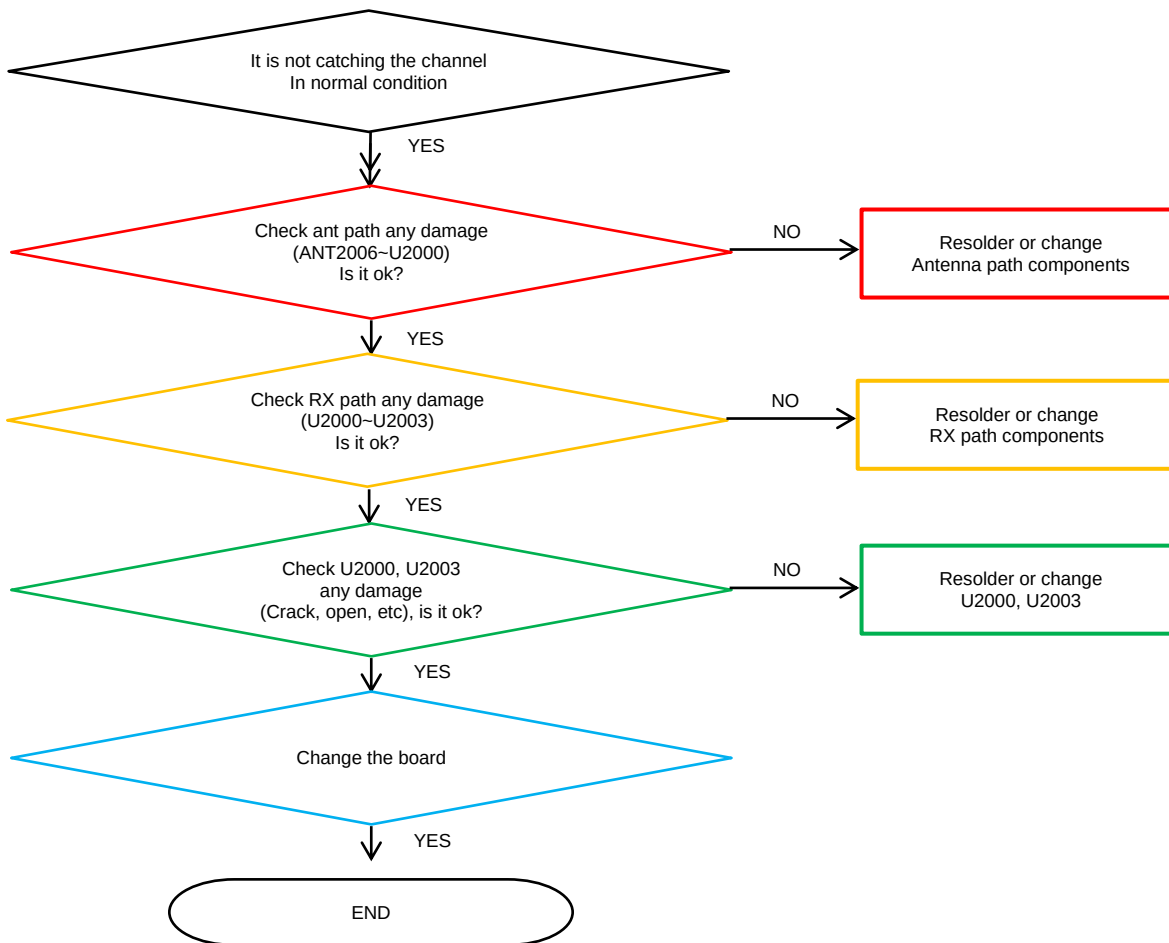


8. Level 3 Repair

8-4-25. LTE B7/38/40/41 DRx

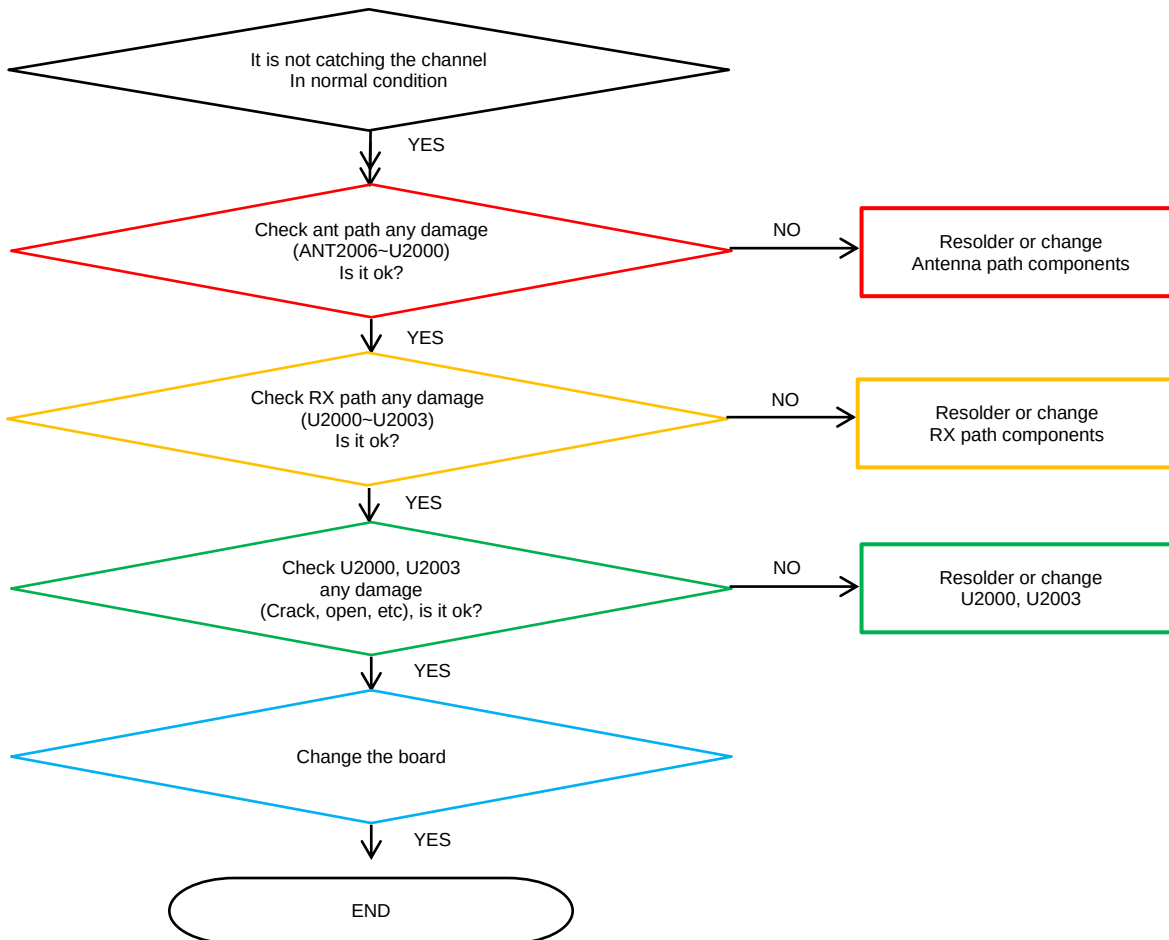

8. Level 3 Repair

8-4-26. GSM 850/900/1800/1900, WCDMA B1/2/4/5/8, LTE B1/2/3/4/5/8/12/13/17/20/26/28/66 Tx

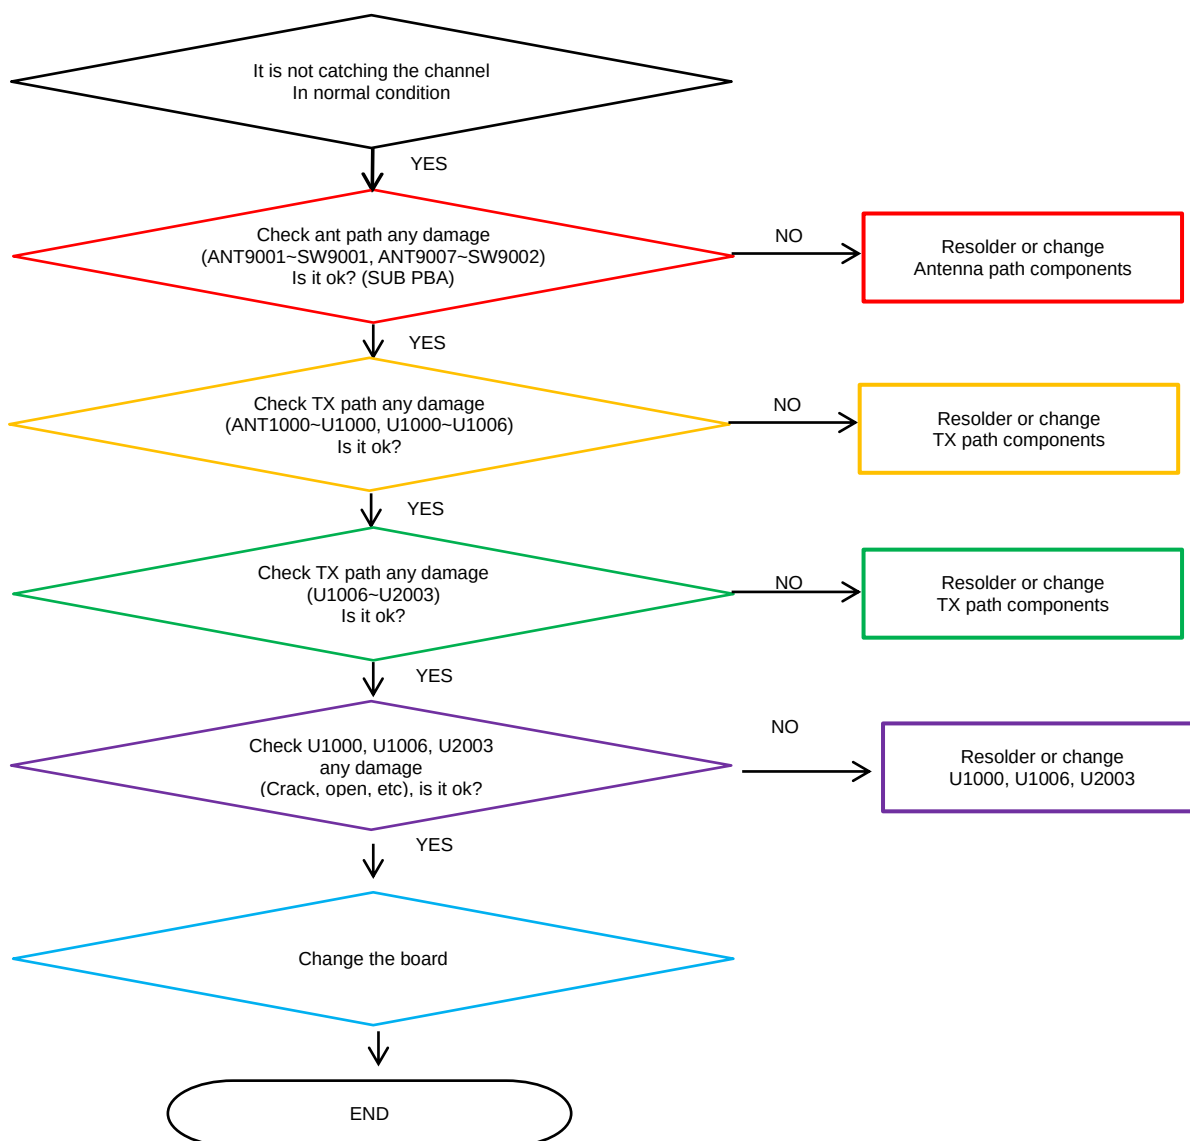

8. Level 3 Repair

8-4-27. LTE B7/38/40/41 Tx

