
8. 3 级维修

8-1. 扬声器模块维修

→当扬声器模块需要由坏的更换新的时，“扬声器校准”应当进行如下操作。

8-1-1. 维修扬声器模块的必要条件

- SM-A3000手机
- SM-A3000扬声器模块
- 计算机
- 耳机
- 装置盒 (GH99-36900B)
- 装置接线 (GH81-10953A)
- 串行线



9-1. 电池更换

→当电池需要由坏的更换新的时，“电池使用初始化”应当进行如下操作。

8-1-1. 维修扬声器模块的必要条件

- SM-A3000手机
- SM-A3000电池
- 计算机
- 装置盒 (GH99-36900B)
- 装置接线 (GH81-10953A)
- 串行线


※设置




8-1.框图

8-2.主板图


8-2-1.主板顶部

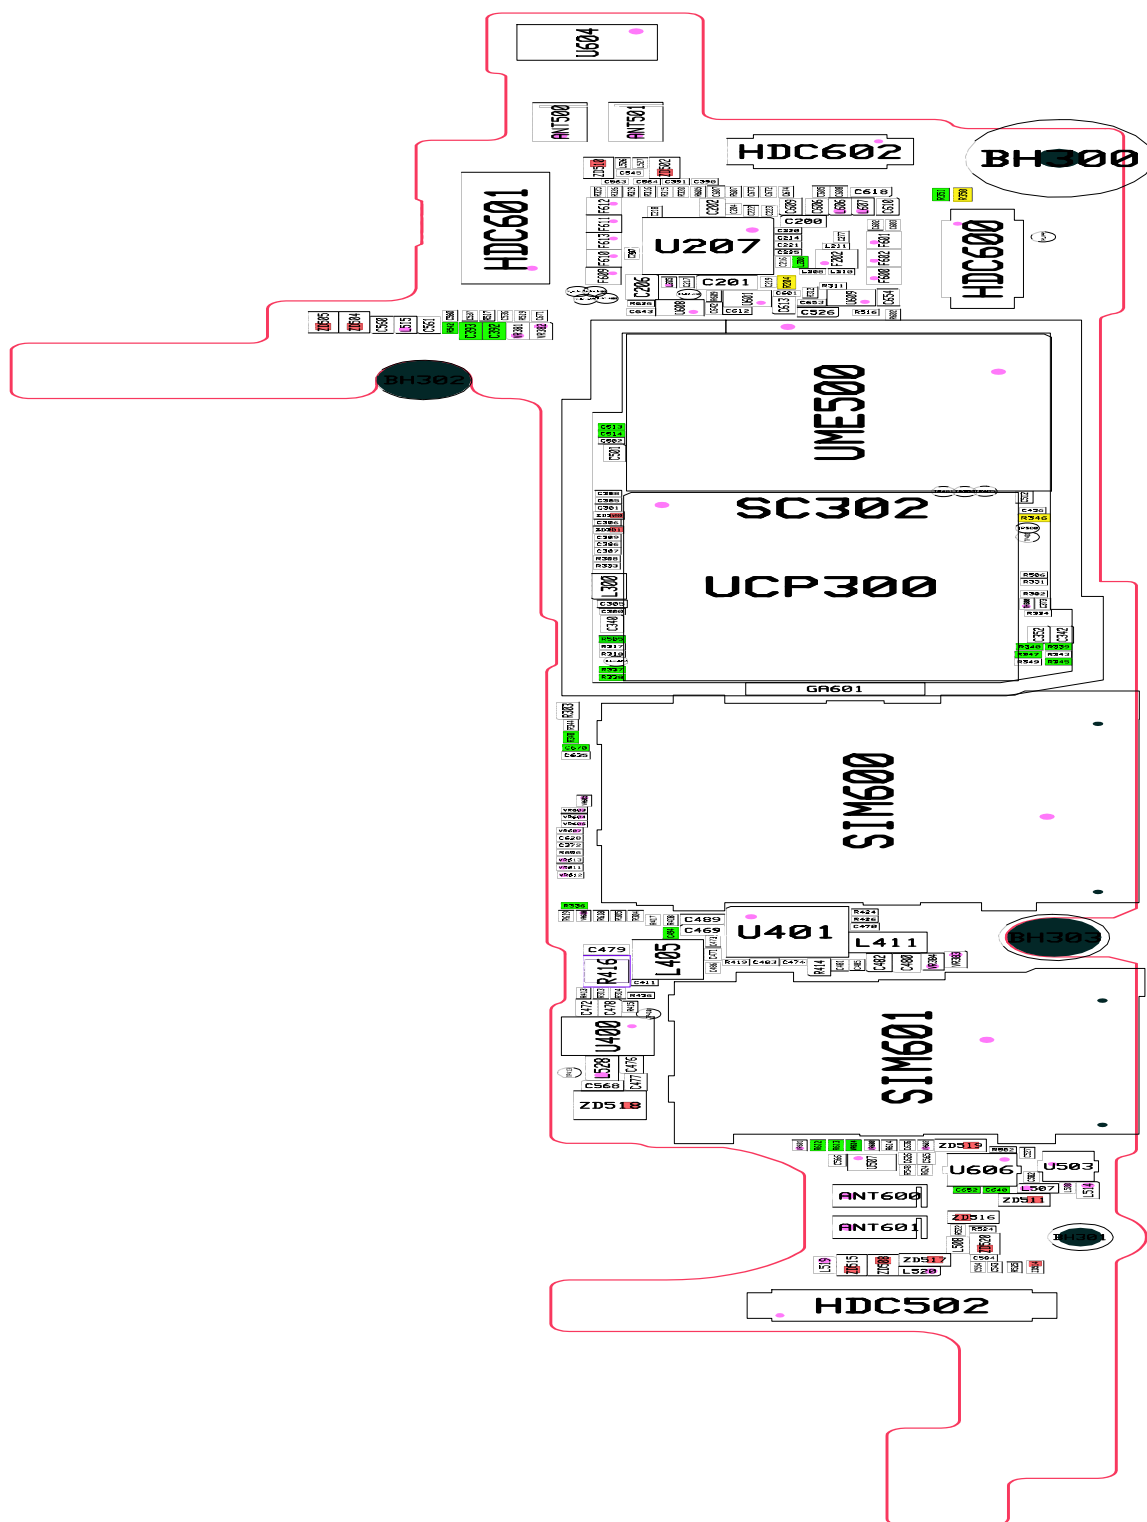

8-2-2.底部

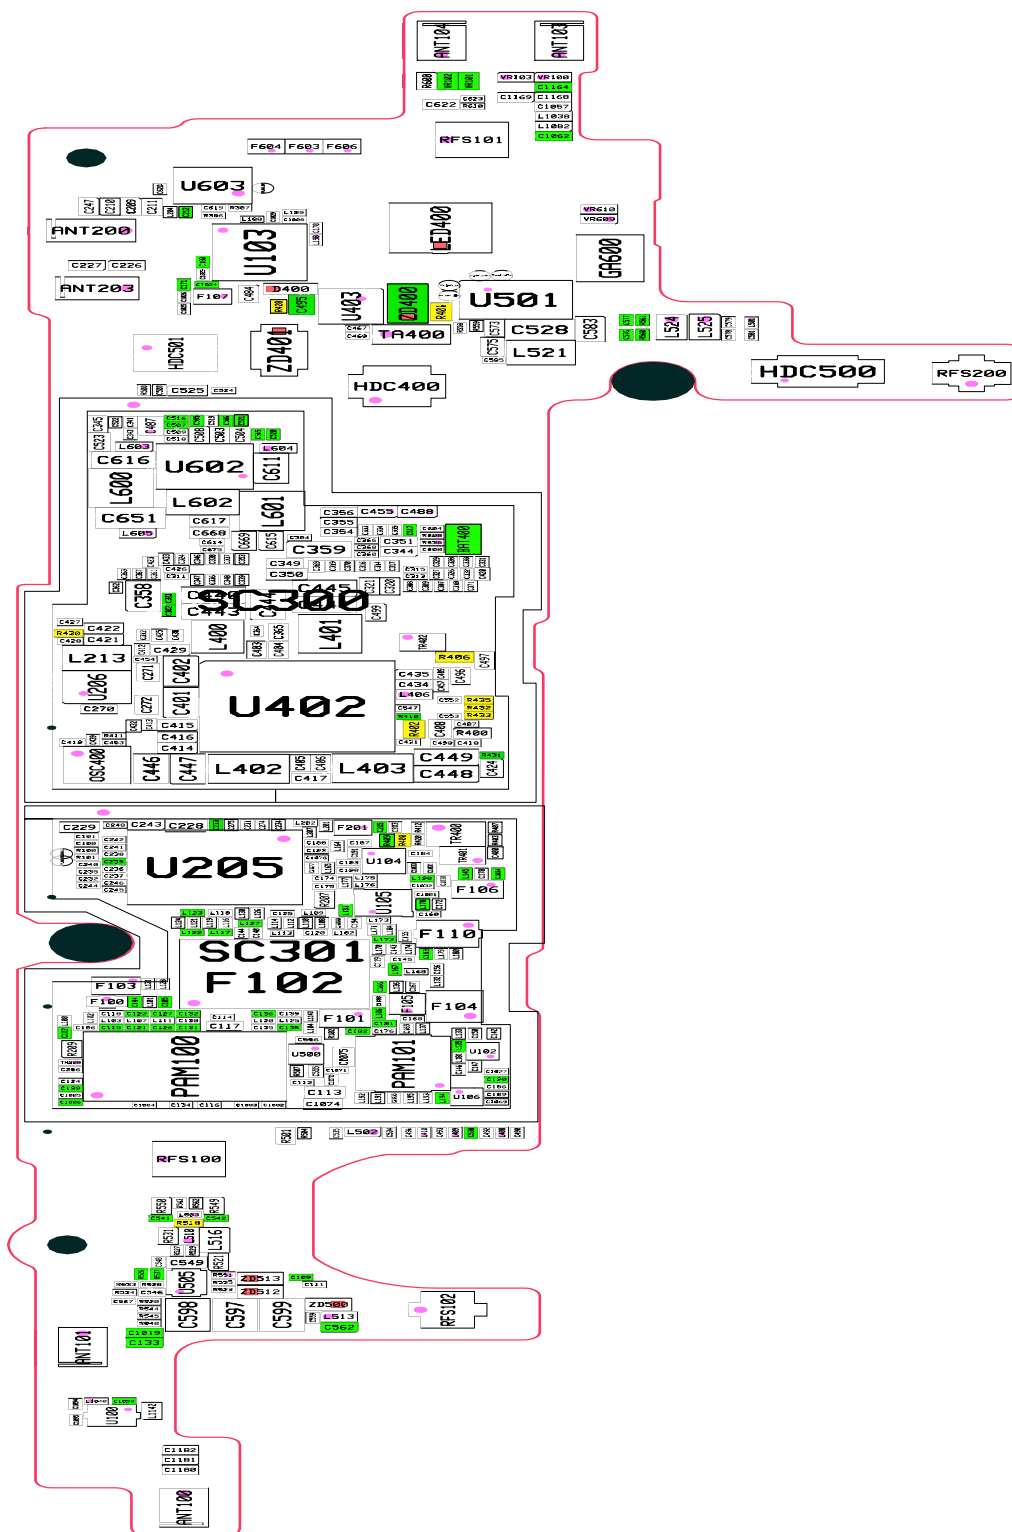

8-2-3. 设备

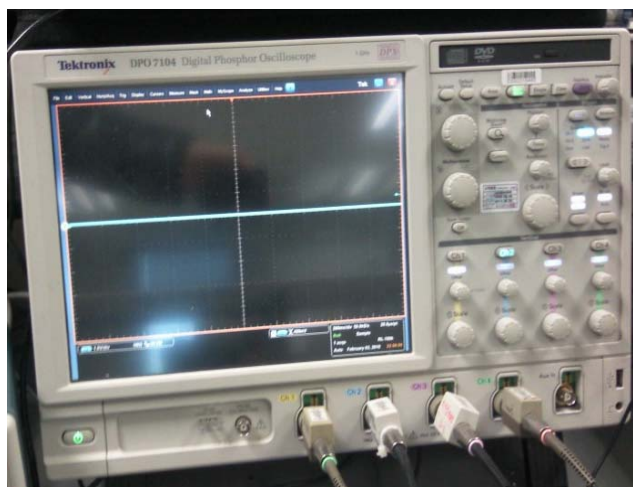

↑示波器




↑数字万用表



↑电源供电器



↑+字螺丝刀, ESD 安全镊子

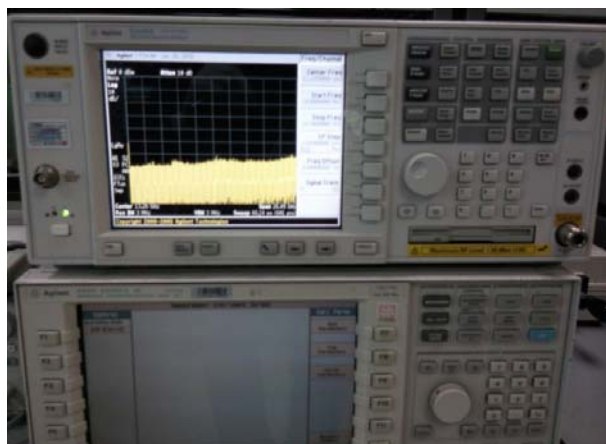


↑8960 和光谱分析器





↑焊接熨斗


8-3.故障排除流程图






8-3-1 开机

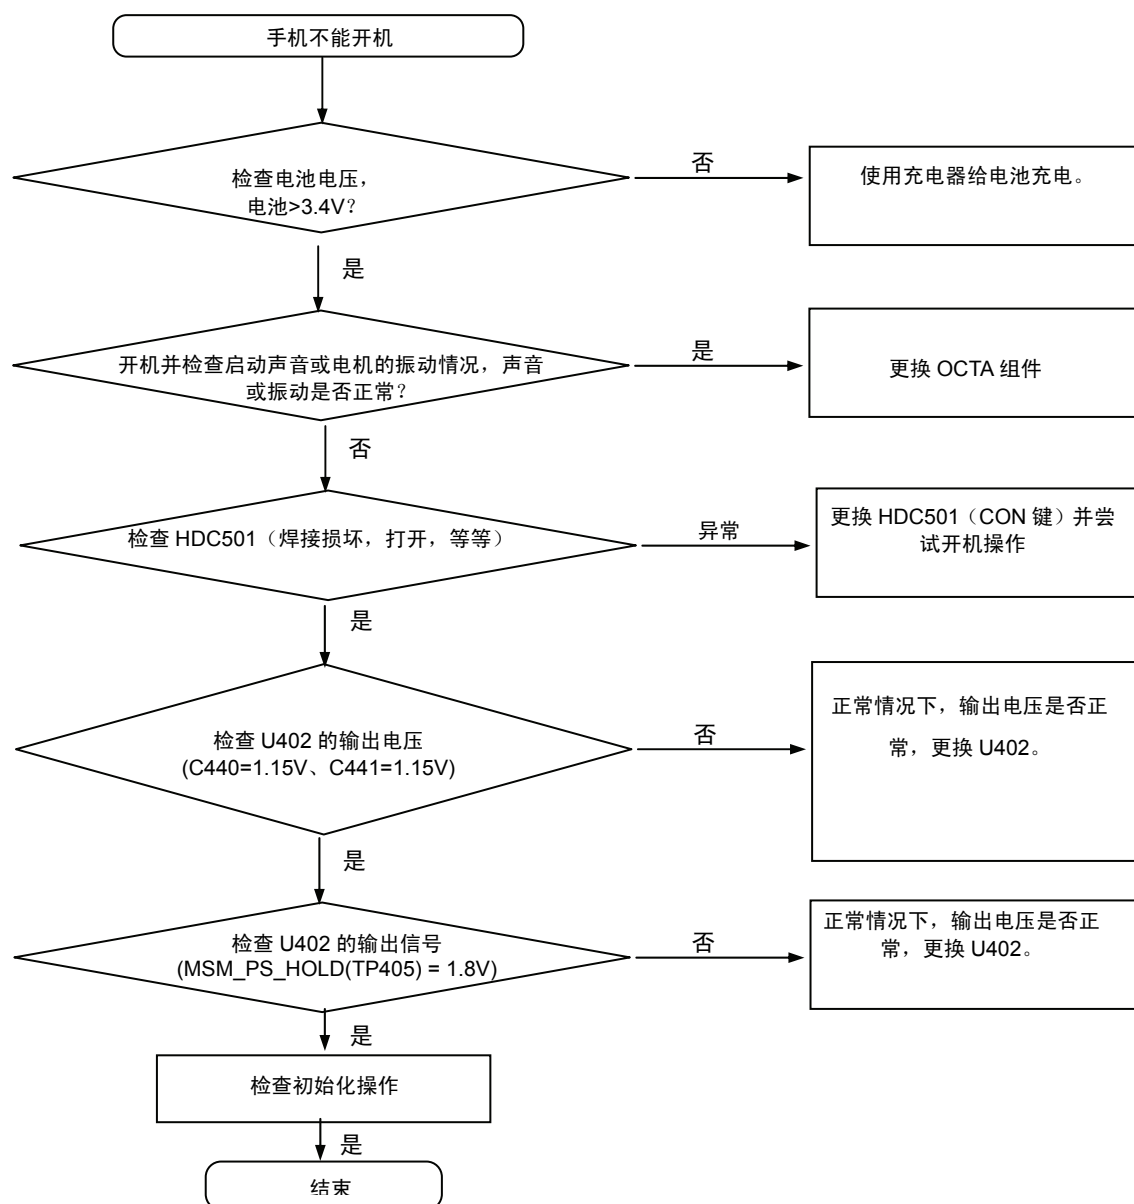

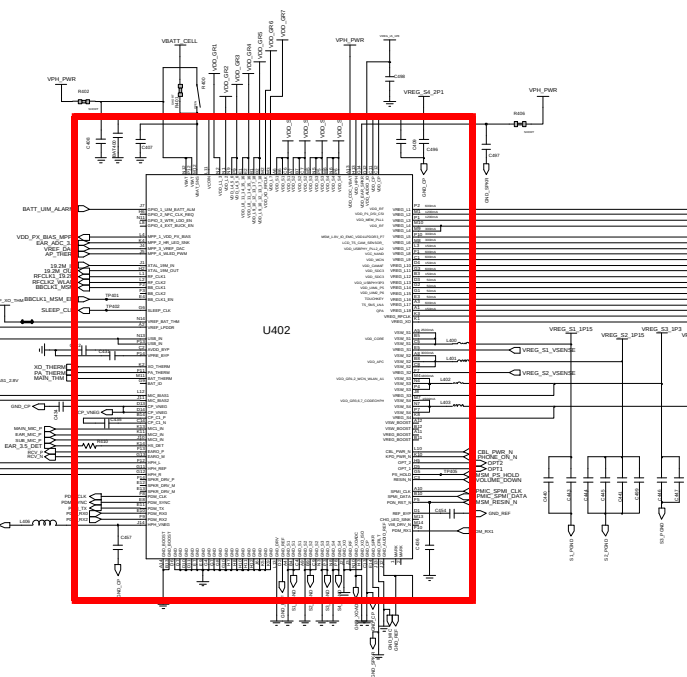



8-3-2. 初始化





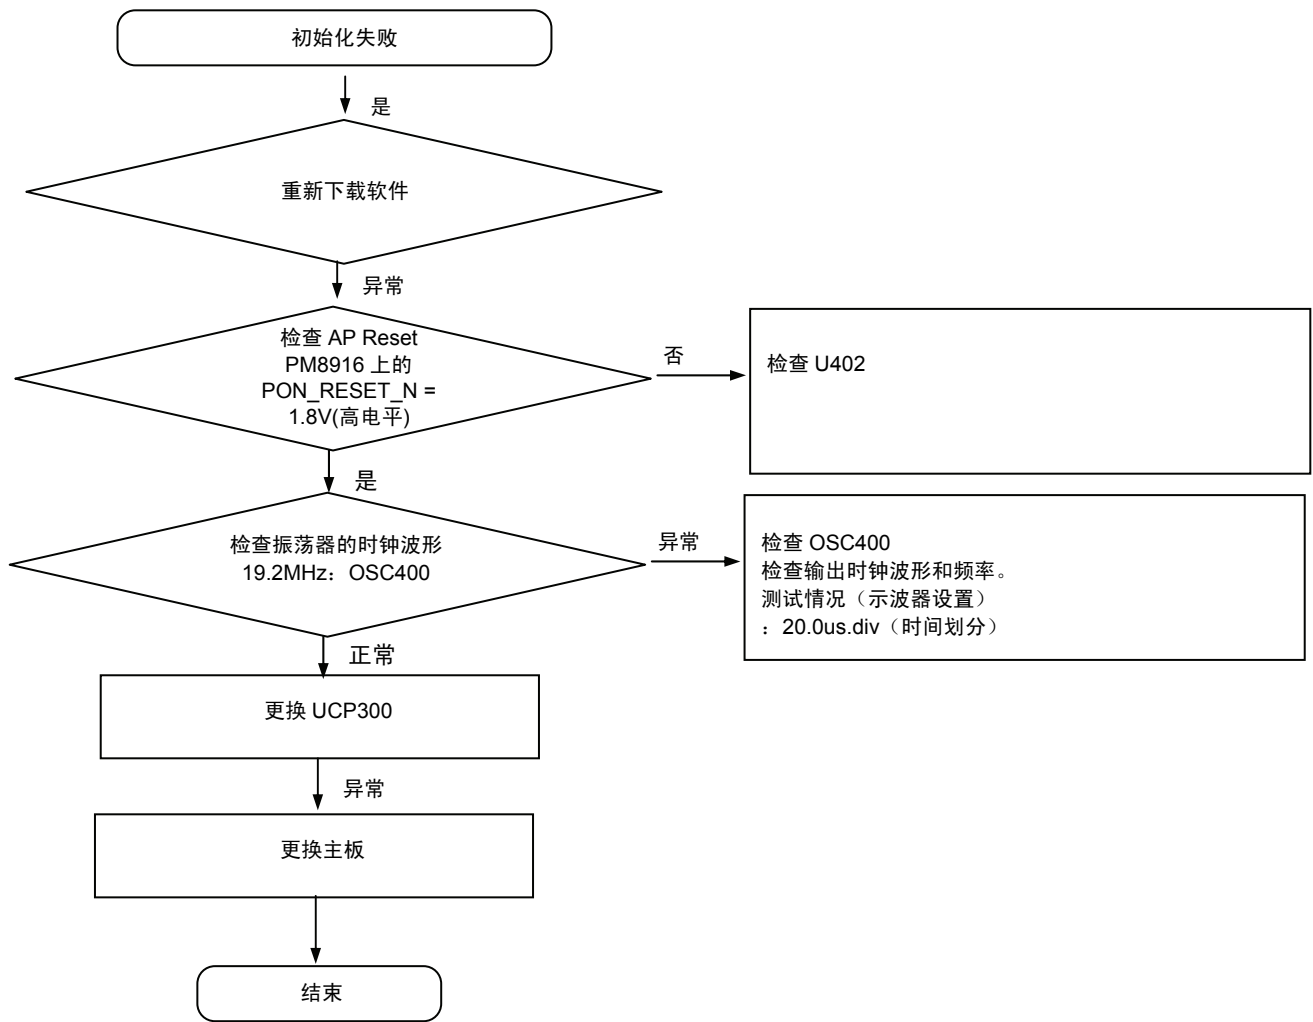


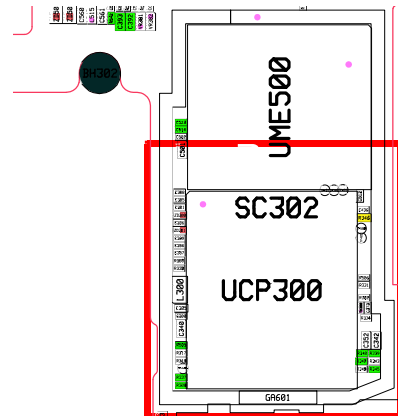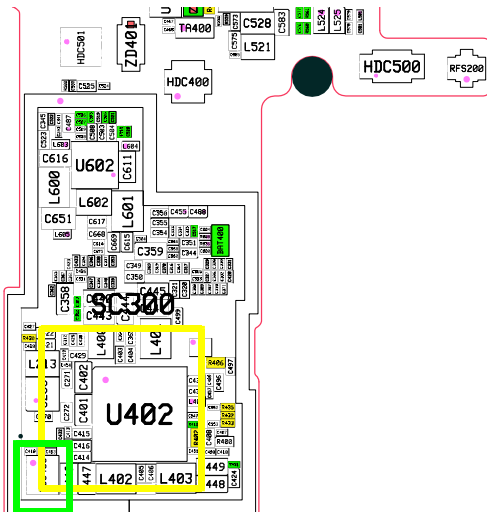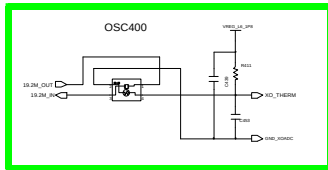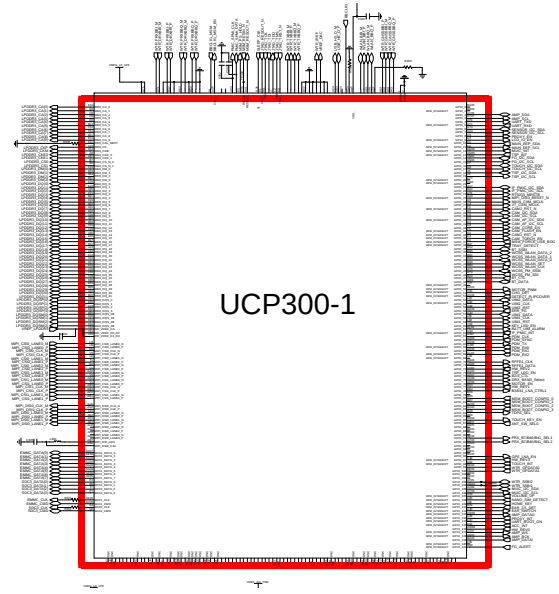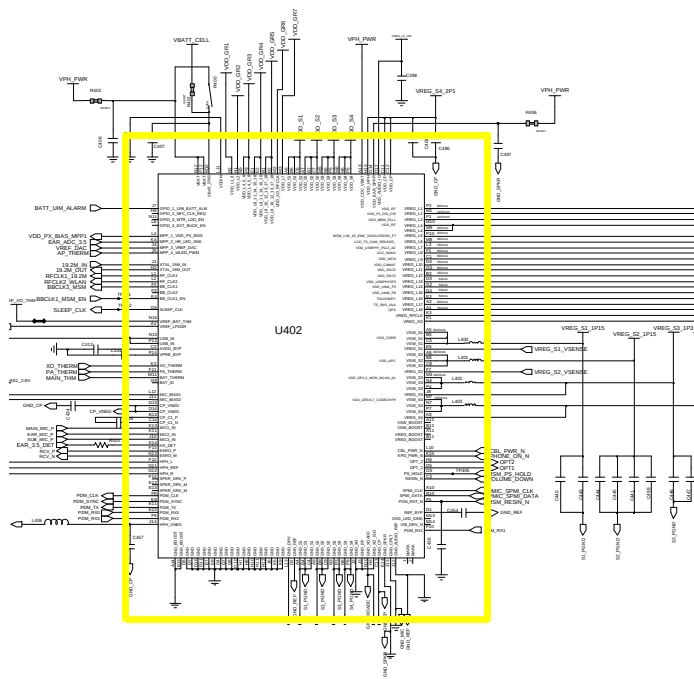






8-3-3. 无服务

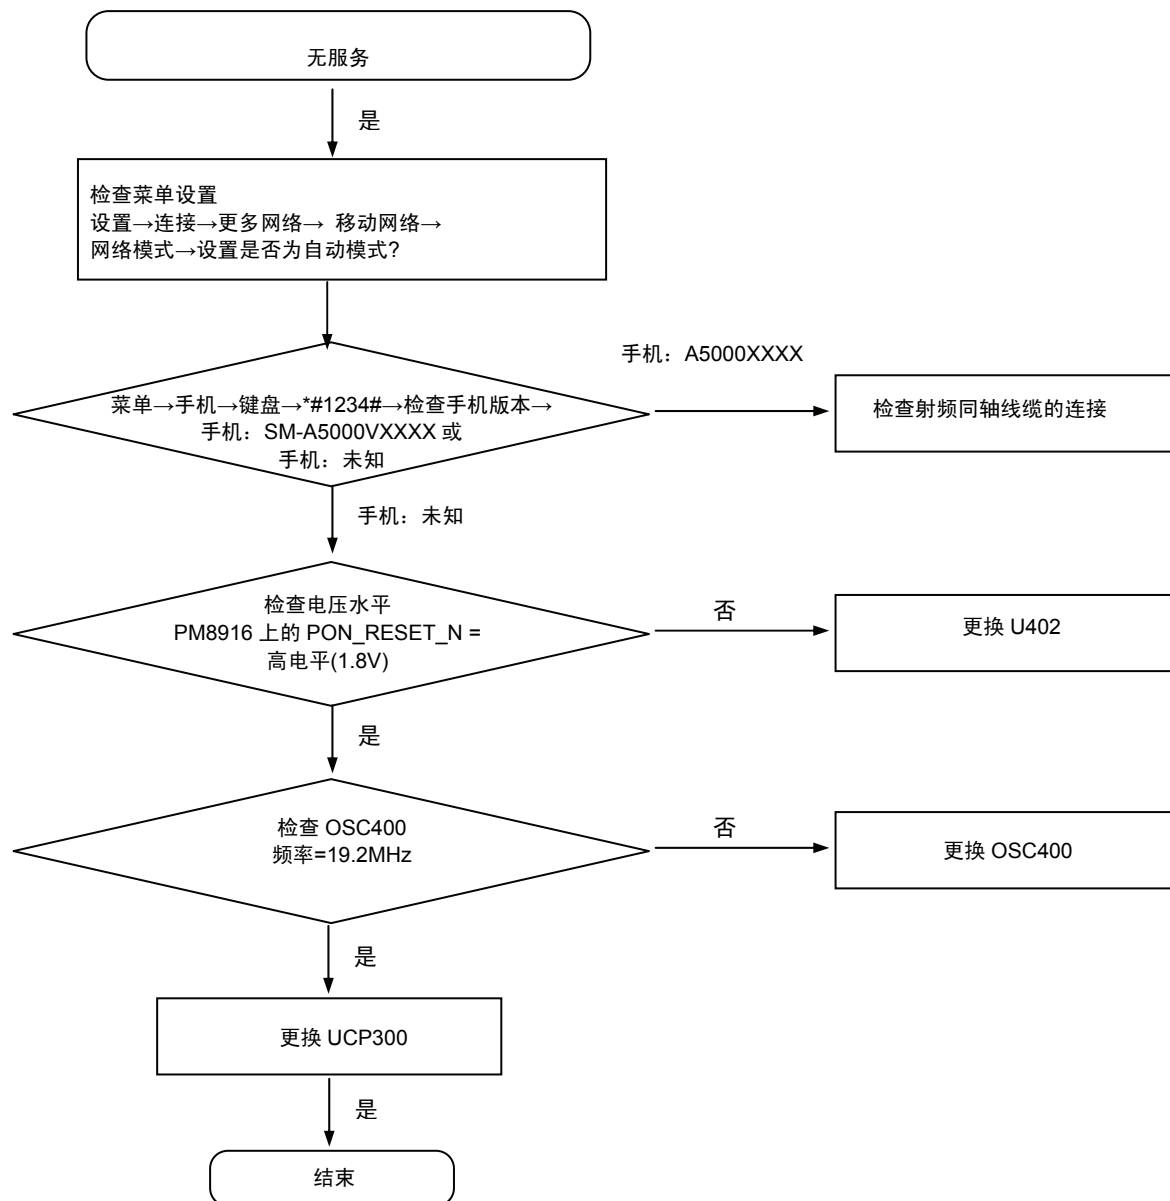

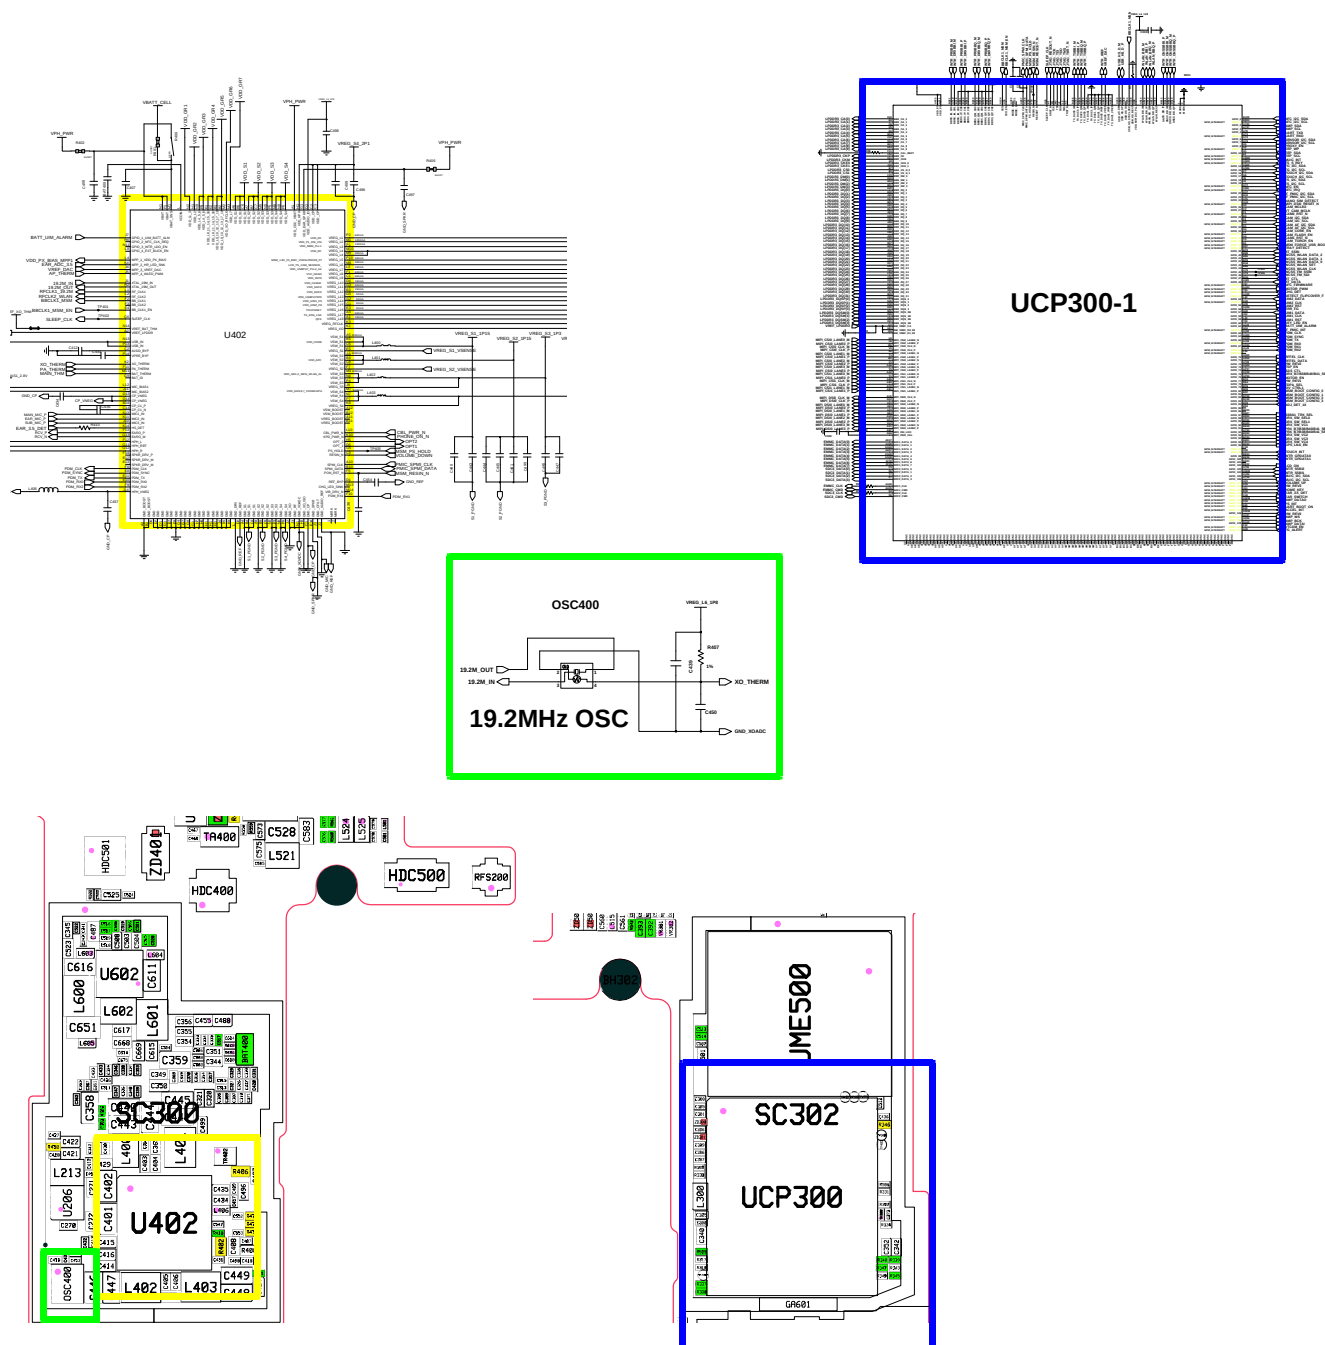


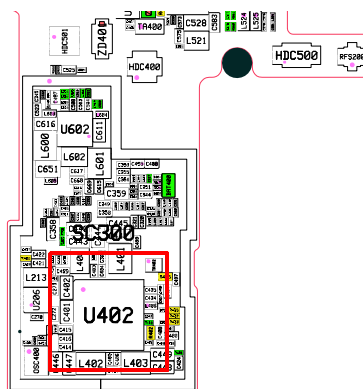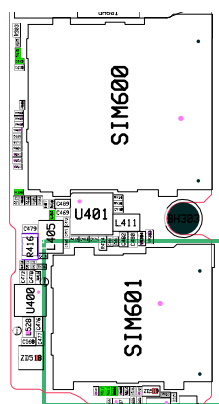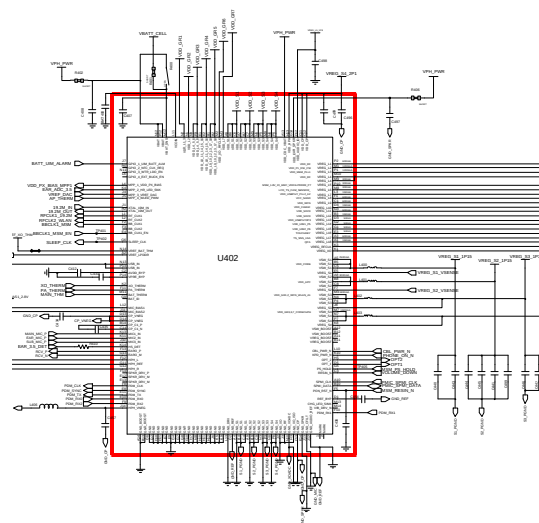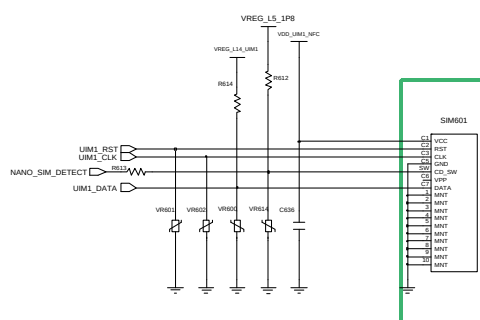
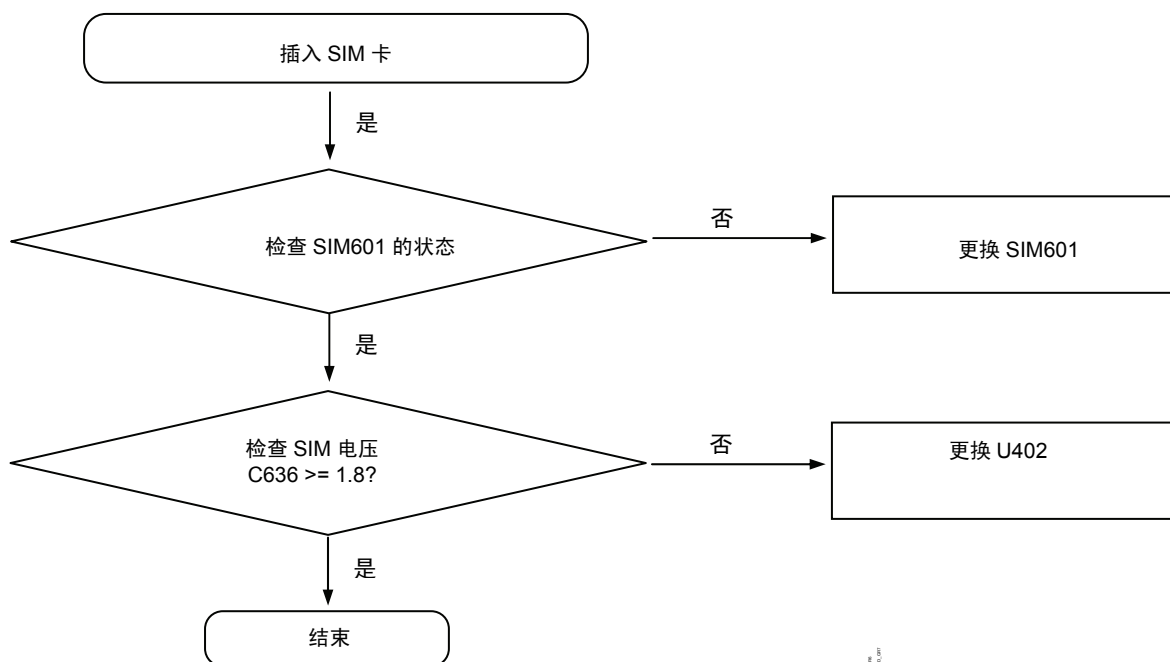


8-3-5.混合托架部分

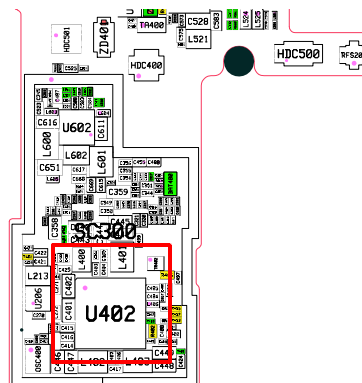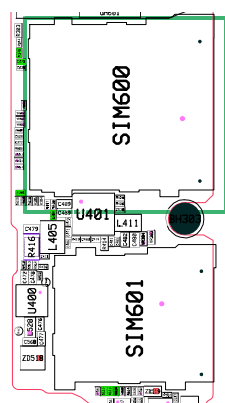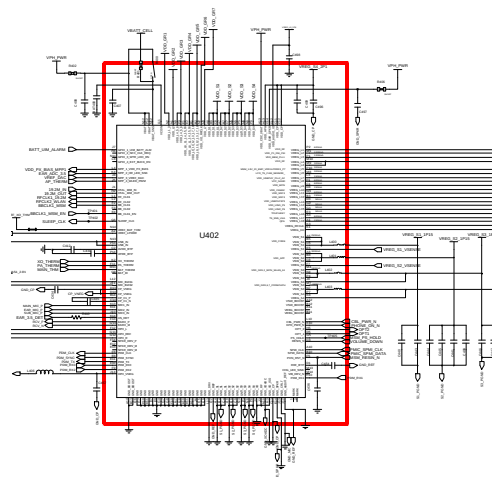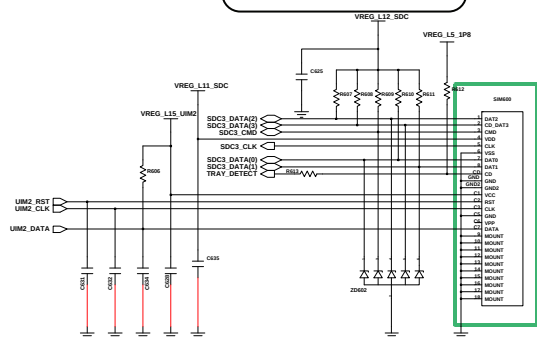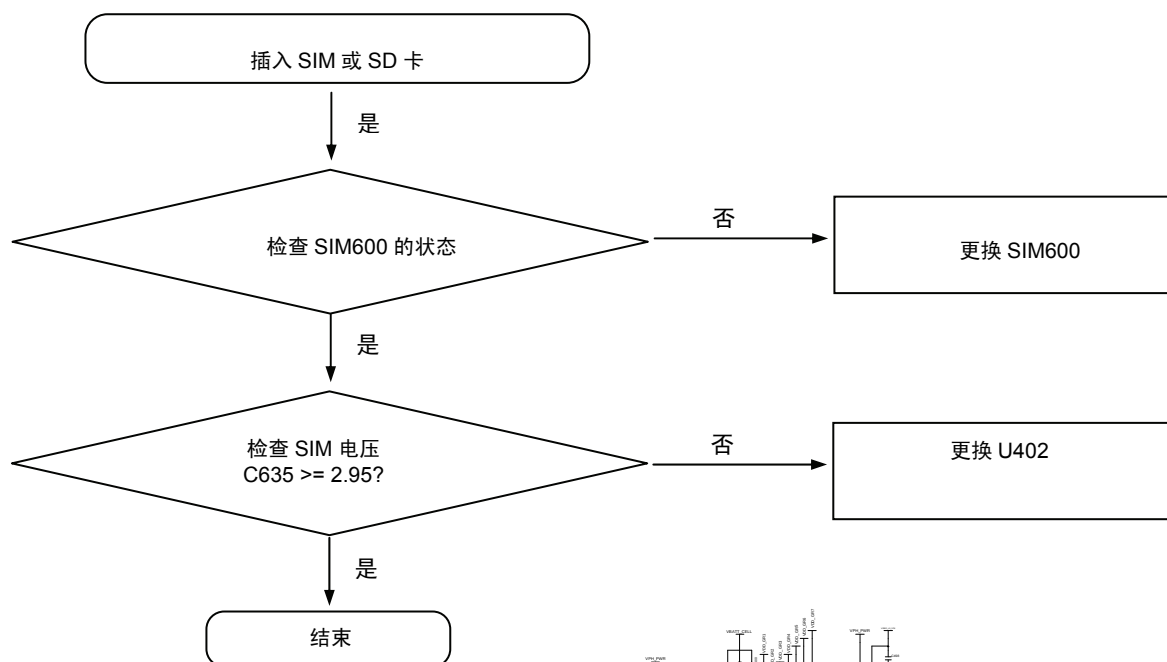




8-3-6.充电部分

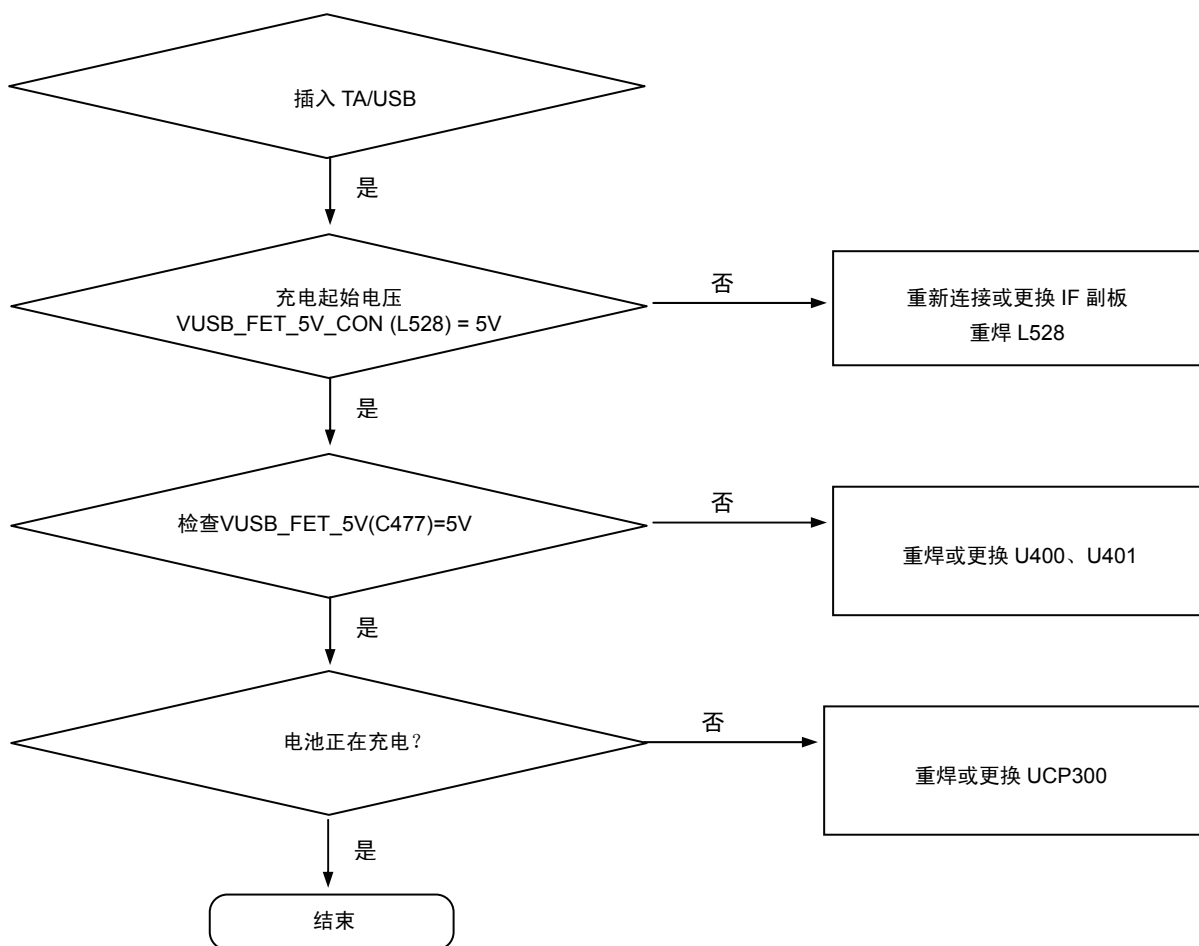


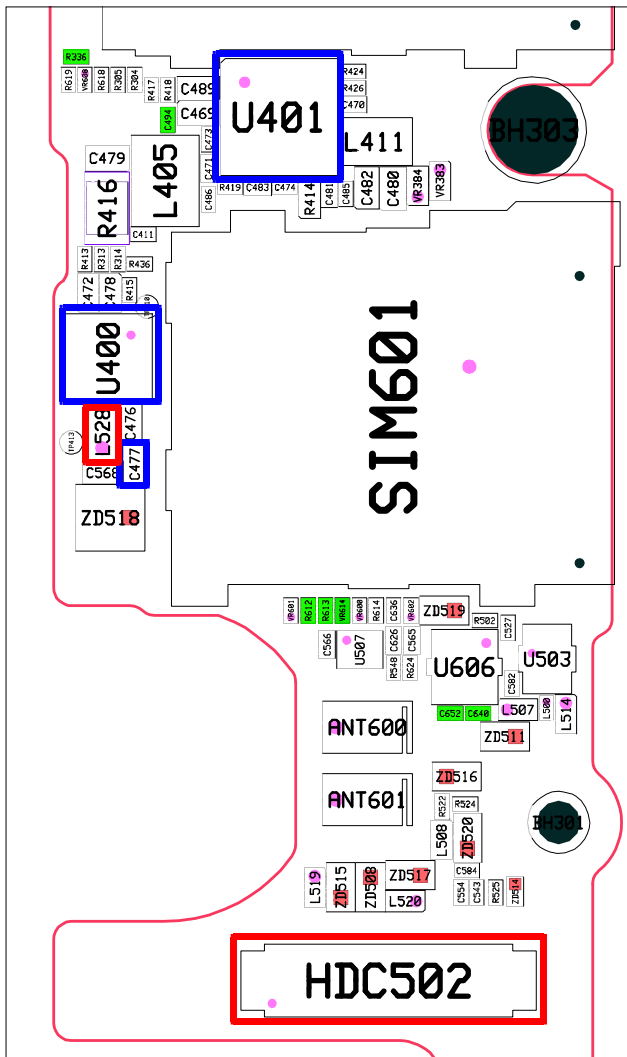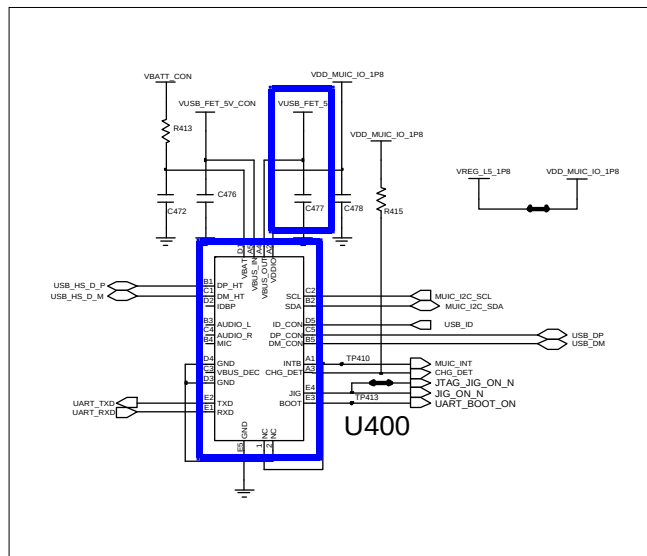


8-3-5.6Axics 传感器

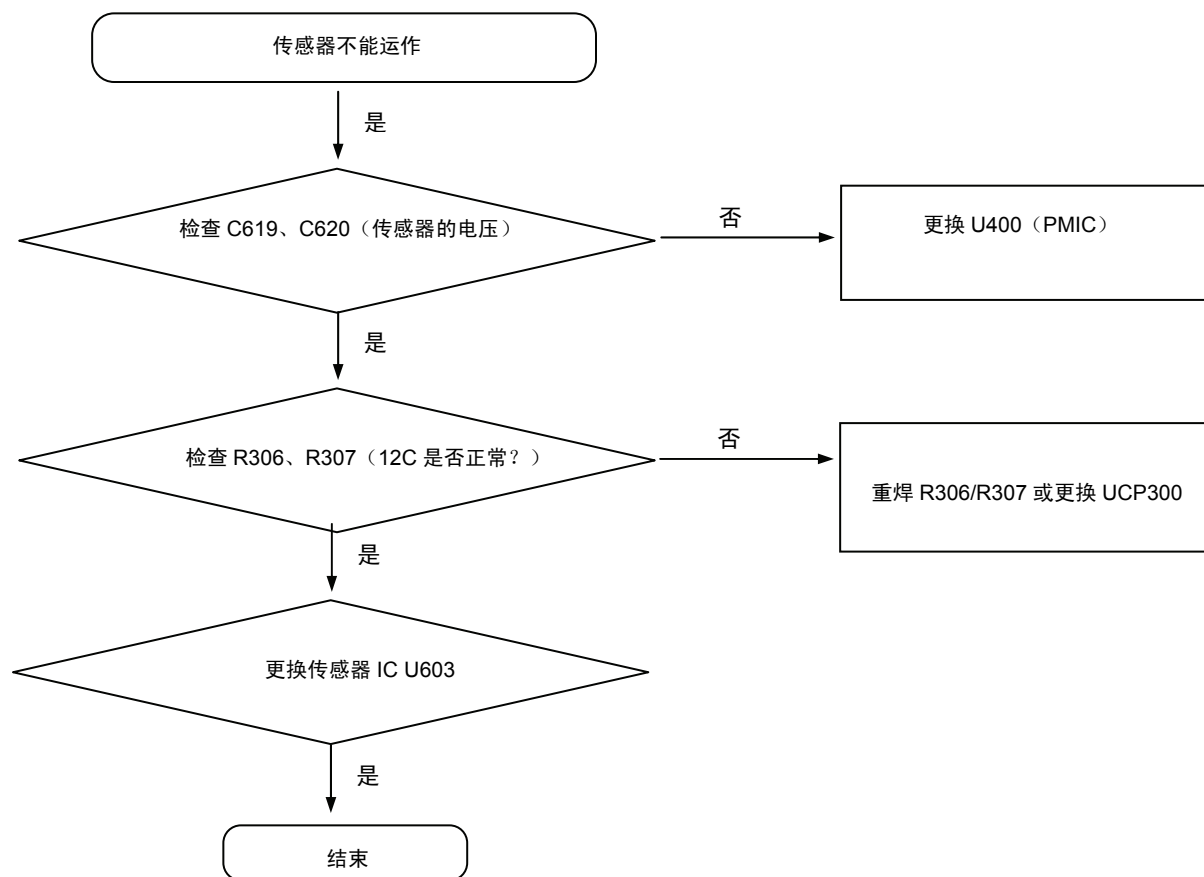


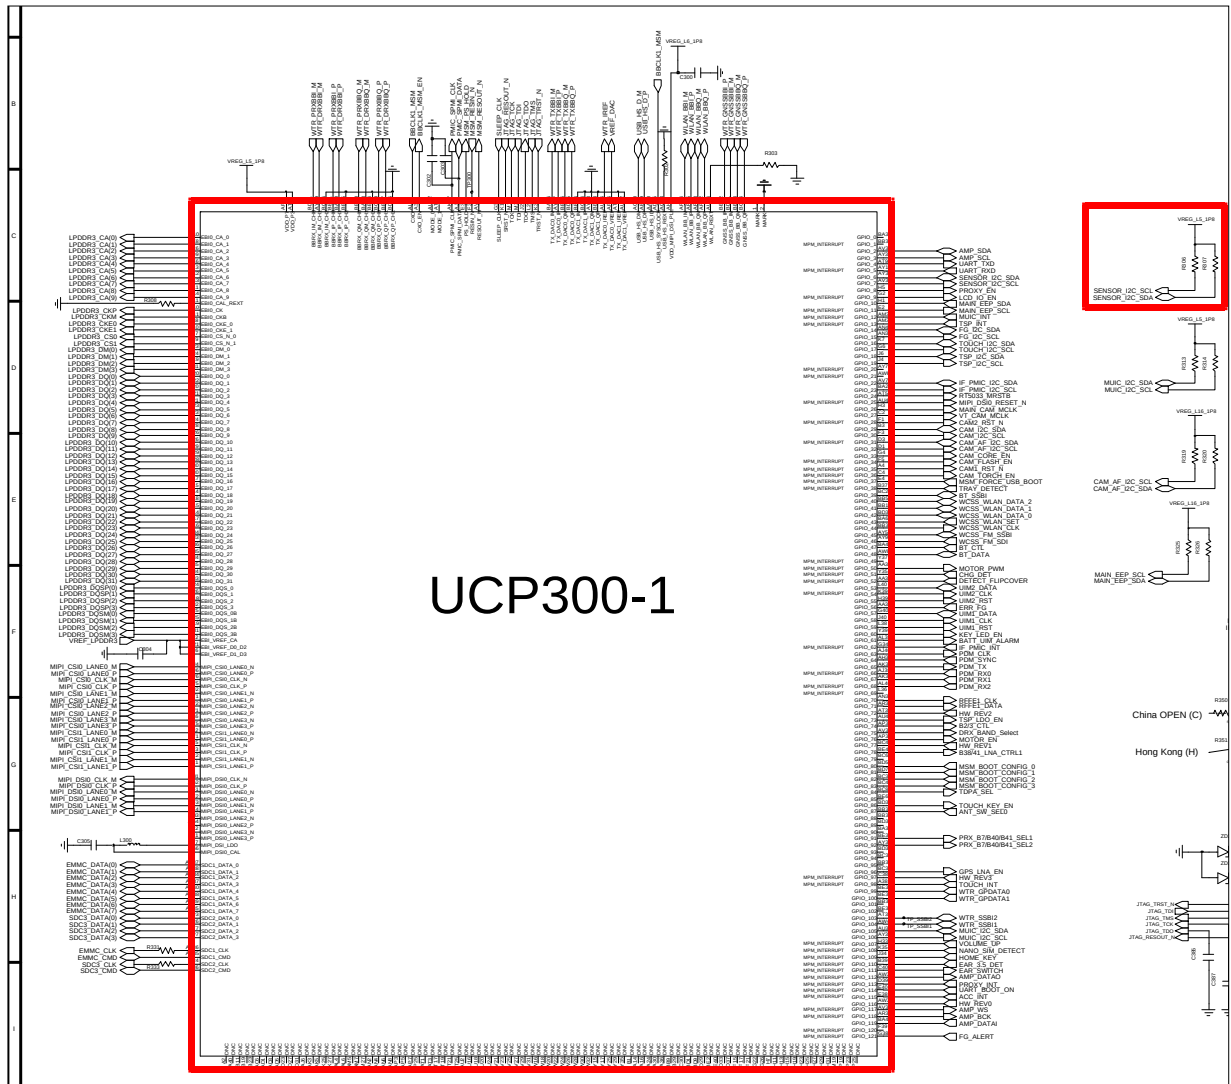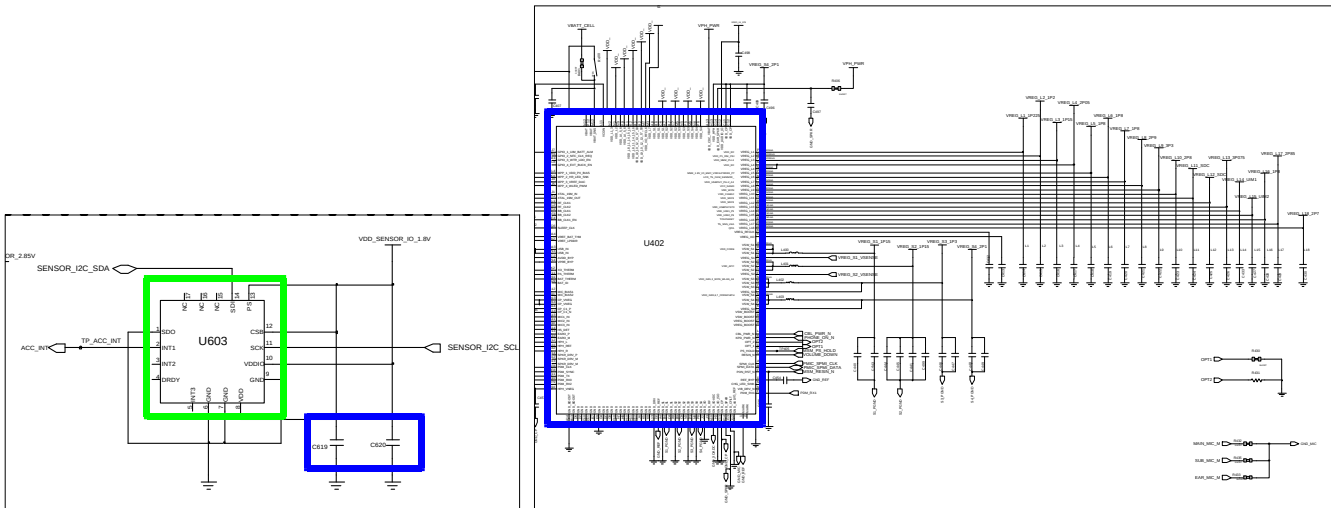

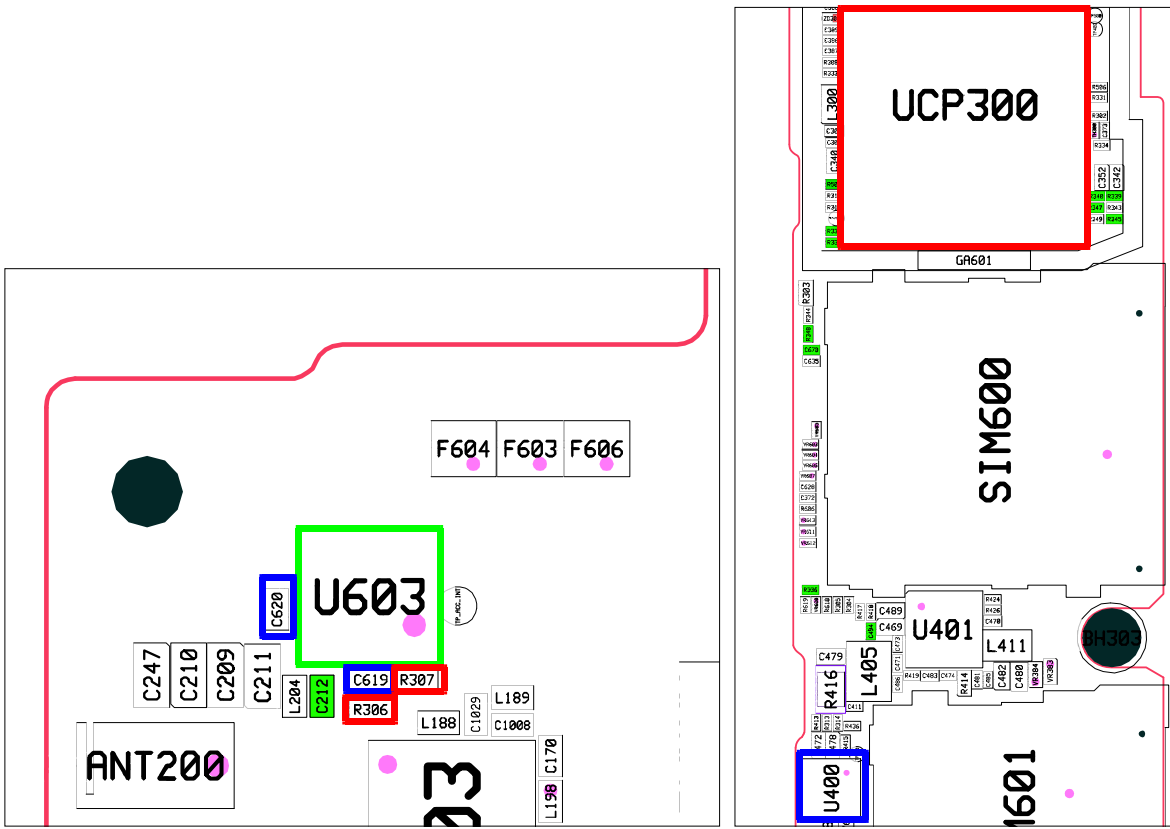


8-3-8.扬声器部分

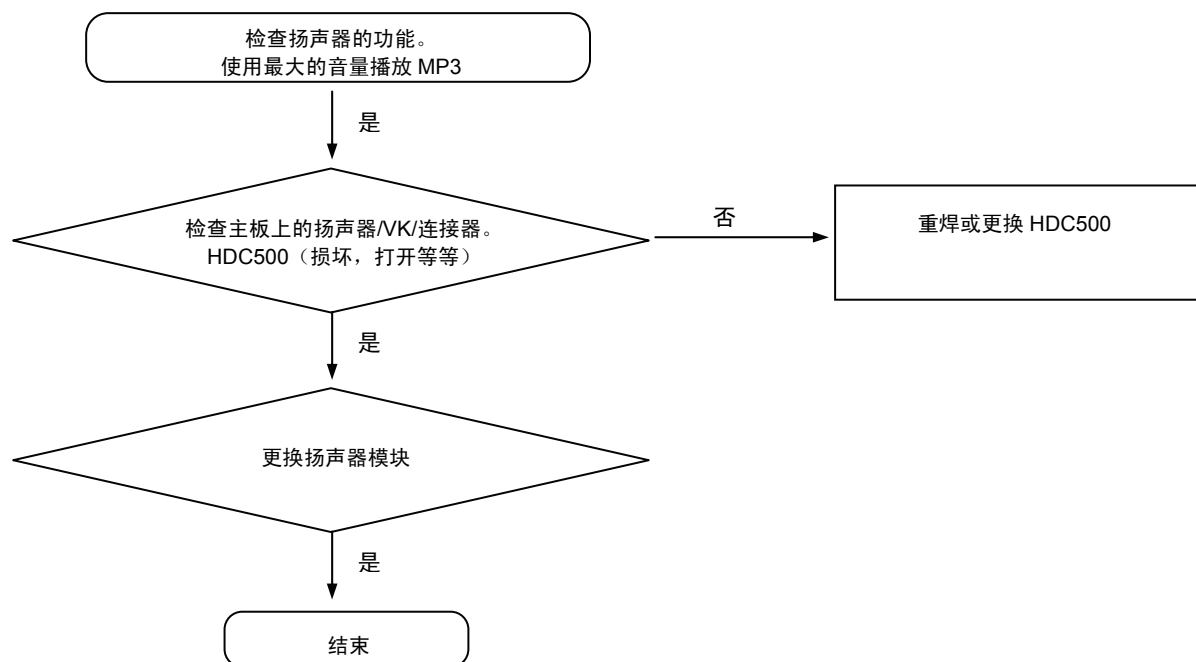


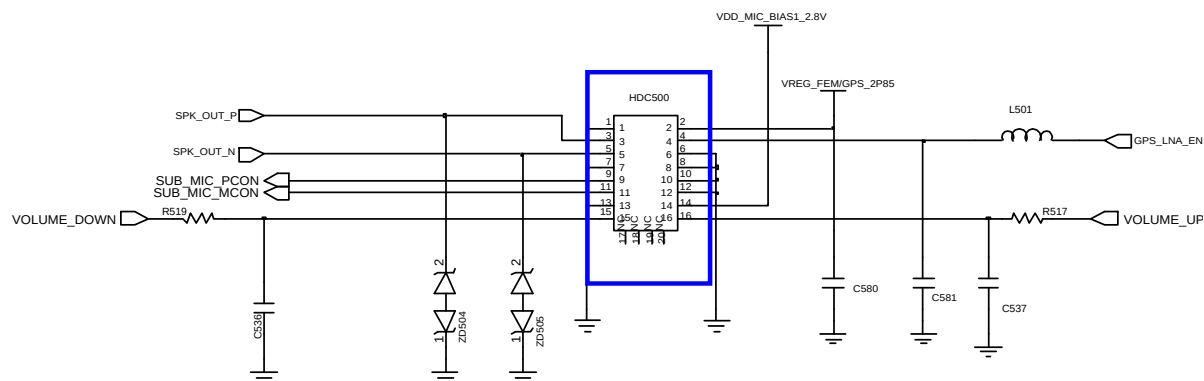


SPK / VK / Connector

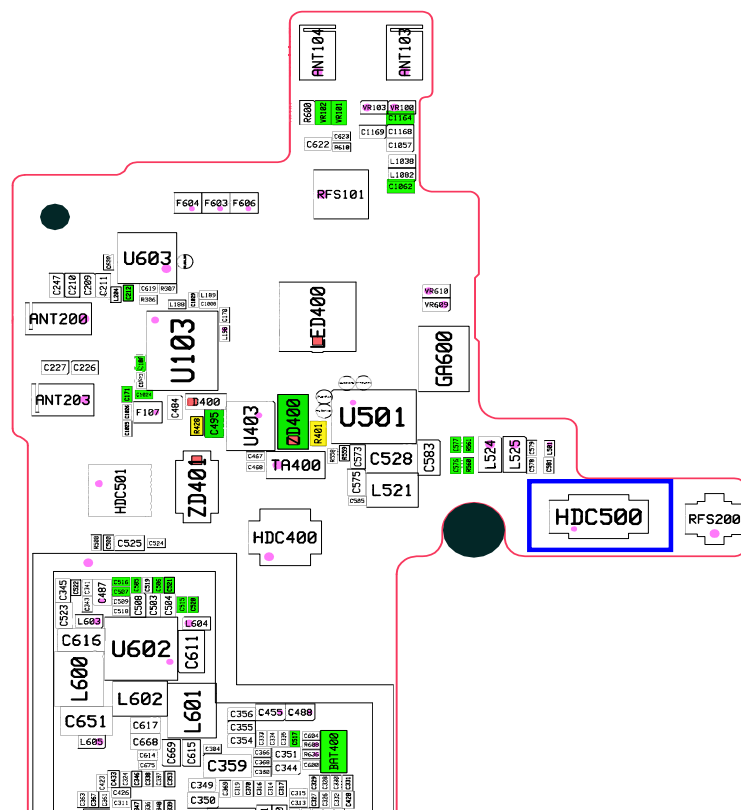


8-3-7.接收器部分

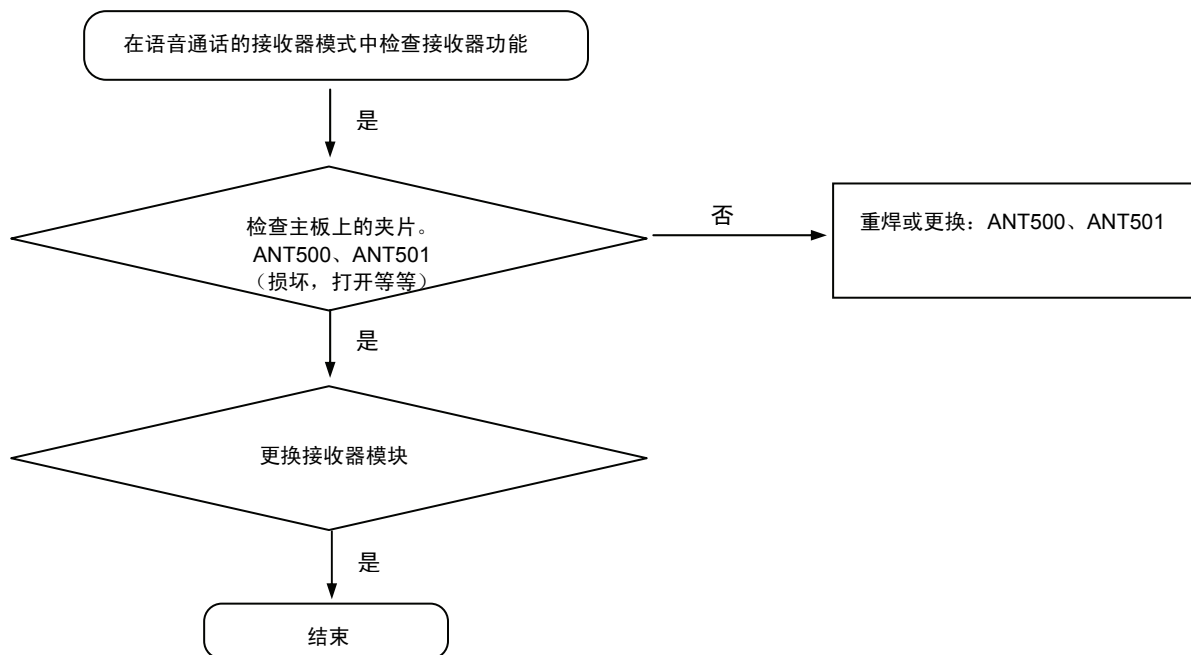


8-3-8.耳机插口

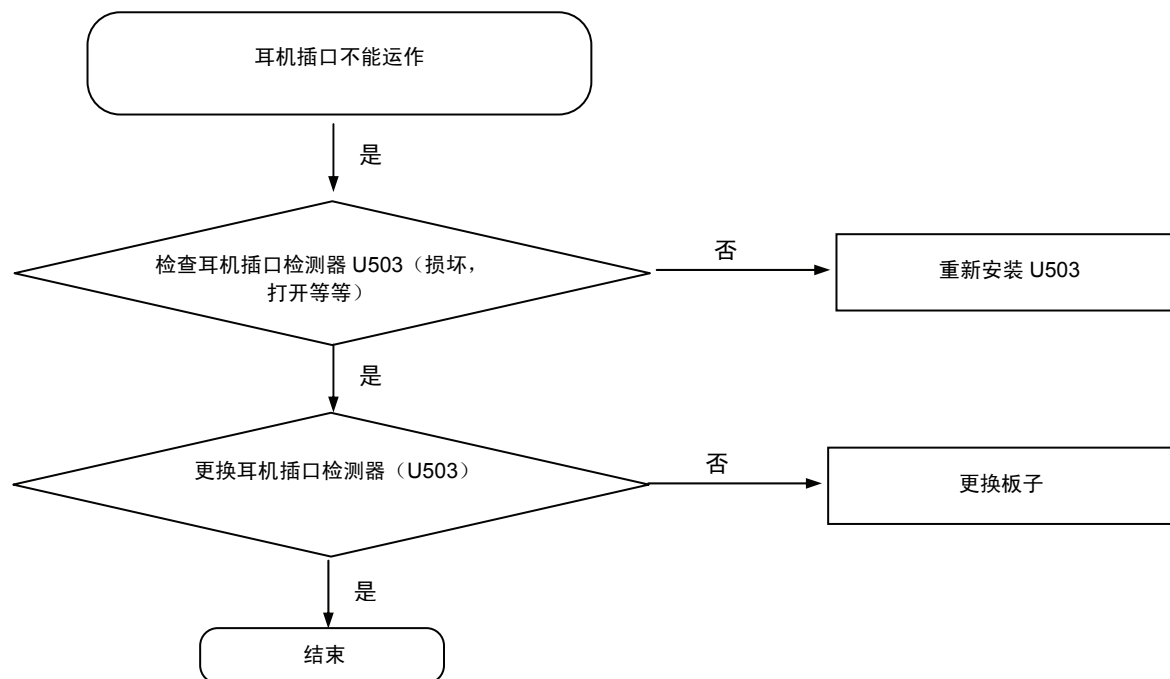


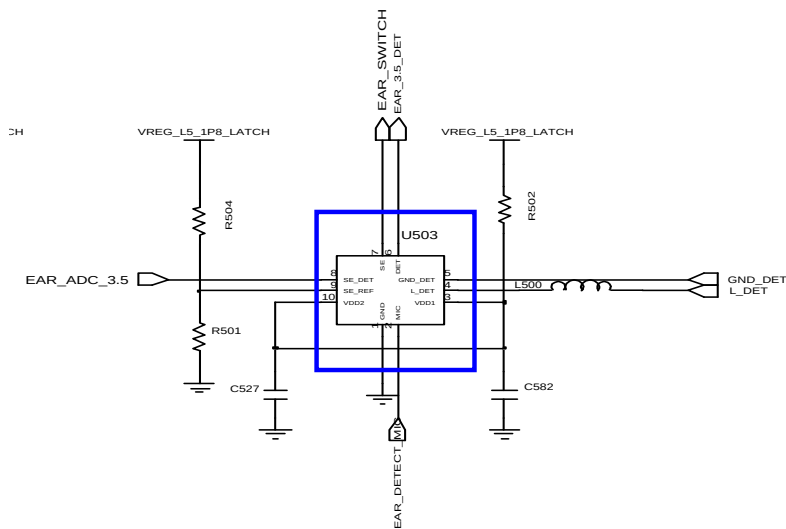


Earphone Detect

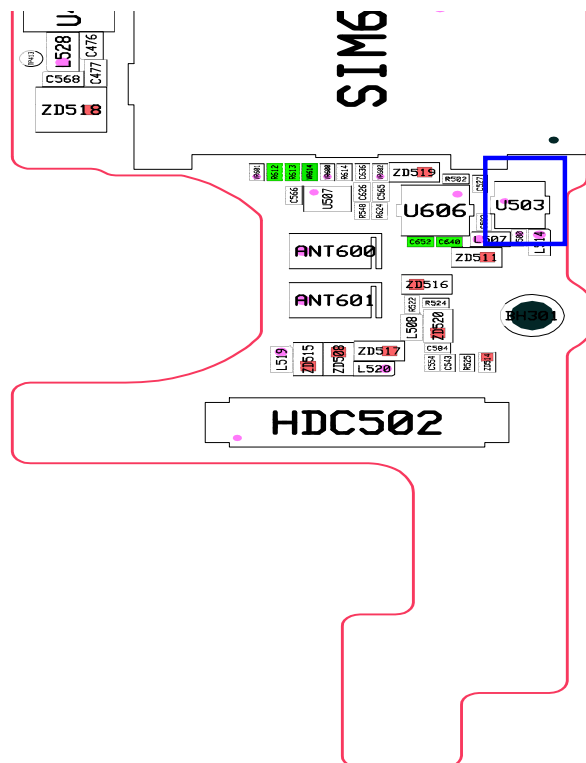


8-3-9.电机

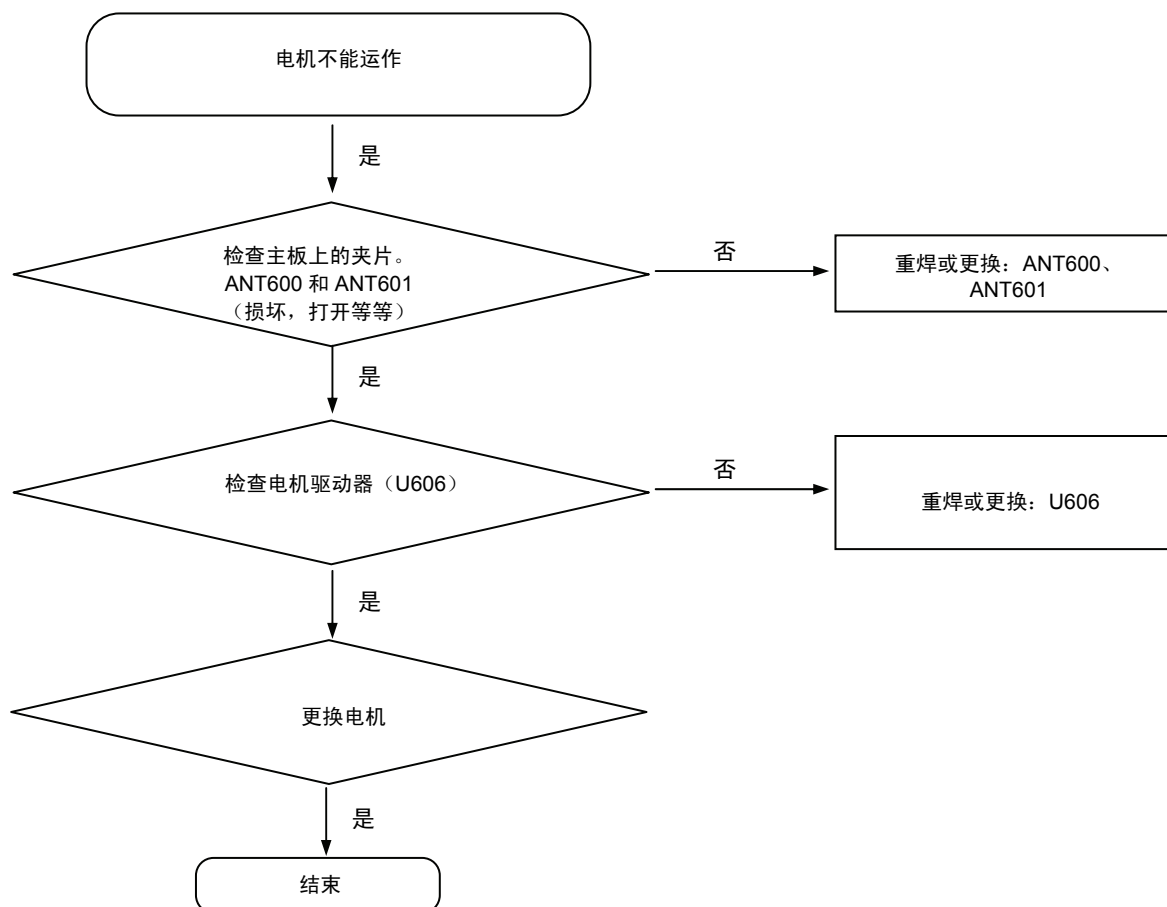


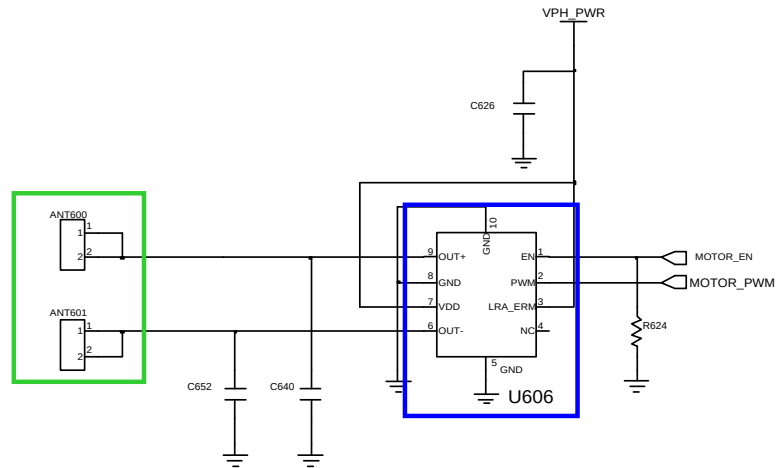



Haptic Driver

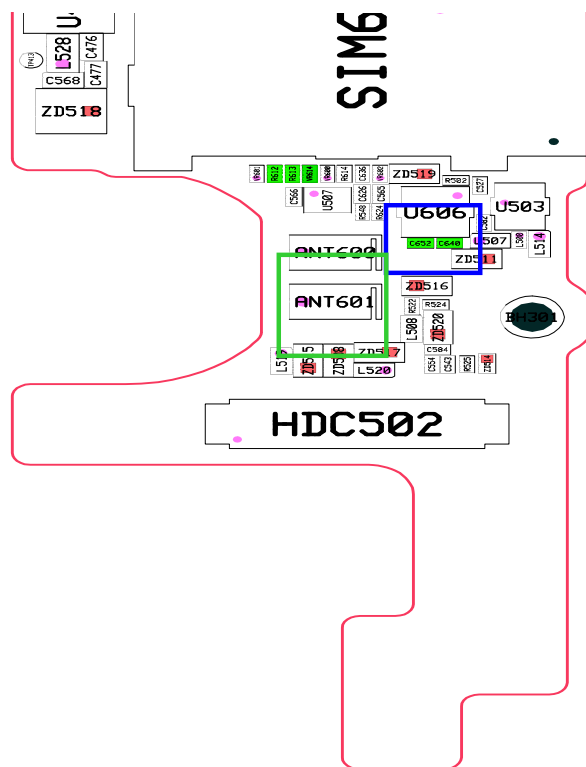


8-3-10.BT/WIFI

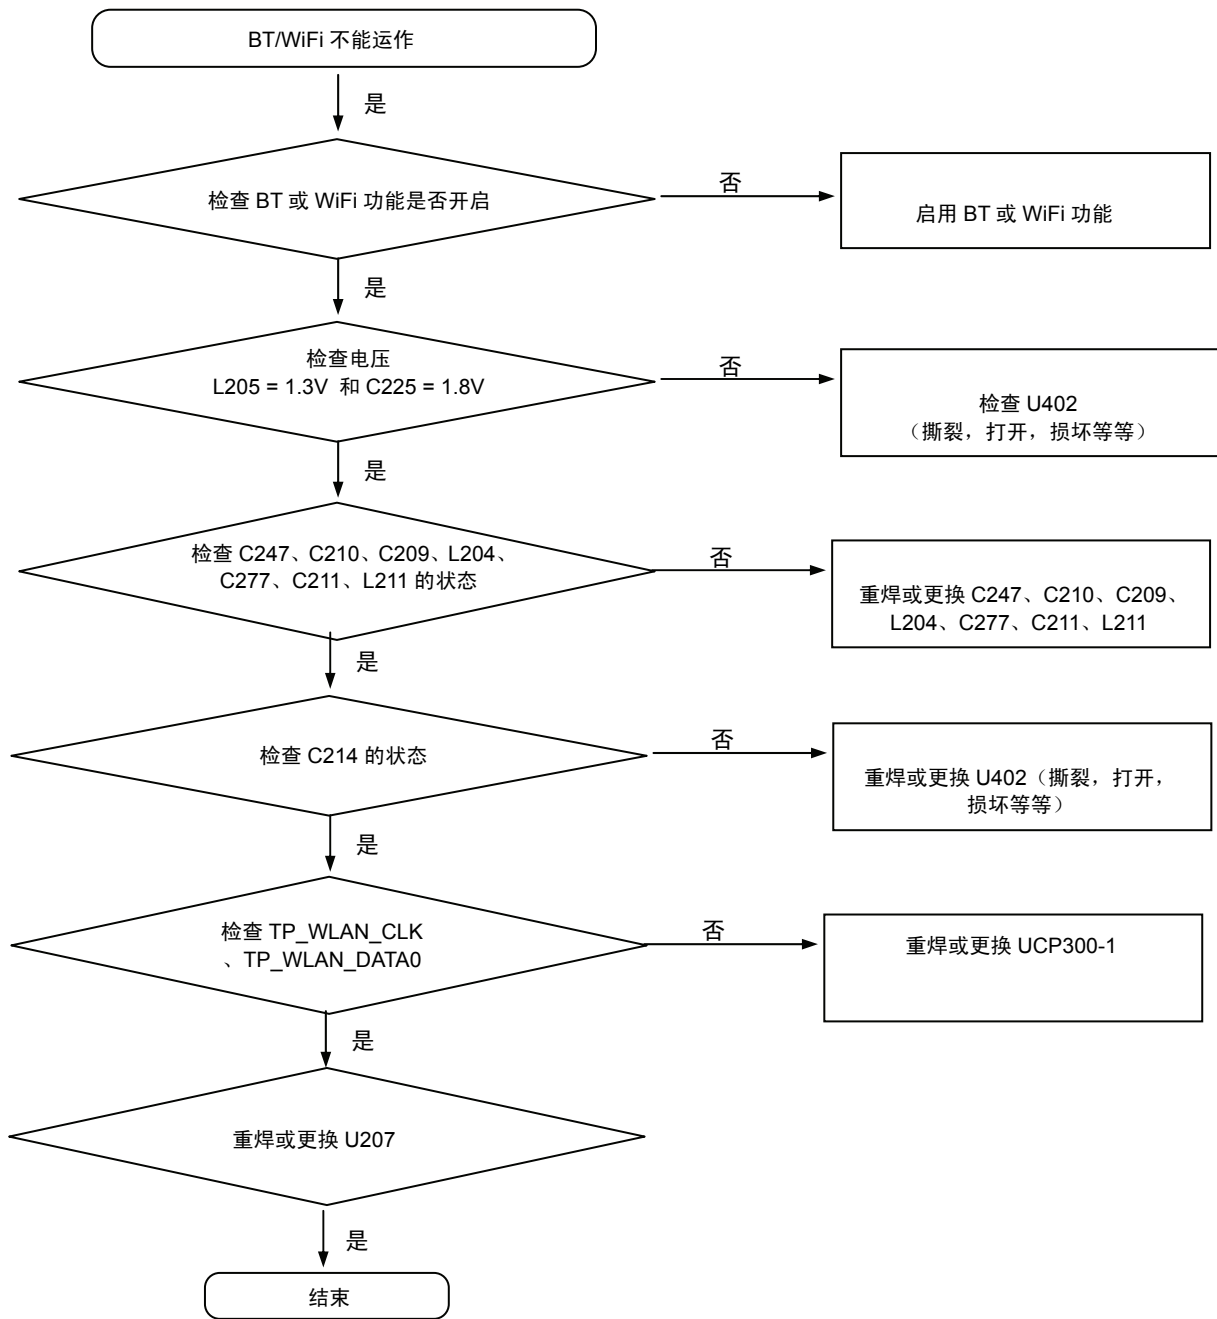


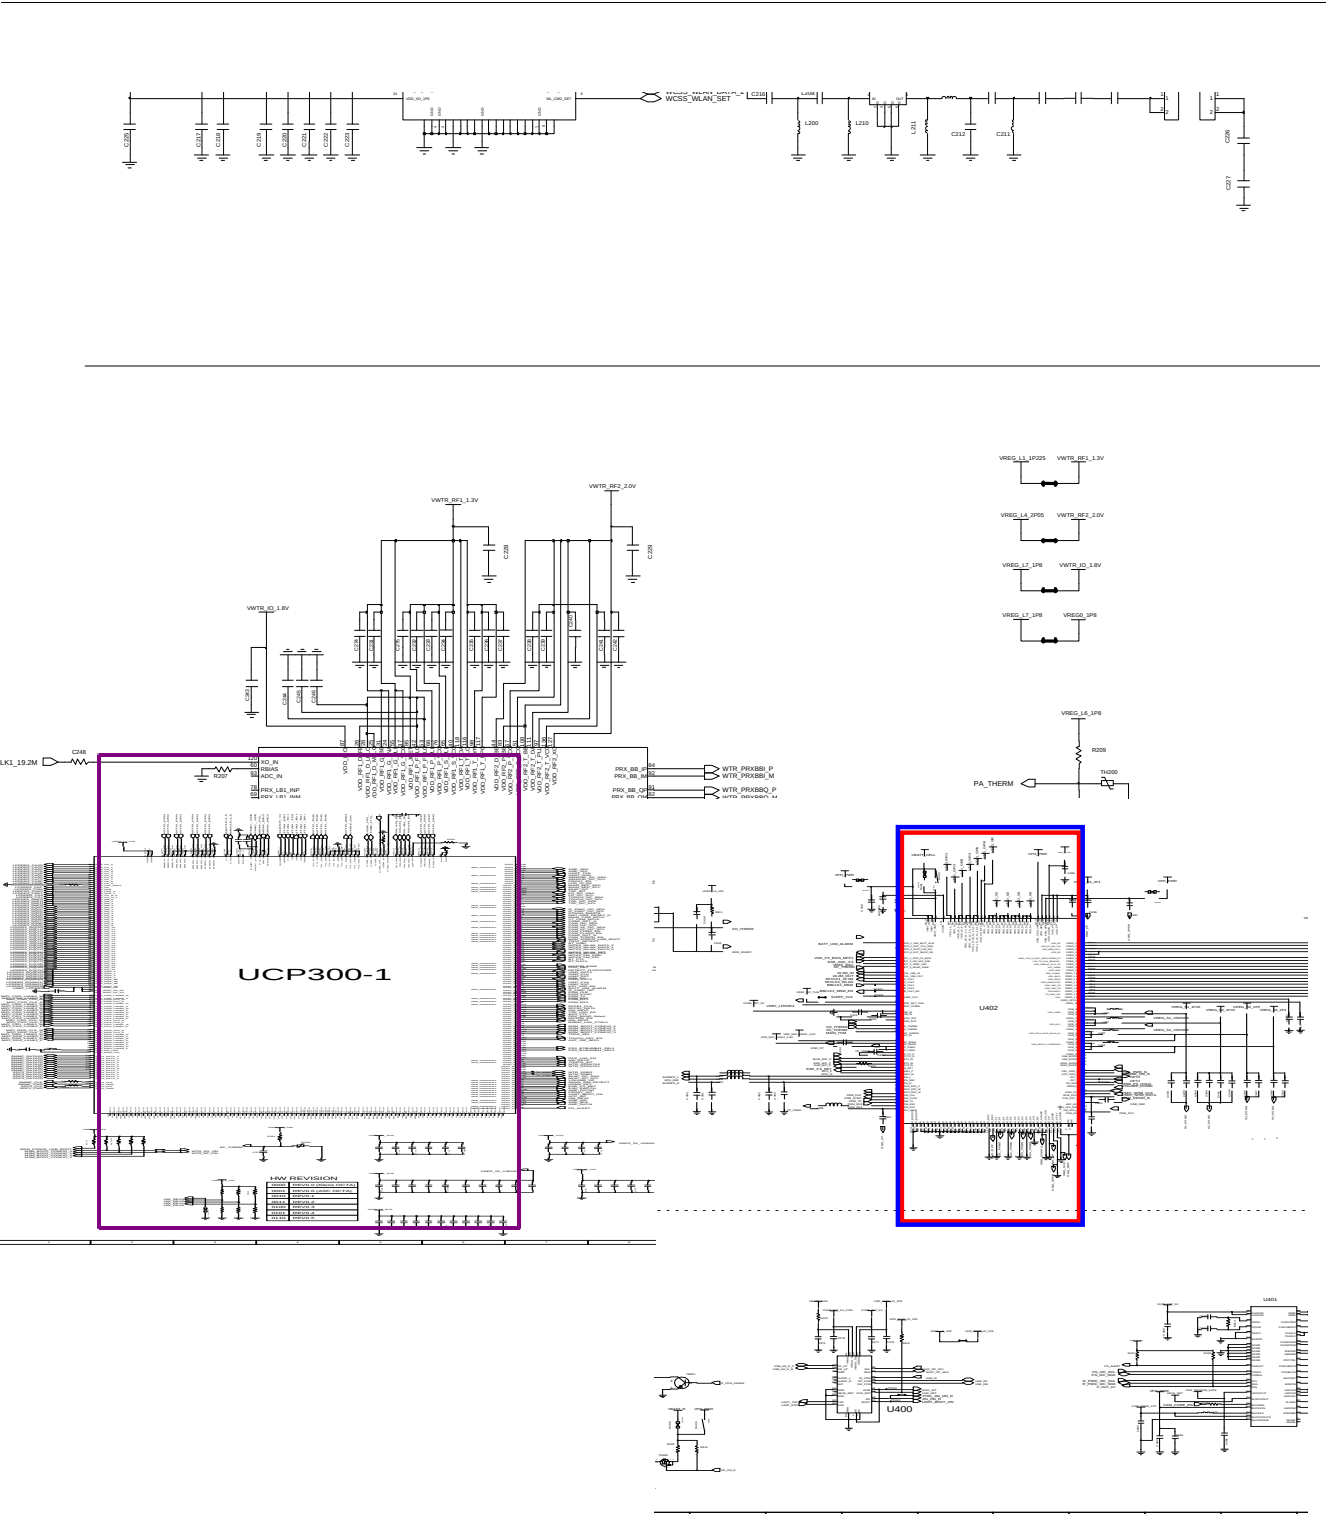


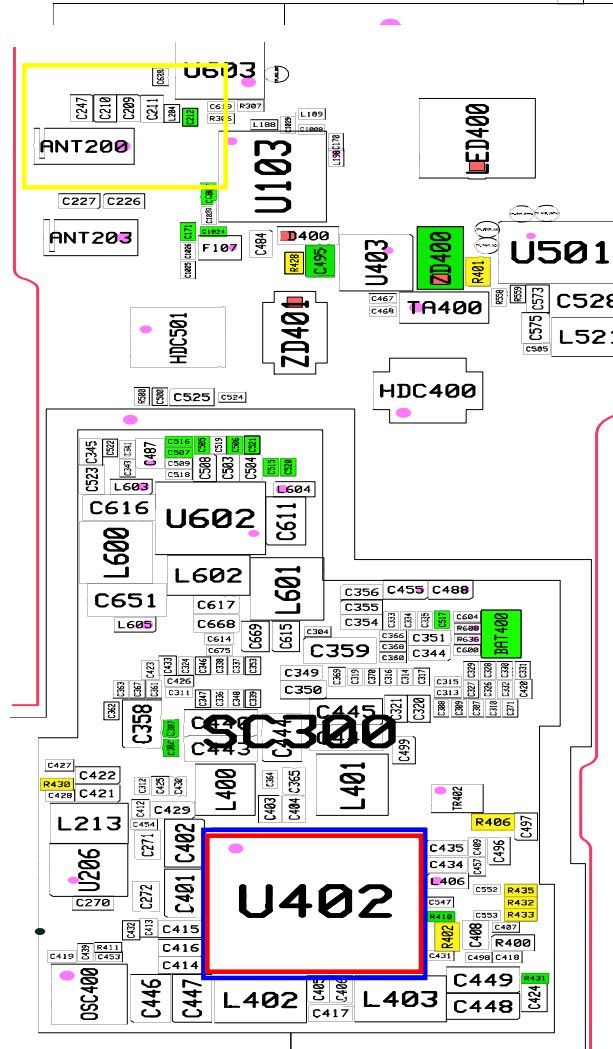


8-4-11.GPS


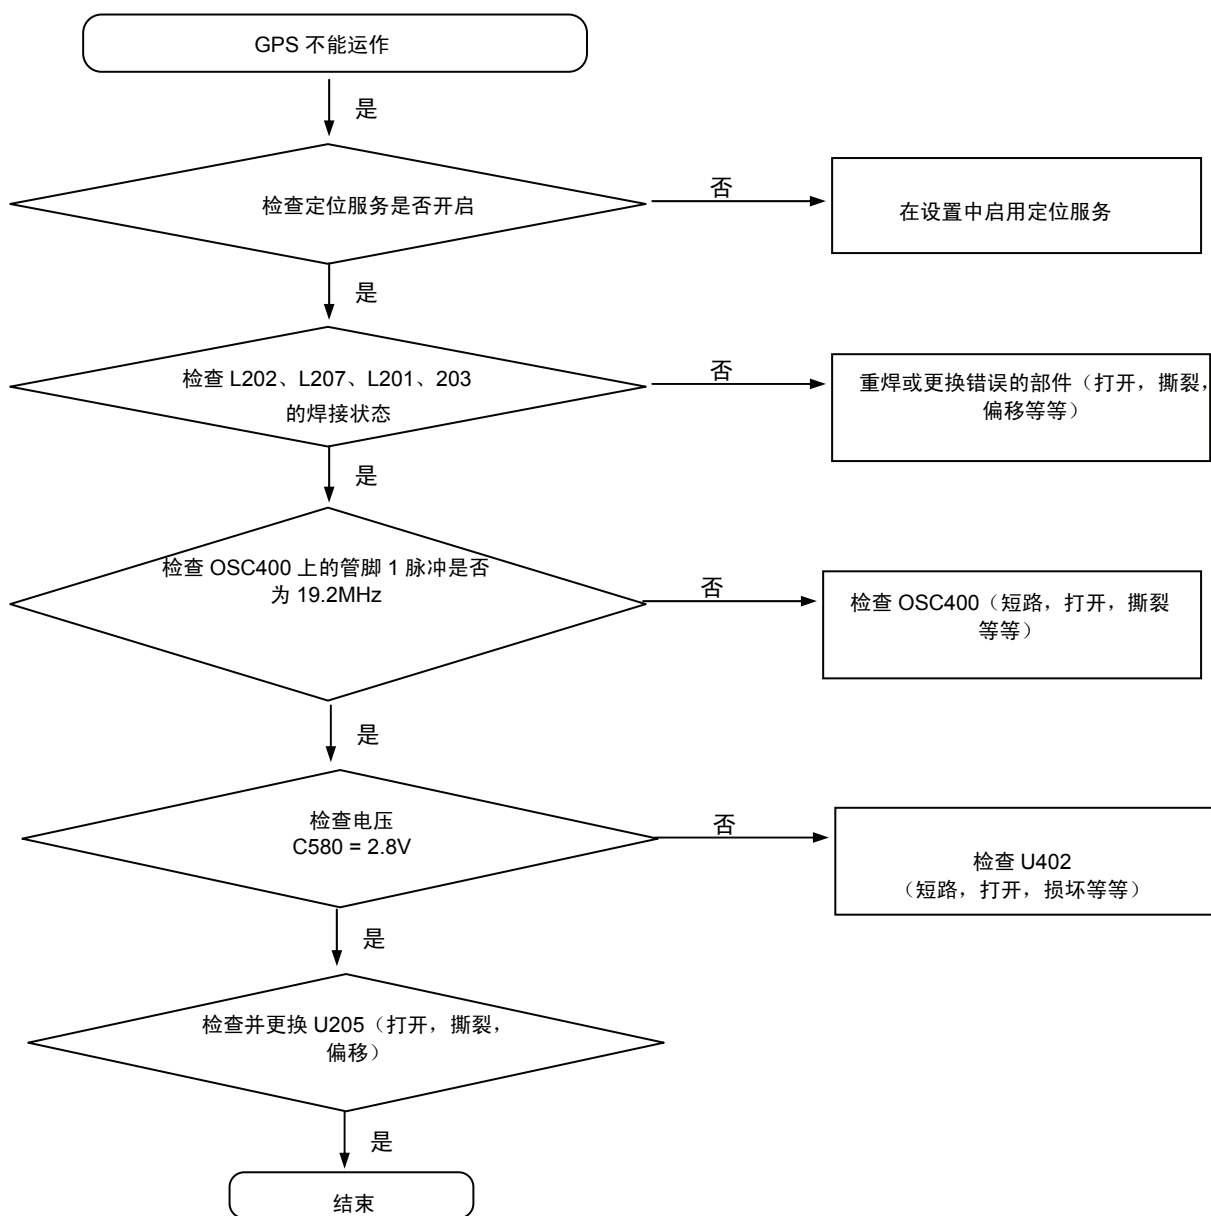



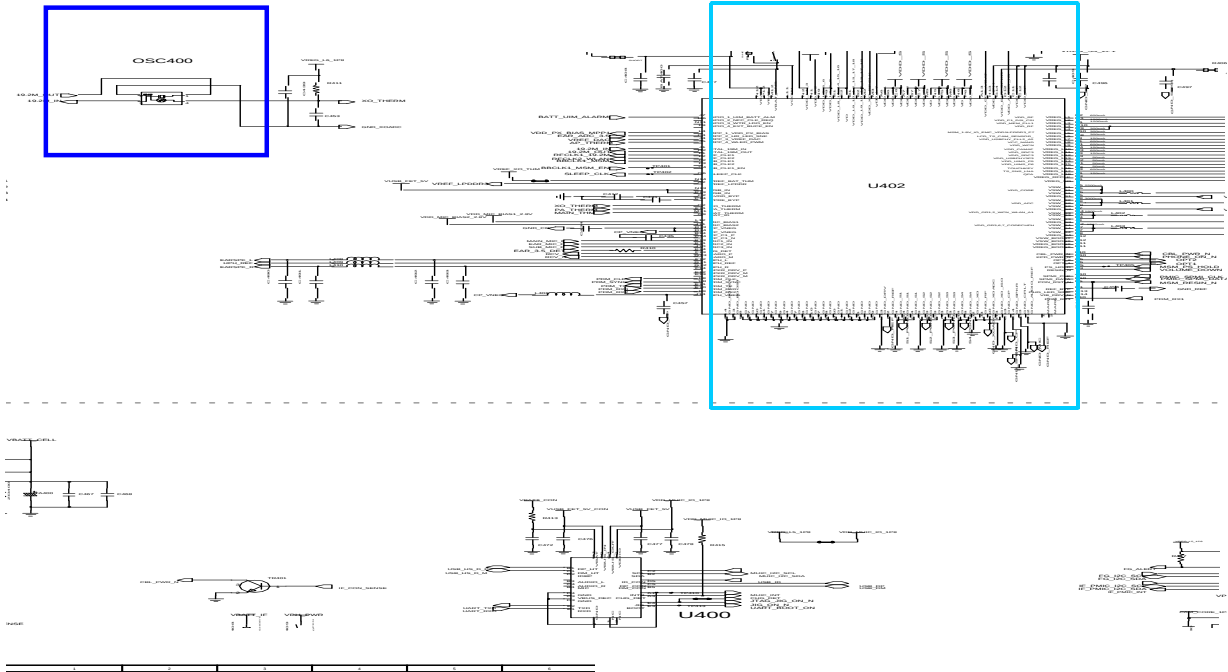


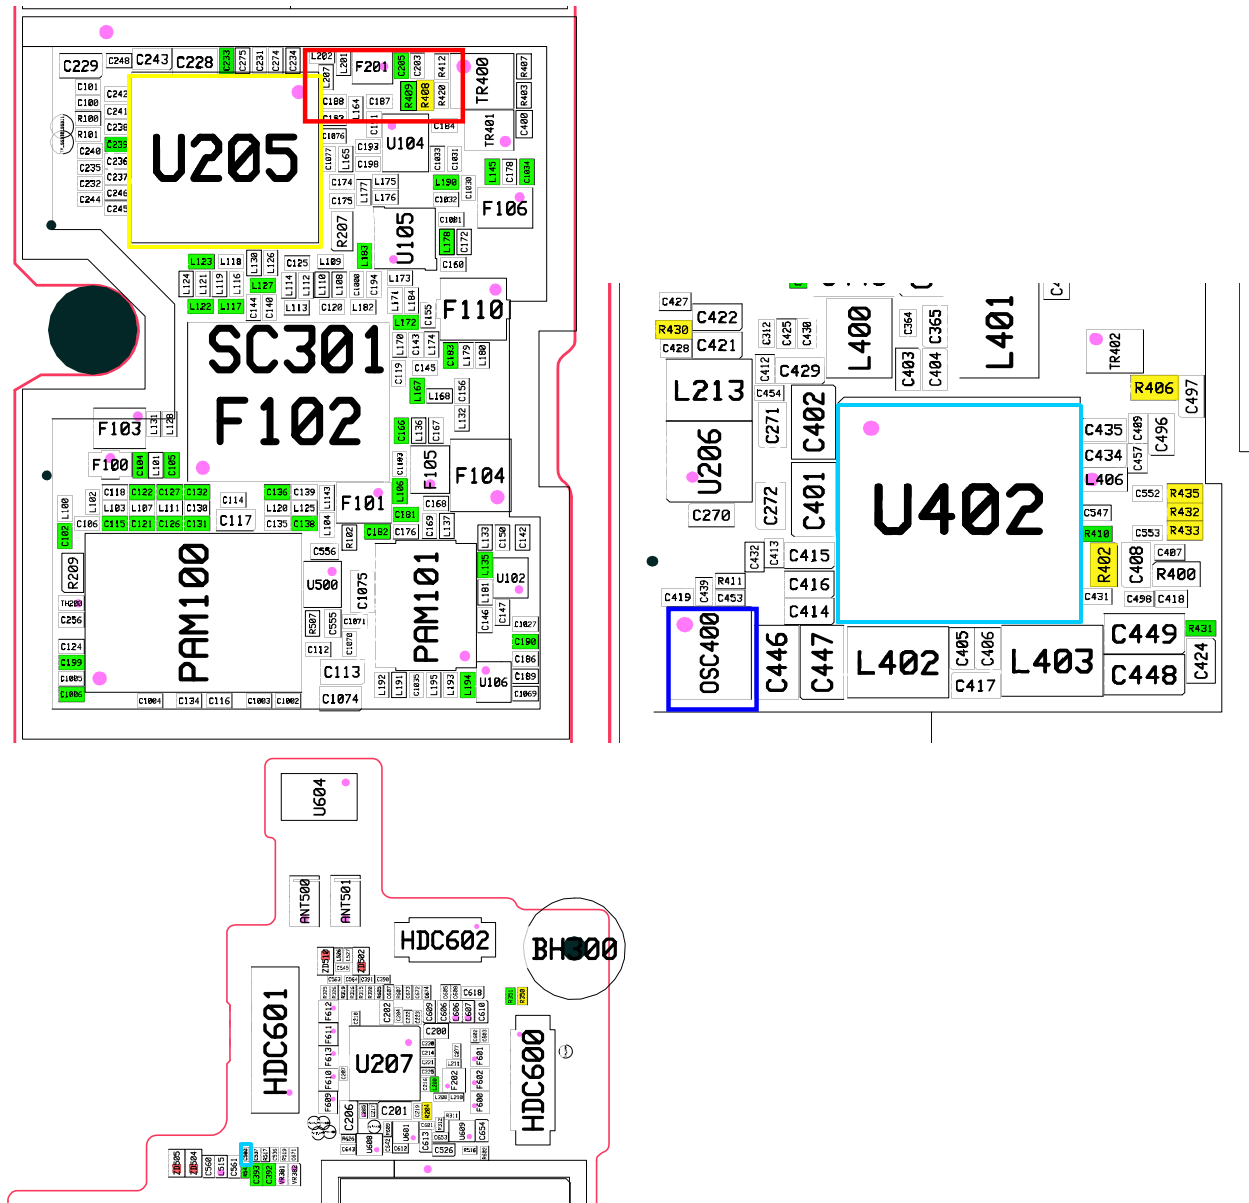


8-3-12.液晶显示屏



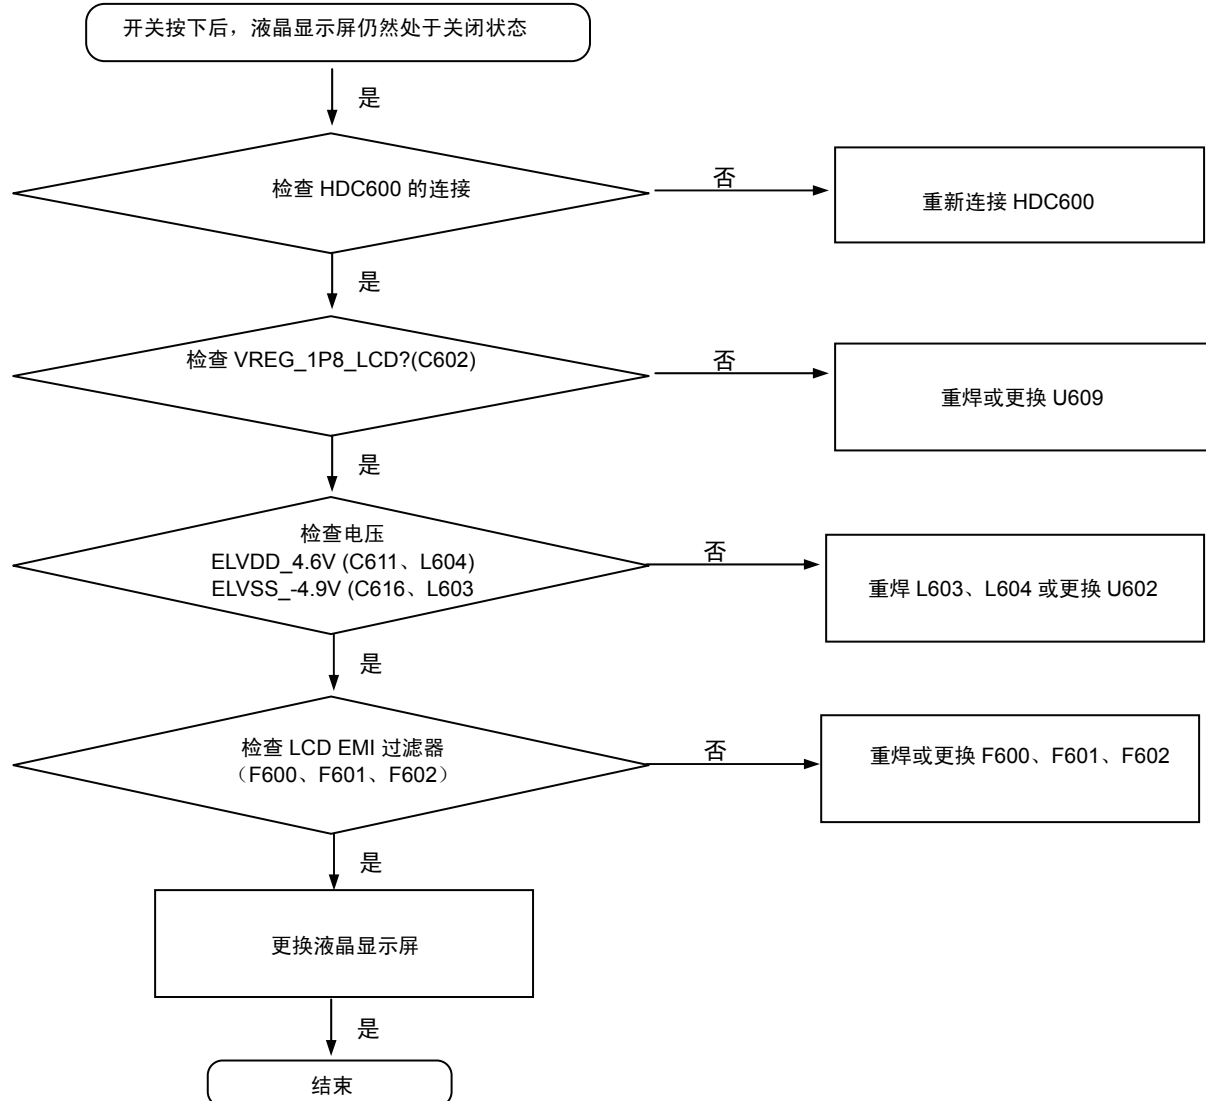


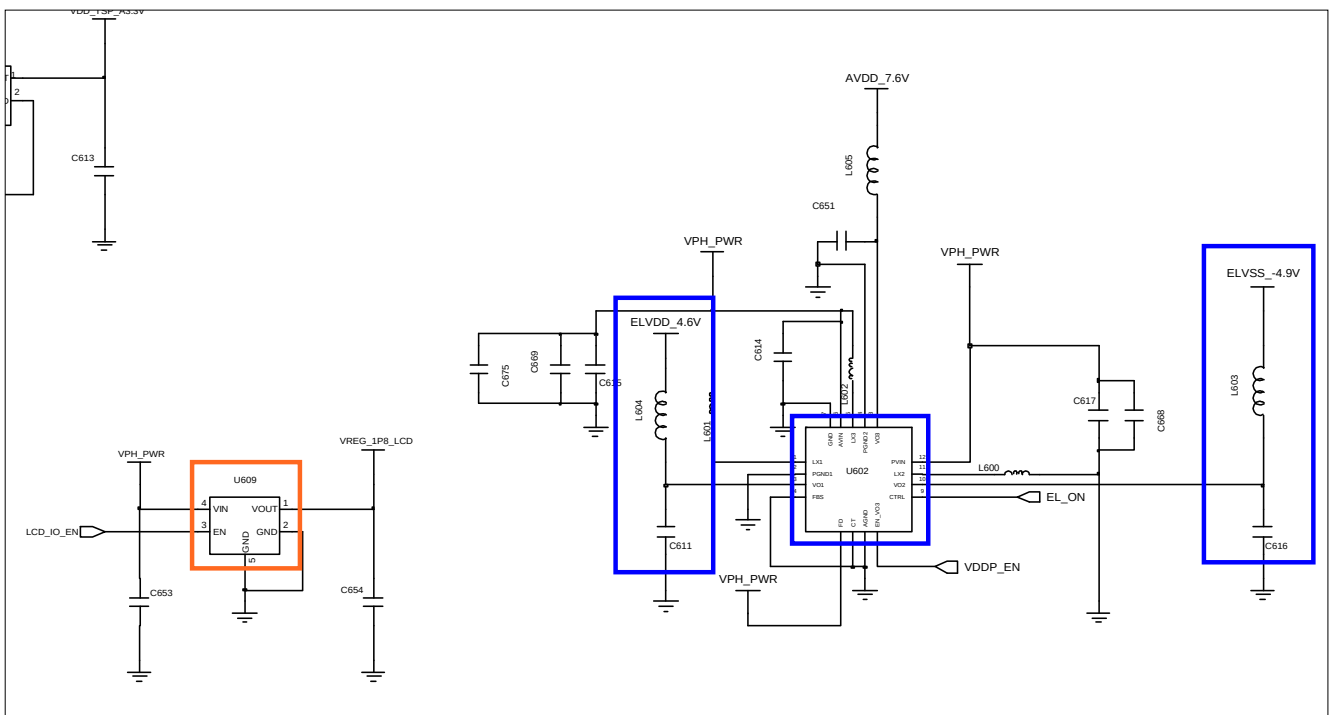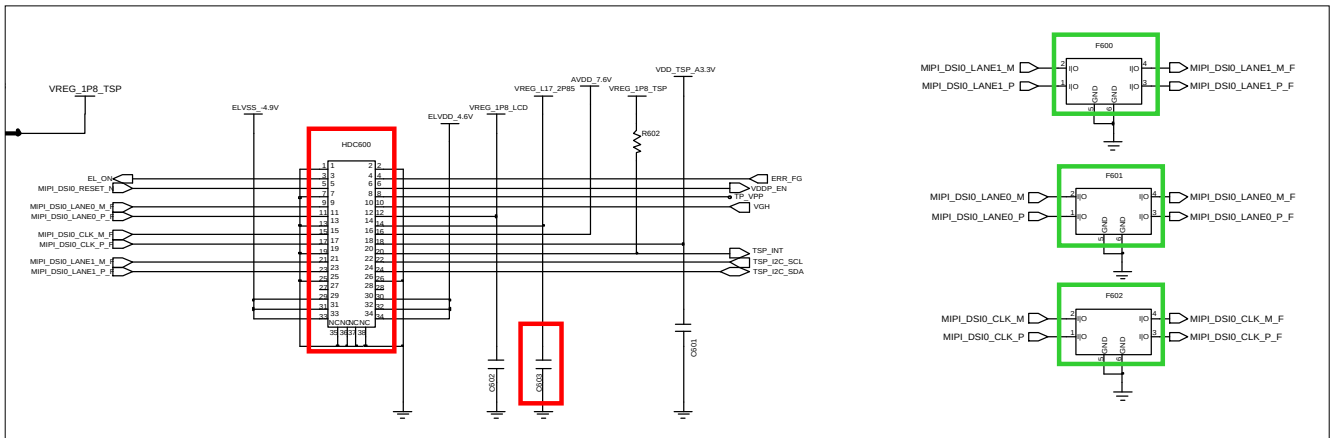

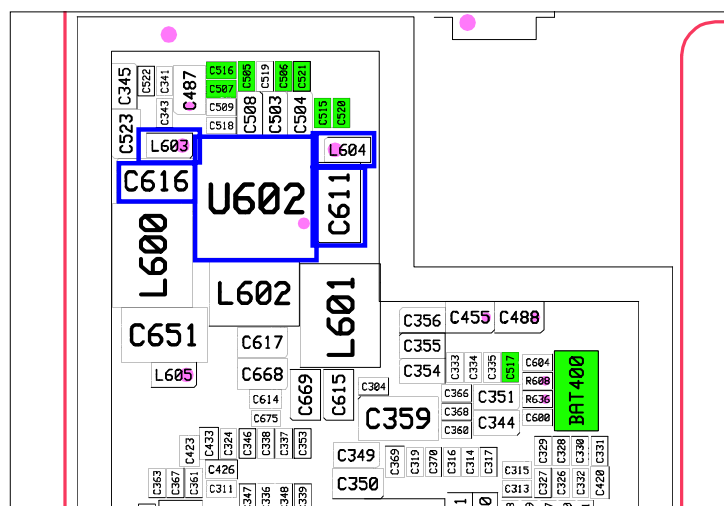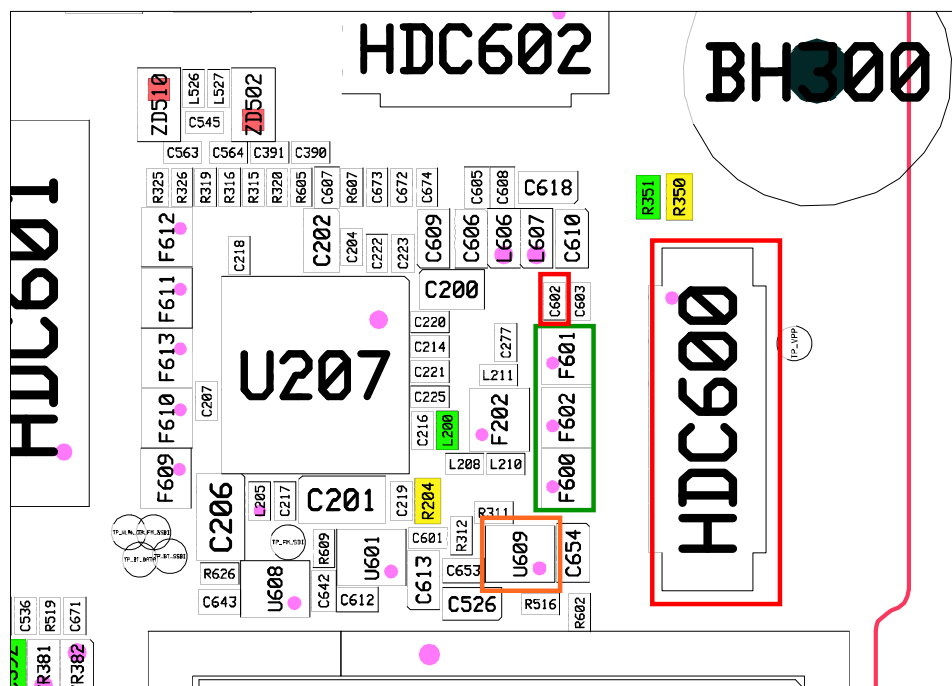




8-3-13.13M 摄像头

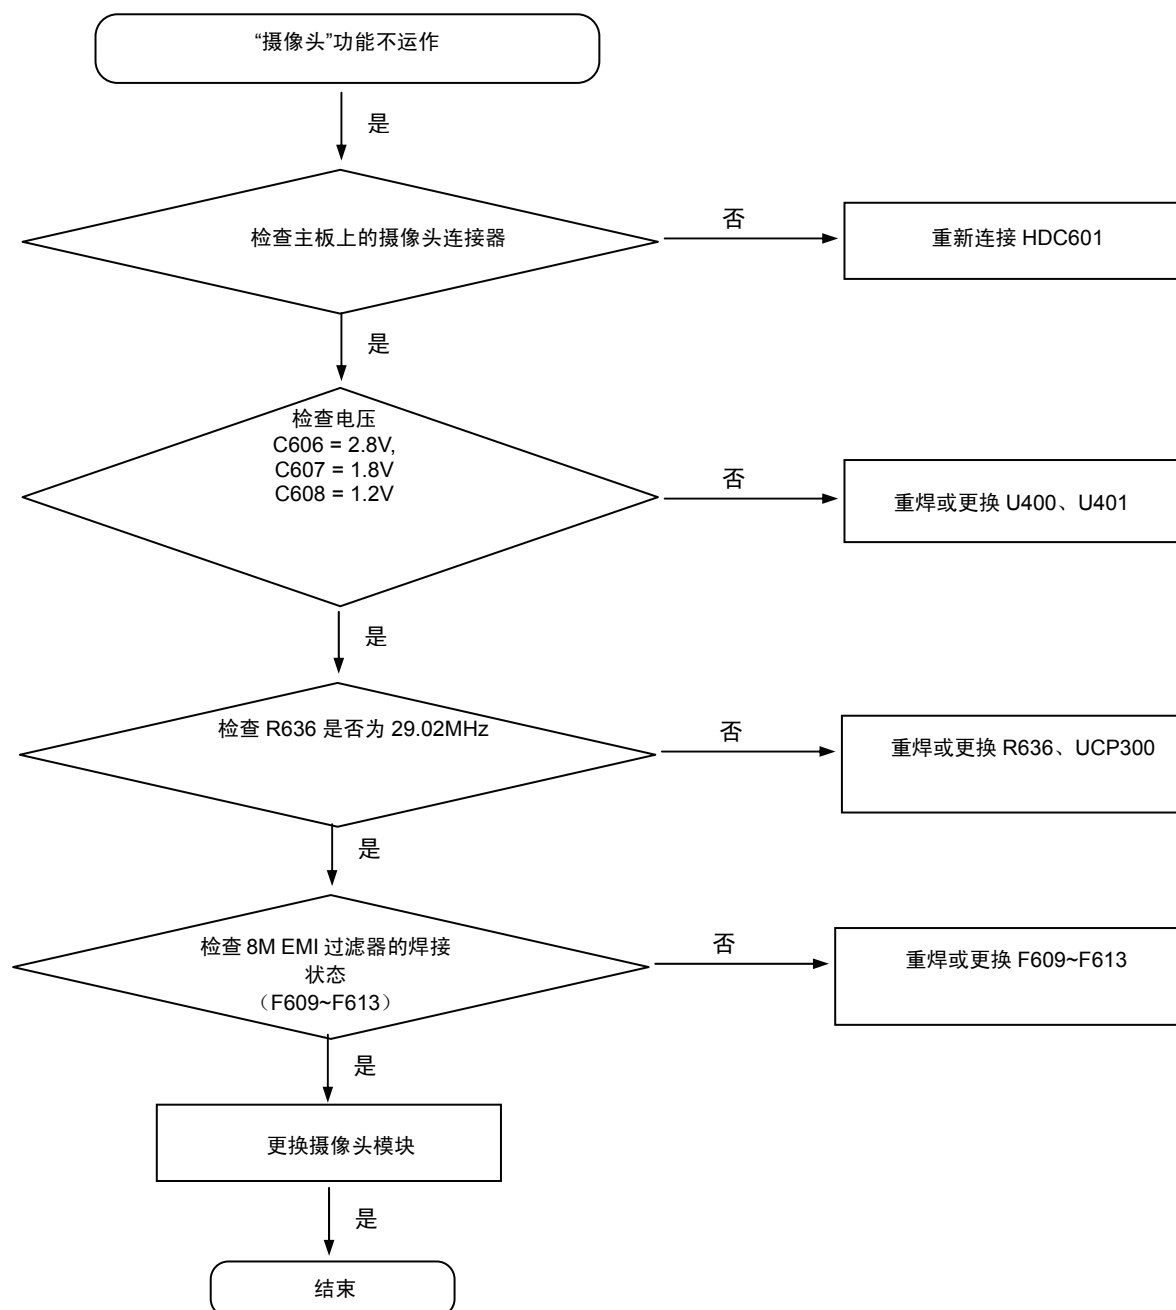


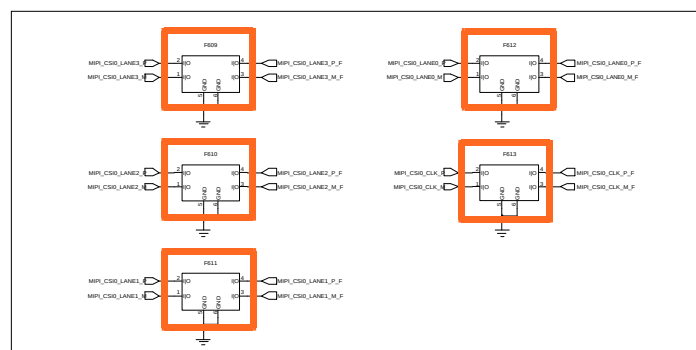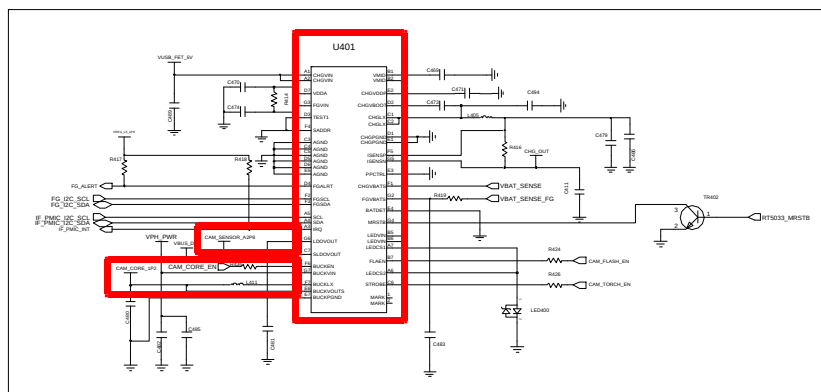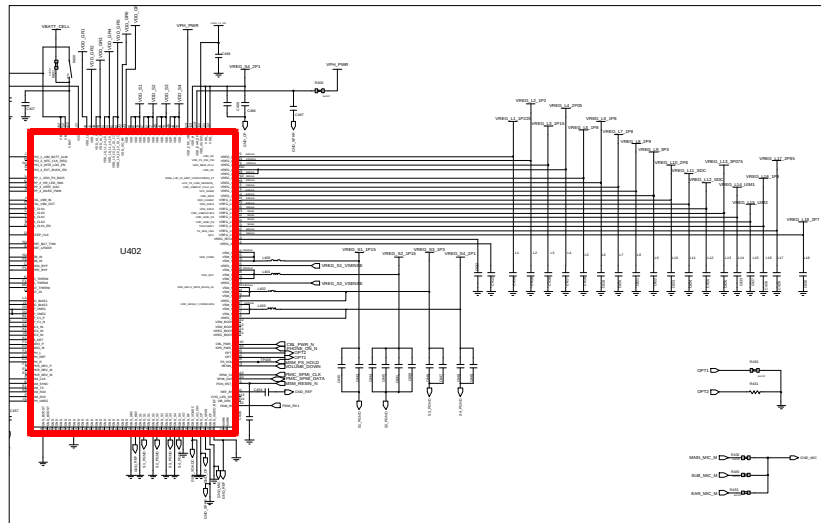


8-3-14.VT 摄像头

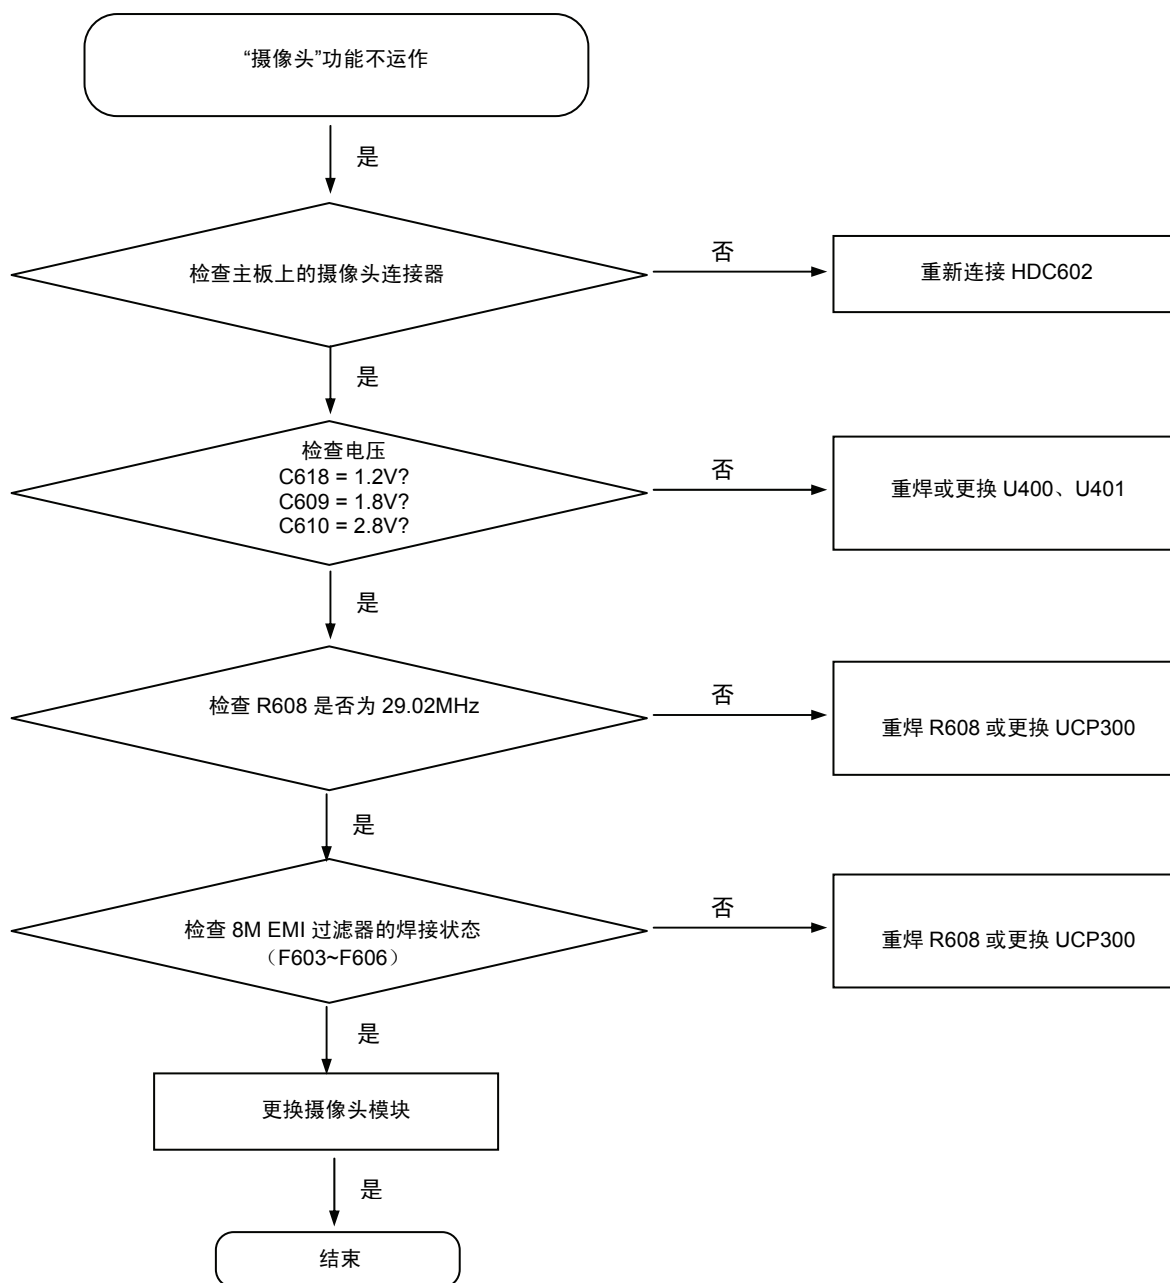


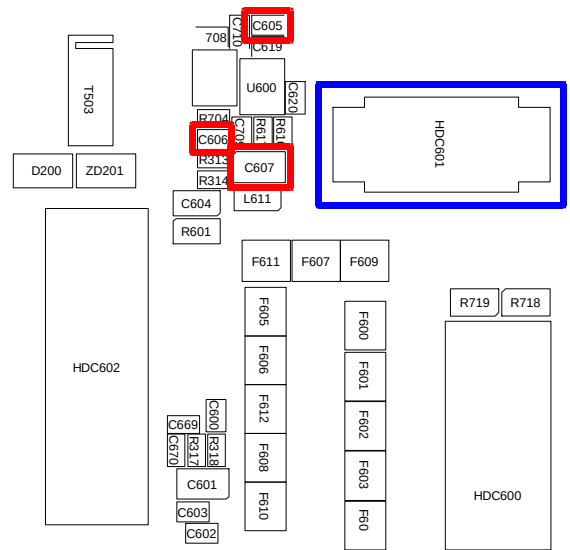




8-3-15.TSP

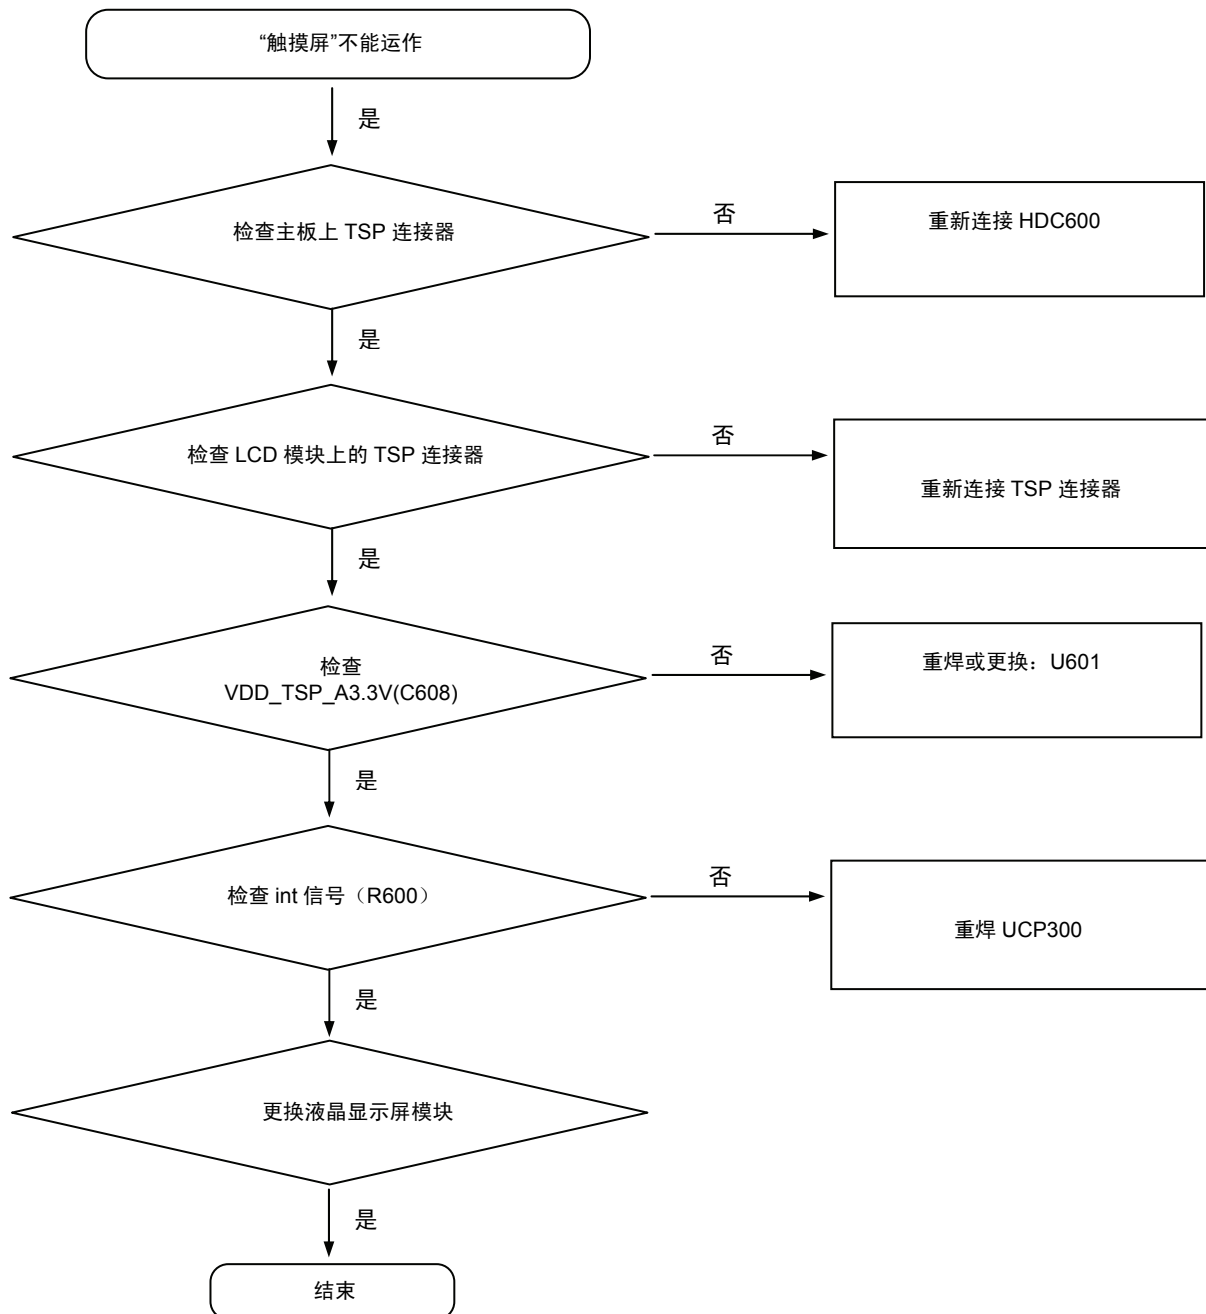


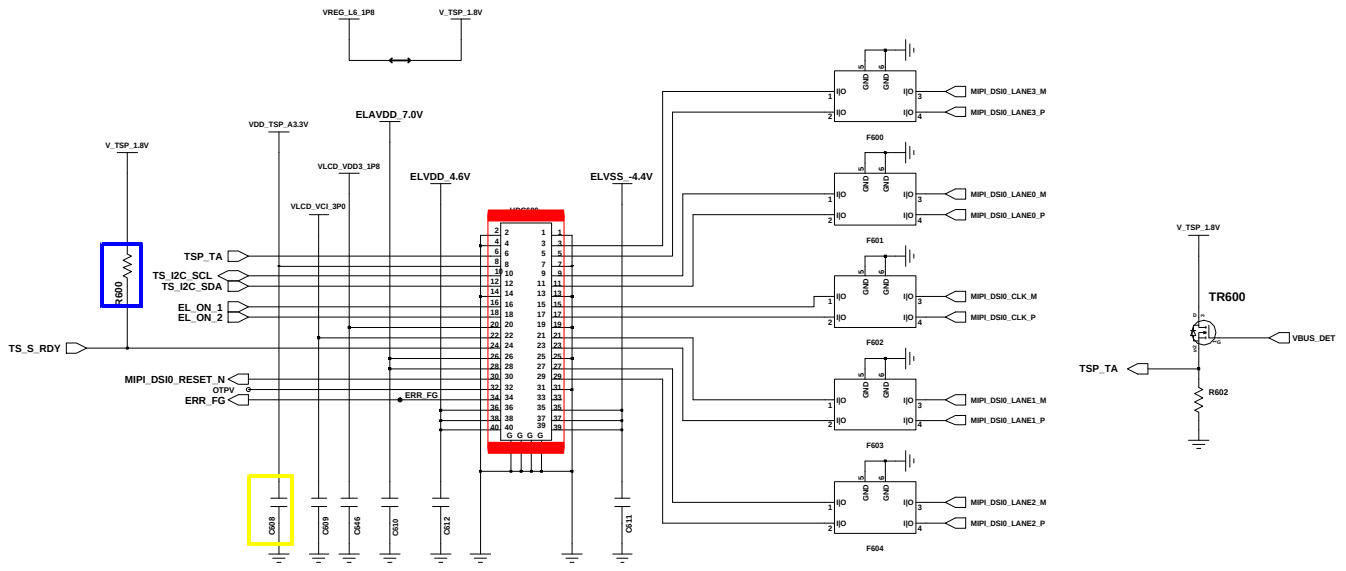



OCTA CONN

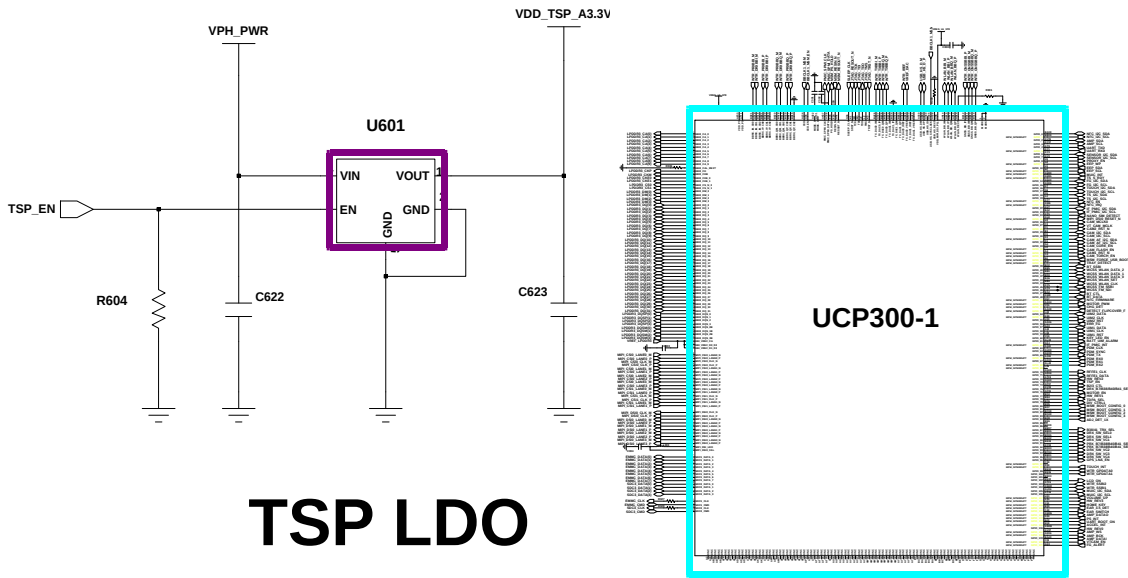


TSP LDO

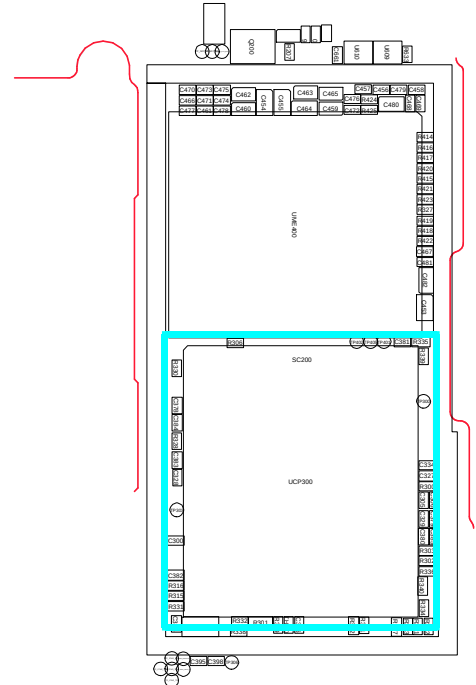


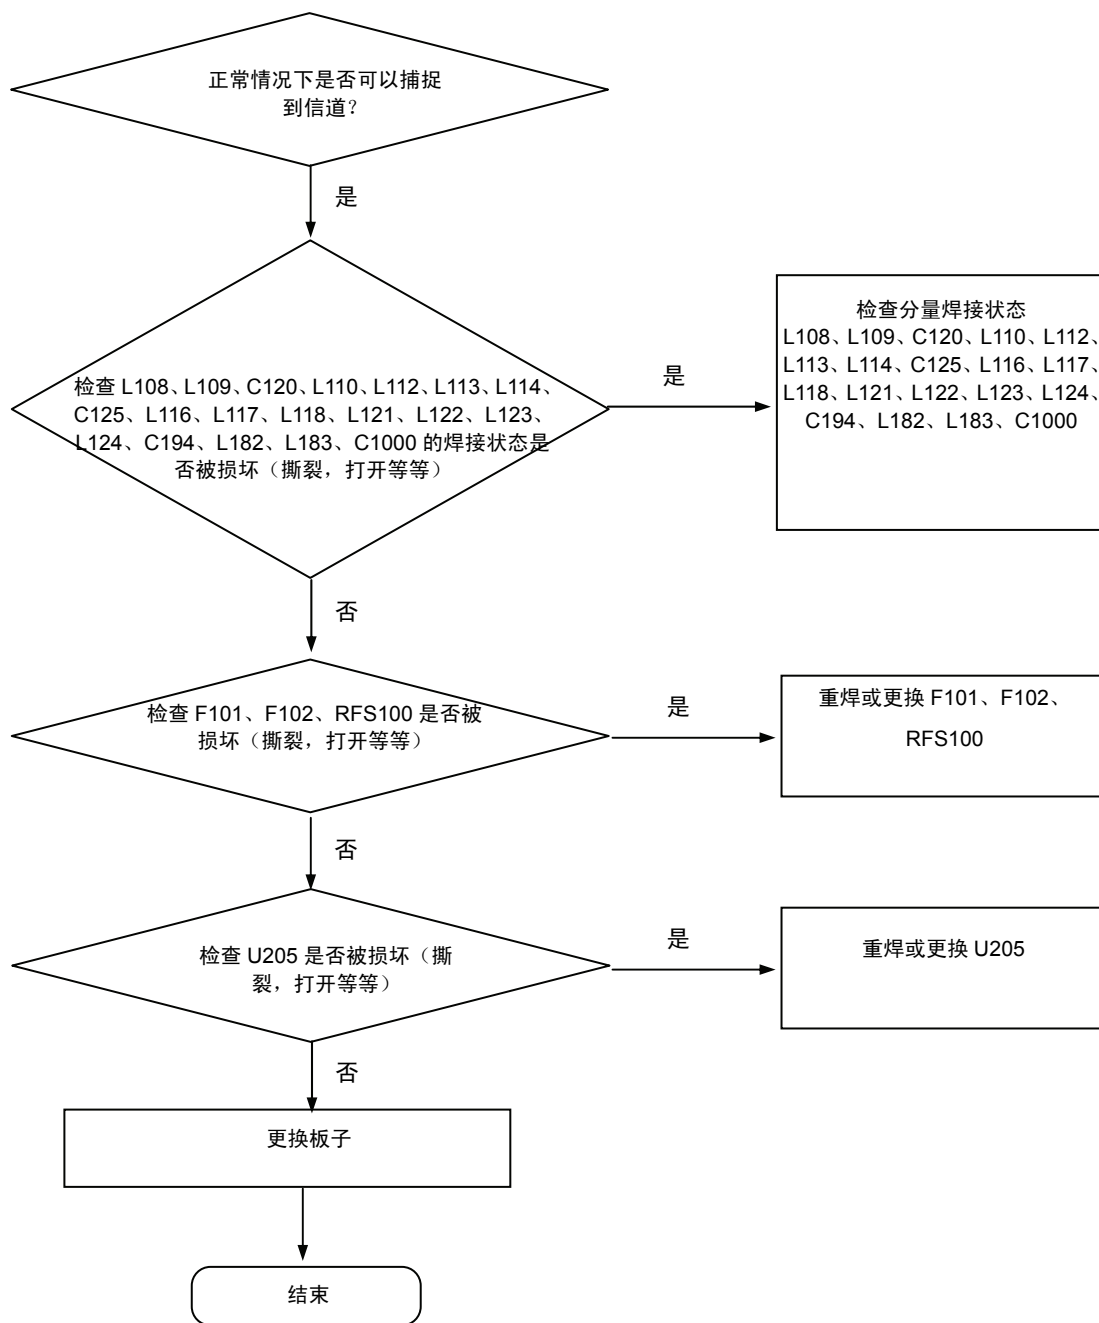
8-3-18. GSM 850、900、1800、1900 / LTE FDD BAND 1、3、7 / LTE TDD BAND 38、39、40、41 / TDSCDMA B34/B39 接收器

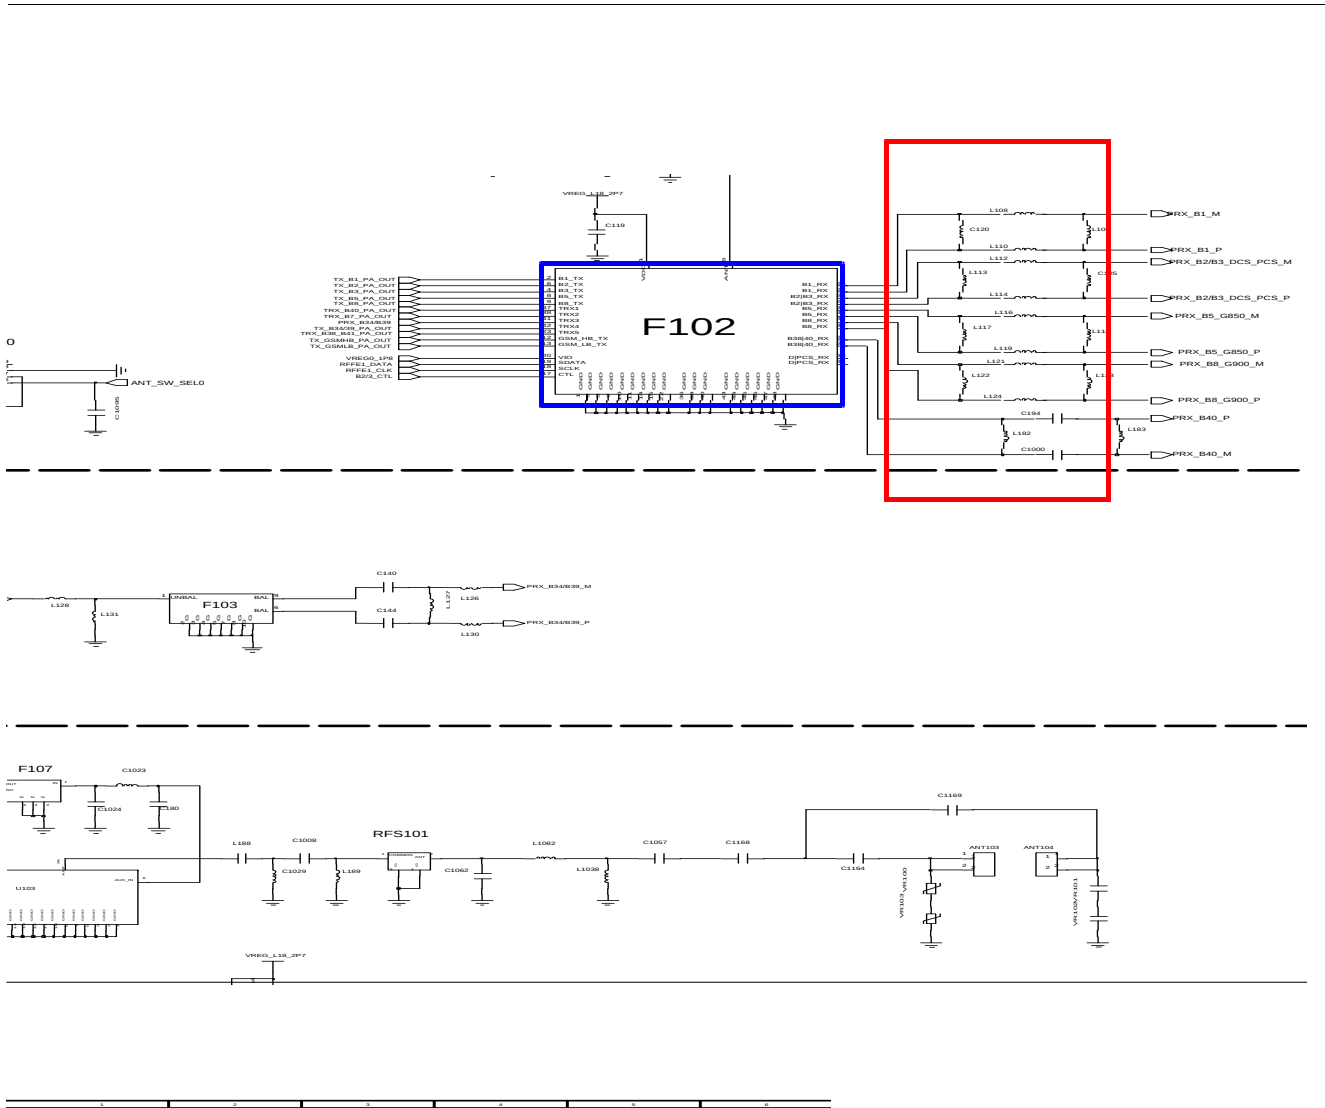


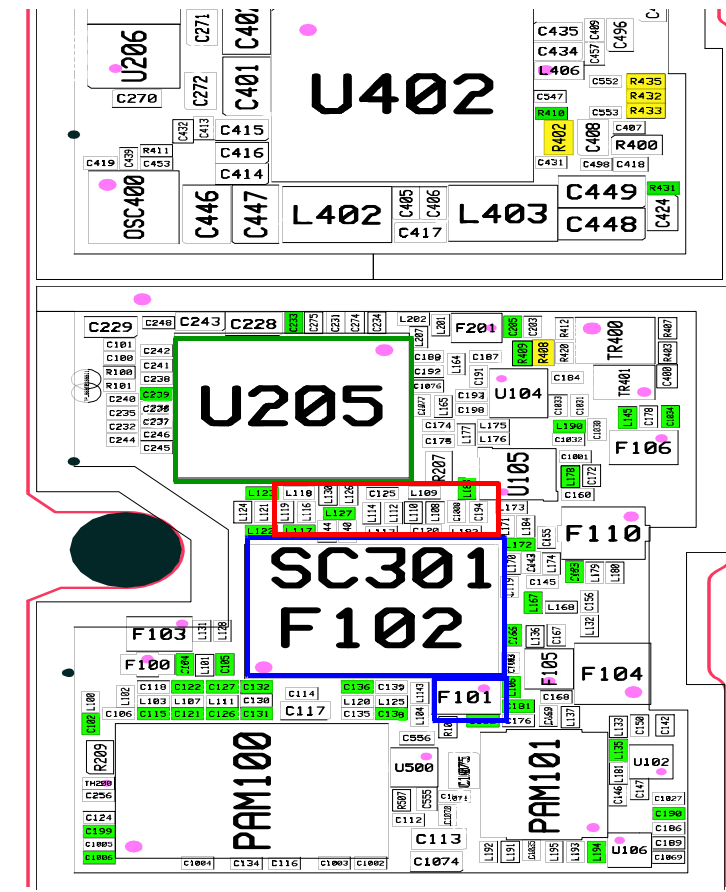

8-3-19. GSM 850、900、1800、1900 / LTE FDD BAND 1、3、7 / LTE TDD BAND 38、39、40、41 / TD-SCDMA B34/B39 发射器

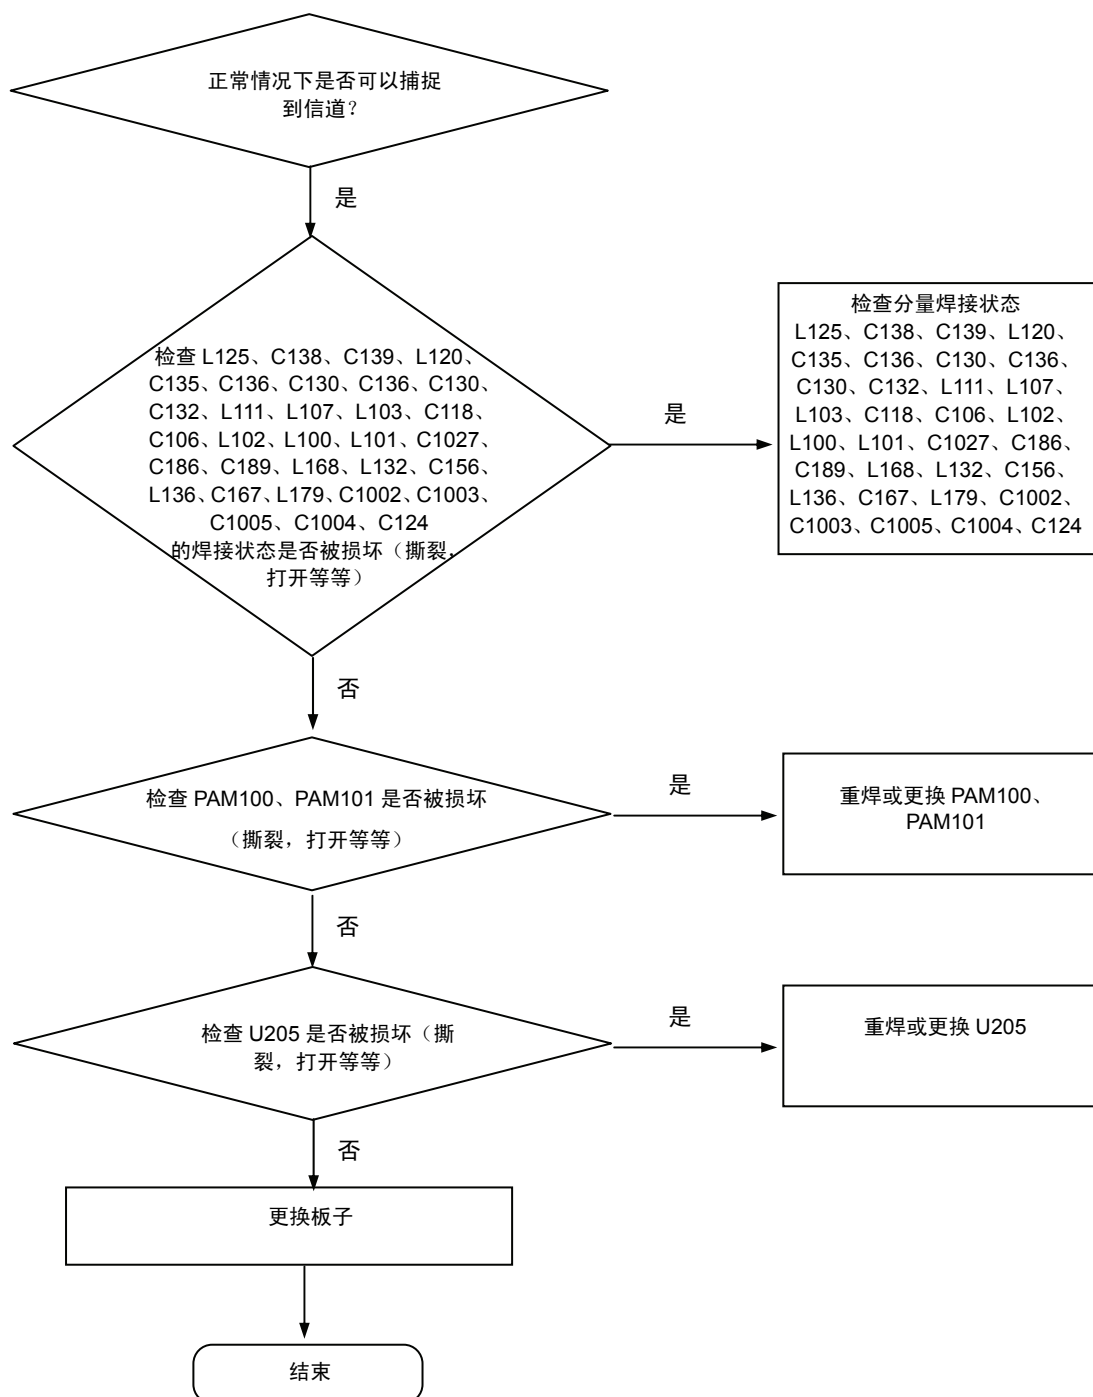

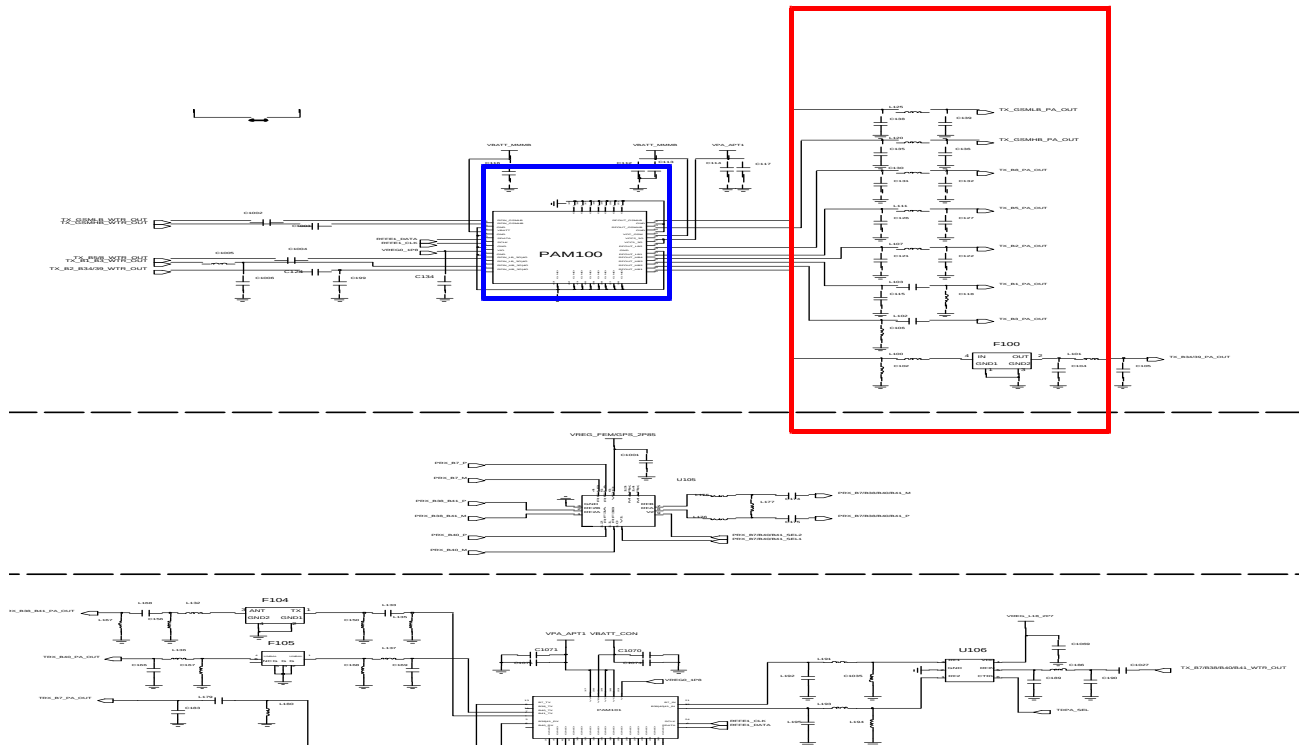

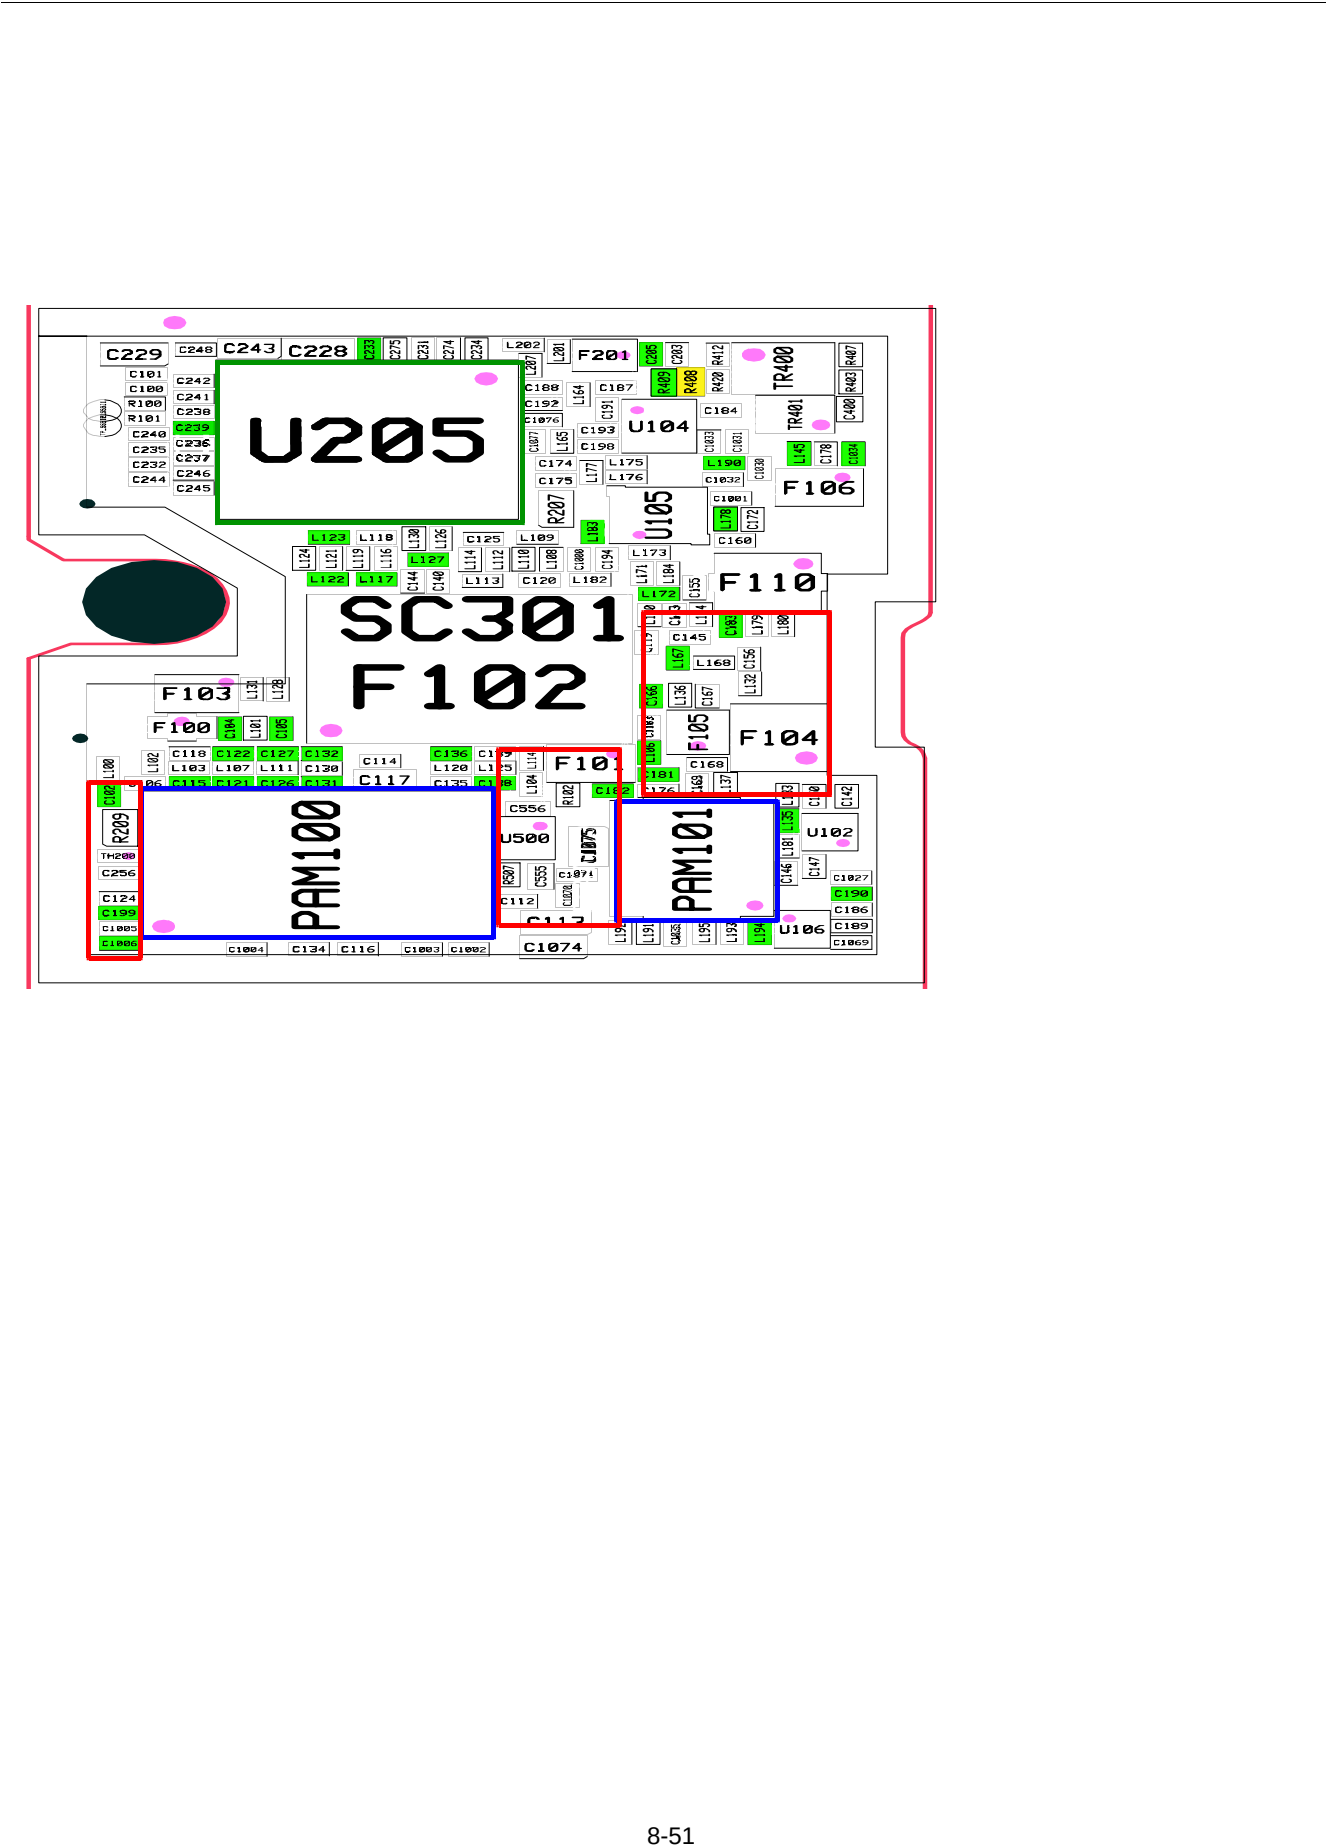

-故障处（顶部视图）

●：故障

	1	2	3	4	5	6	7	8	9	10	11	12	13	14
A														
B														
C	●													●
D	●							●	●	●	●	●	●	●
E	●	●	●	●	●	●	●	●	●	●	●	●	●	●
F	●					●	●							●
G	●					●	●							●
H	●					●	●							●
I	●					●	●							●
J	●					●	●							●
K	●					●	●							●
L	●					●	●							●
M	●					●	●							●
N	●					●	●							●
P	●					●	●							●
R	●					●	●							●
T	●					●	●							●
U	●					●	●							●
V	●					●	●							●
W	●					●	●							●
Y	●					●	●							●
AA						●	●							
AB						●	●							

UME400

The grid displays a 3D repair matrix for UCP300. The columns are indexed 1 to 32, and the rows are indexed 1 to 32. Each cell contains a 3D coordinate triplet (X, Y, Z) in a specific color-coded format. The colors include yellow, blue, green, and grey. The coordinates are organized in a way that suggests a 3D spatial arrangement, with some cells being empty or containing a single value. A large, faint watermark 'UCP300' is visible across the center of the grid.

UCP300

	<u>1</u>	<u>2</u>	<u>3</u>	<u>4</u>	<u>5</u>	<u>6</u>	<u>7</u>	<u>8</u>	<u>9</u>	<u>10</u>	<u>11</u>	<u>12</u>	<u>13</u>	<u>14</u>
<u>A</u>														
<u>B</u>														
<u>C</u>										●				
<u>D</u>								●	●					
<u>E</u>						●								
<u>F</u>				●		●								
<u>G</u>														
<u>H</u>	●			●					●					●
<u>J</u>									●					
<u>K</u>						●	●					●		
<u>L</u>					●	●	●		●					
<u>M</u>														●
<u>N</u>														
<u>P</u>											●			

U400