



8.3 级维修

8-1. 框图

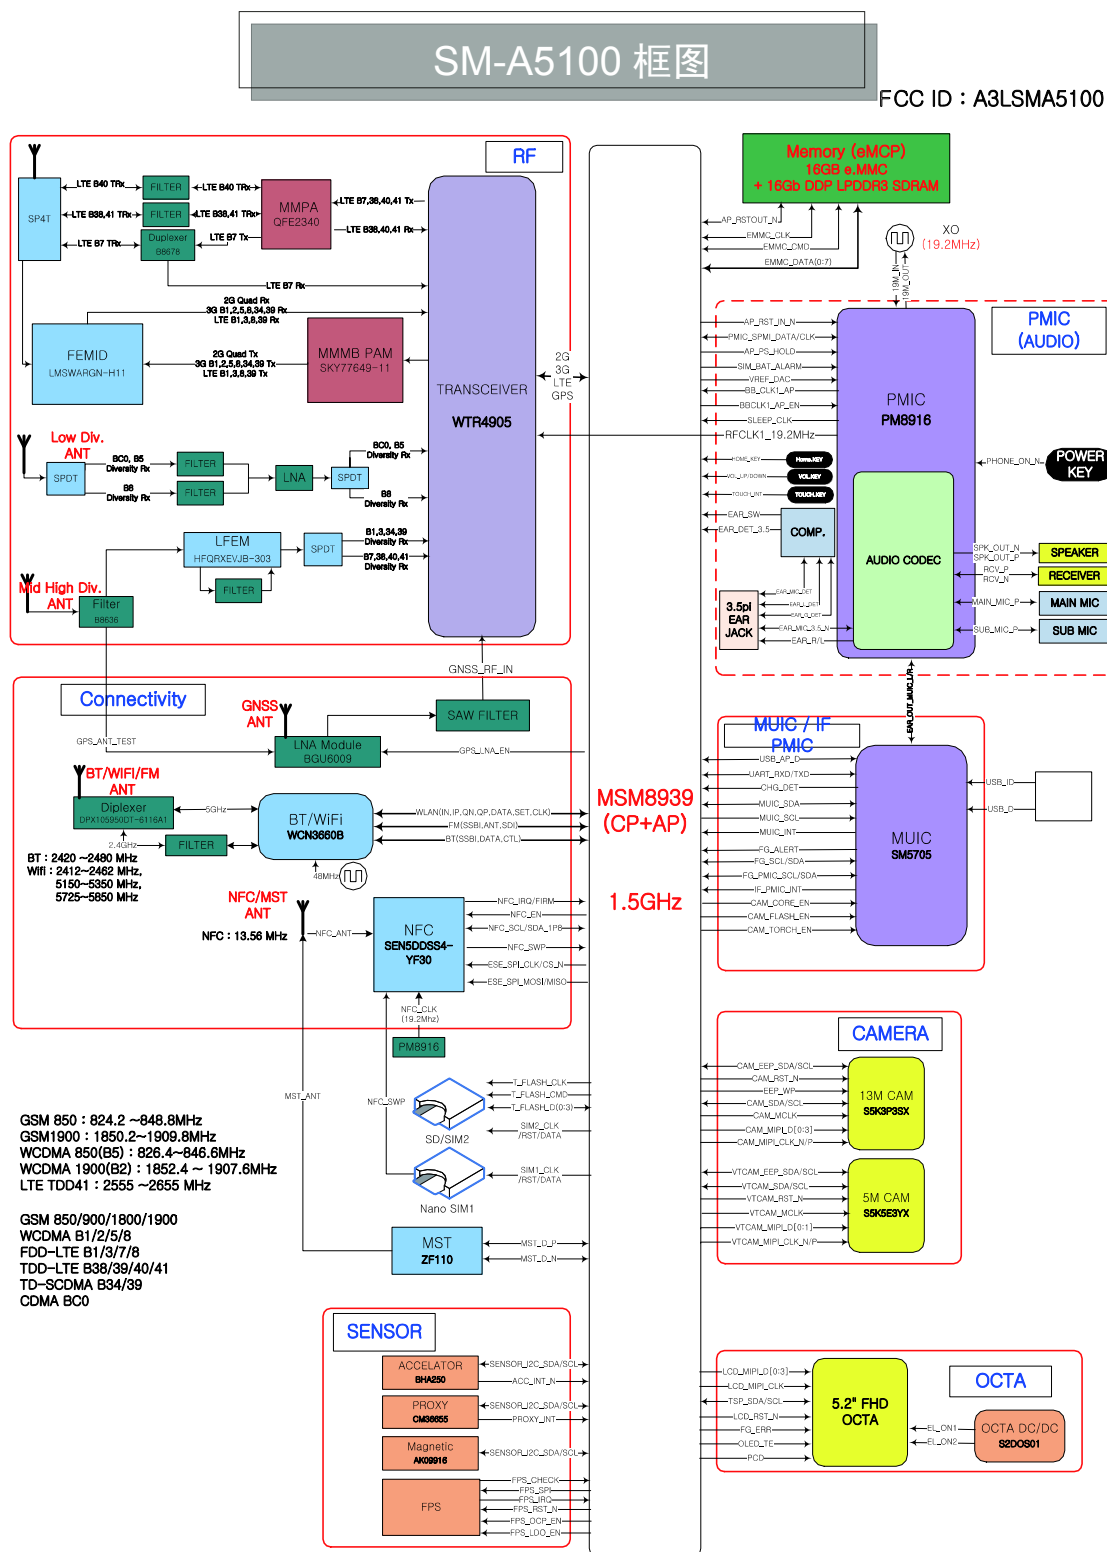


8-2. PCB 图解


8-2-1. 主 PCB 顶部

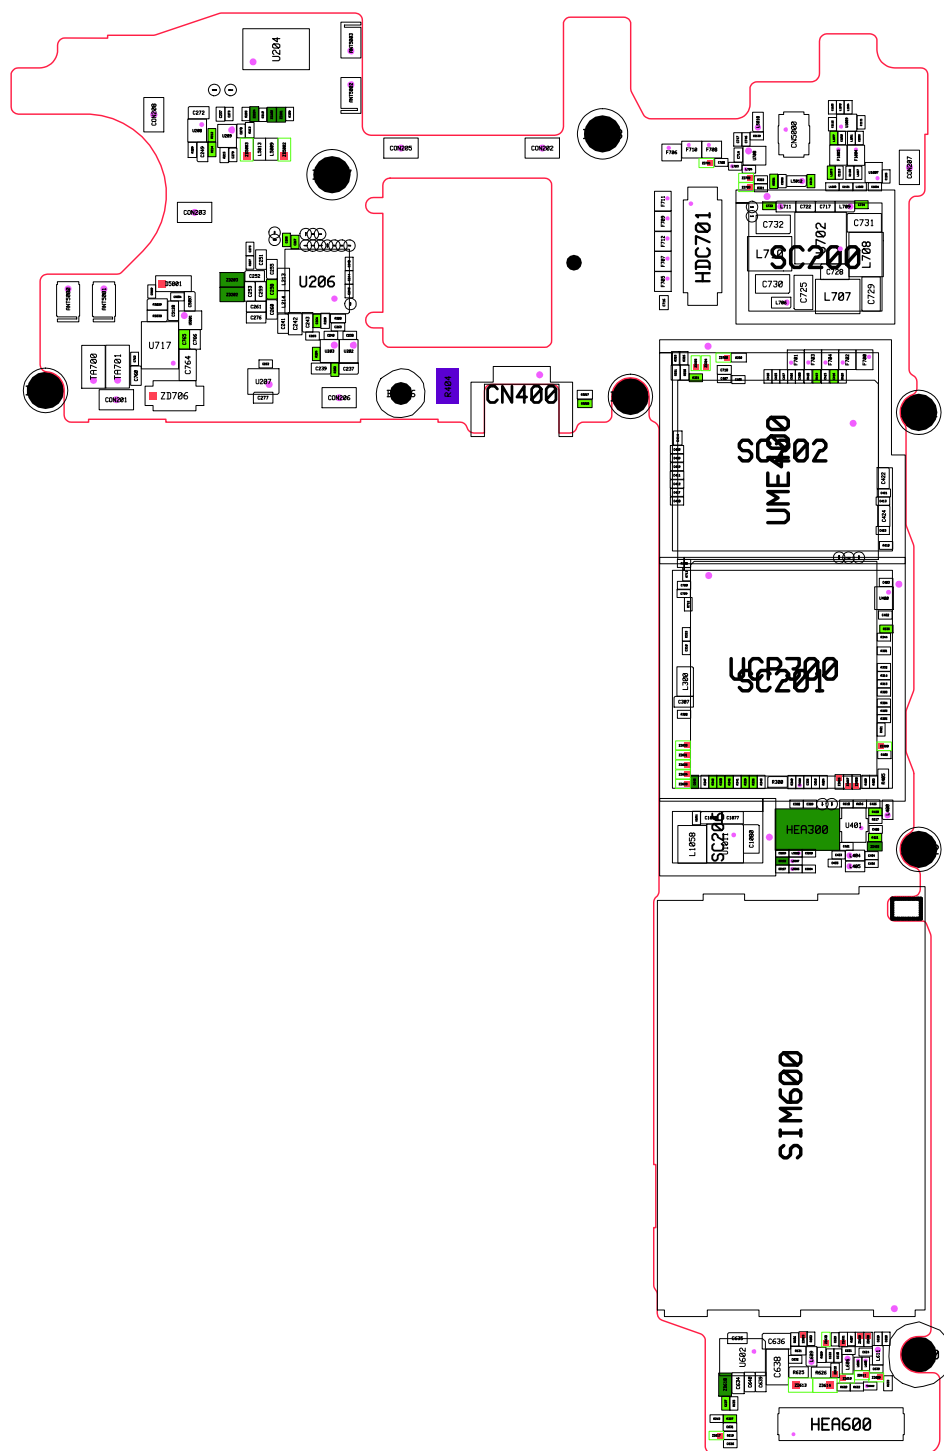

8-2-2. 底部

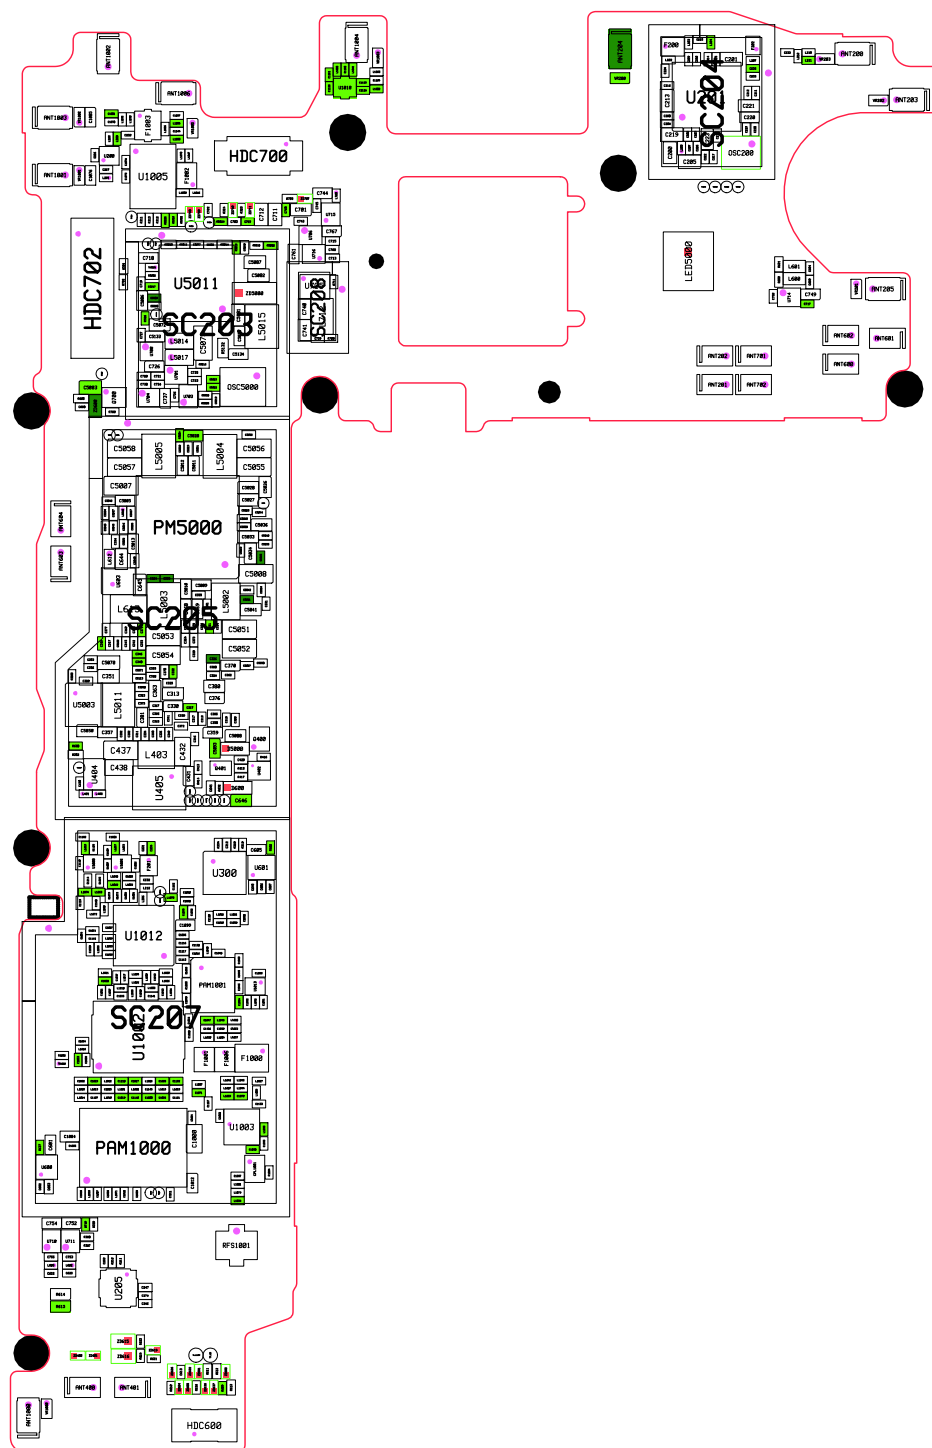

8-2-3. 设备

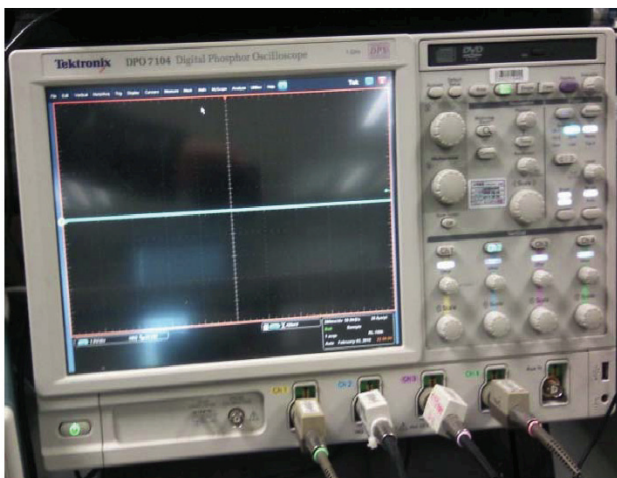

↑示波器




↑数字万用表



↑电源供应器



↑+字螺丝刀, ESD 安全镊子

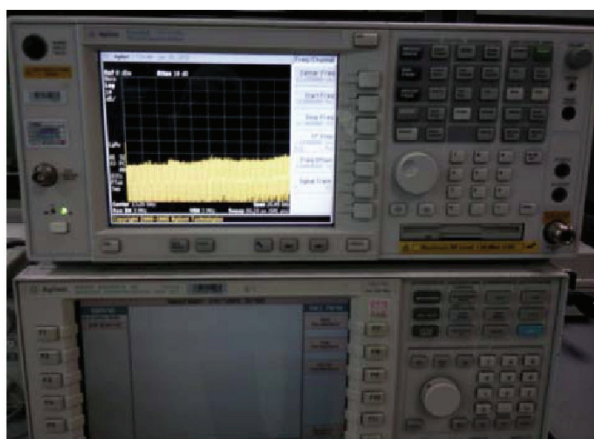


↑8960 和频谱仪





↑焊接烙铁

8-3. 故障排除流程图


8-3-1. 开机



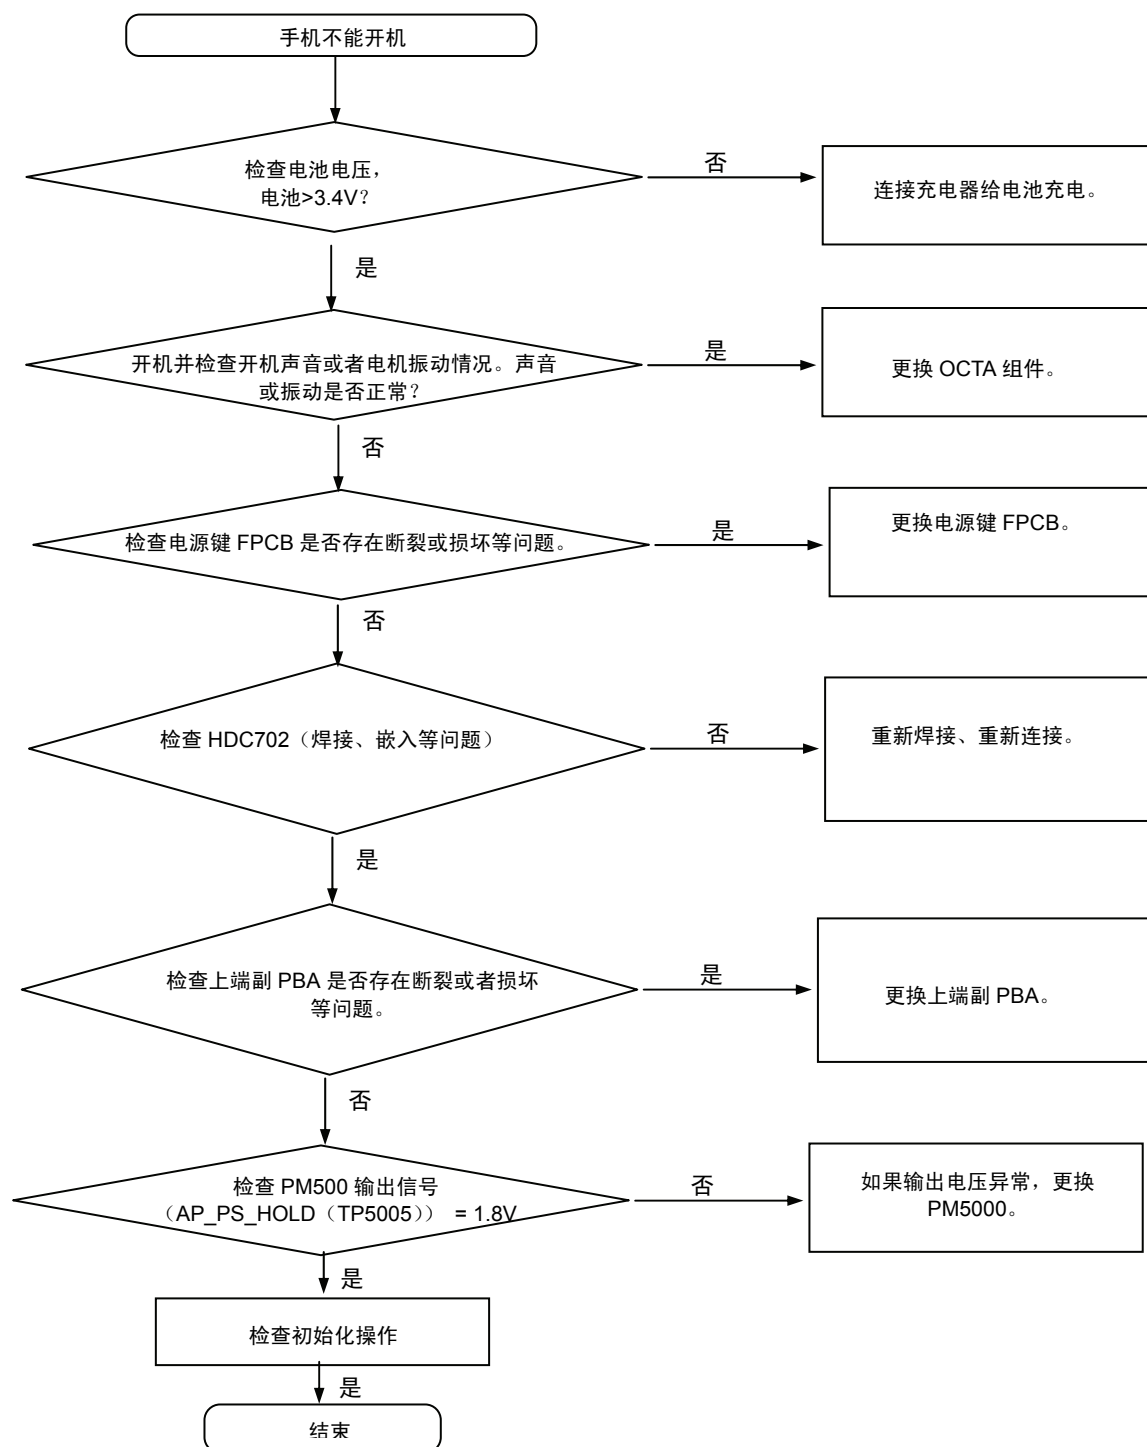


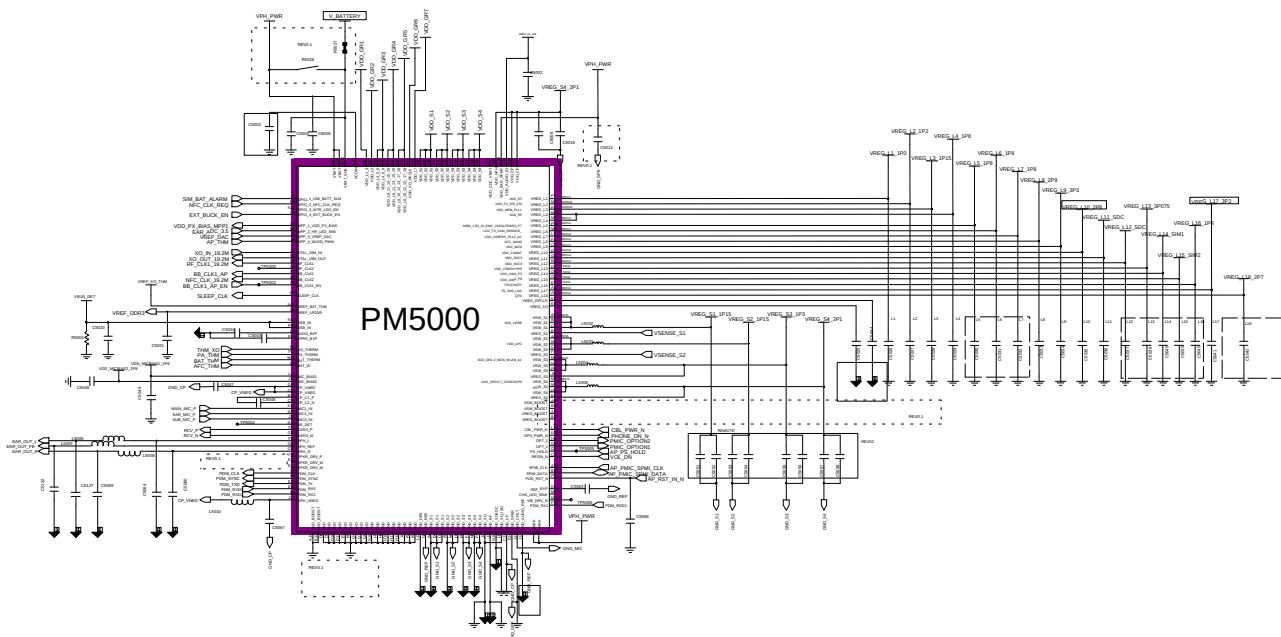


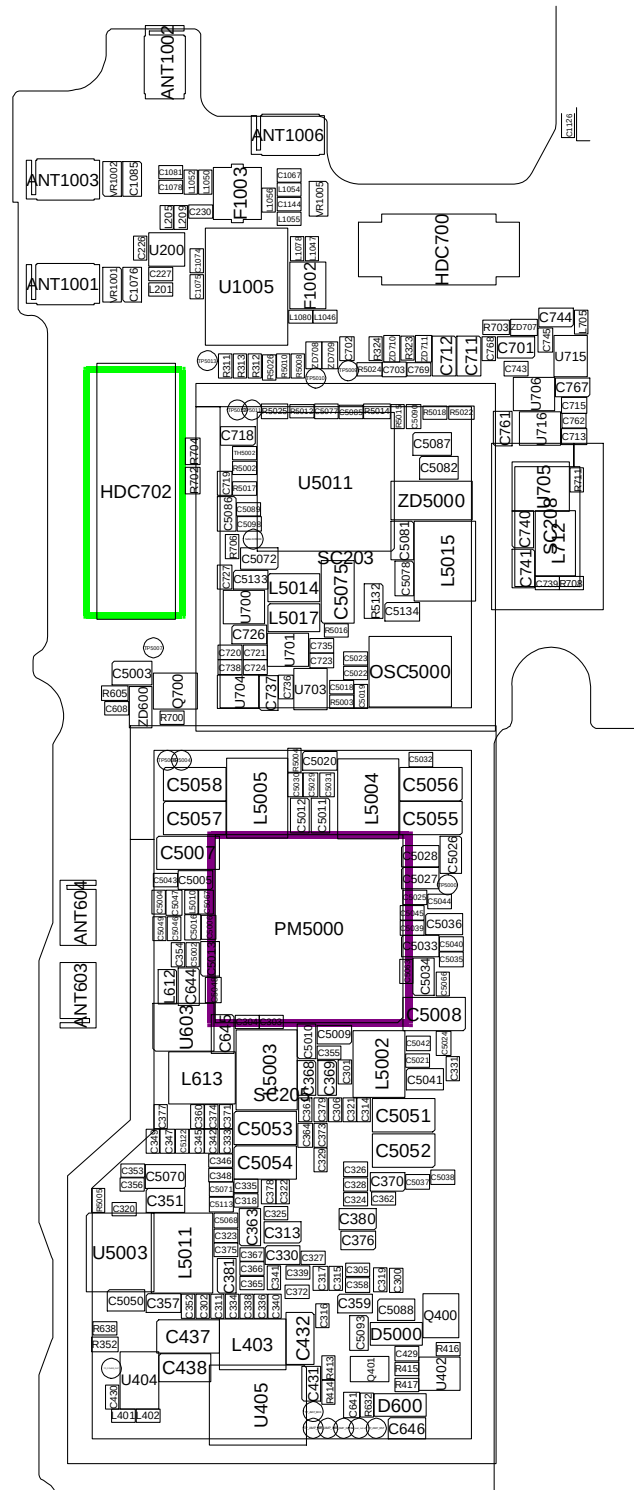


8-3-2 初始化



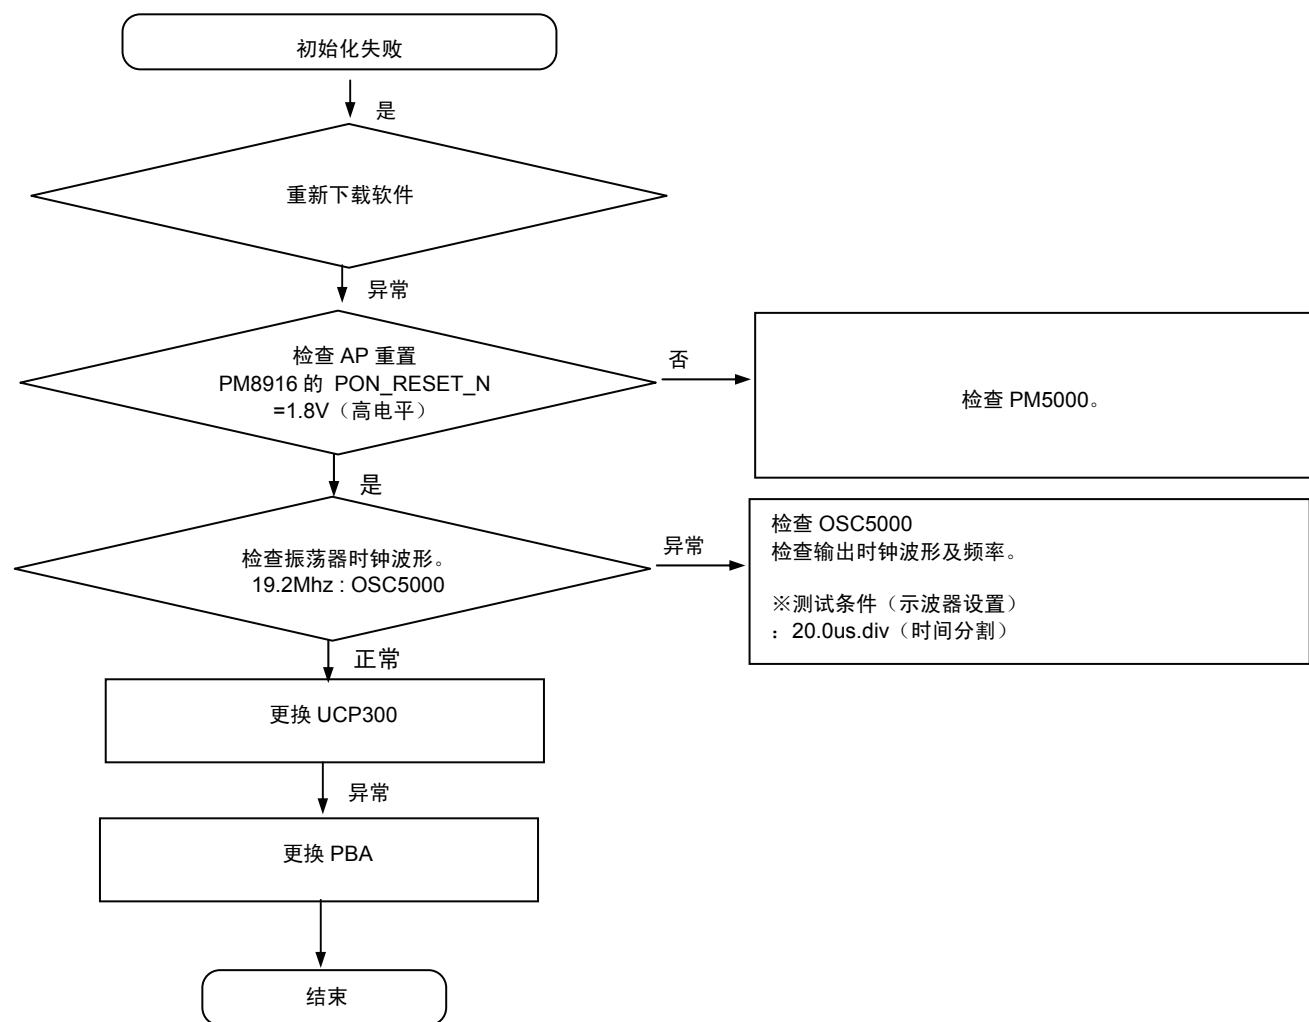


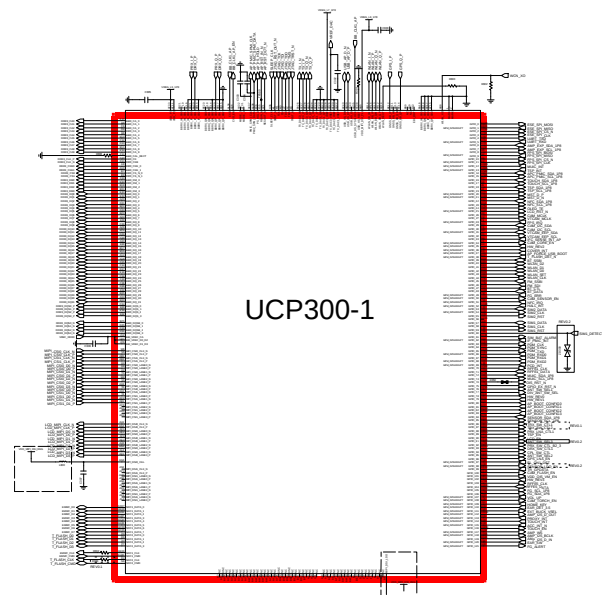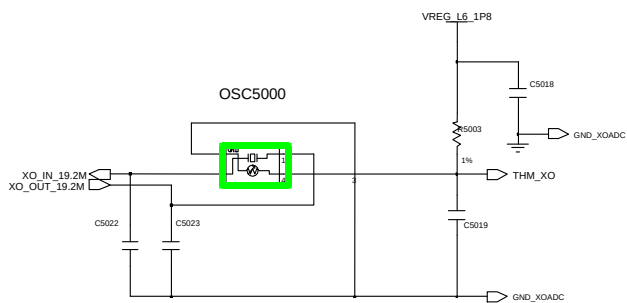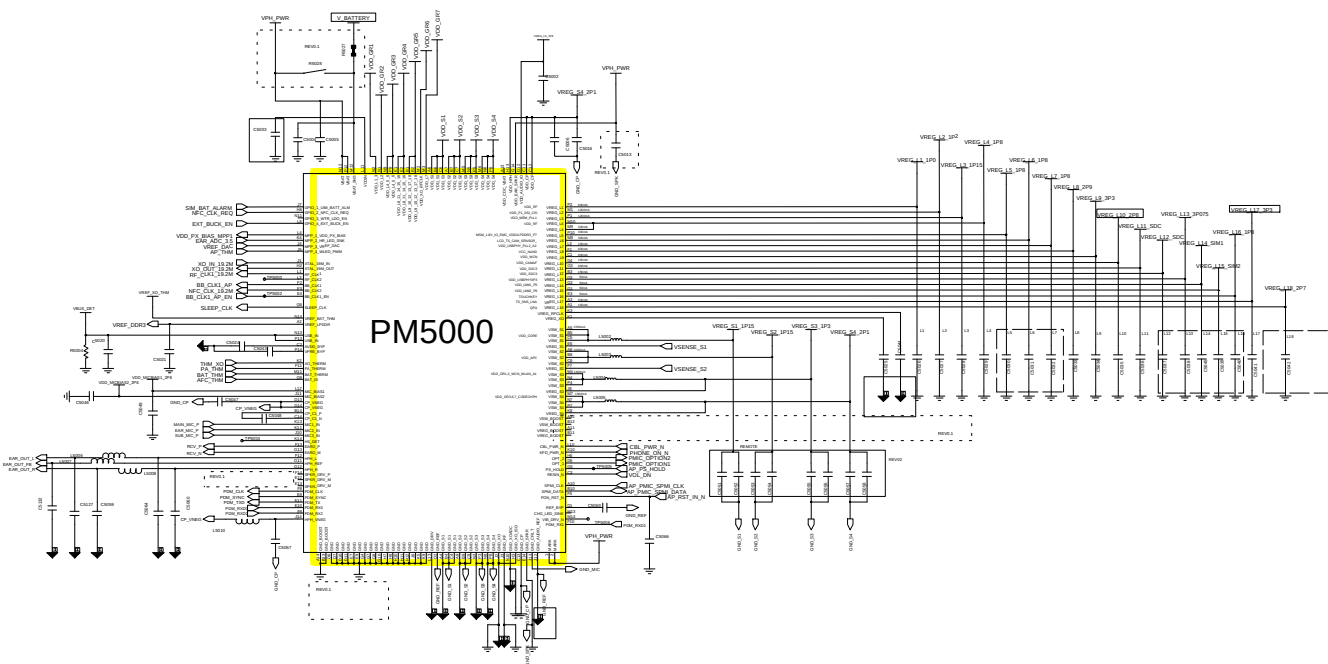





8-3-3. 无服务


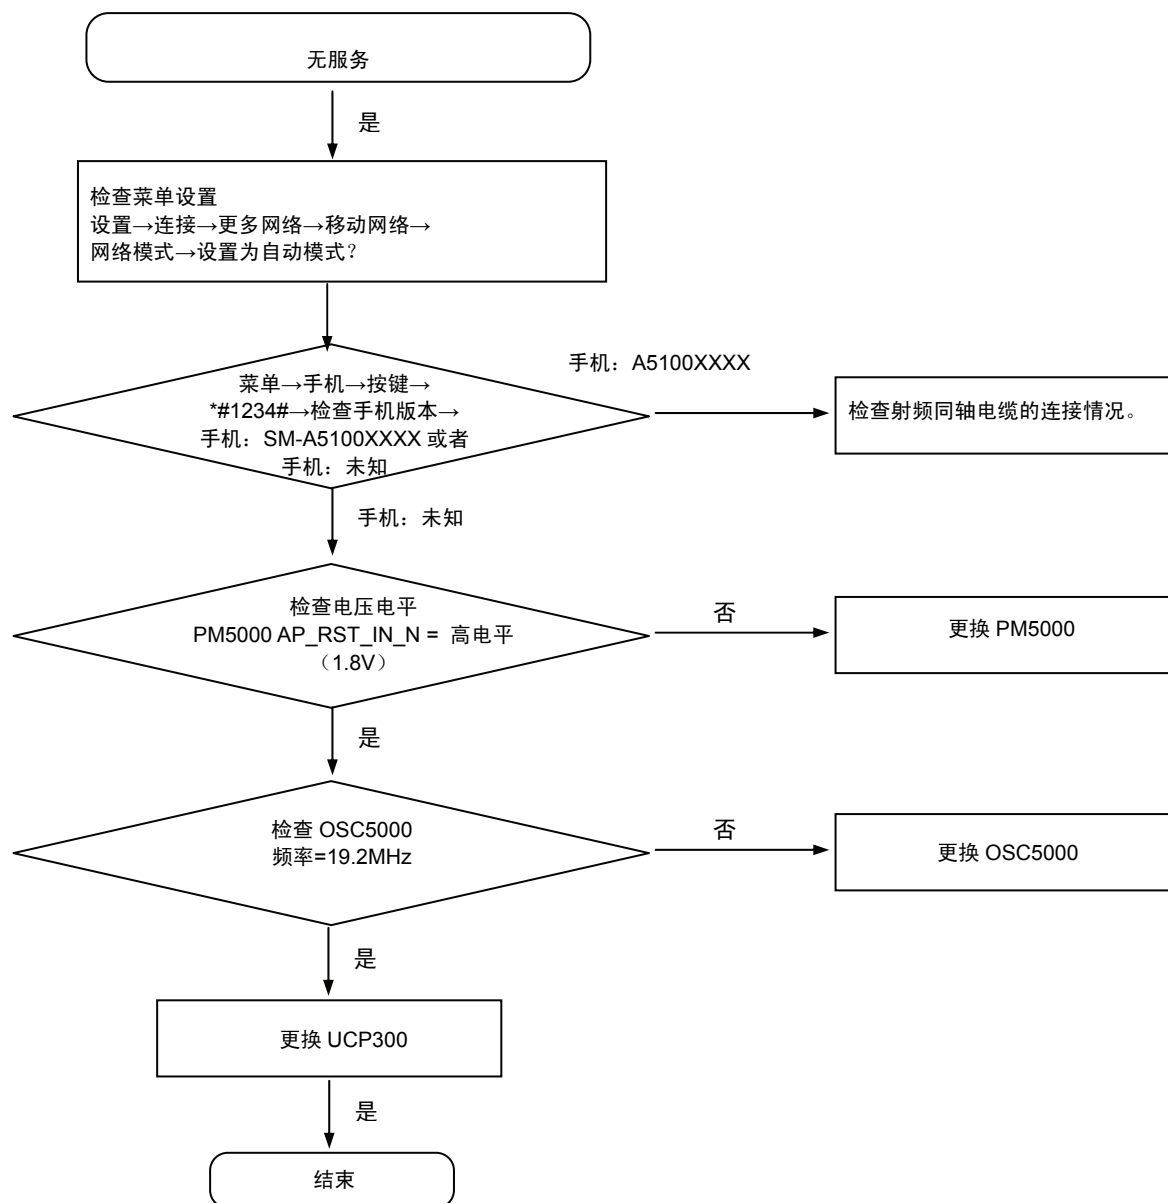


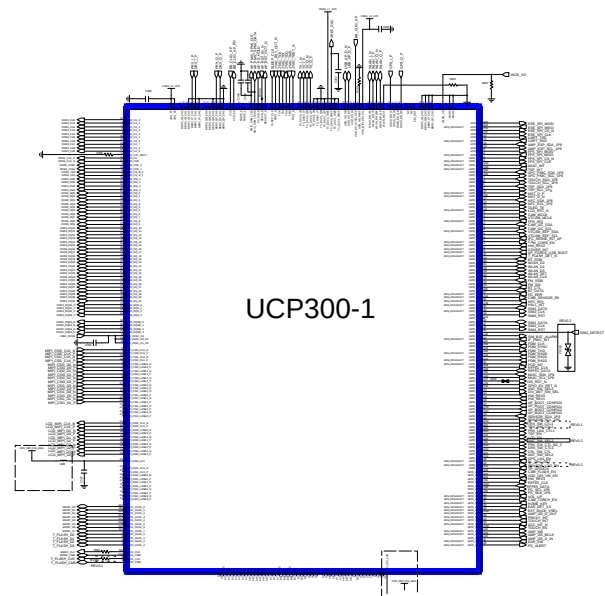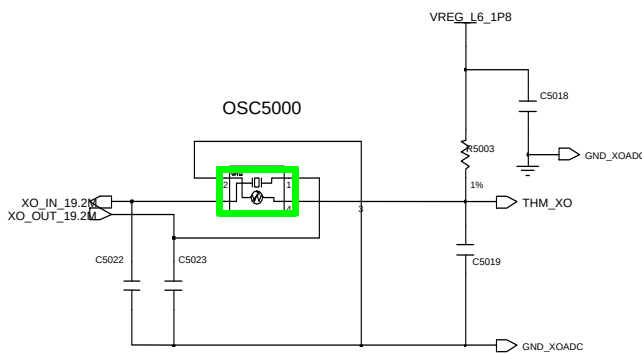
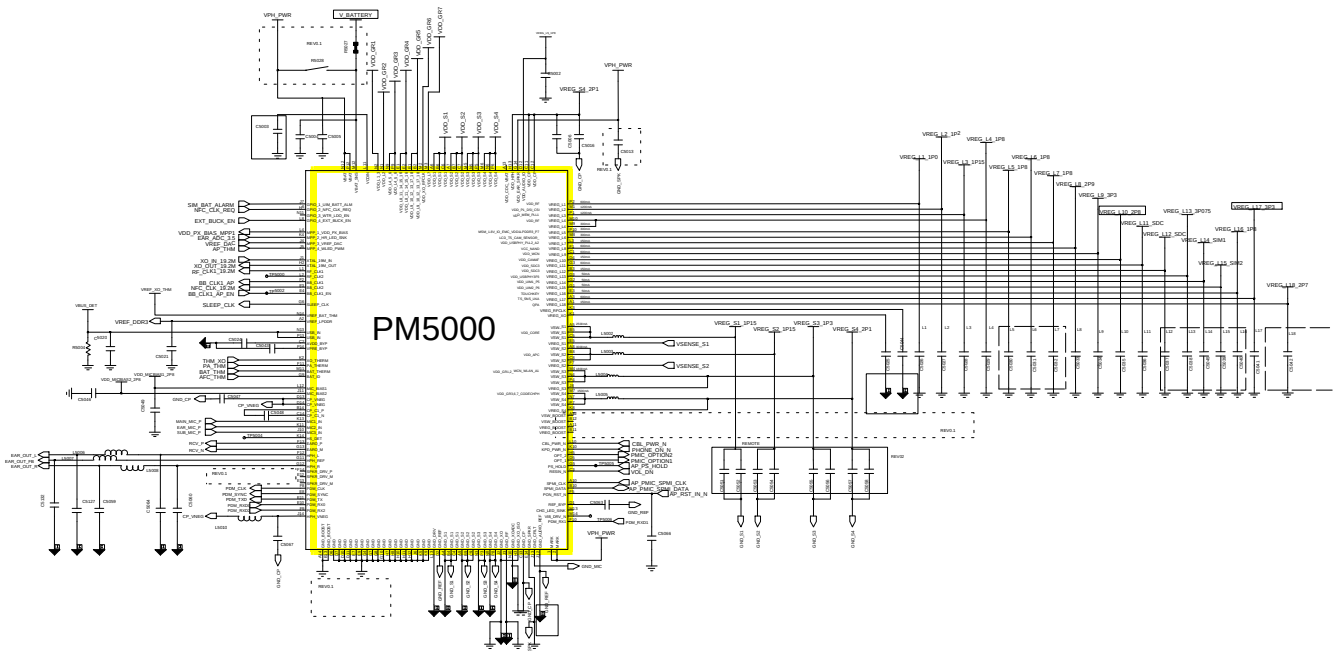


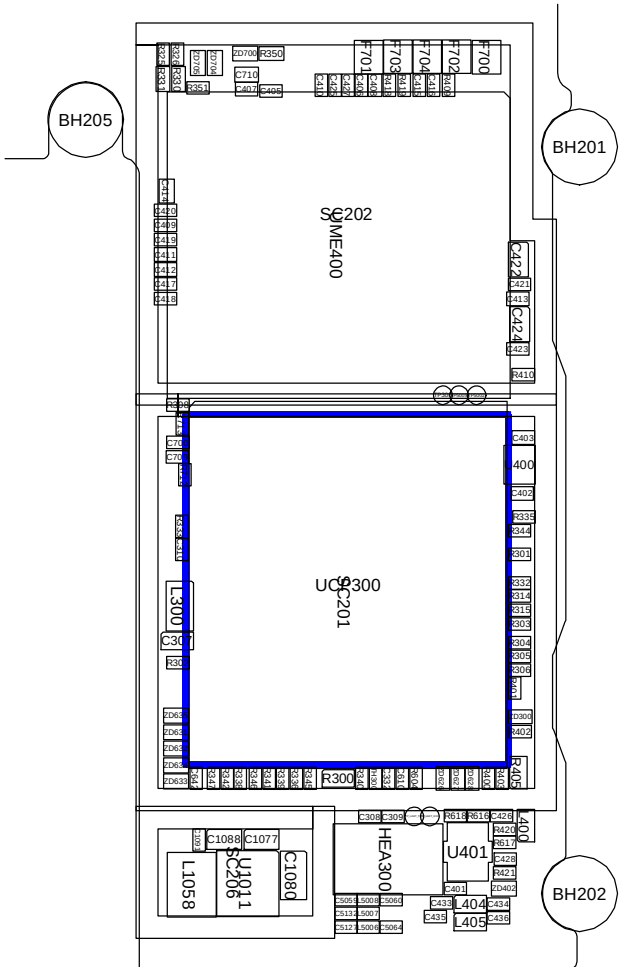



8-3-4. SIM1 部分

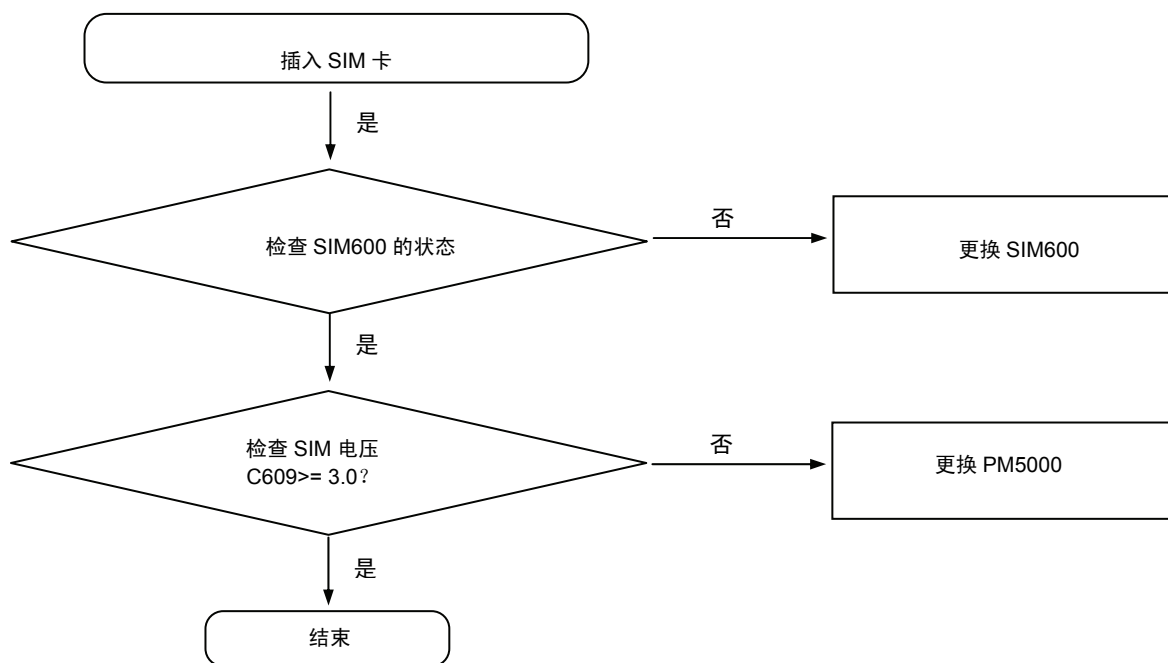


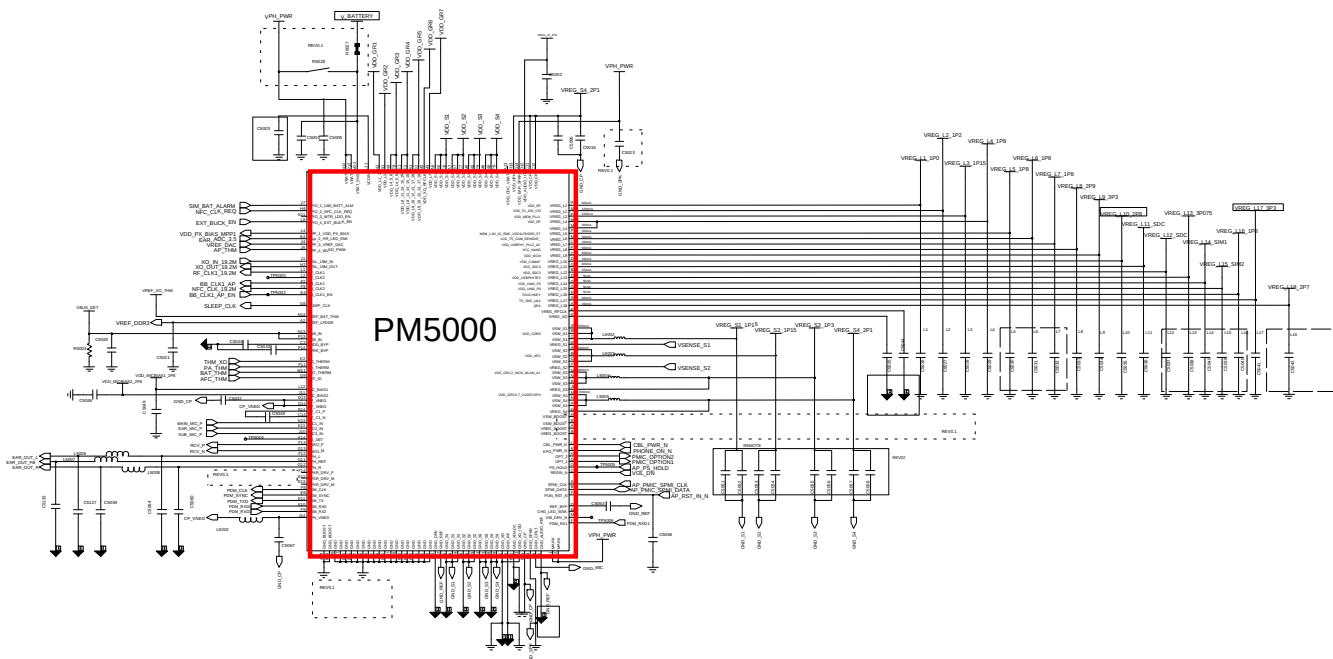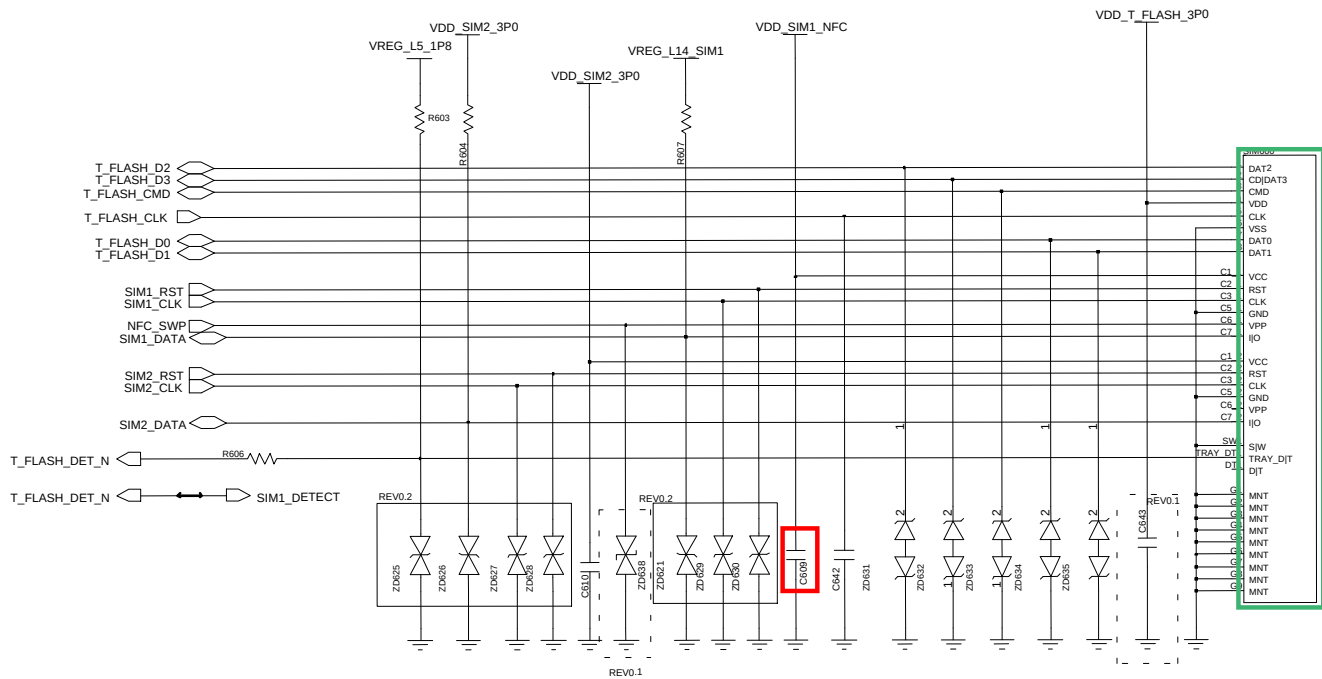


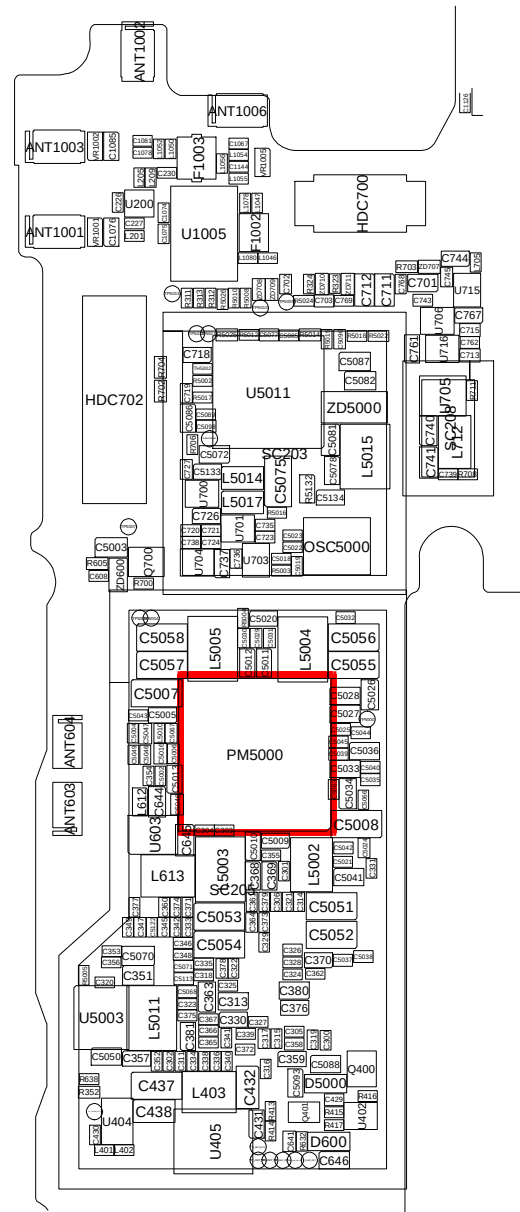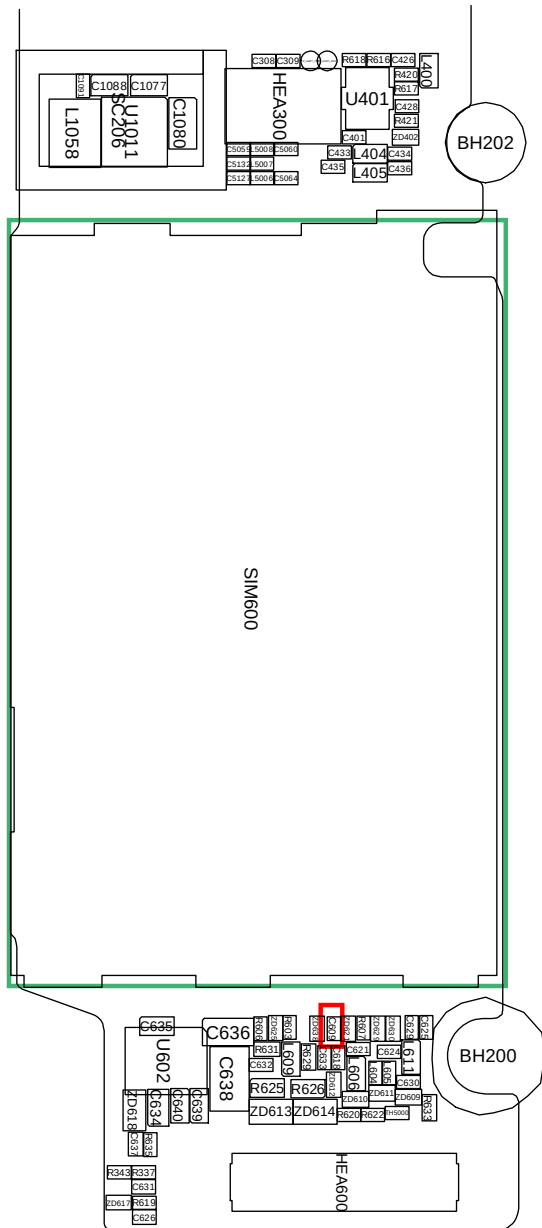




8-3-5. SIM2 /SD 卡插槽部分

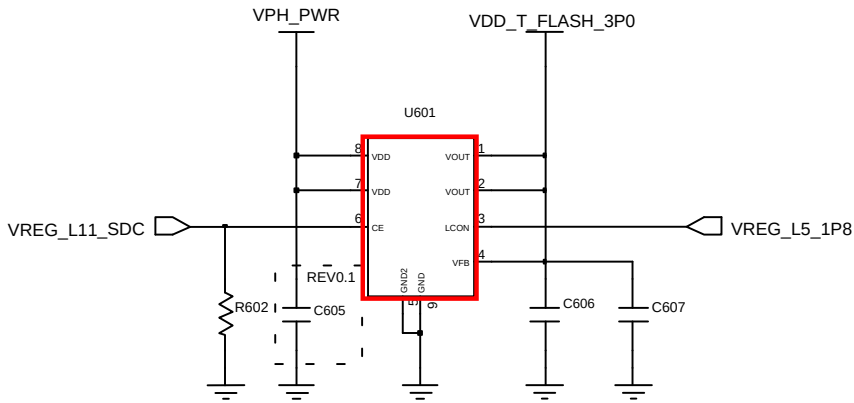
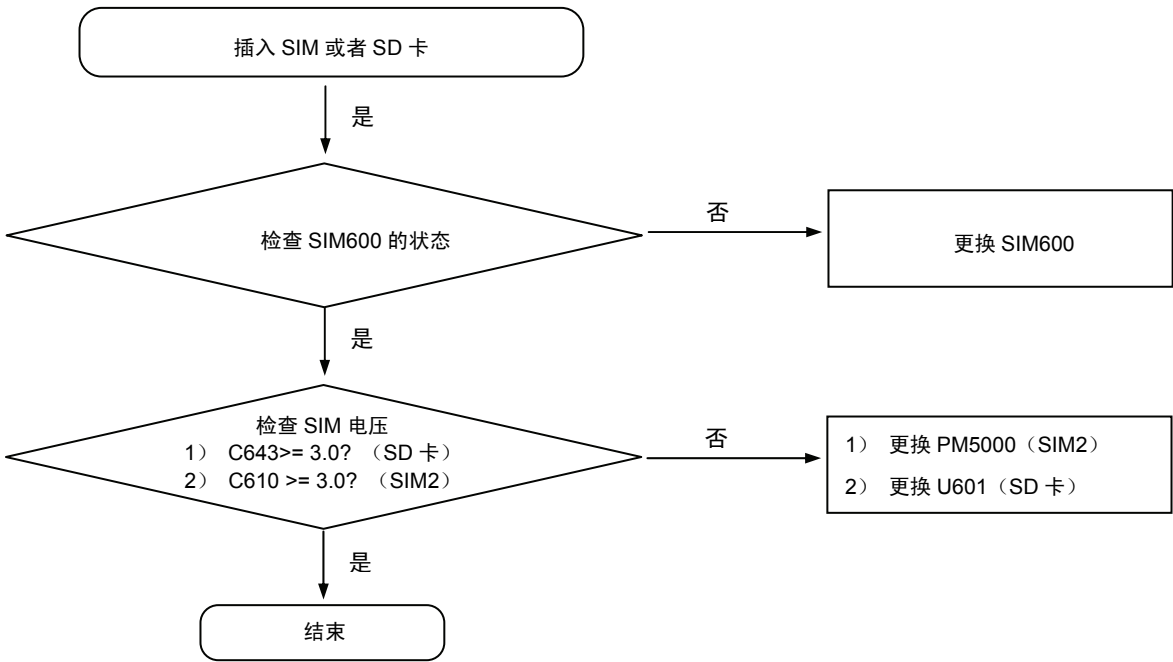




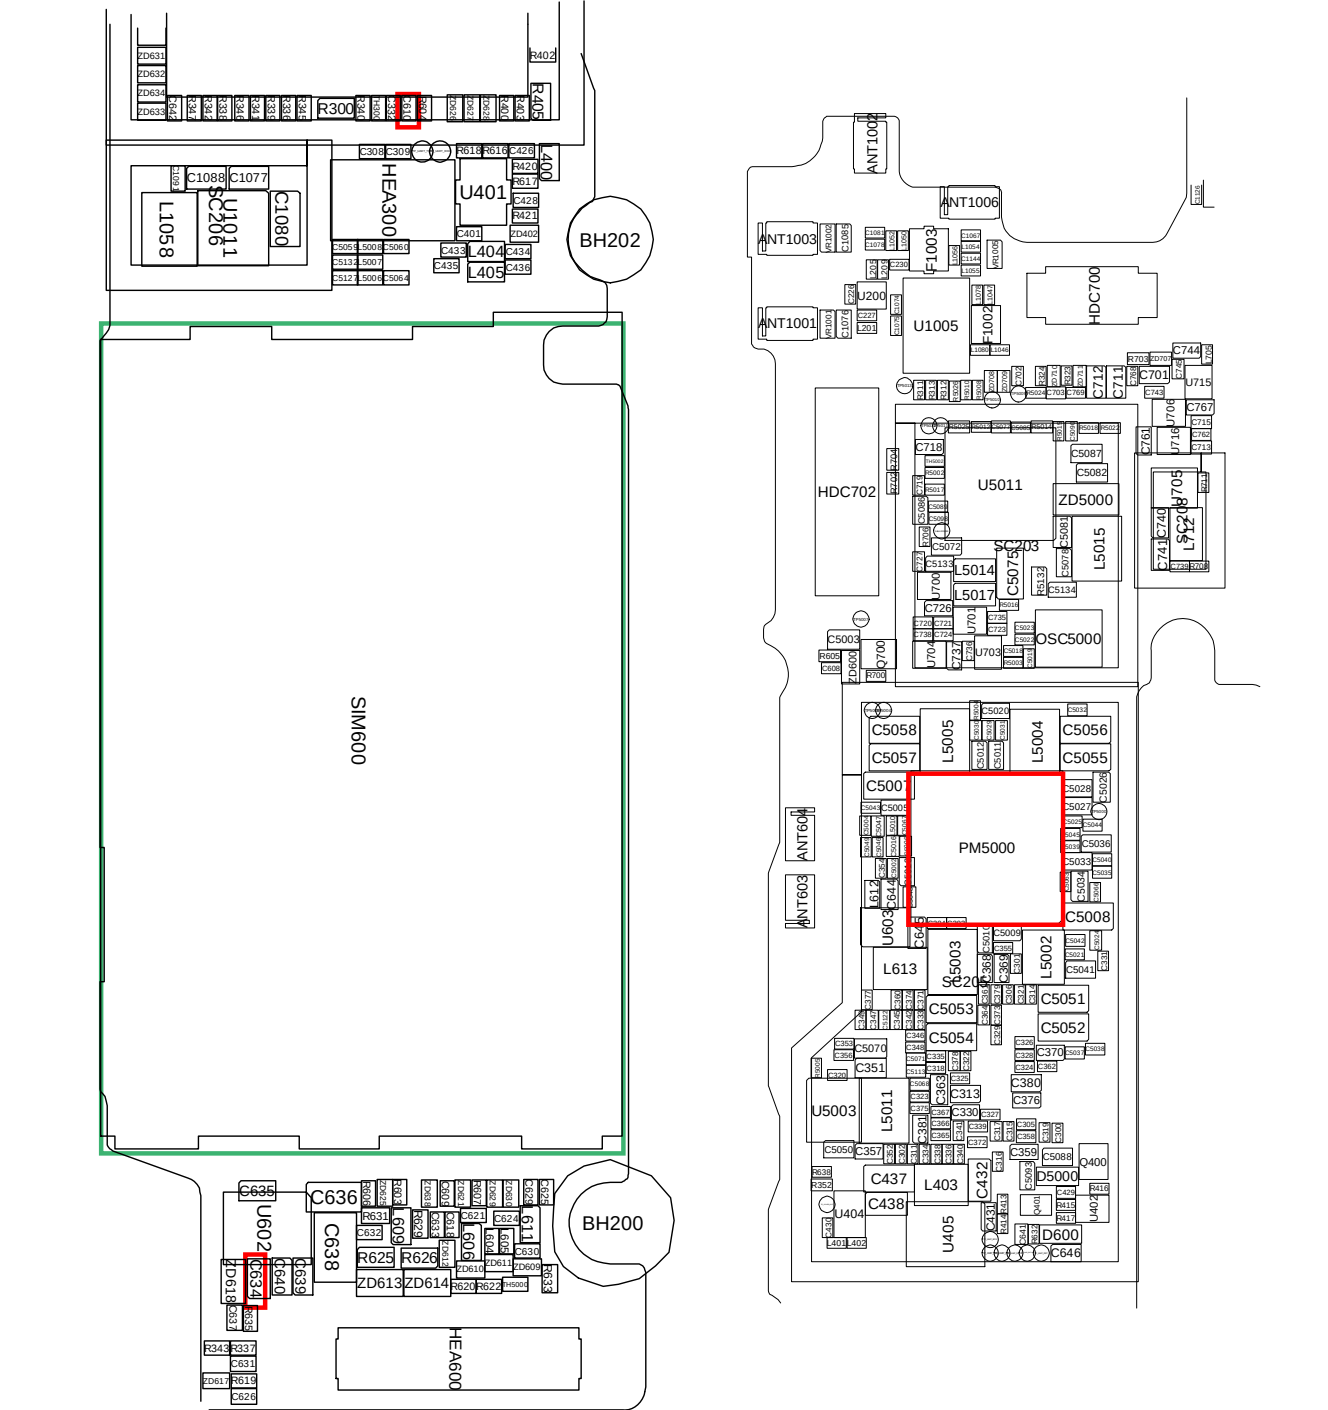




8-3-6. 充电部分

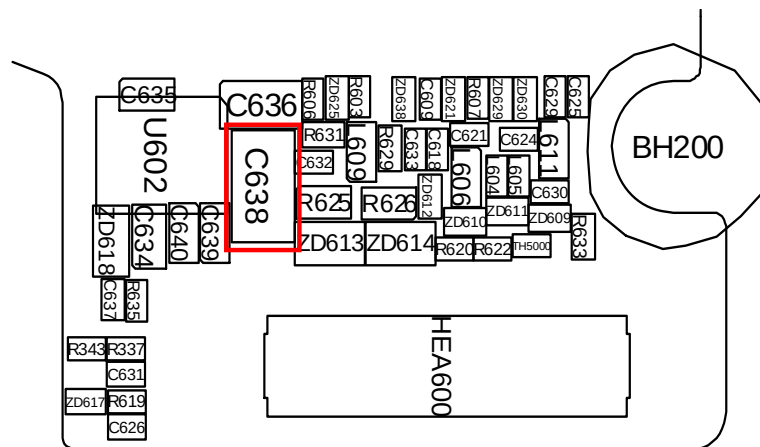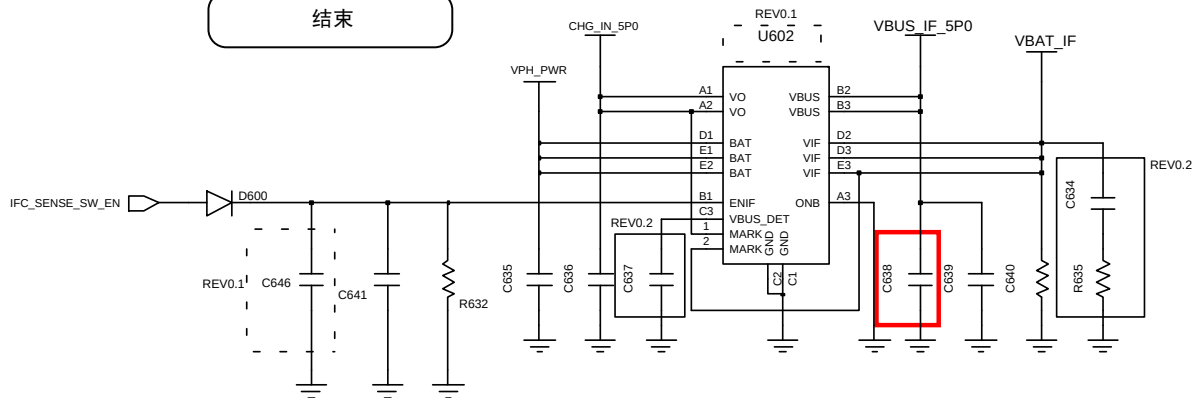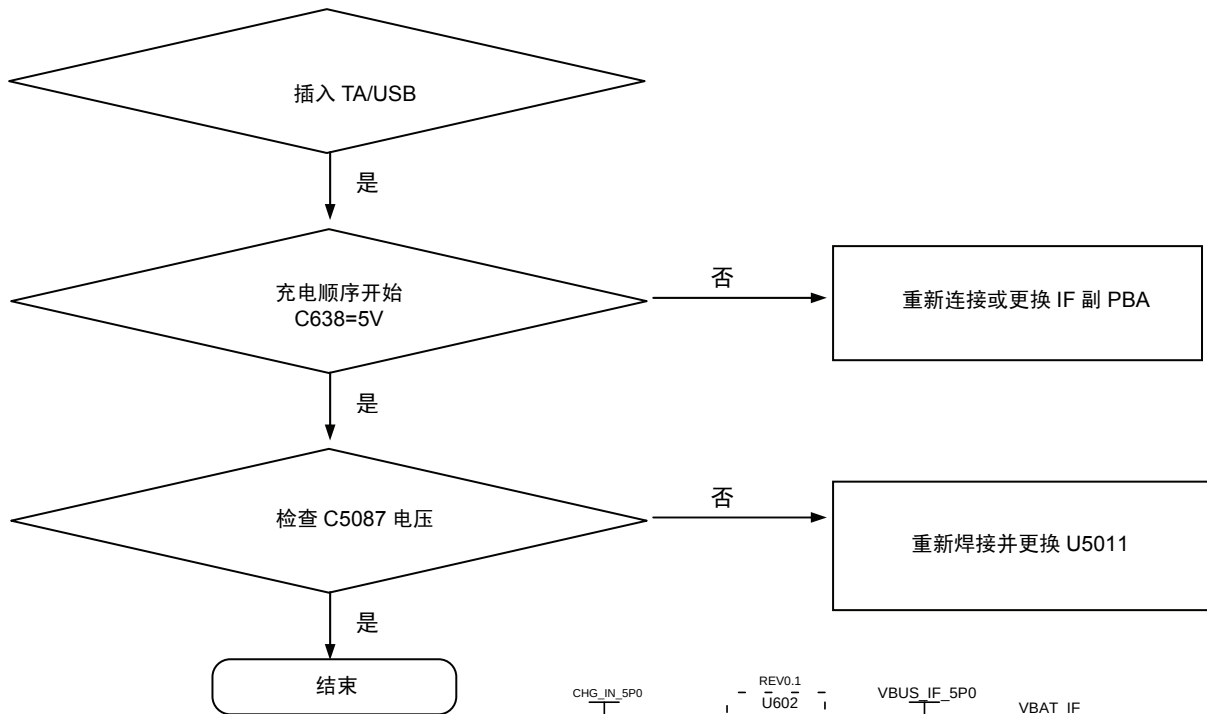


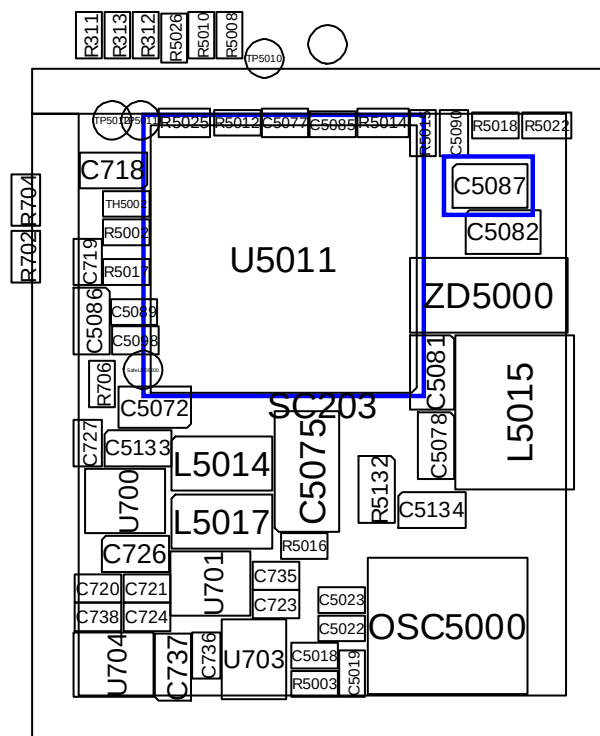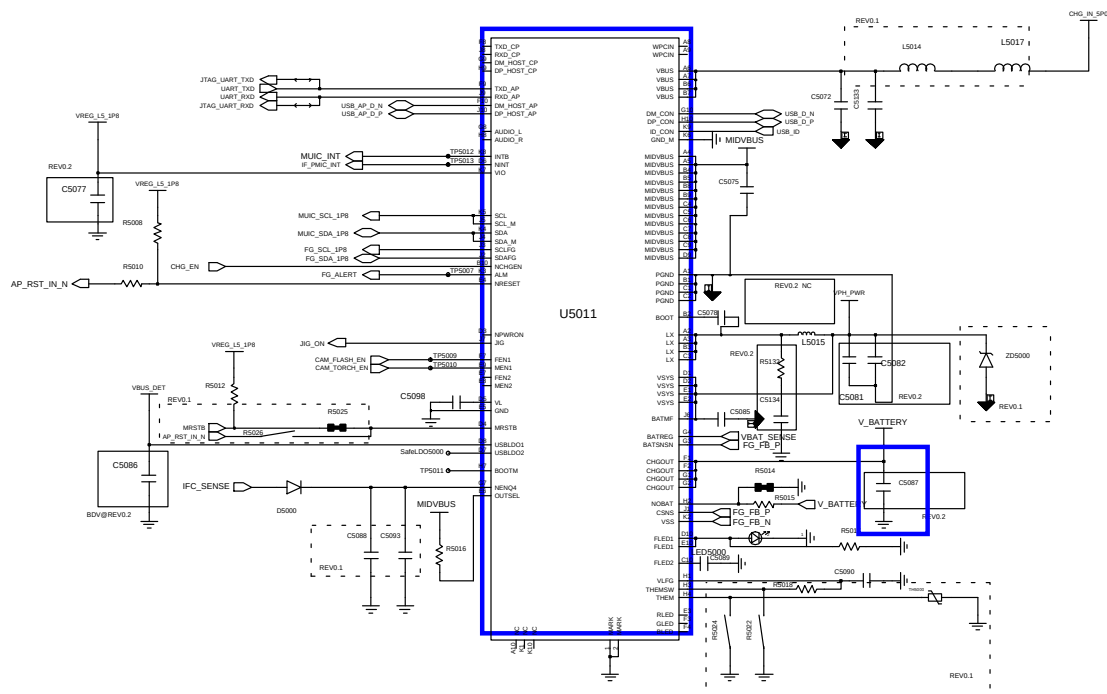


8-3-7. 加速传感器


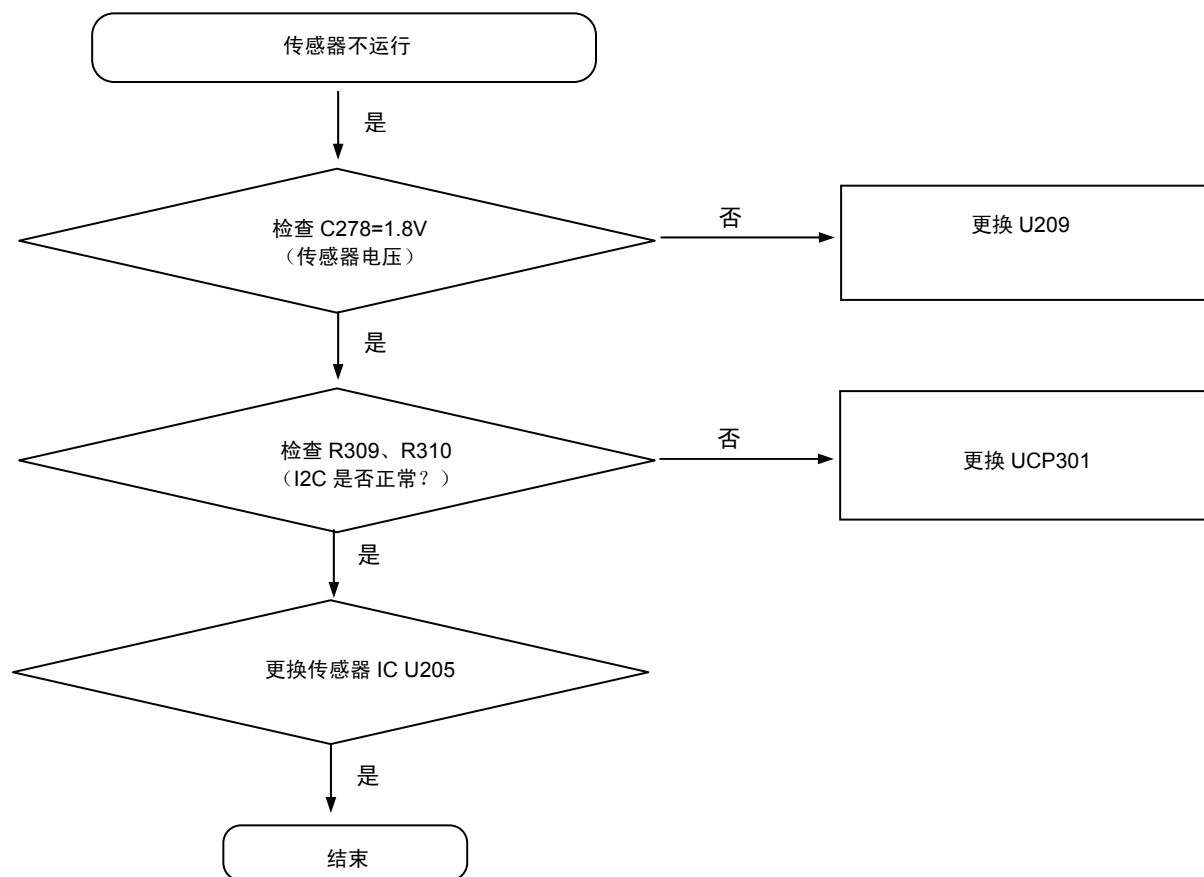


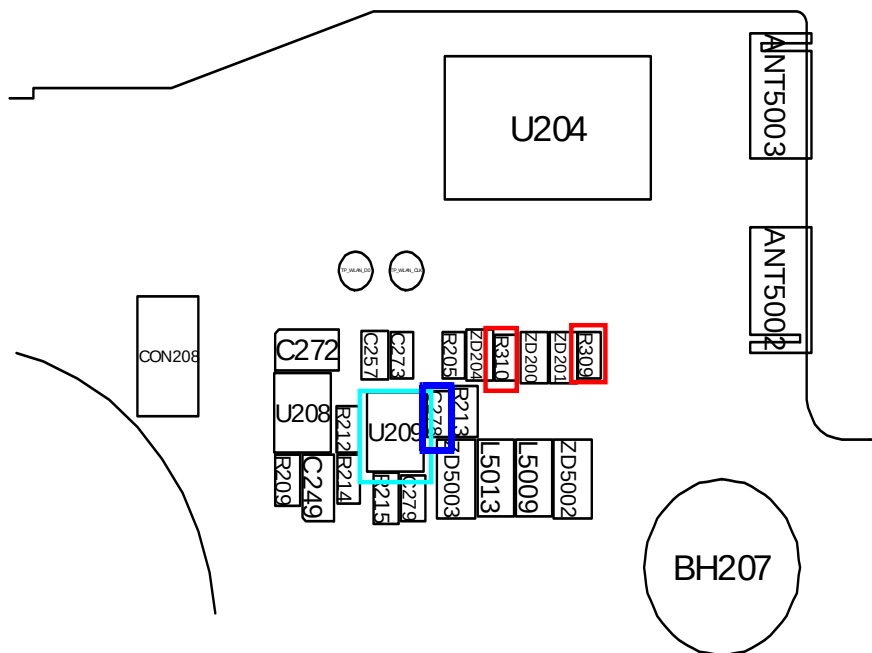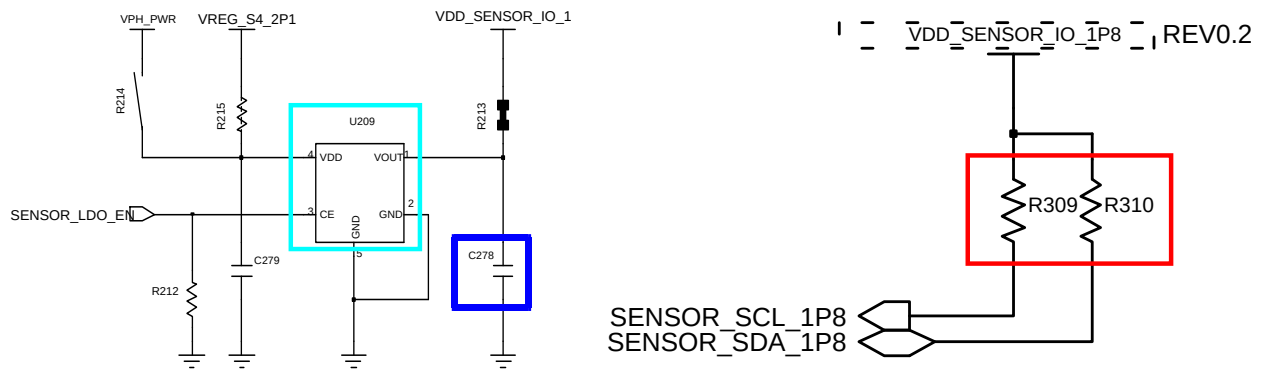


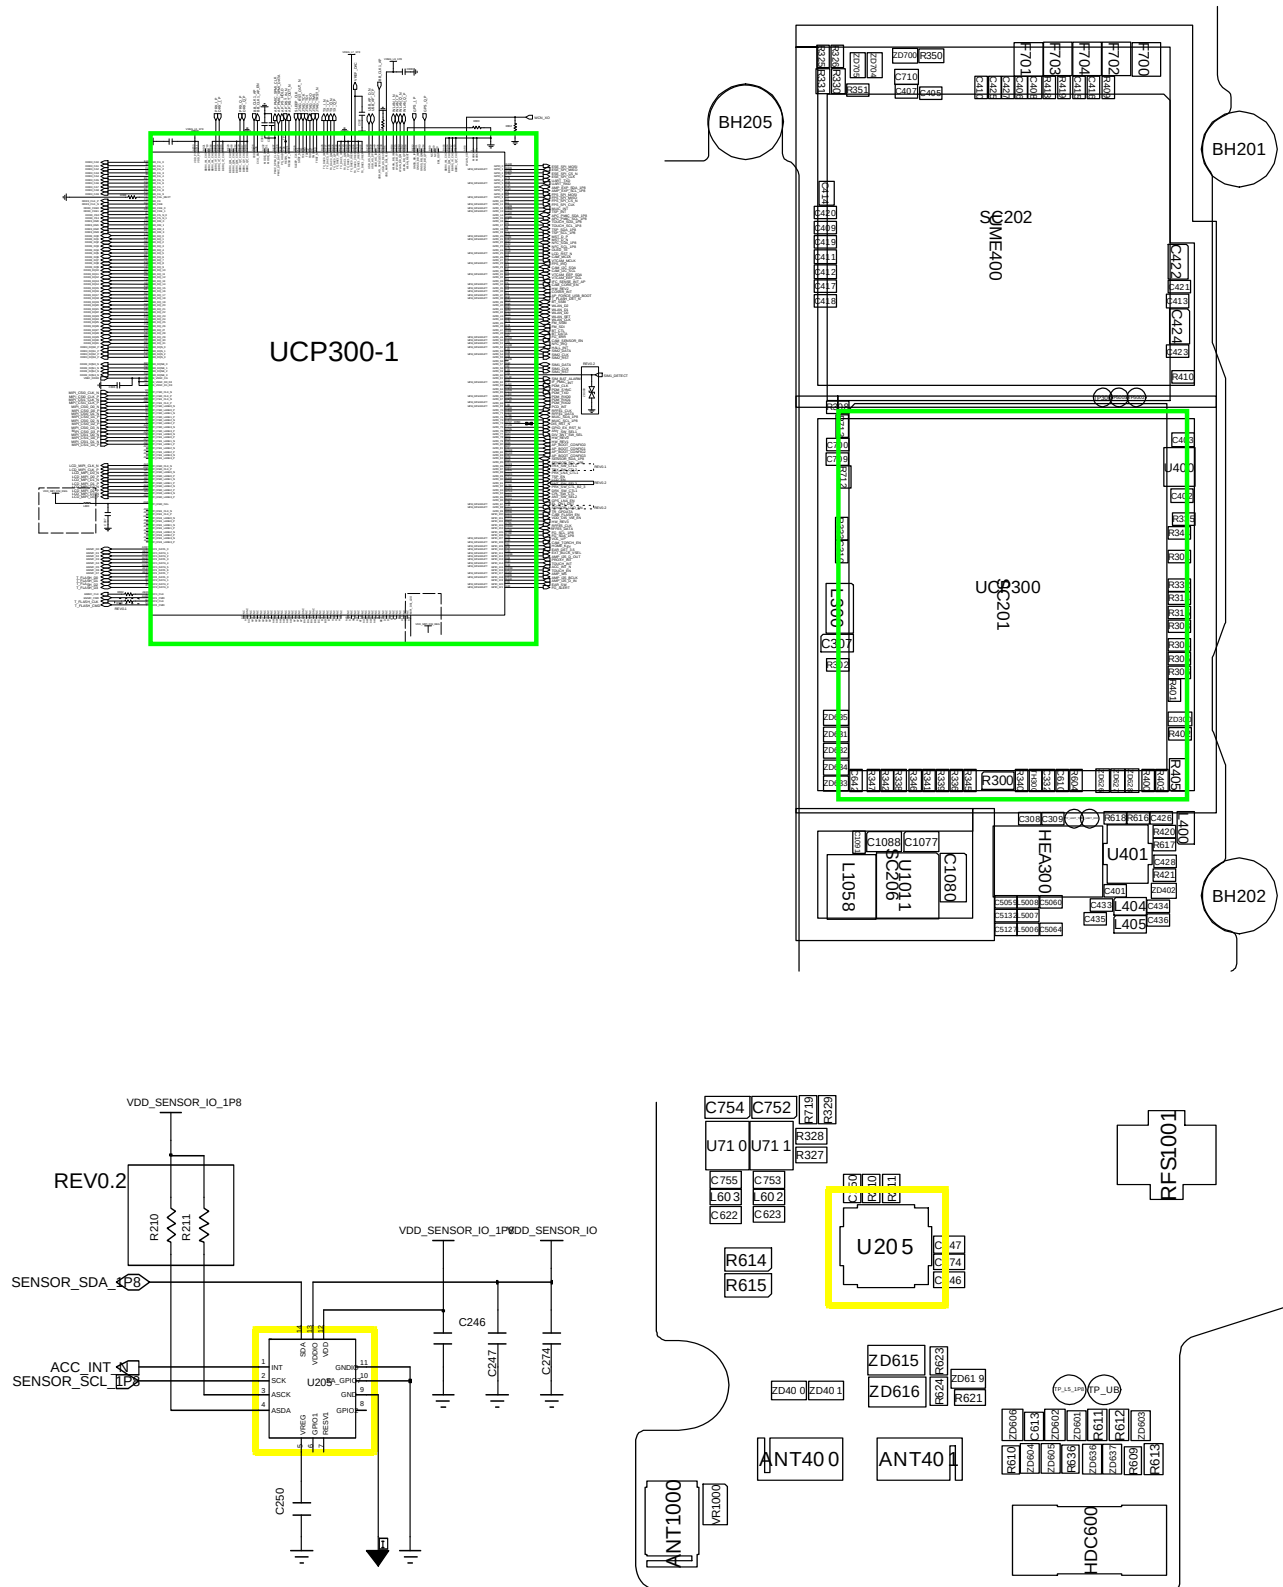


8-3-8. 磁传感器

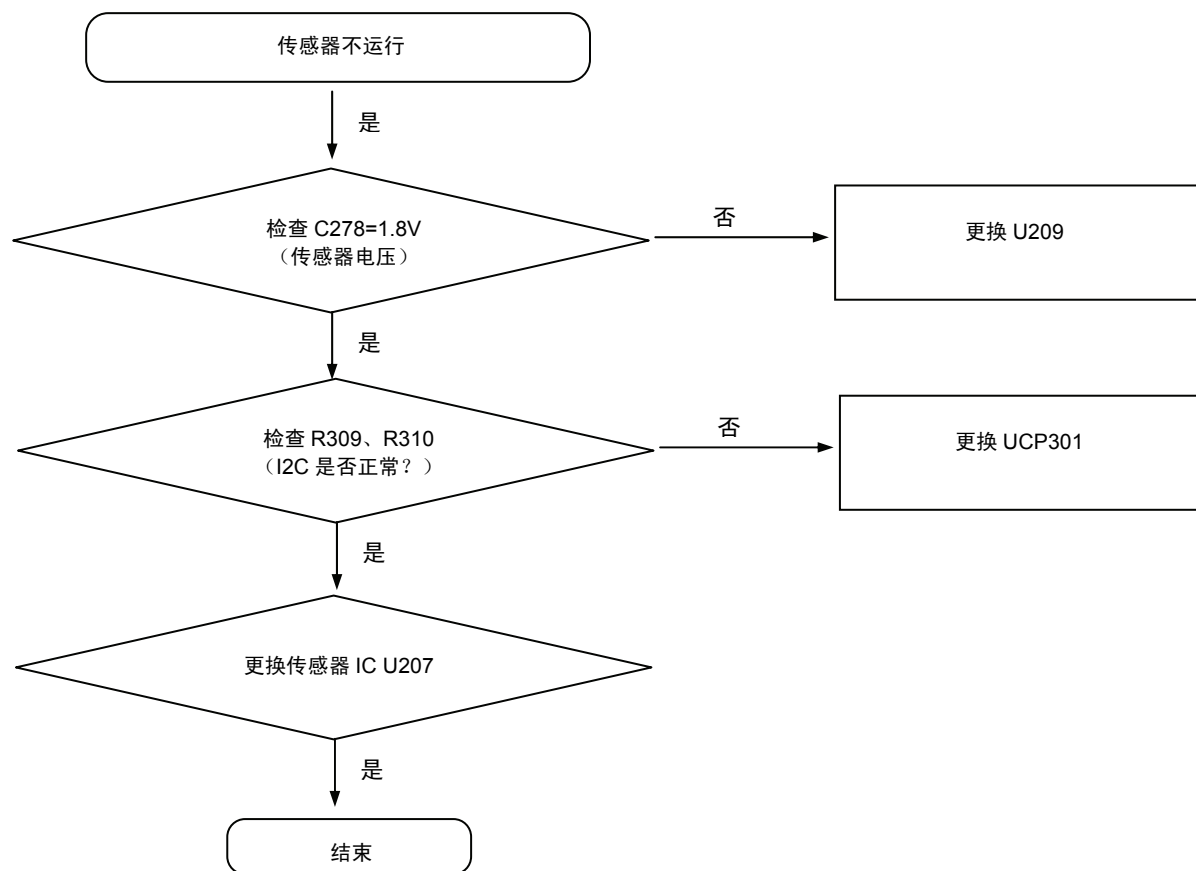

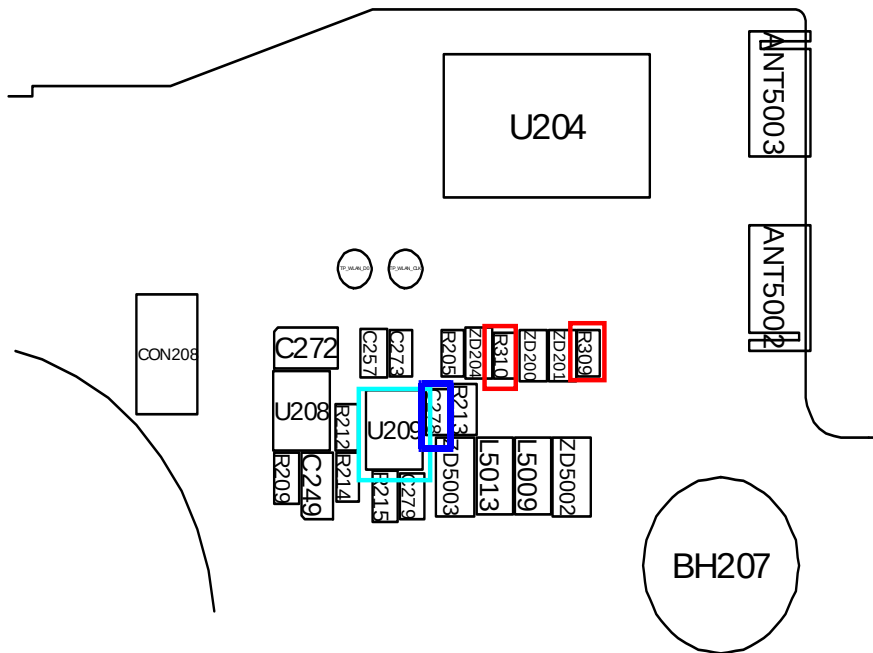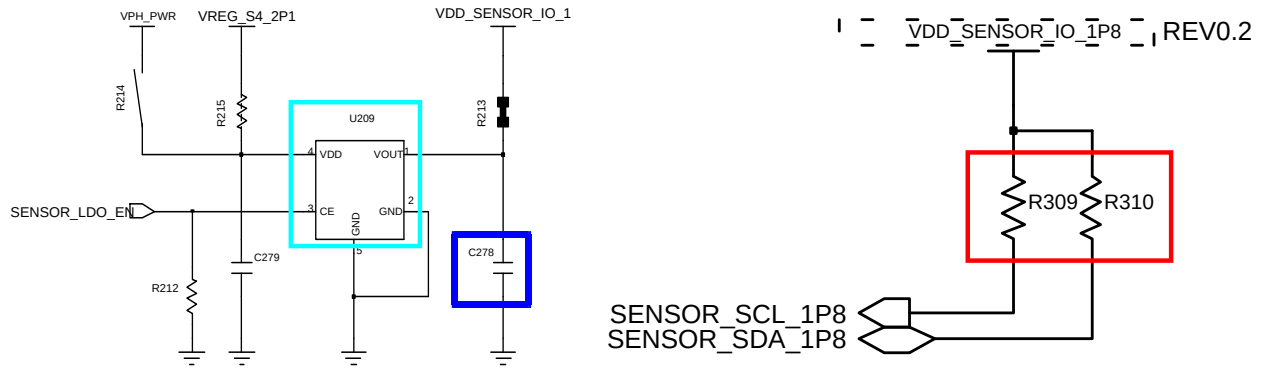


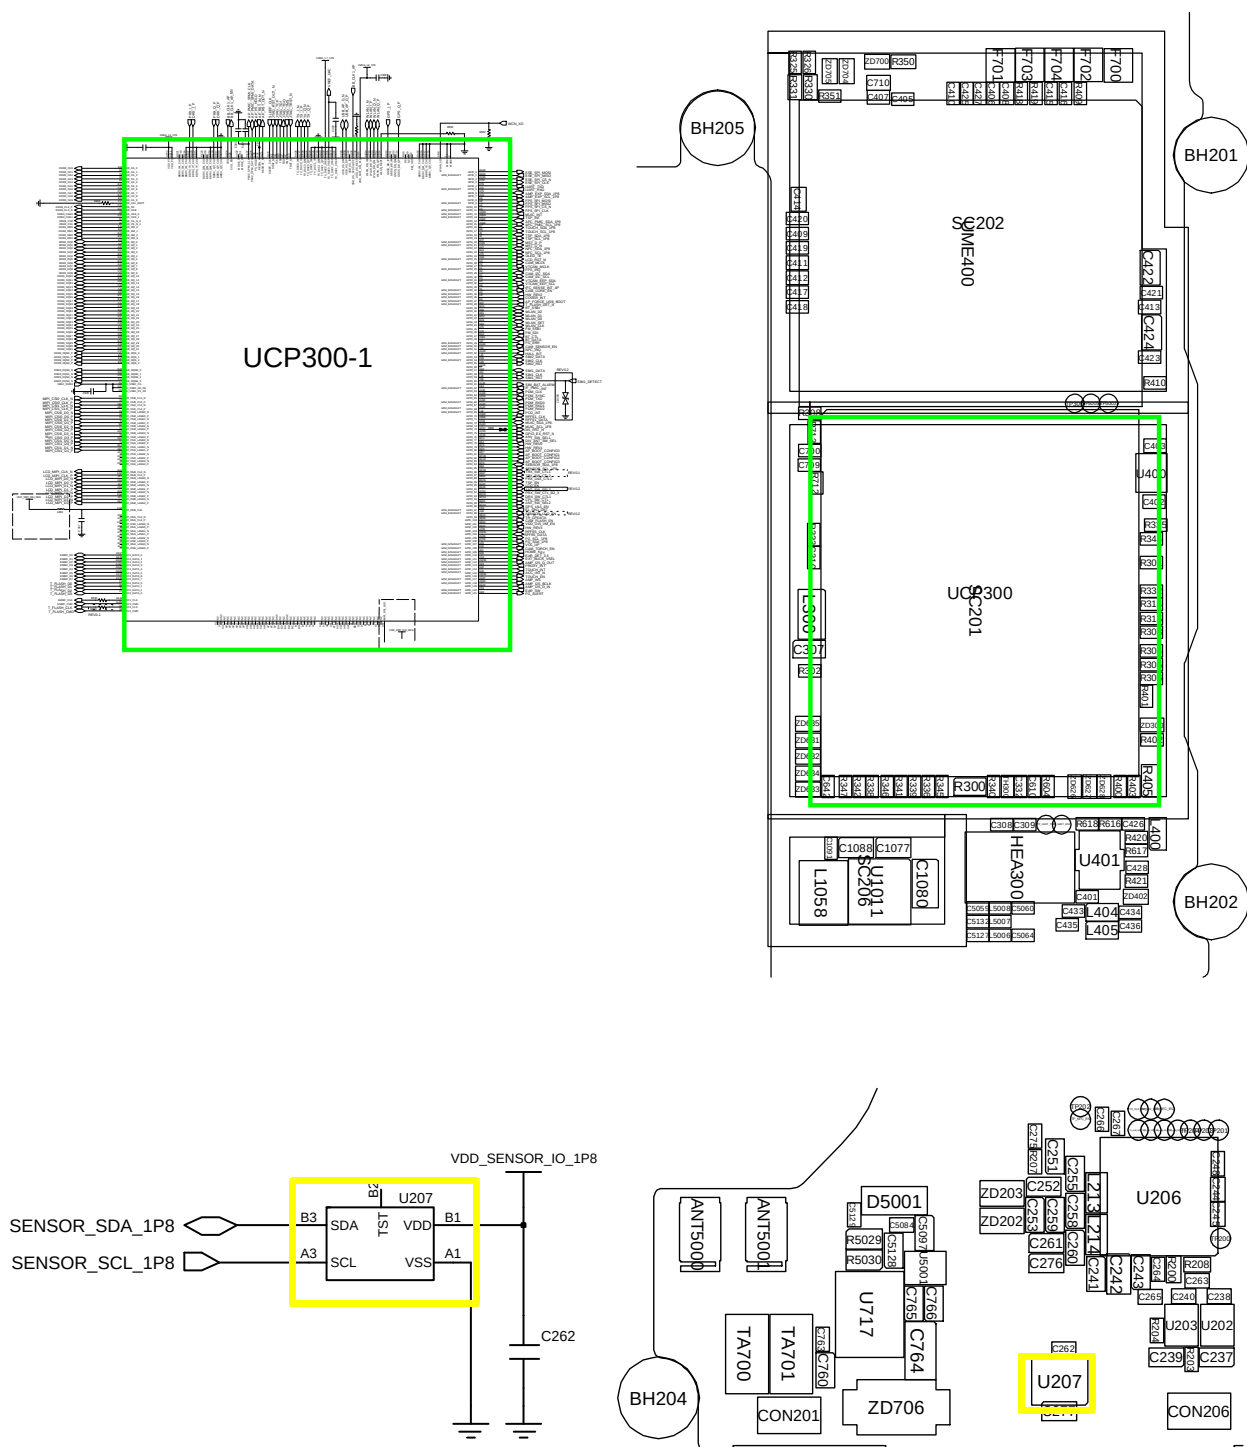


8-3-9. 扬声器部分

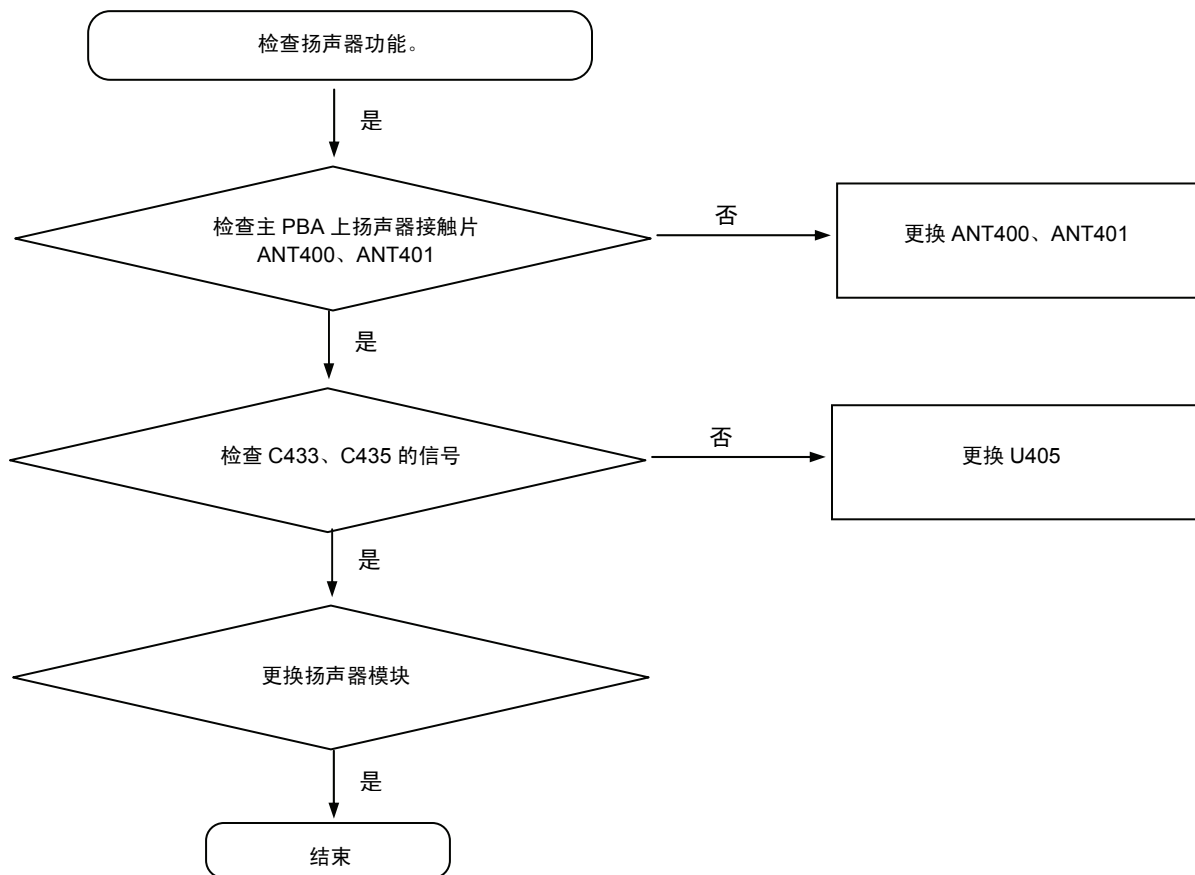



8-3-10. 接收器部分

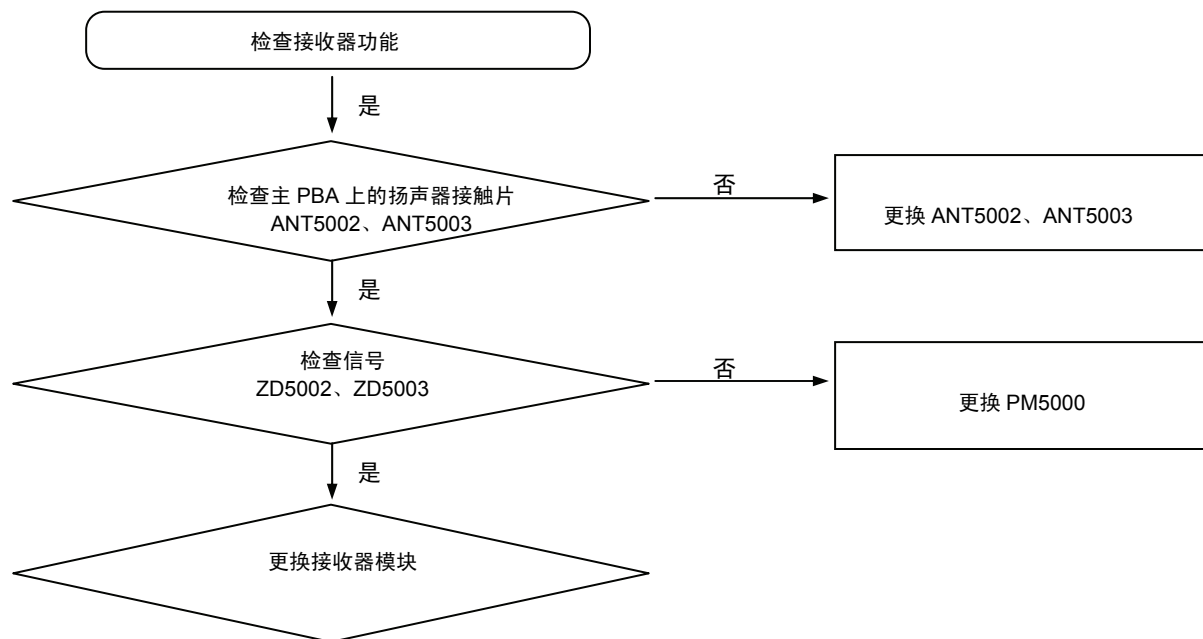

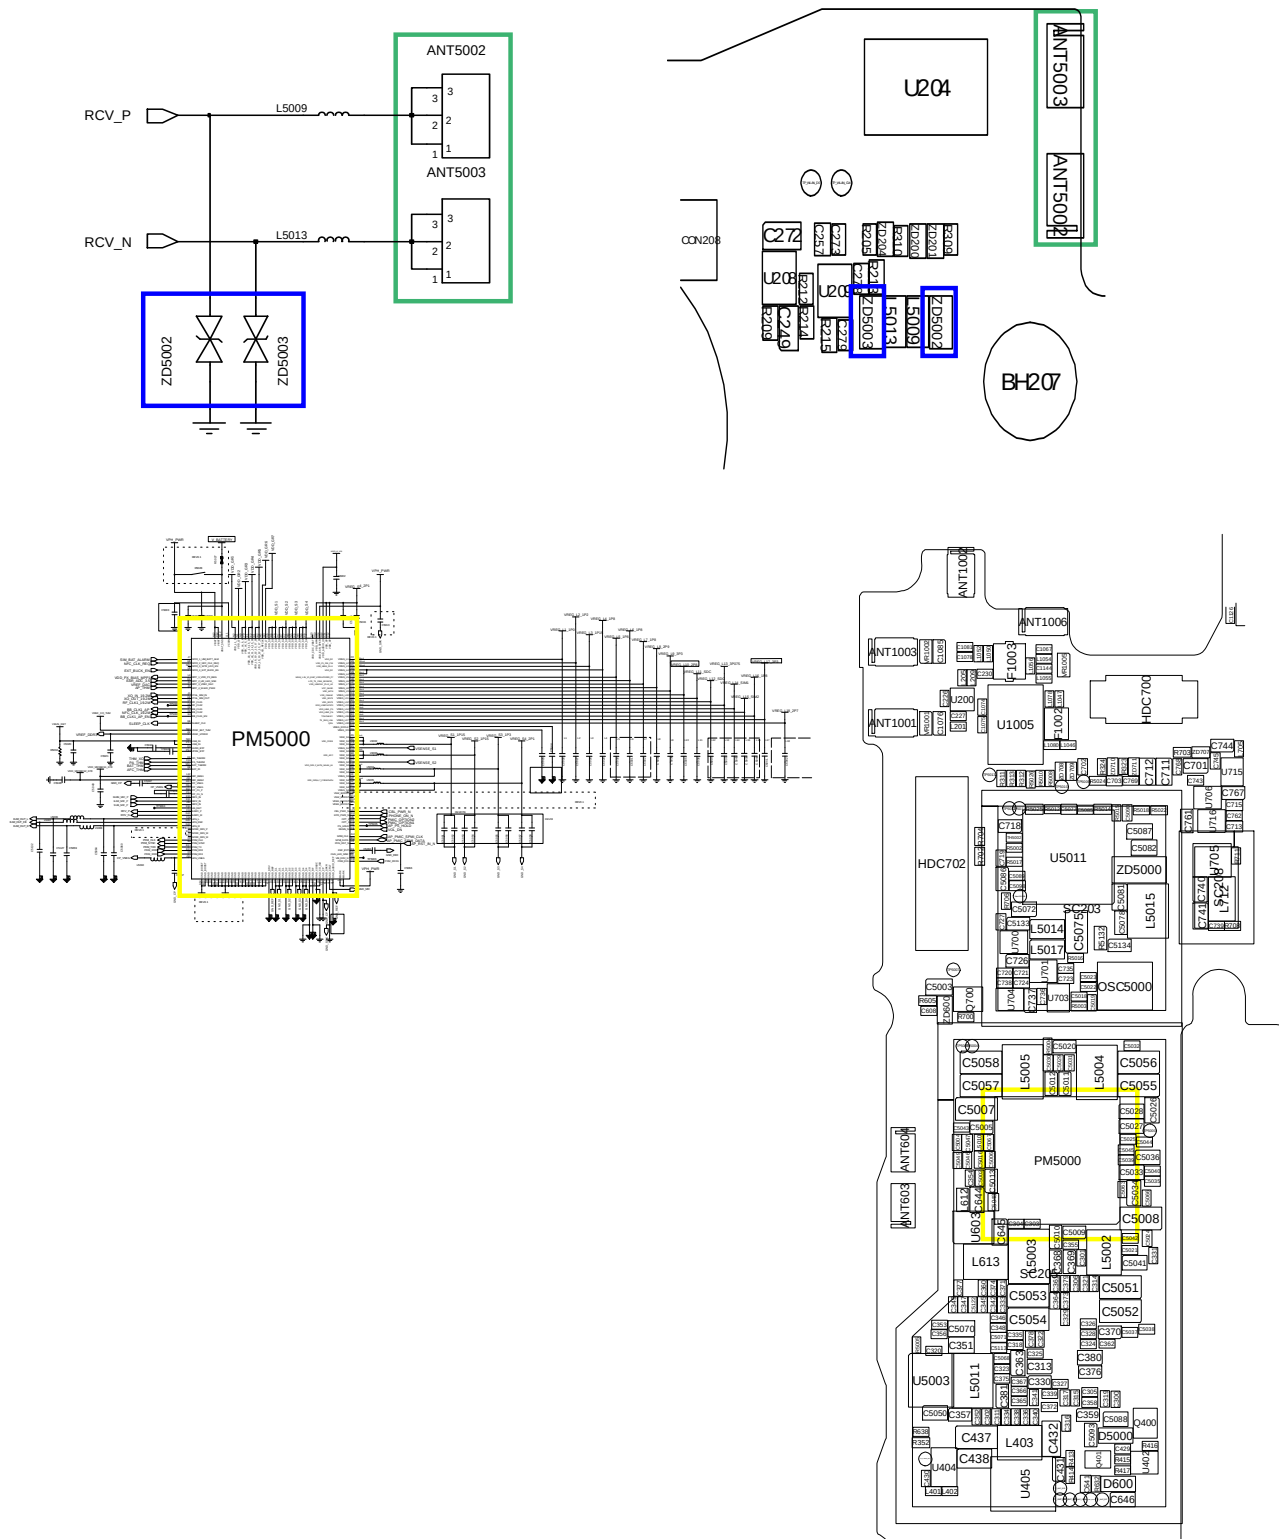



8-3-11. BT 部分

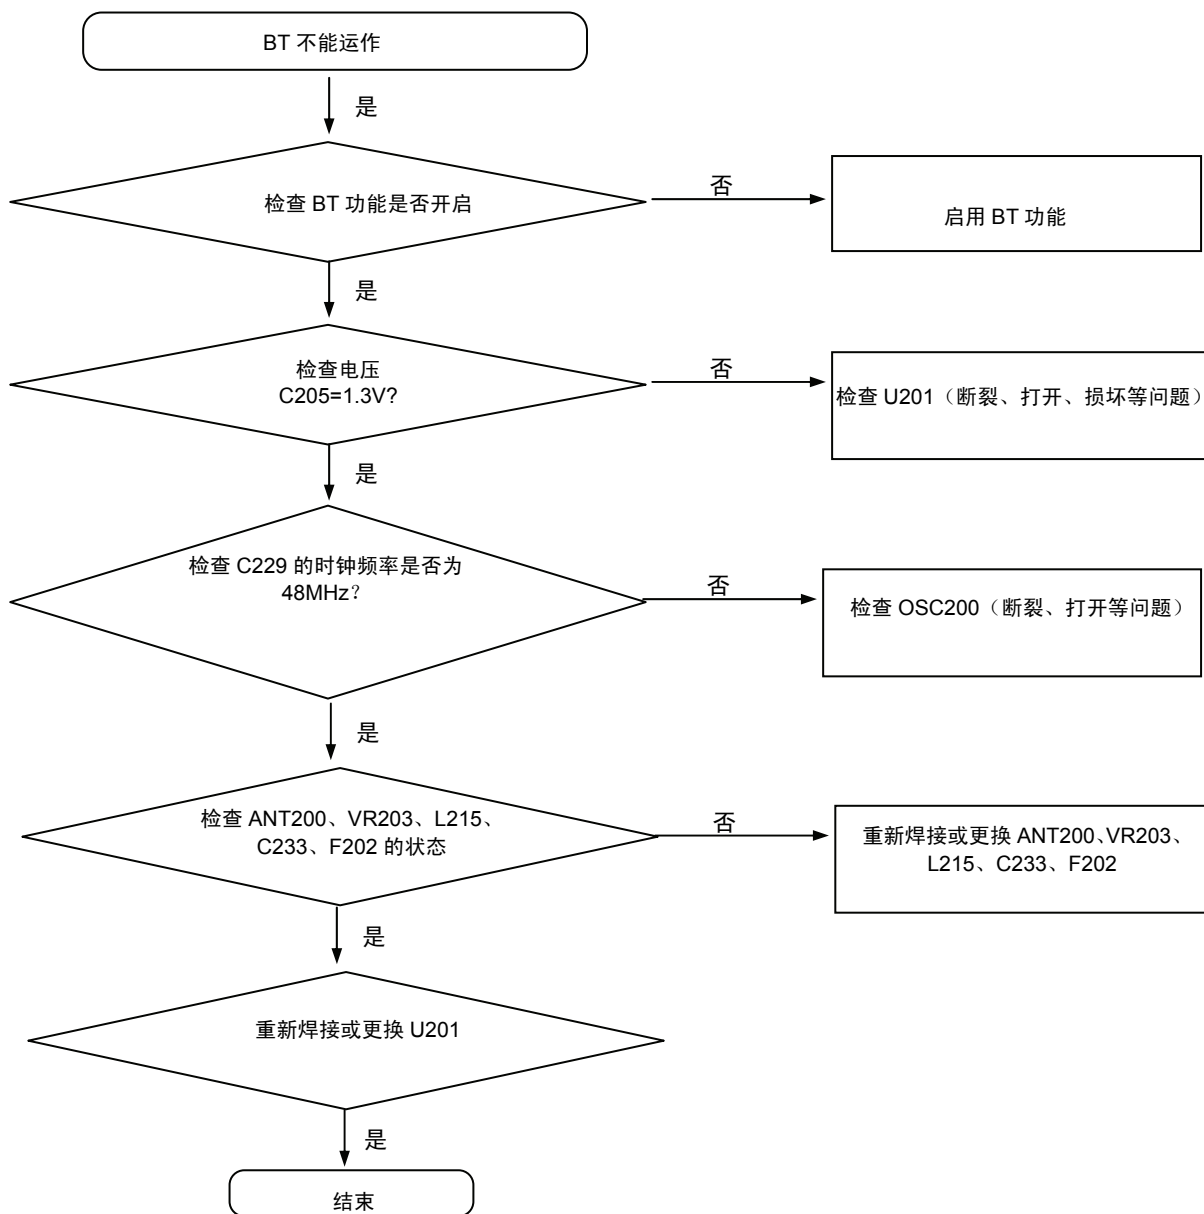

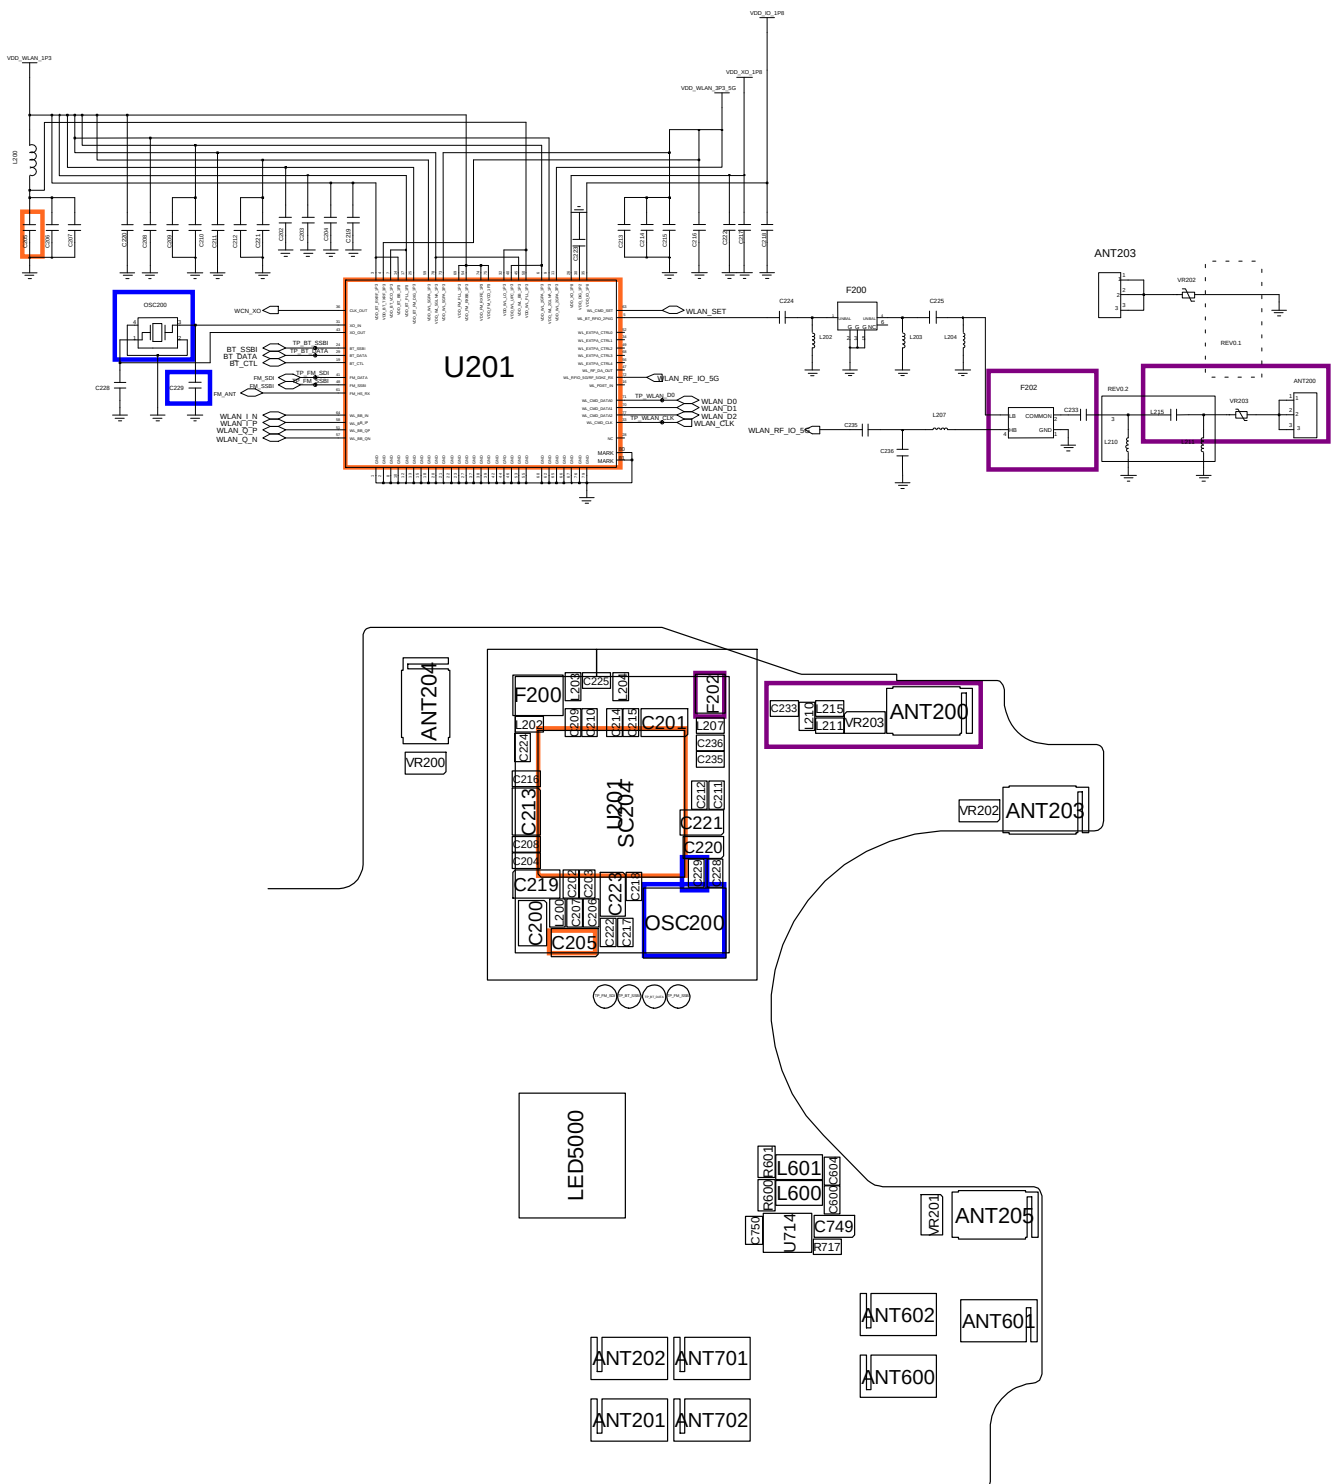



8-3-12. WIFI 部分

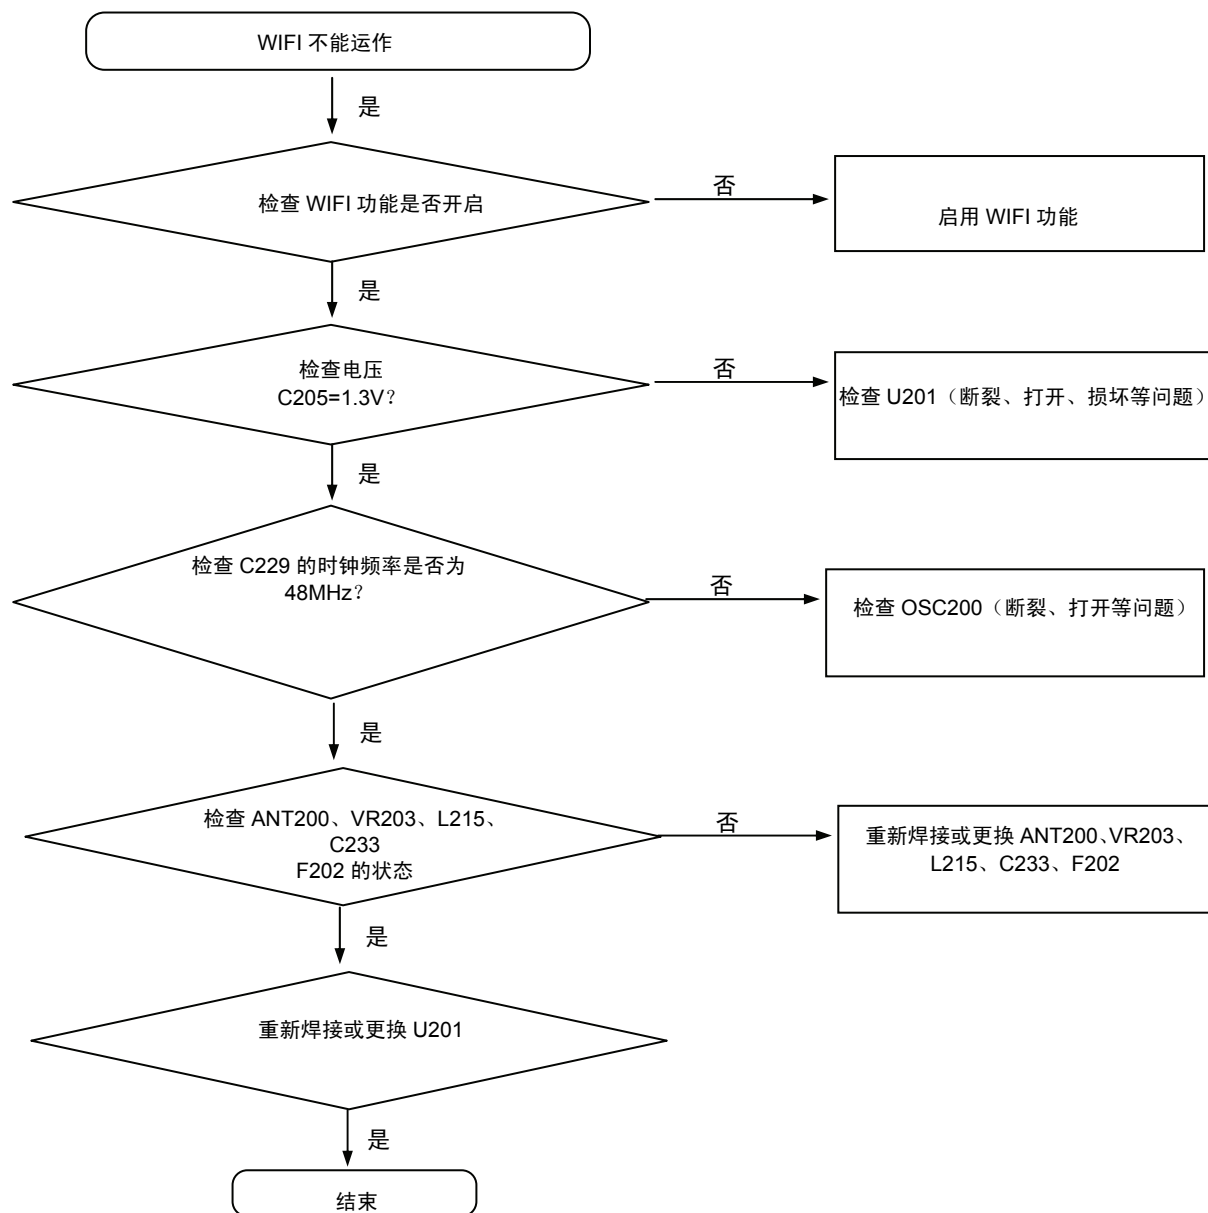





8-3-13. GPS 部分

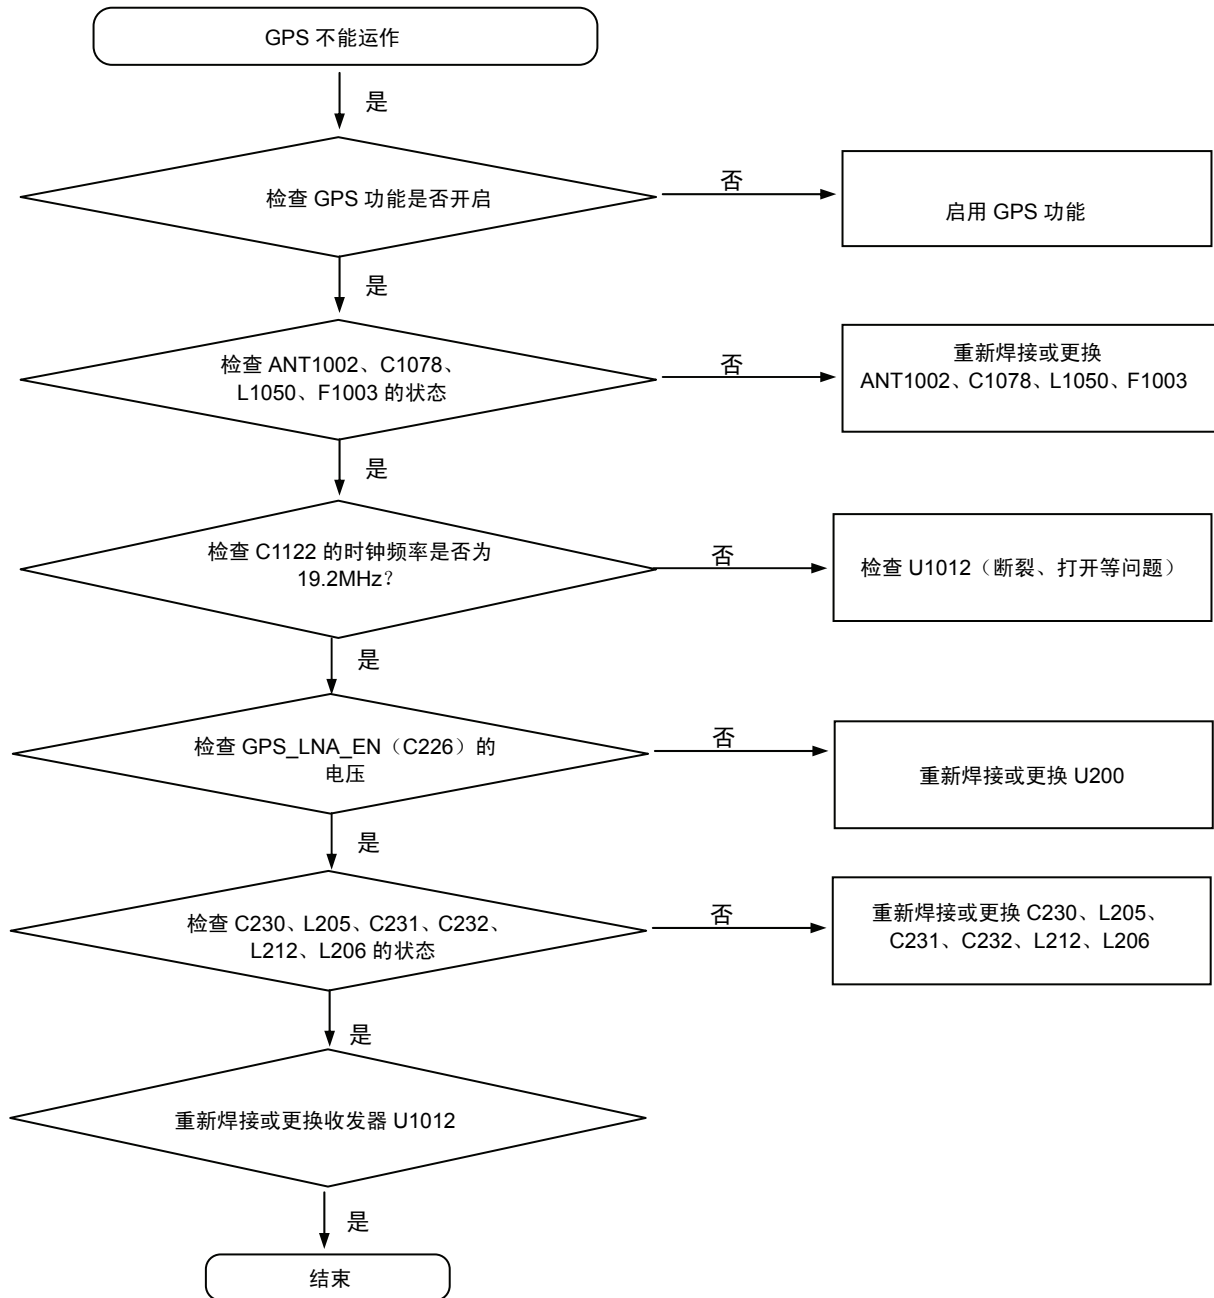








8-3-14. 液晶显示屏

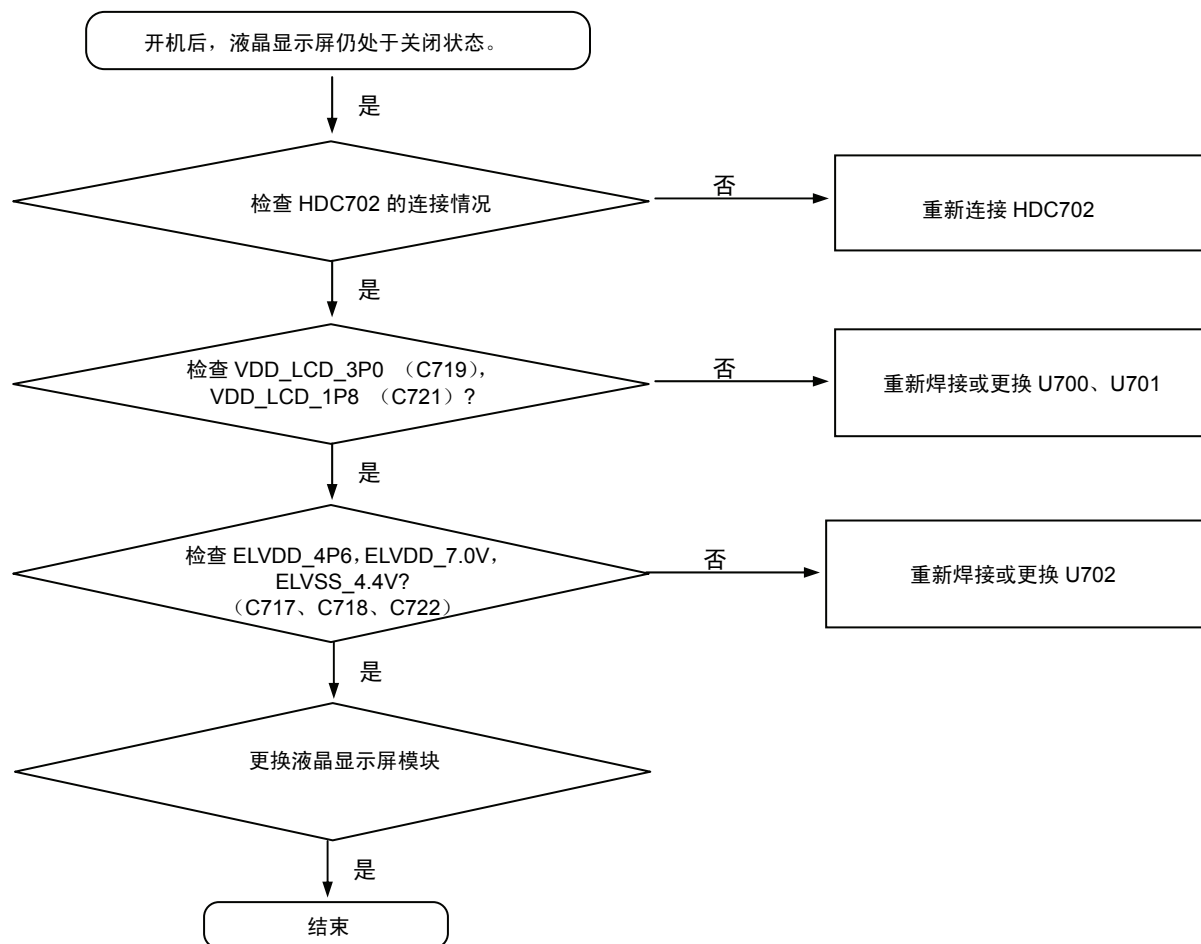



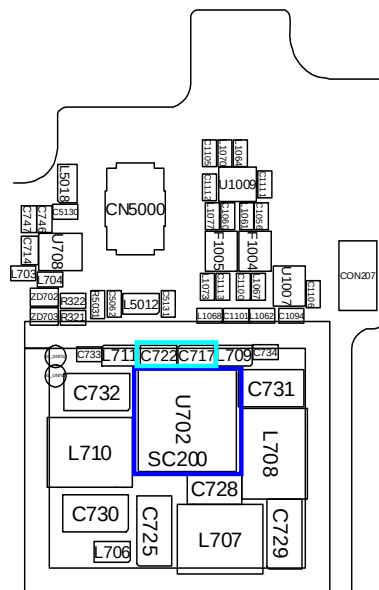


8-3-15. 13M 摄像头

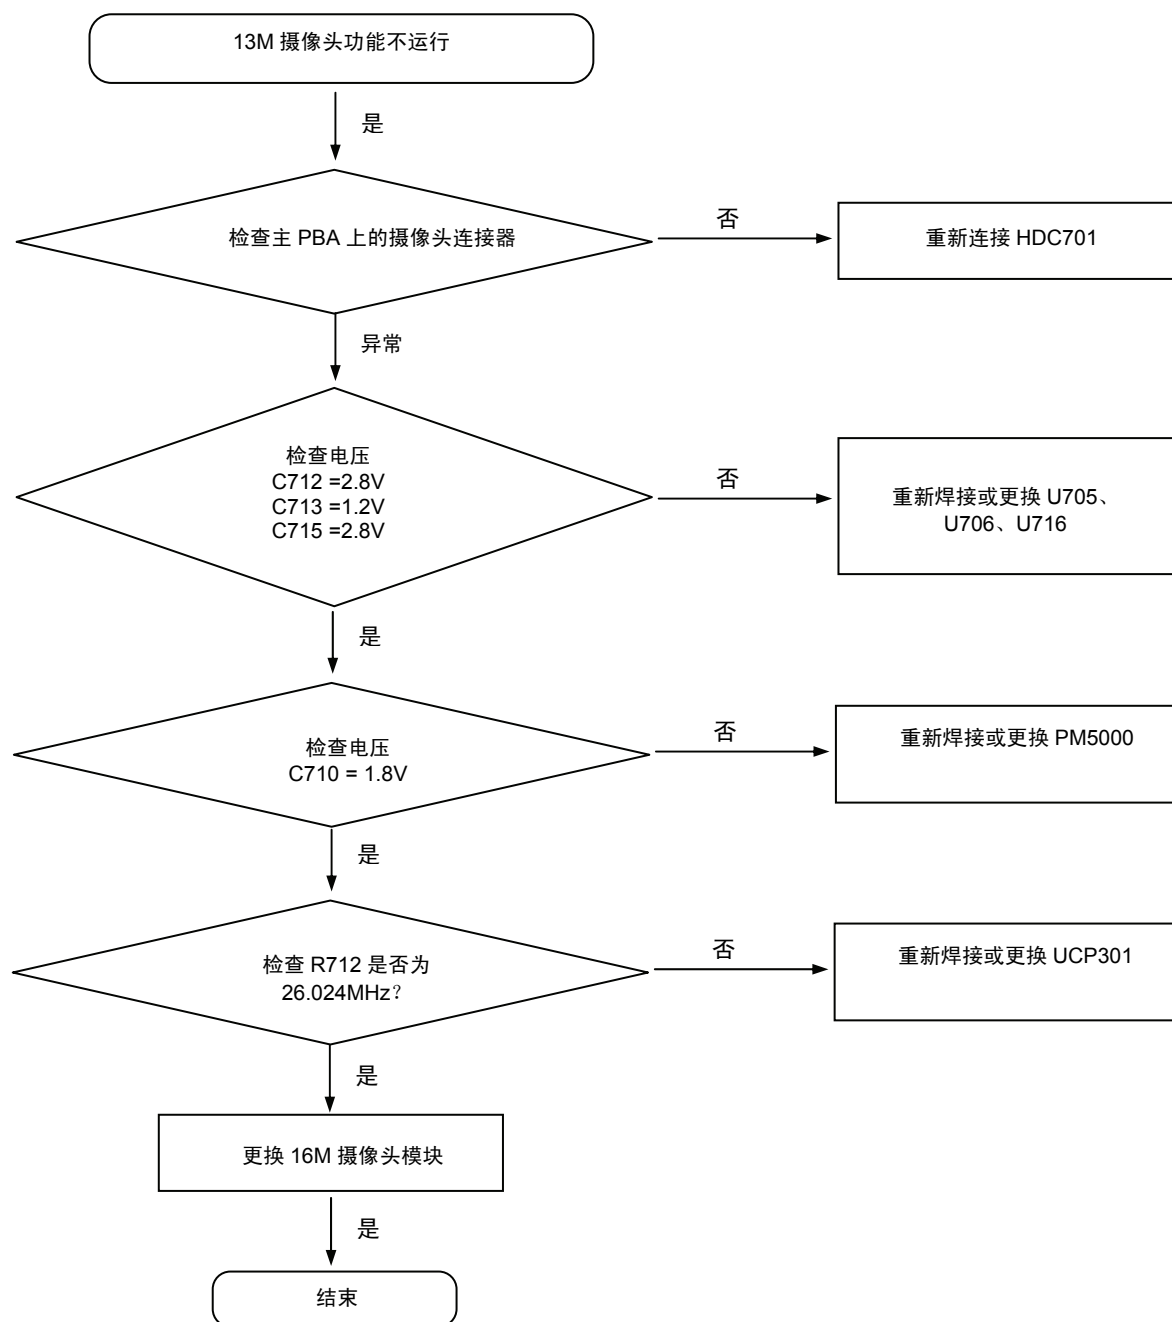


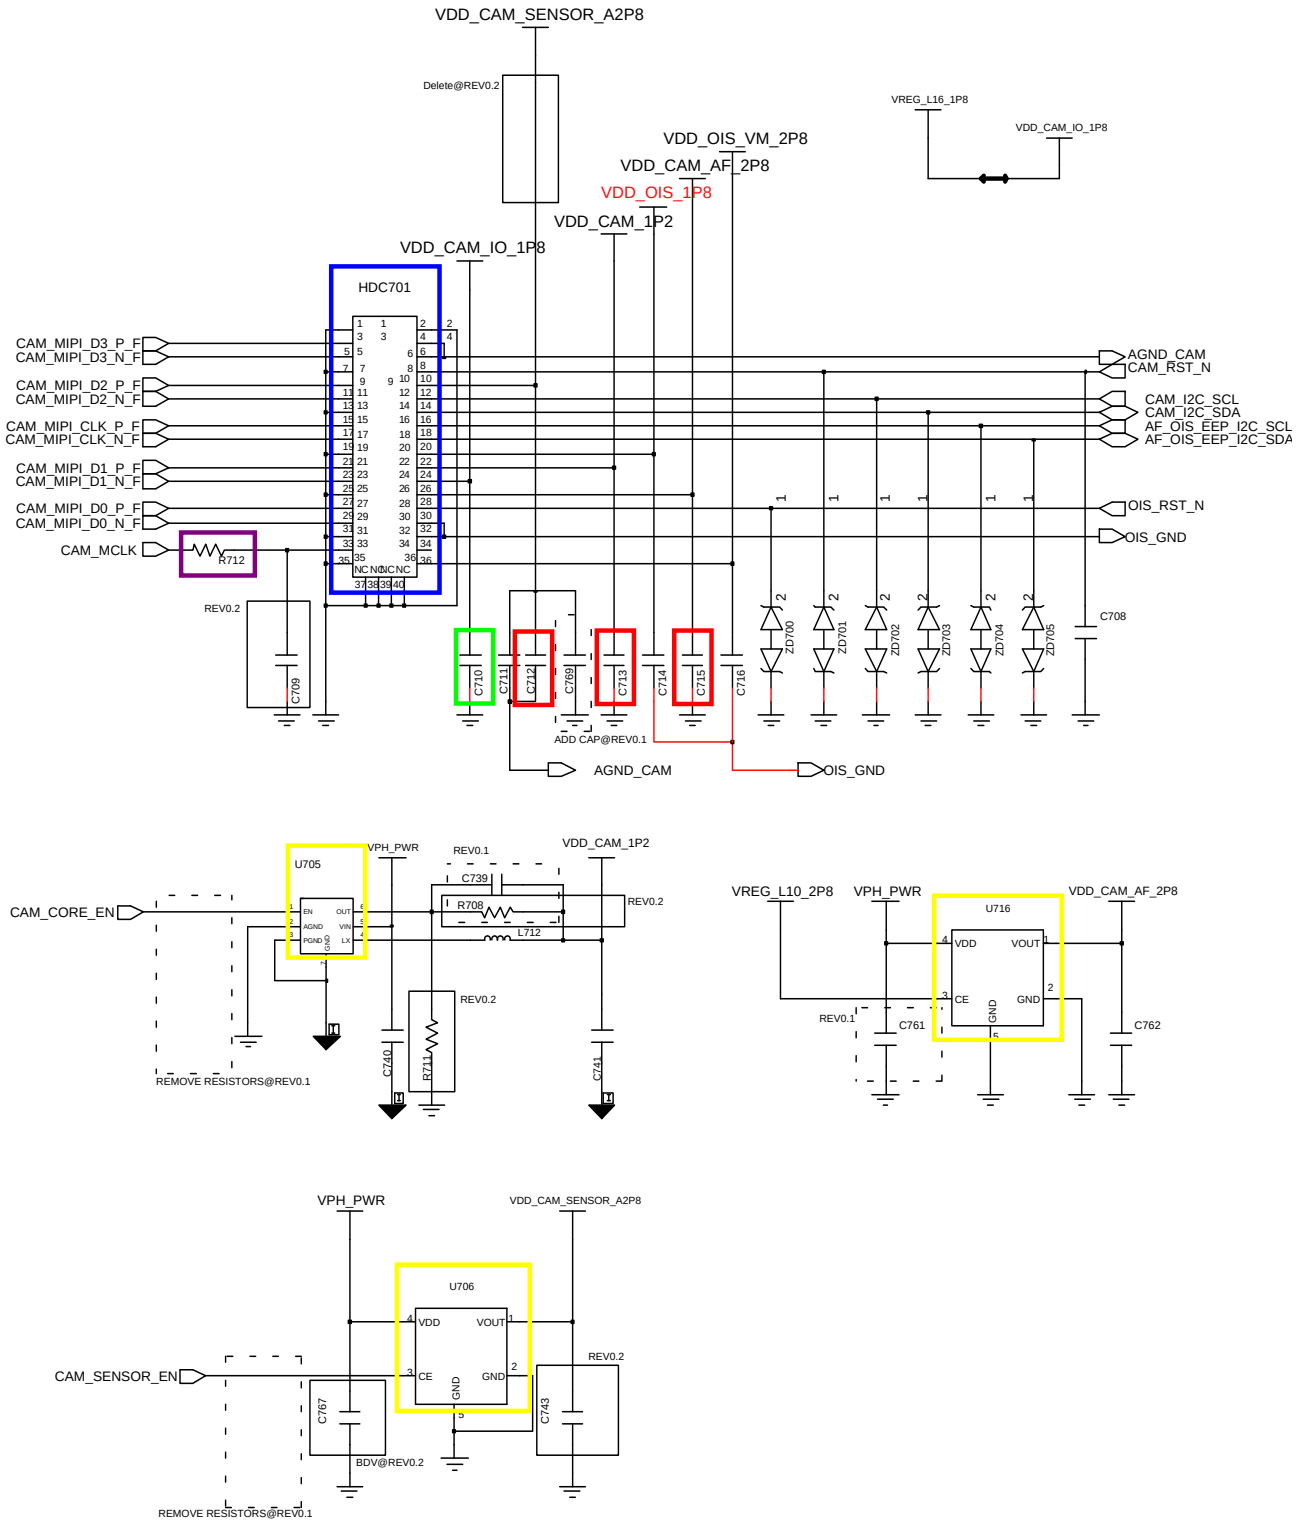


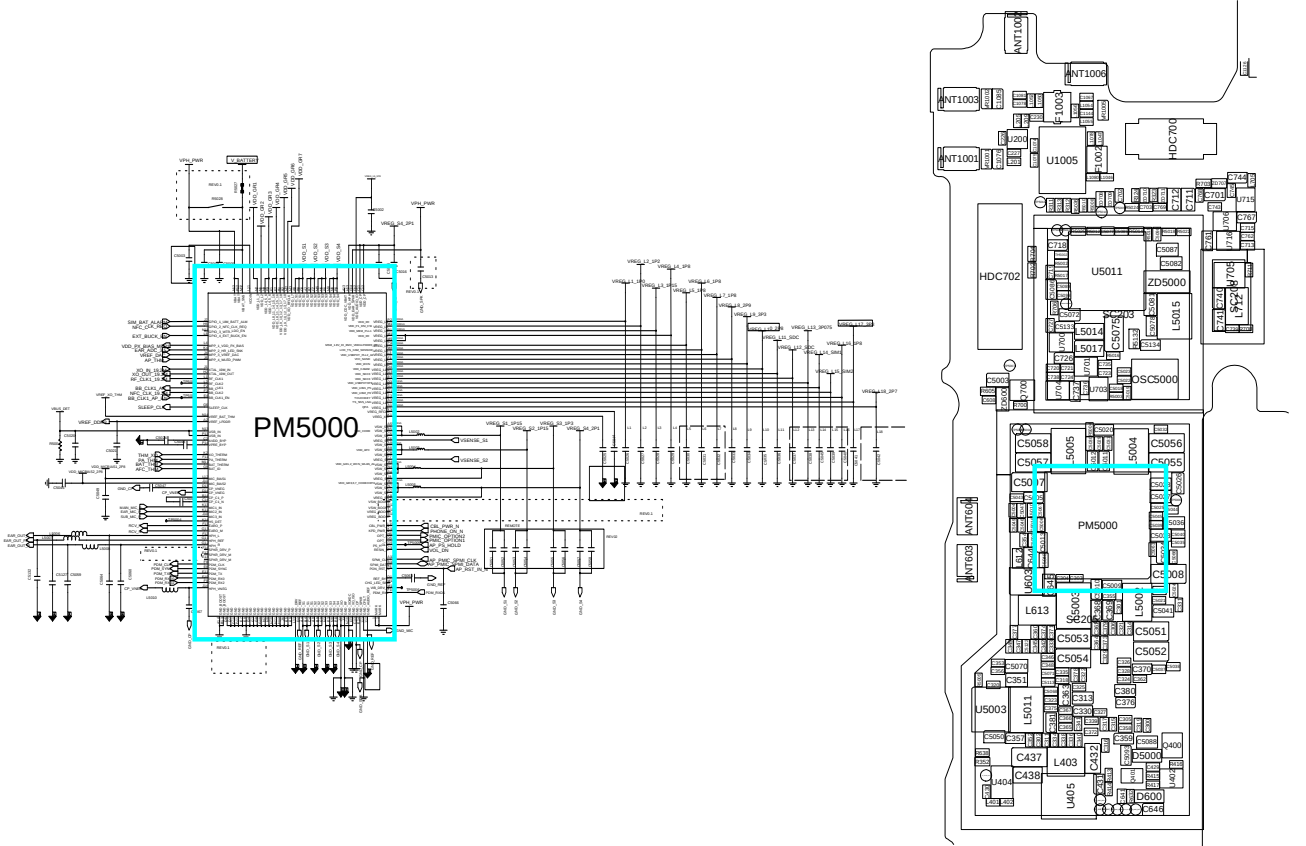


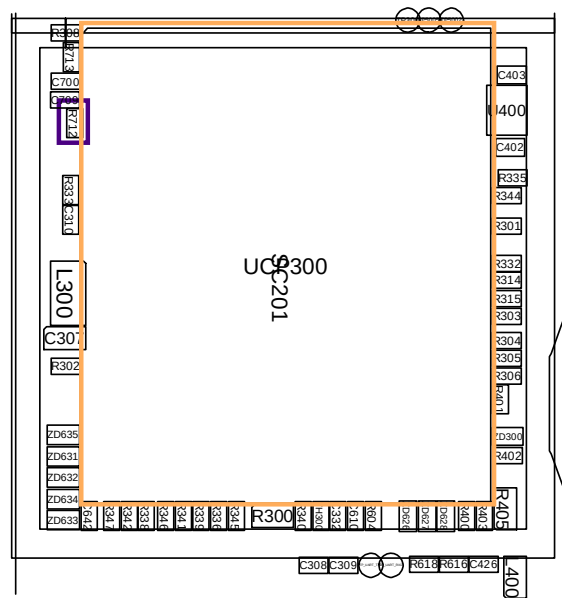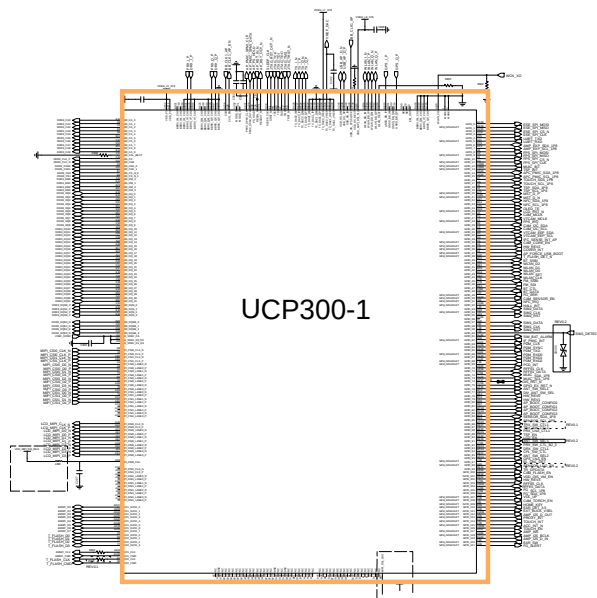


8-3-16. 5M 摄像头

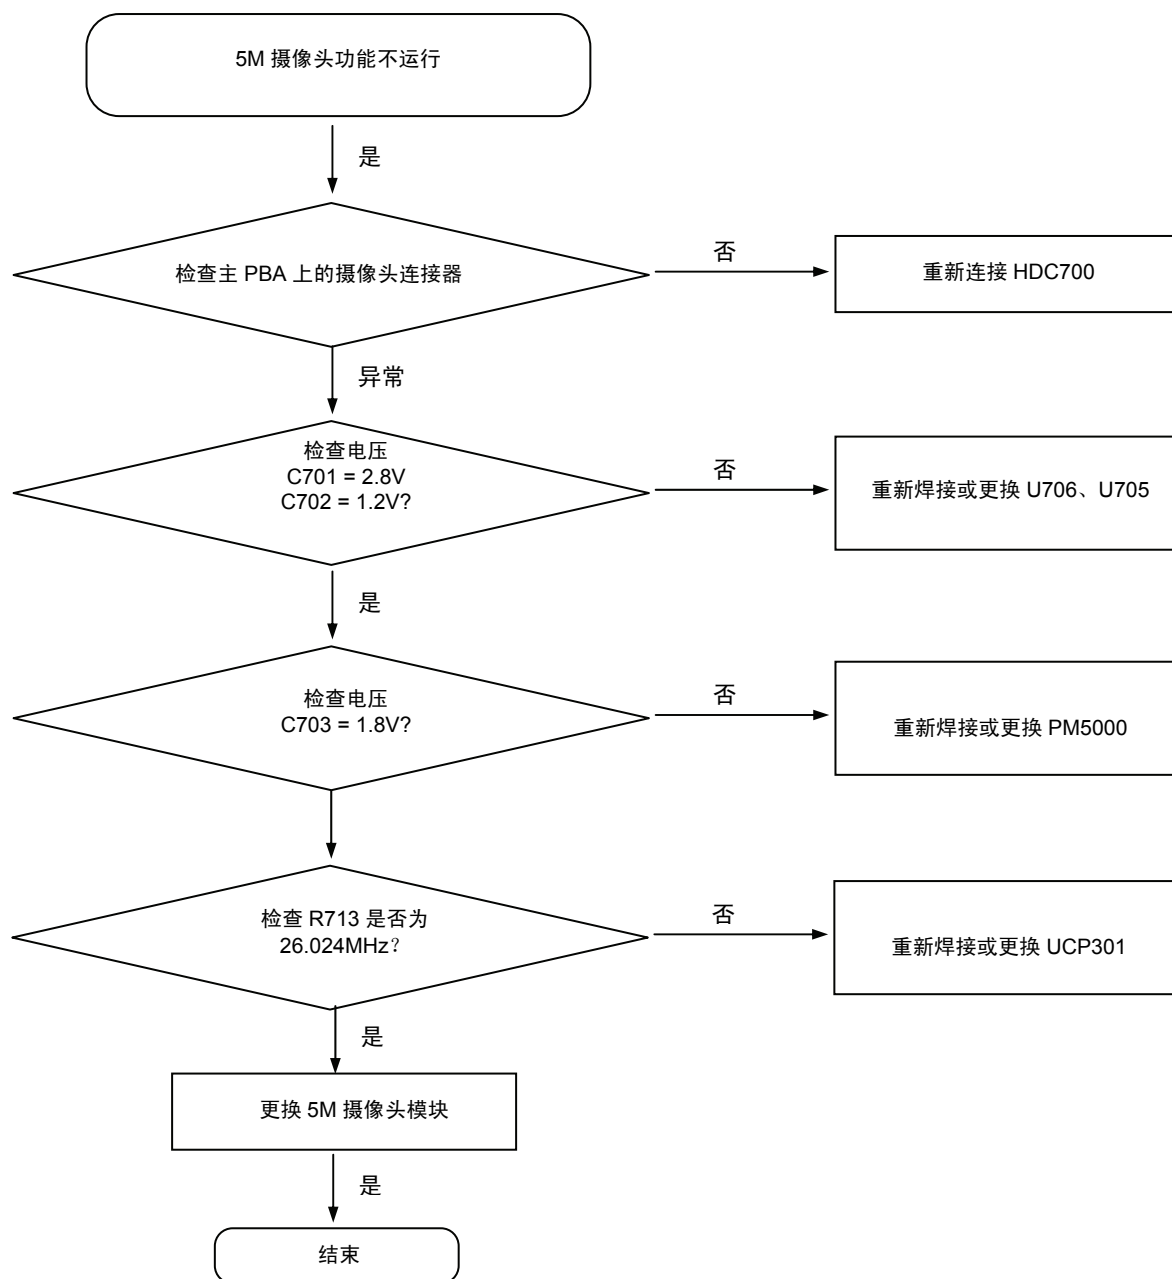




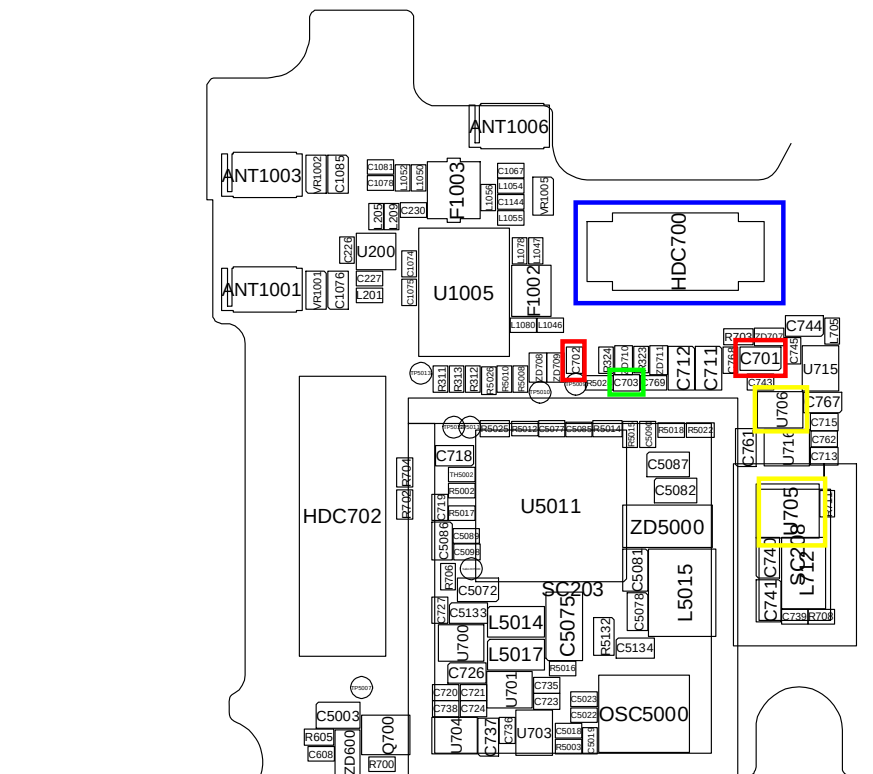






8-3-17. TSP

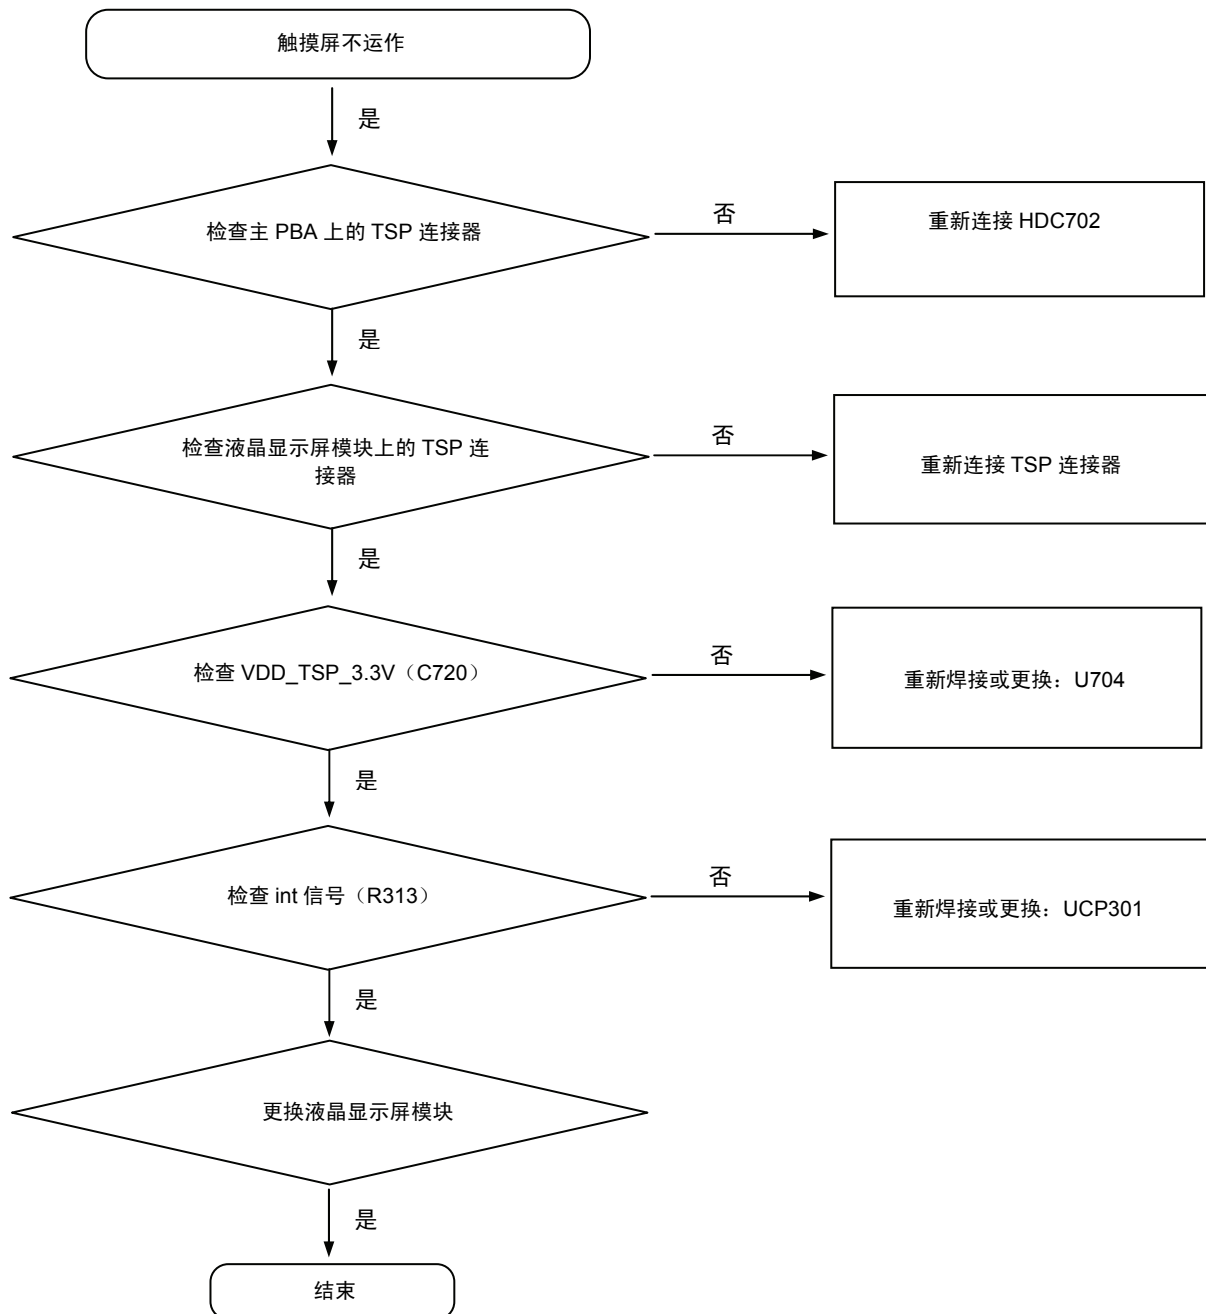

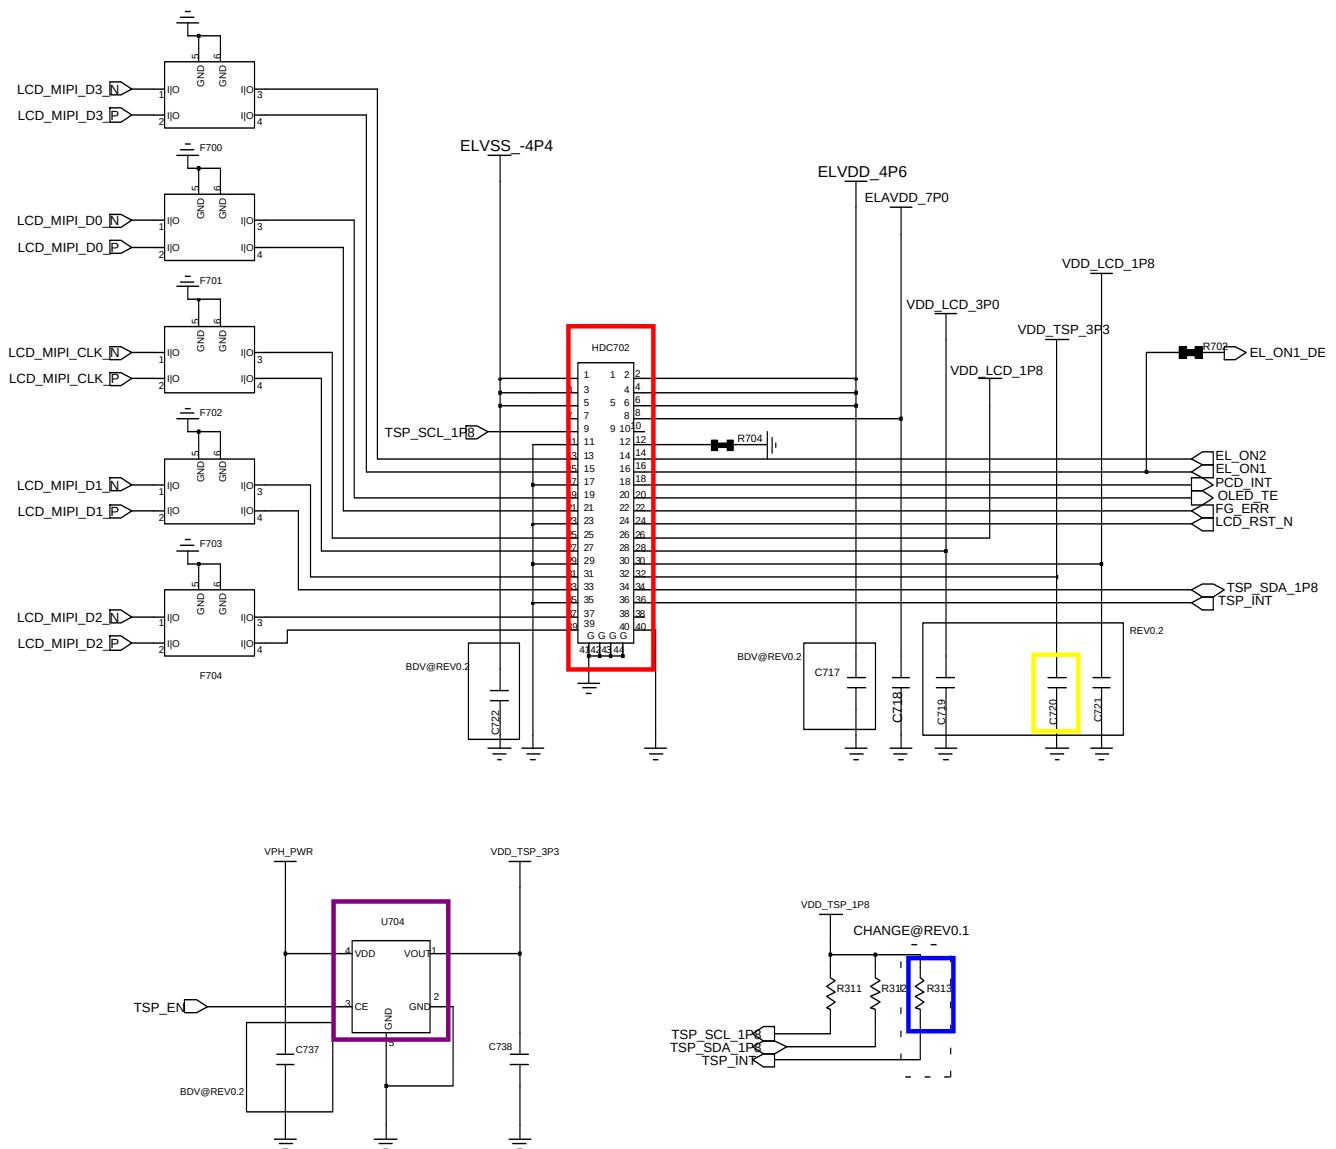


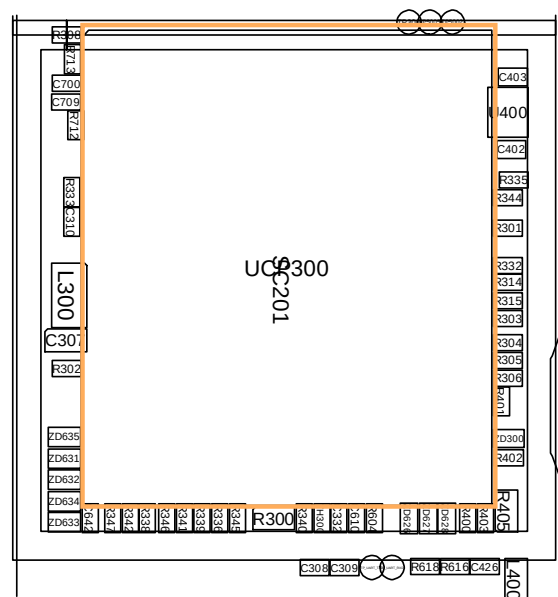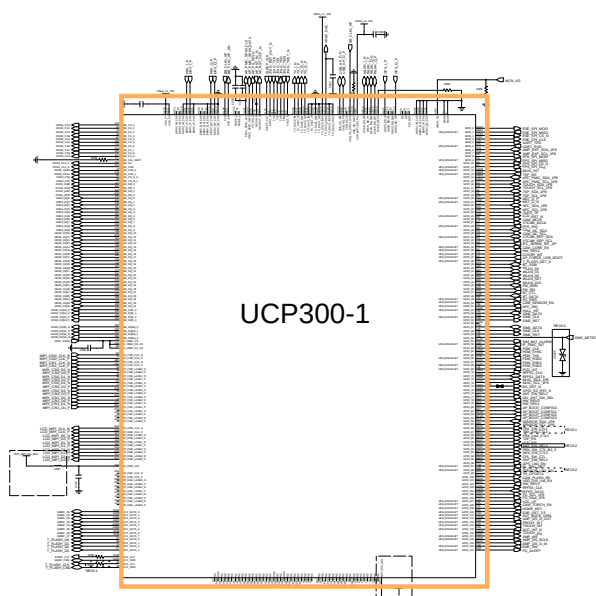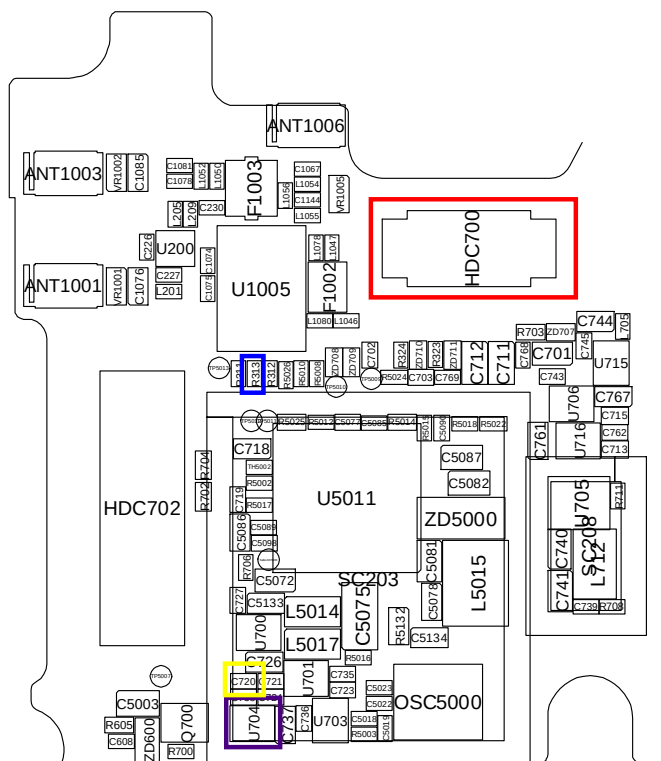


8-3-19. 电机

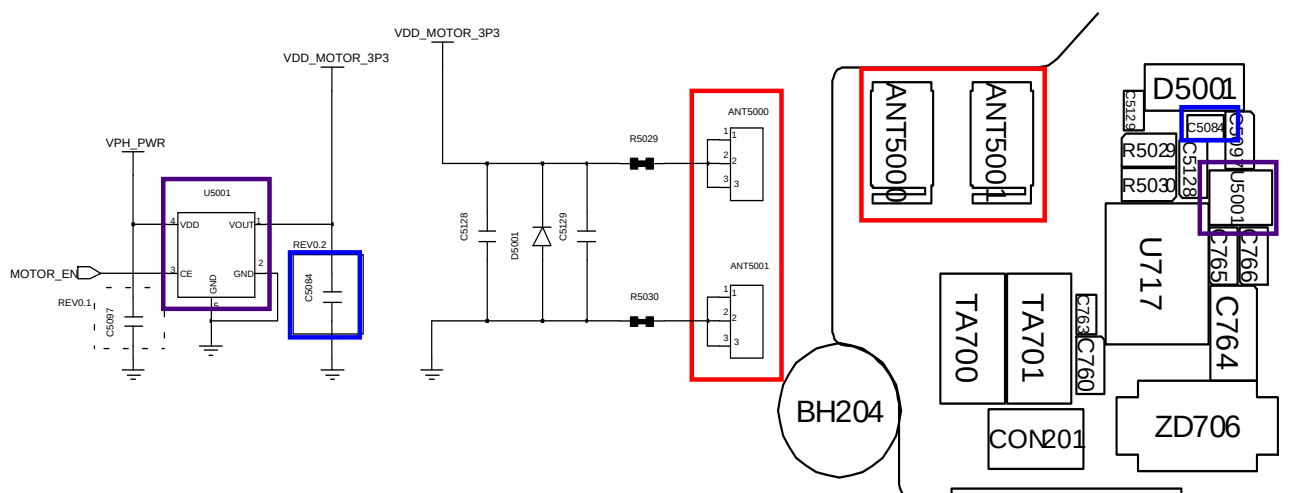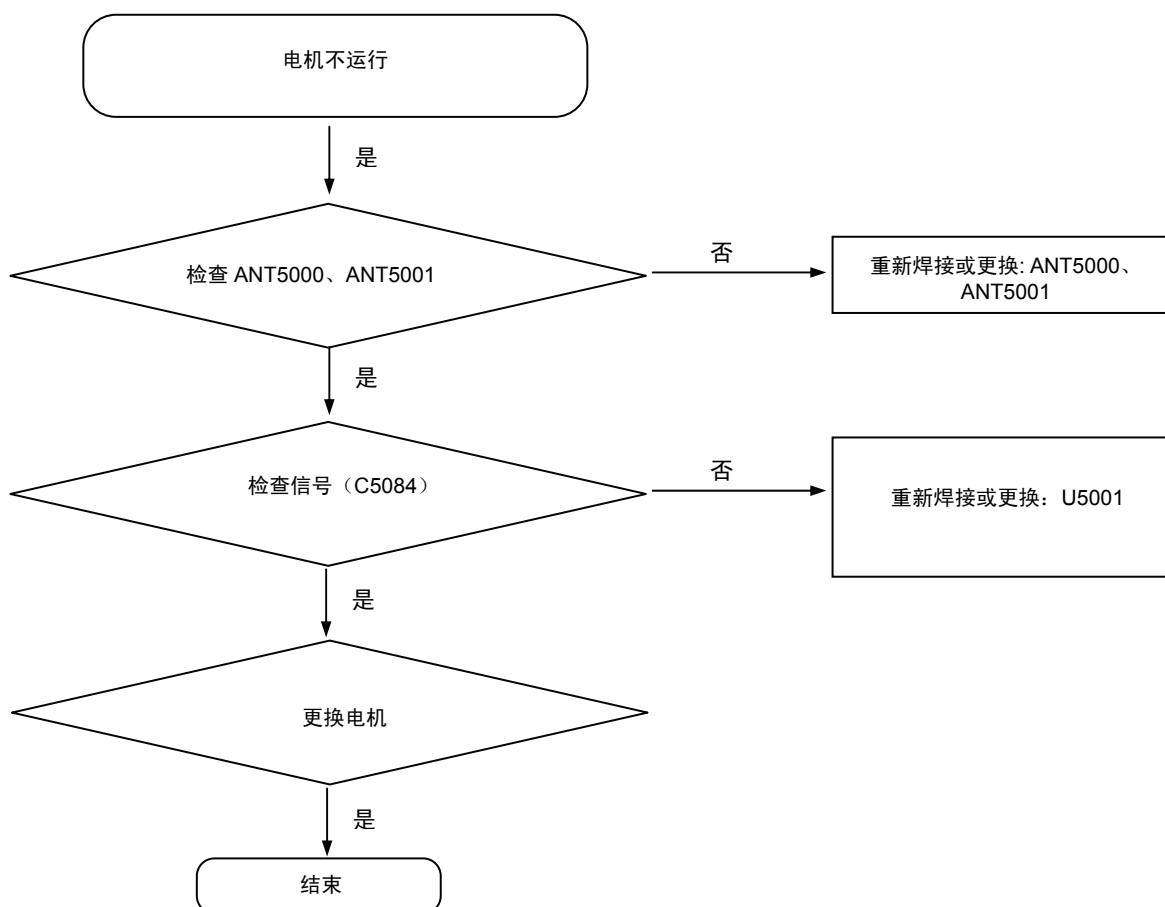



8-3-20. NFC

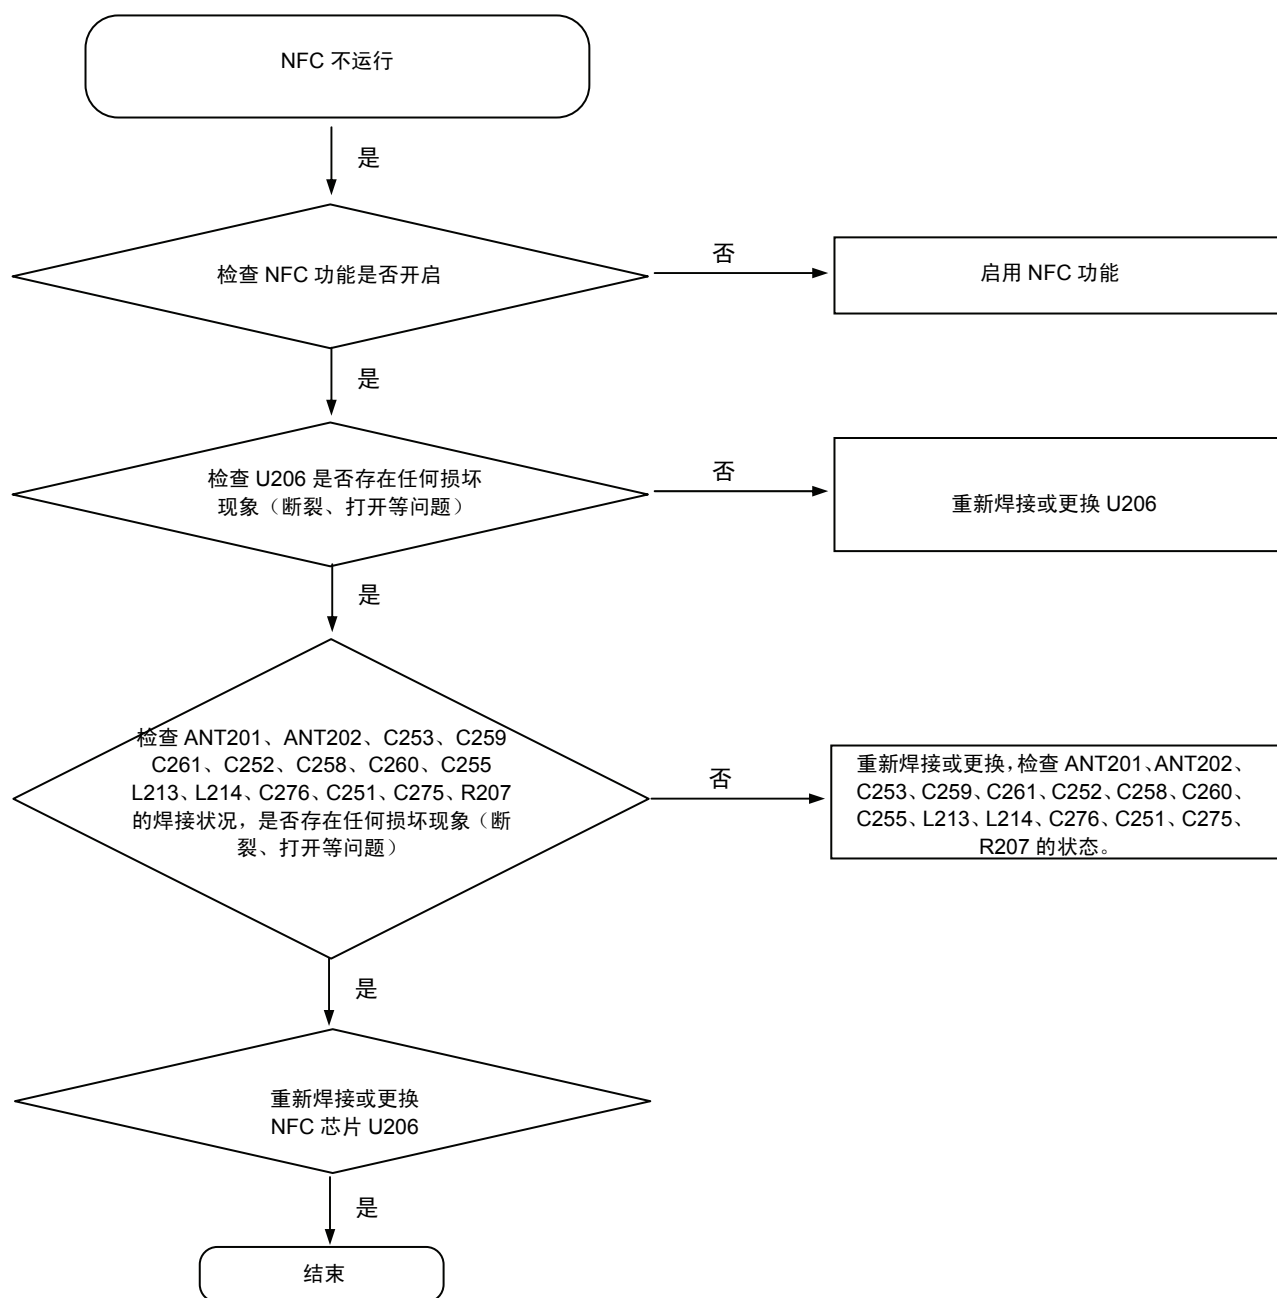

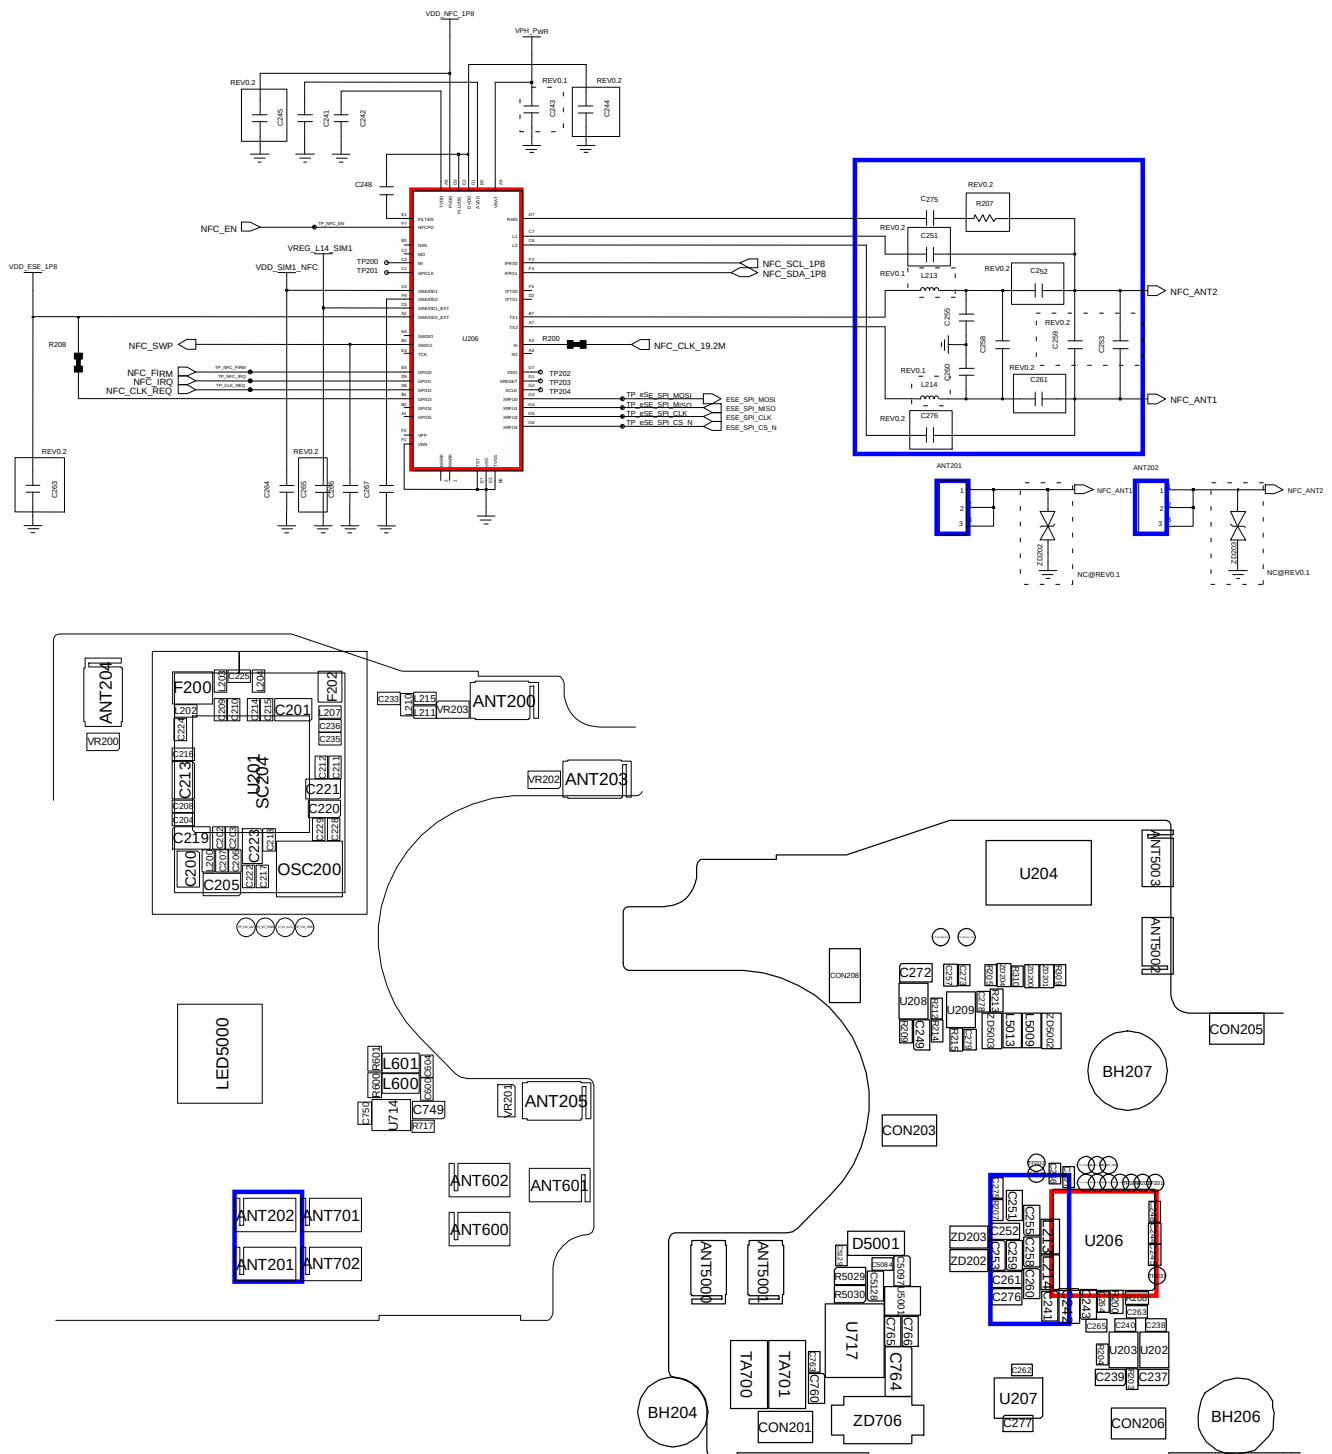




8-3-21. GSM 850、900、1800、1900 / LTE FDD BAND 1、3、7、8 / LTE TDD BAND 38、39、40、41 / TD-SCDMA B34/B39 / CDMA BC0 RX

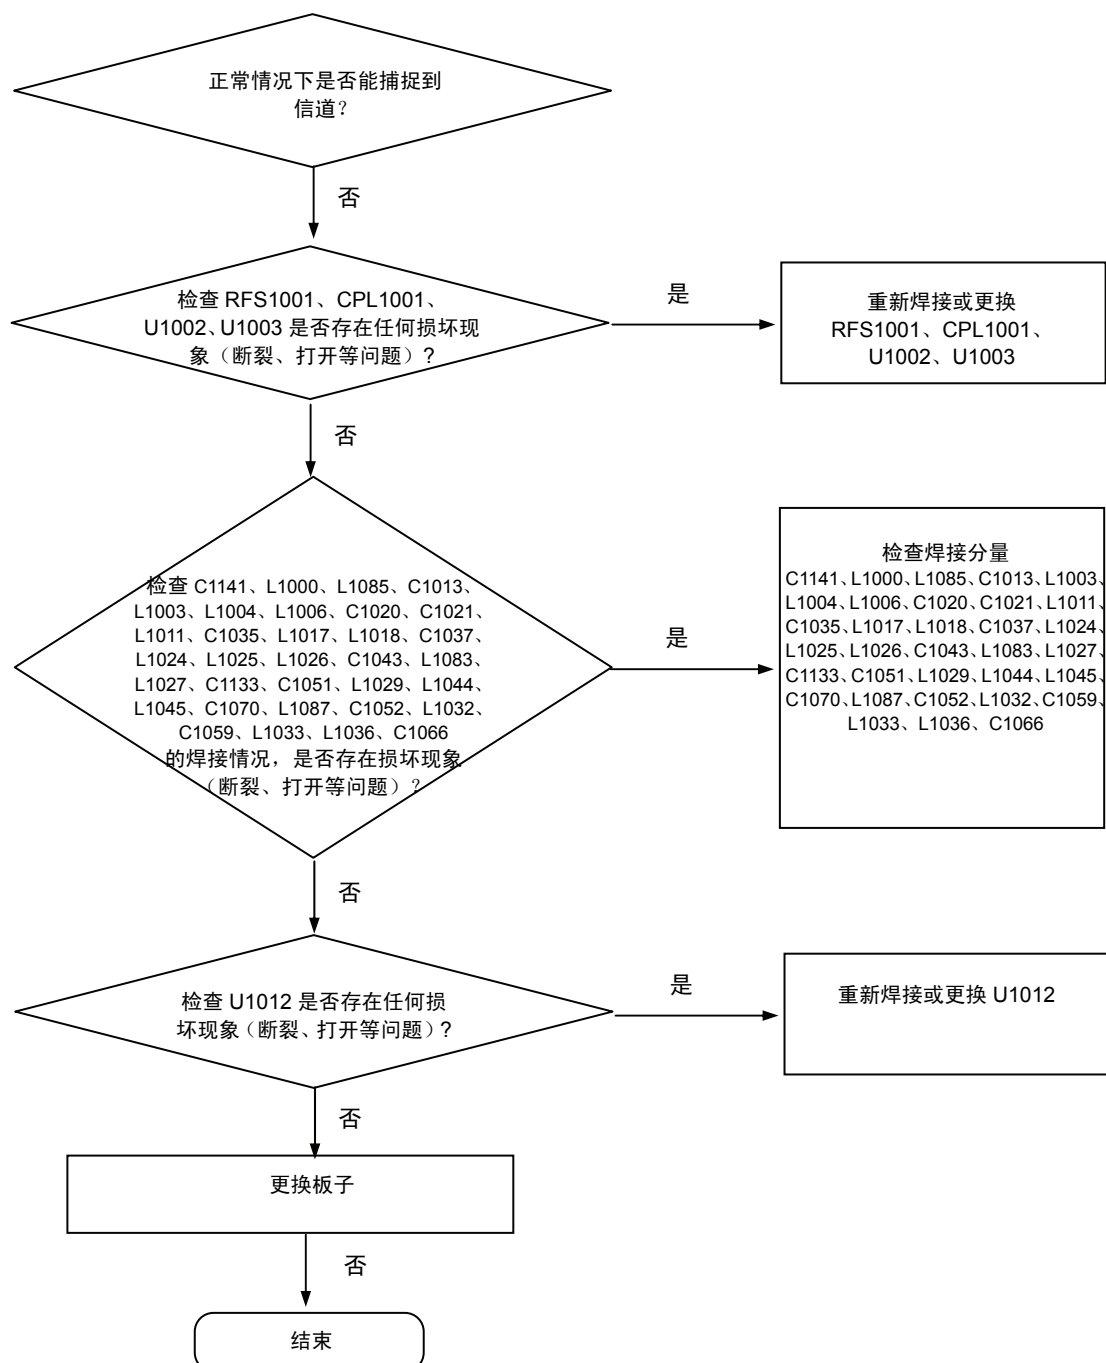





8-3-22. 分级式（LTE1/3/7/8/28/38/39/40/41） RX

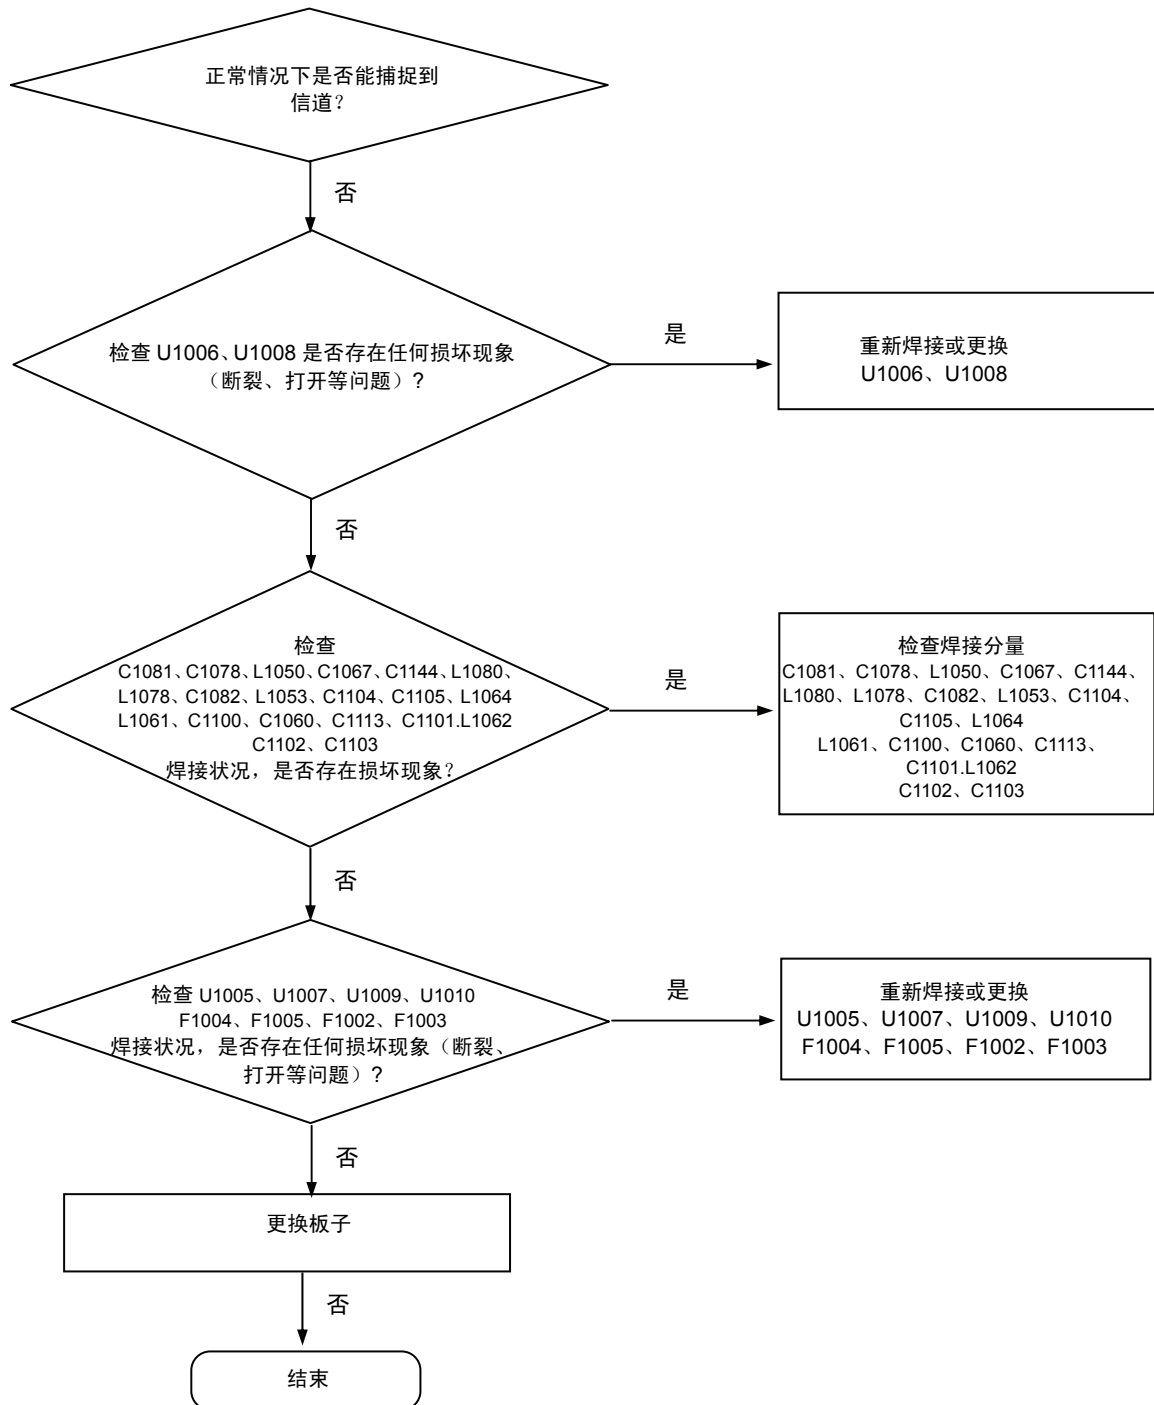


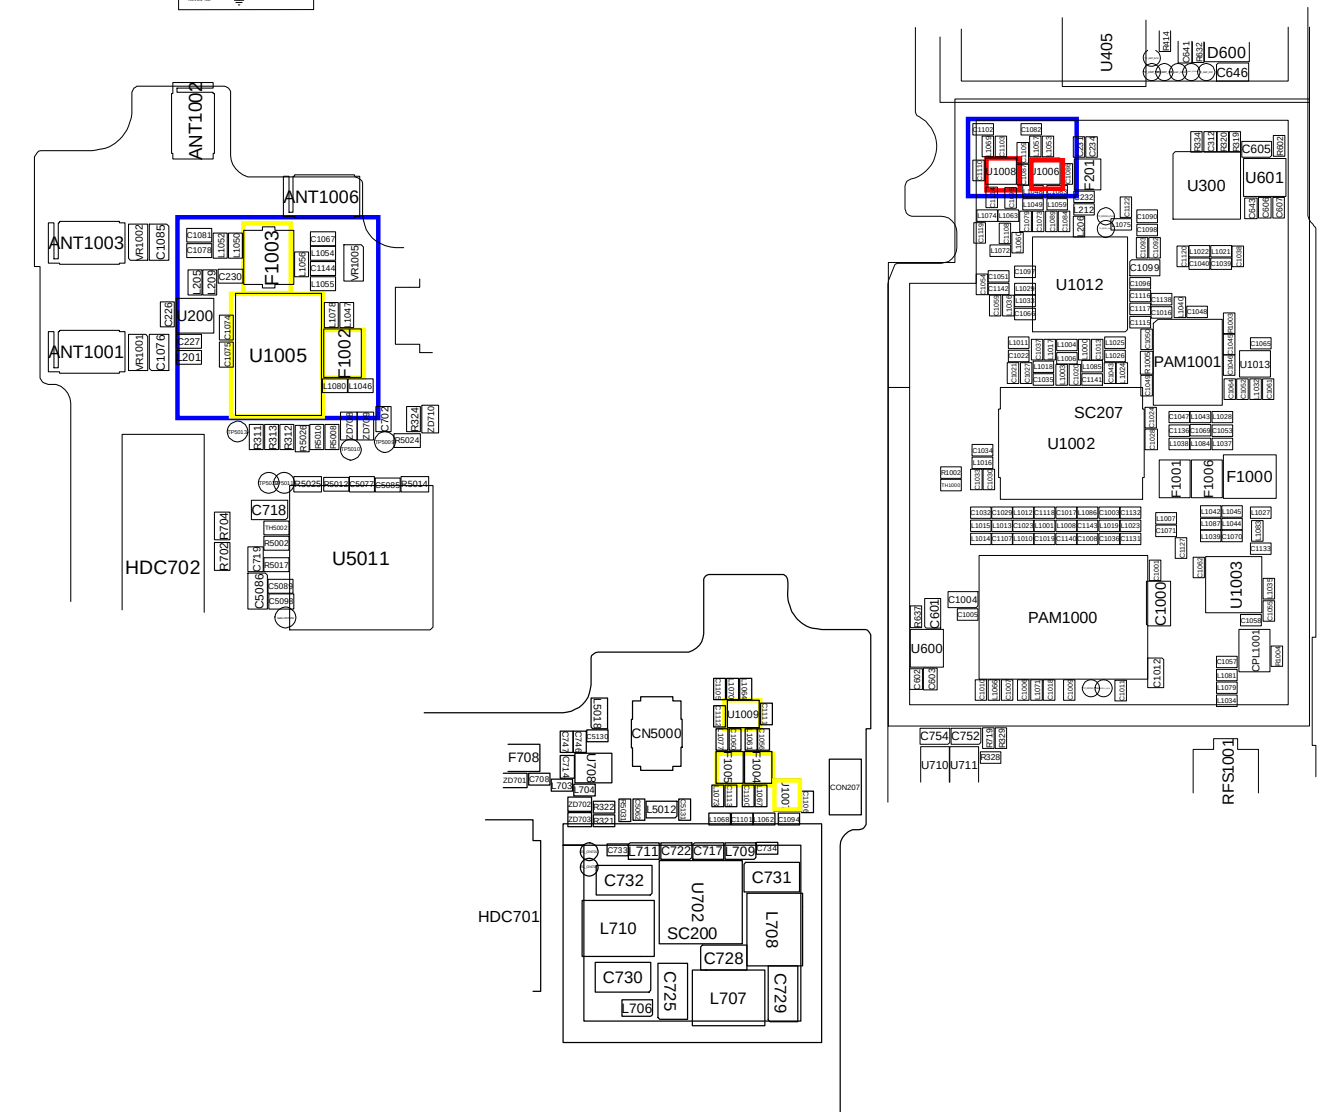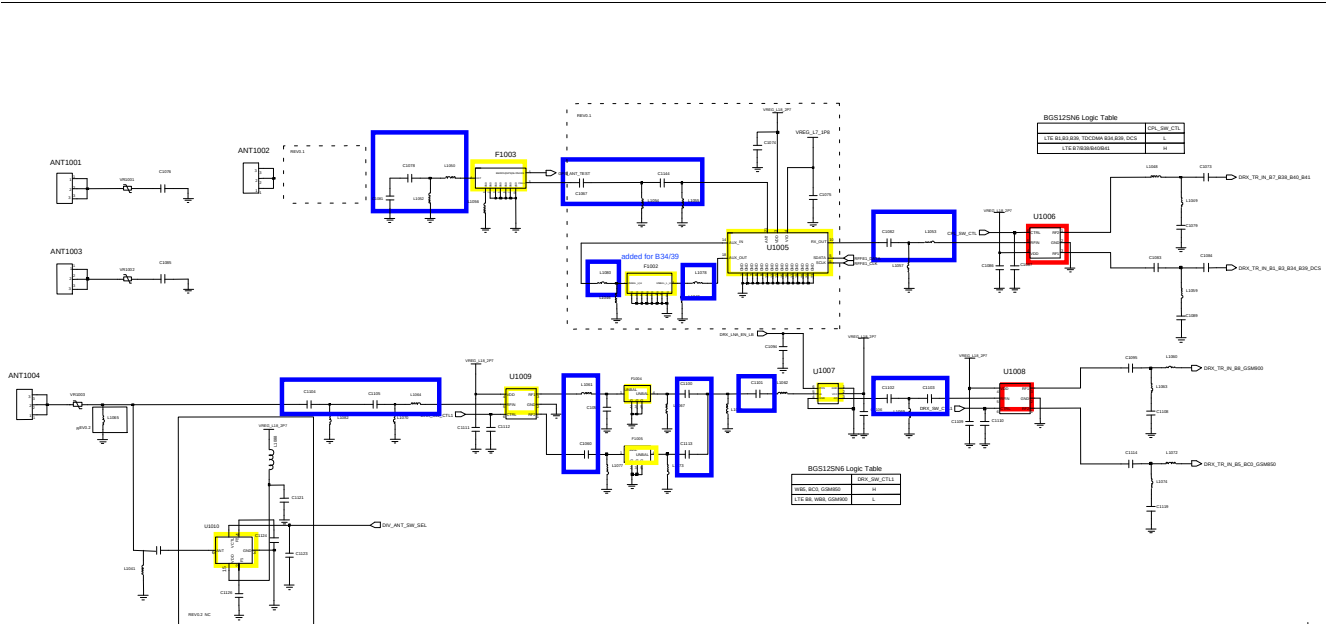


8-3-23. GSM 850、900、1800、1900 / LTE FDD BAND 1、3、7、8 / LTE TDD BAND 38、39、40、41 / TD-SCDMA B34/B39 / CDMA BC0 TX

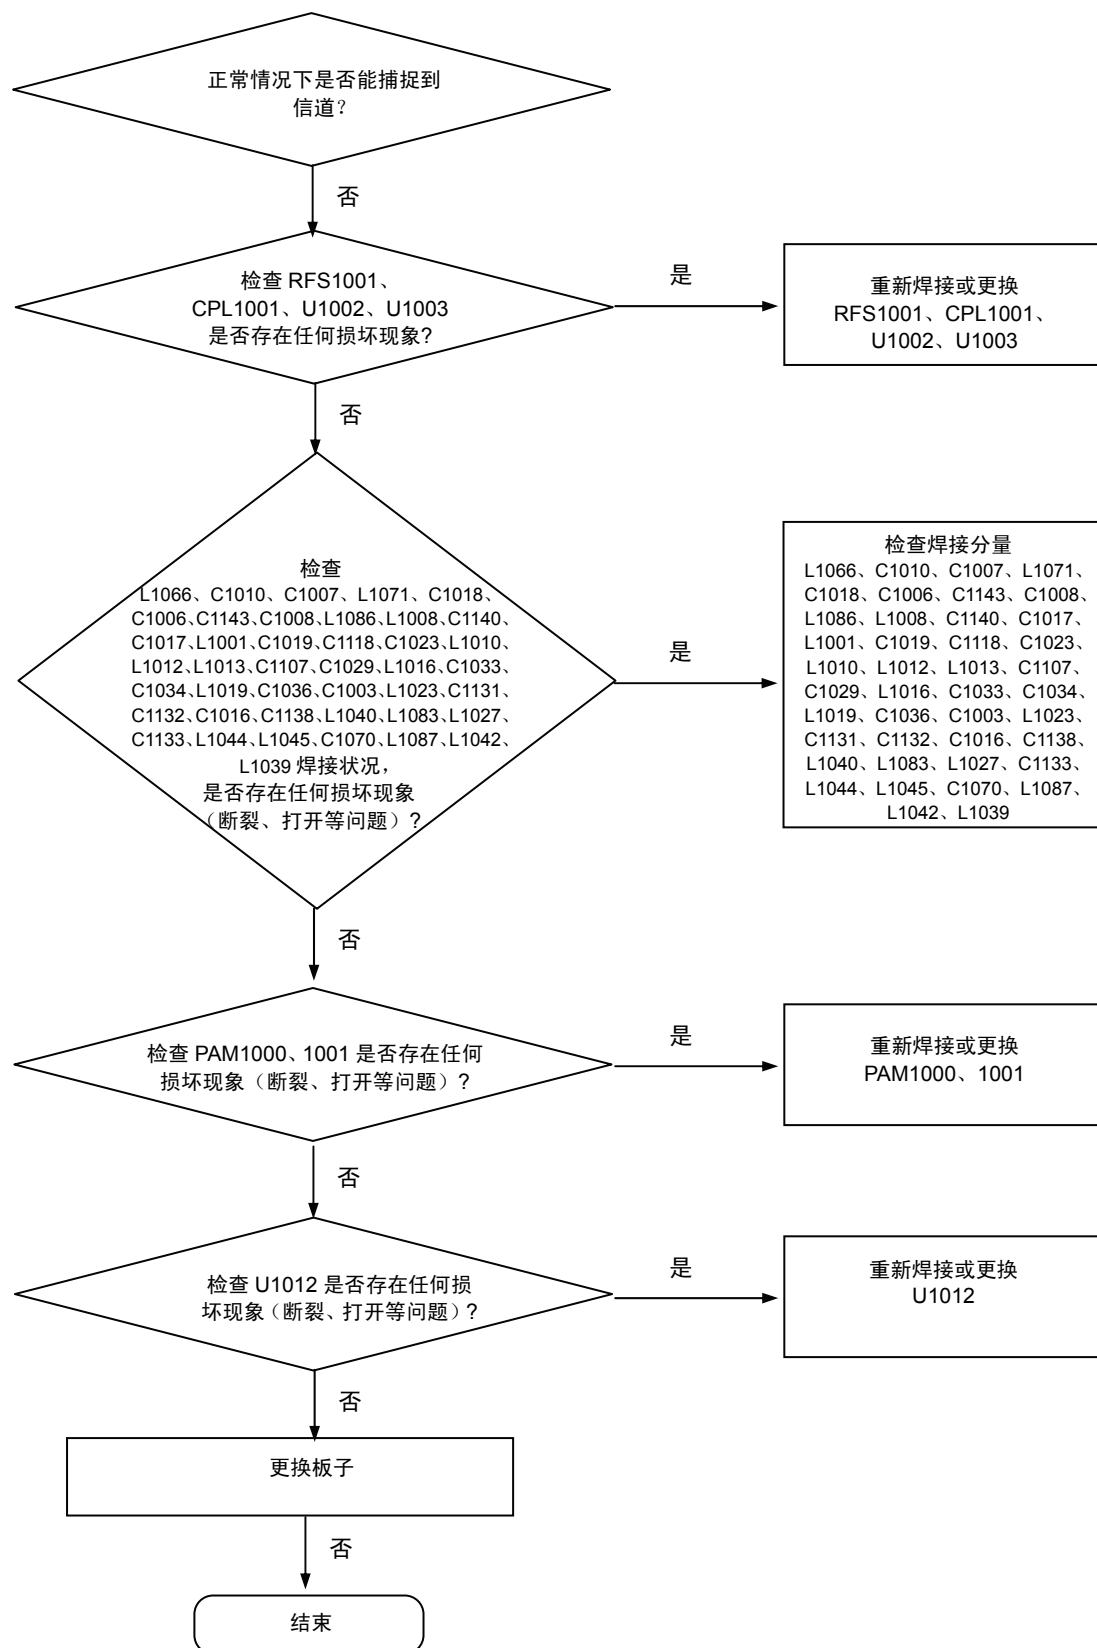



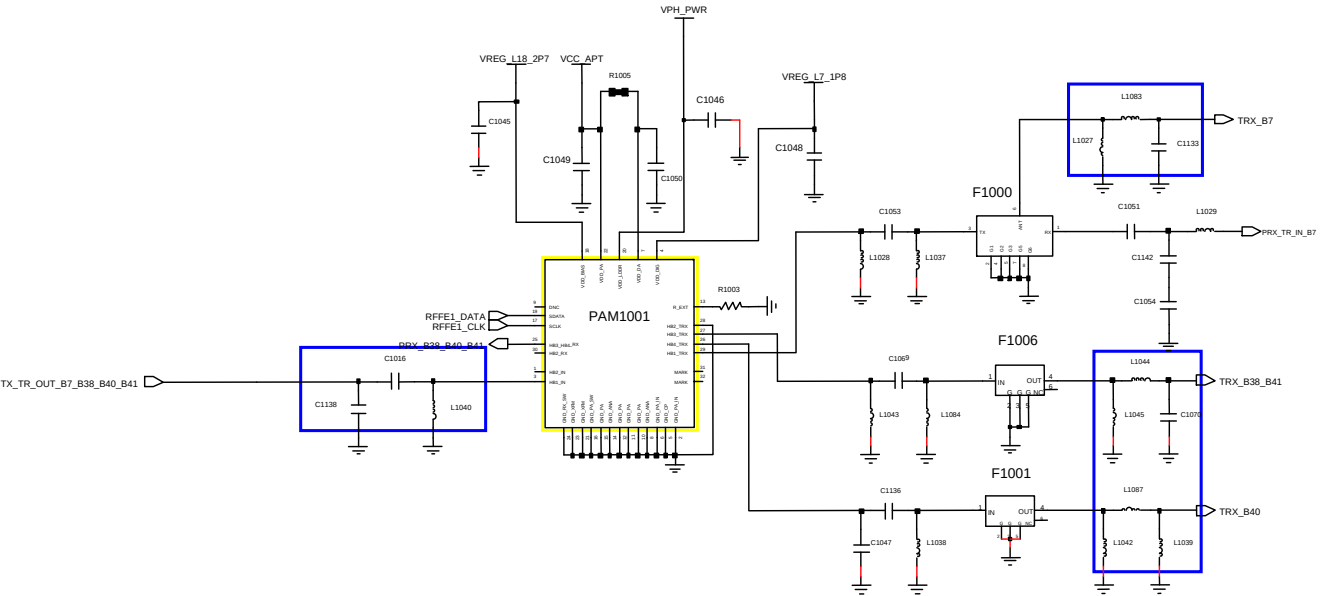


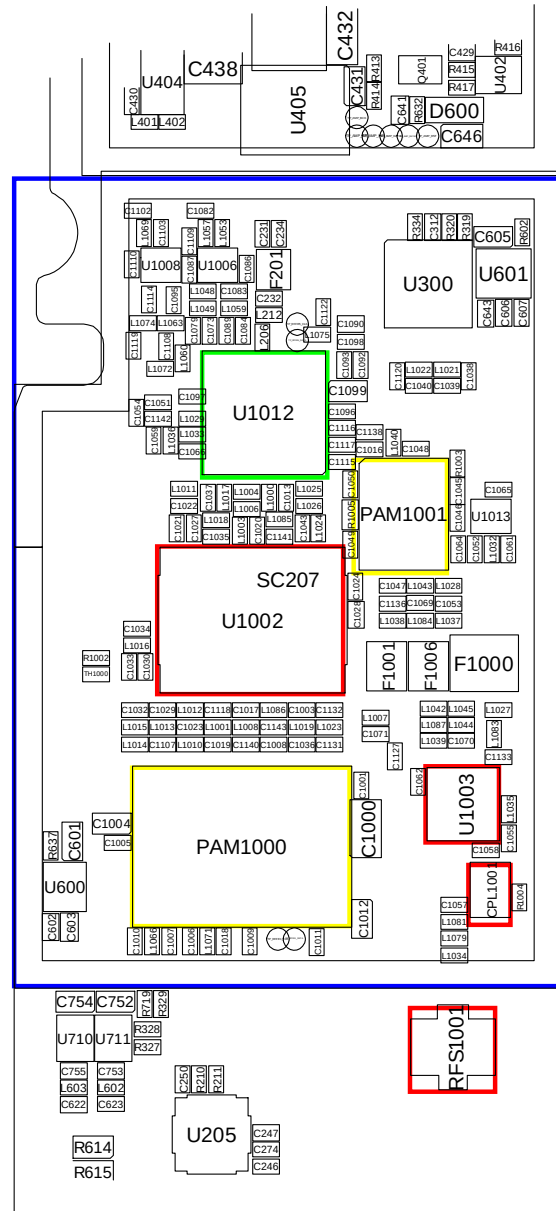


8-3-24. 指纹传感器



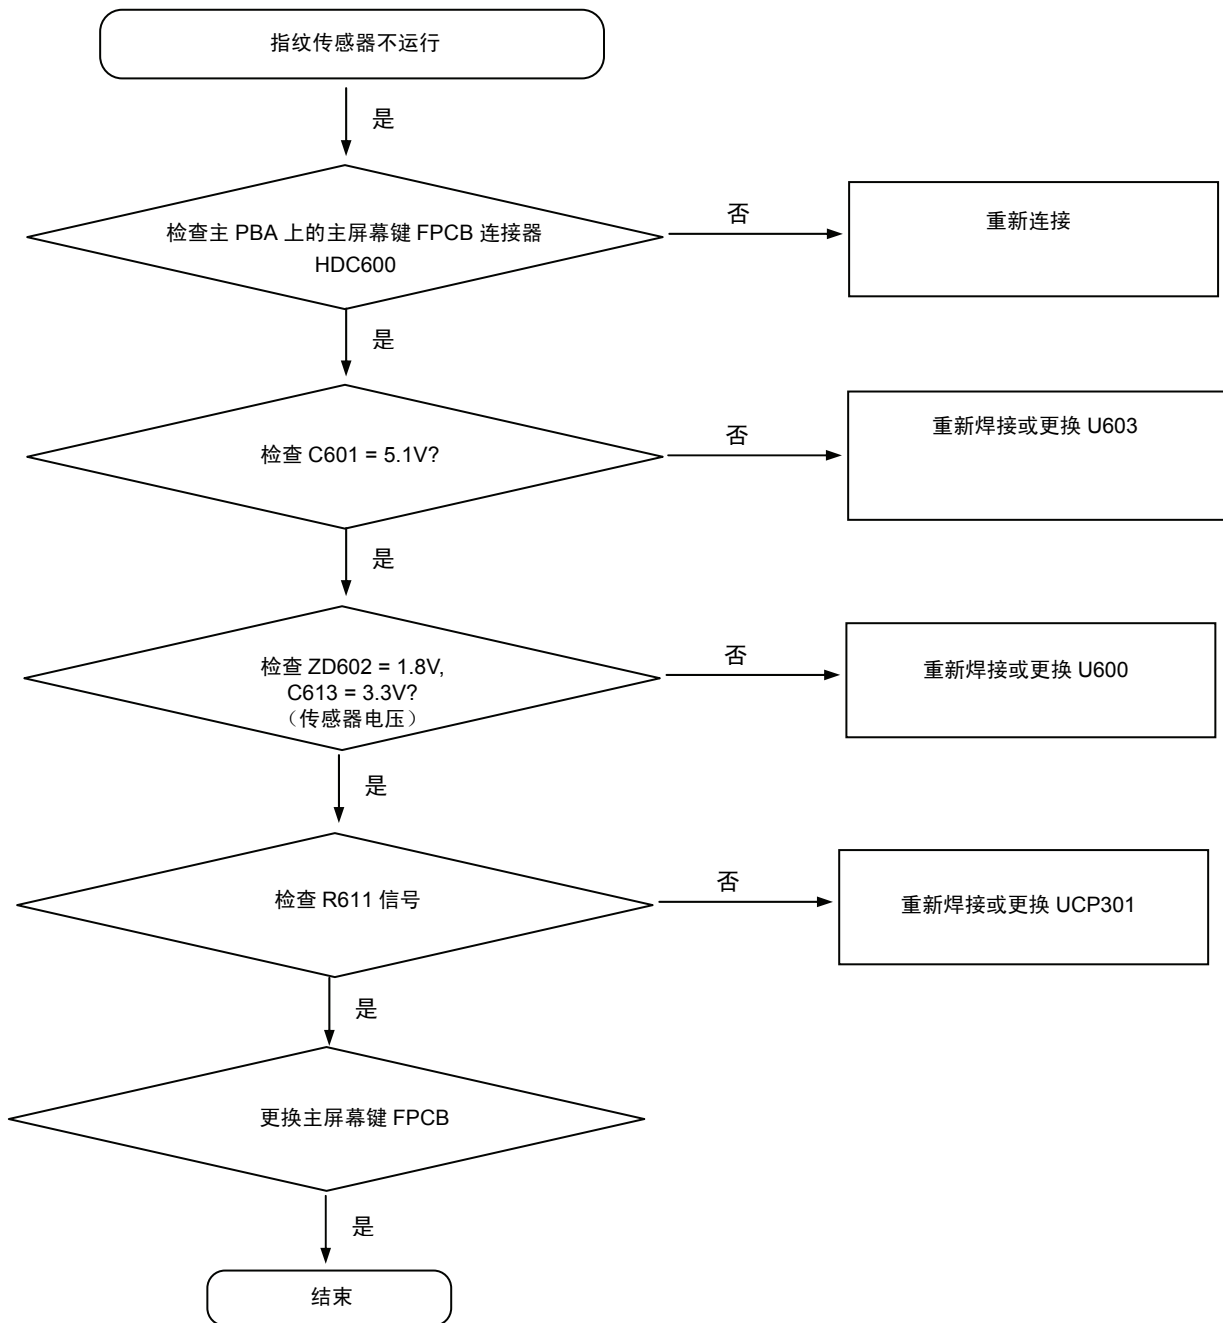


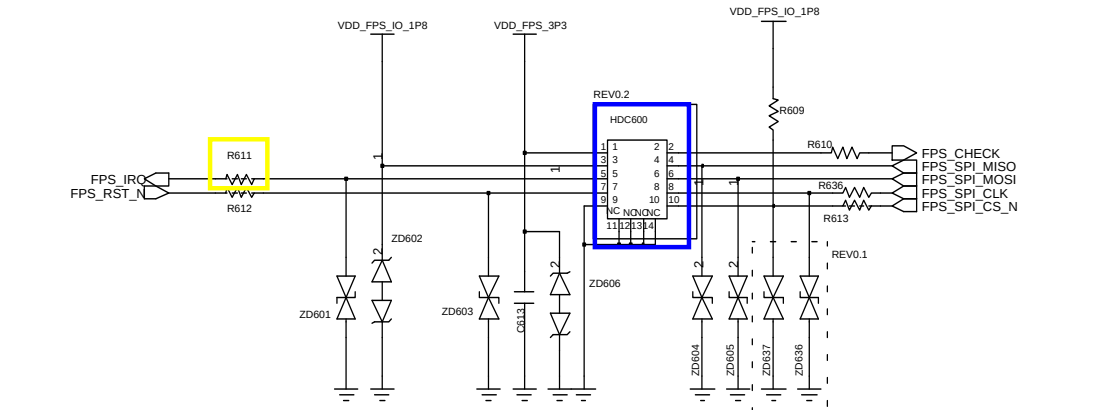


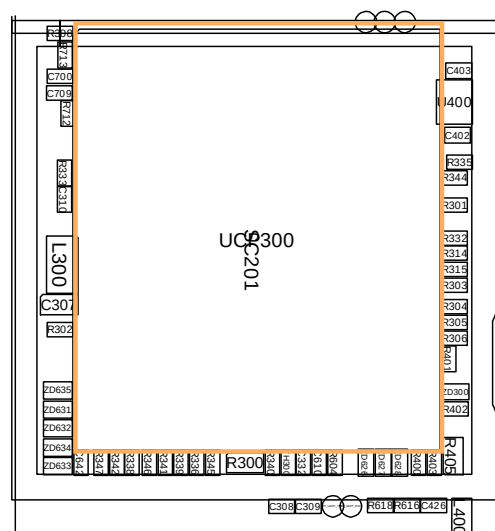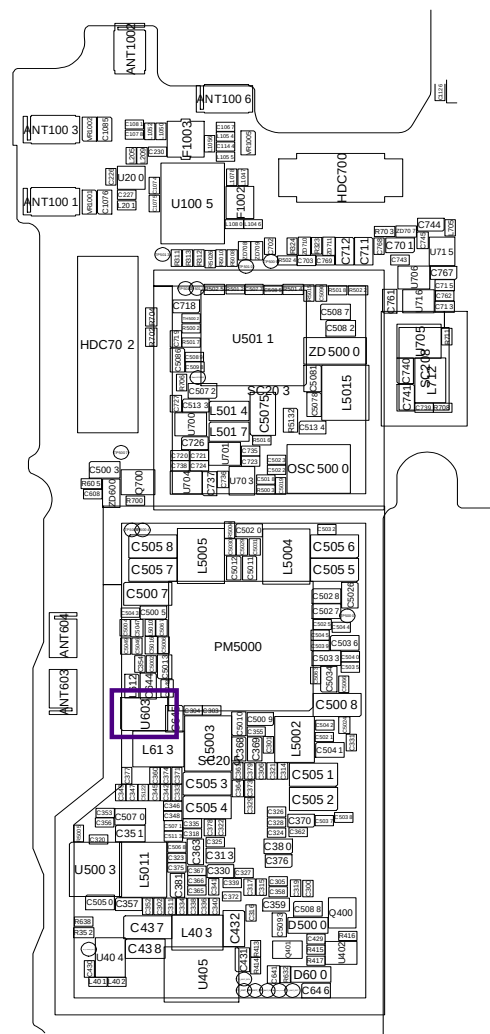

8-3-25. MST

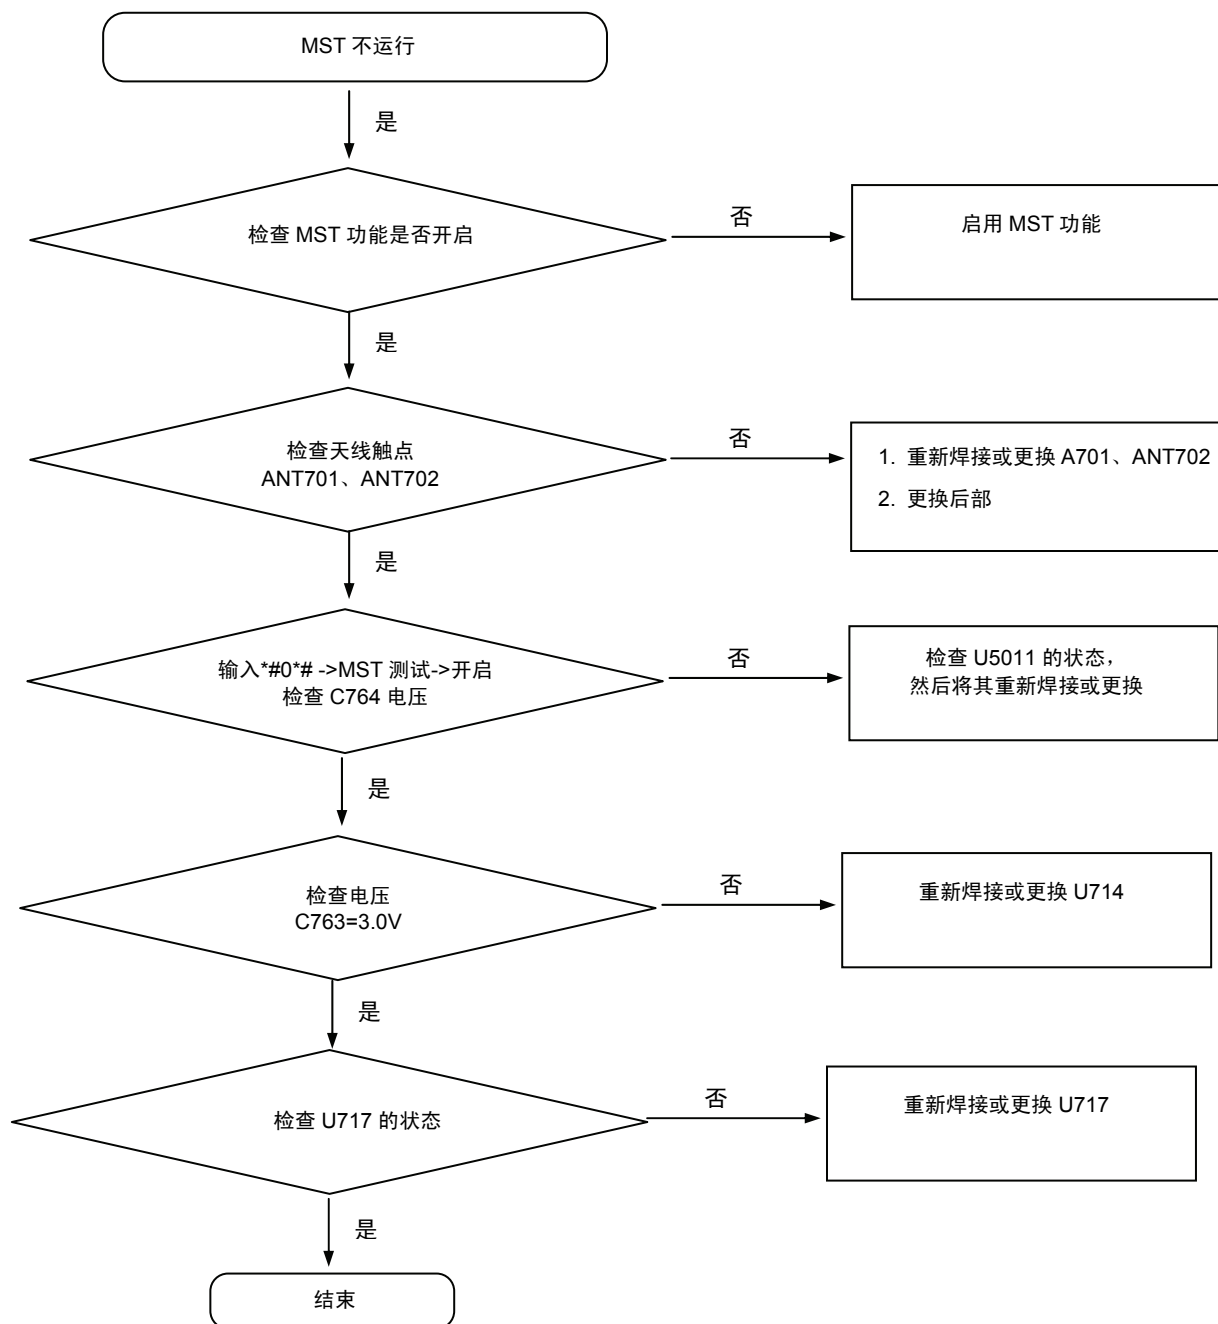

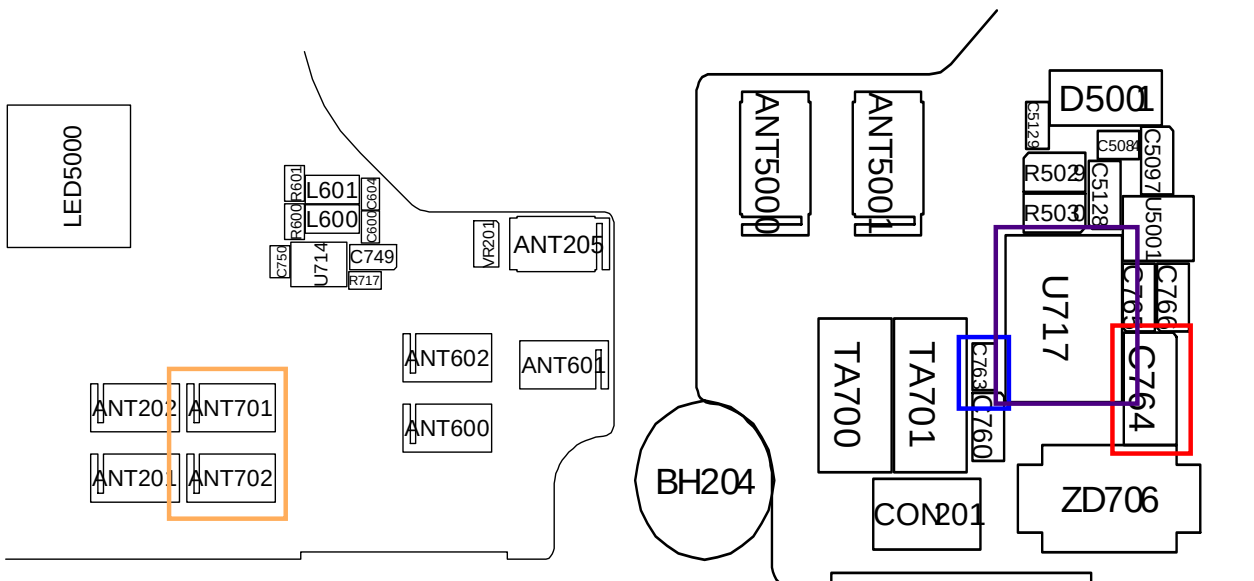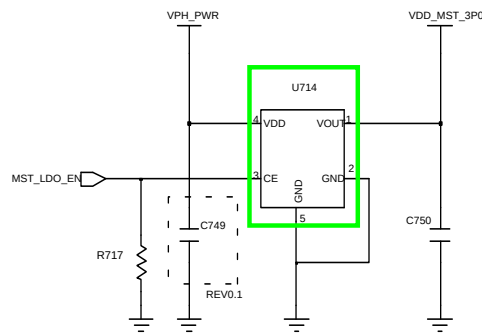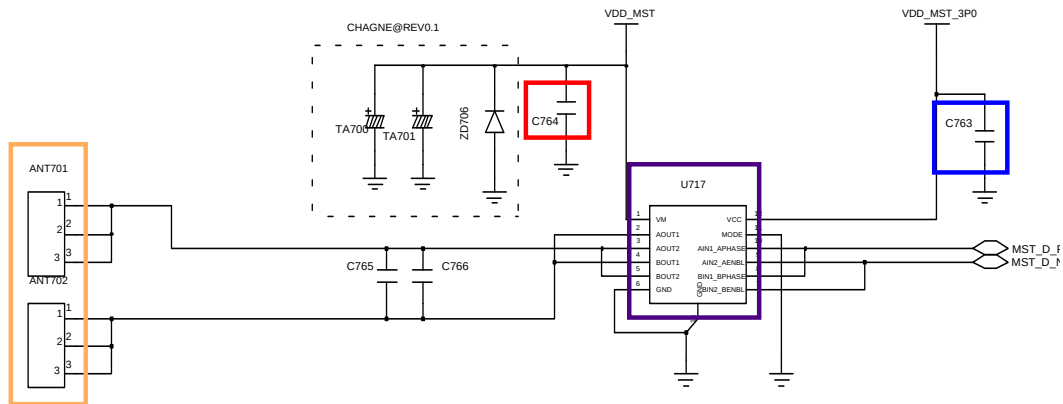



-故障处（顶部视图）

●：故障

	1	2	3	4	5	6	7	8	9	10	11	12	13	14
A	●	●					●						●	●
B	●													●
C														
D		●	●	●	●	●								
E														
F														
G														
H														
I														
J														
K														
L														
M														
N														
P										●				
R														
T														
U														
V														
W														
Y														
AA	●													●
AB	●	●											●	●

UME400

[illegible]

UCP300

	<u>1</u>	<u>2</u>	<u>3</u>	<u>4</u>	<u>5</u>	<u>6</u>	<u>7</u>	<u>8</u>	<u>9</u>	<u>10</u>	<u>11</u>	<u>12</u>	<u>13</u>	<u>14</u>
<u>A</u>	—	—	—	—	—	—	—	—	—	—	●	●	●	—
<u>B</u>	—	—	—	—	—	—	—	—	—	—	●	●	—	—
<u>C</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—
<u>D</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—
<u>E</u>	—	—	—	—	—	—	—	—	—	—	—	●	●	●
<u>F</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—
<u>G</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—
<u>H</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—
<u>J</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—
<u>K</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—
<u>L</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—
<u>M</u>	—	—	—	—	—	—	—	—	—	—	—	—	●	●
<u>N</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—
<u>P</u>	—	—	—	—	—	—	—	—	—	—	—	—	—	—

PM5000