


8. Level 3 Repair


8-1. Components Layout

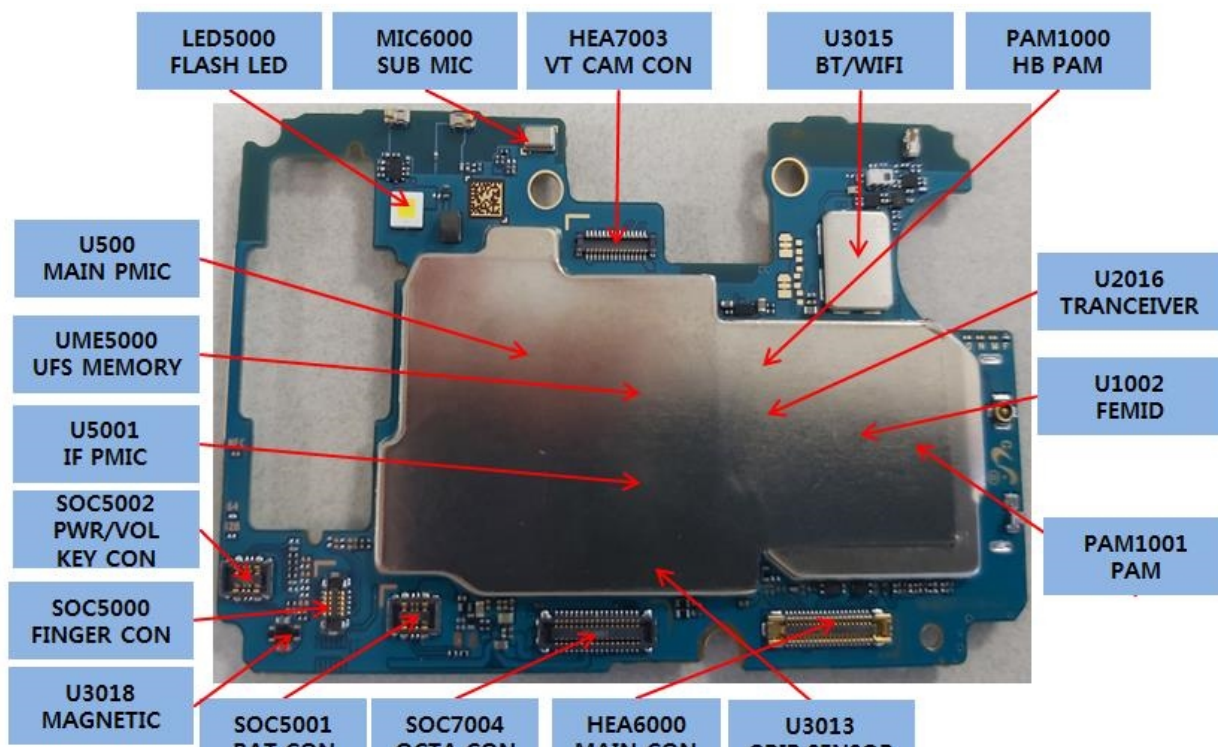

MAIN PBA (TOP SIDE)




MAIN PBA (BOTTOM SIDE)

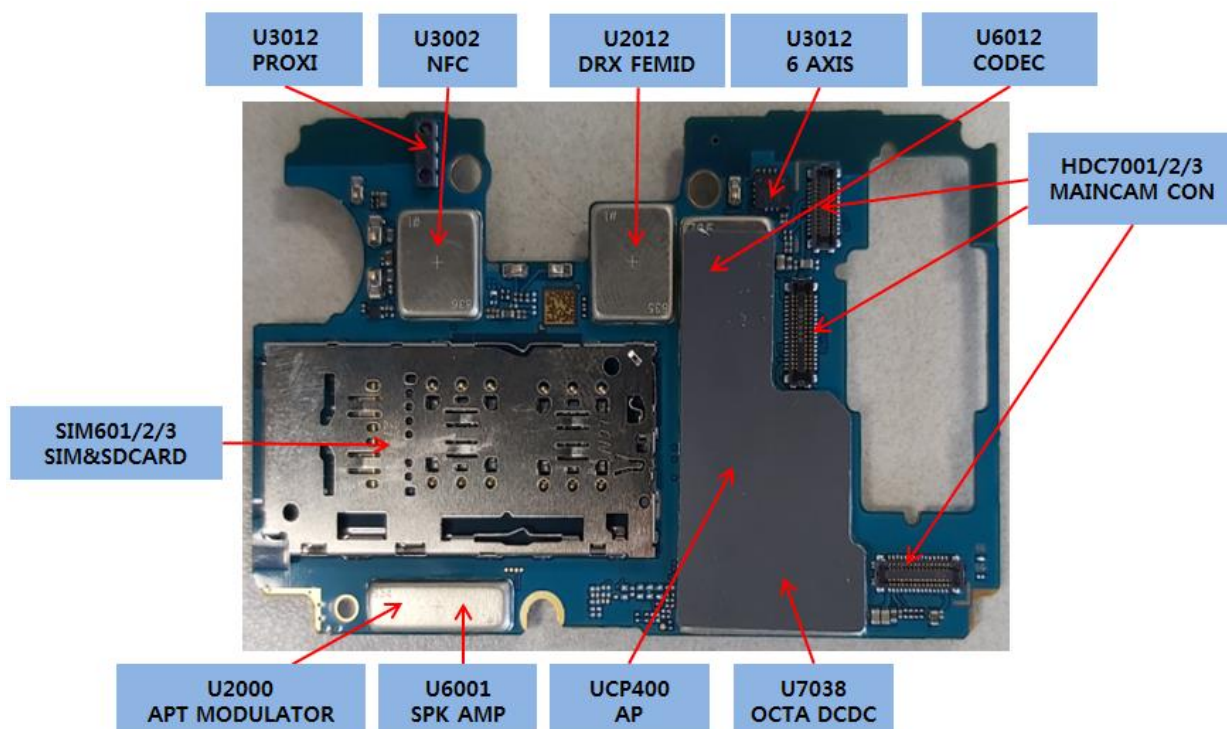



8. Level 3 Repair

SUB PBA (TOP SIDE)

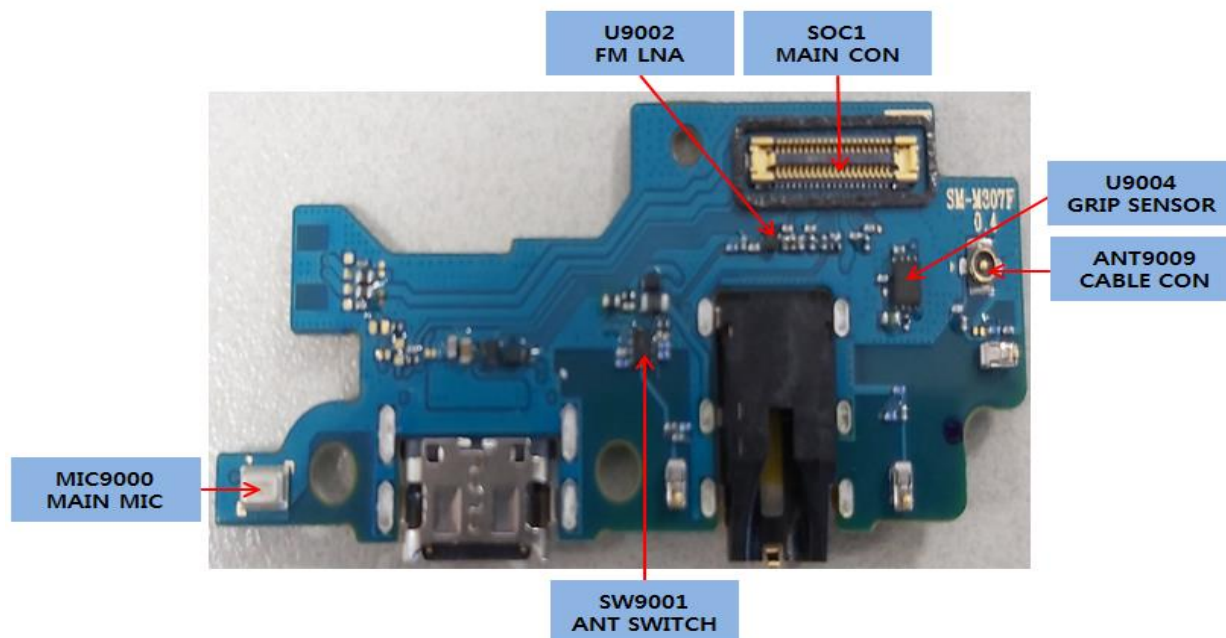


SUB PBA (BOTTOM SIDE)

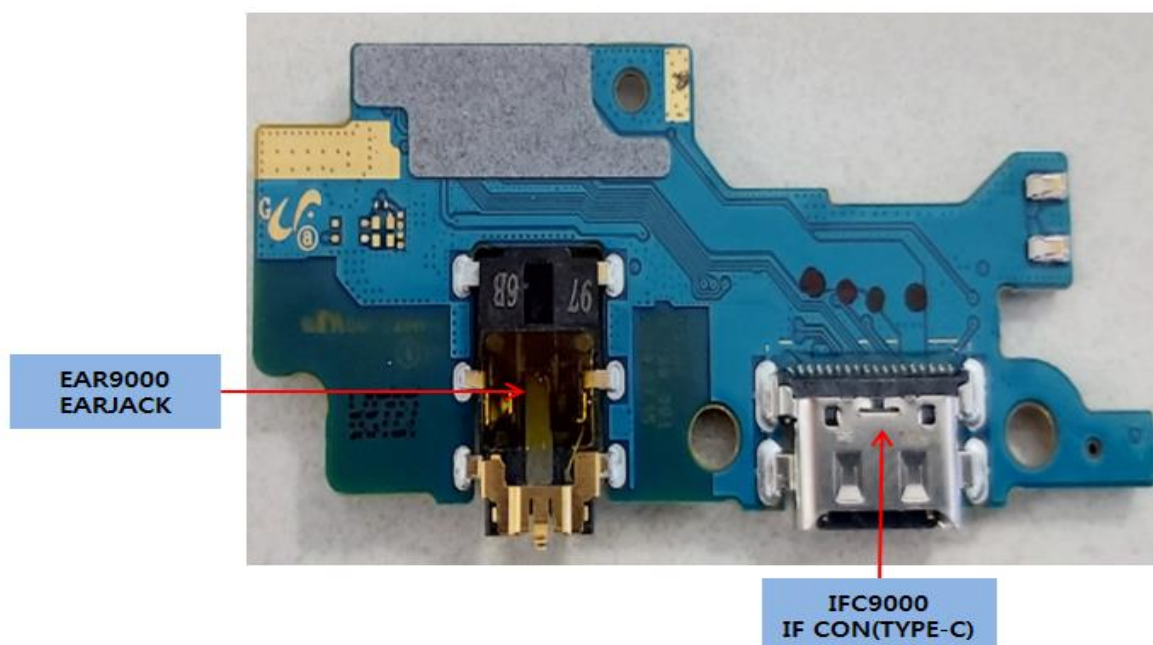

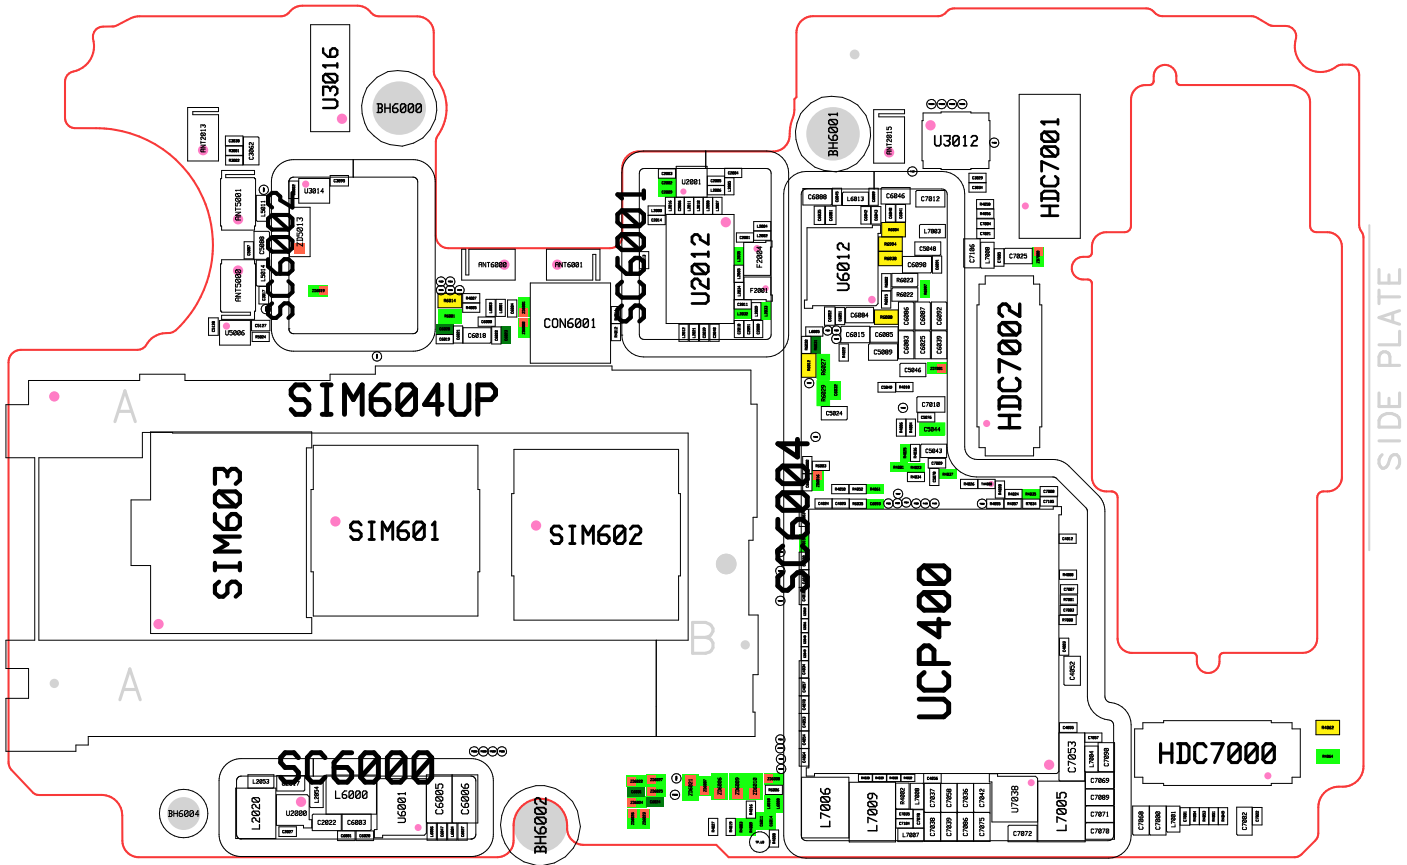

Model :
Revision :
Manufacture Count :
Charge :
Contact :
Date :
Routing :
Resin :


SIDE B/1E

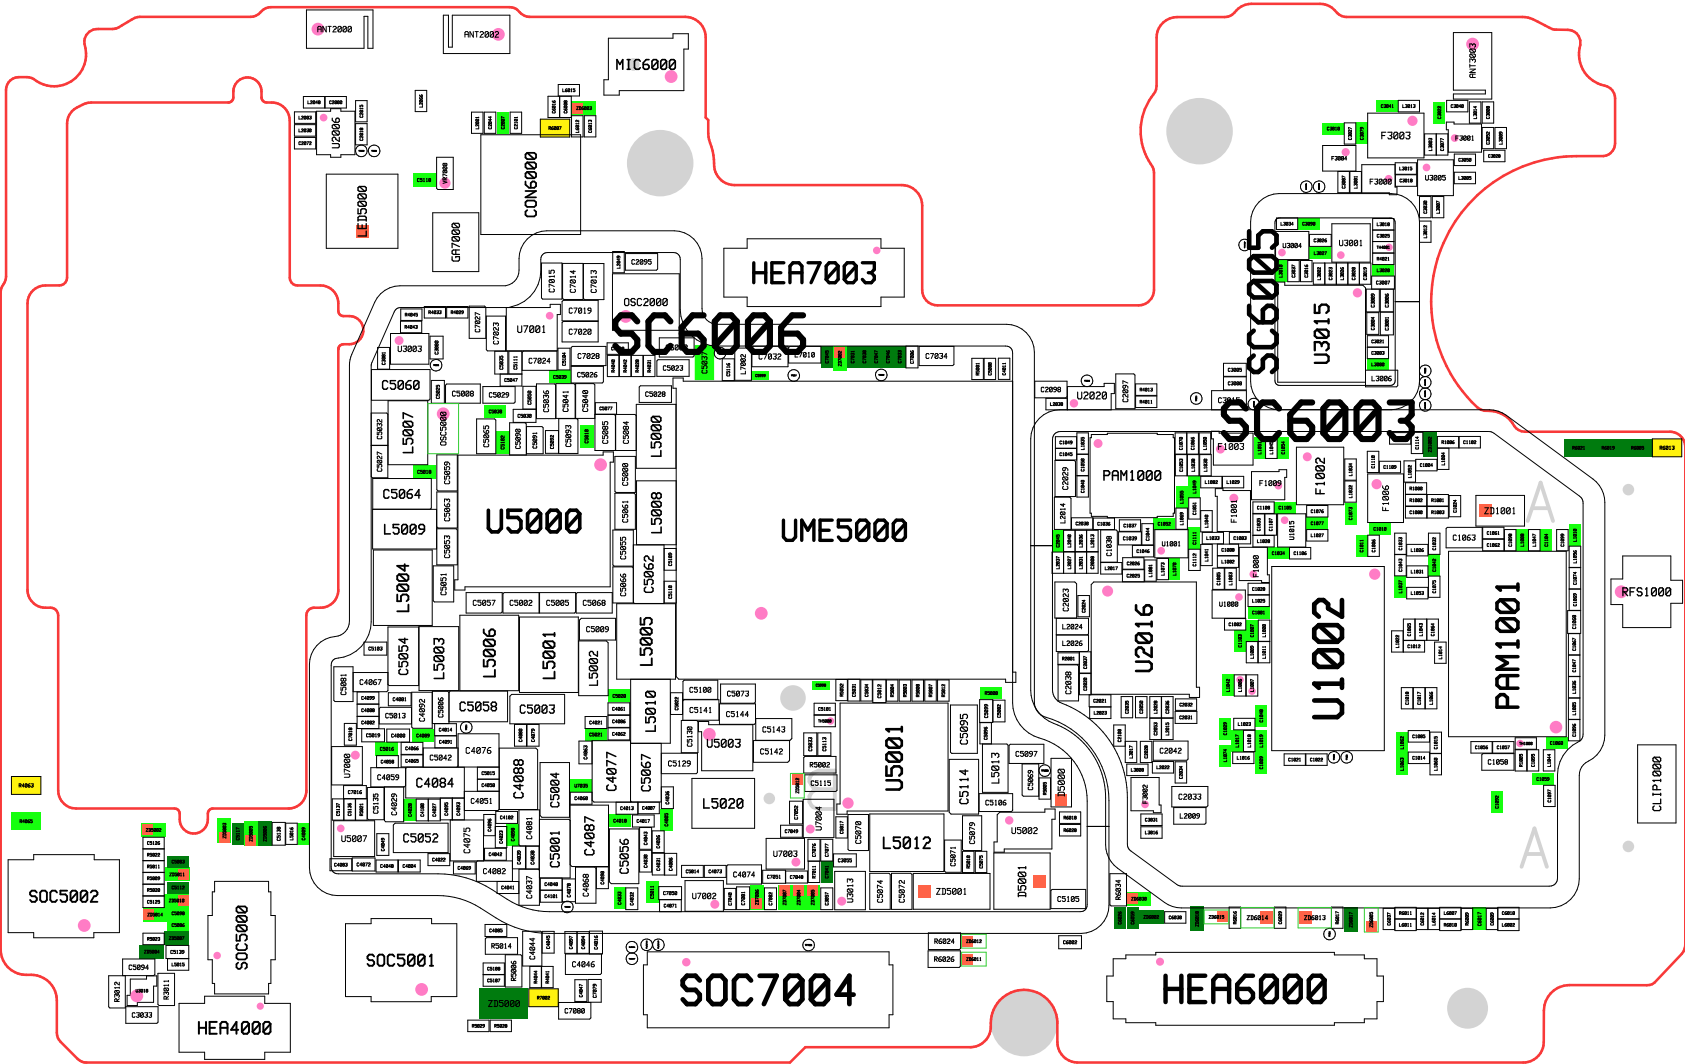

Model :
Revision :
Manufacture Count :
Charge :
Contact :
Date :
Routing :
Resin :

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

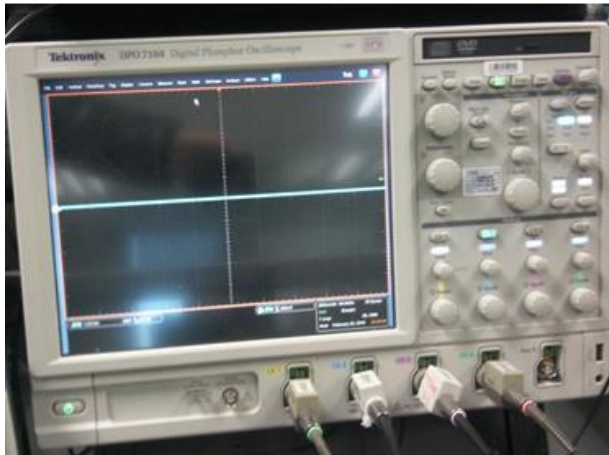


Oscilloscope




Digital Multimeter



Power Supply

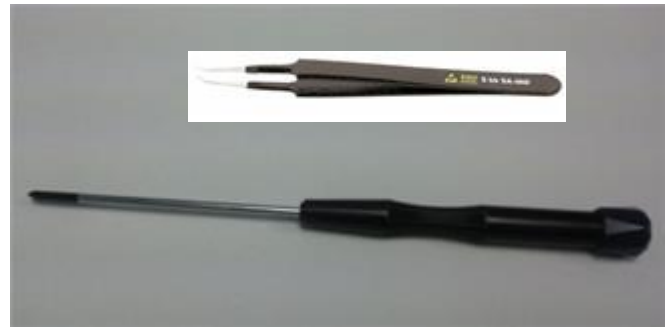

+ driver, ESD Safe Tweezer

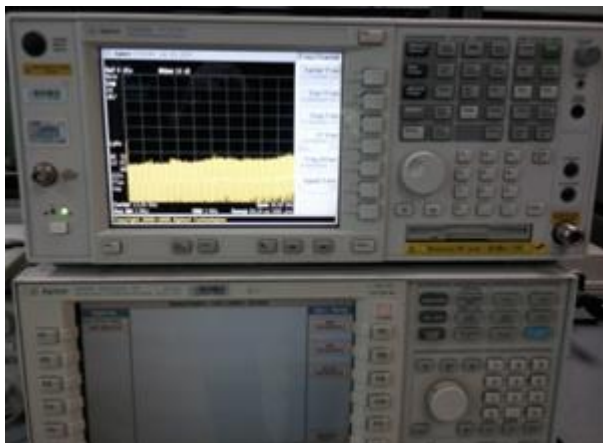


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Power On

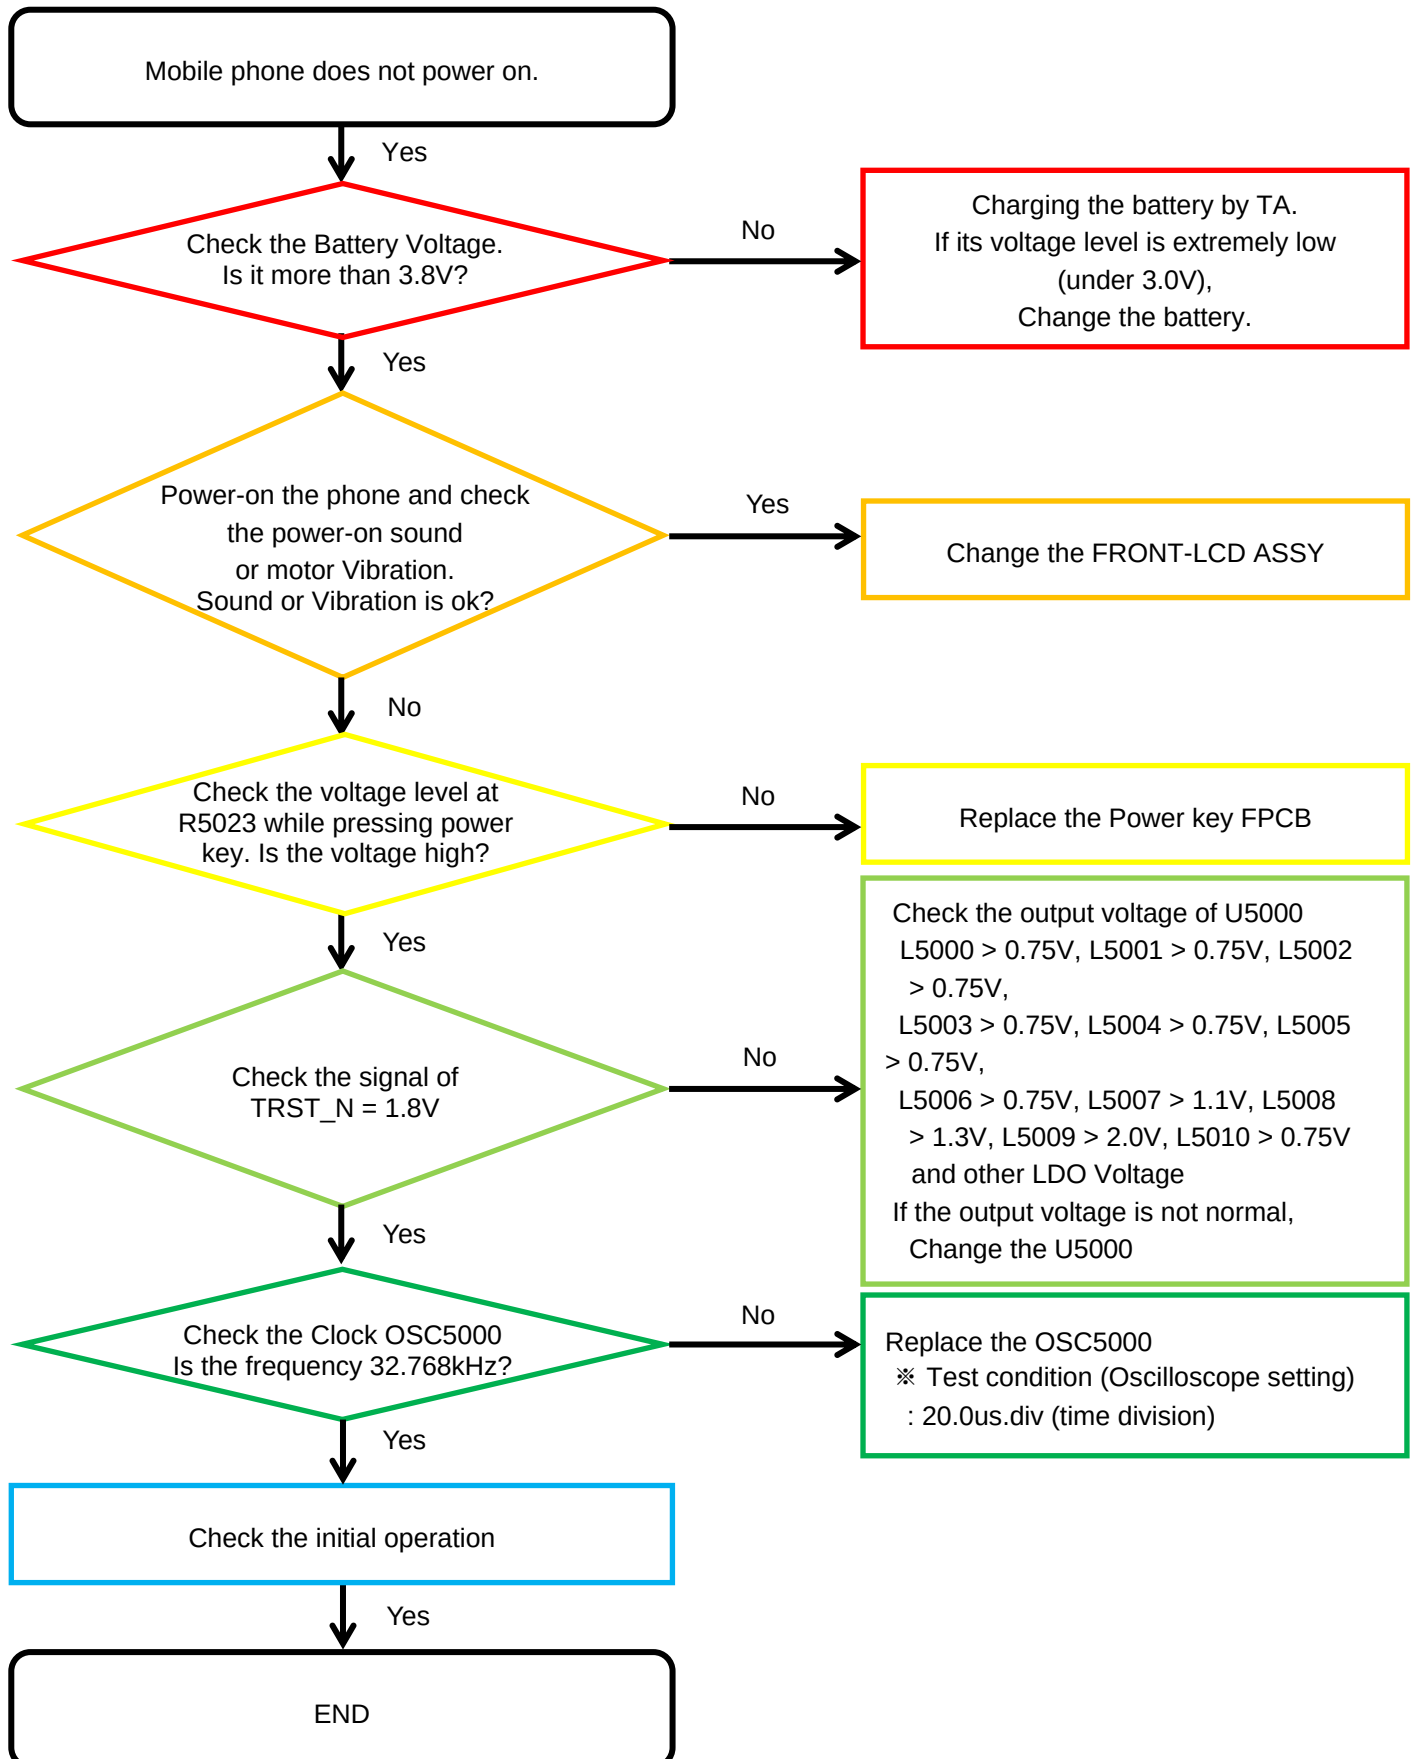


8. Level 3 Repair

8-4-2. Initial

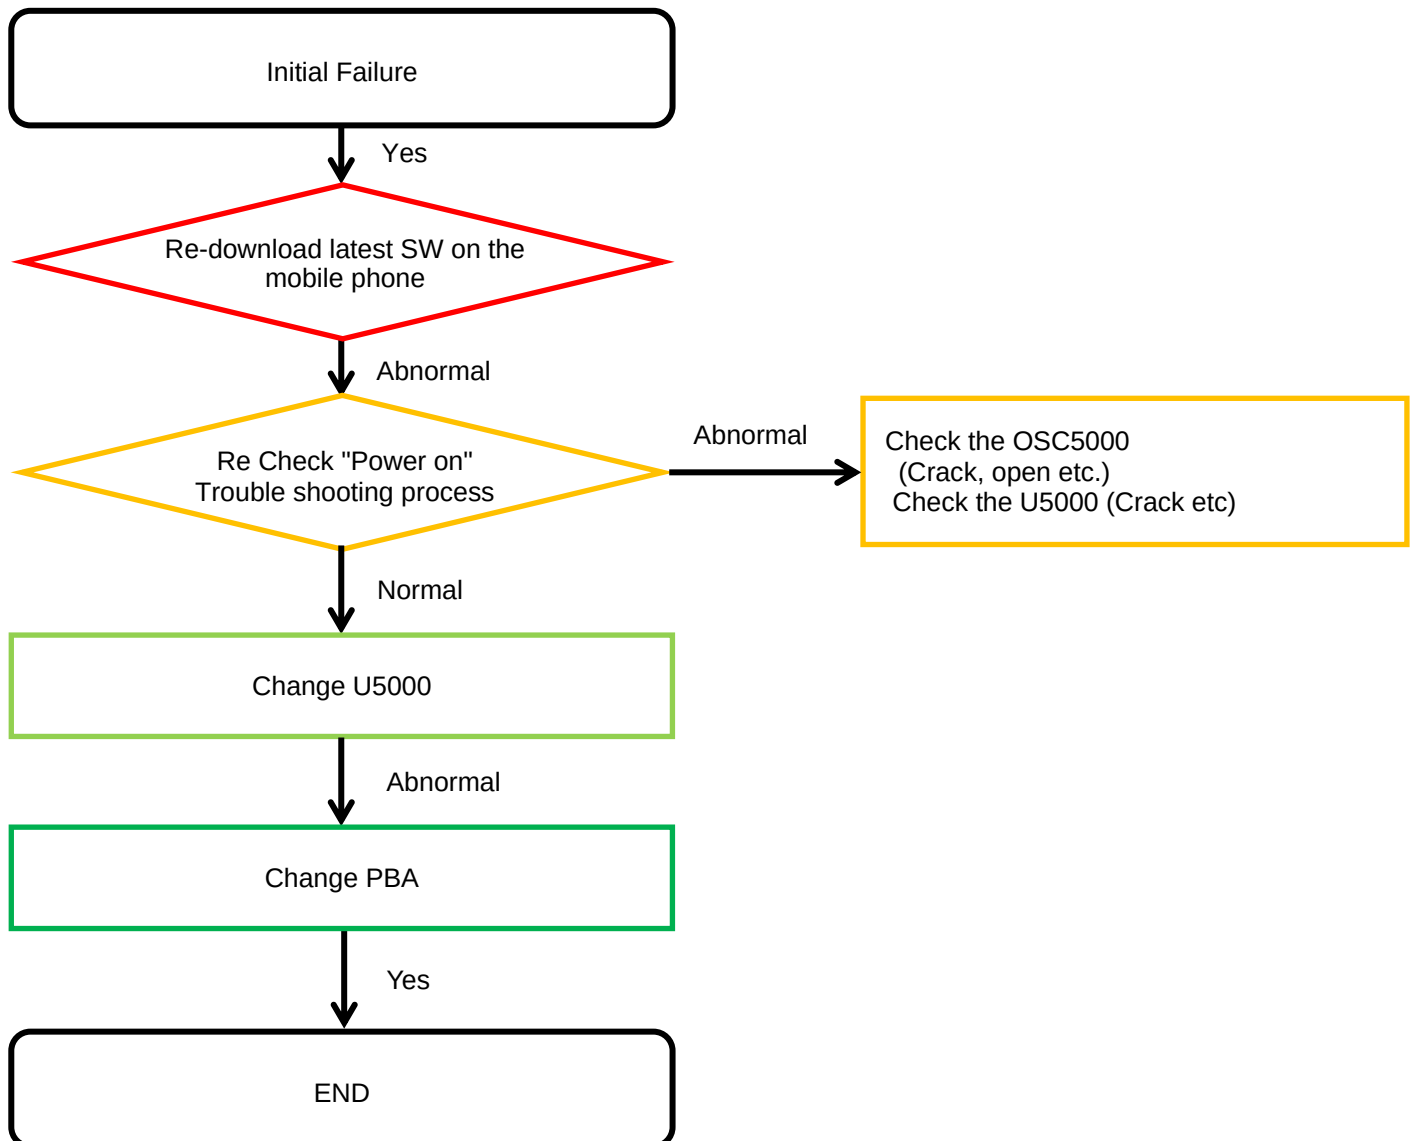


8. Level 3 Repair

8-4-3. No Service

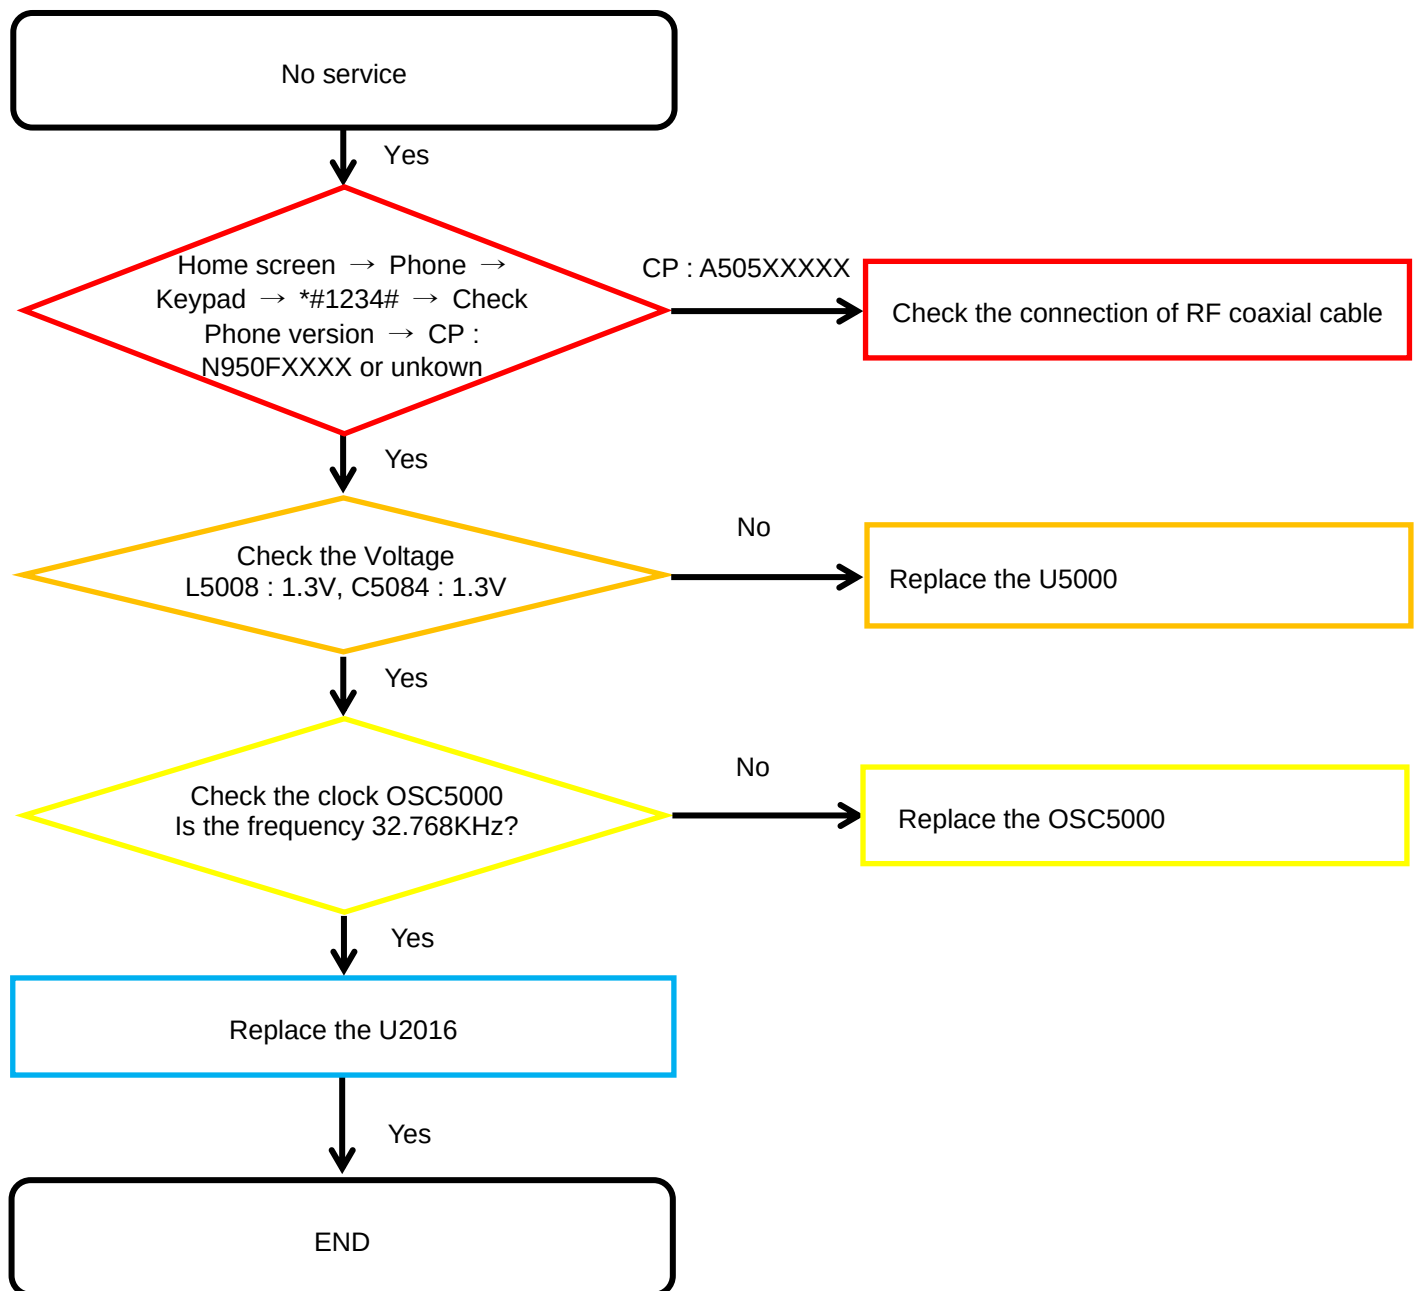


8. Level 3 Repair

8-4-4. SIM Part

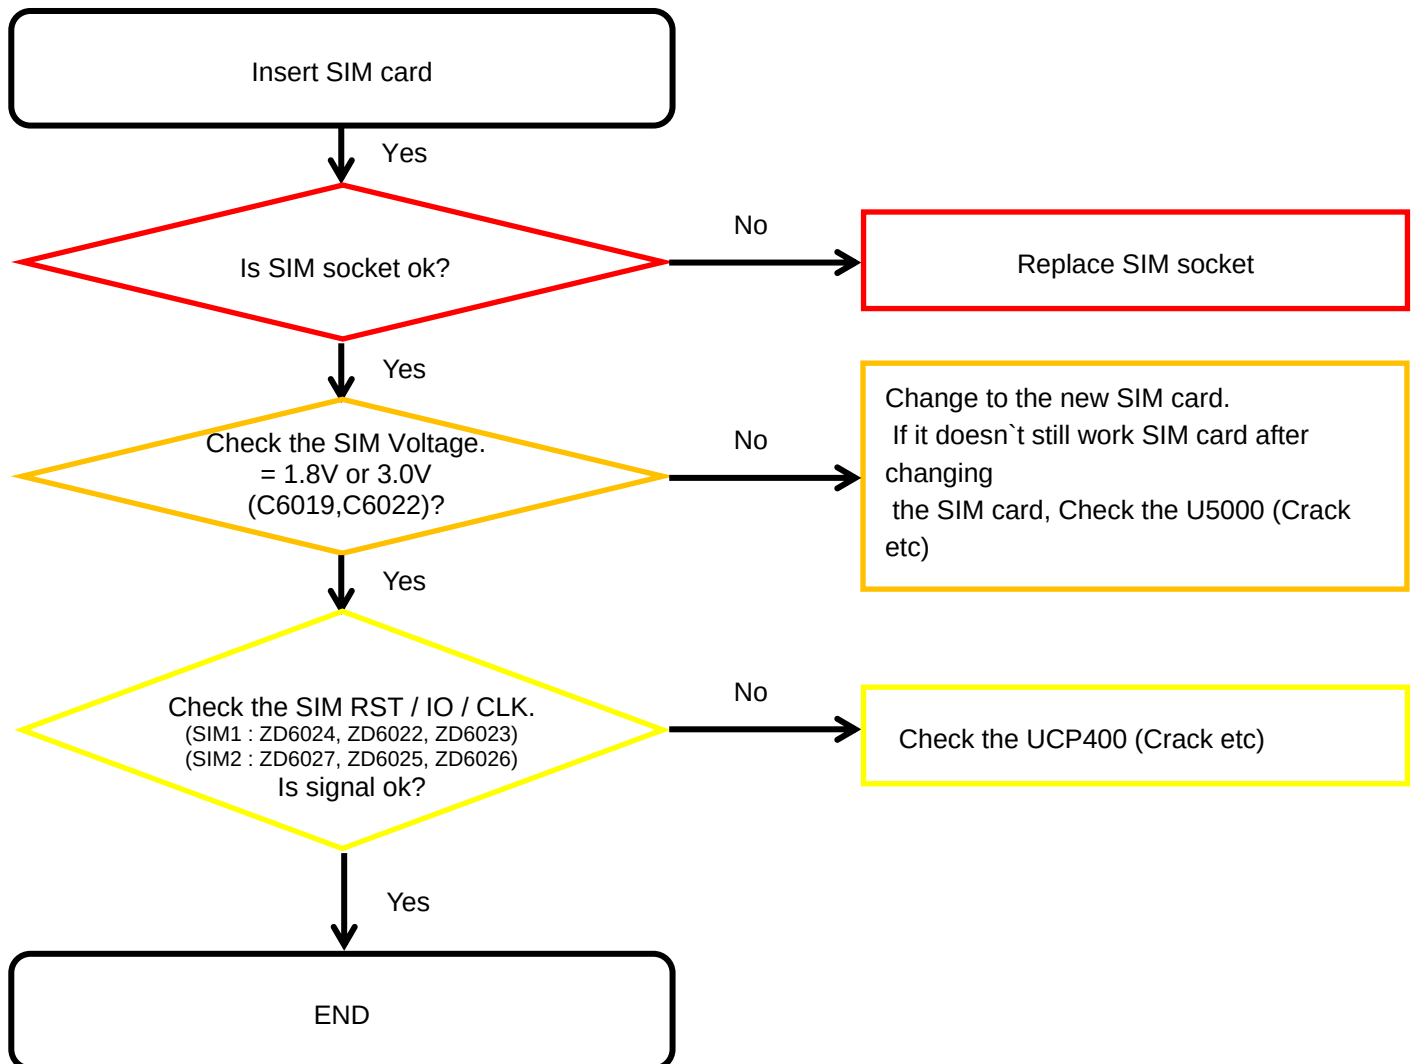


8. Level 3 Repair

8-4-5. T-Flash Part

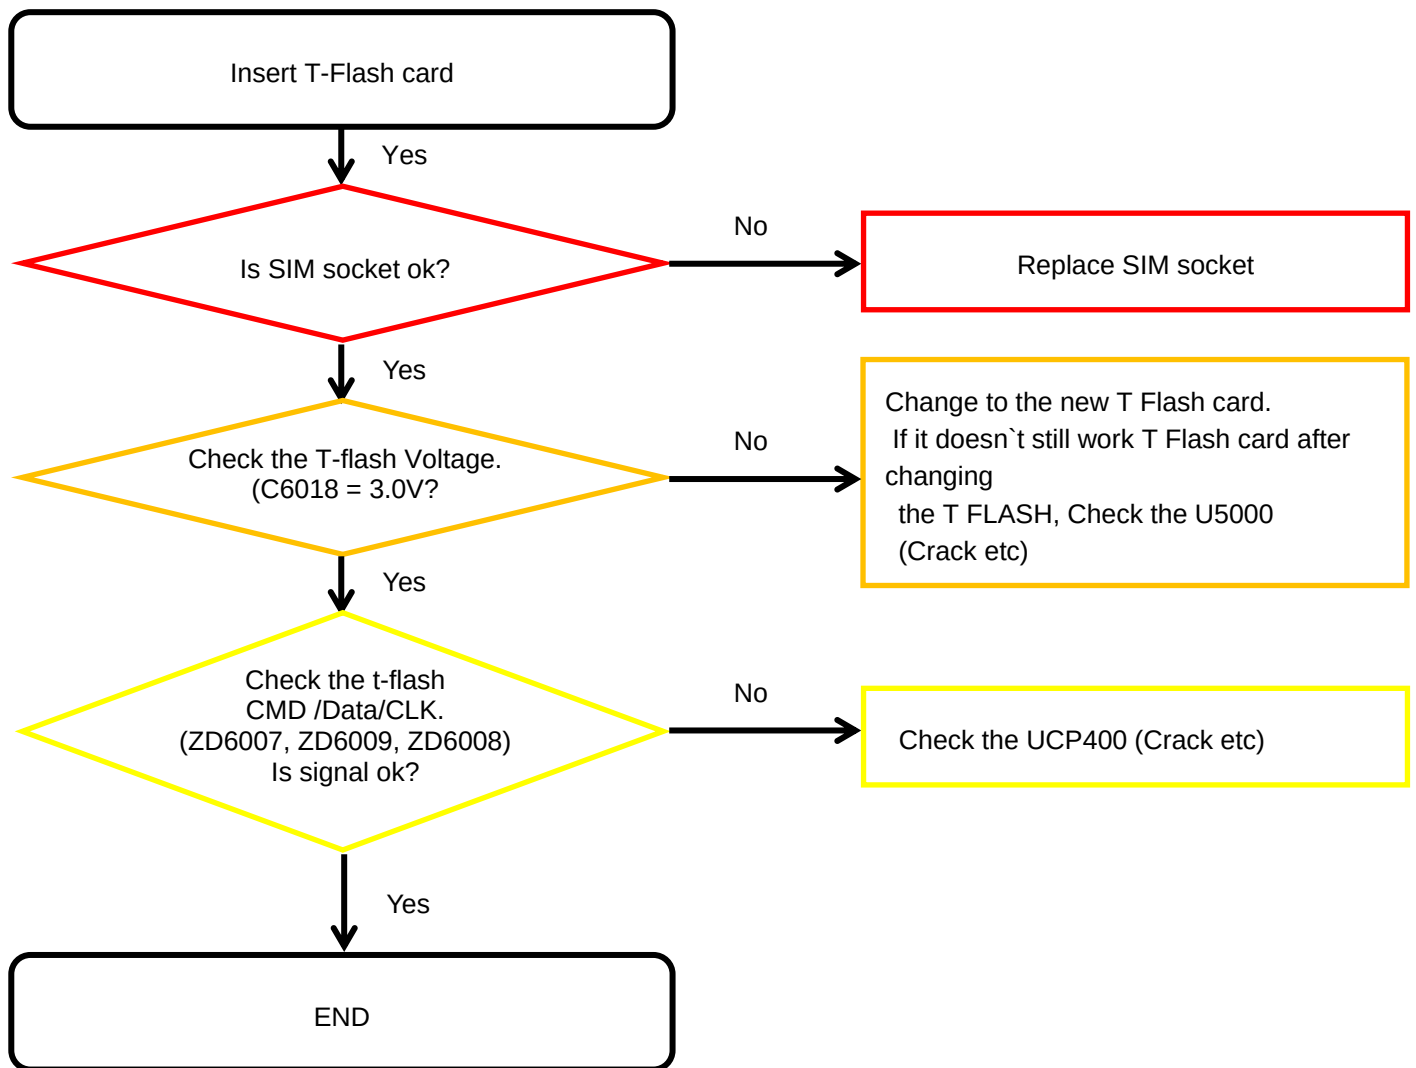


8. Level 3 Repair

8-4-6. Cable Charging Part

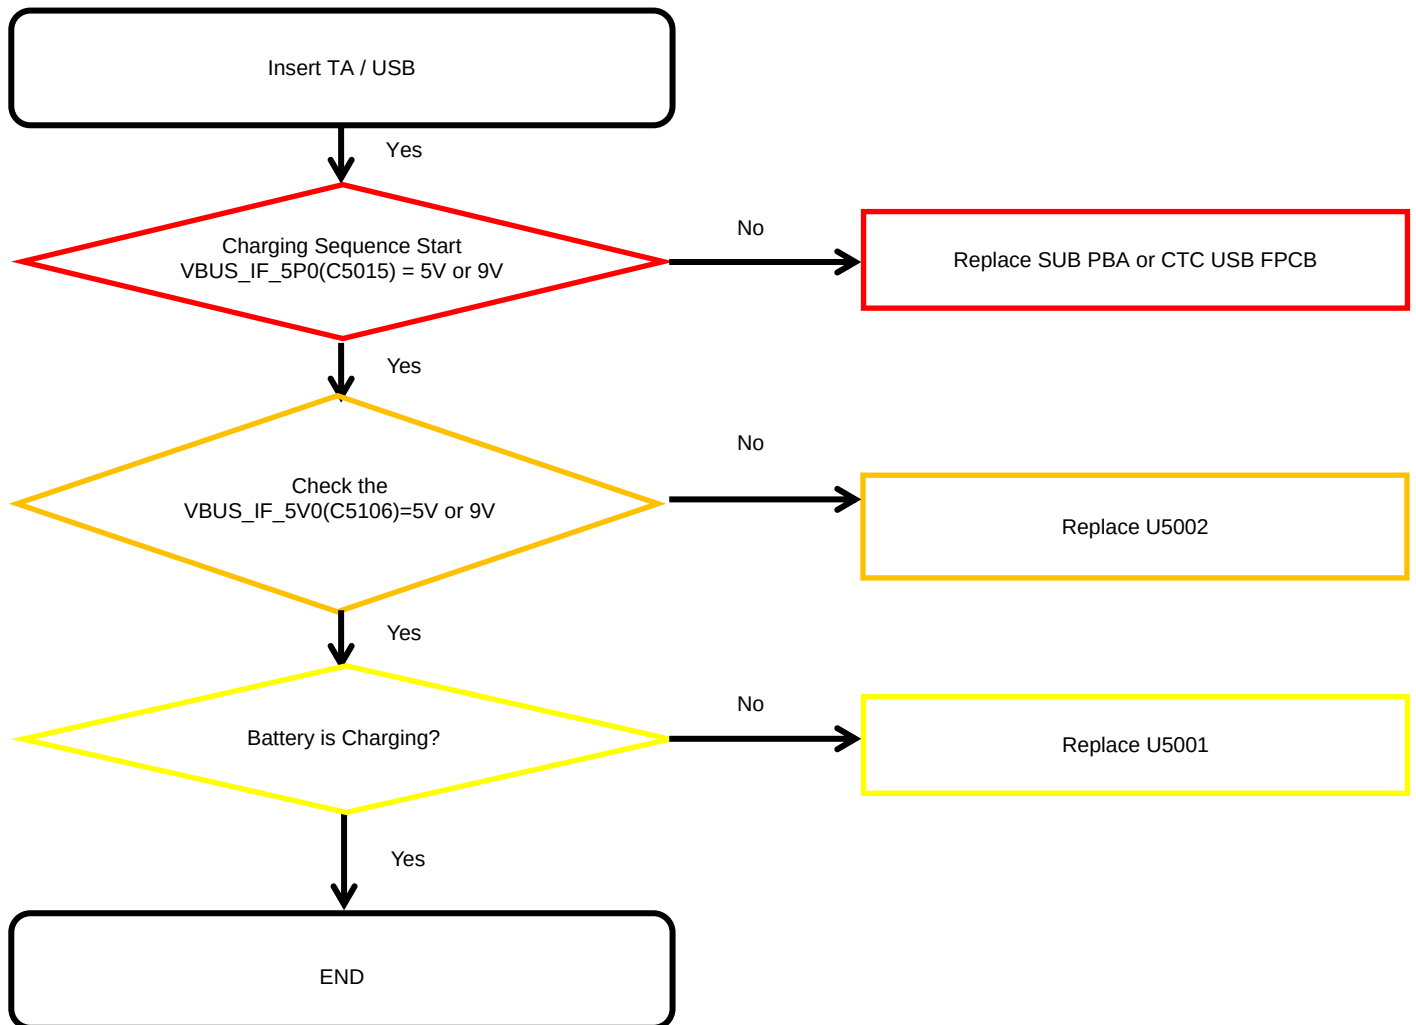


8. Level 3 Repair

8-4-7. OTG

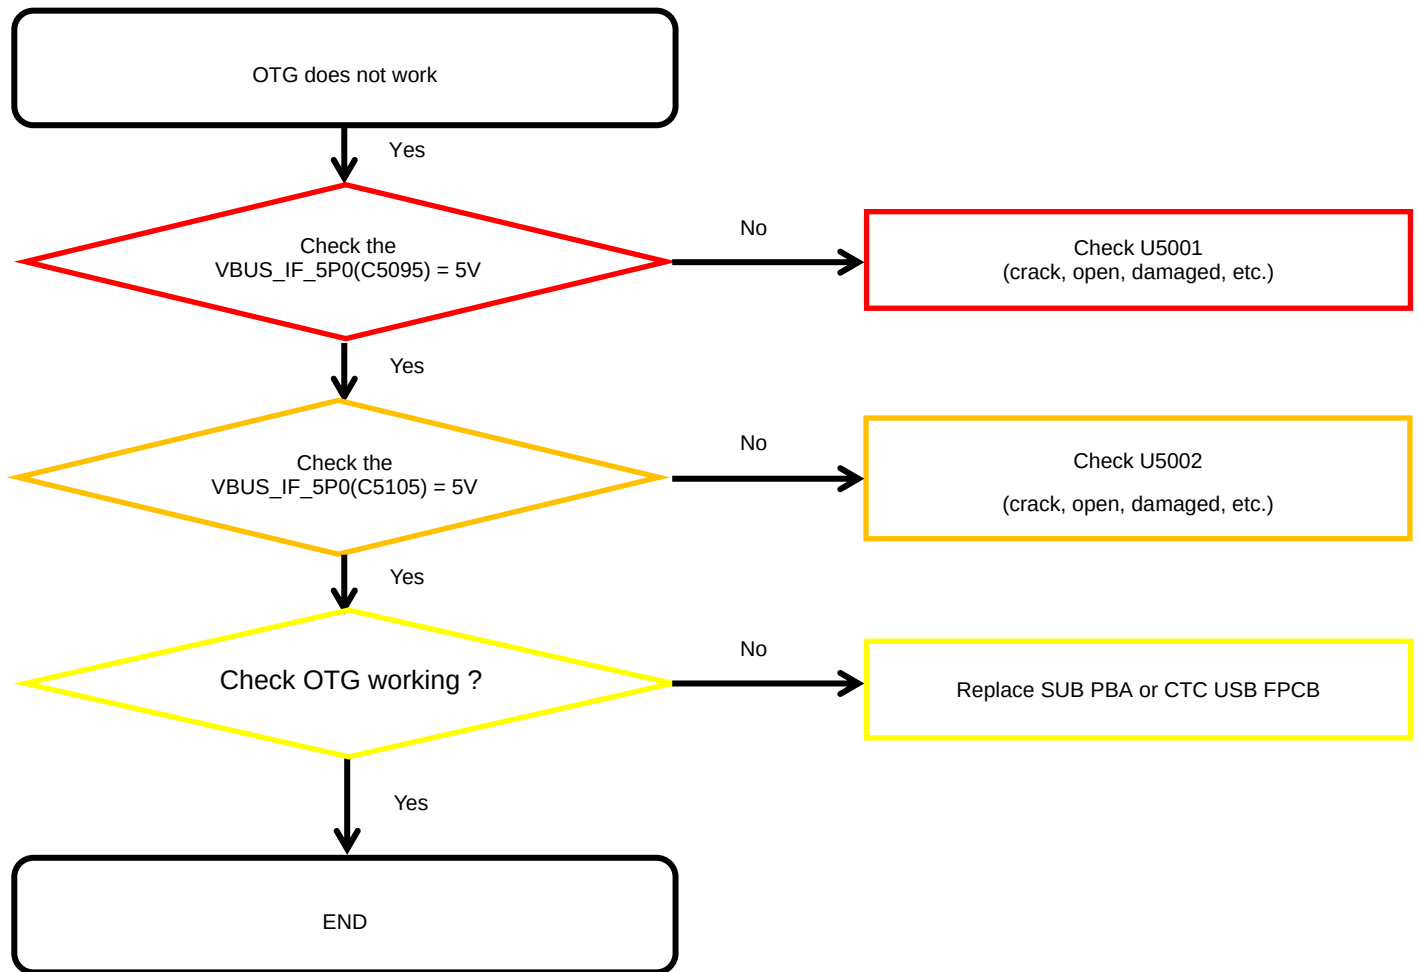


8. Level 3 Repair

8-4-8-1. Magnetic Sensor

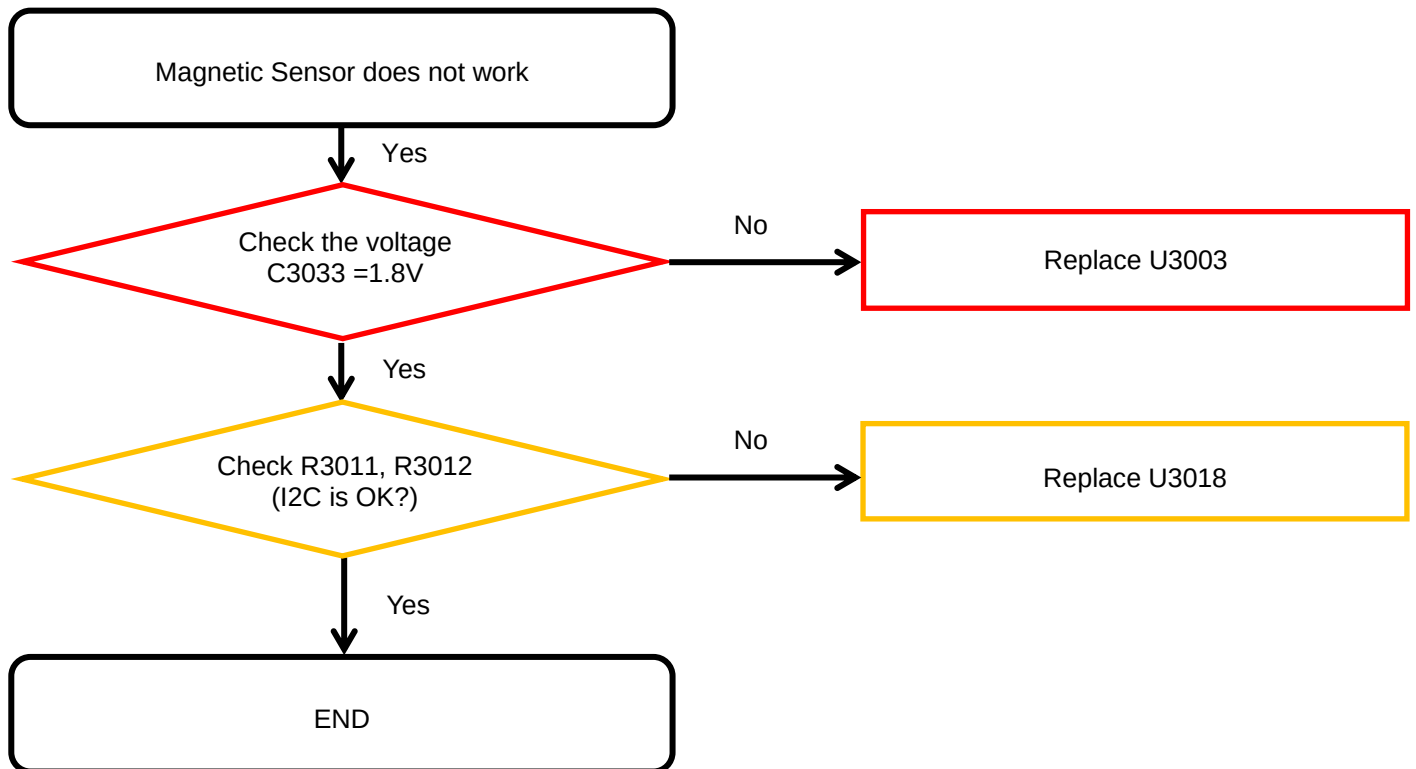


8. Level 3 Repair

8-4-8-2. 6Axis Sensor

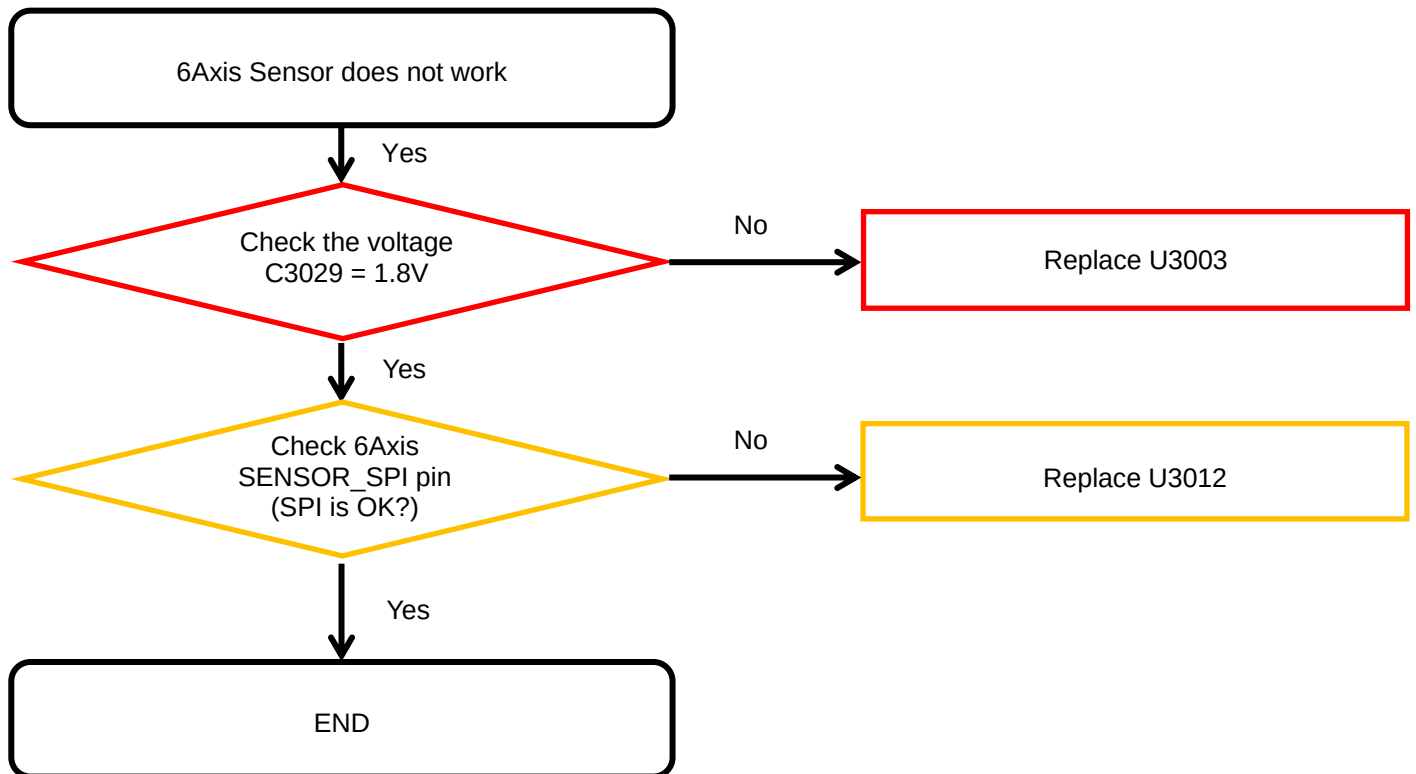


8. Level 3 Repair

8-4-8-3. Proximity

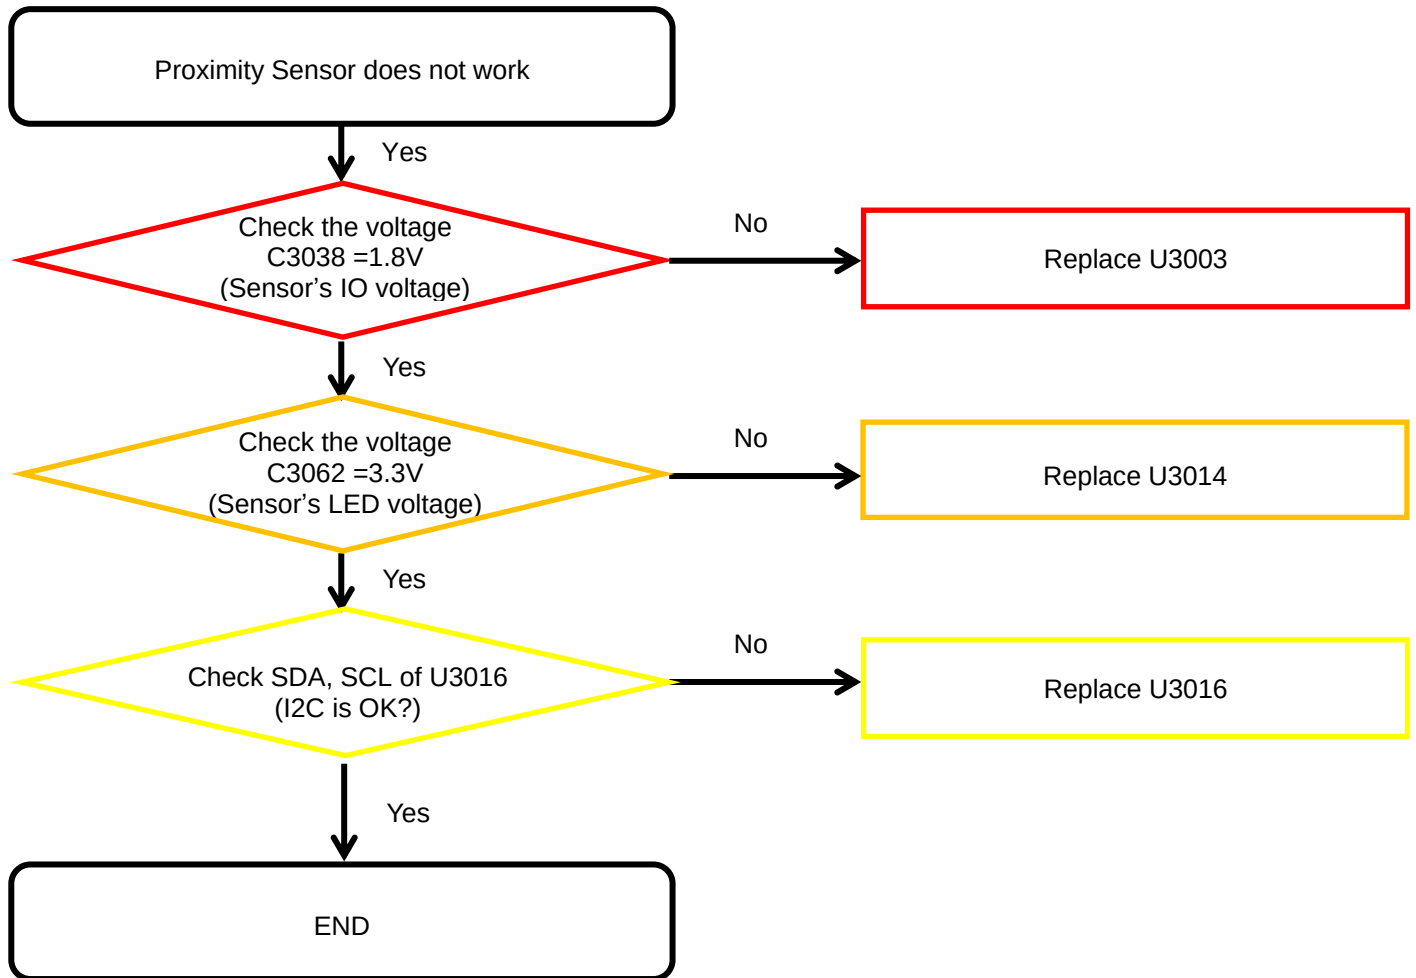


8. Level 3 Repair

8-4-8-4. Fingerprint Sensor

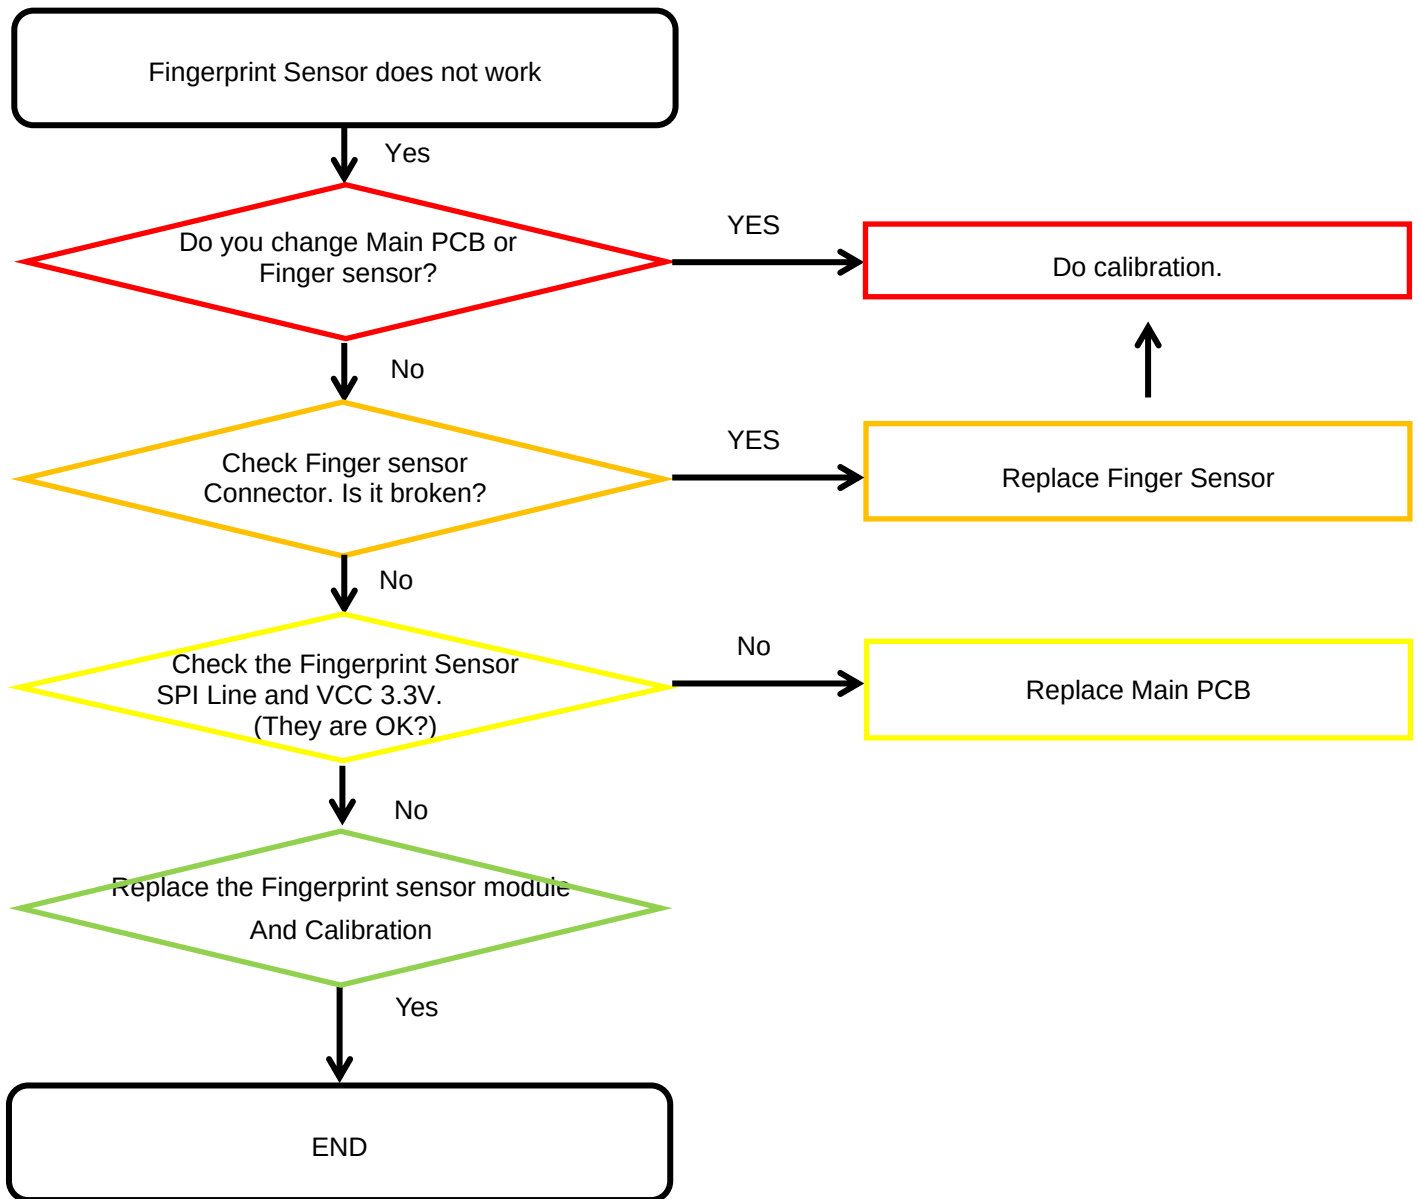


8. Level 3 Repair

8-4-9-1. Microphone Part - Main MIC

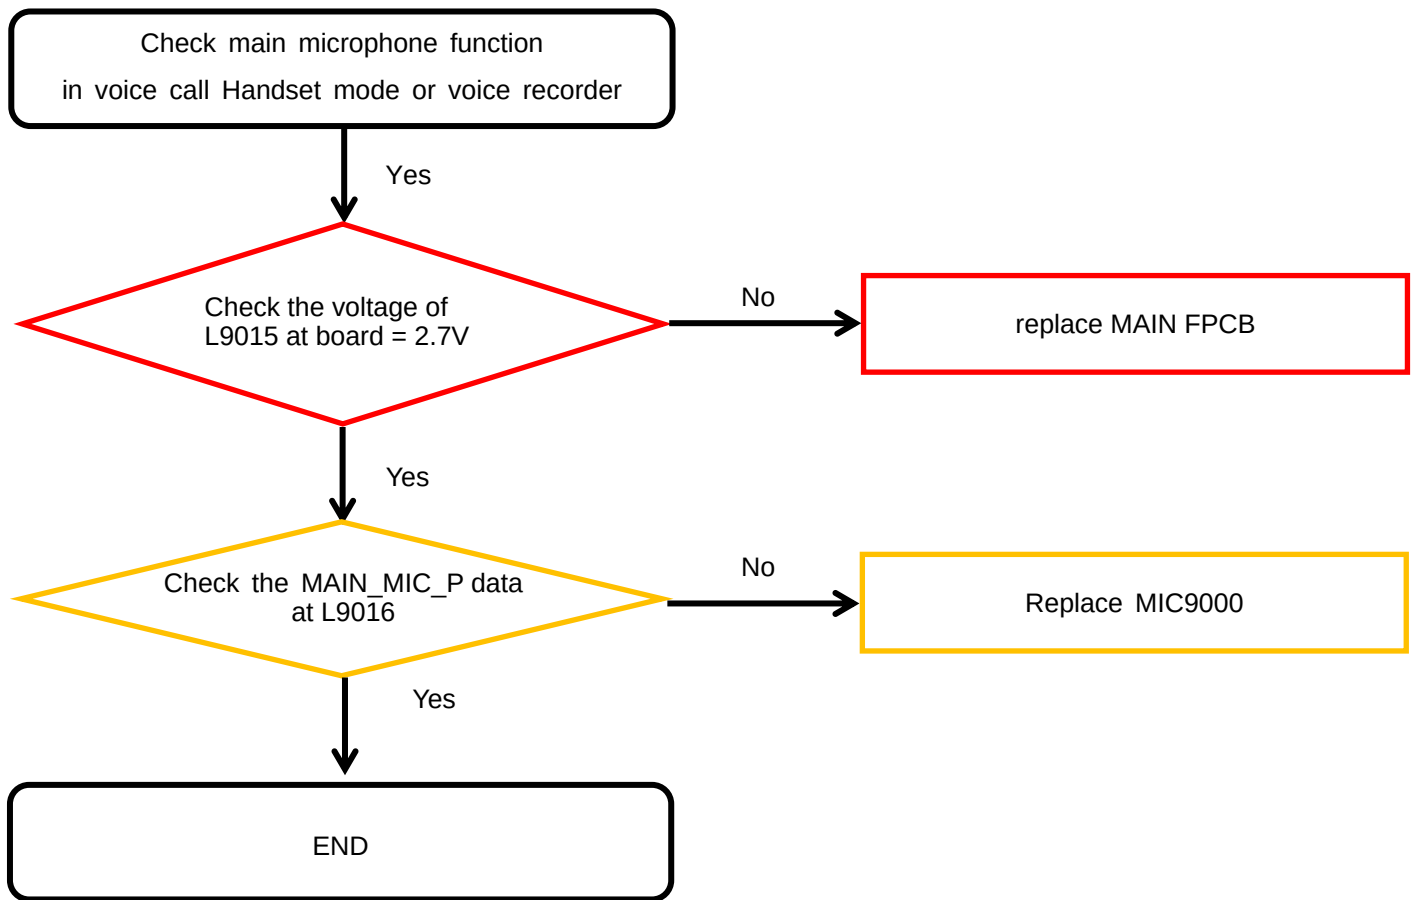


8. Level 3 Repair

8-4-9-2. Microphone Part - Sub(2nd) MIC

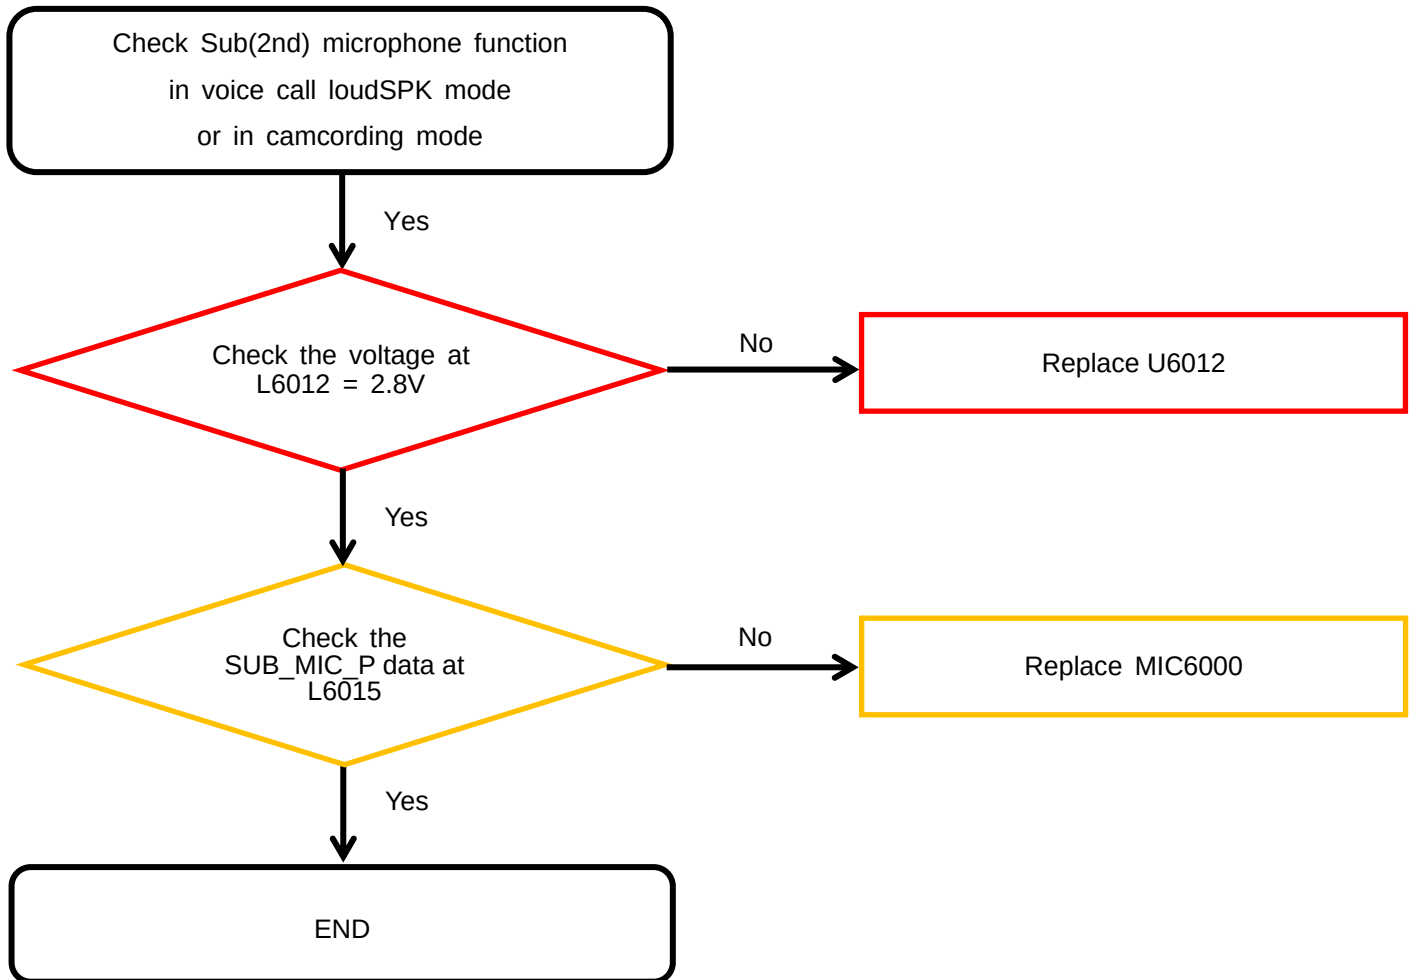


8. Level 3 Repair

8-4-10. Speaker Part

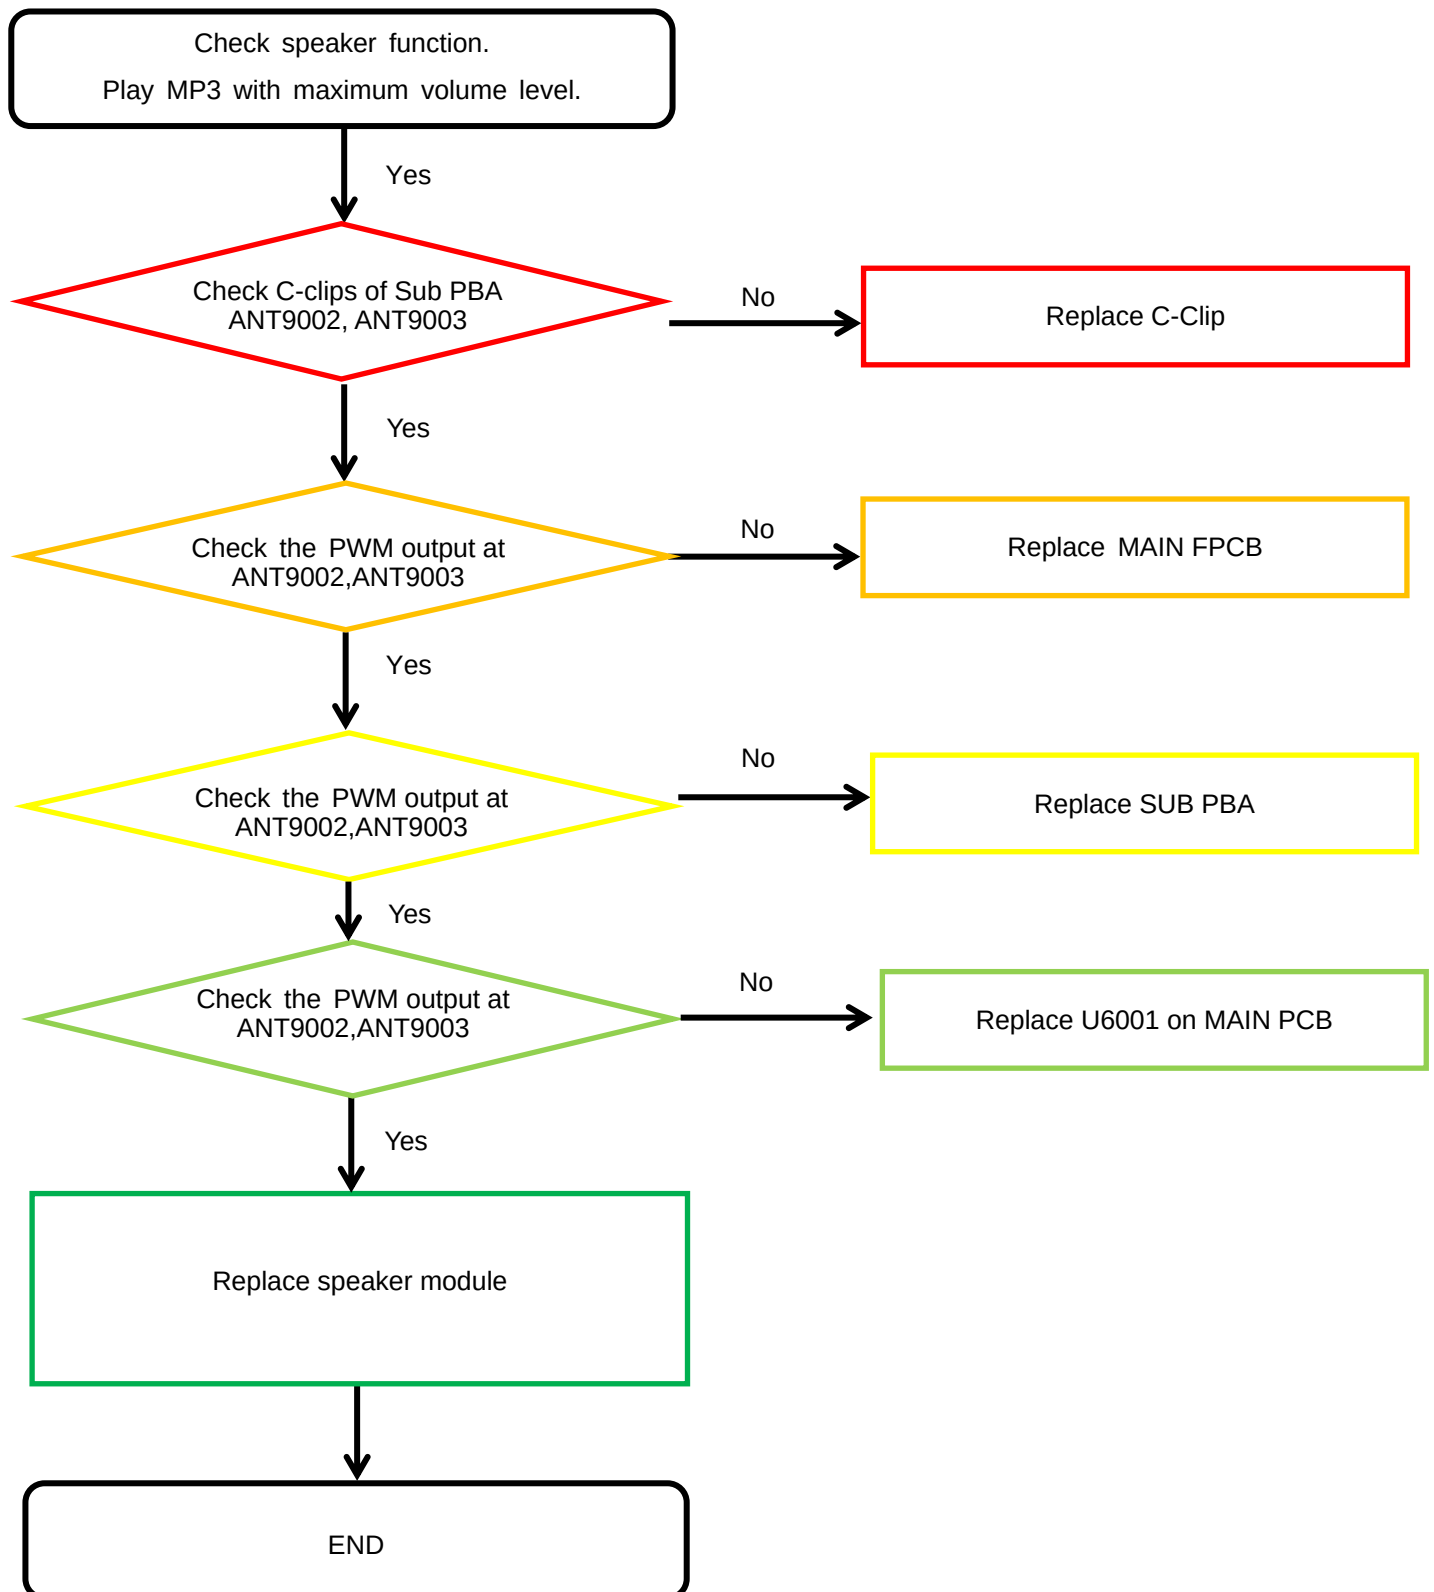


8. Level 3 Repair

8-4-11. Receiver Part

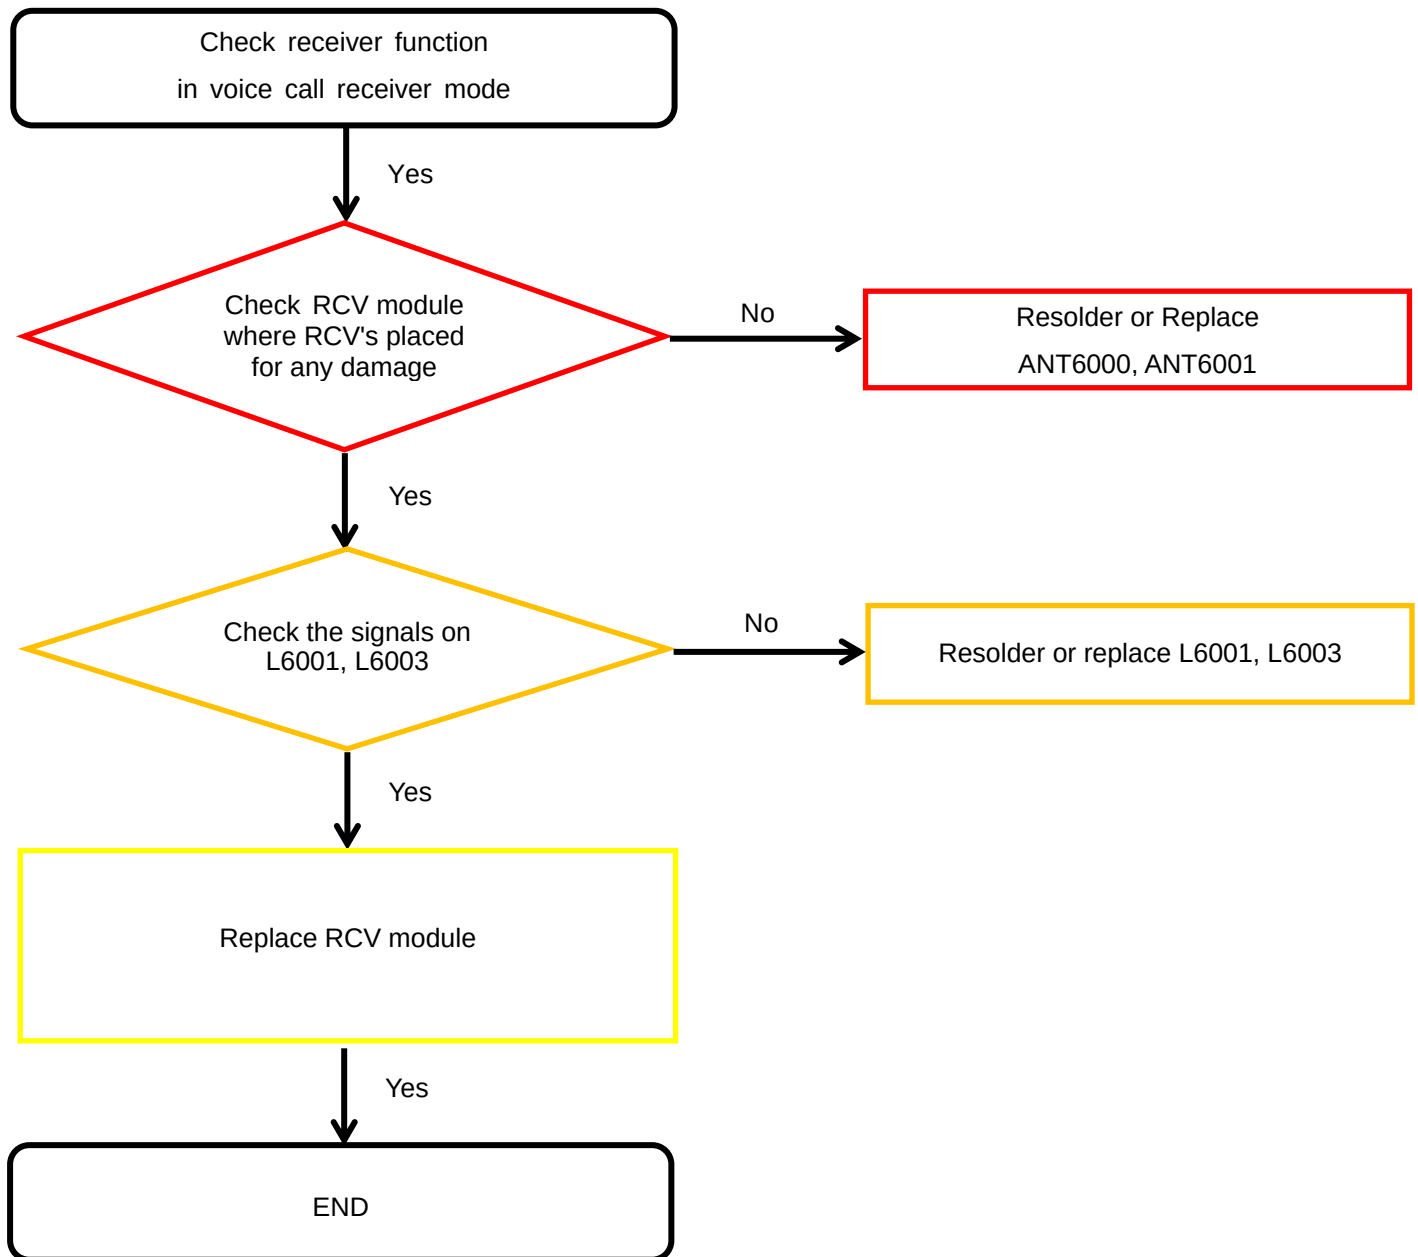


8. Level 3 Repair

8-4-12. BT/WIFI

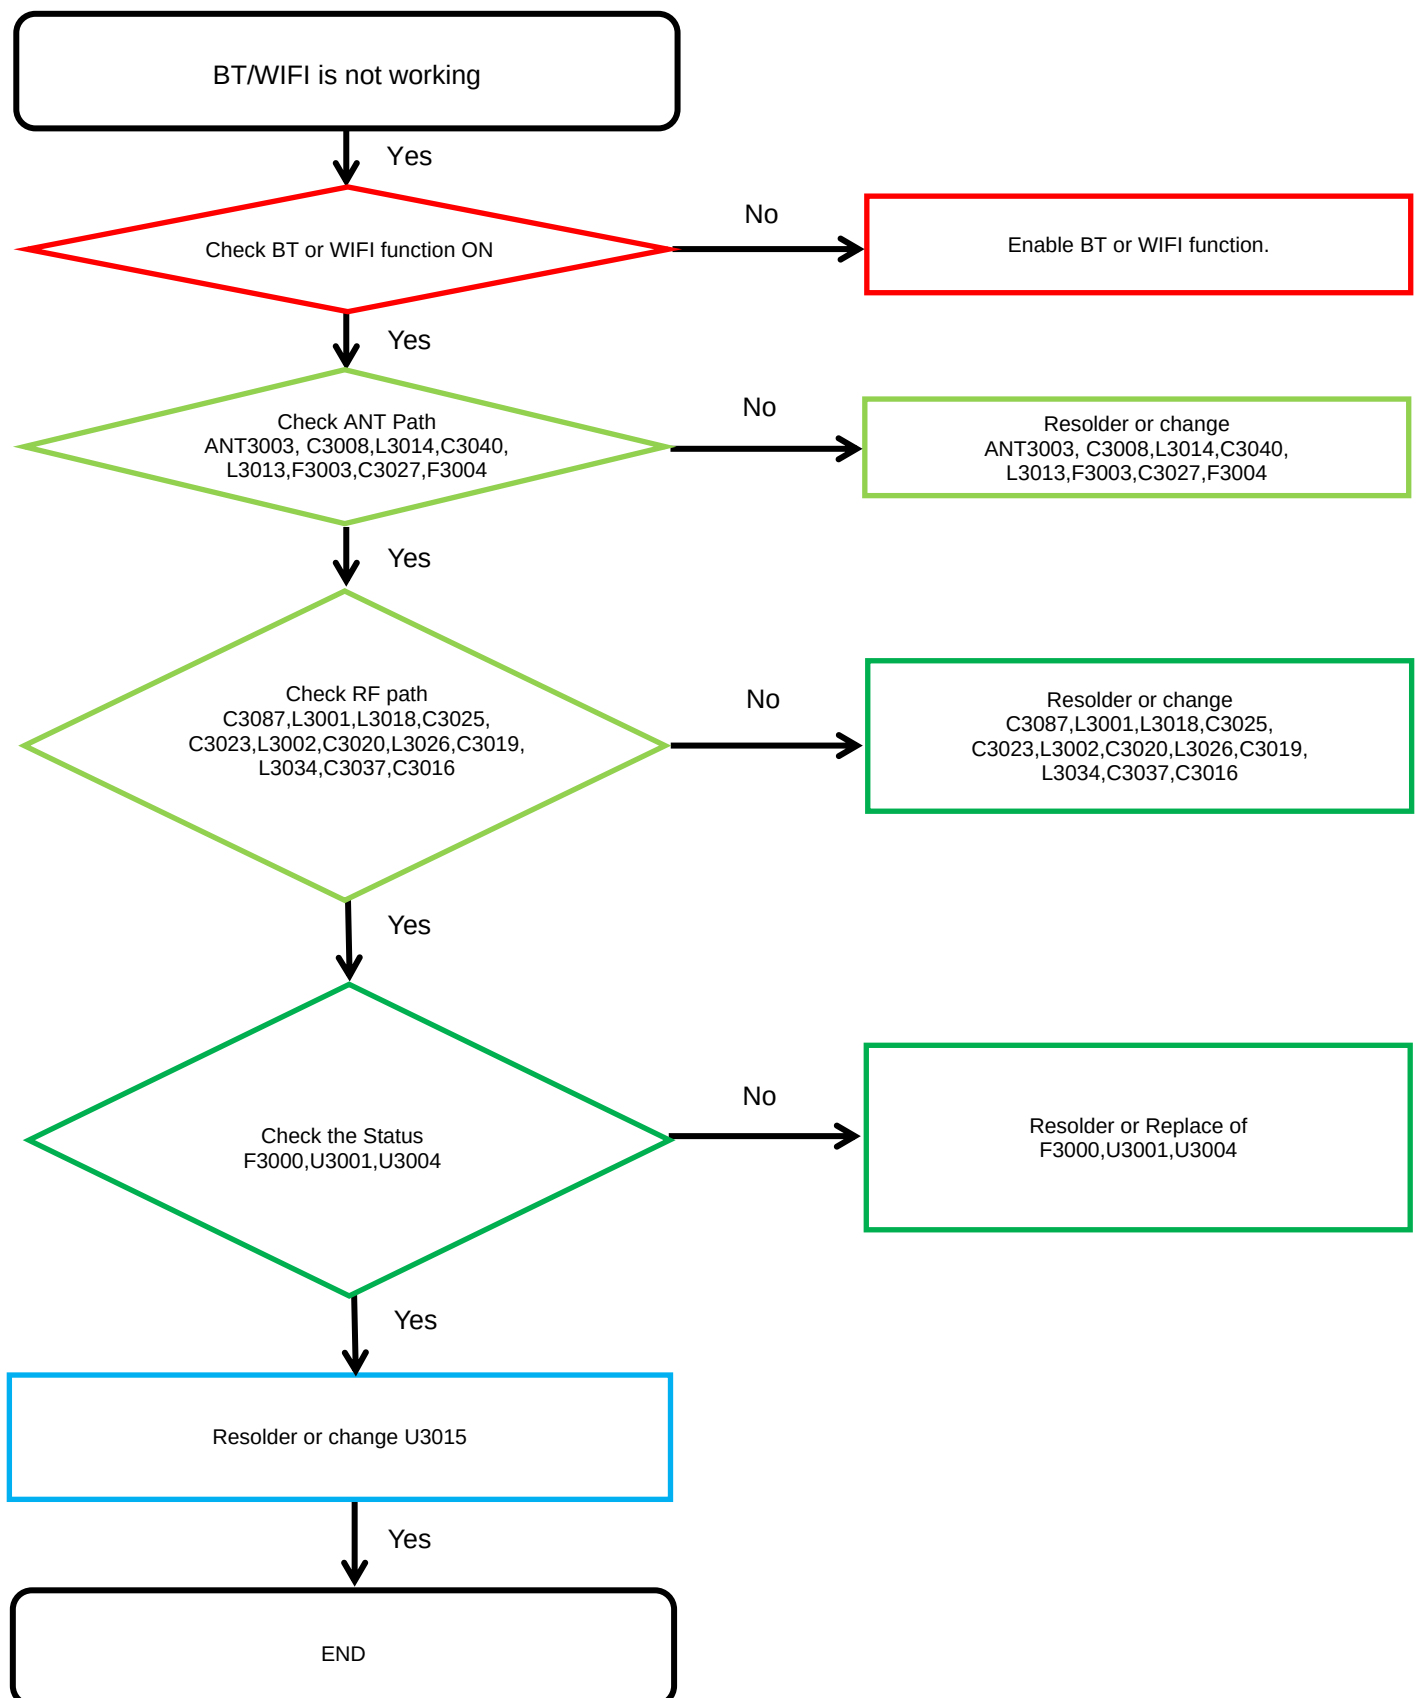


8. Level 3 Repair

8-4-13. GPS

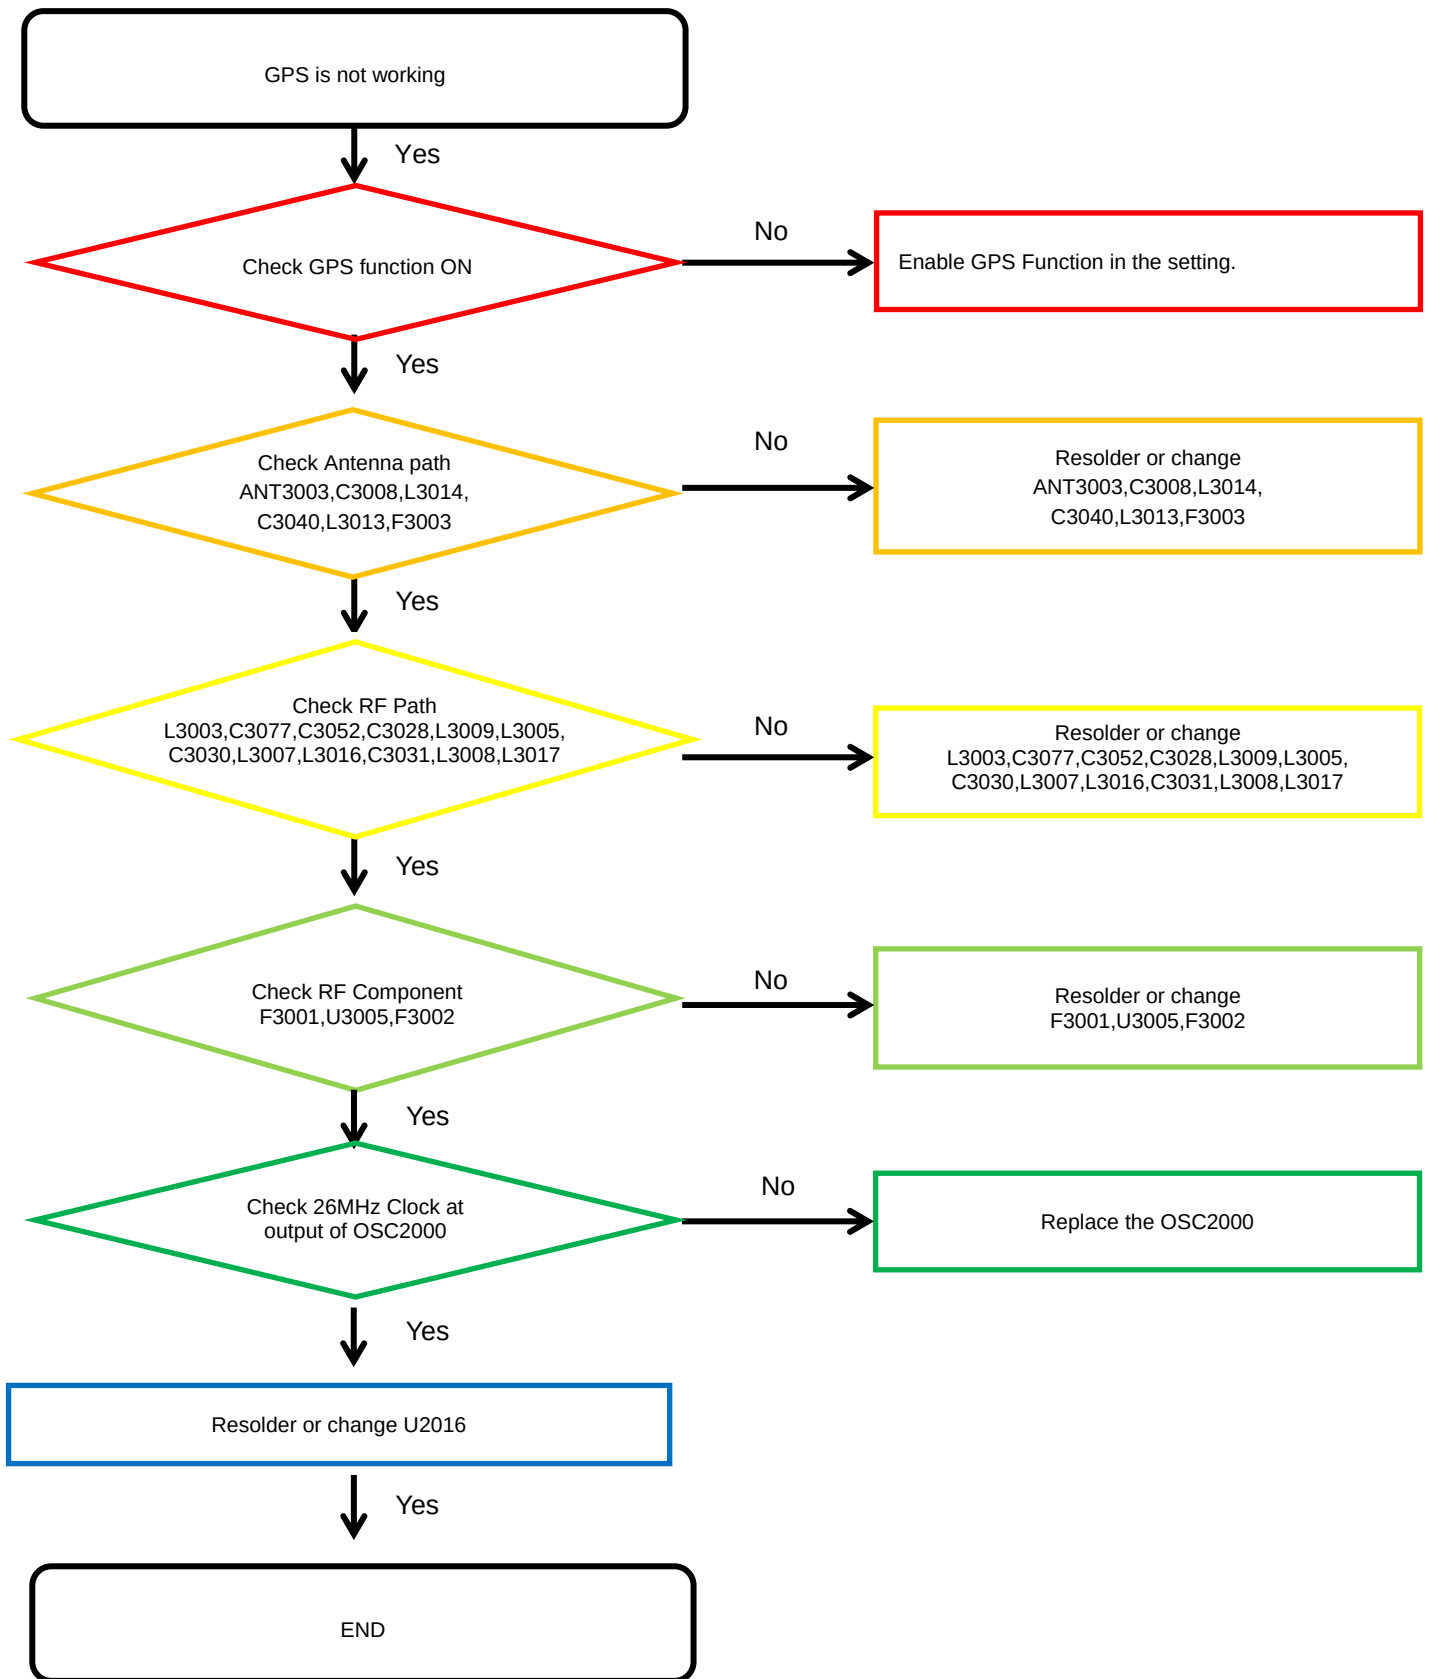


8. Level 3 Repair

8-4-14. NFC (SM-M215FDSN Only)

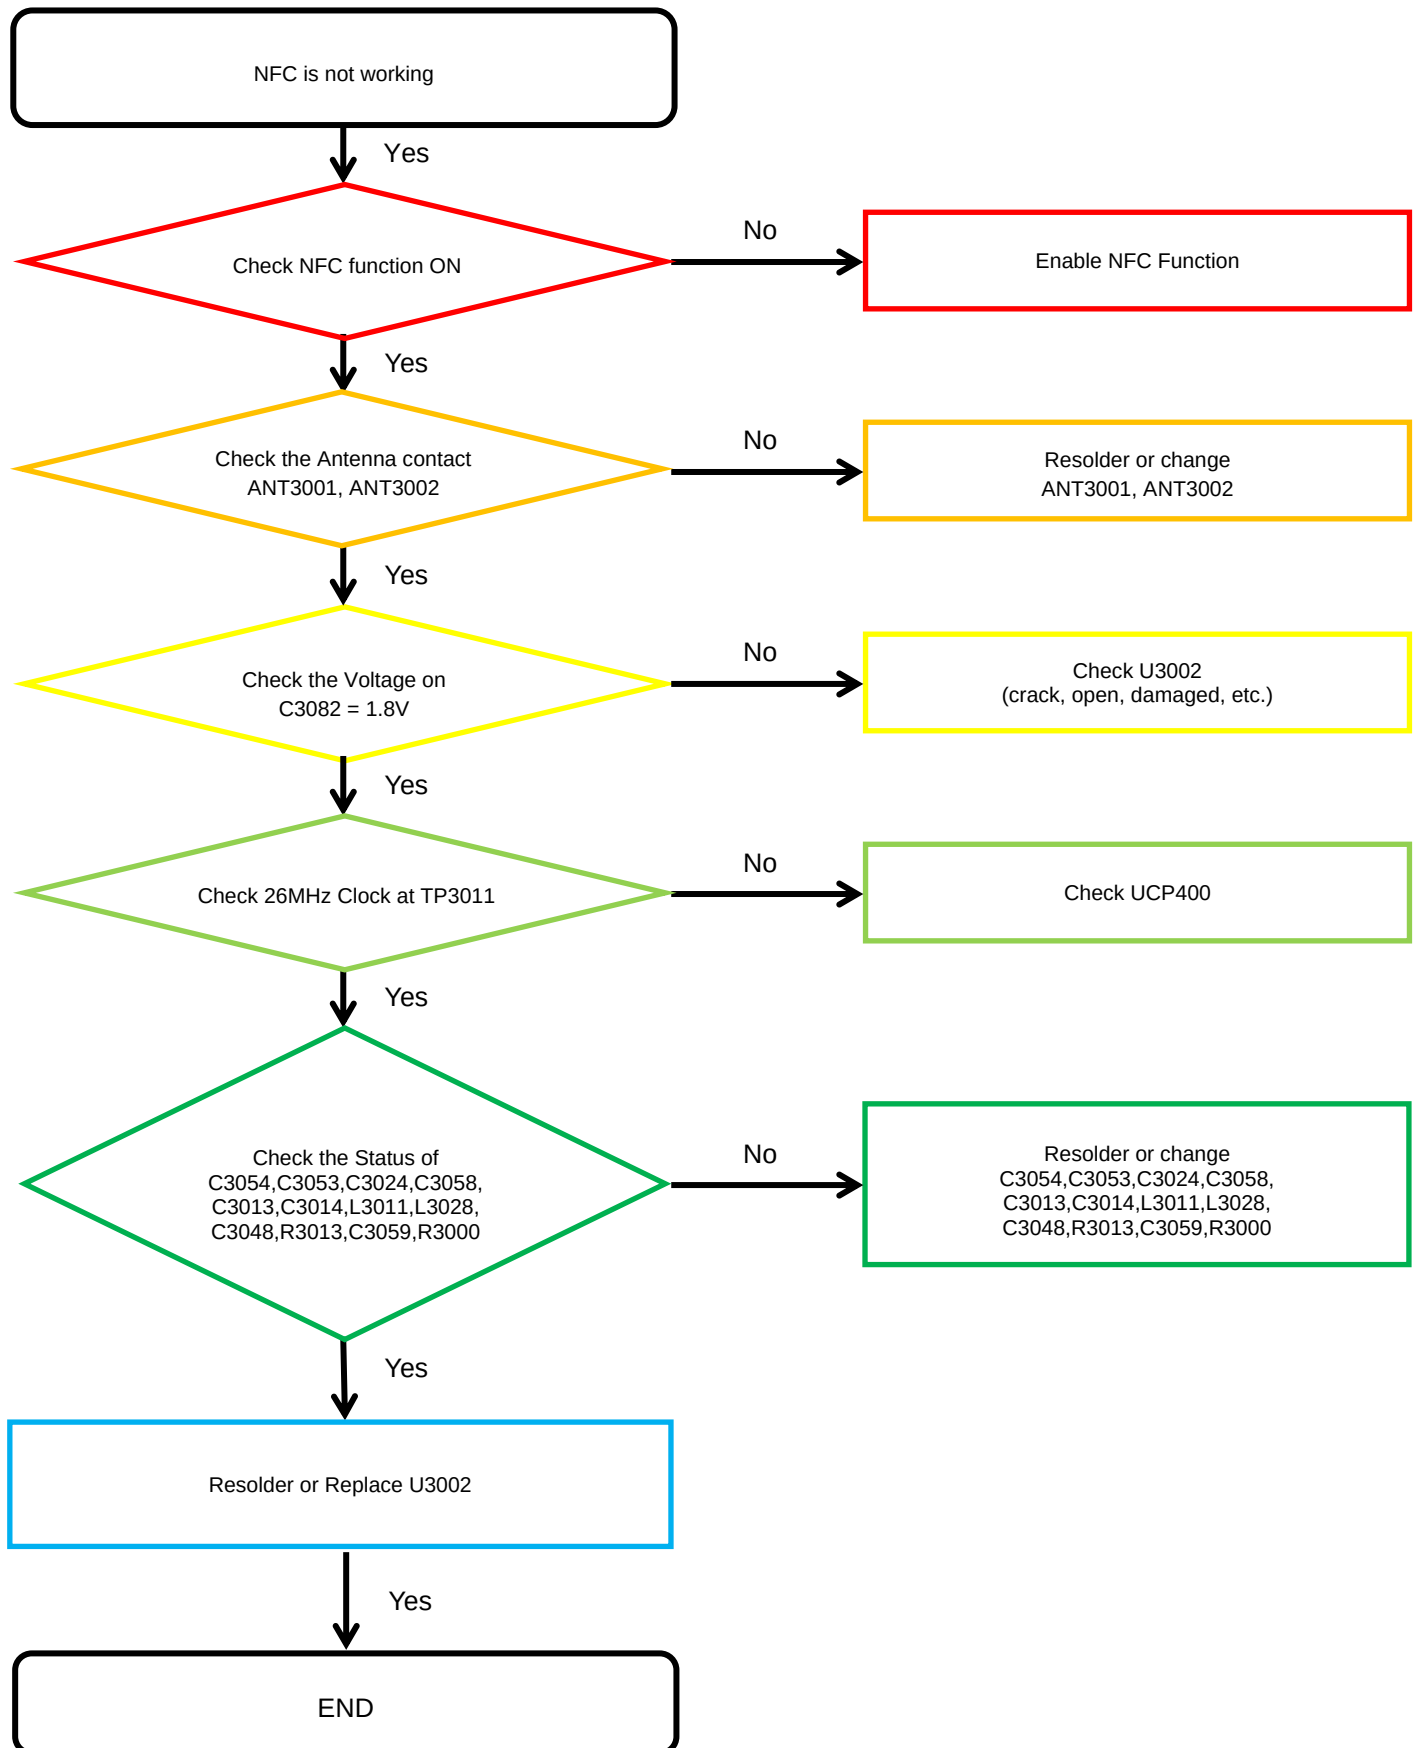


8. Level 3 Repair

8-4-15. FM radio part

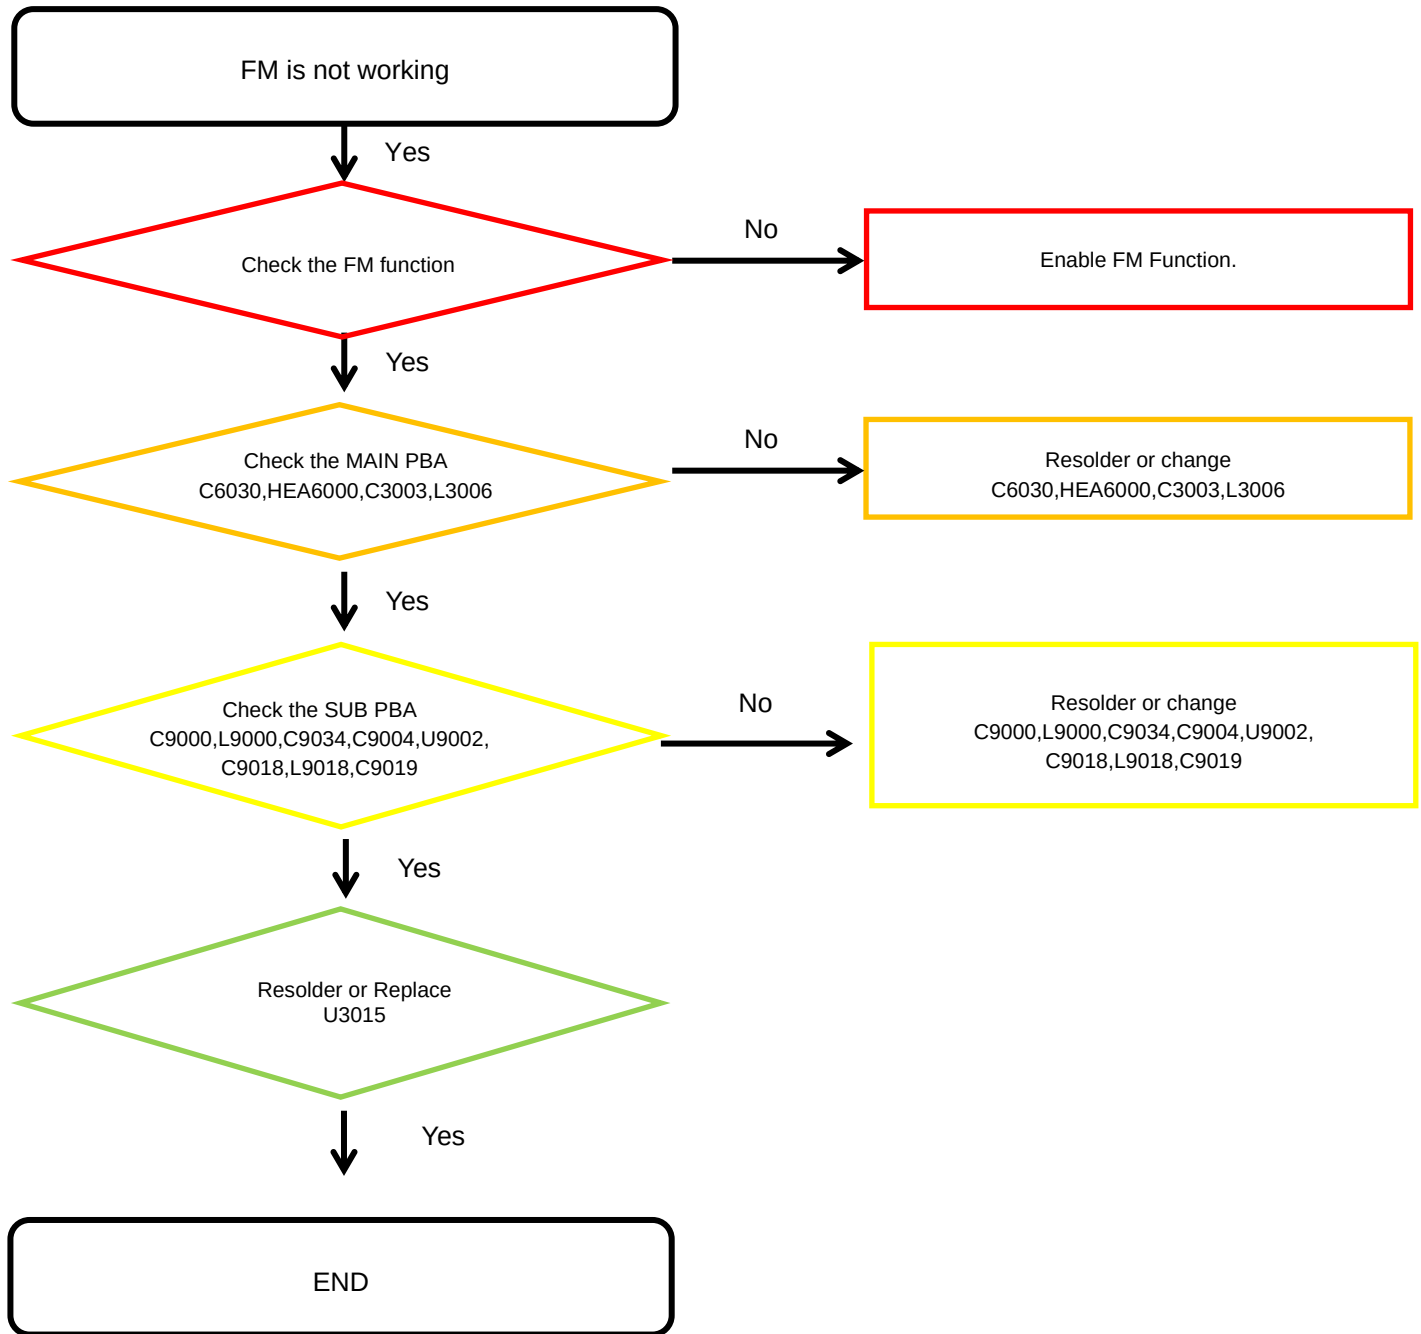


8. Level 3 Repair

8-4-16. Display

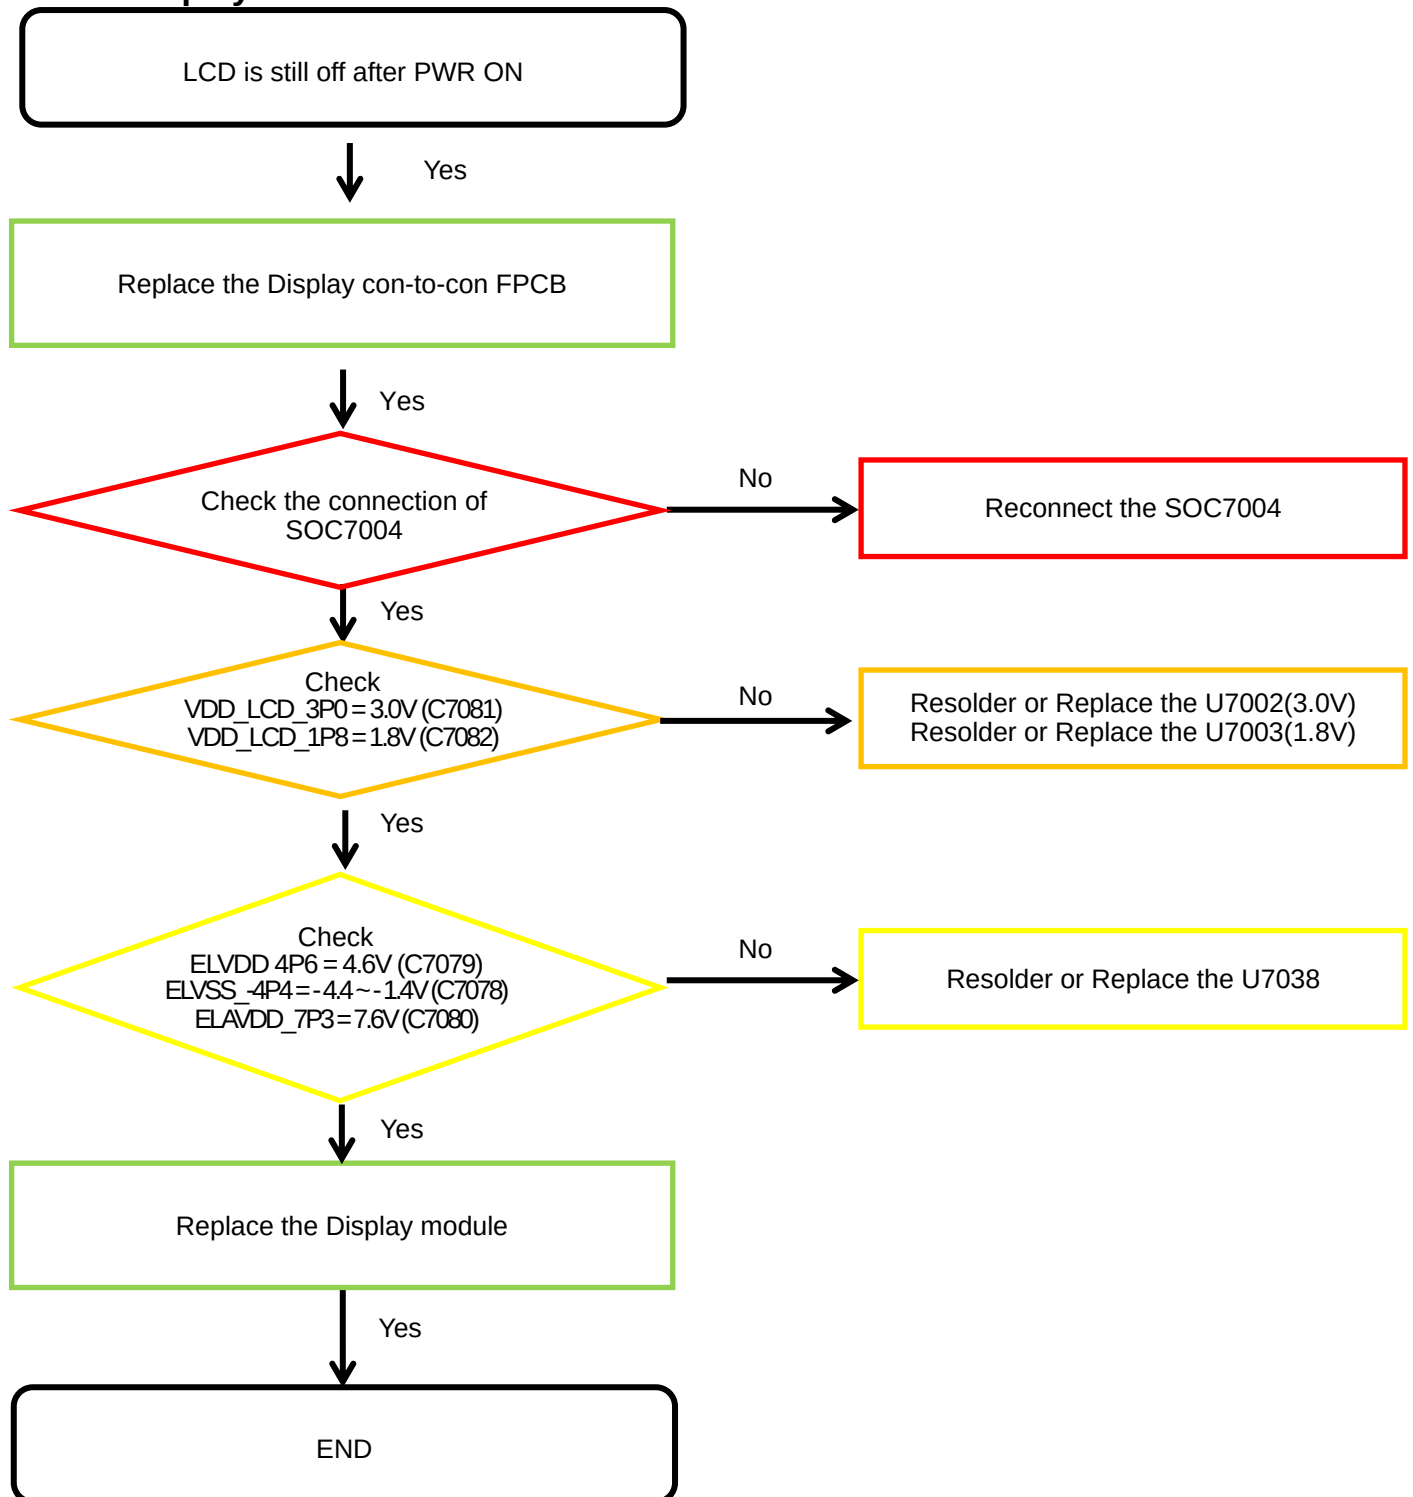


8. Level 3 Repair

8-4-17. Triple Camera

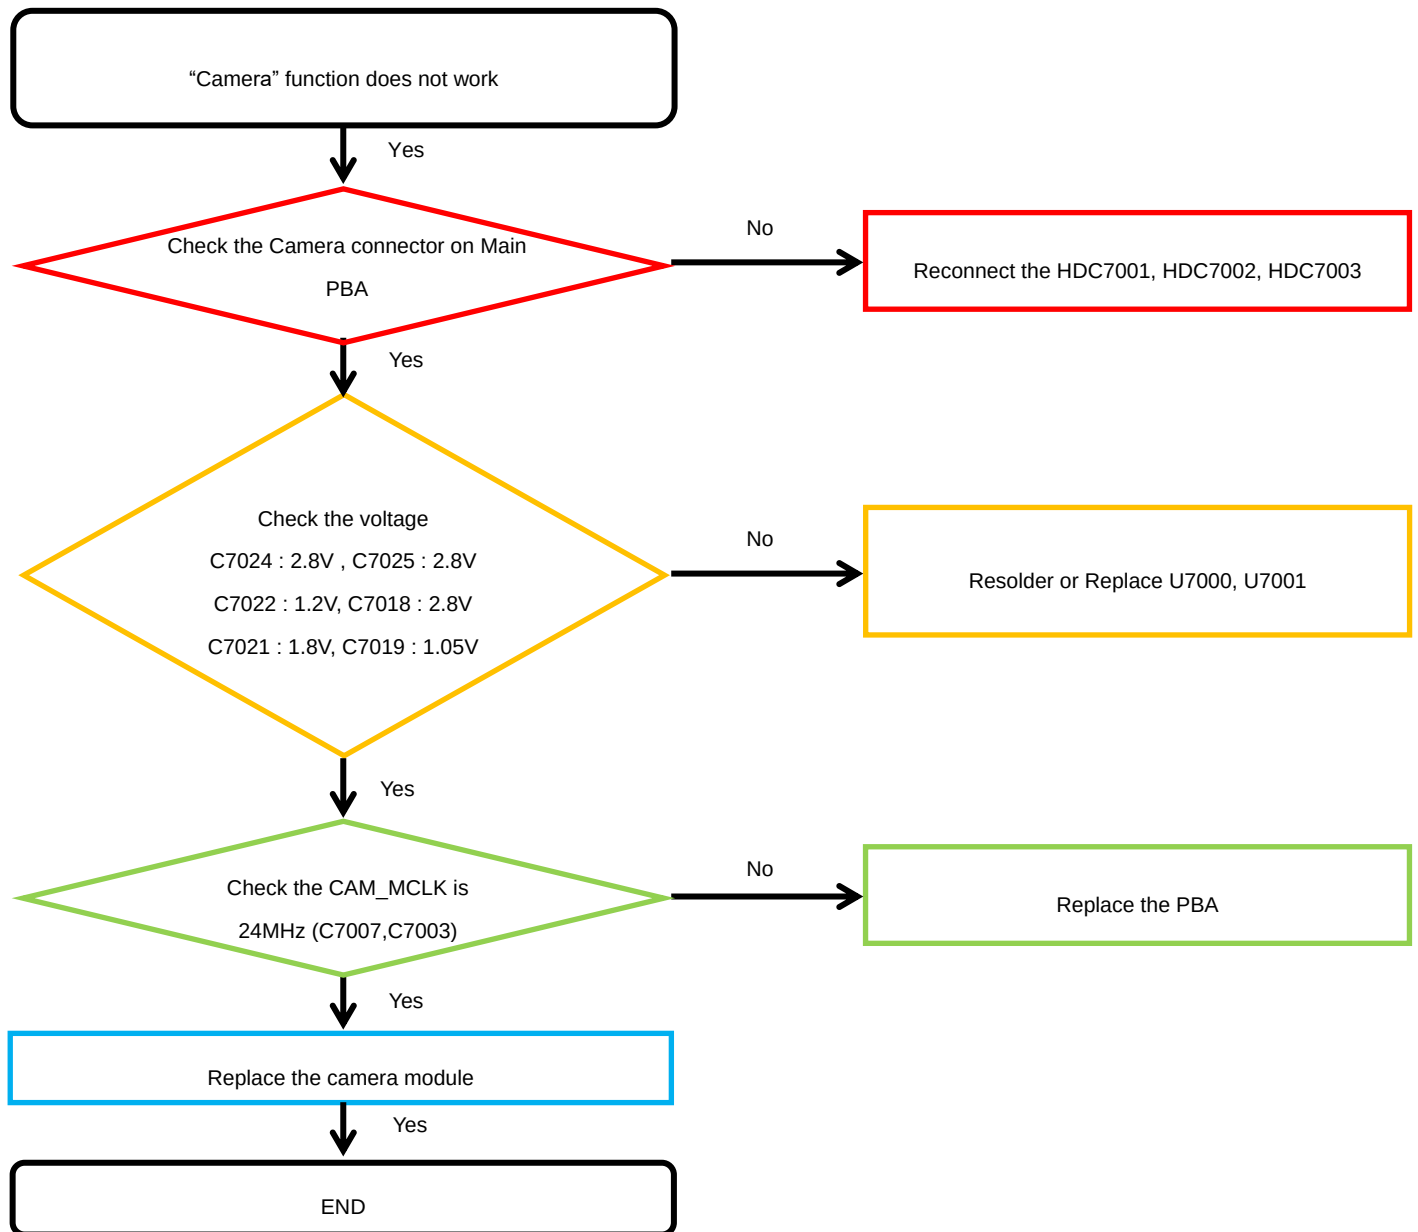


8. Level 3 Repair

8-4-18. VT CAMERA

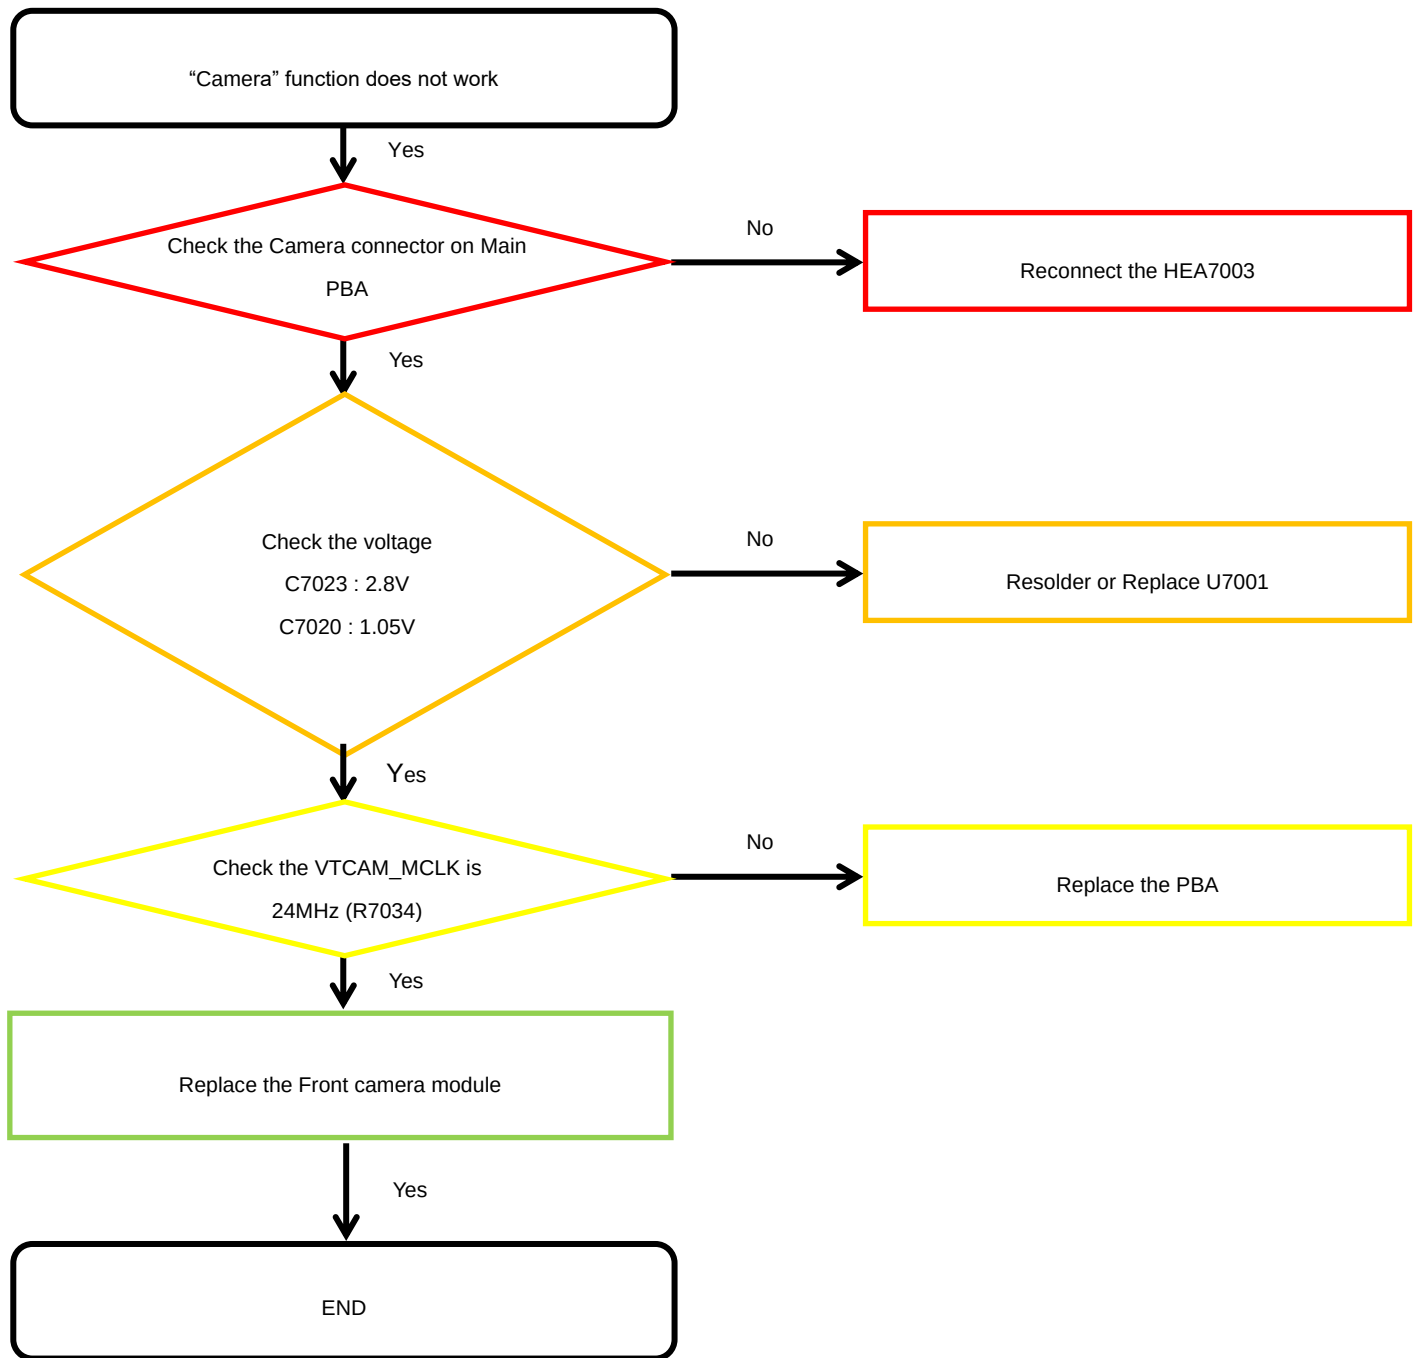


8. Level 3 Repair

8-4-19. TSP

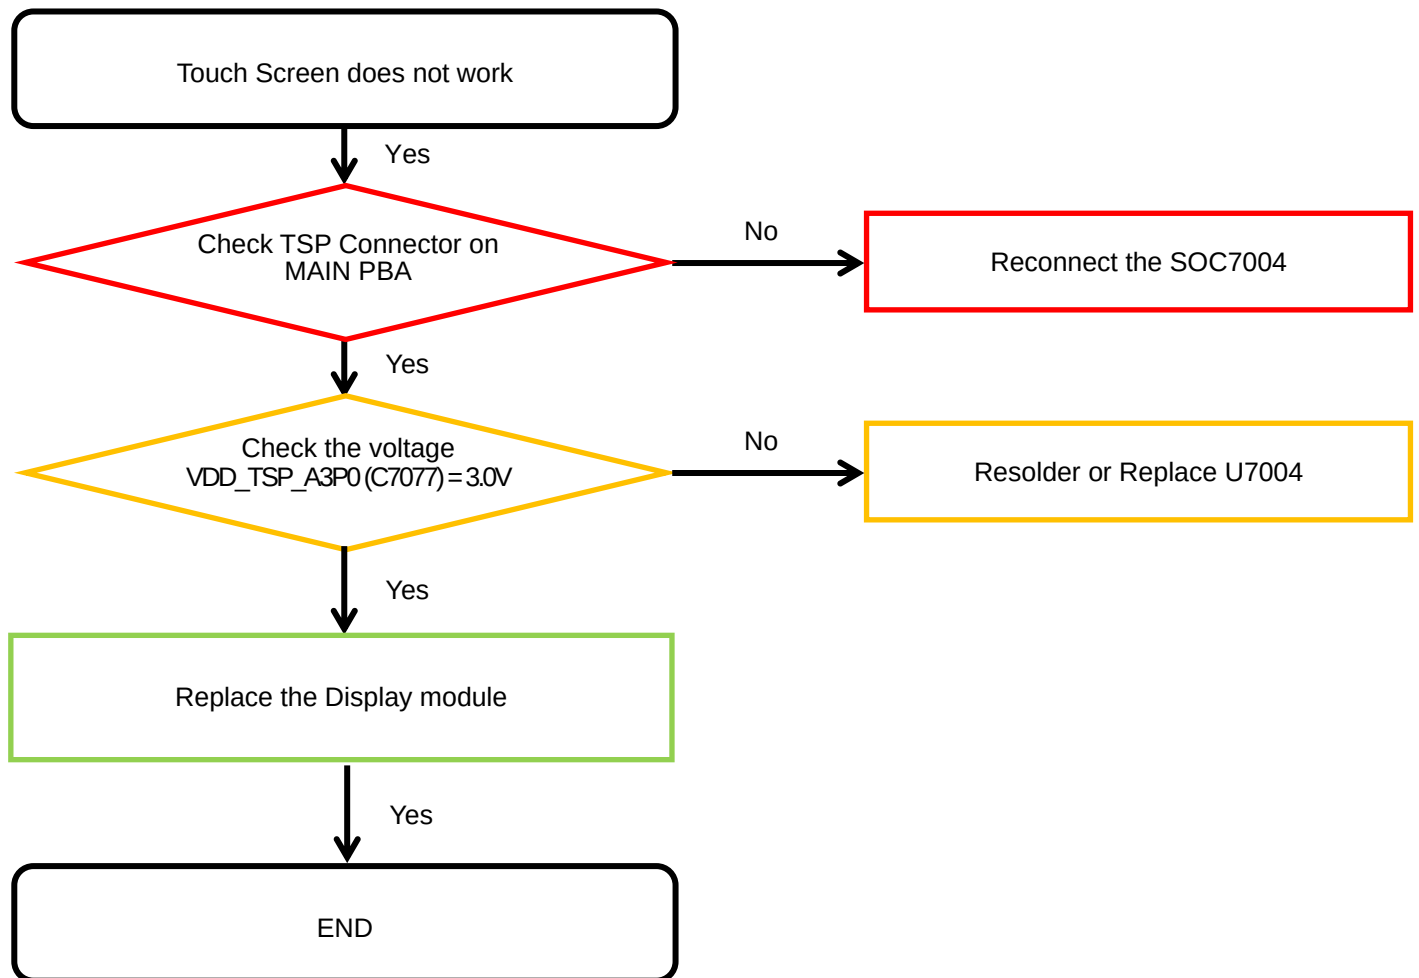


8. Level 3 Repair

8-4-20. Motor

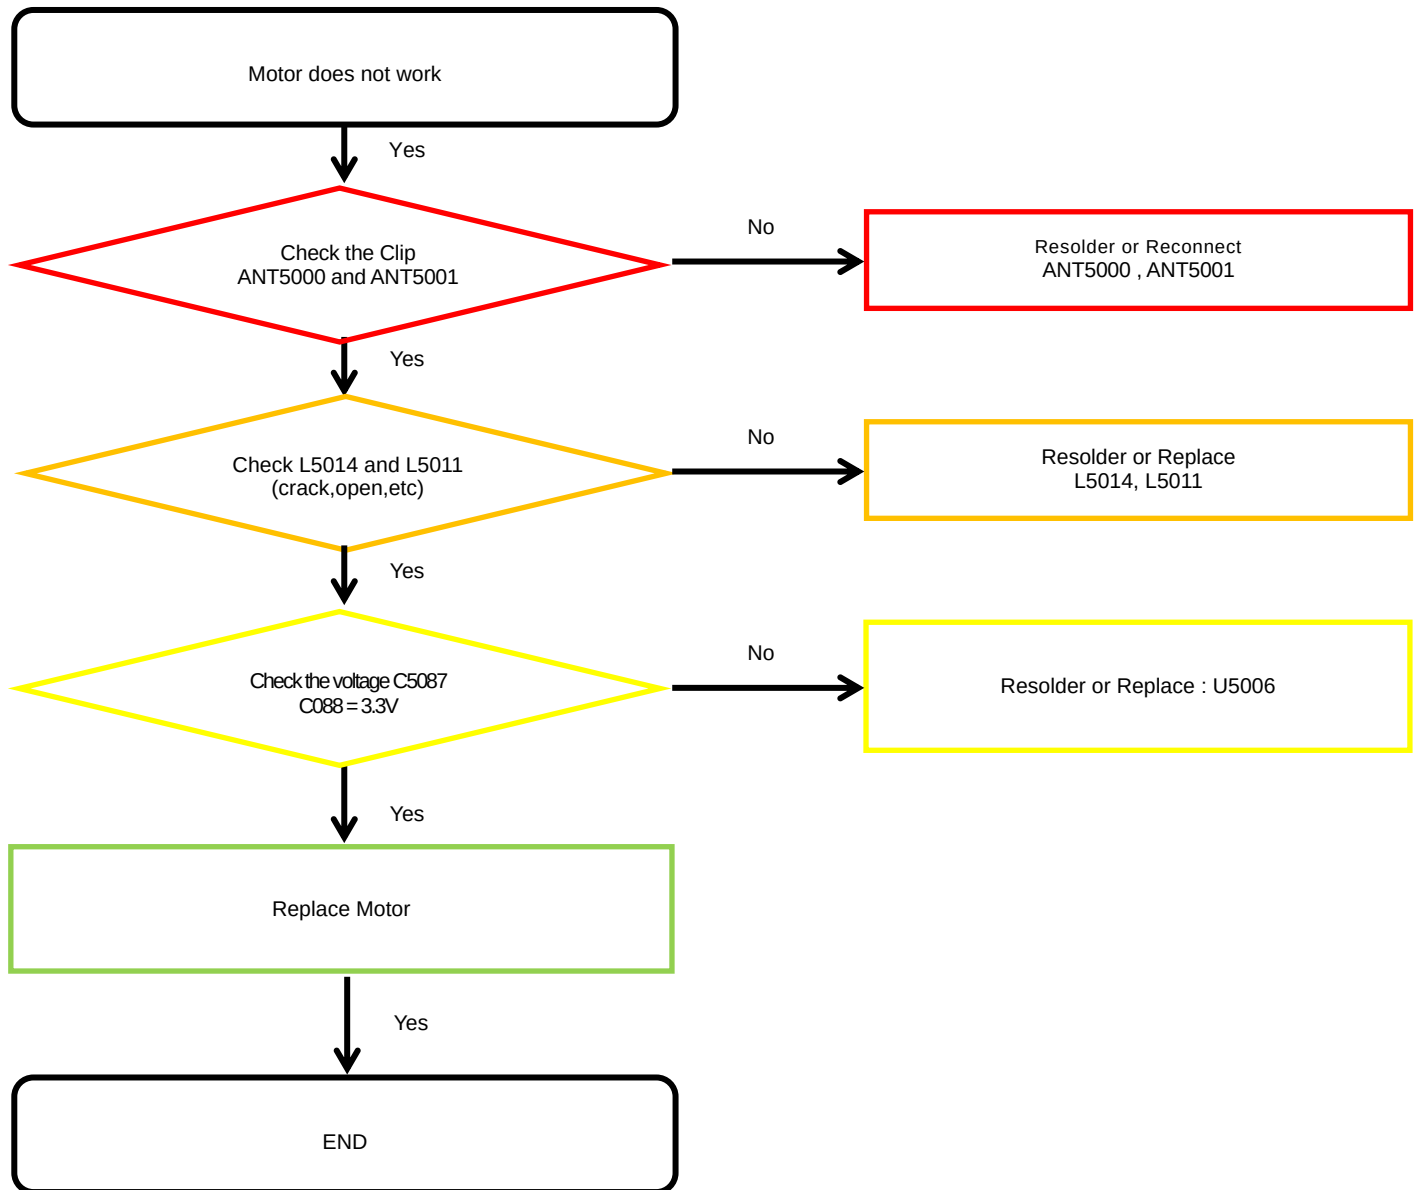


8. Level 3 Repair

8-4-21. GSM 850/900, WCDMA B5/8, LTE B5/8/20 PRx

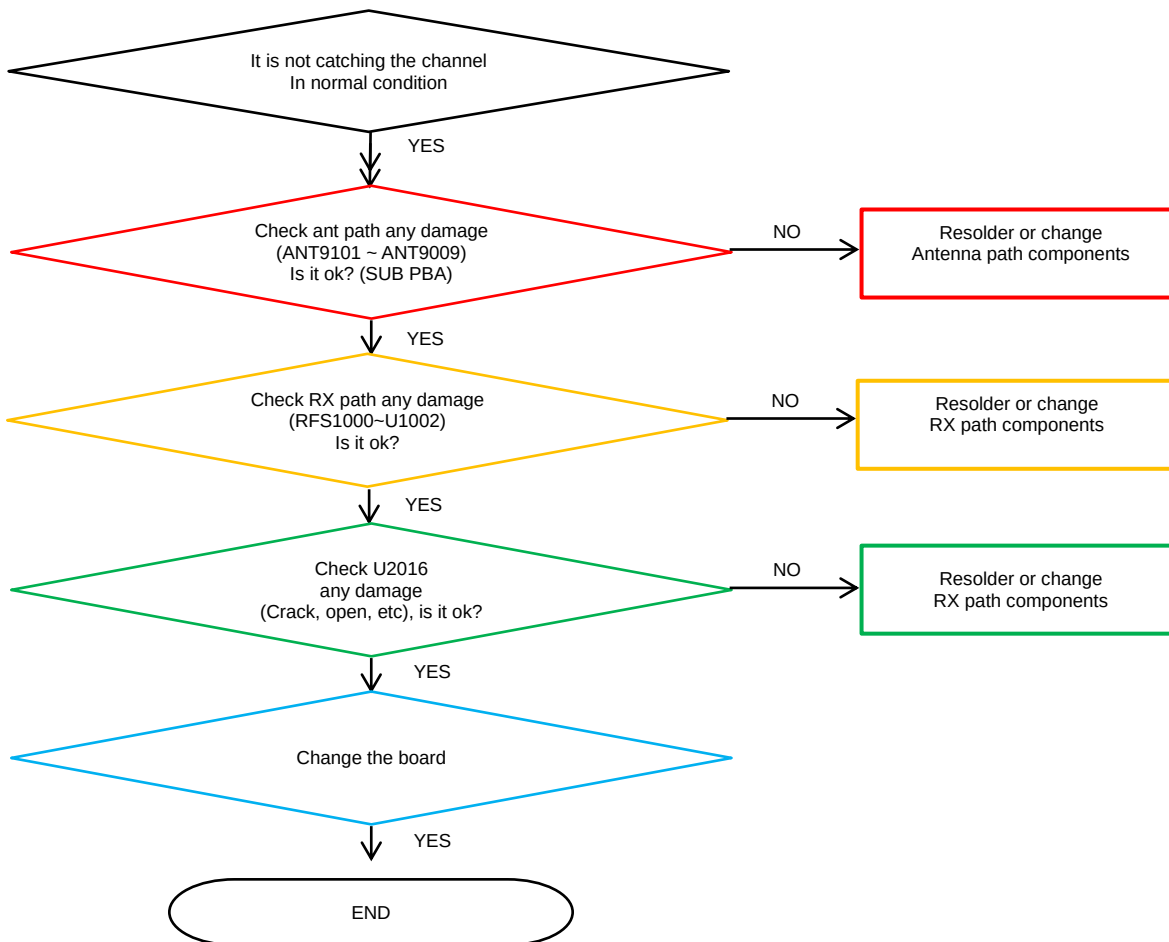


8. Level 3 Repair

8-4-22. LTE B7/38/40/41 PRx

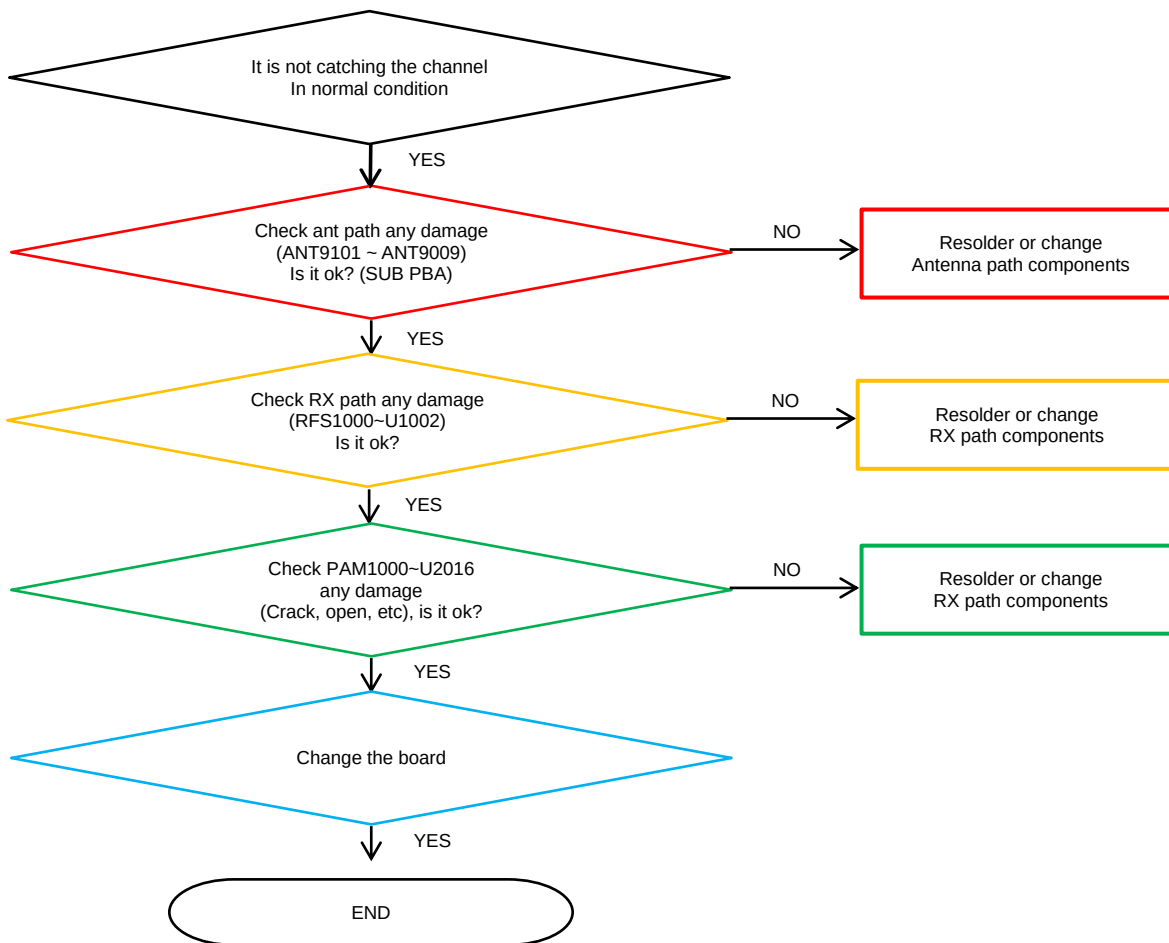


8. Level 3 Repair

8-4-23. GSM DCS/PCS, WCDMA B1/2, LTE B1/3 PRx

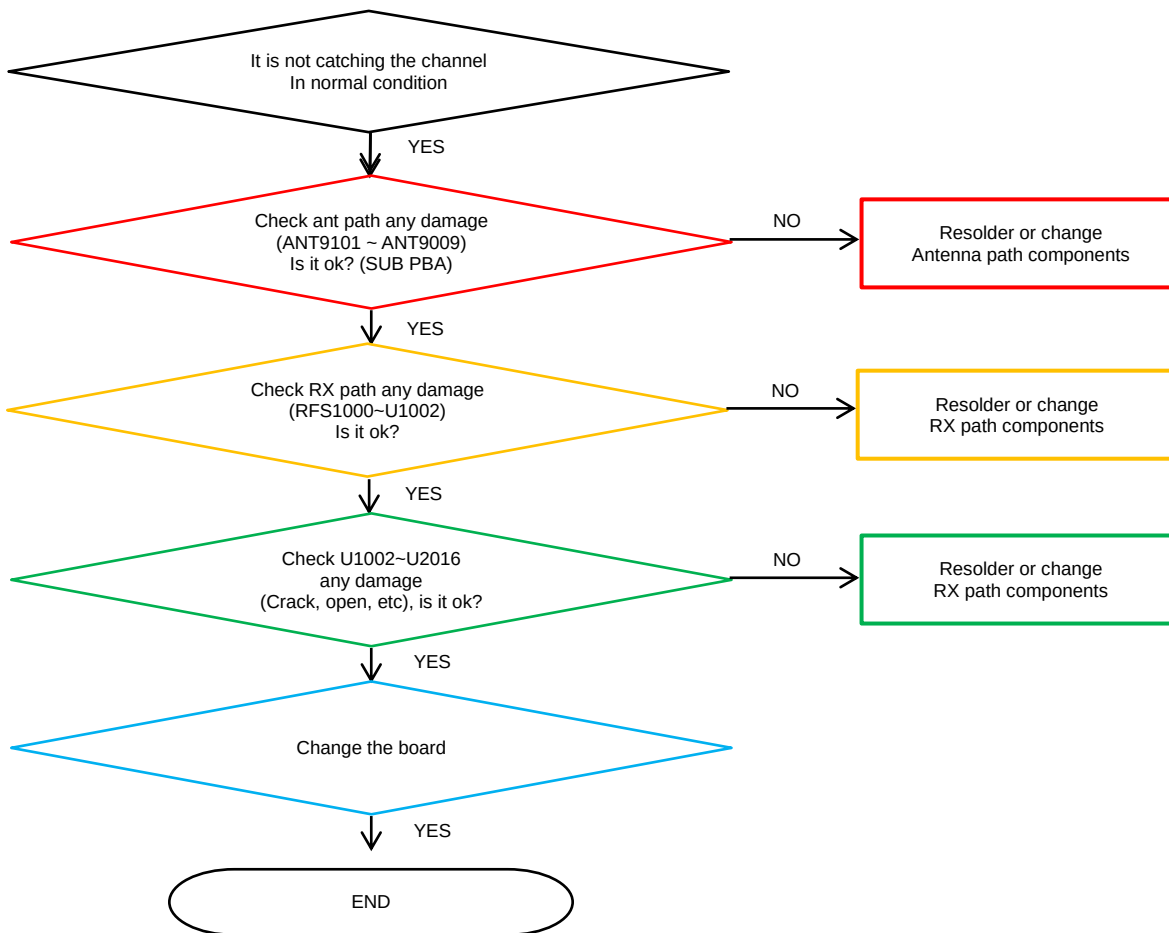


8. Level 3 Repair

8-4-24. GSM 850/900, WCDMA B5/8, LTE B5/8/20 DRx

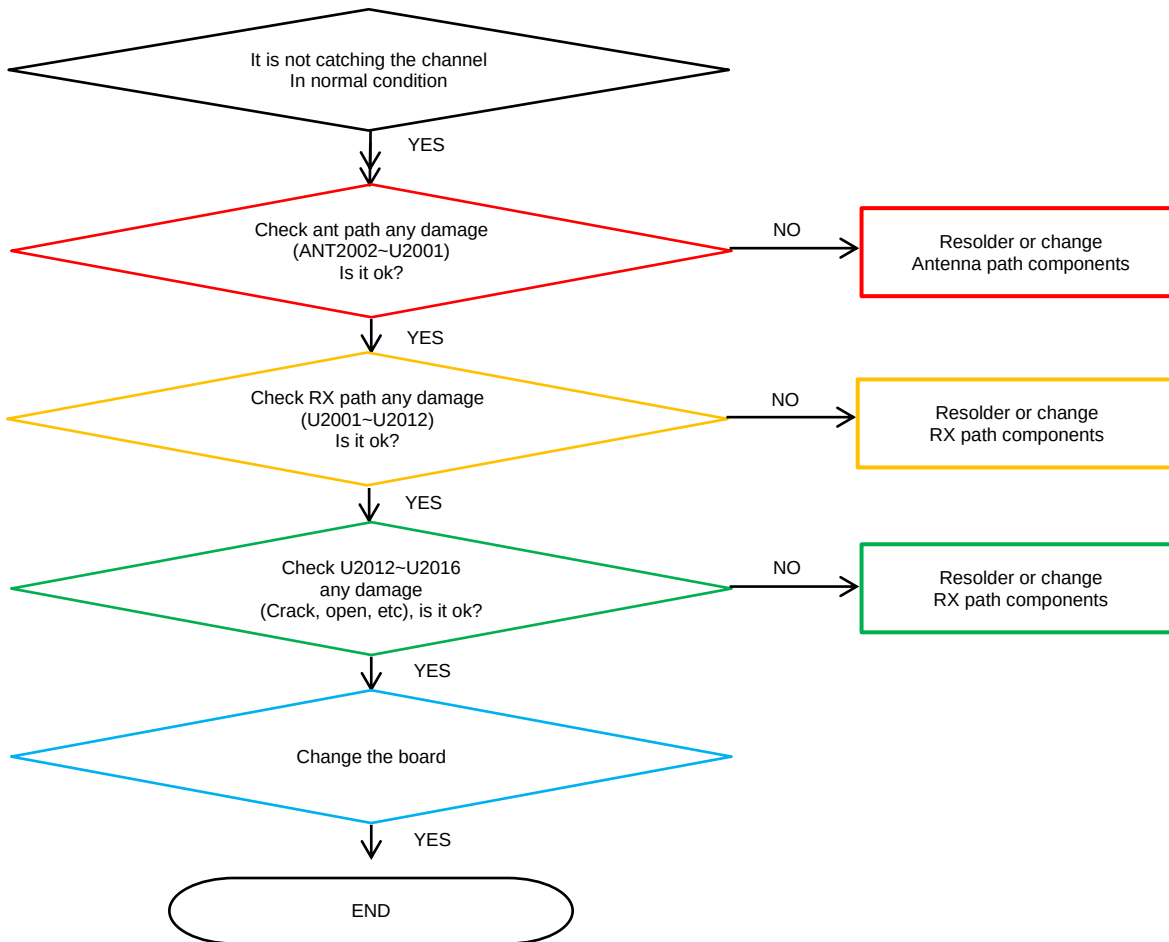


8. Level 3 Repair

8-4-25. LTE B7/38/40/41 DRx

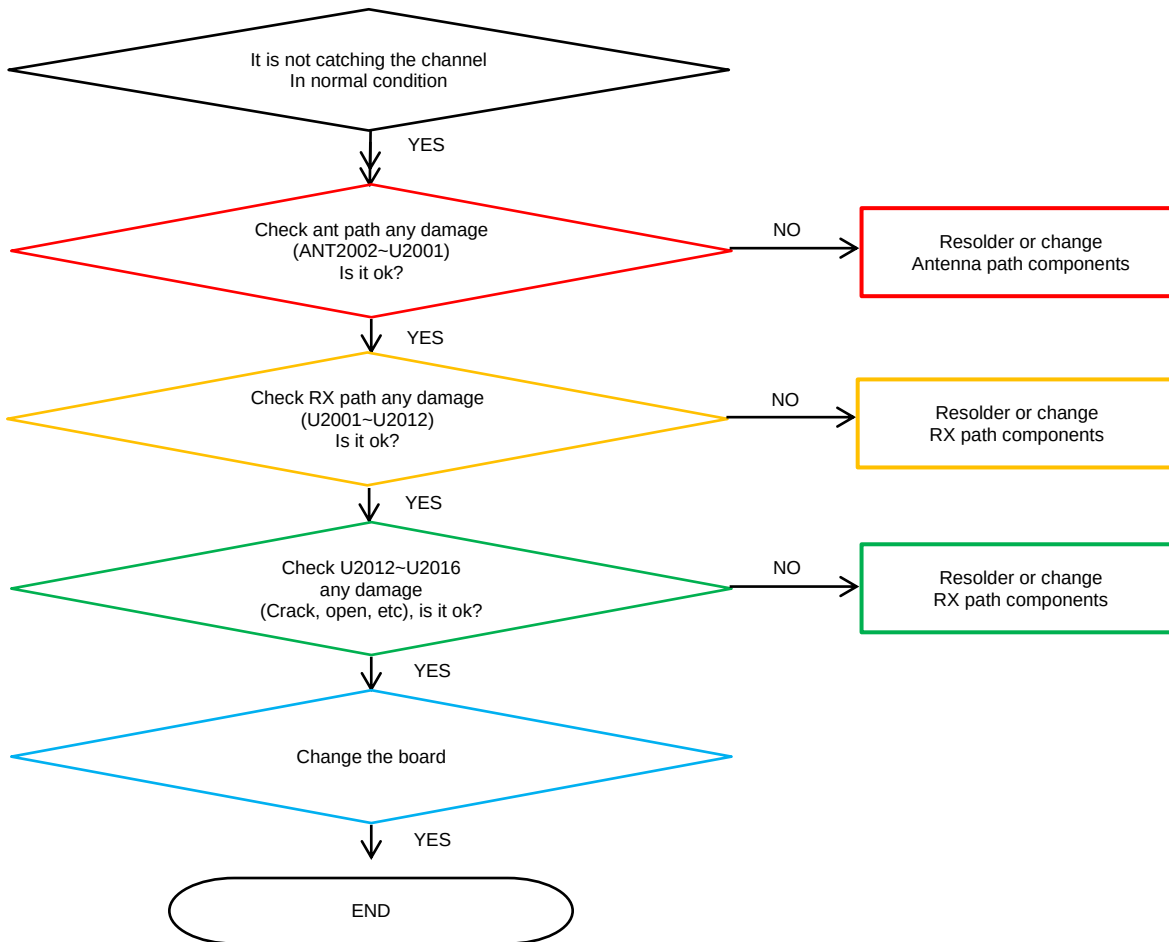


8. Level 3 Repair

8-4-26. GSM DCS/PCS, WCDMA B1/2, LTE B1/3 DRx

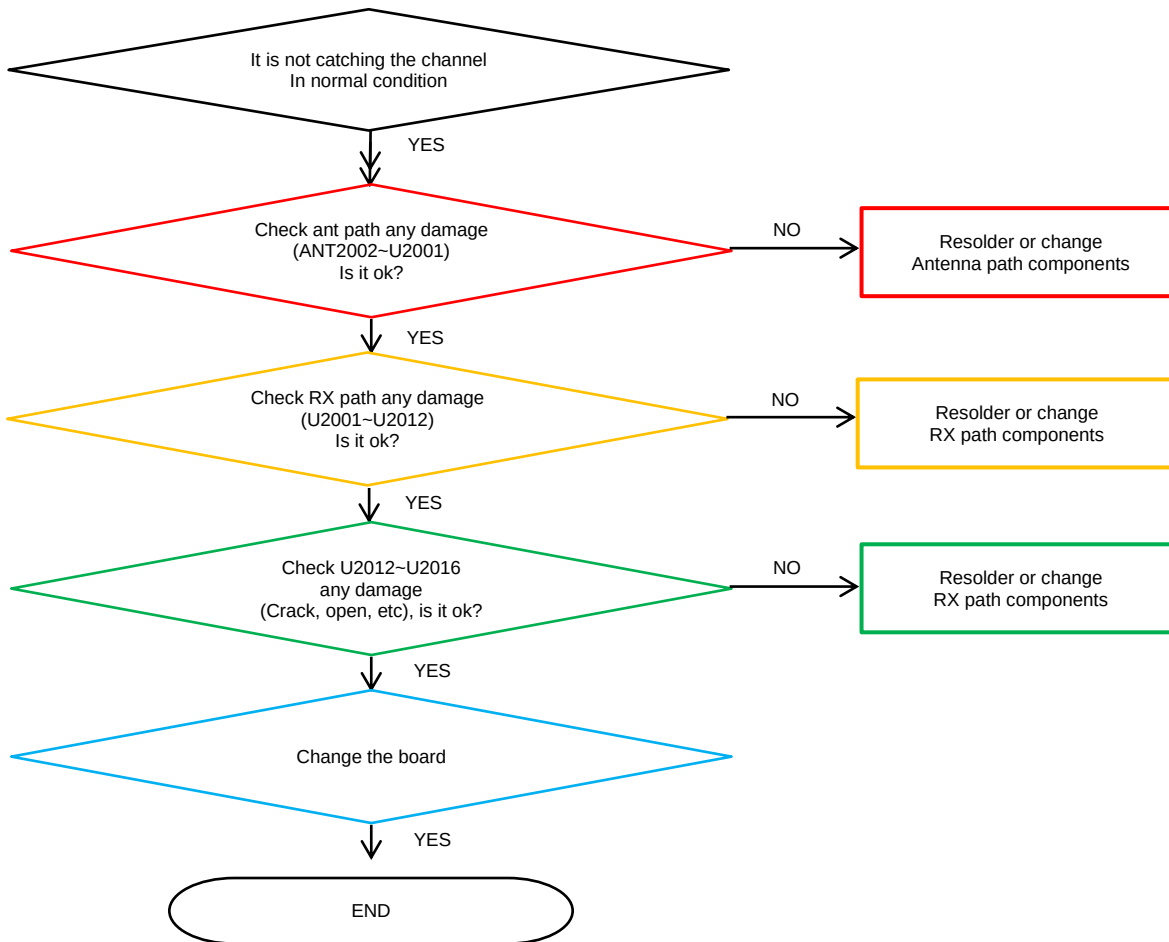


8. Level 3 Repair

8-4-27. GSM 850/900, WCDMA B5/8, LTE B5/8/20 Tx

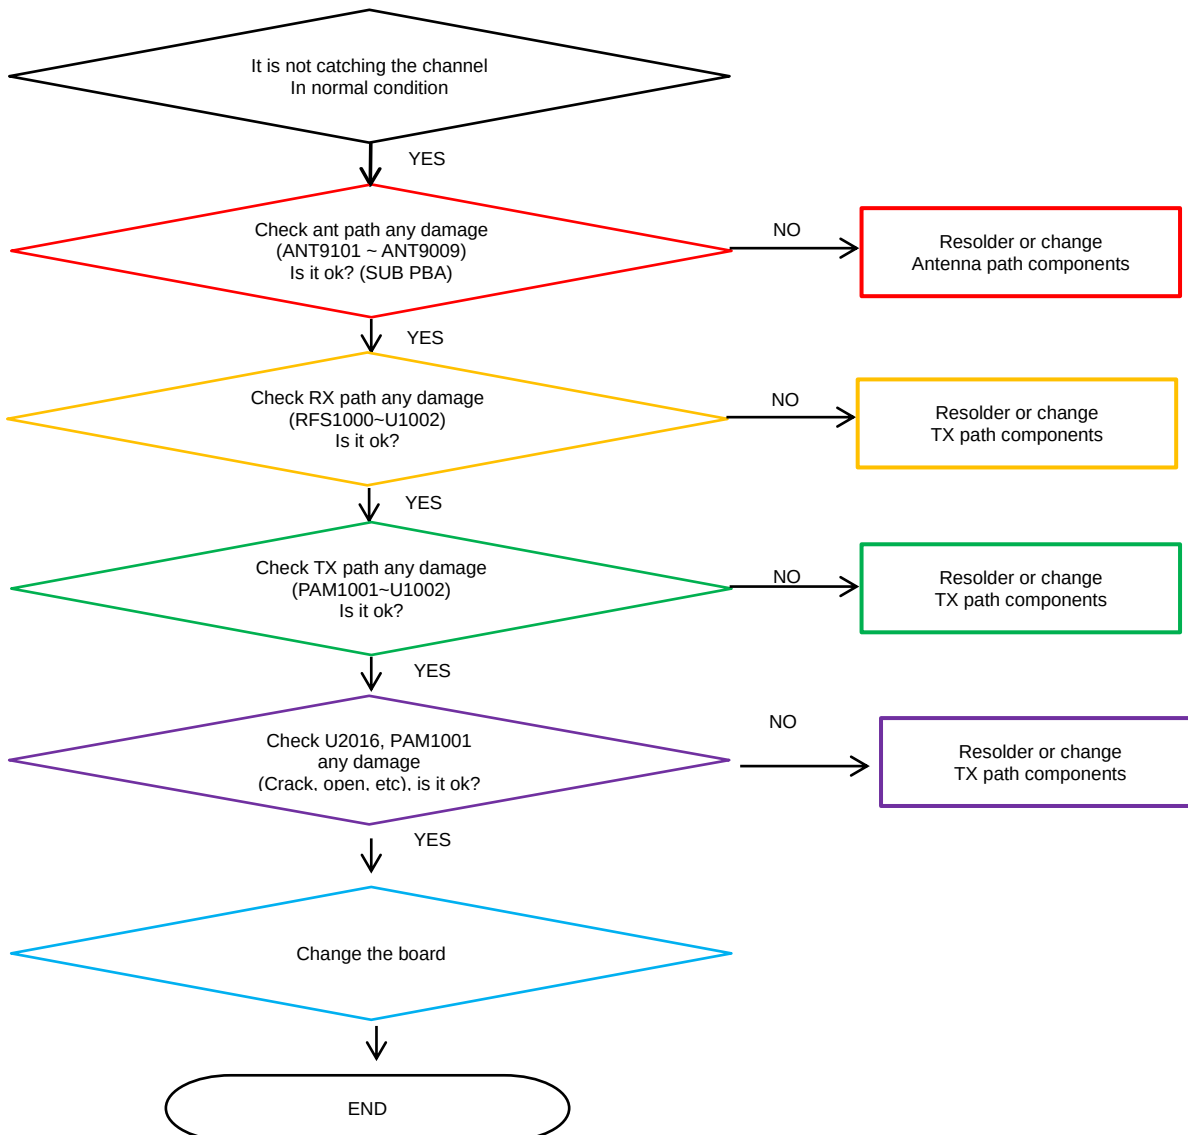

8. Level 3 Repair

8-4-28. LTE B7/38/40/41 Tx

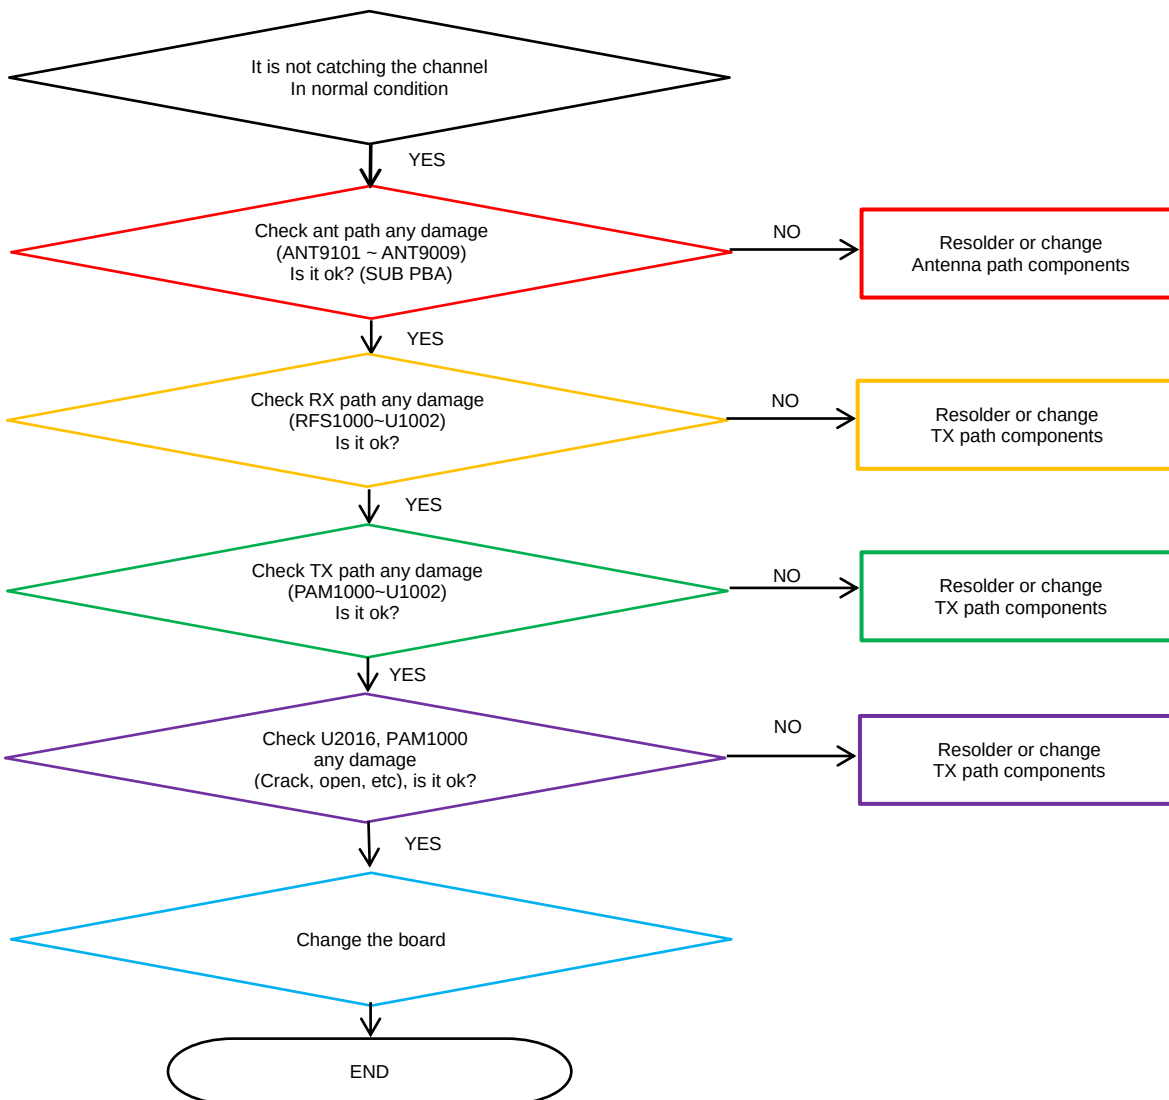

8. Level 3 Repair

8-4-29. GSM DCS/PCS, WCDMA B1/2, LTE B1/3 Tx

