


8. Level 3 Repair

8-1. Components Layout

[SM-R810]

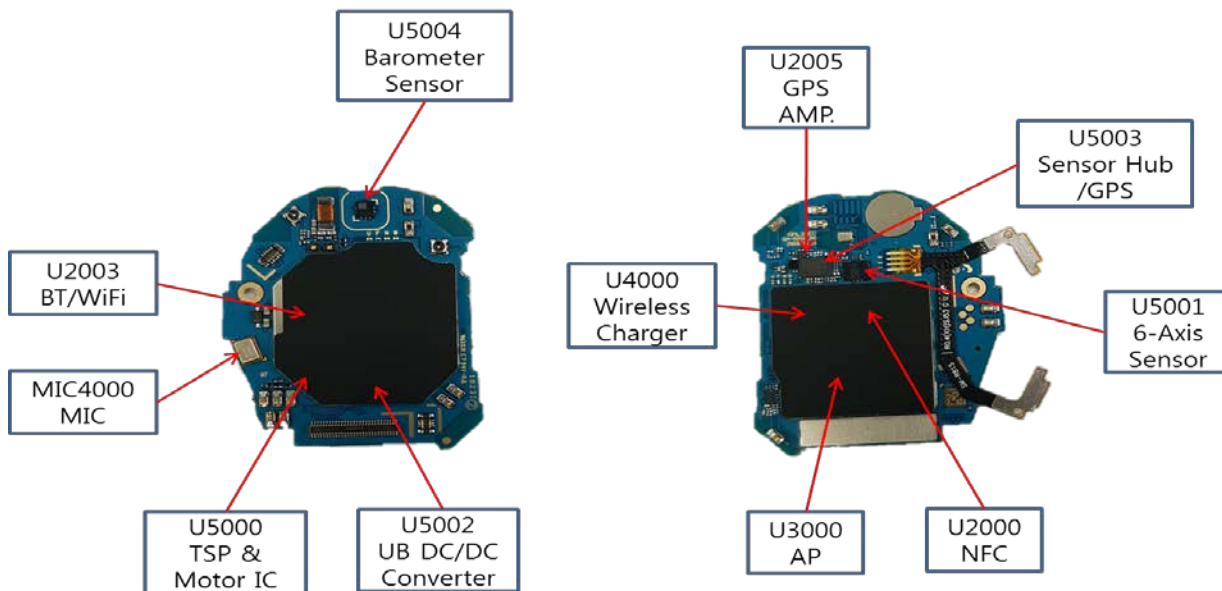


[SM-R800]

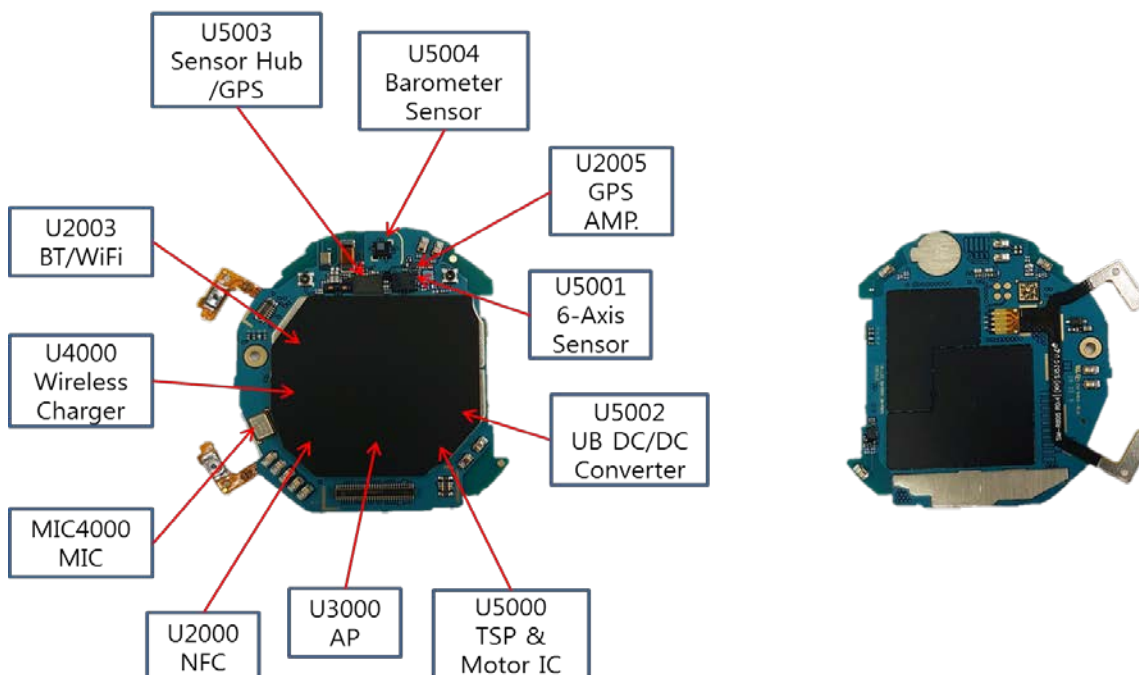

Galileo SIGNAL BLOCK DIAGRAM


SM - R810

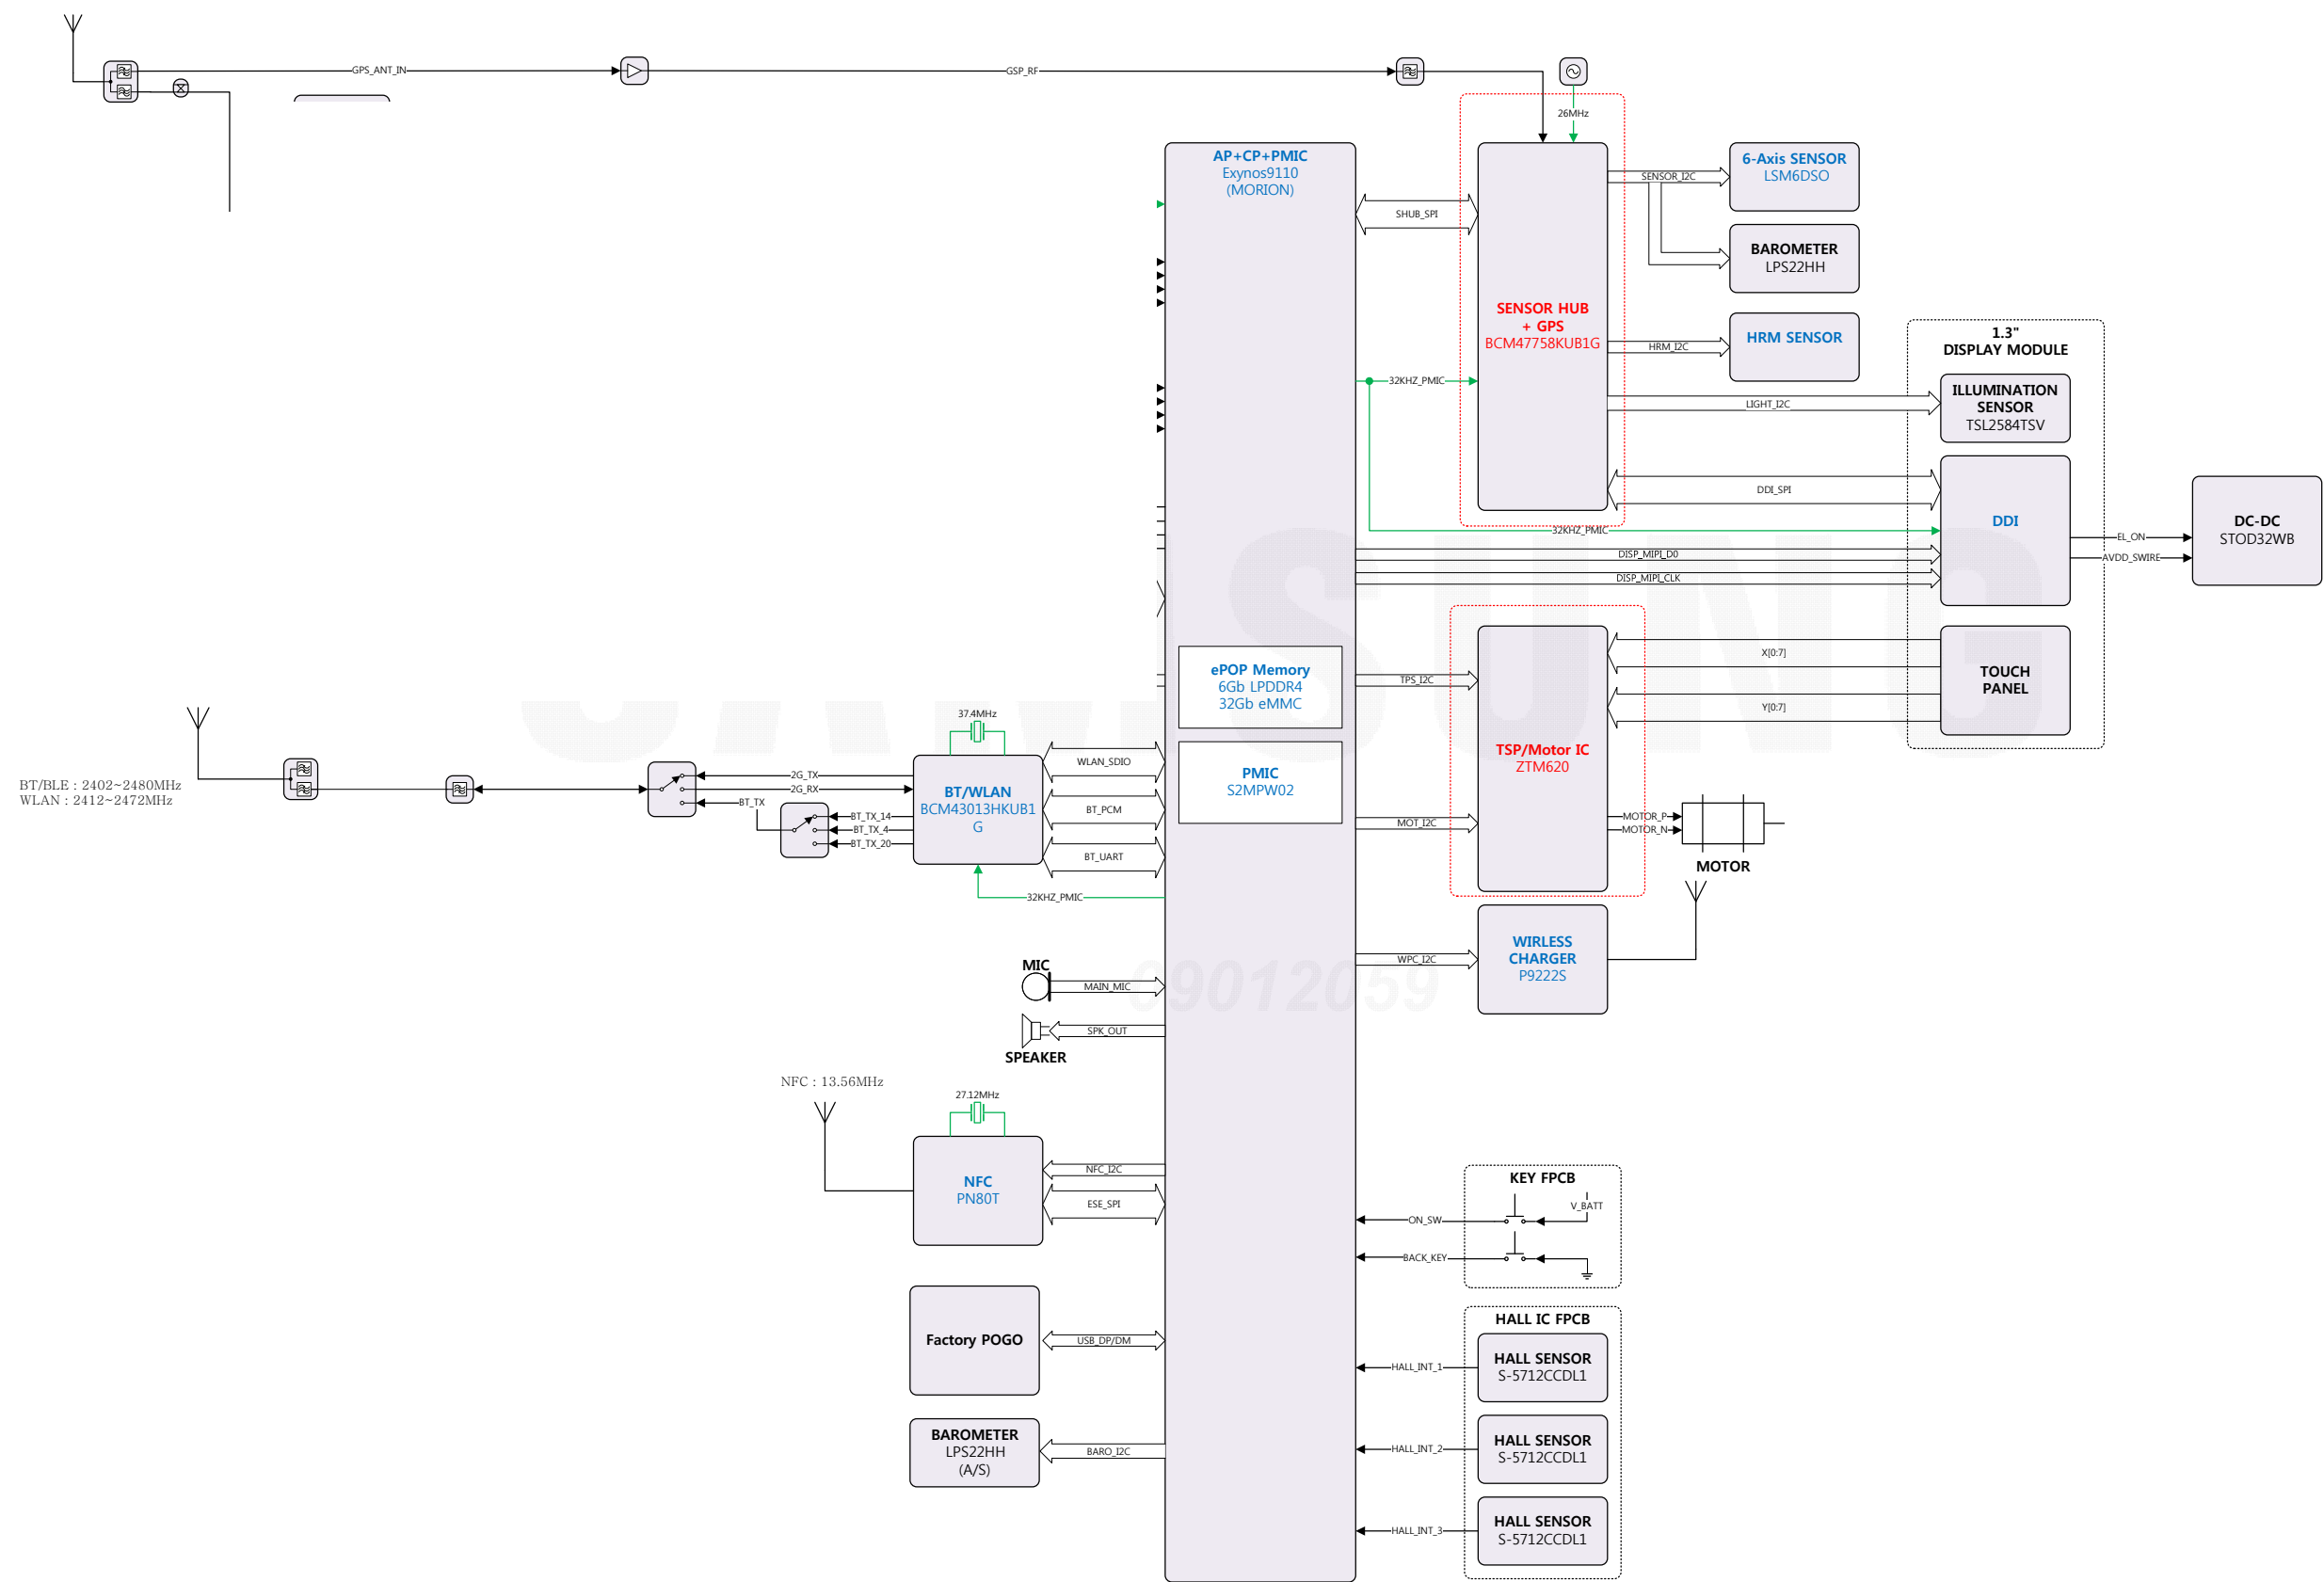

SM - R810



SM - R810

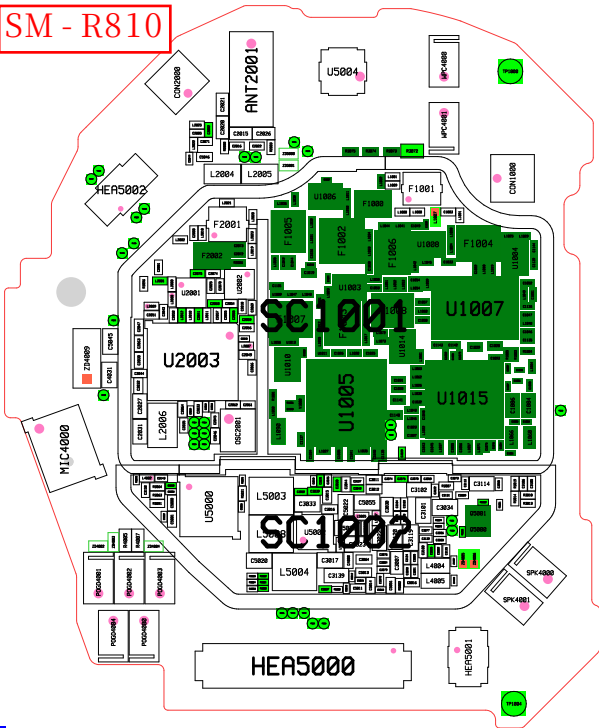

SM - R810

SUS1001

MDT5001

MDT5000

OSC5000

U5003

U5001

JTAG3000

U4000

U2000

U5006

SC1000

U3000

SUS1002


BRT4000

BRT4001

CON300

Galileo SIGNAL BLOCK DIAGRAM


SM - R800

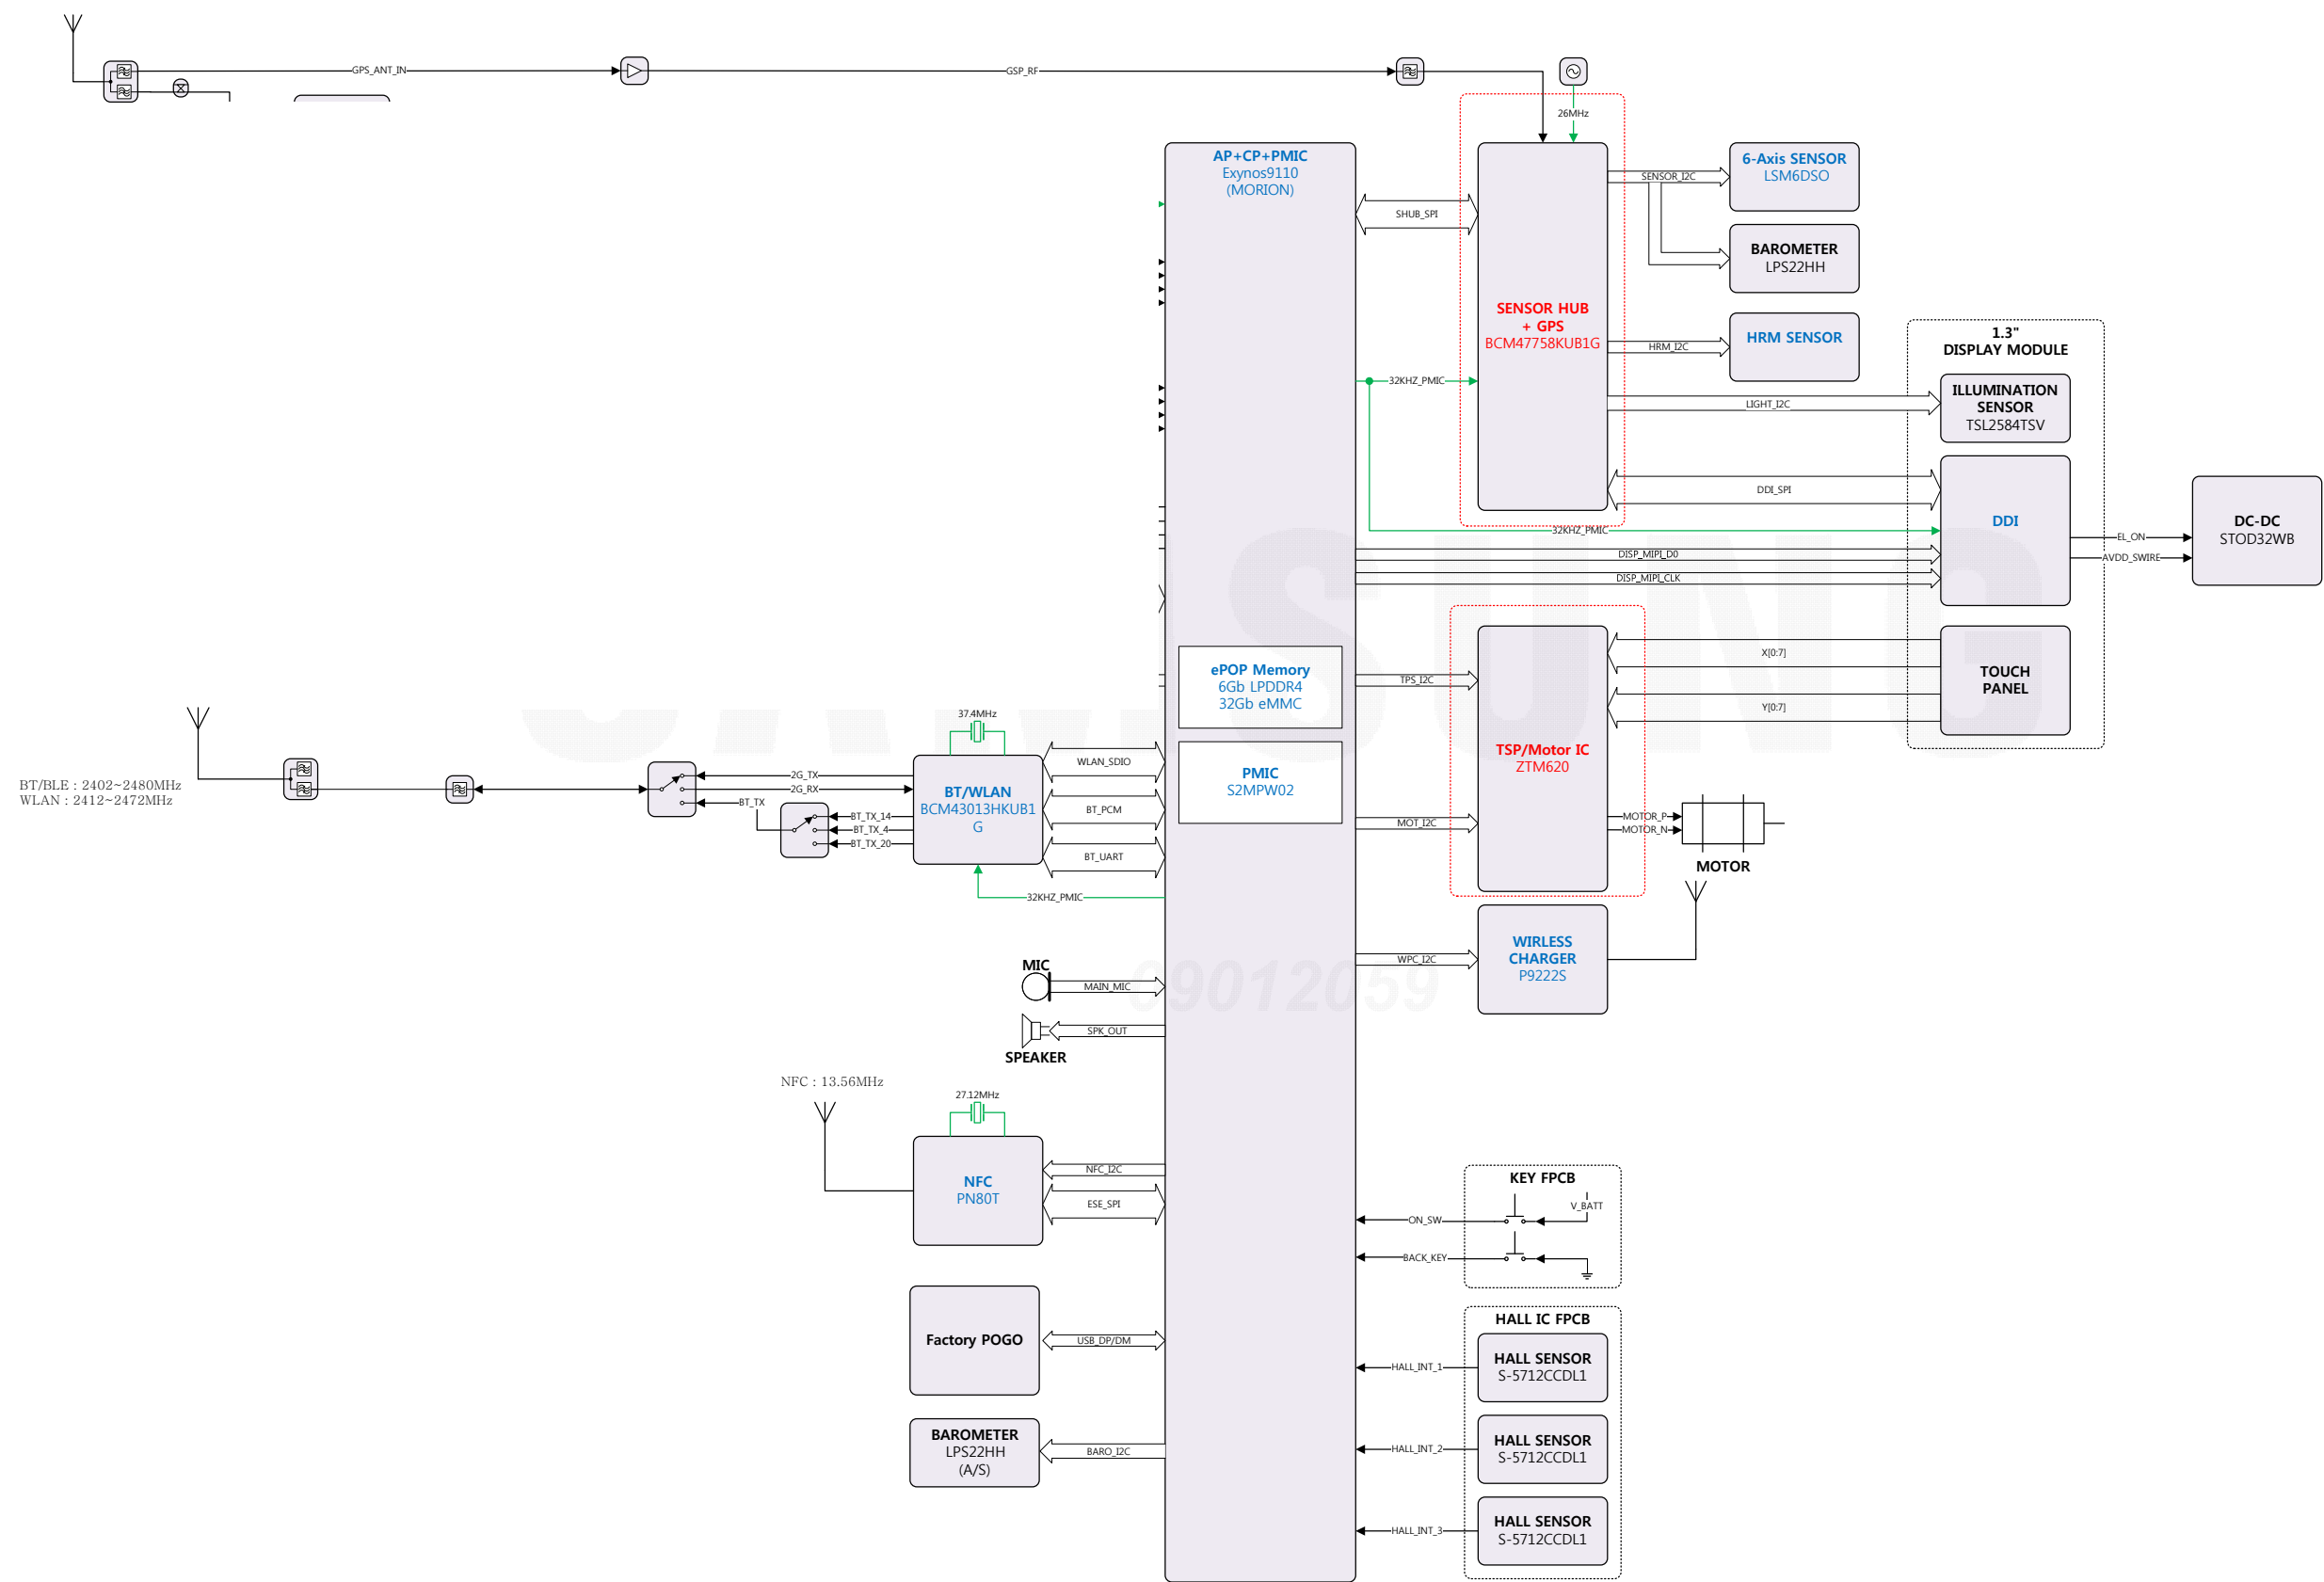

SM - R800




SM - R800

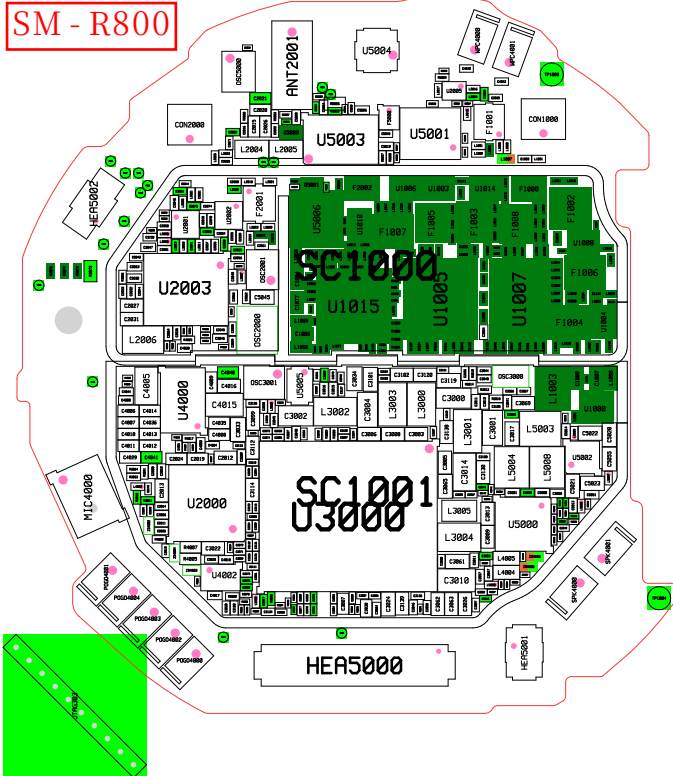

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

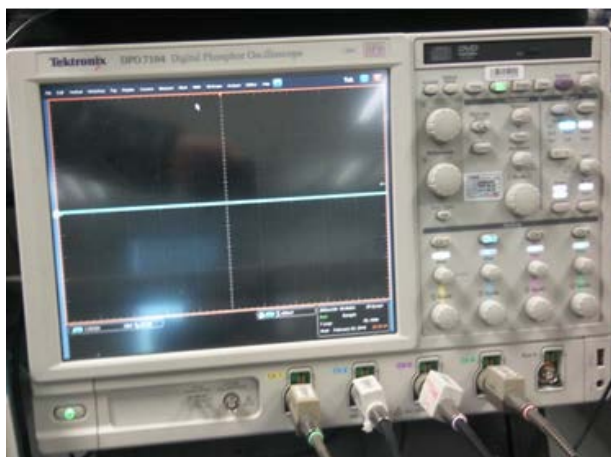


Oscilloscope



Digital Multimeter



Power Supply

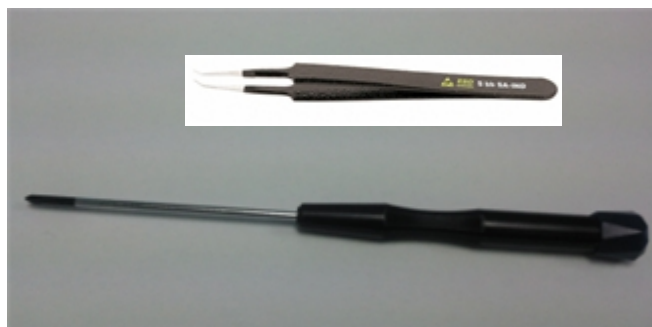


+ driver, ESD Safe Tweezer



Soldering iron


8. Level 3 Repair

8-4-1. Power On

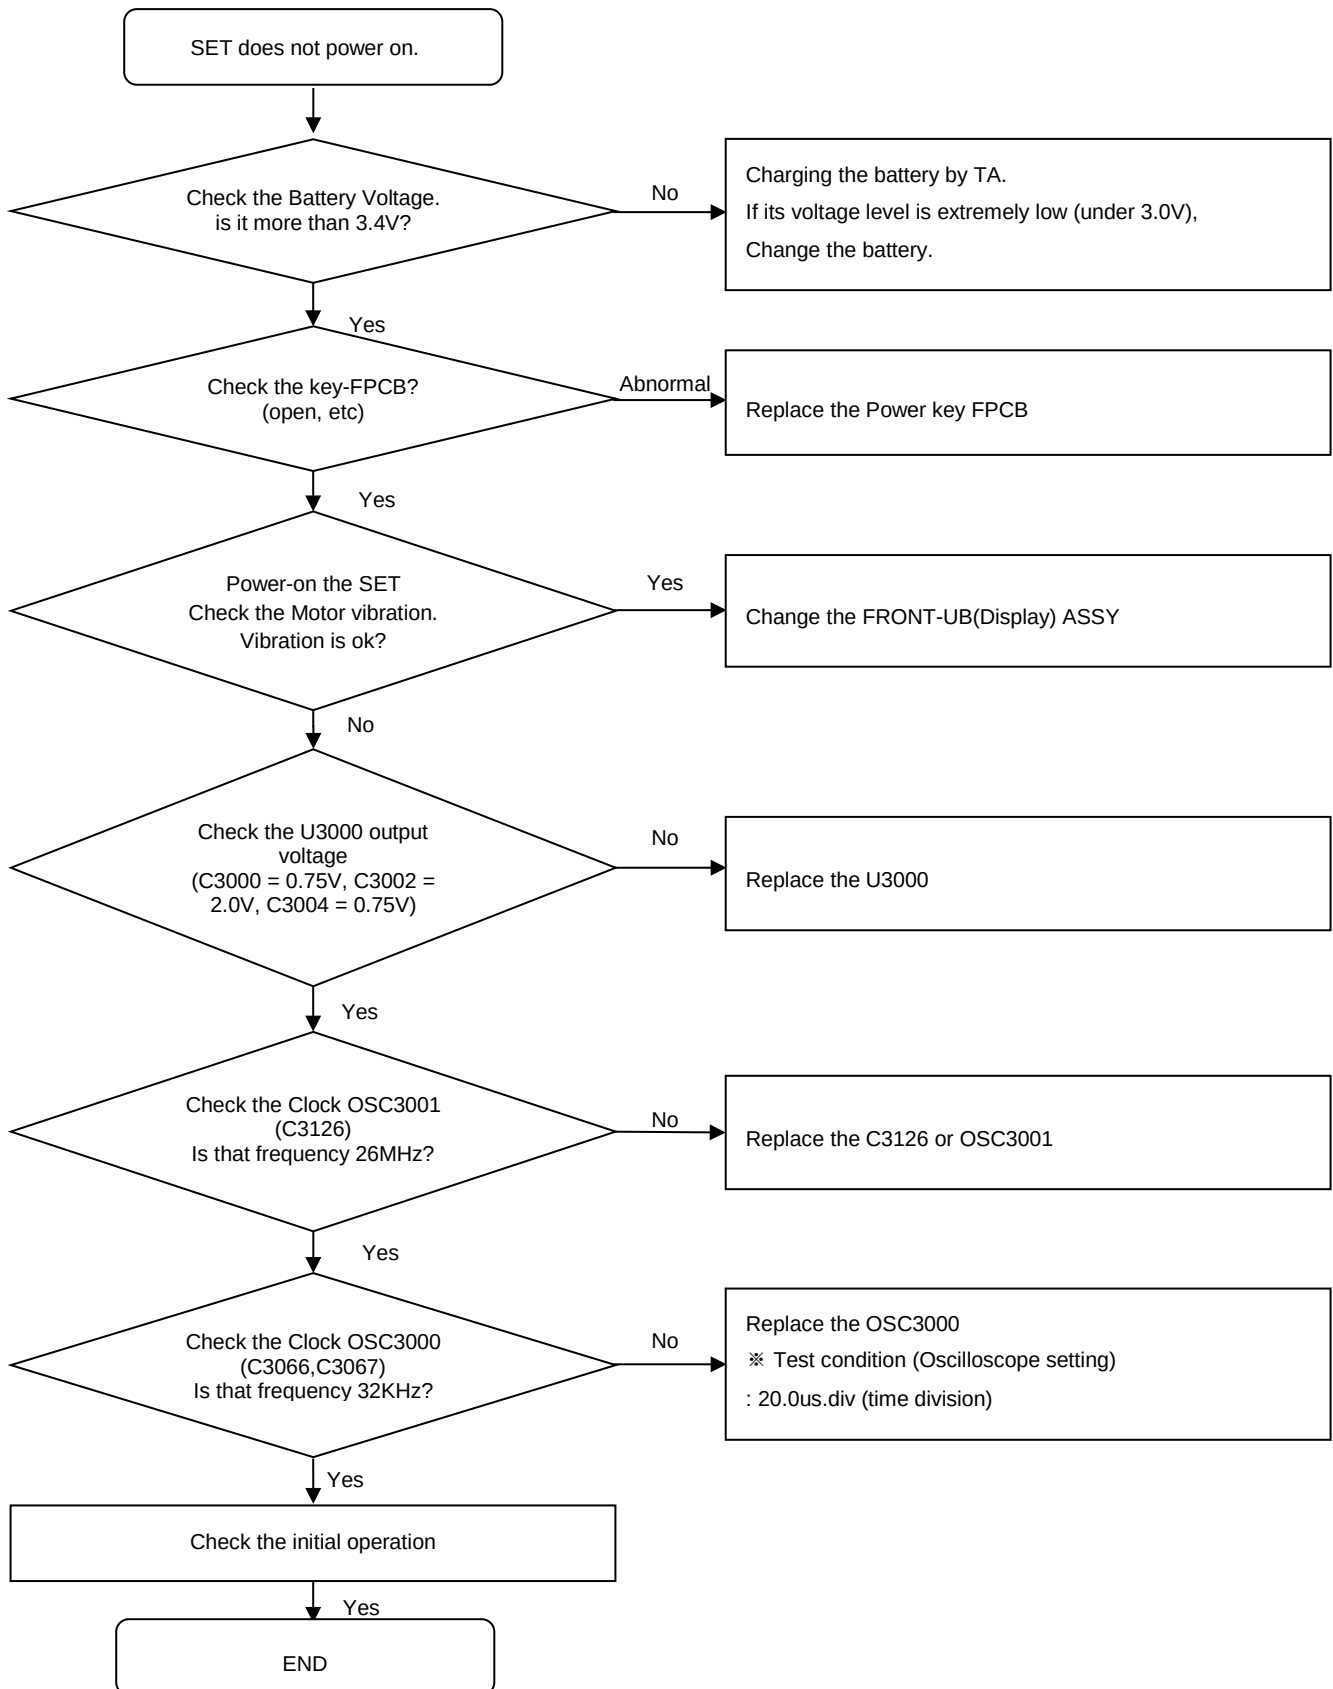


8. Level 3 Repair

8-4-2. Initial (Lock up)

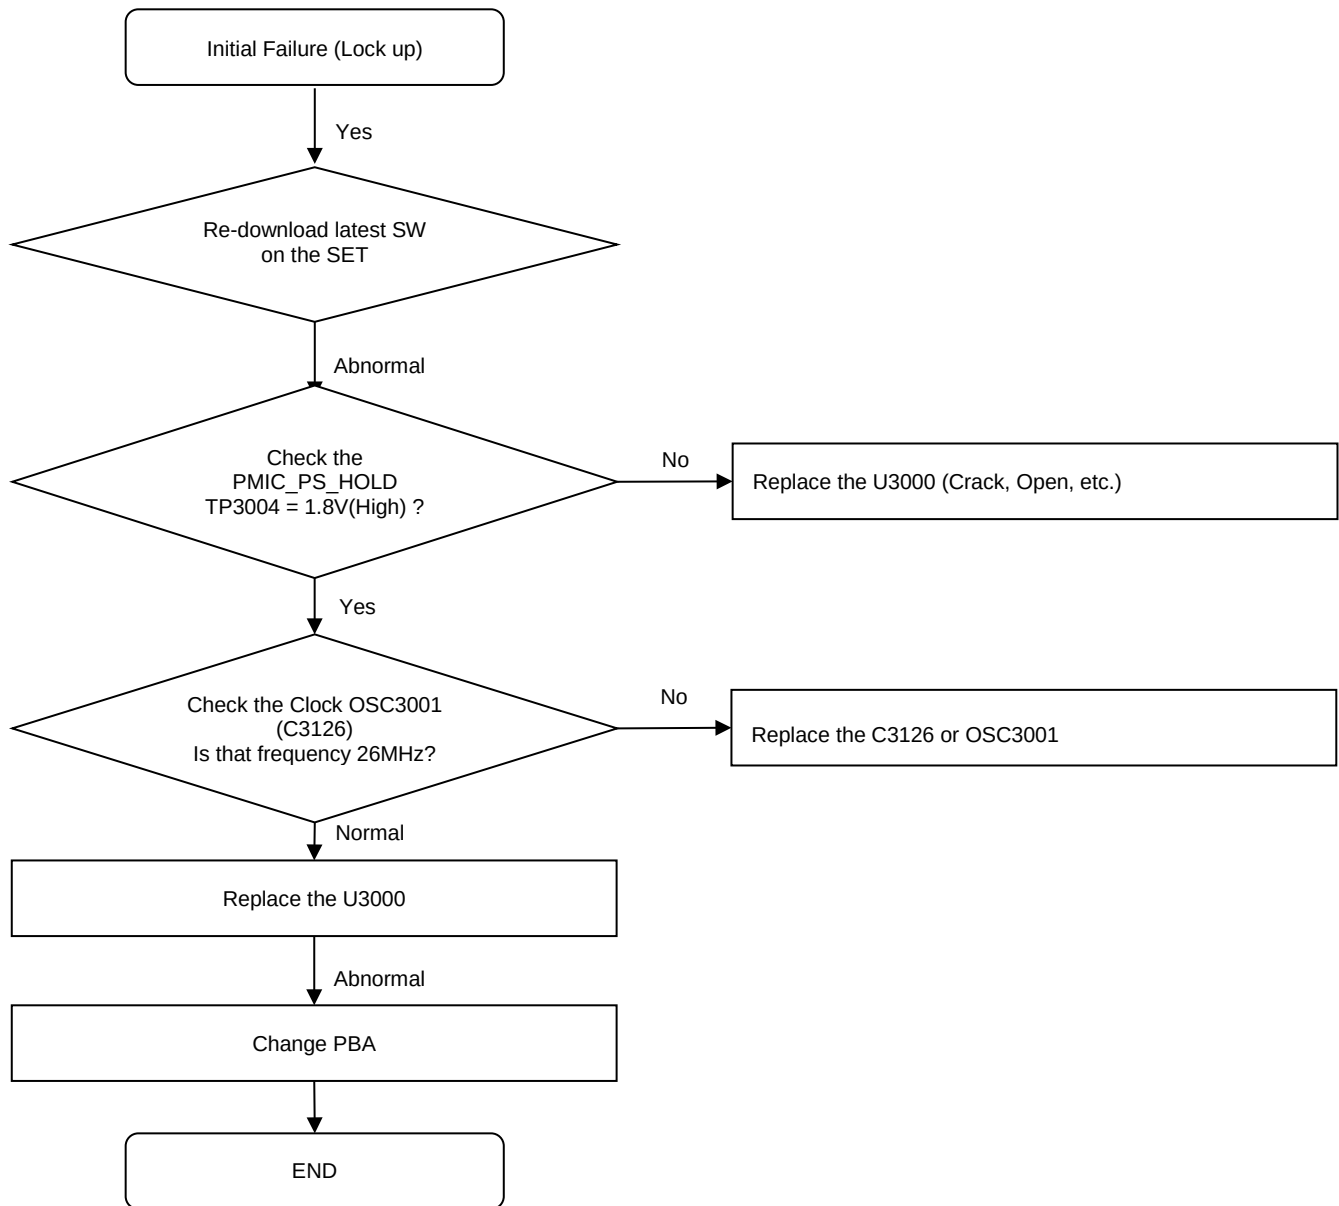

8. Level 3 Repair


8-4-3. Charging Part

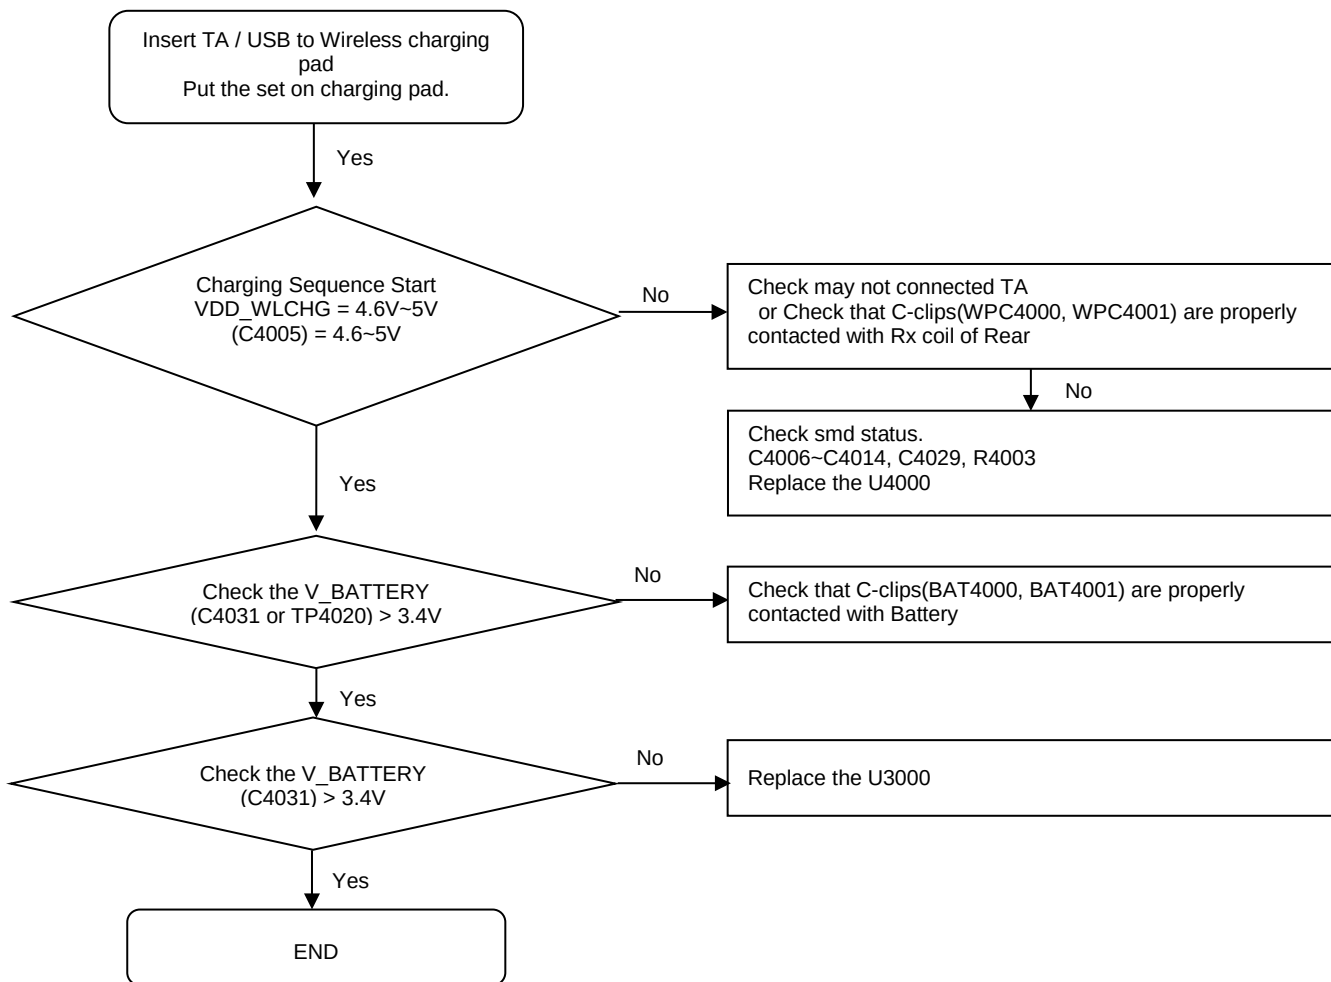

8. Level 3 Repair


8-4-4. Sensor

8-4-4-1. 6 Axis Sensor

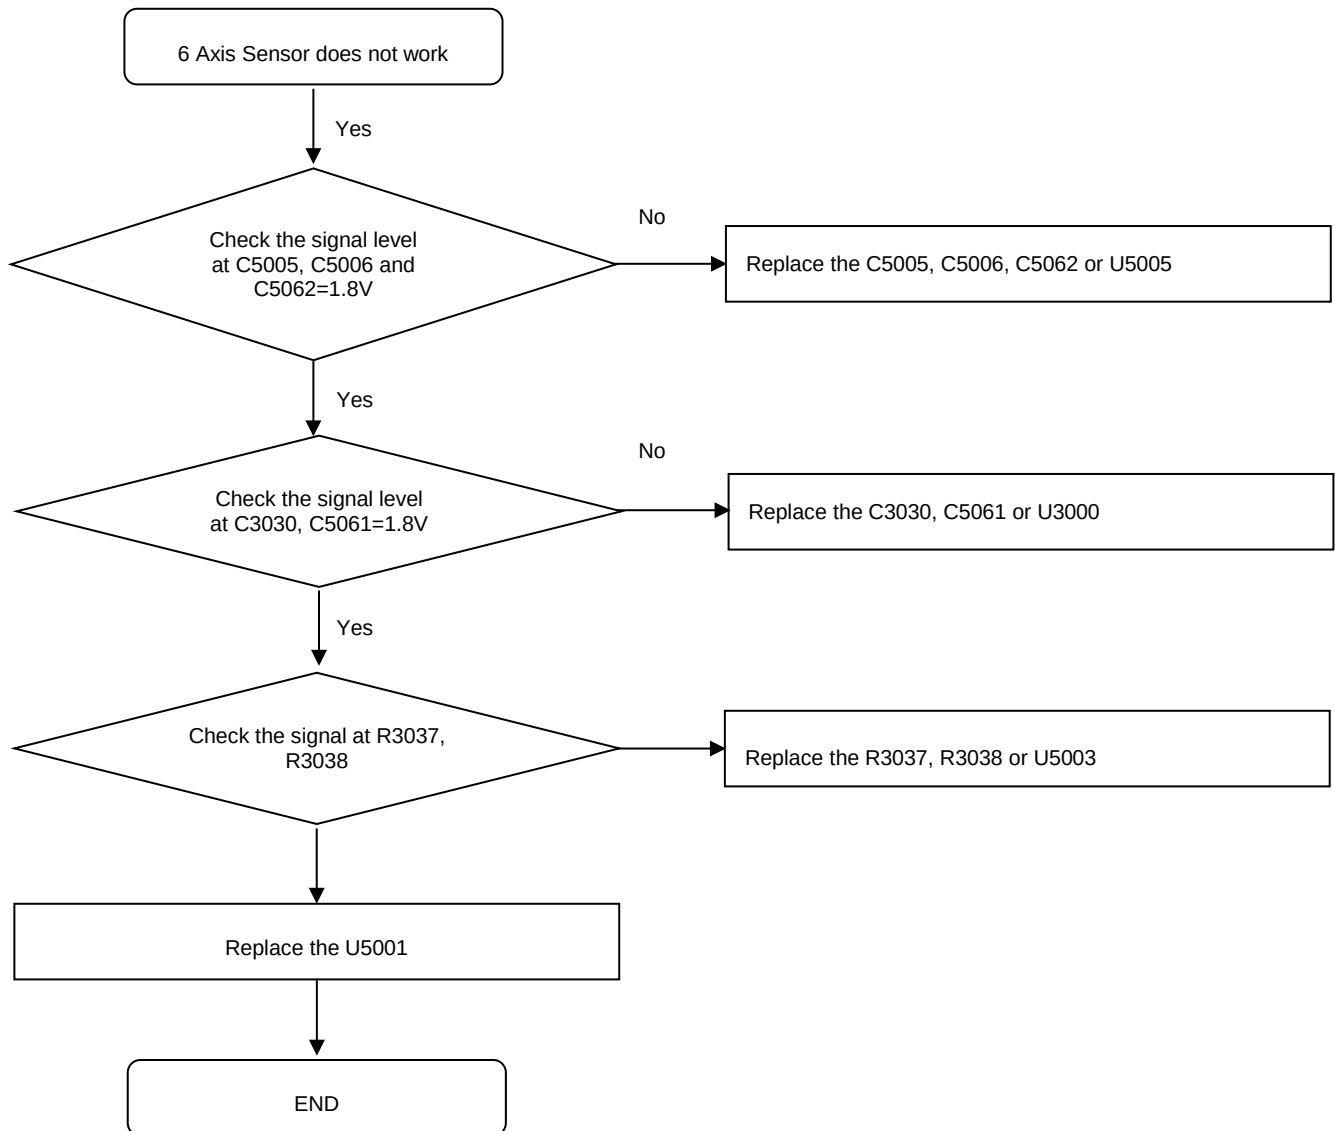


8. Level 3 Repair

8-4-4-2. Barometer sensor

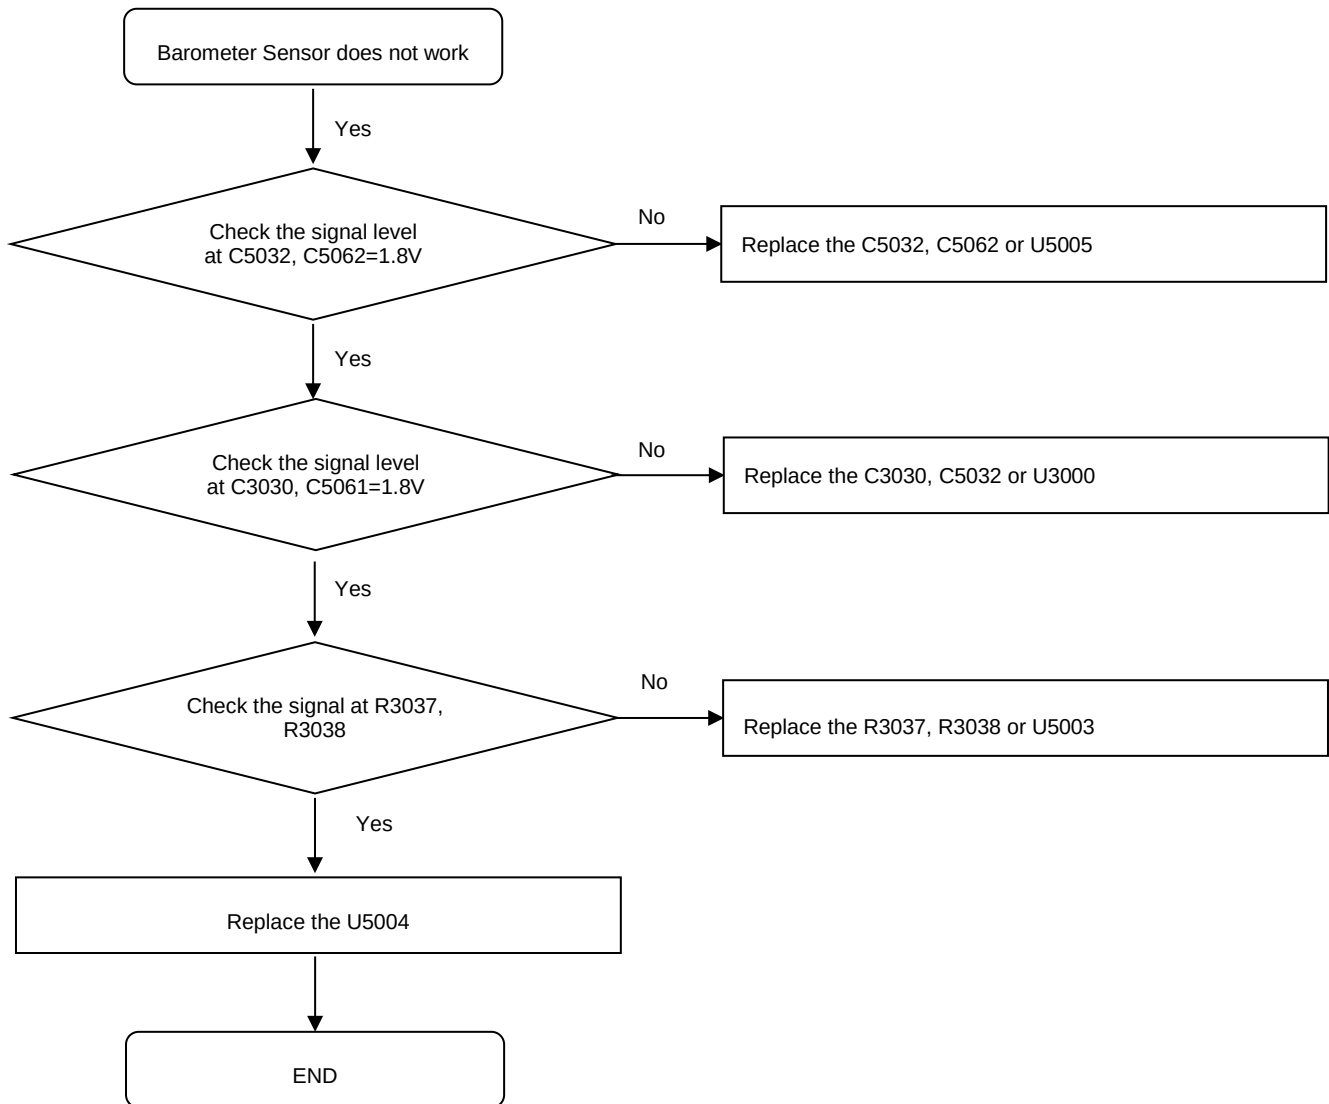


8. Level 3 Repair

8-4-4-3. HRM Sensor

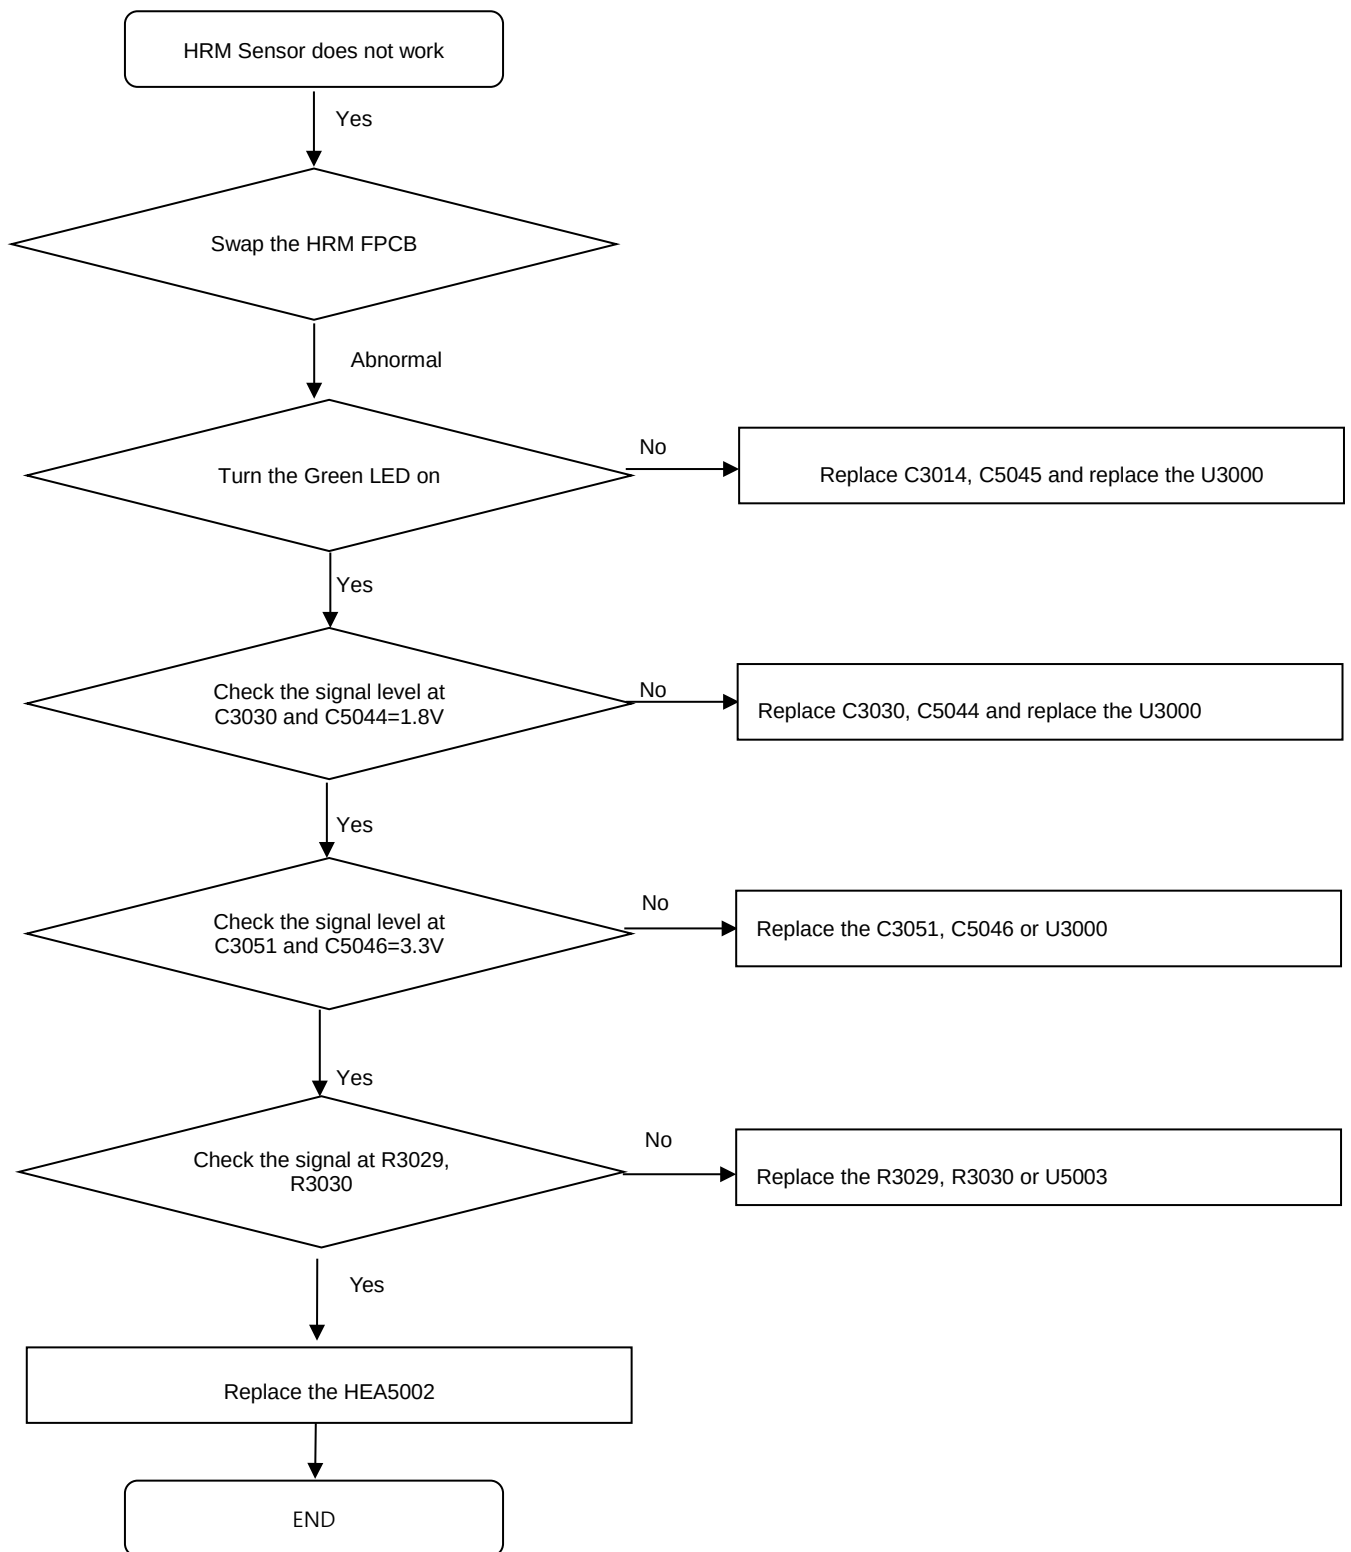


8. Level 3 Repair

8-4-4-4. Light sensor

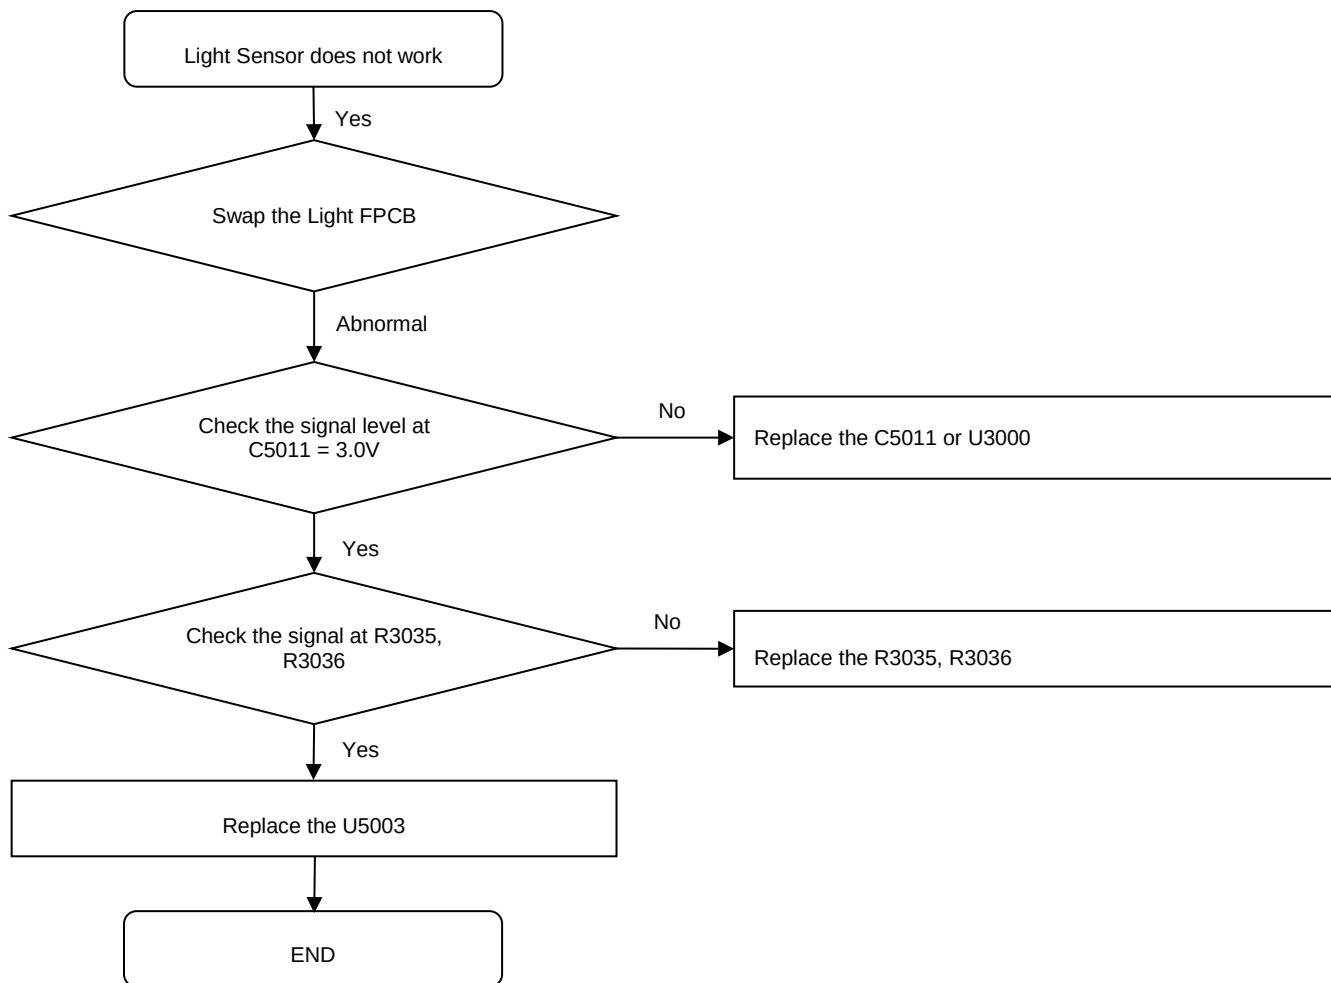


8. Level 3 Repair

8-4-4-5. Hall sensor

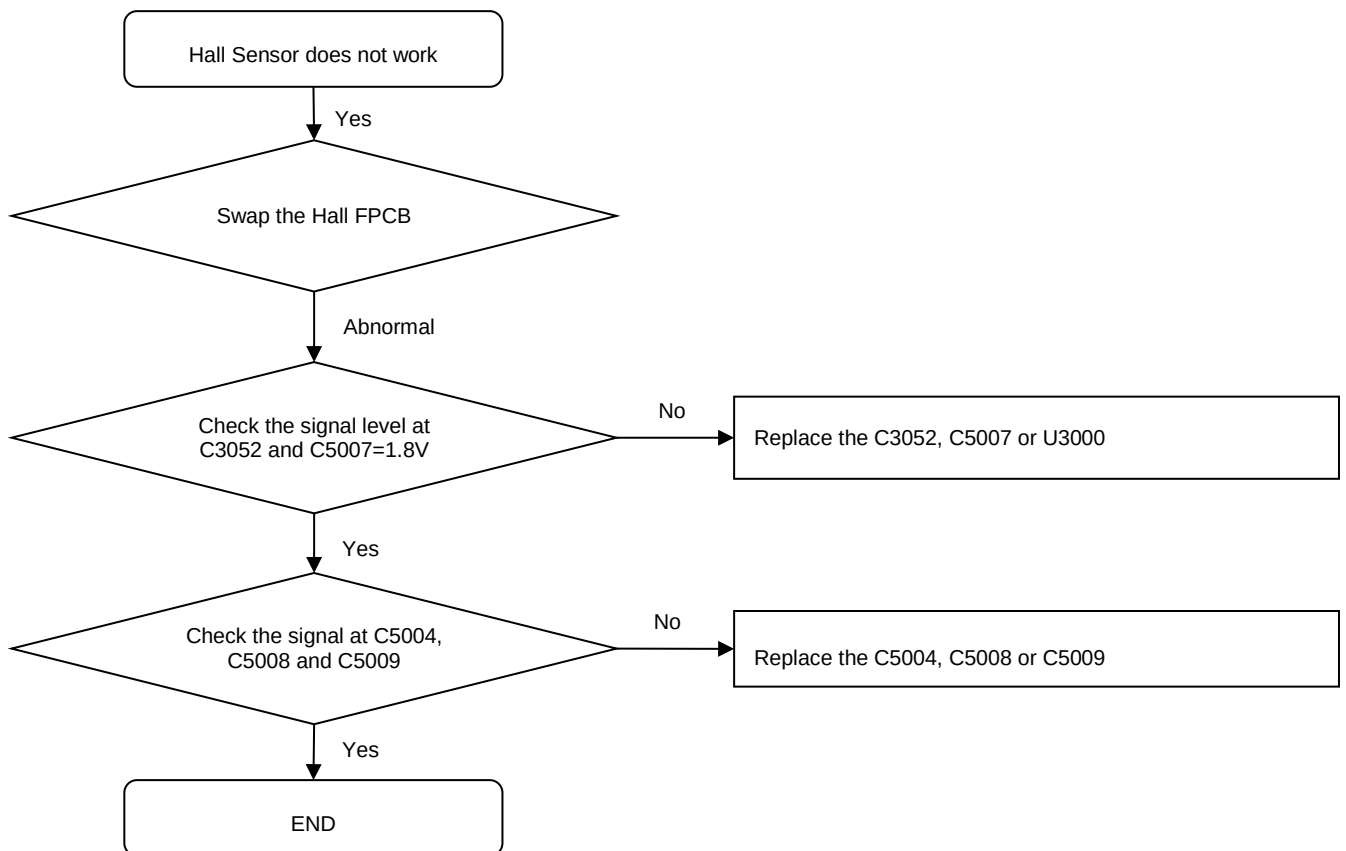


8. Level 3 Repair

8-4-5. BT/WIFI

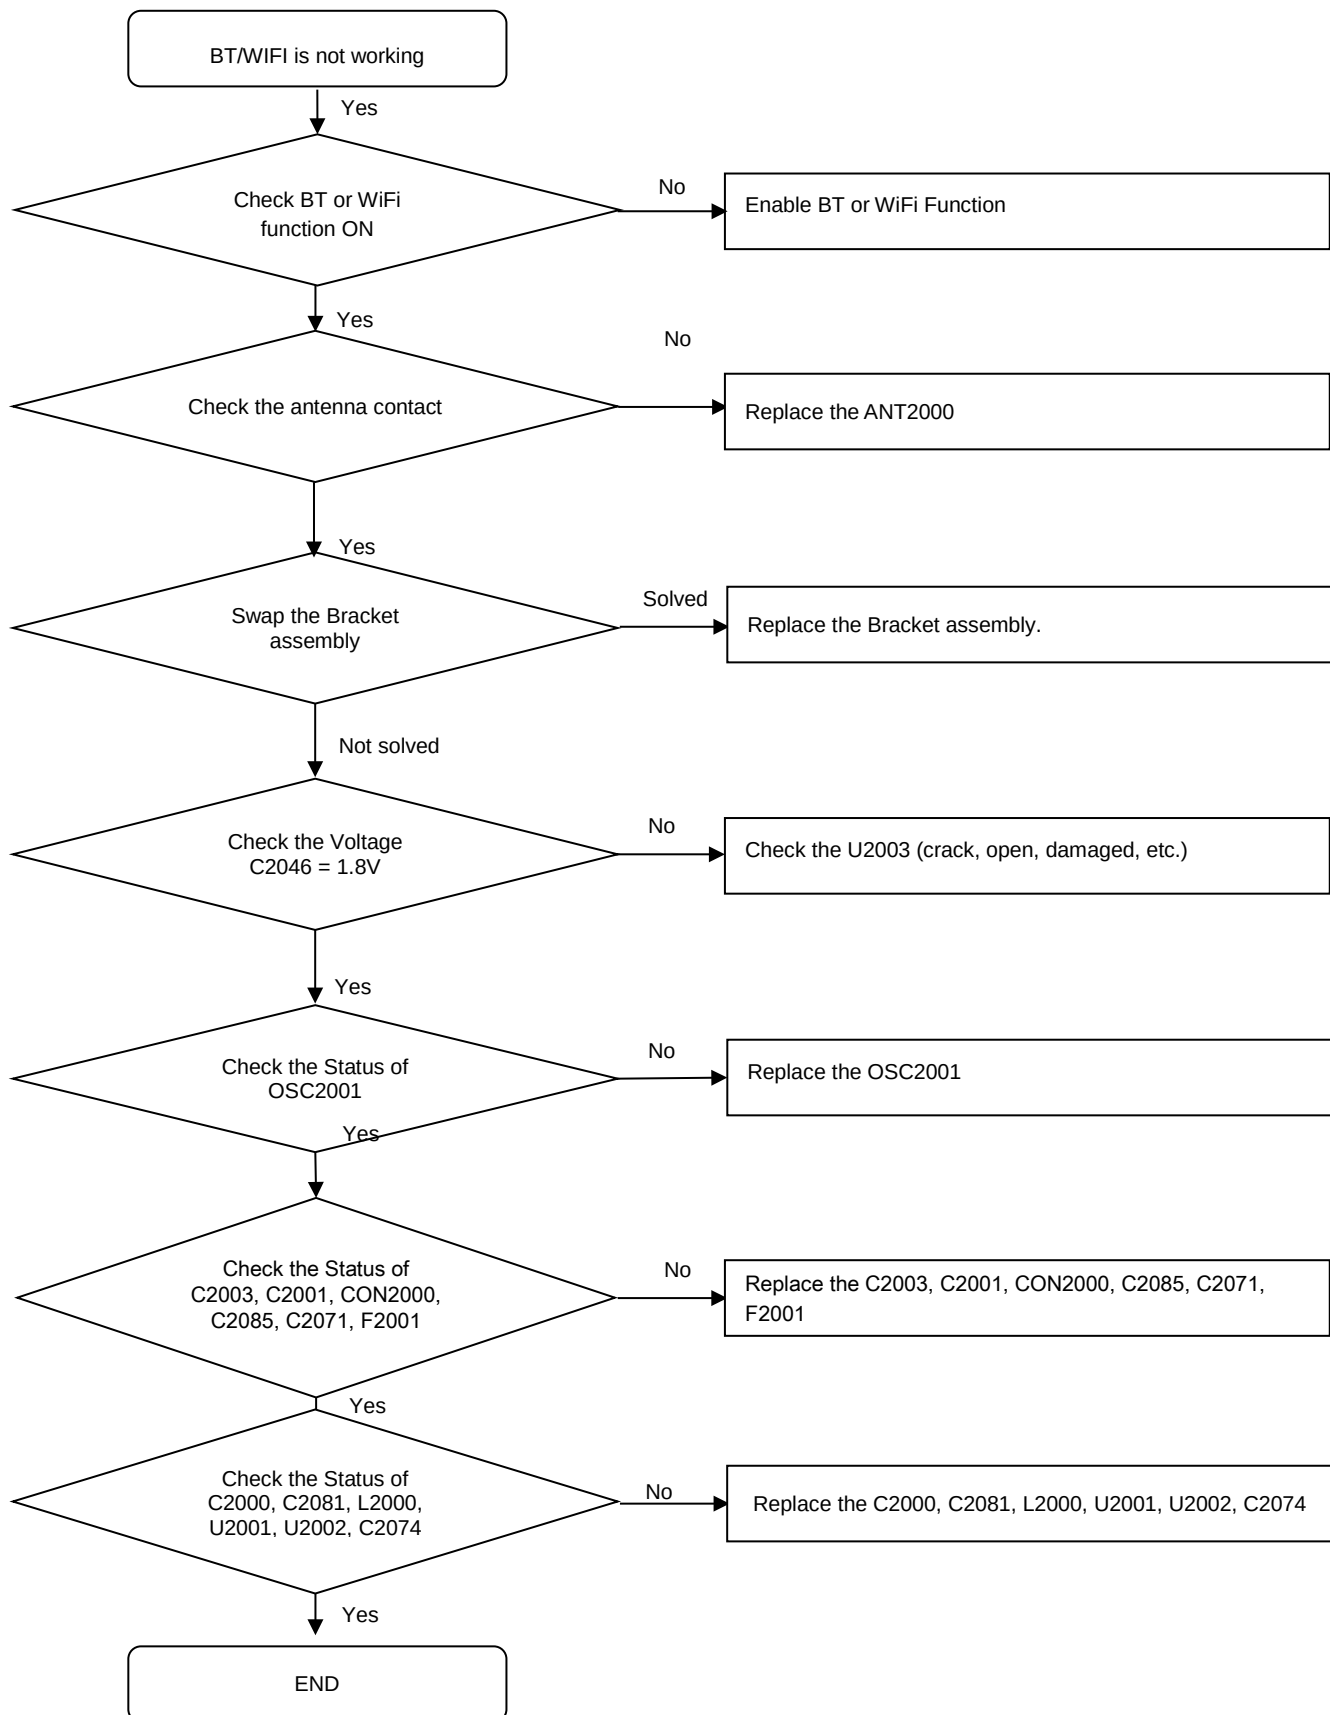


8. Level 3 Repair

8-4-6. GPS

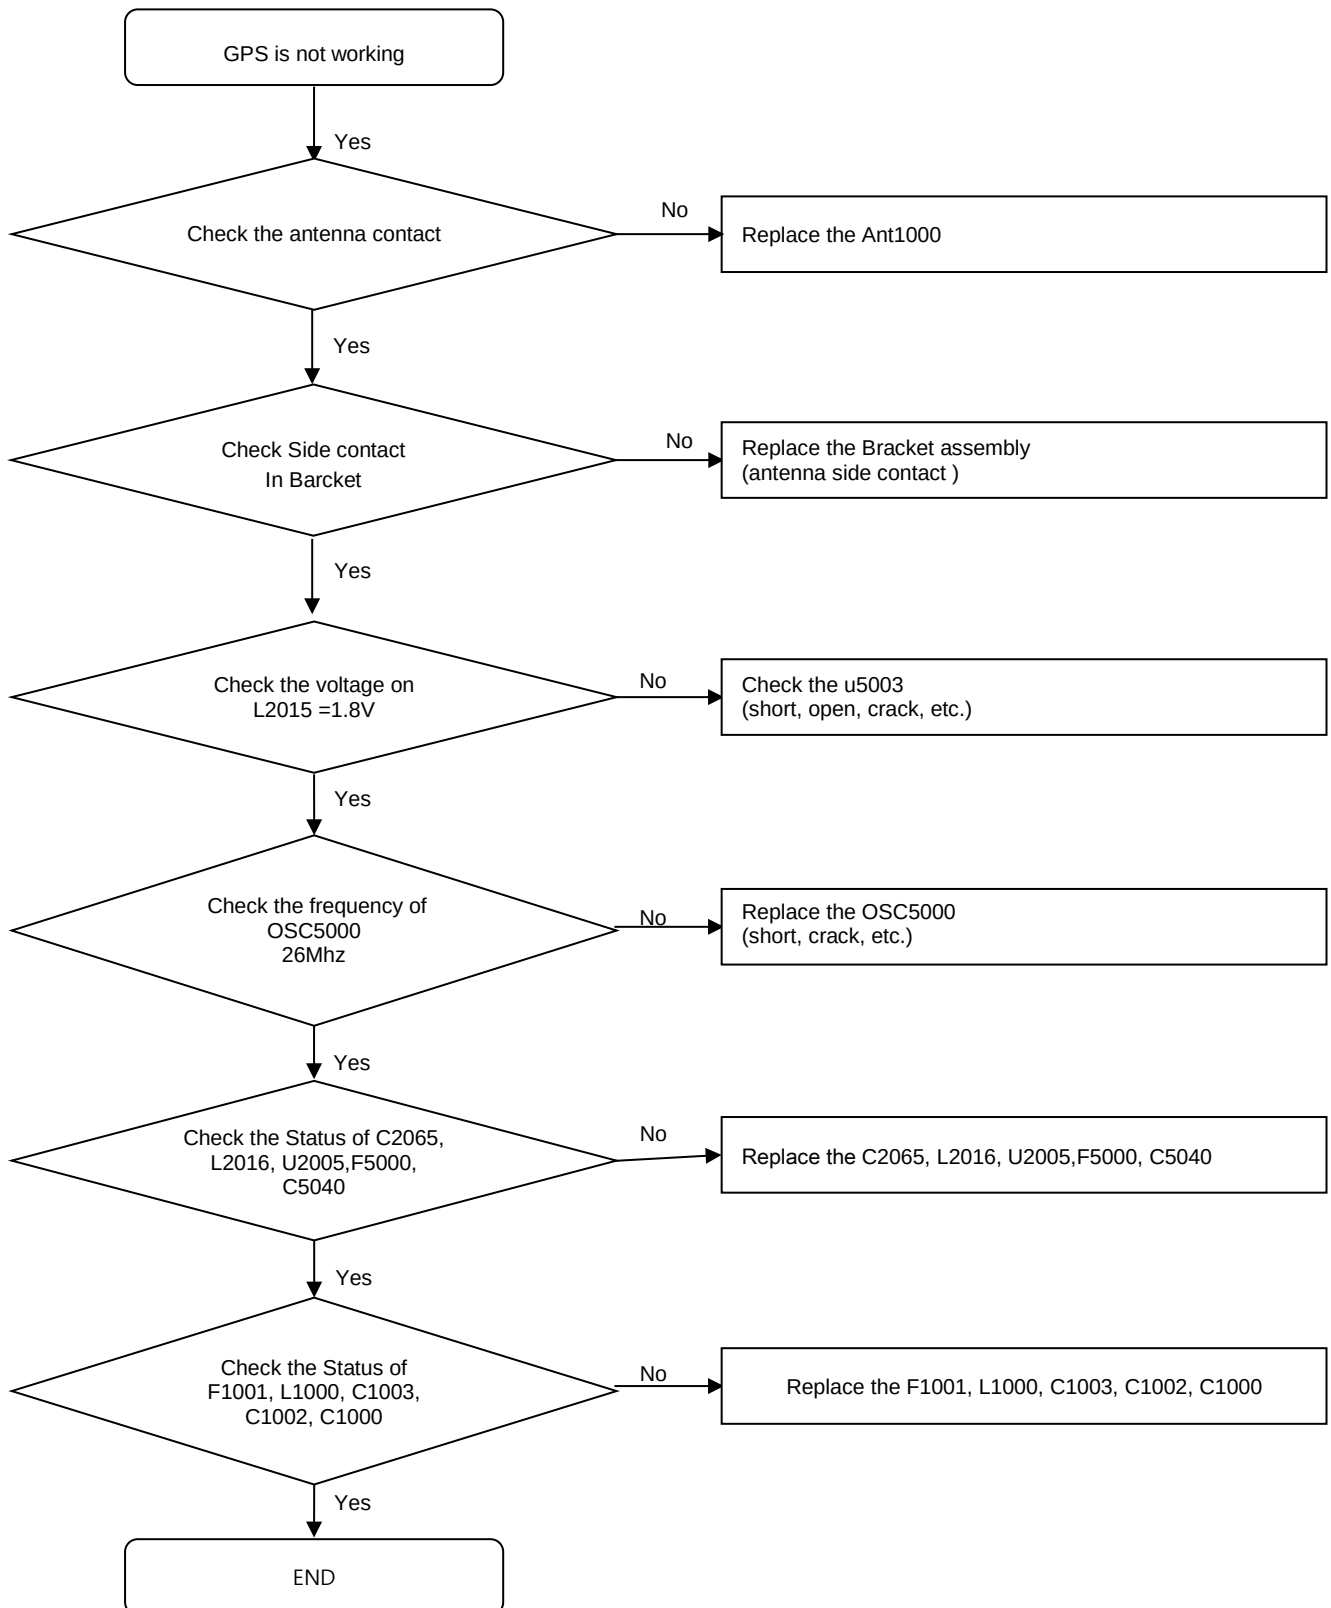


8. Level 3 Repair

8-4-7. NFC

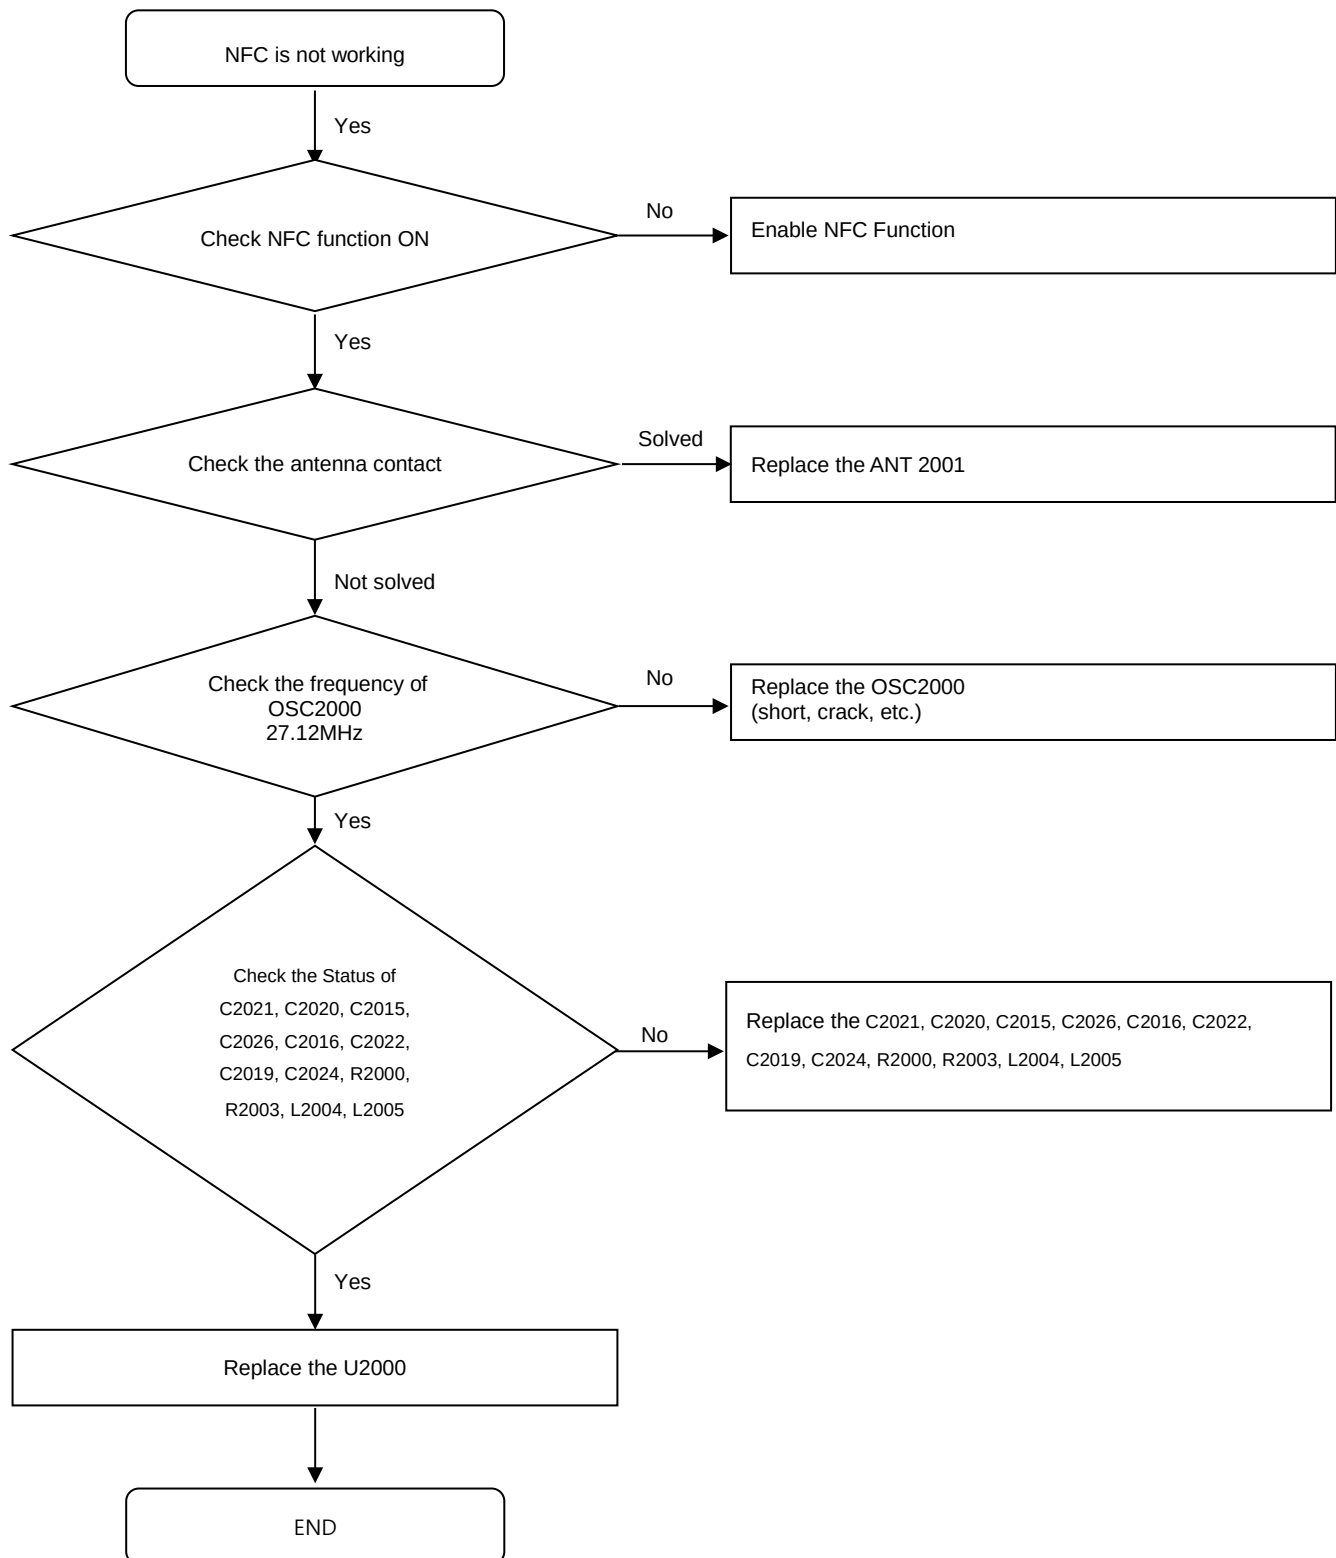


8. Level 3 Repair

8-4-8. UB(Display part)

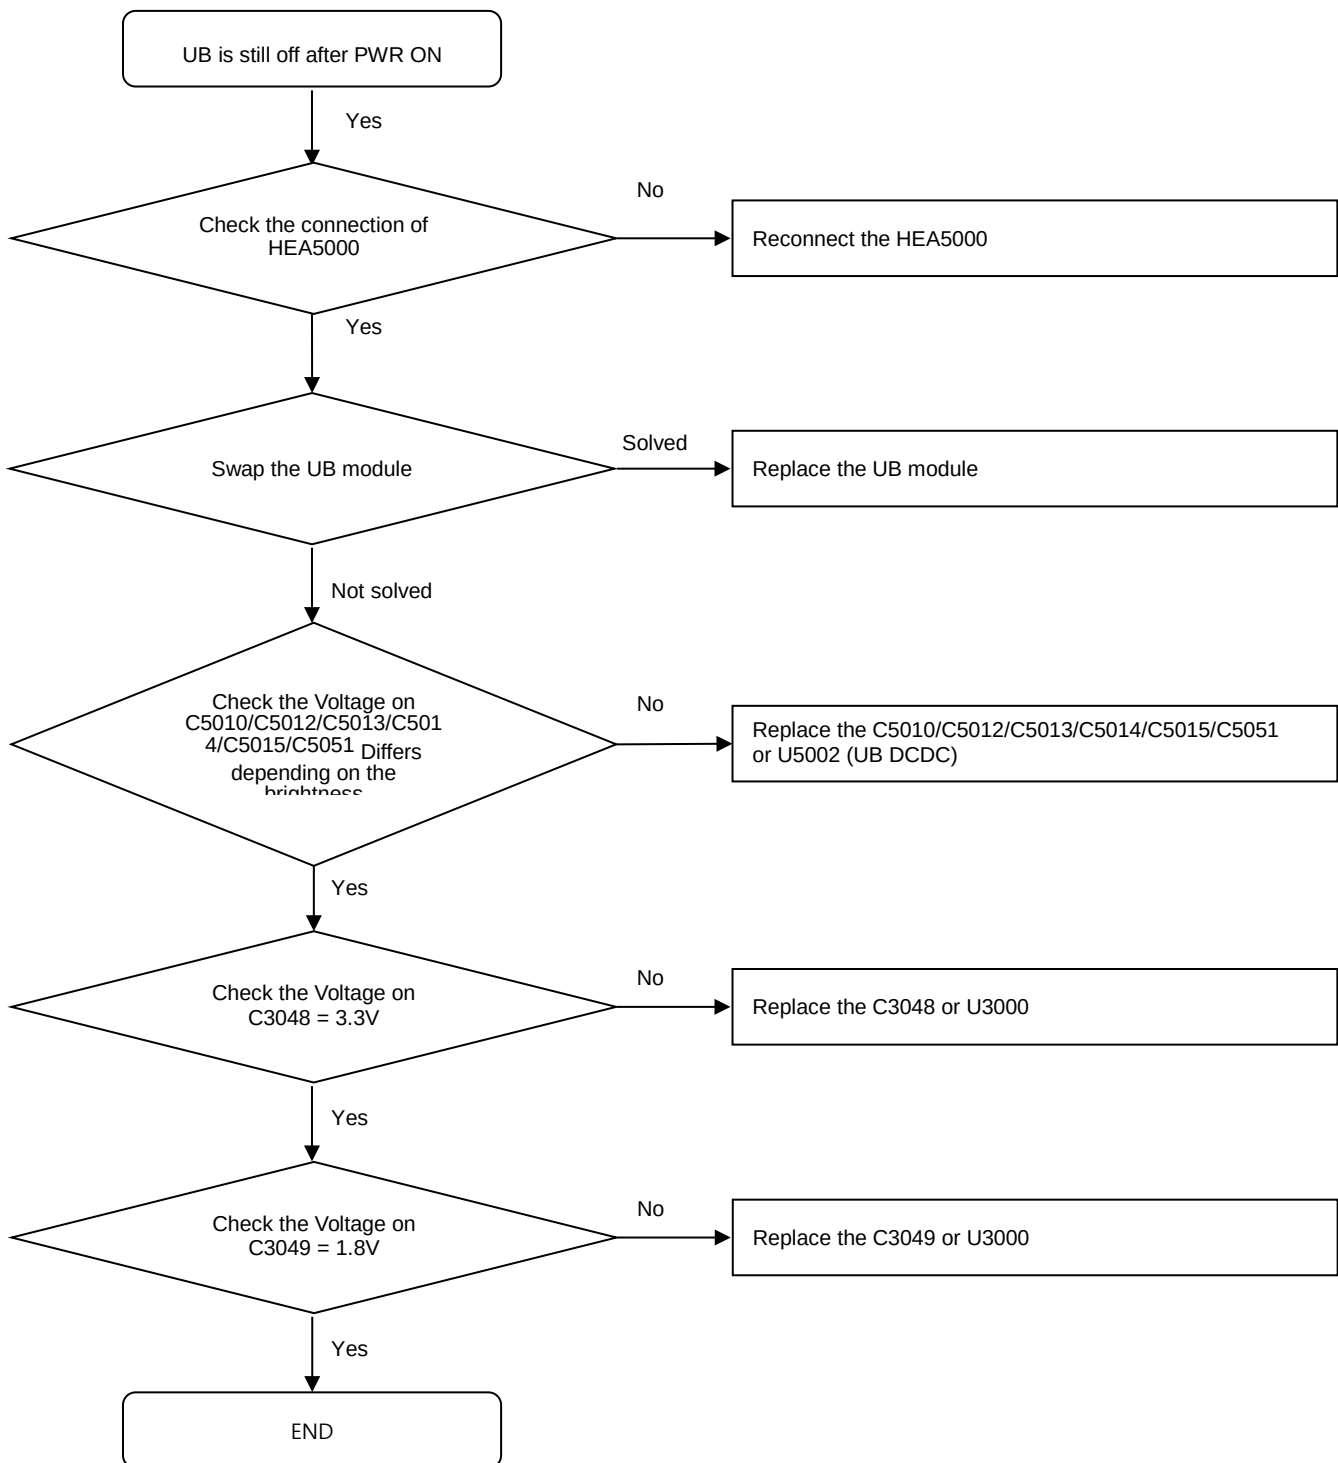


8. Level 3 Repair

8-4-9. TSP

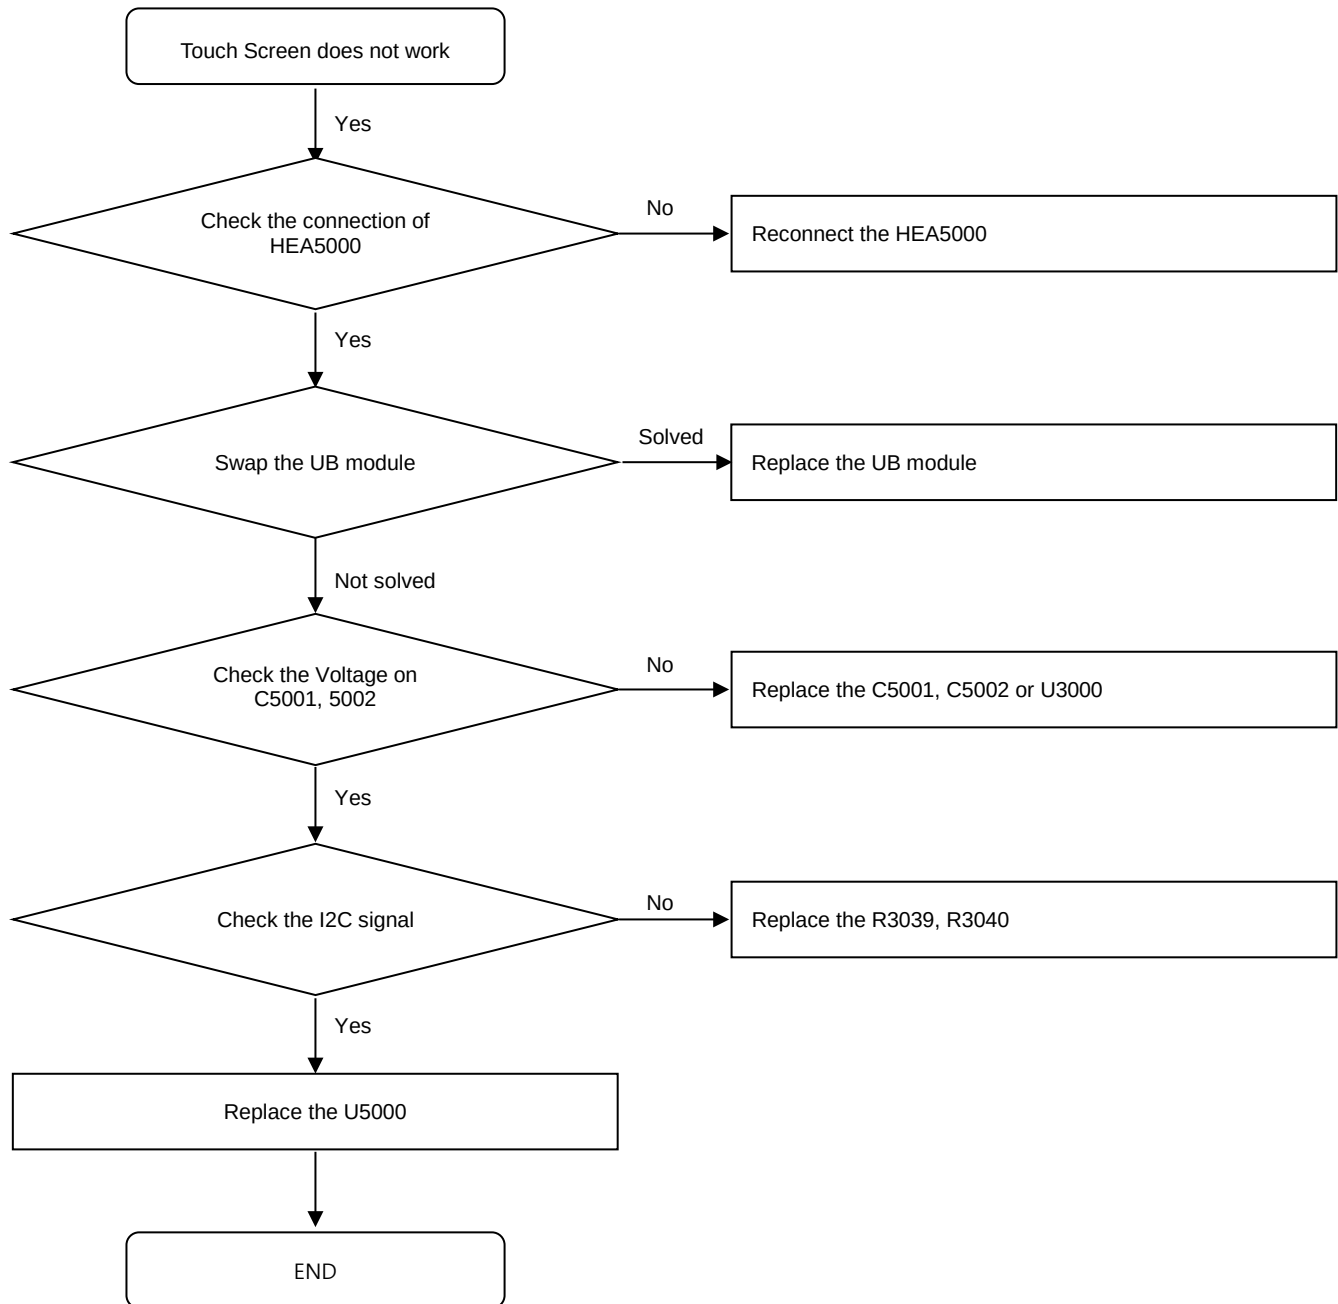


8. Level 3 Repair

8-4-10. MOTOR

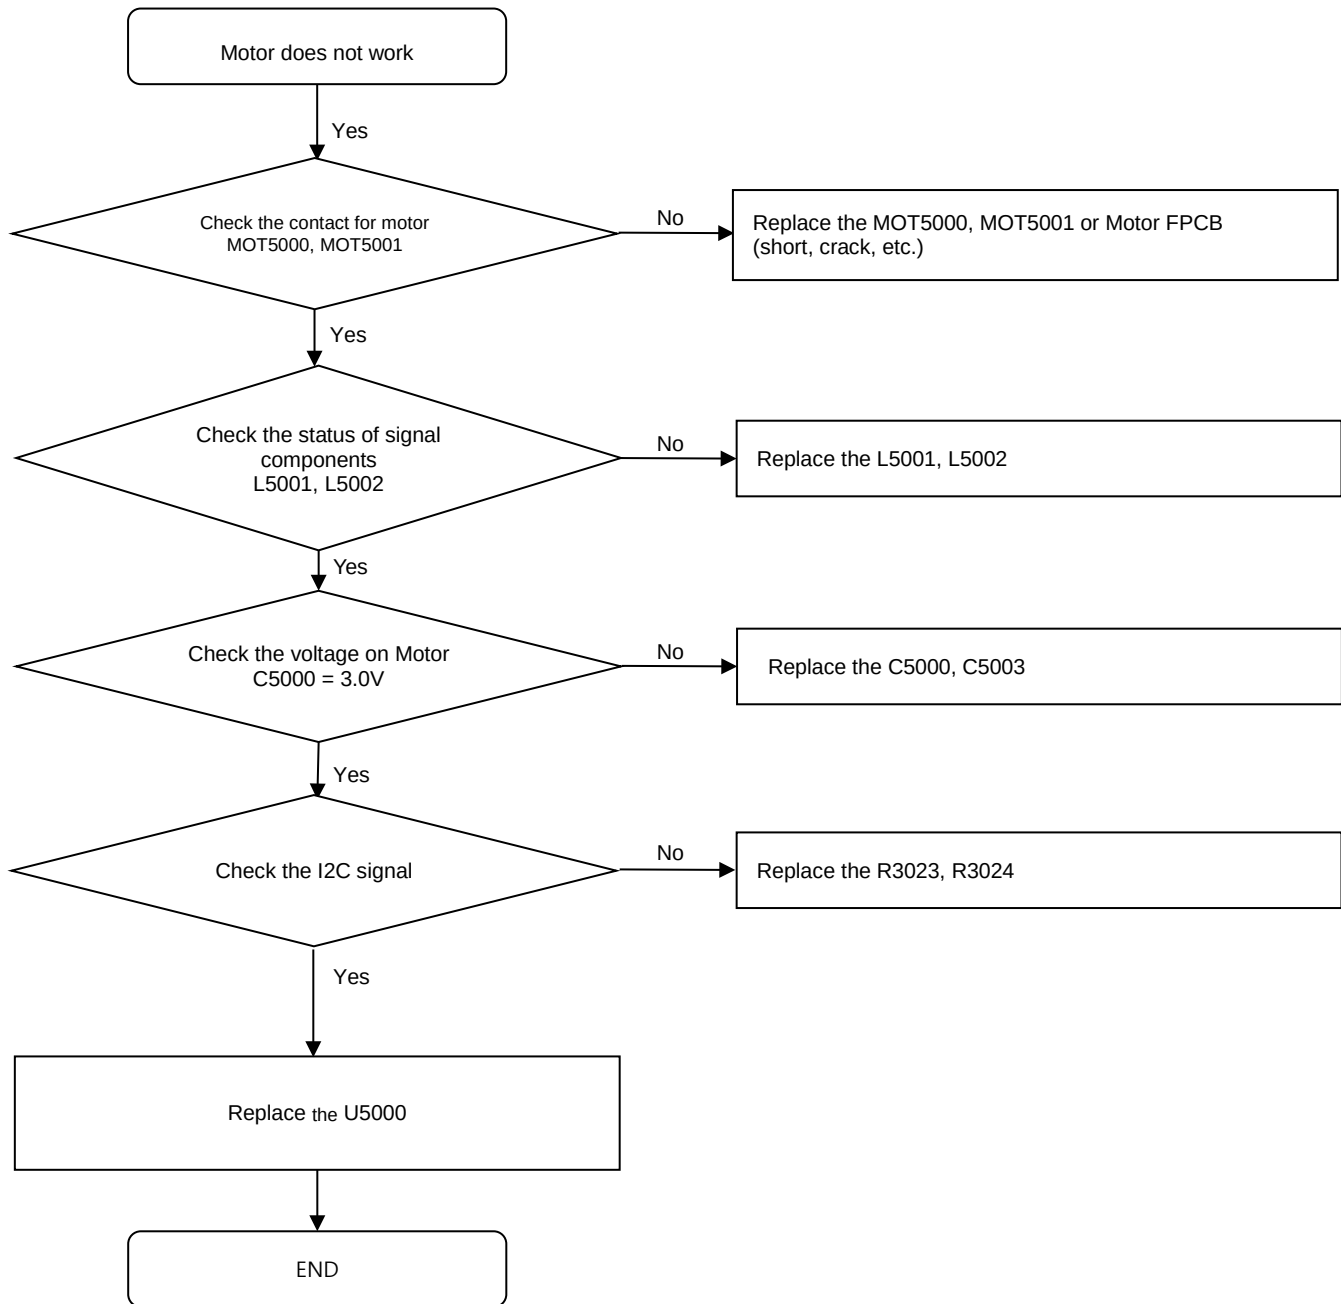

8. Level 3 Repair

8-4-11. Microphone part

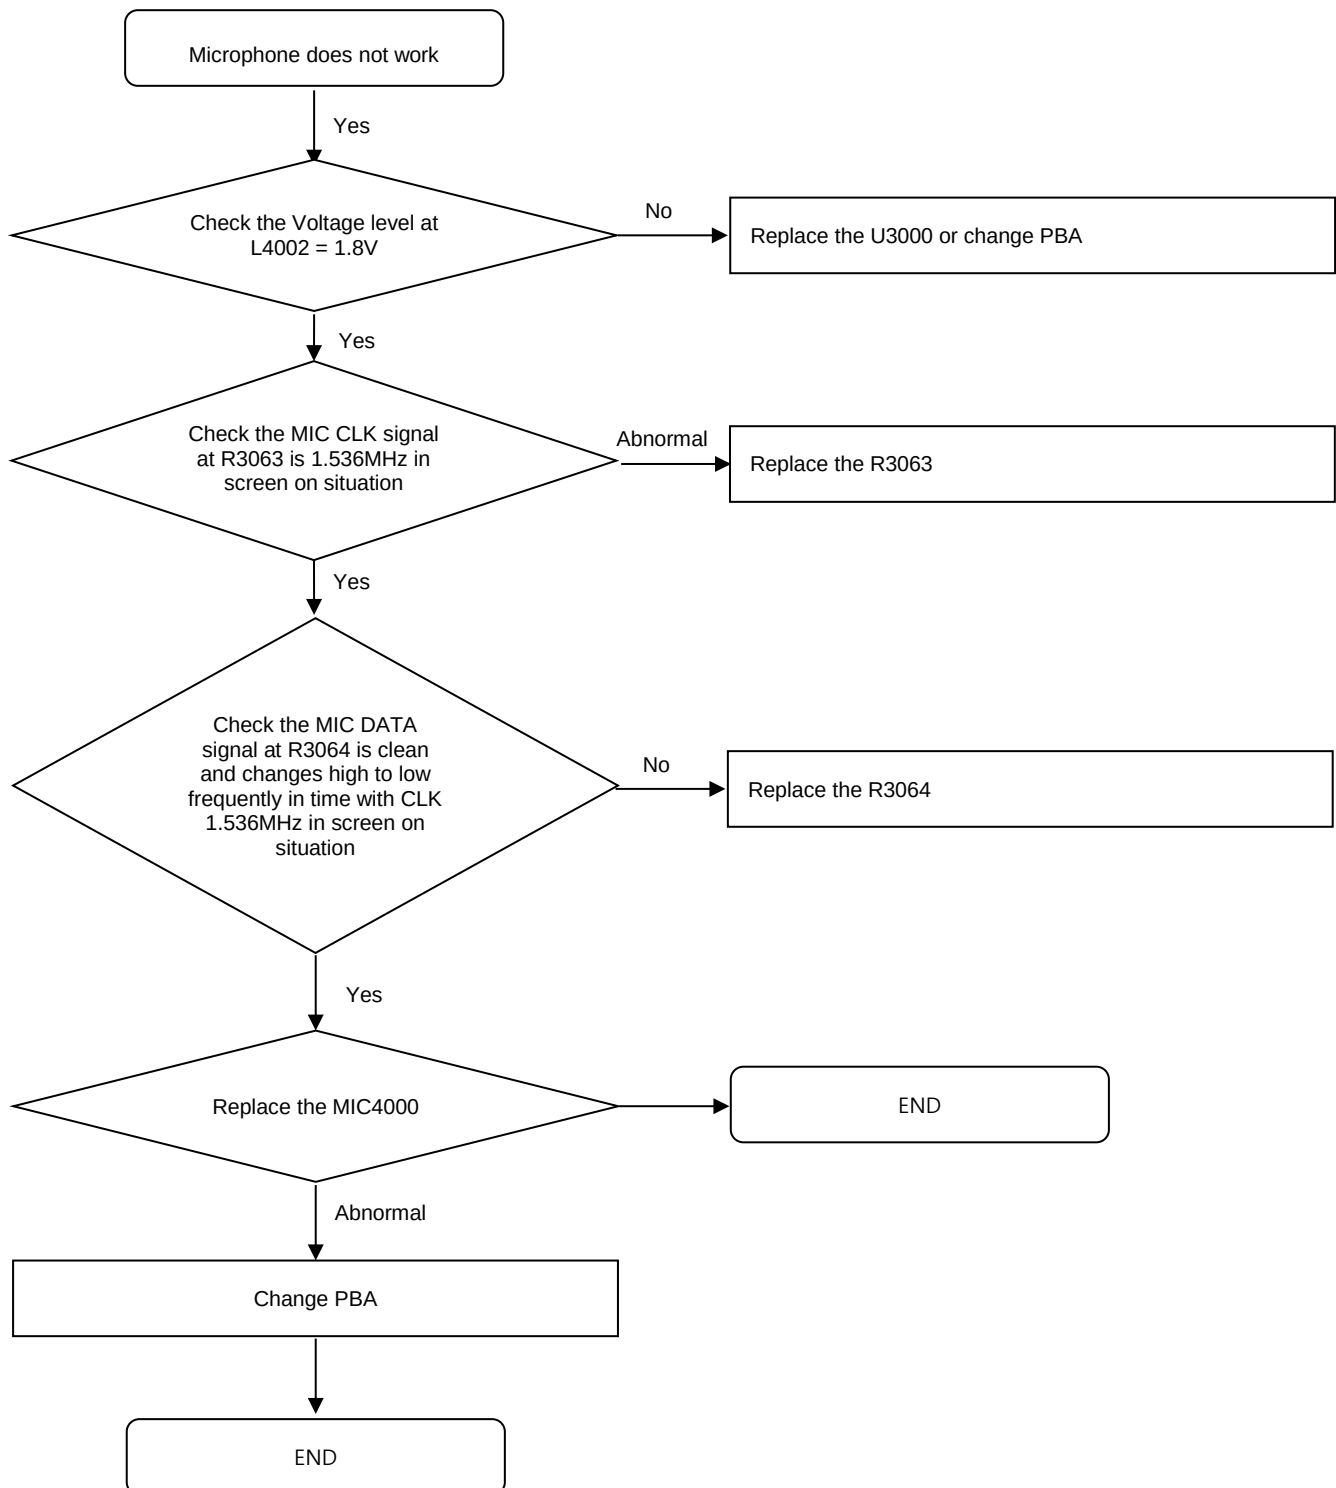

8. Level 3 Repair

8-4-12. Speaker part

