



8.3 级维修

8-1. 组件布局

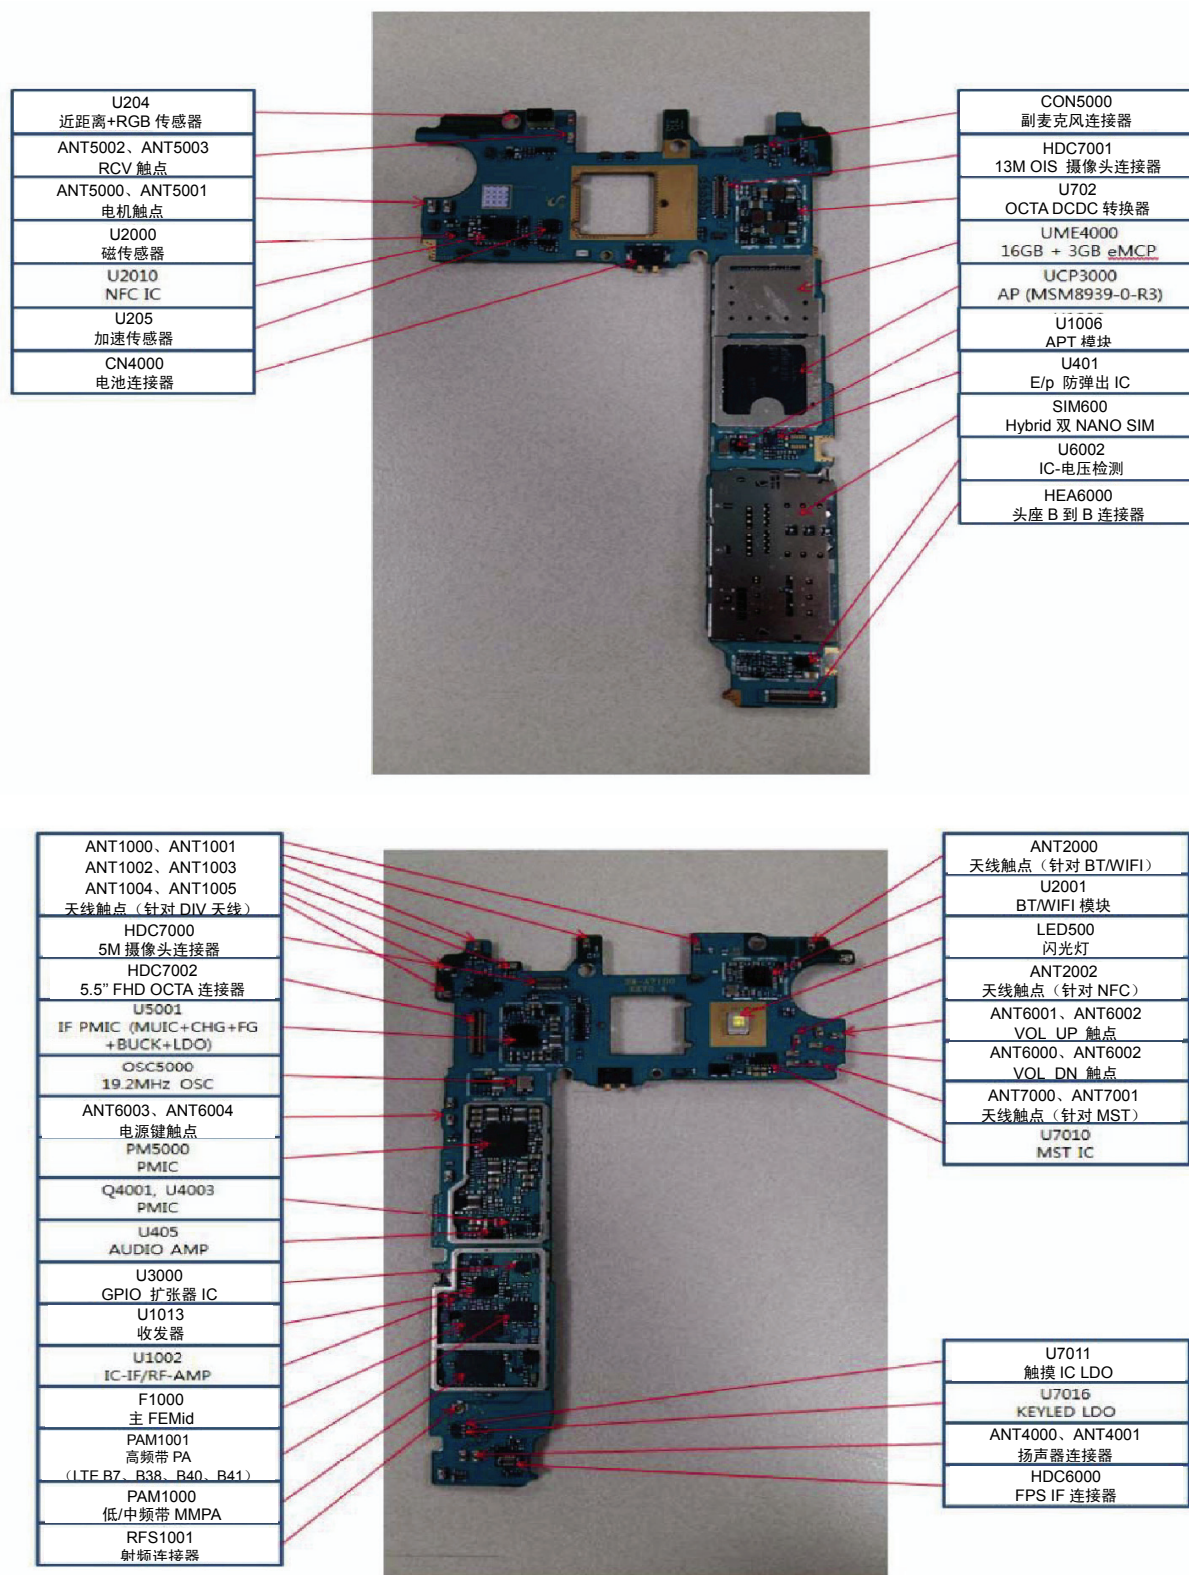


8.3 级维修

8-2. 框图

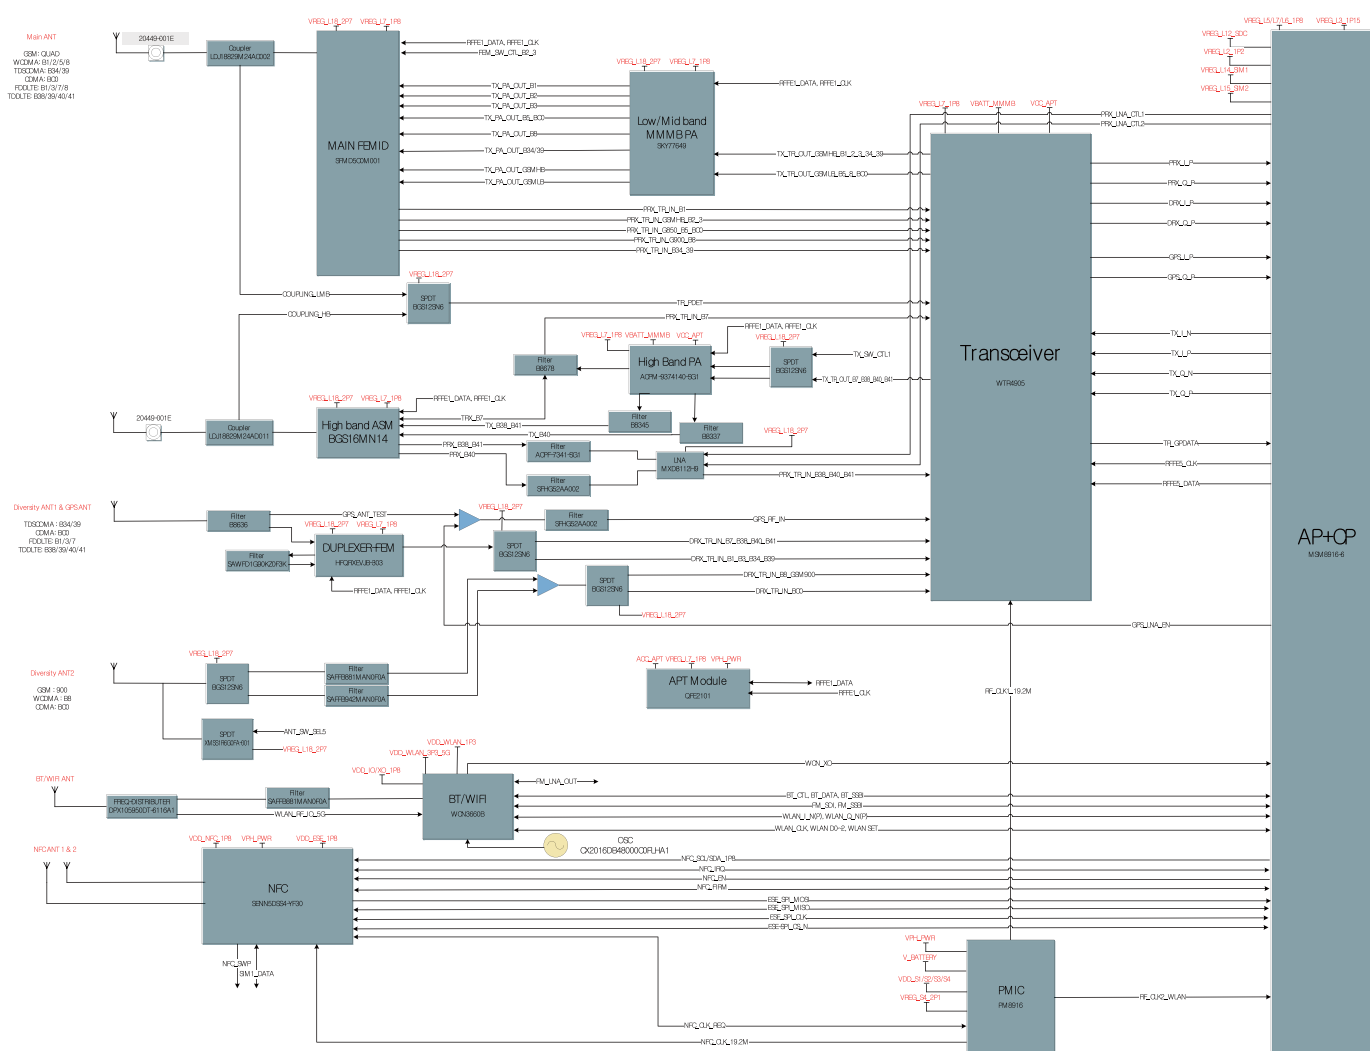

8.3 级维修

8-3. 设备

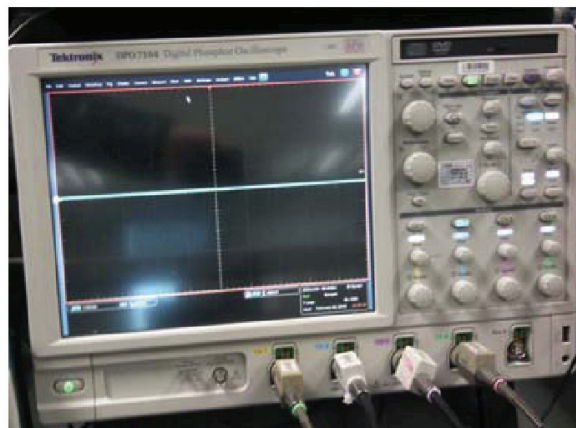


示波器




数字万用表



电源供应器

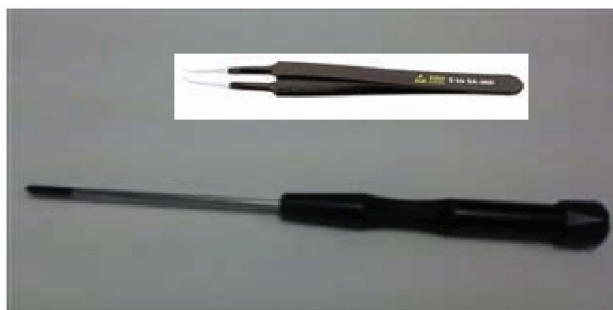

+字螺丝刀, ESD 安全镊子

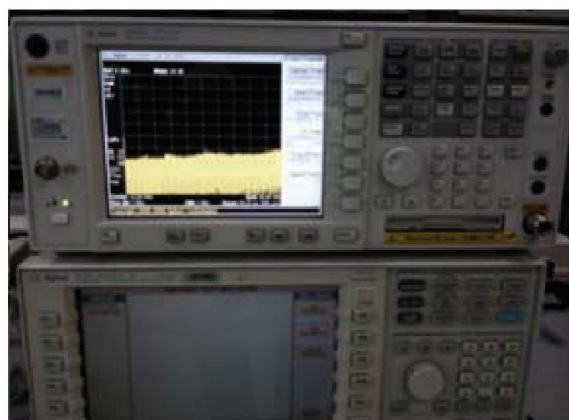

8960 和频谱仪



焊接烙铁


顶部



保密和所有权-本维修手册内容的变更恕不另行通知。
未经三星书面授权而发布，传送，或违背本文件中的任何内容或数据是严格禁止的。


8.3 级维修

底部

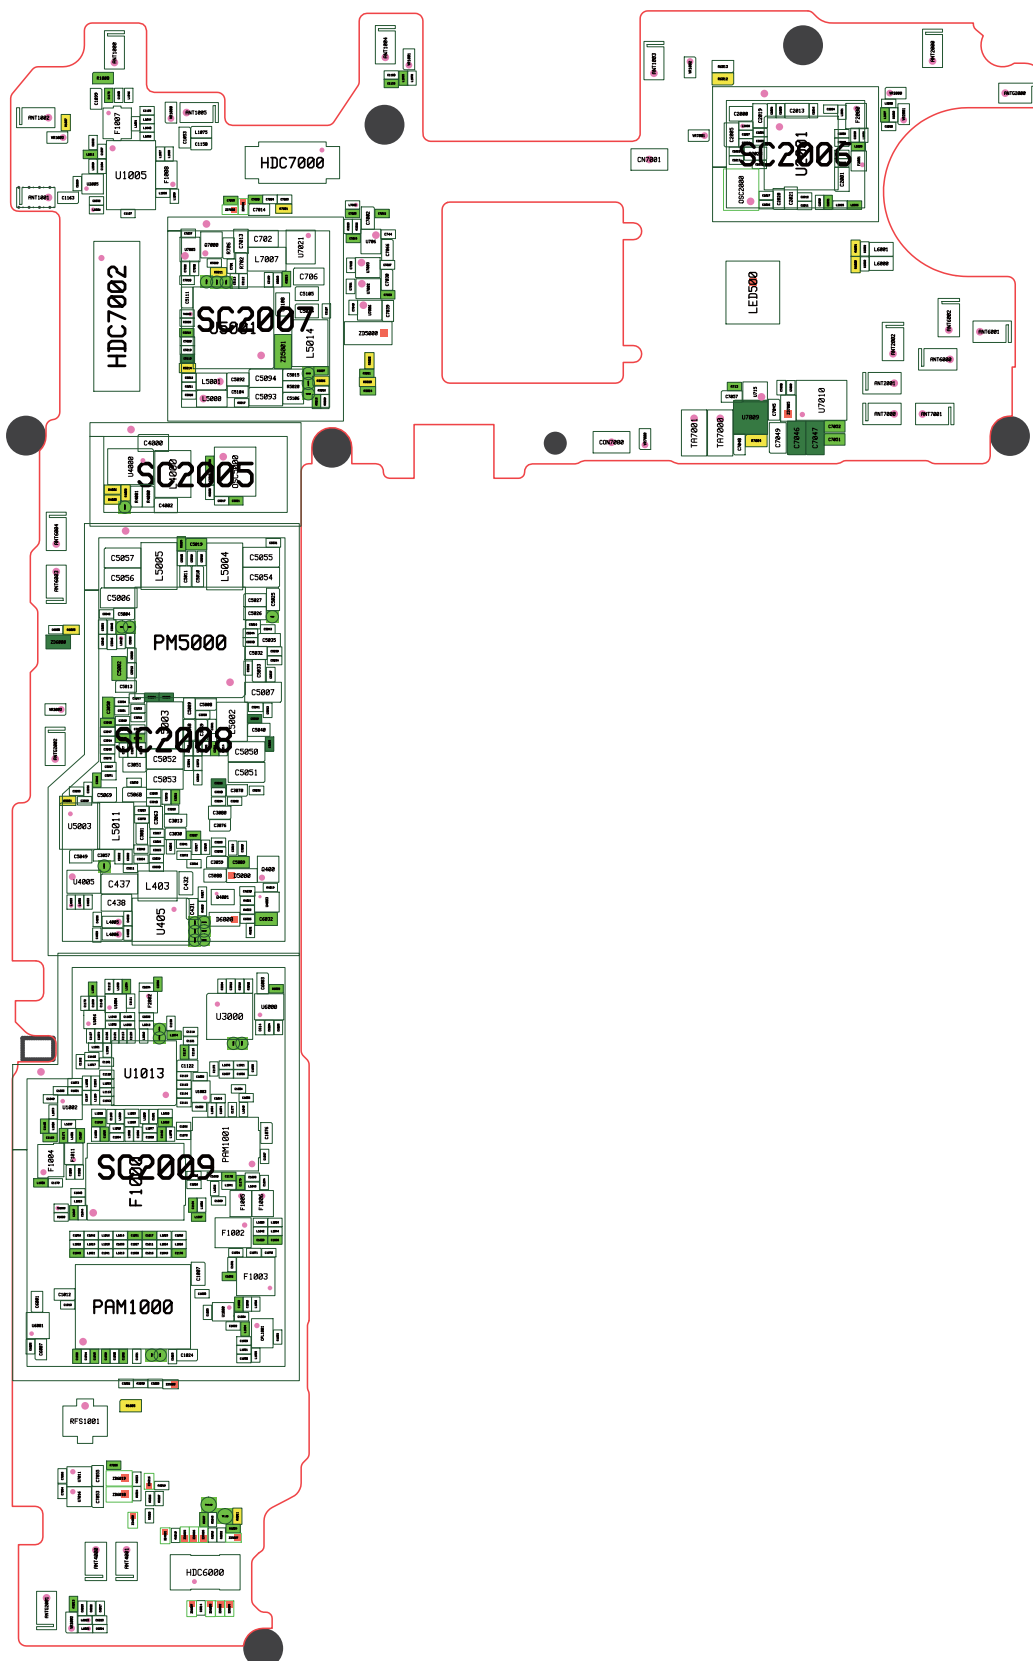


8.3 级维修

8-4. 开机

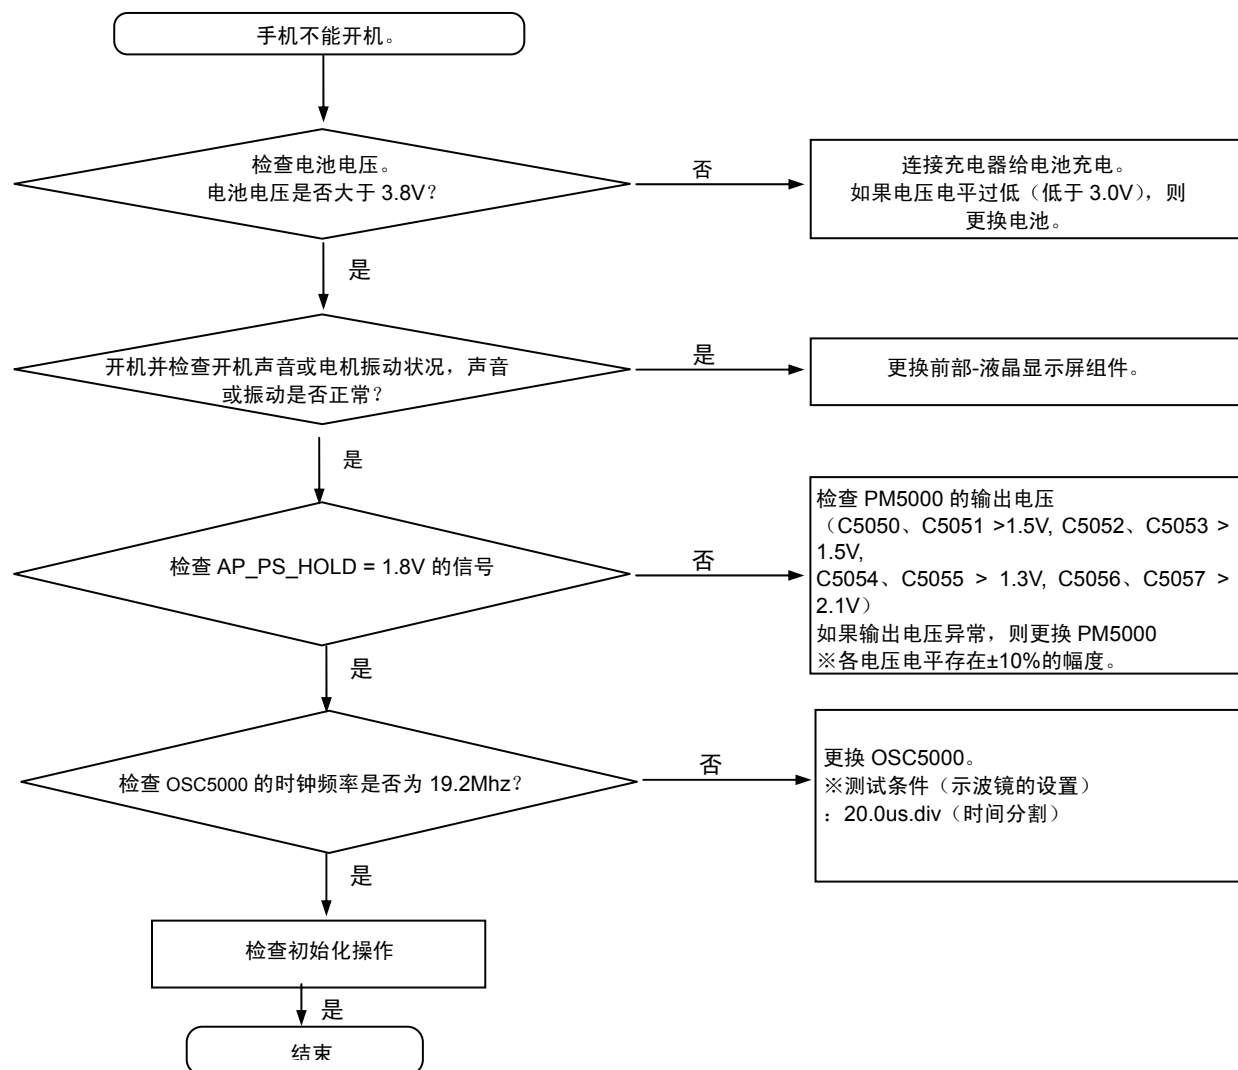


8.3 级维修

8-4-2 初始化

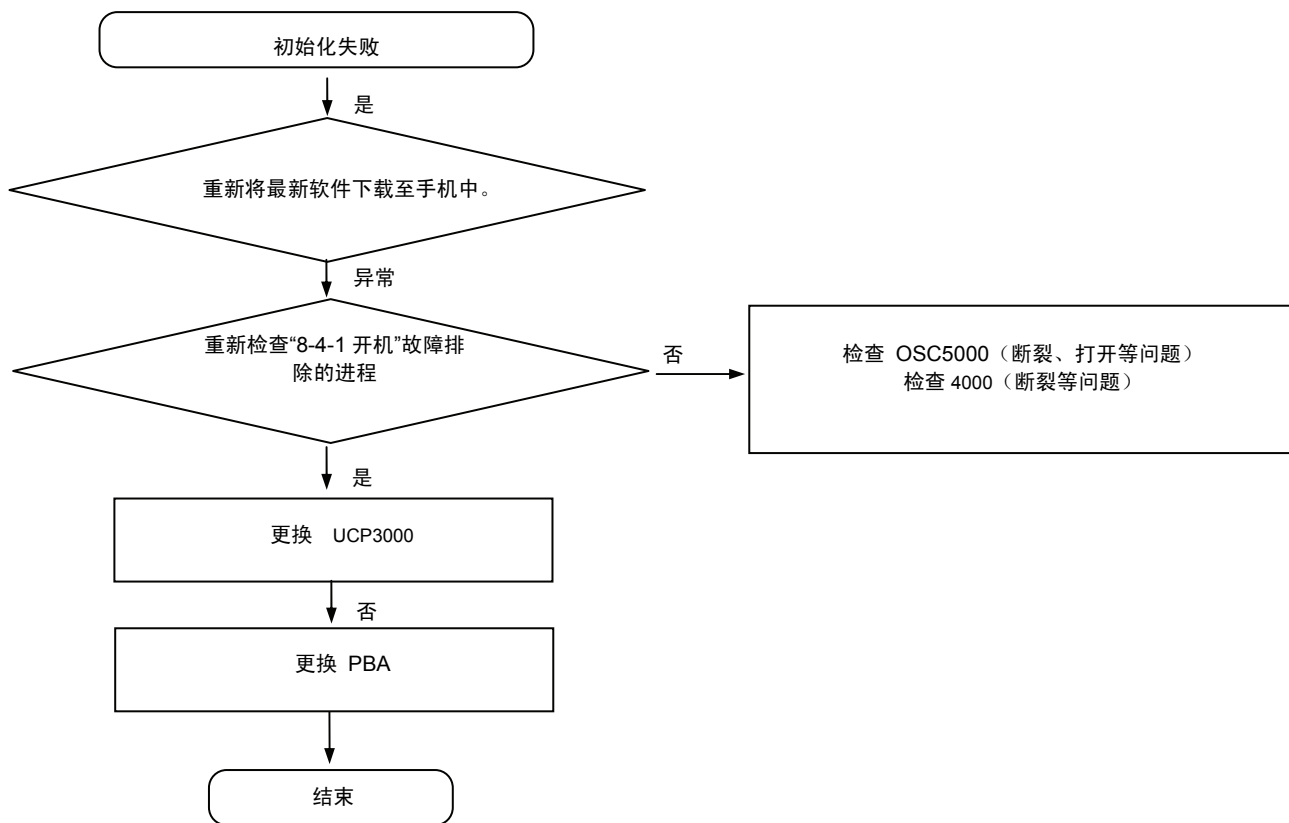


8.3 级维修

8-4-3. 无服务

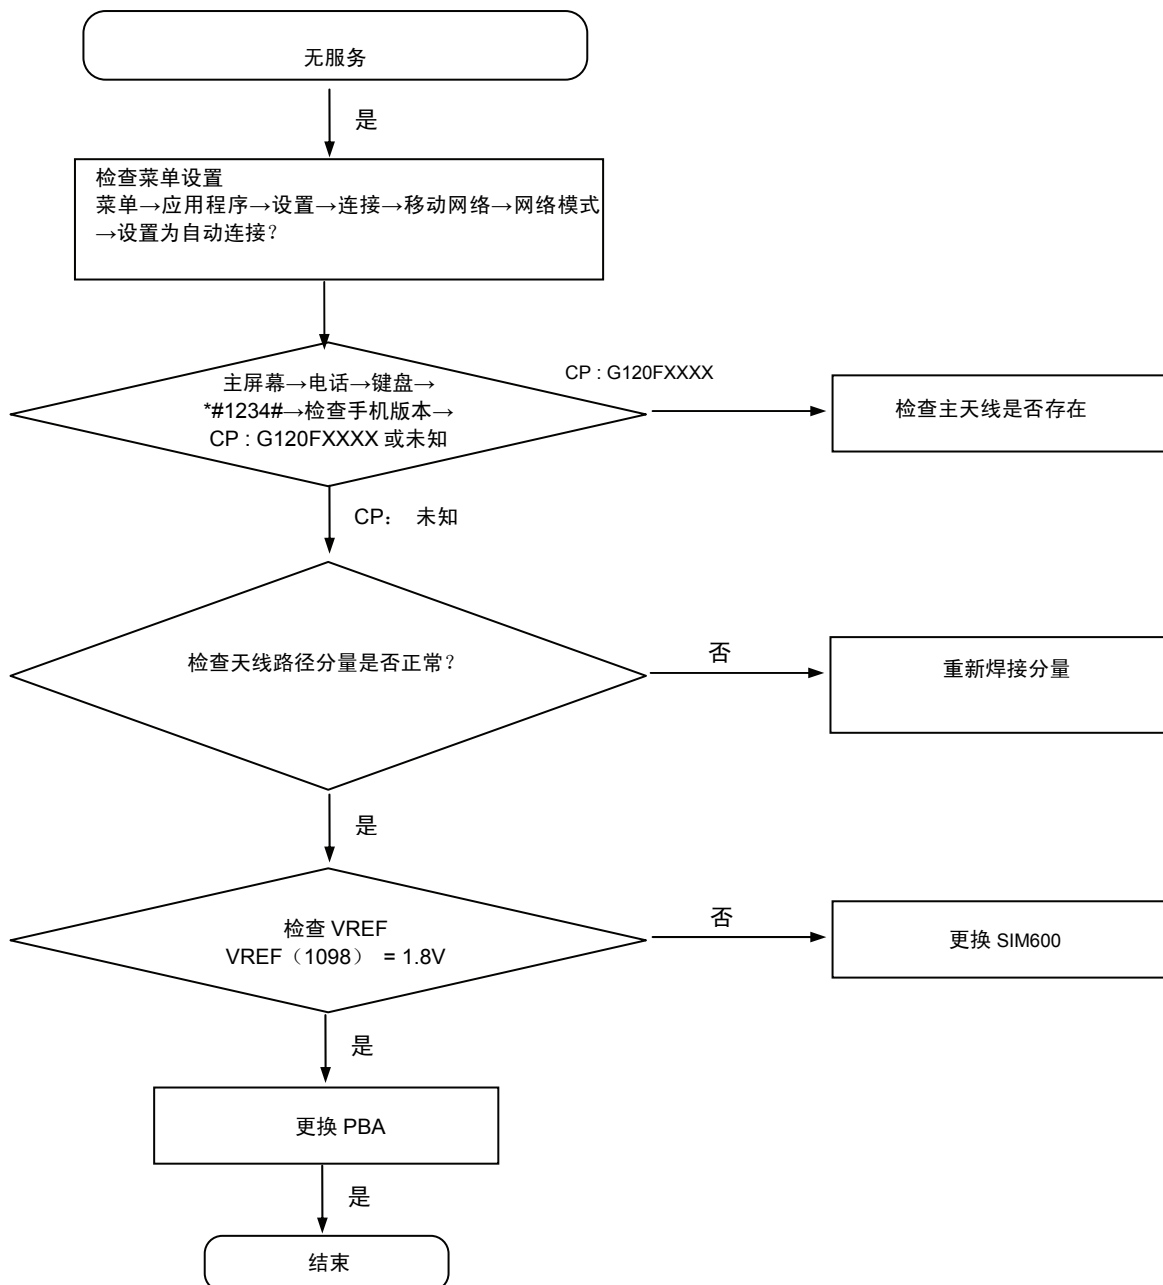

8.3 级维修


8-4-4. SIM 部分

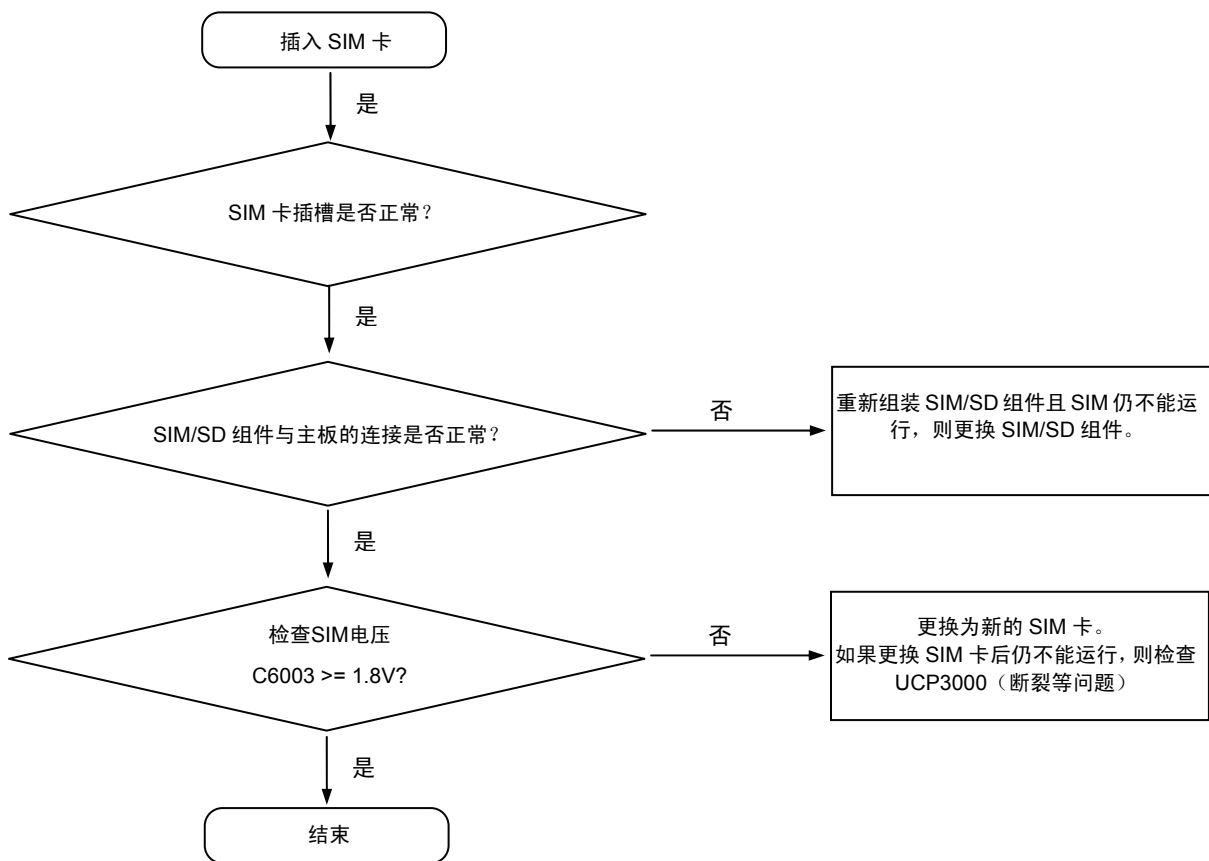

8.3 级维修


8-4-5. 充电部分

- 首先，请检查电池状态。

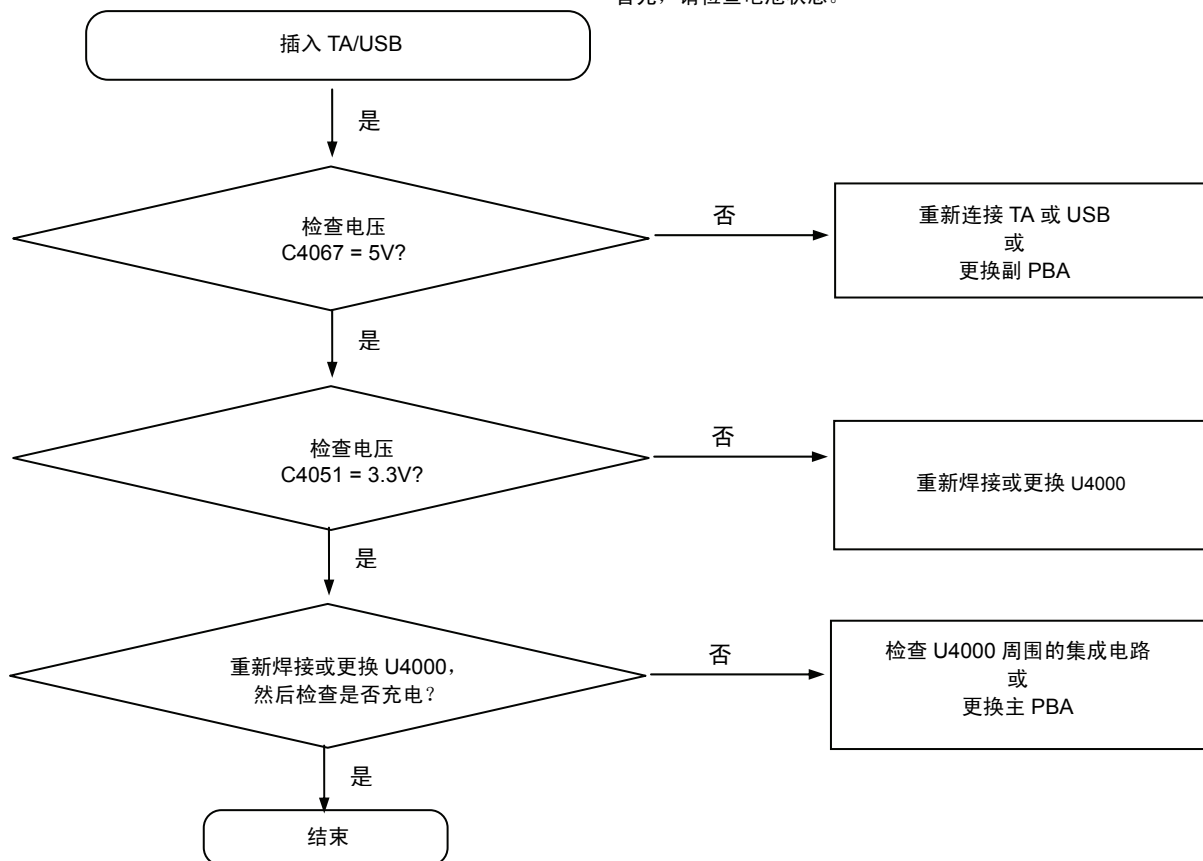


8.3 级维修

8-4-6. 麦克风部分

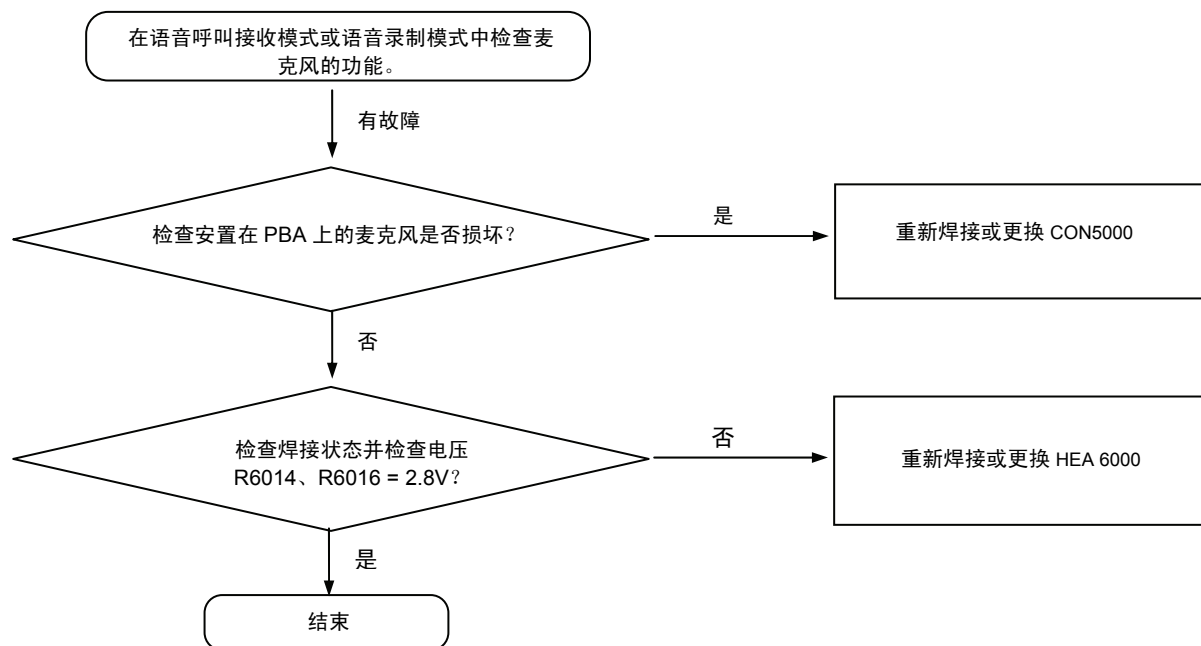


8.3 级维修

8-4-7. 扬声器部分

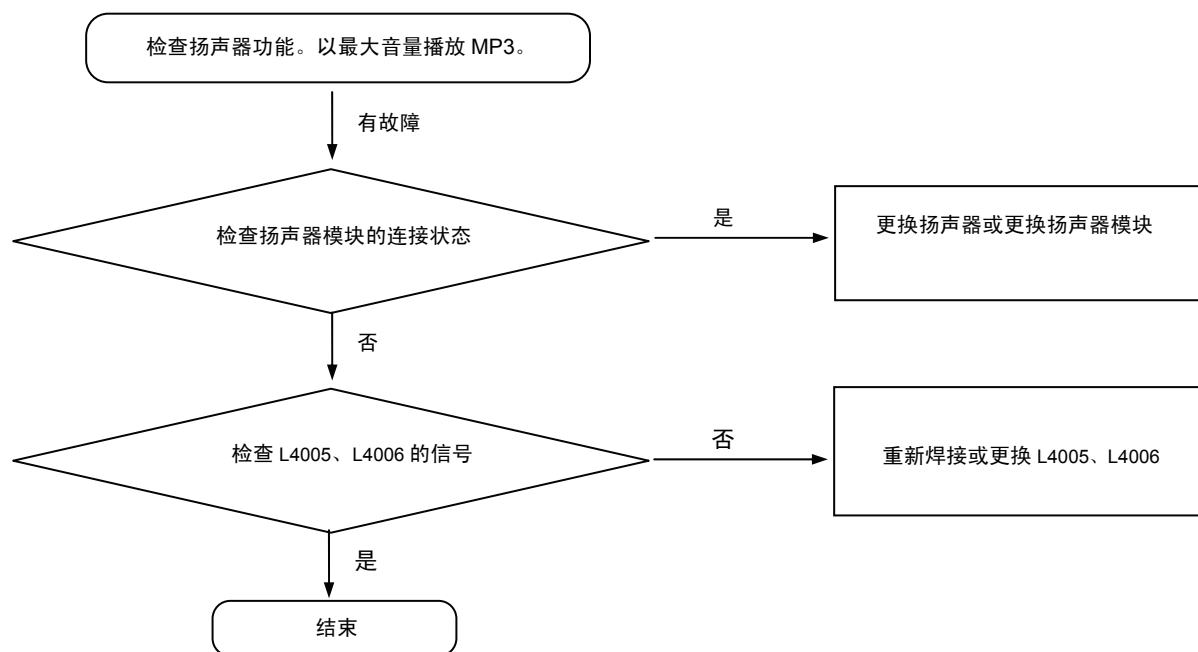


8.3 级维修

8-4-8. 接收器部分

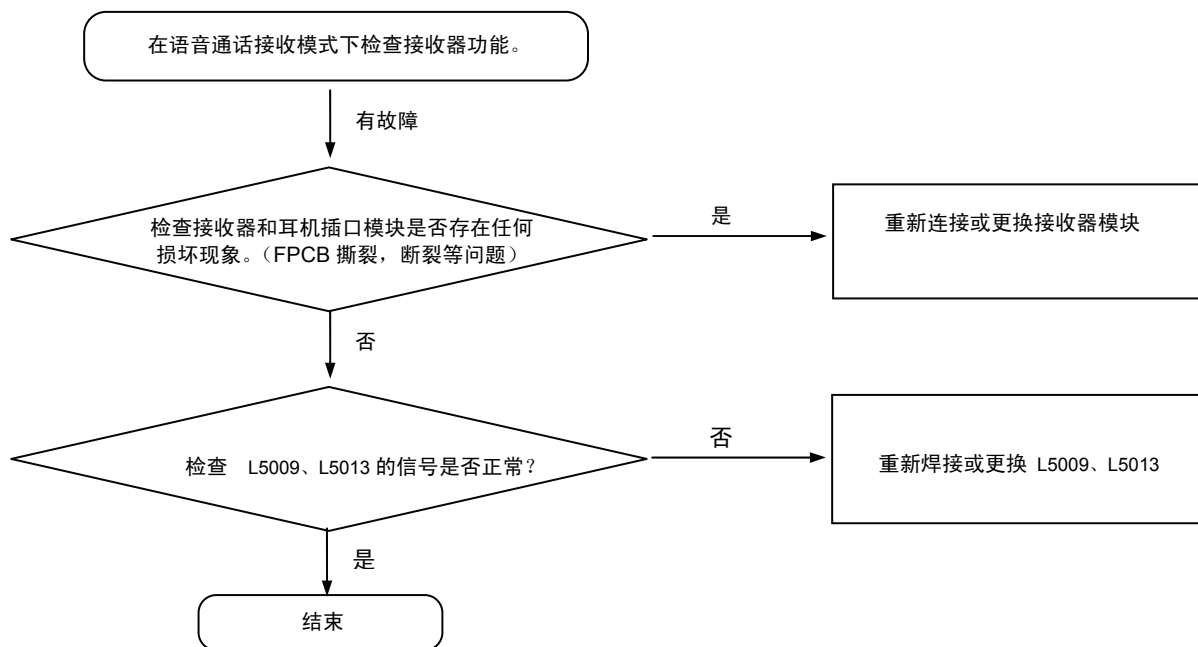


8. 3 级维修

8-4-9. OCTA

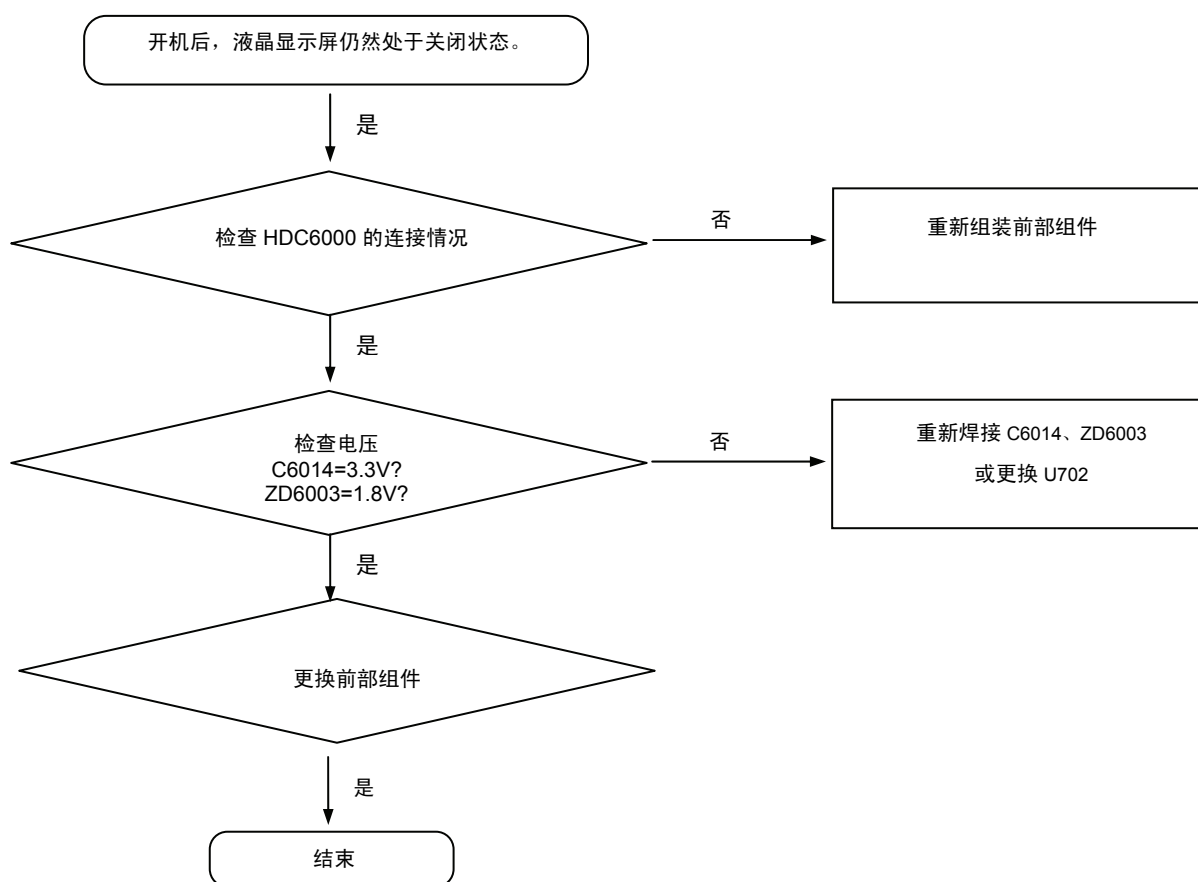


8.3 级维修

8-4-10. 13M 摄像头

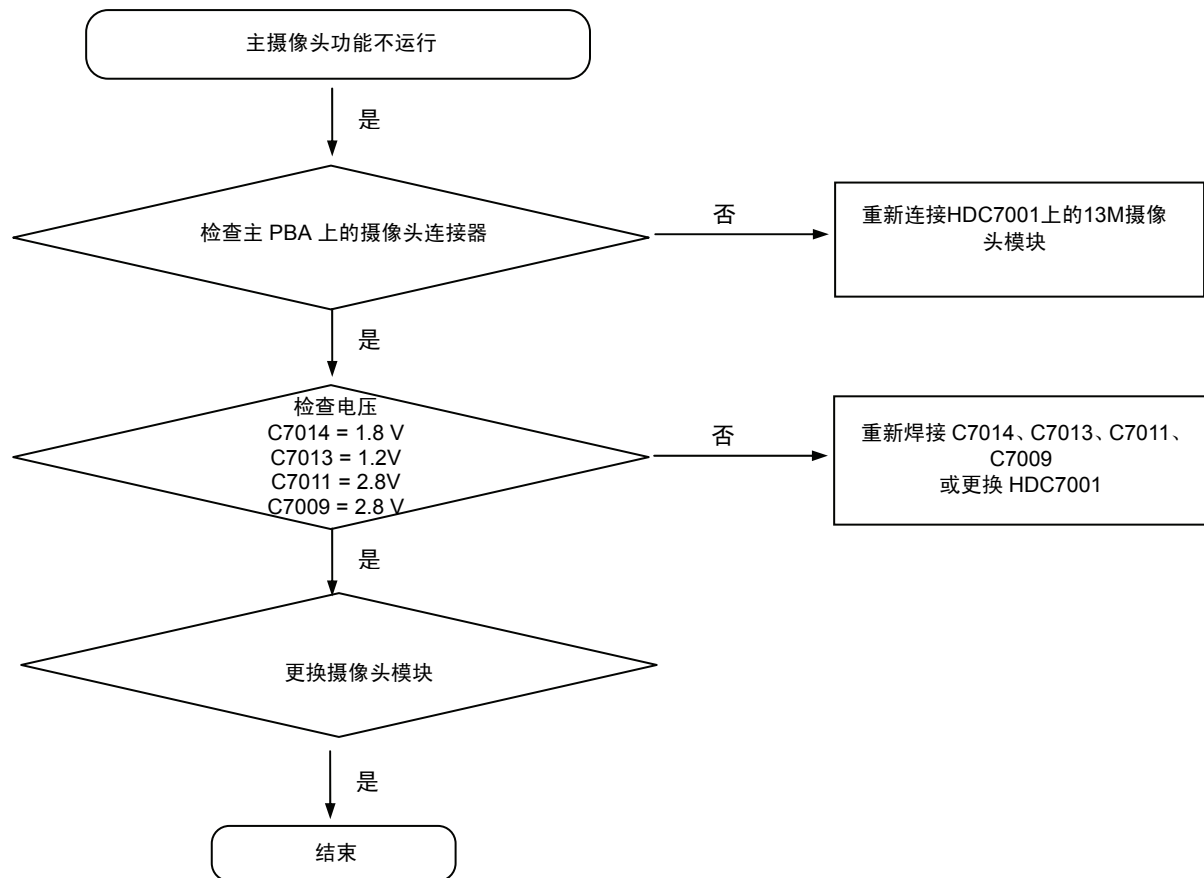


8.3 级维修

8-4-11. 5M 摄像头

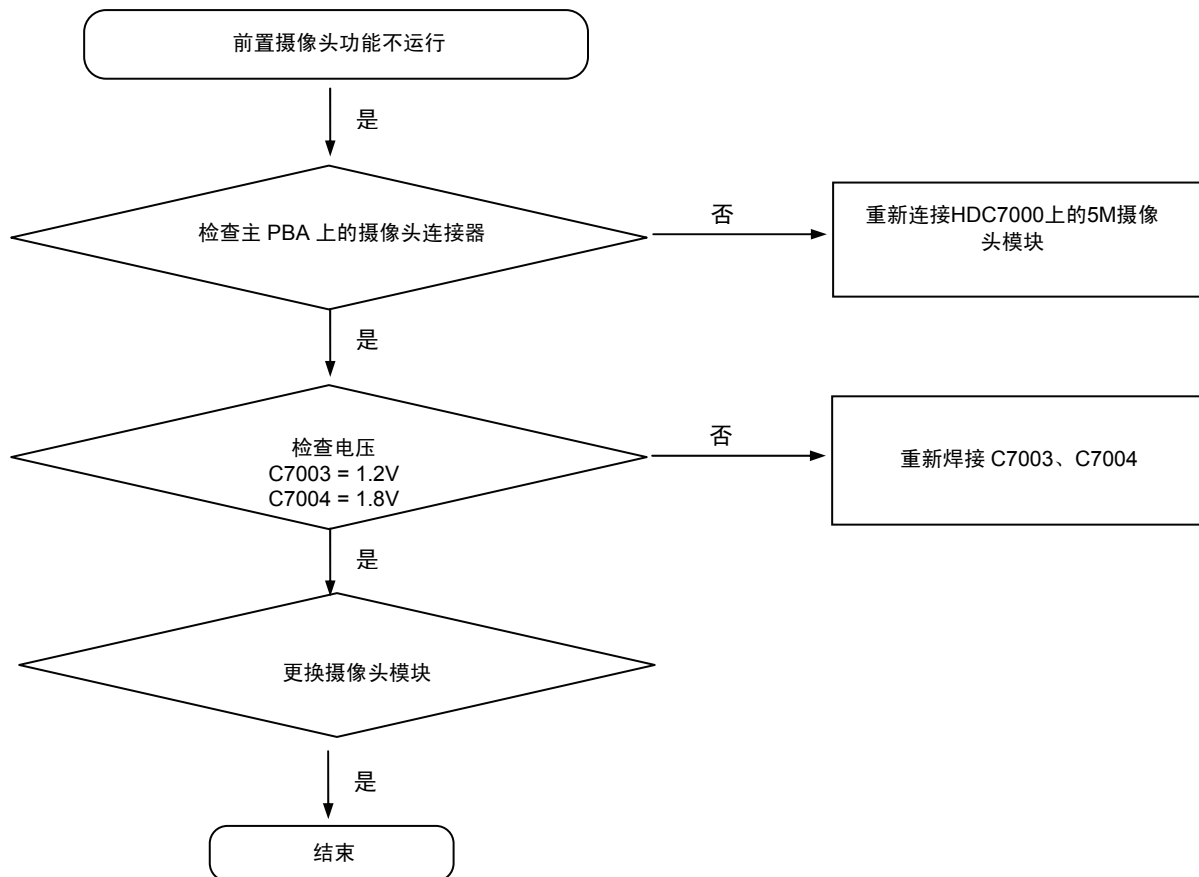


8.3 级维修

8-4-12. GSM 850 / WCDMA 5 / BC0 RX

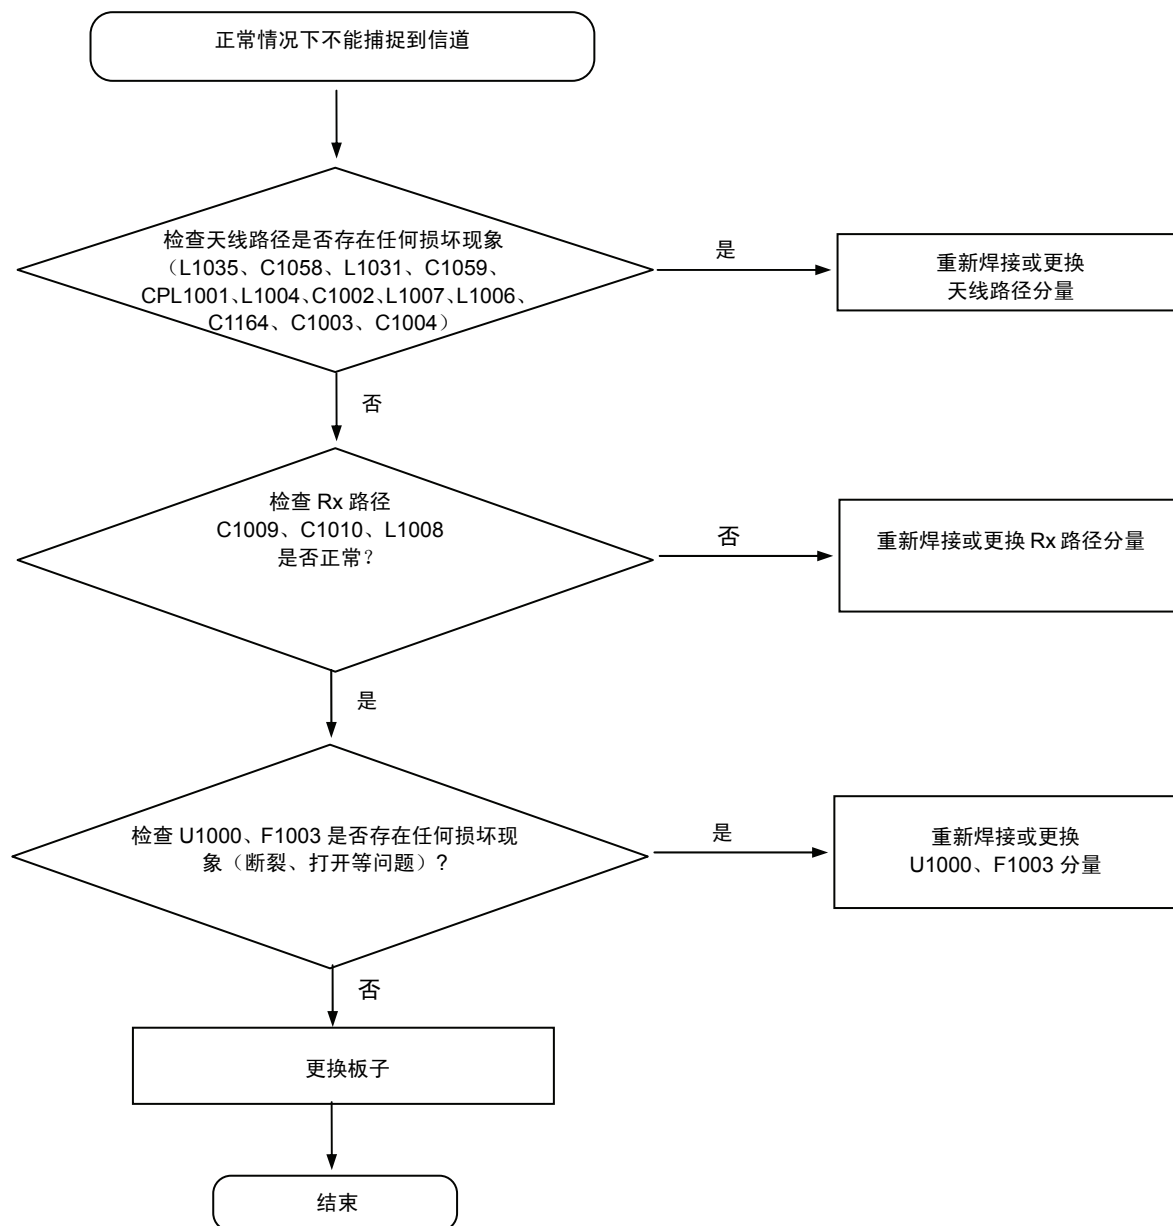


8.3 级维修

8-4-13. GSM 900 / LTE B8 RX

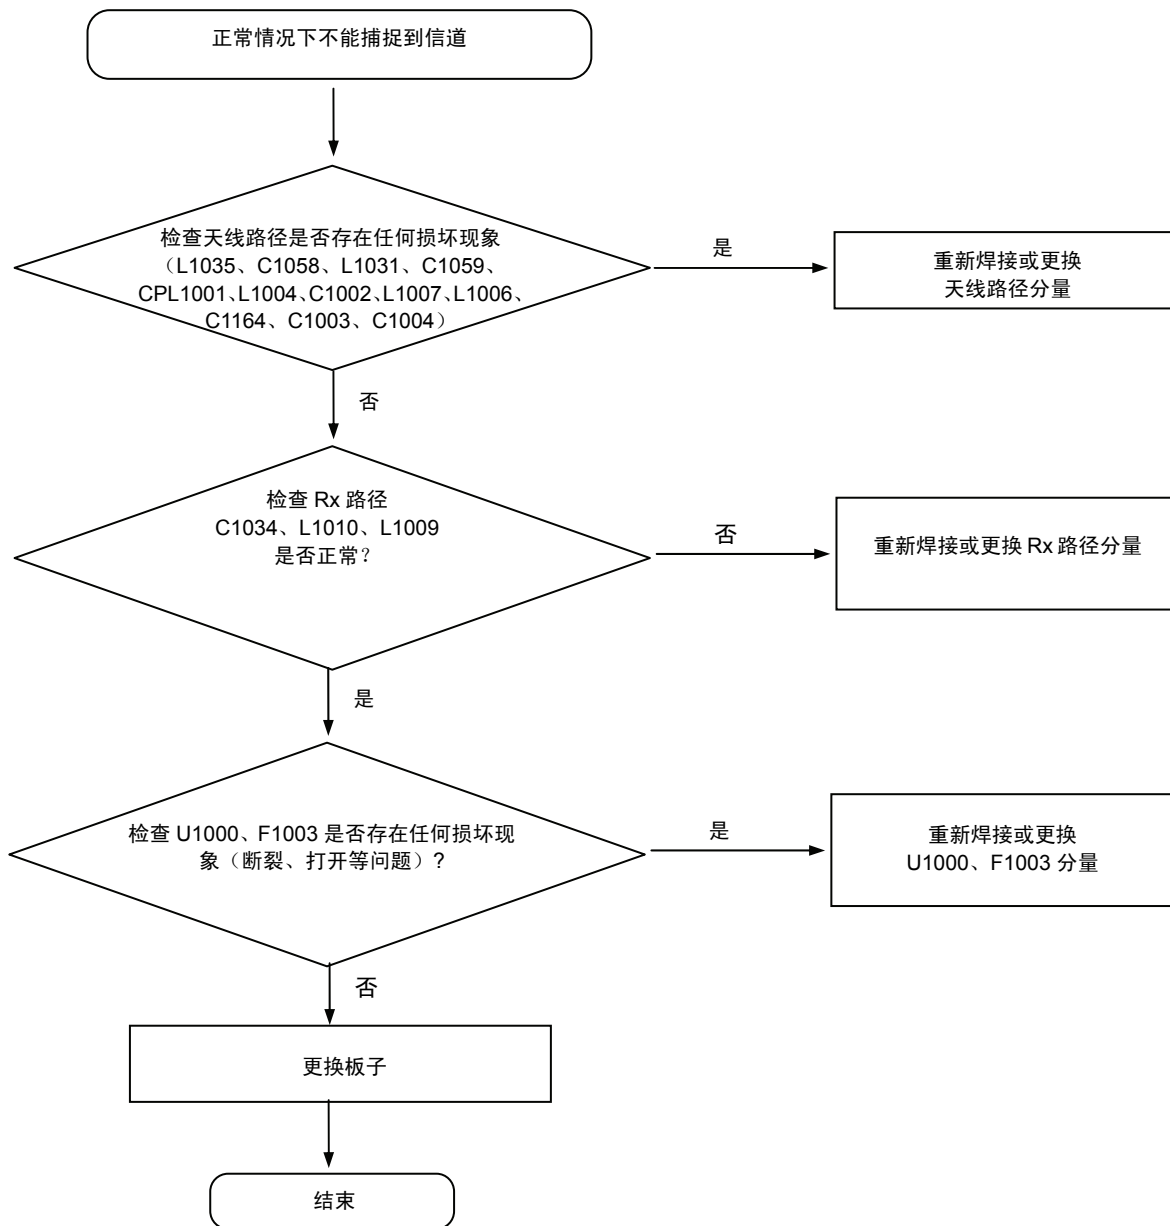


8.3 级维修

8-4-14. GSM 1800 / LTE B2 / LTE B3 RX

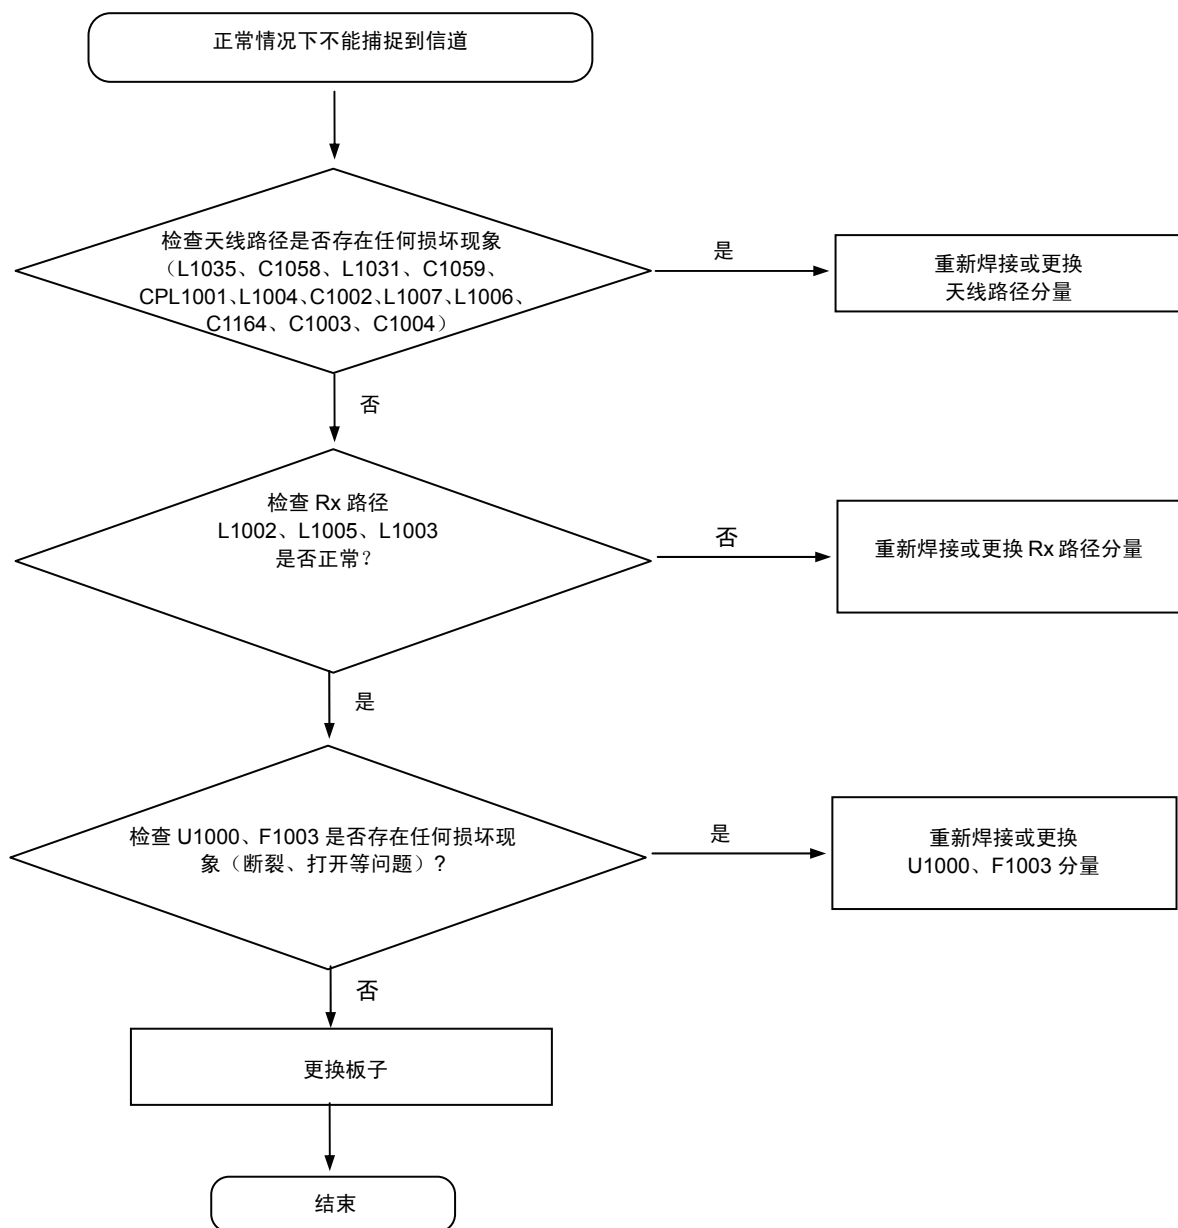


8.3 级维修

8-4-15 TD-SCDMA B34 / B39 RX

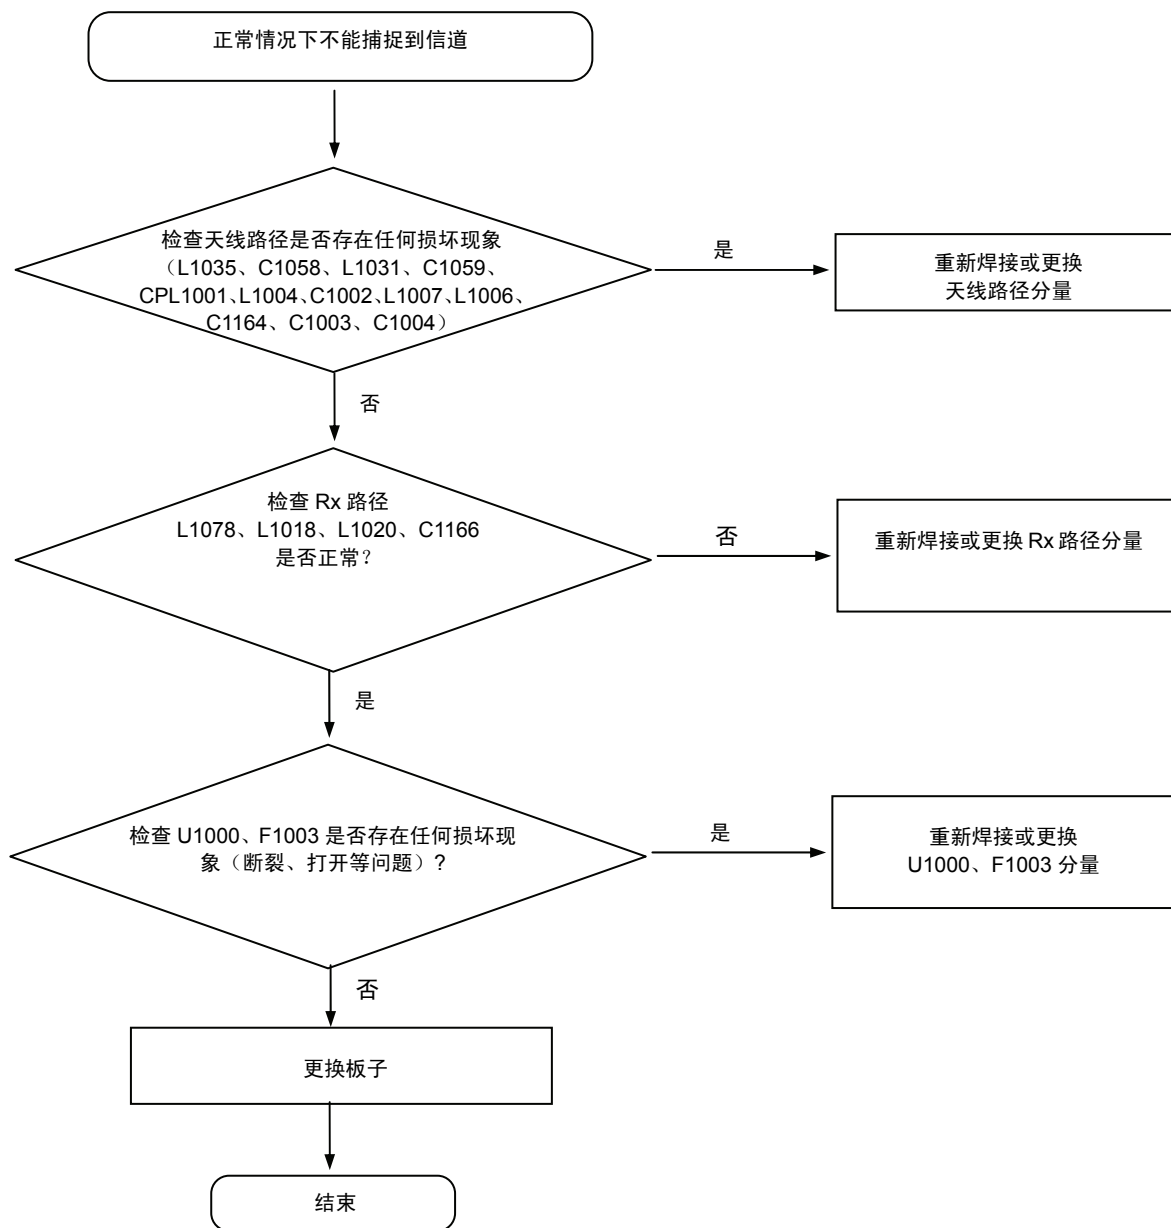


8.3 级维修

8-4-16. LTE B7 / LTEB38 / LTEB40/ LTEB41 RX

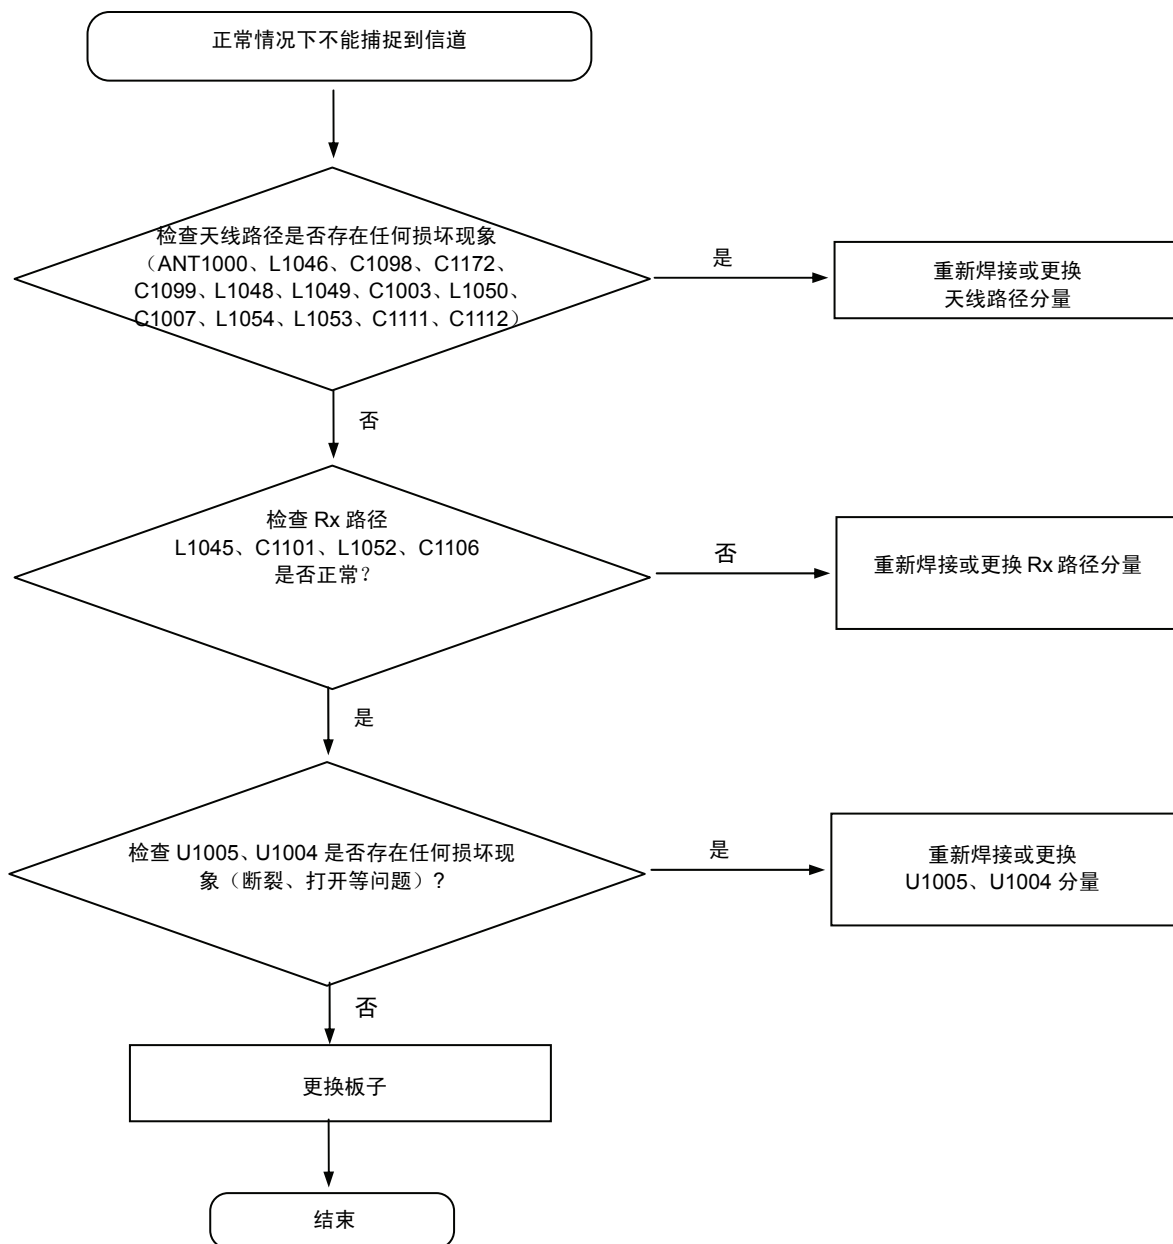


8.3 级维修

8-4-17. GSM850/GSM900 TX

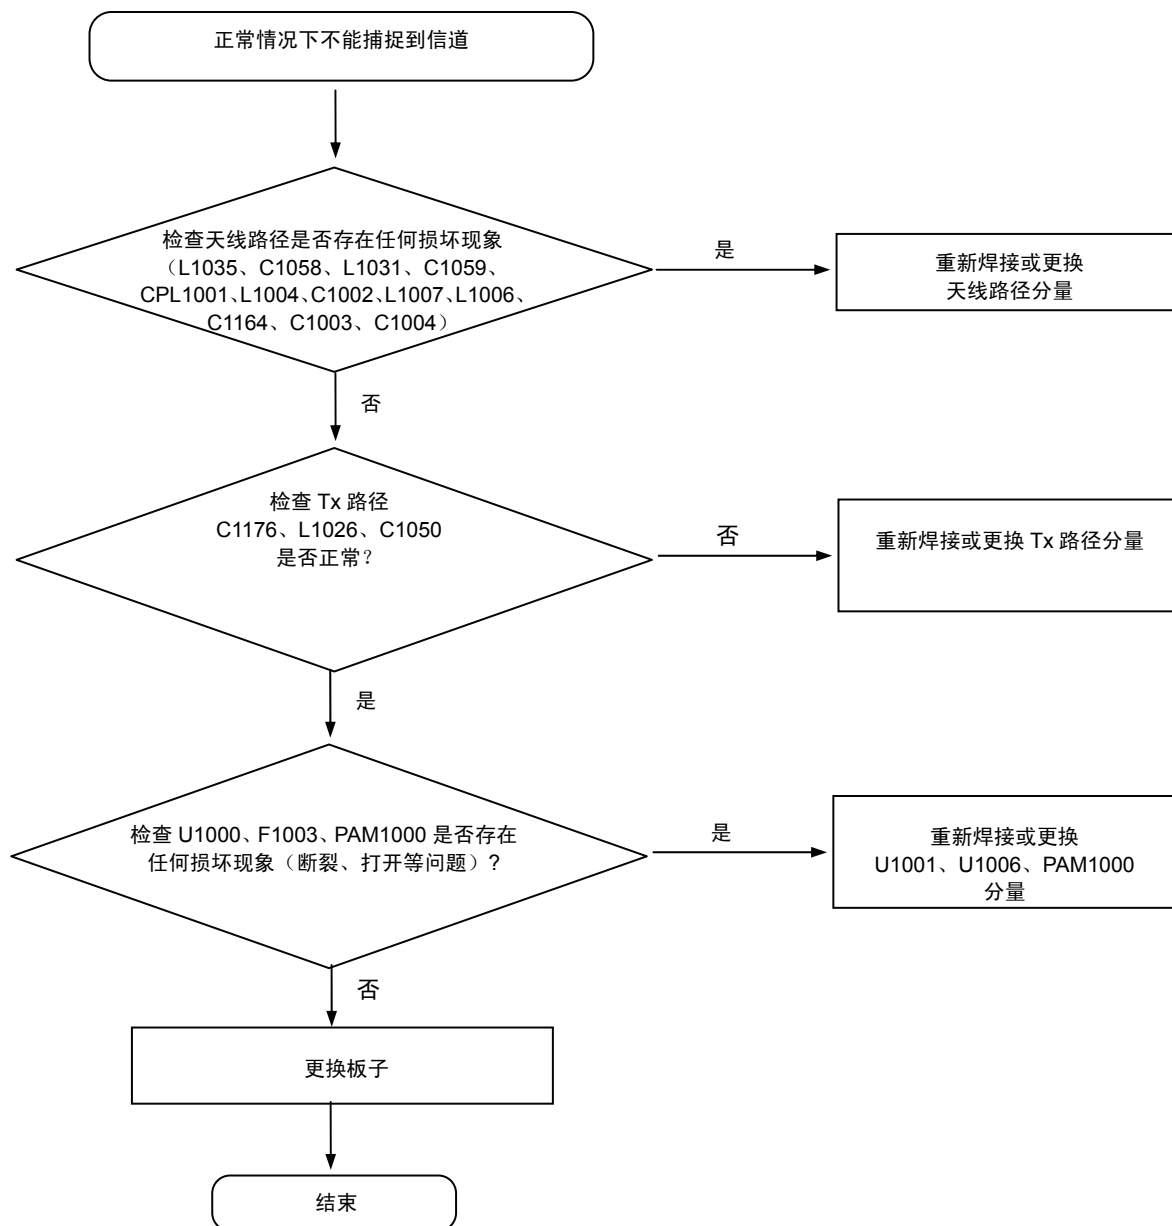


8.3 级维修

8-4-18. GSM1800/GSM1900 TX

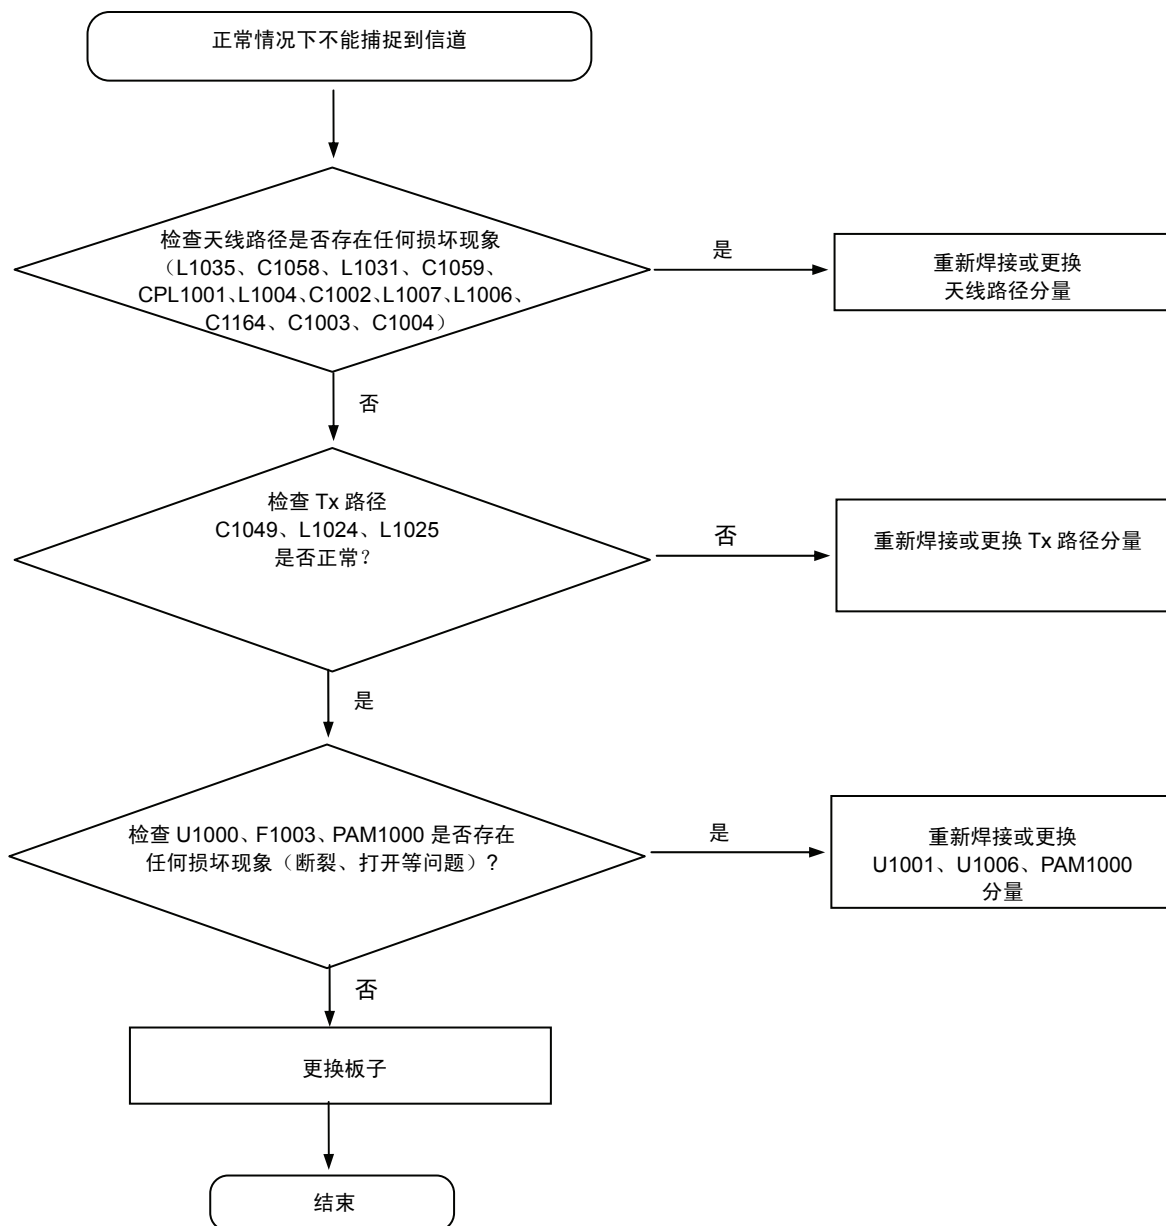


8.3 级维修

8-4-19. WCDMA2100 TX

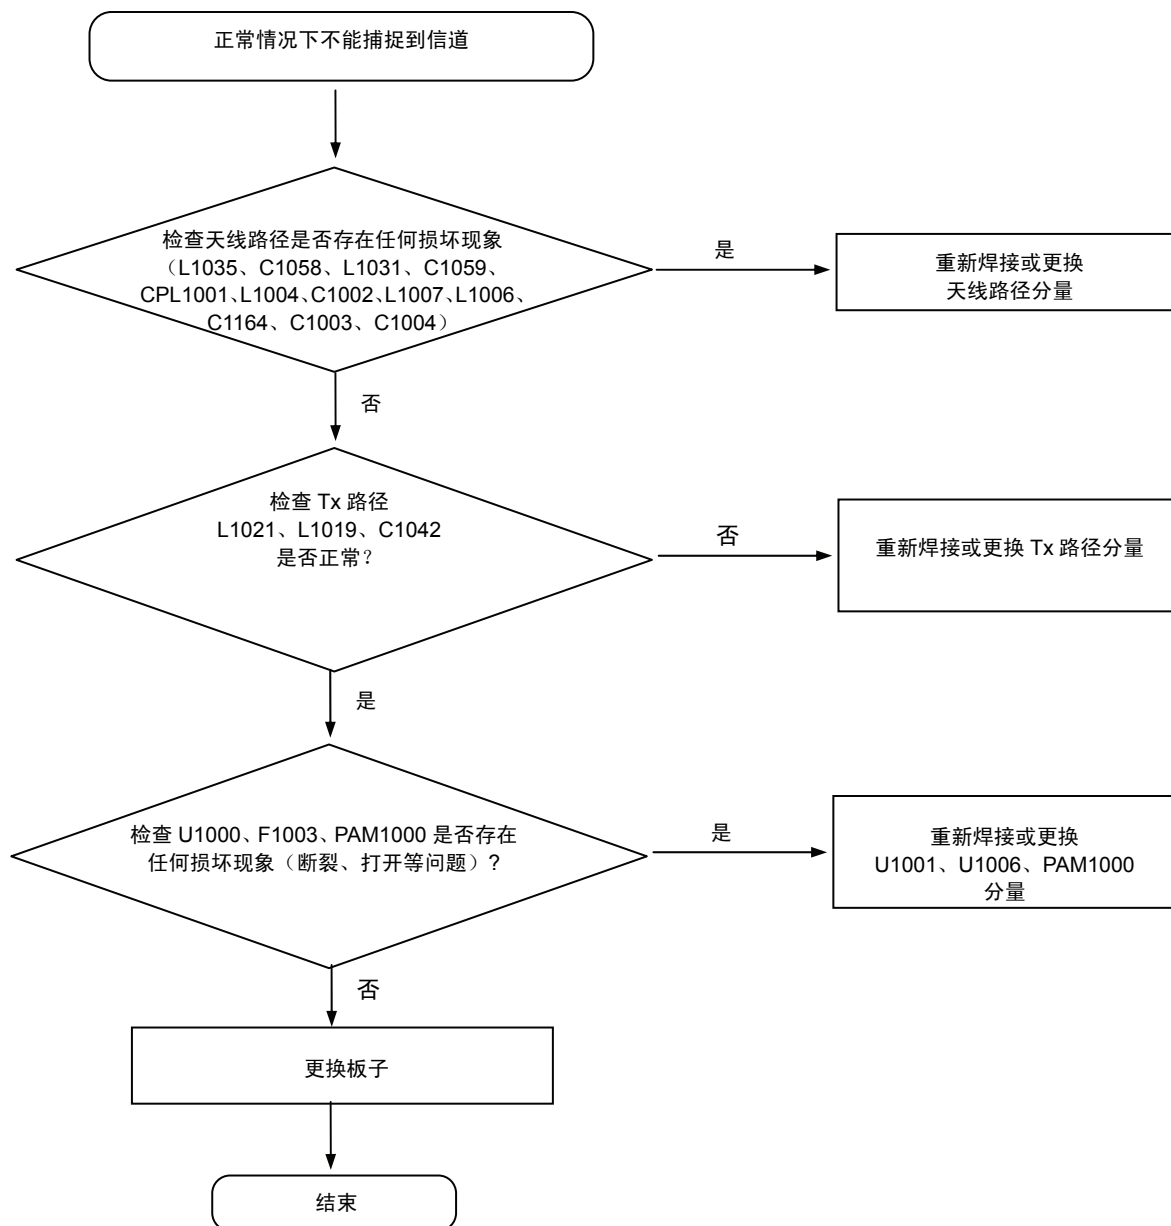


8.3 级维修

8-4-20. WCDMA1900 TX

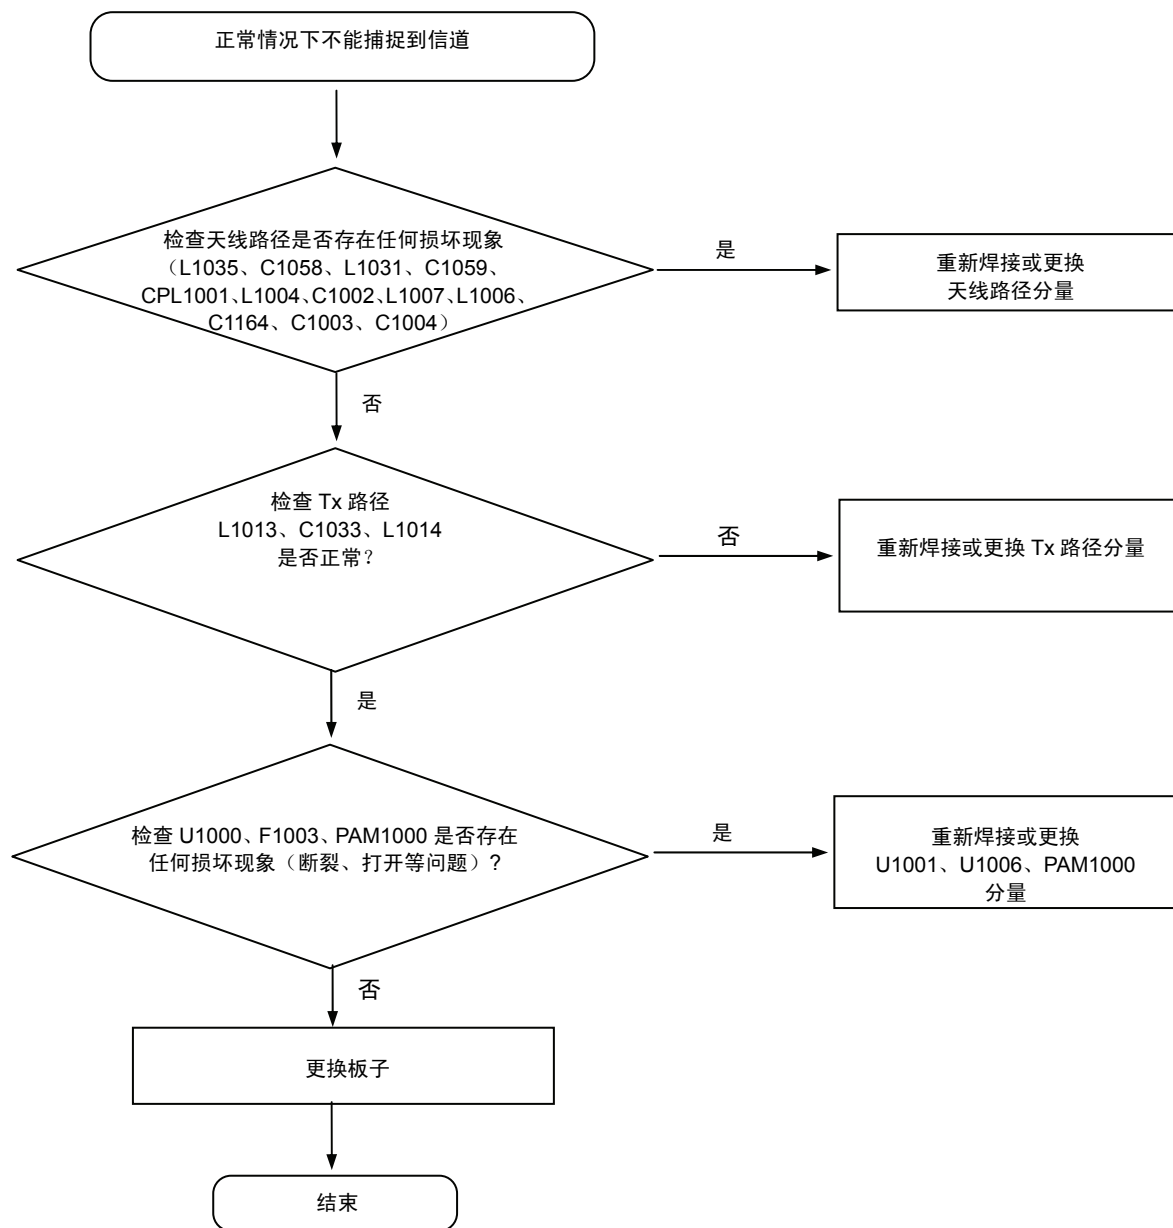


8.3 级维修

8-4-21. LTE B7 TX

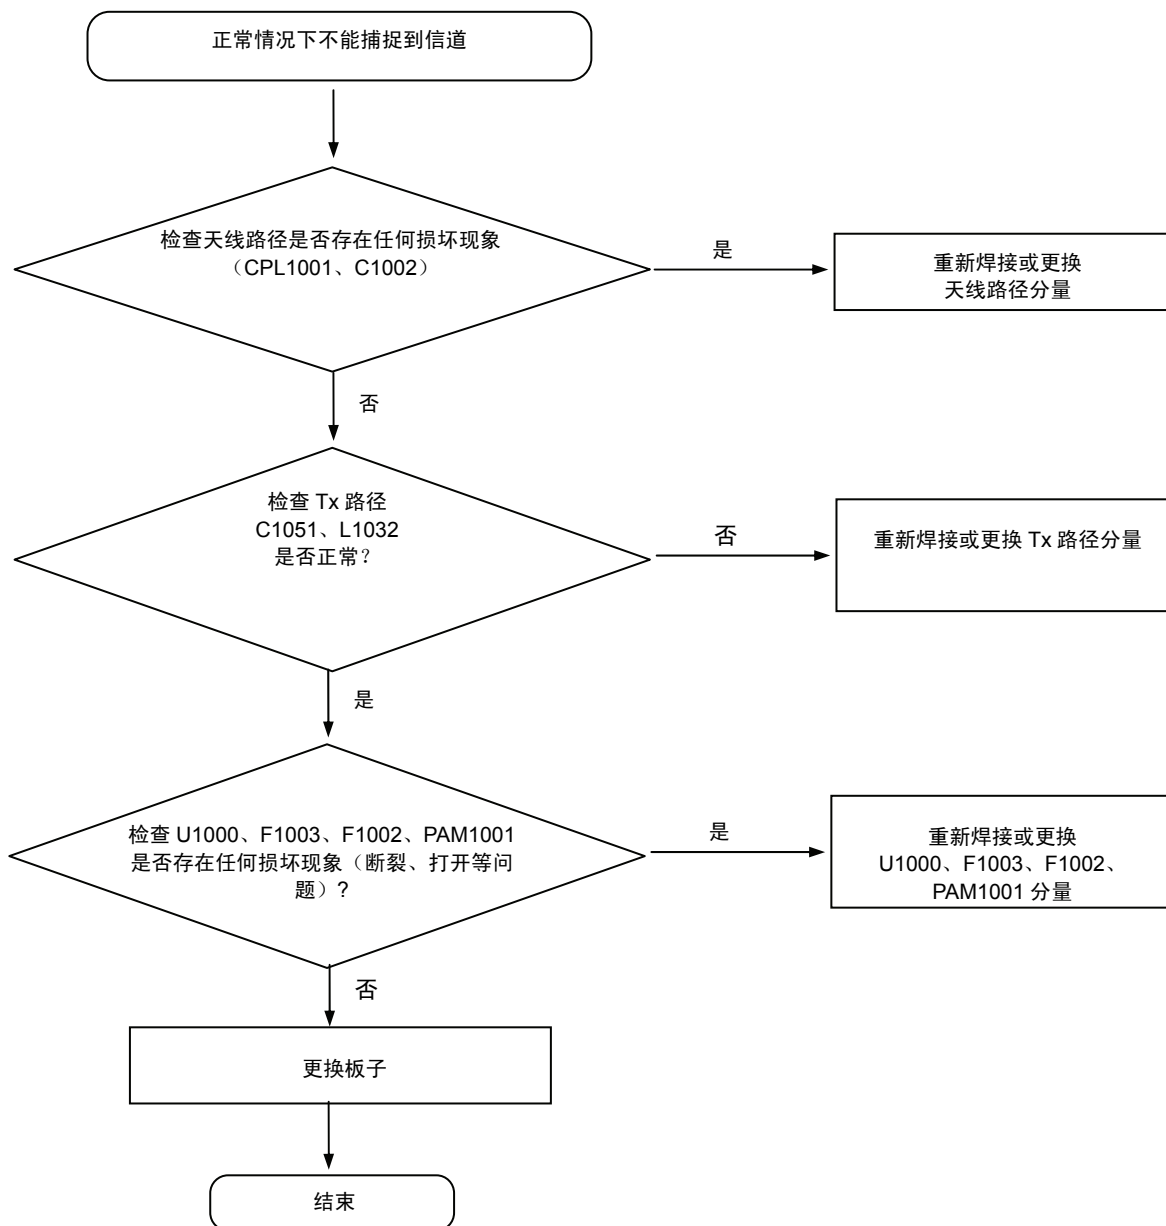


8.3 级维修

8-4-22. TD-SCDMA B38 / B41 TX

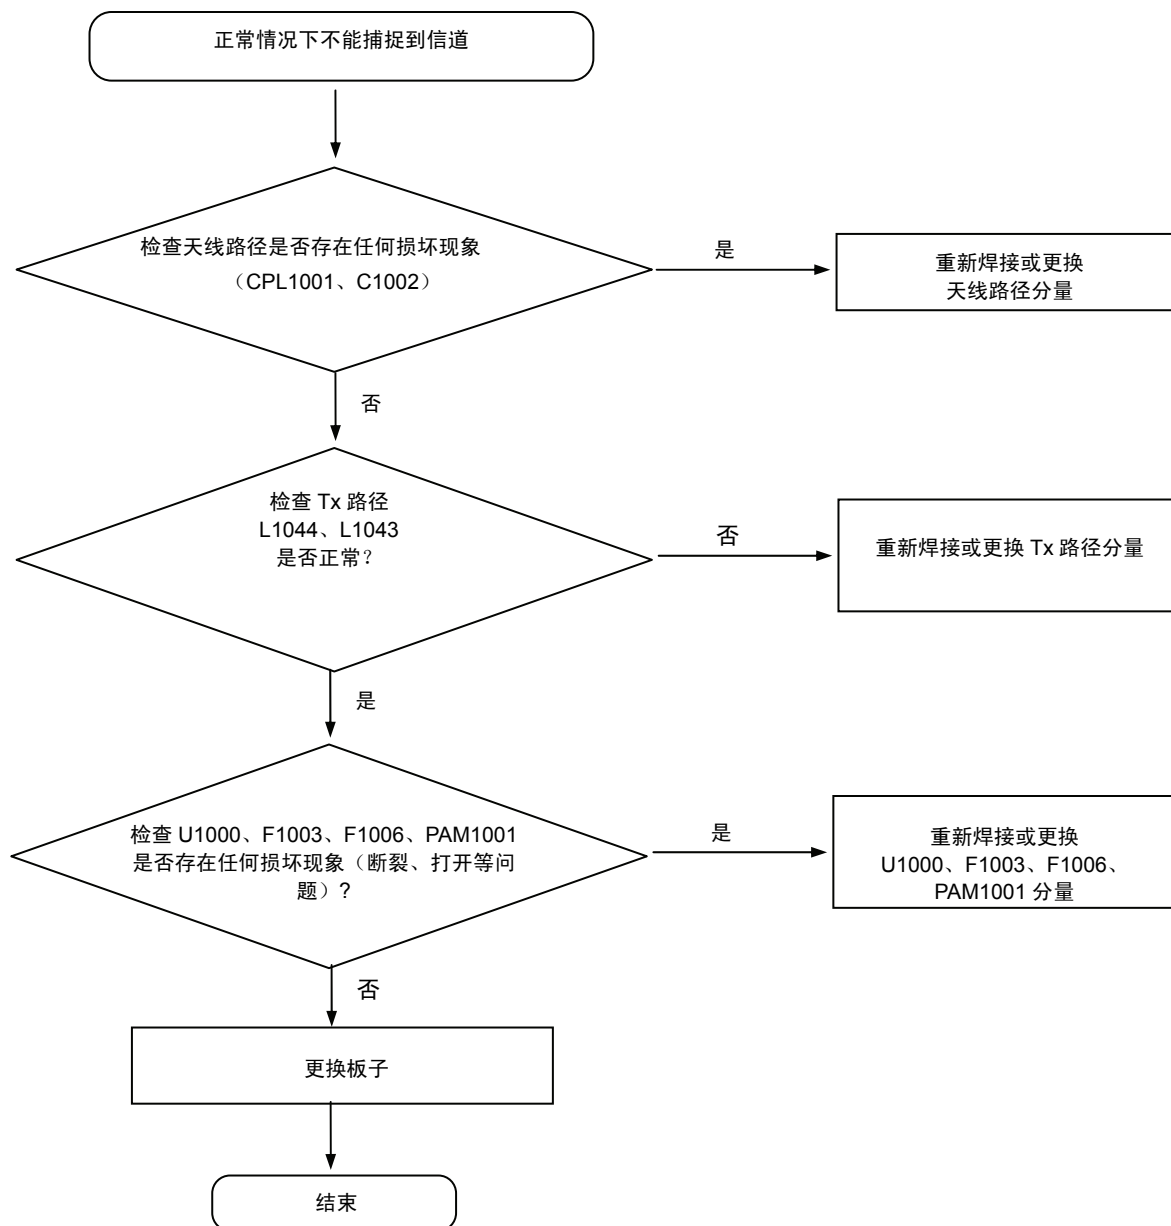


8.3 级维修

8-4-23. WCDMA 5 / CDMA BC0 TX

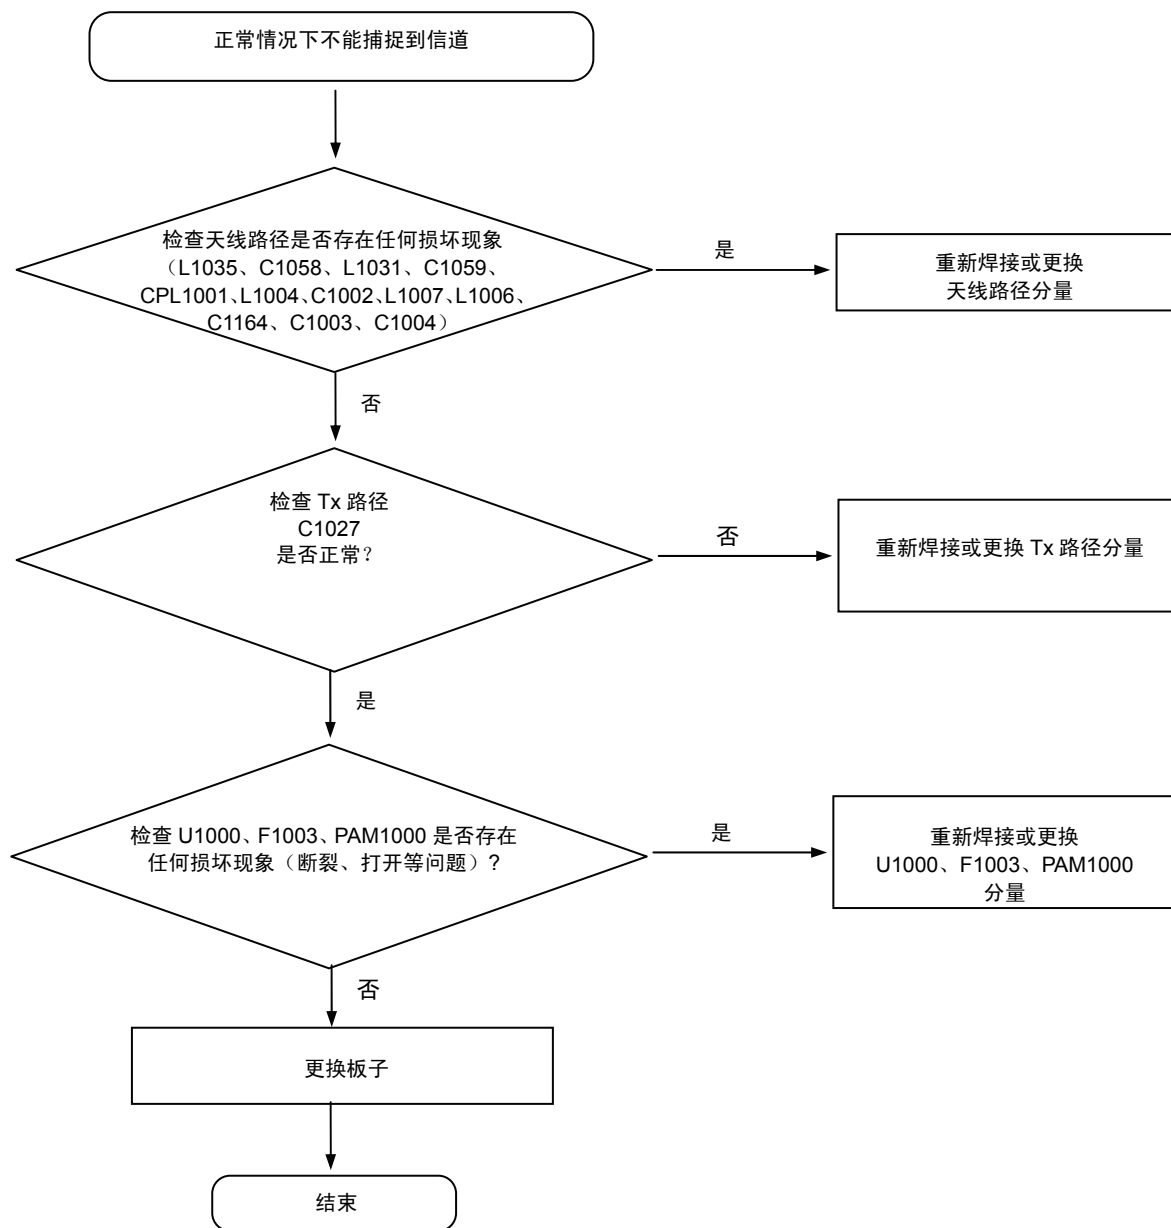


8.3 级维修

8-4-24. LTE B40 TX

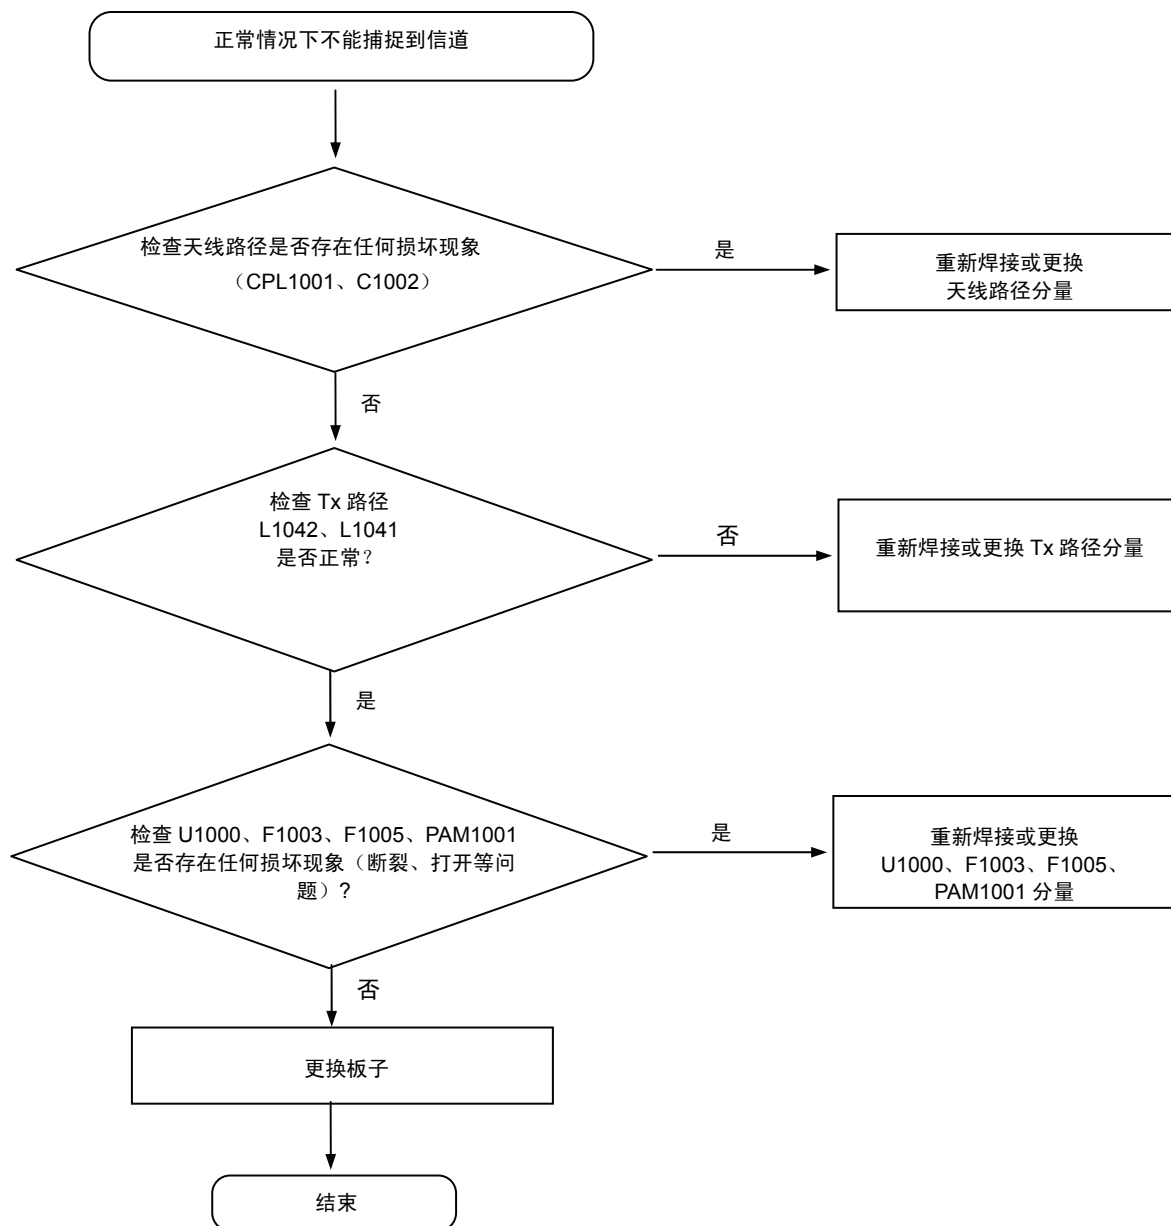


8.3 级维修

8-4-25. WCDMA 8 TX

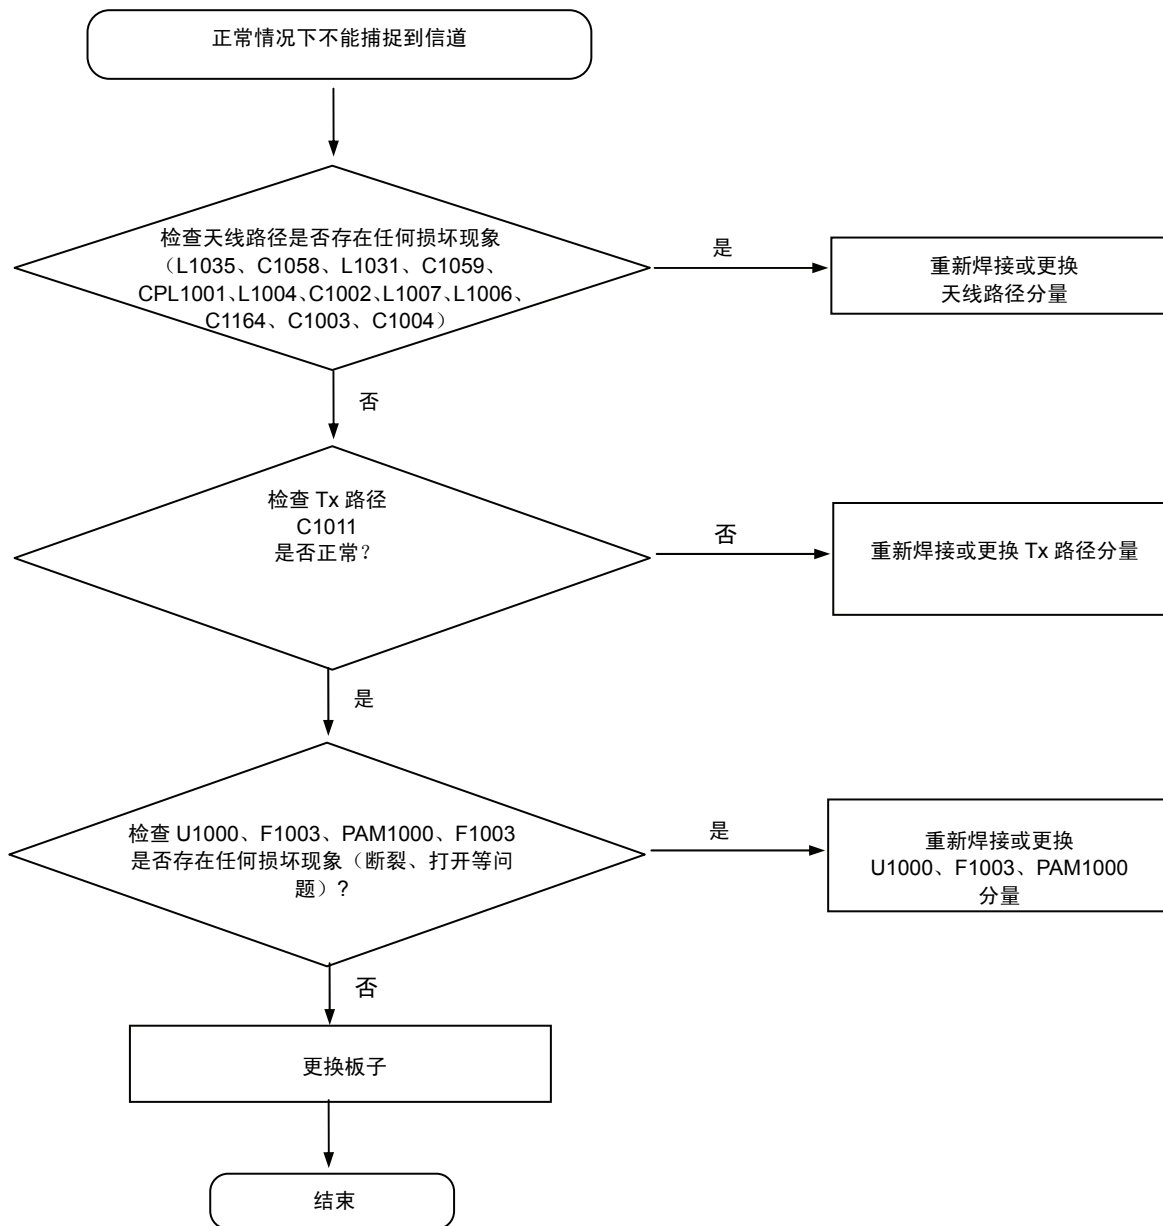


8.3 级维修

8-4-26. BT/WLAN

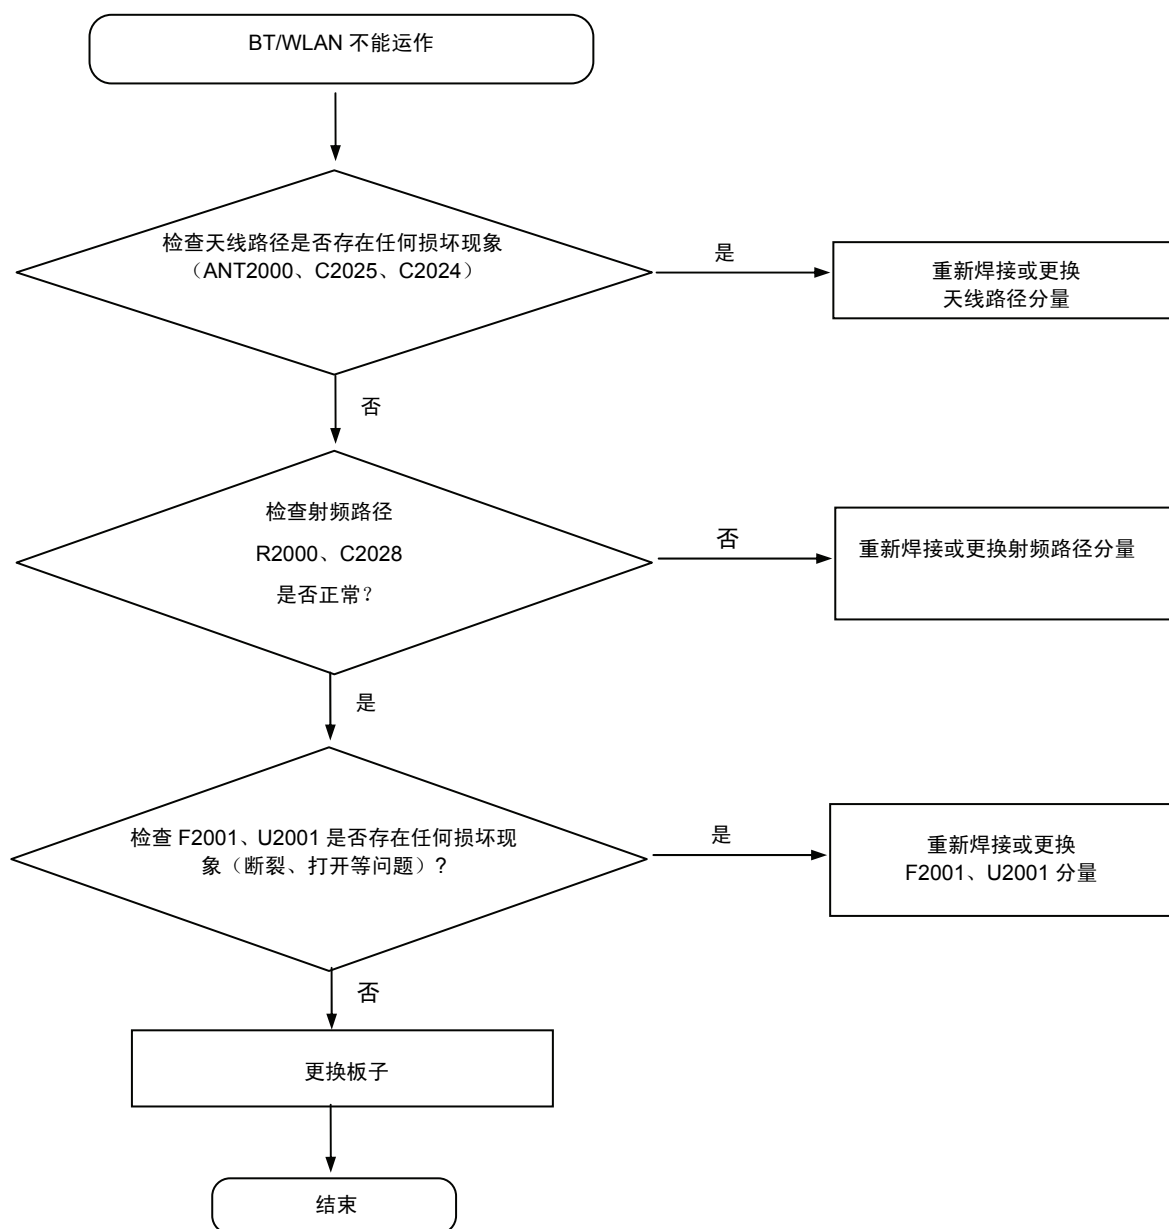


8.3 级维修

8-4-27. GPS

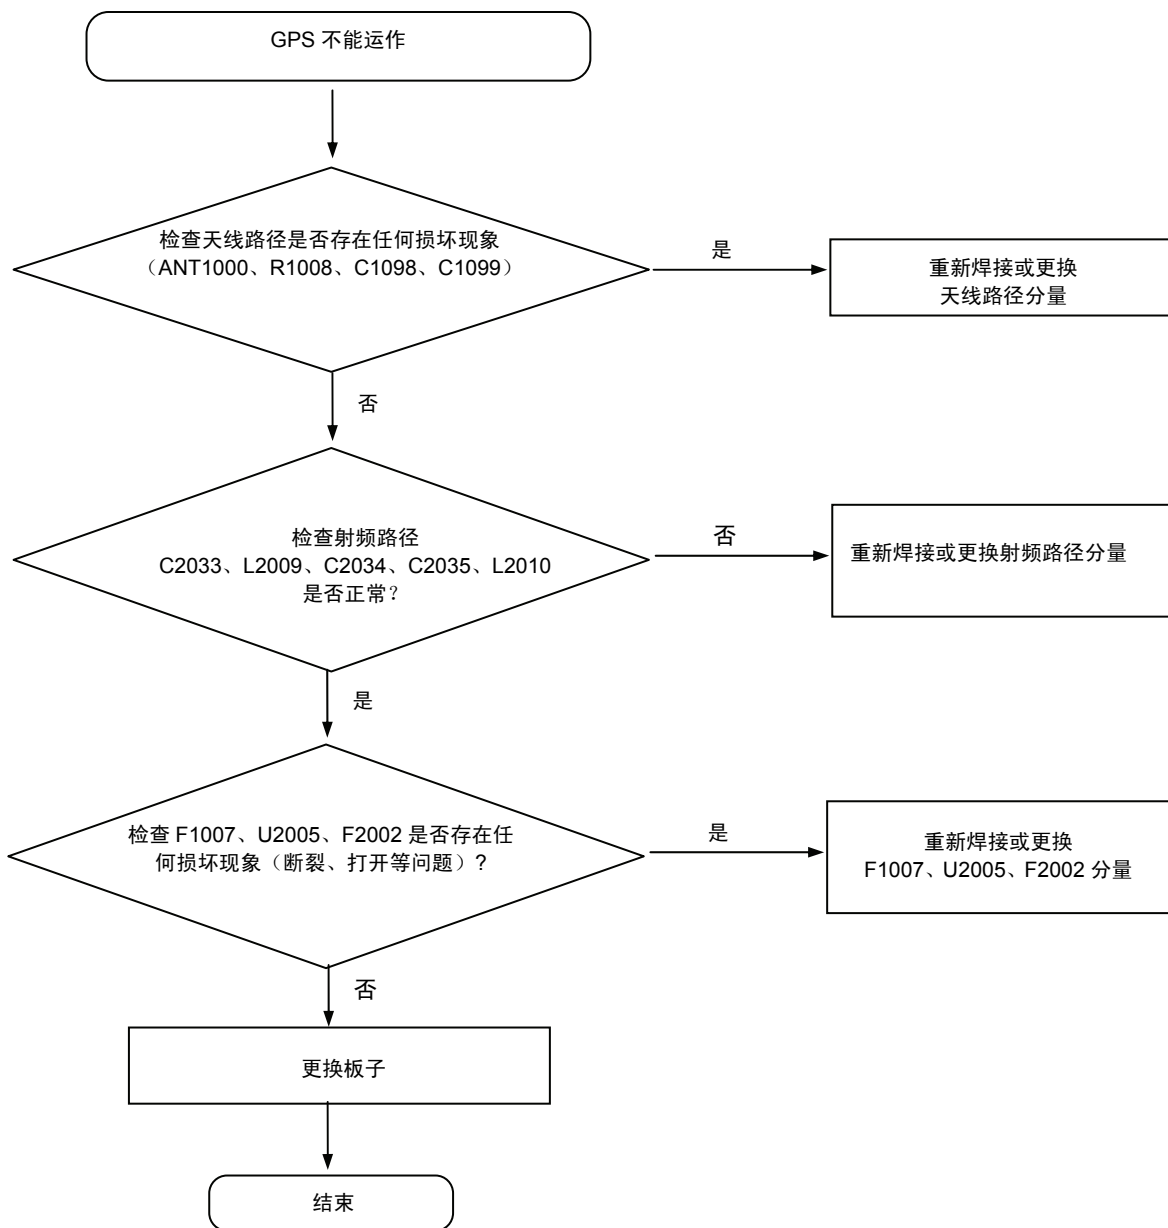

8.3 级维修

8-4-28. FM 收音机

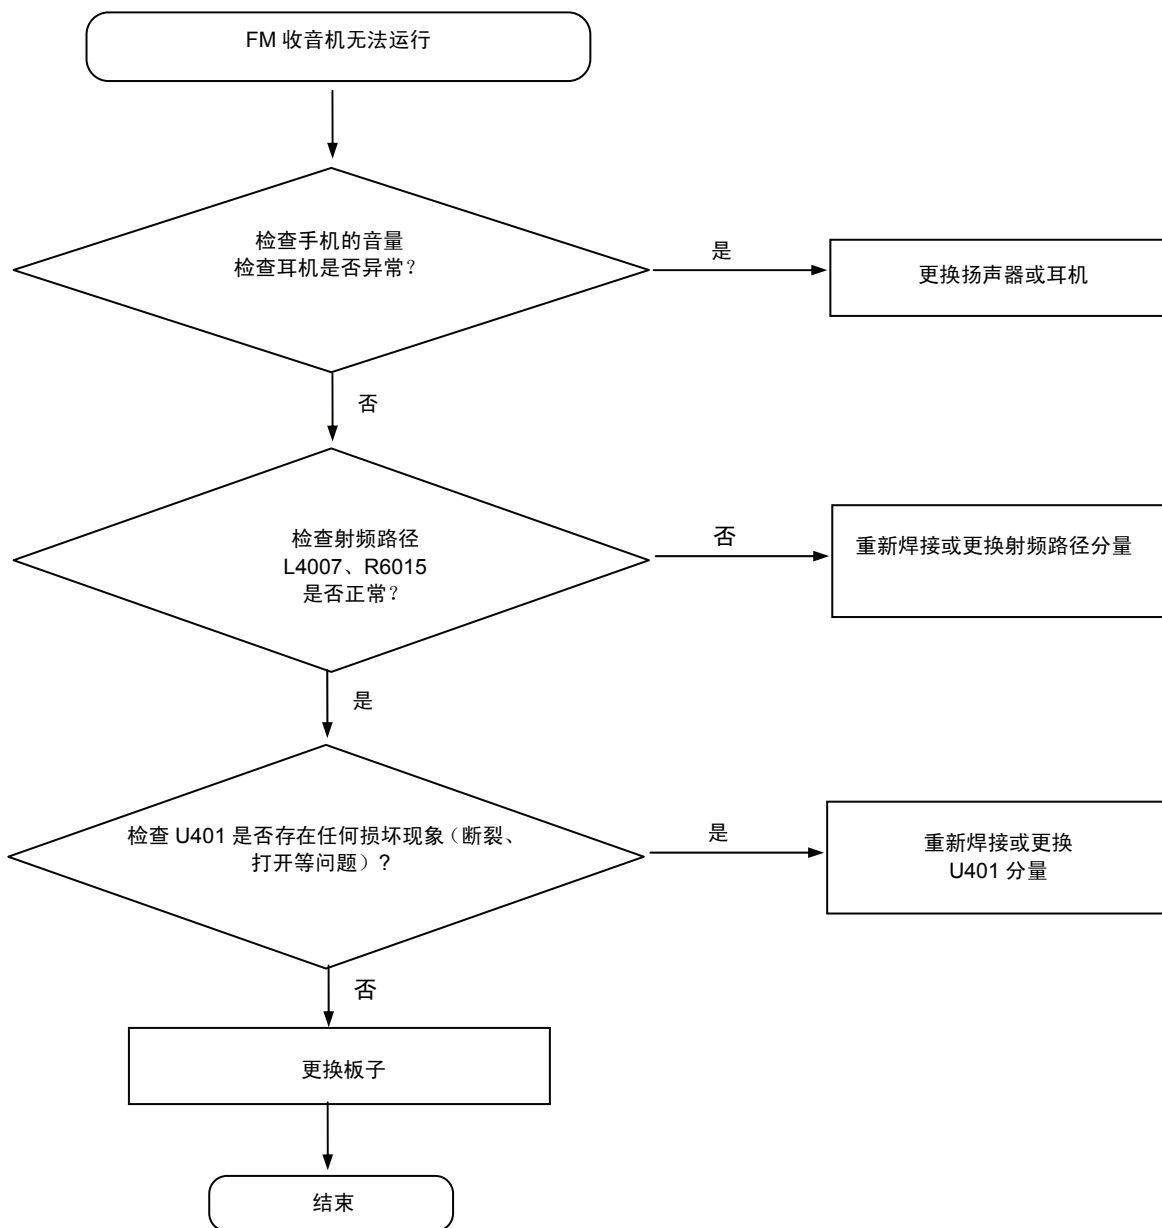

8.3 级维修

8-5. 维修示意图

-故障处（顶部视图）

UCP3000（AP）

