



8. Level 3 Repair

8-1. Components Layout

MAIN PBA (TOP SIDE)

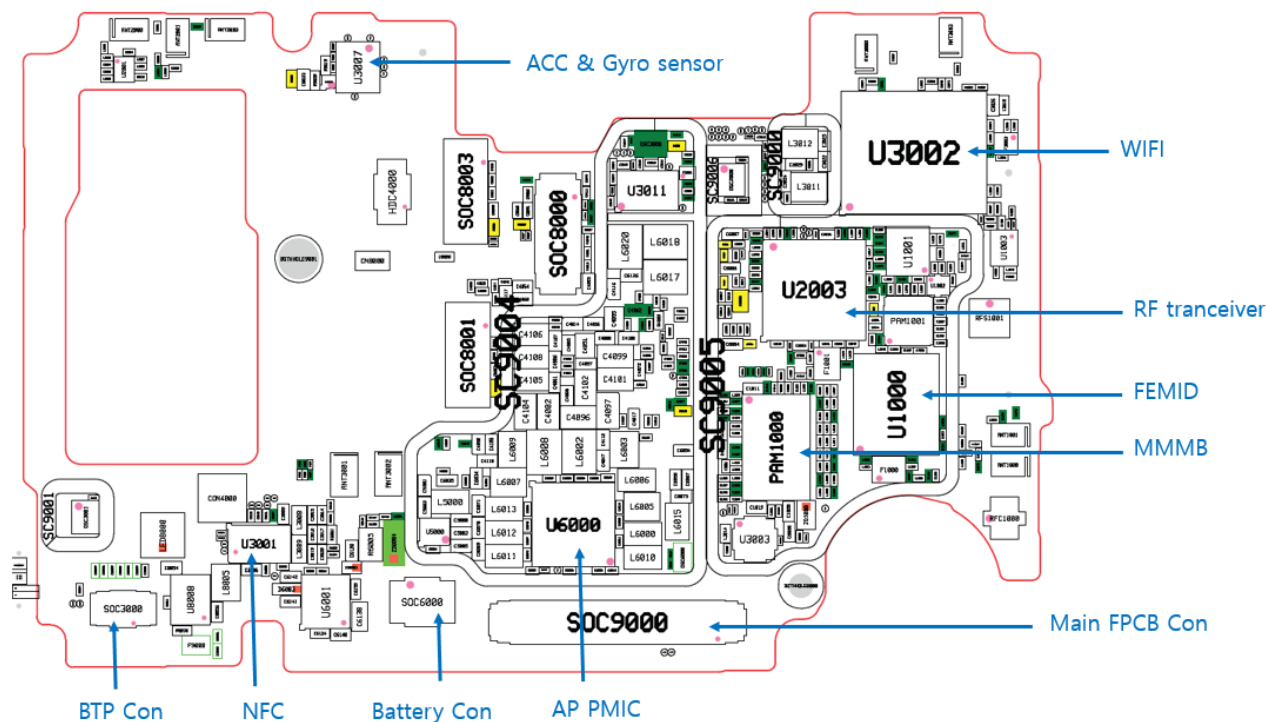


MAIN PBA (BOTTOM SIDE)

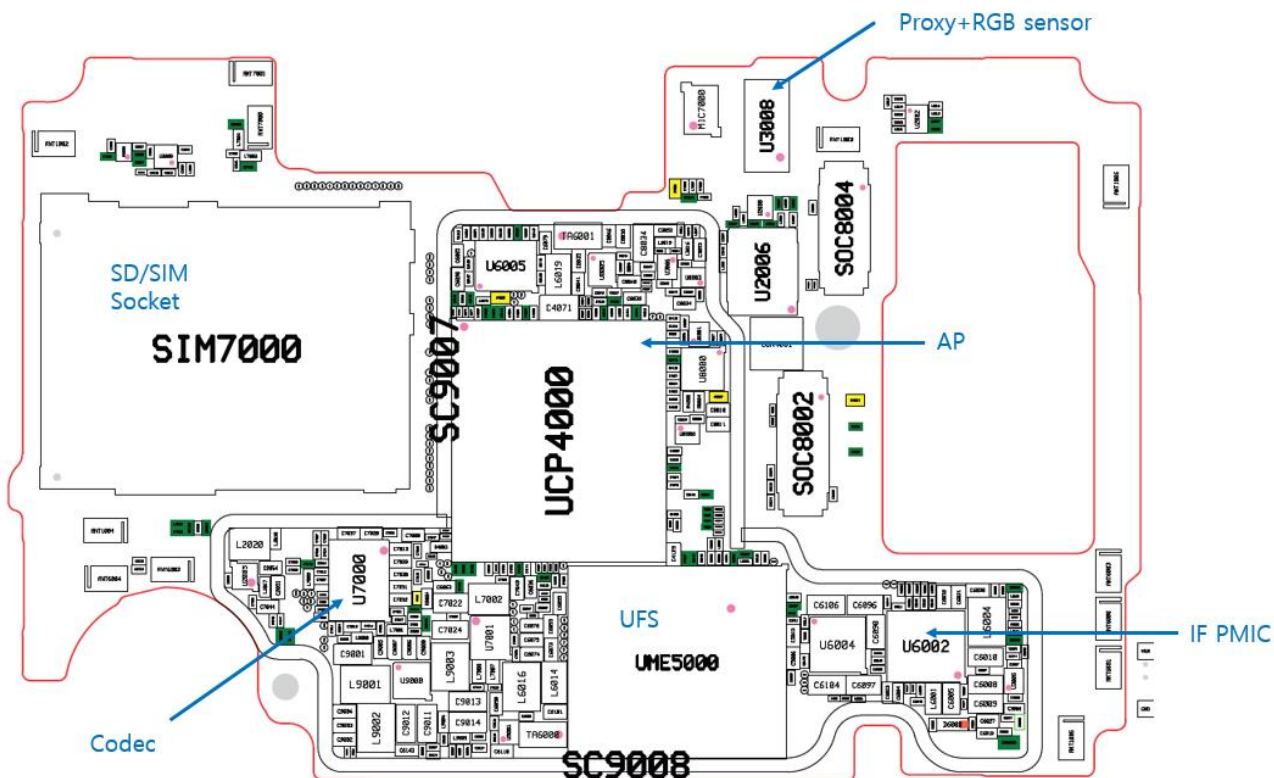


8. Level 3 Repair

SUB PBA (TOP SIDE)

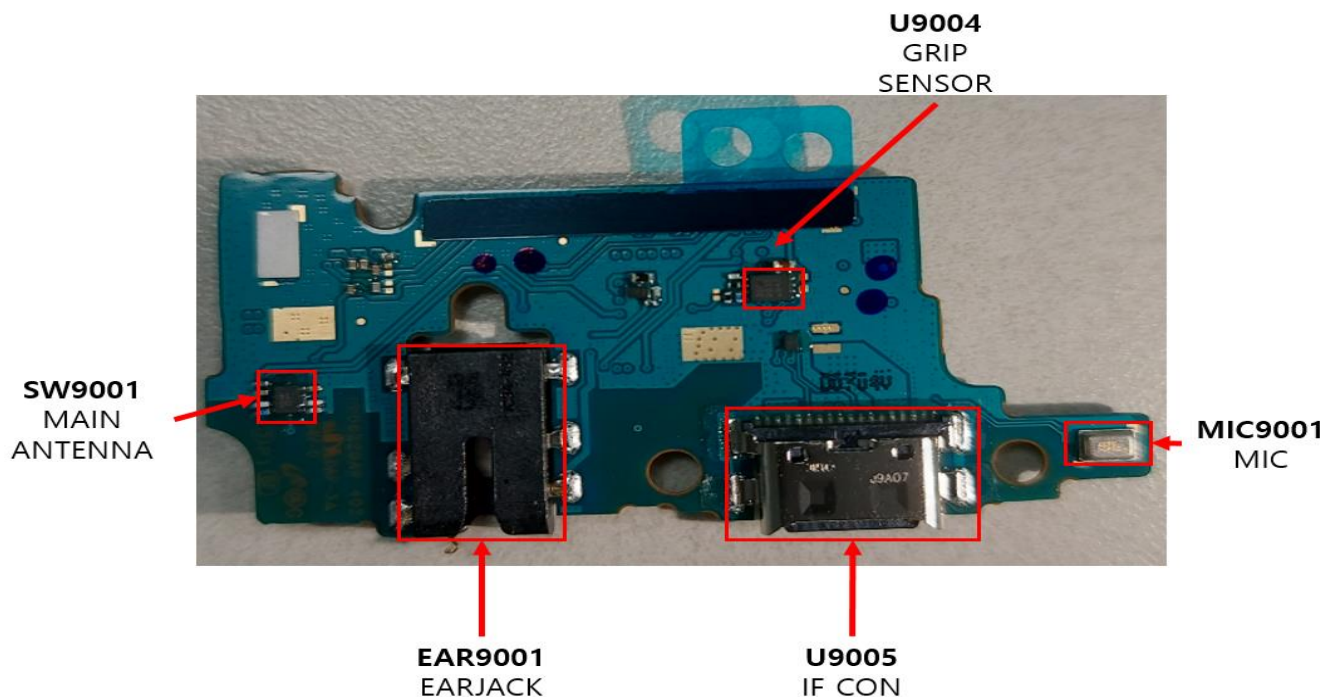


SUB PBA (BOTTOM SIDE)

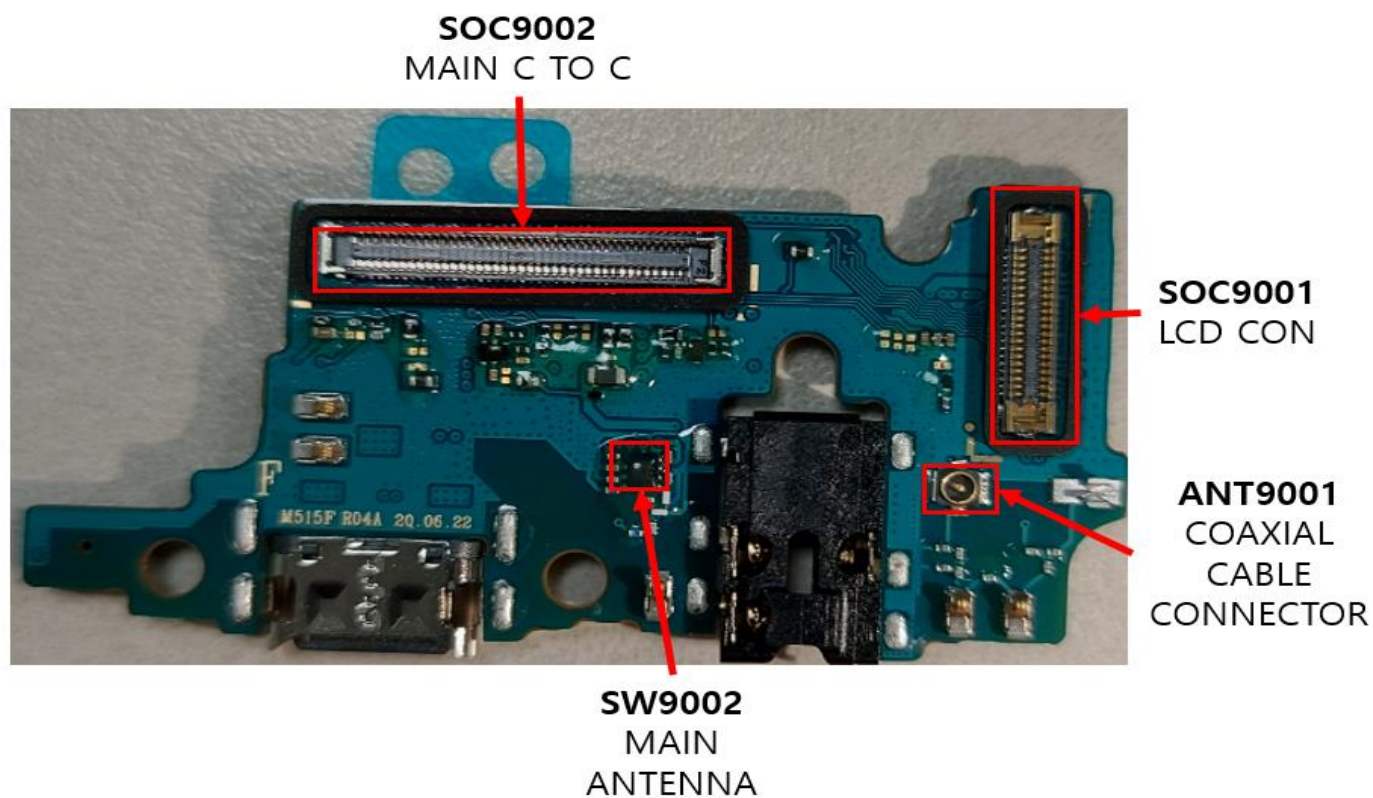

SM-E625F BlockDiagram

SM-E625F/M625F
Common

Confidential

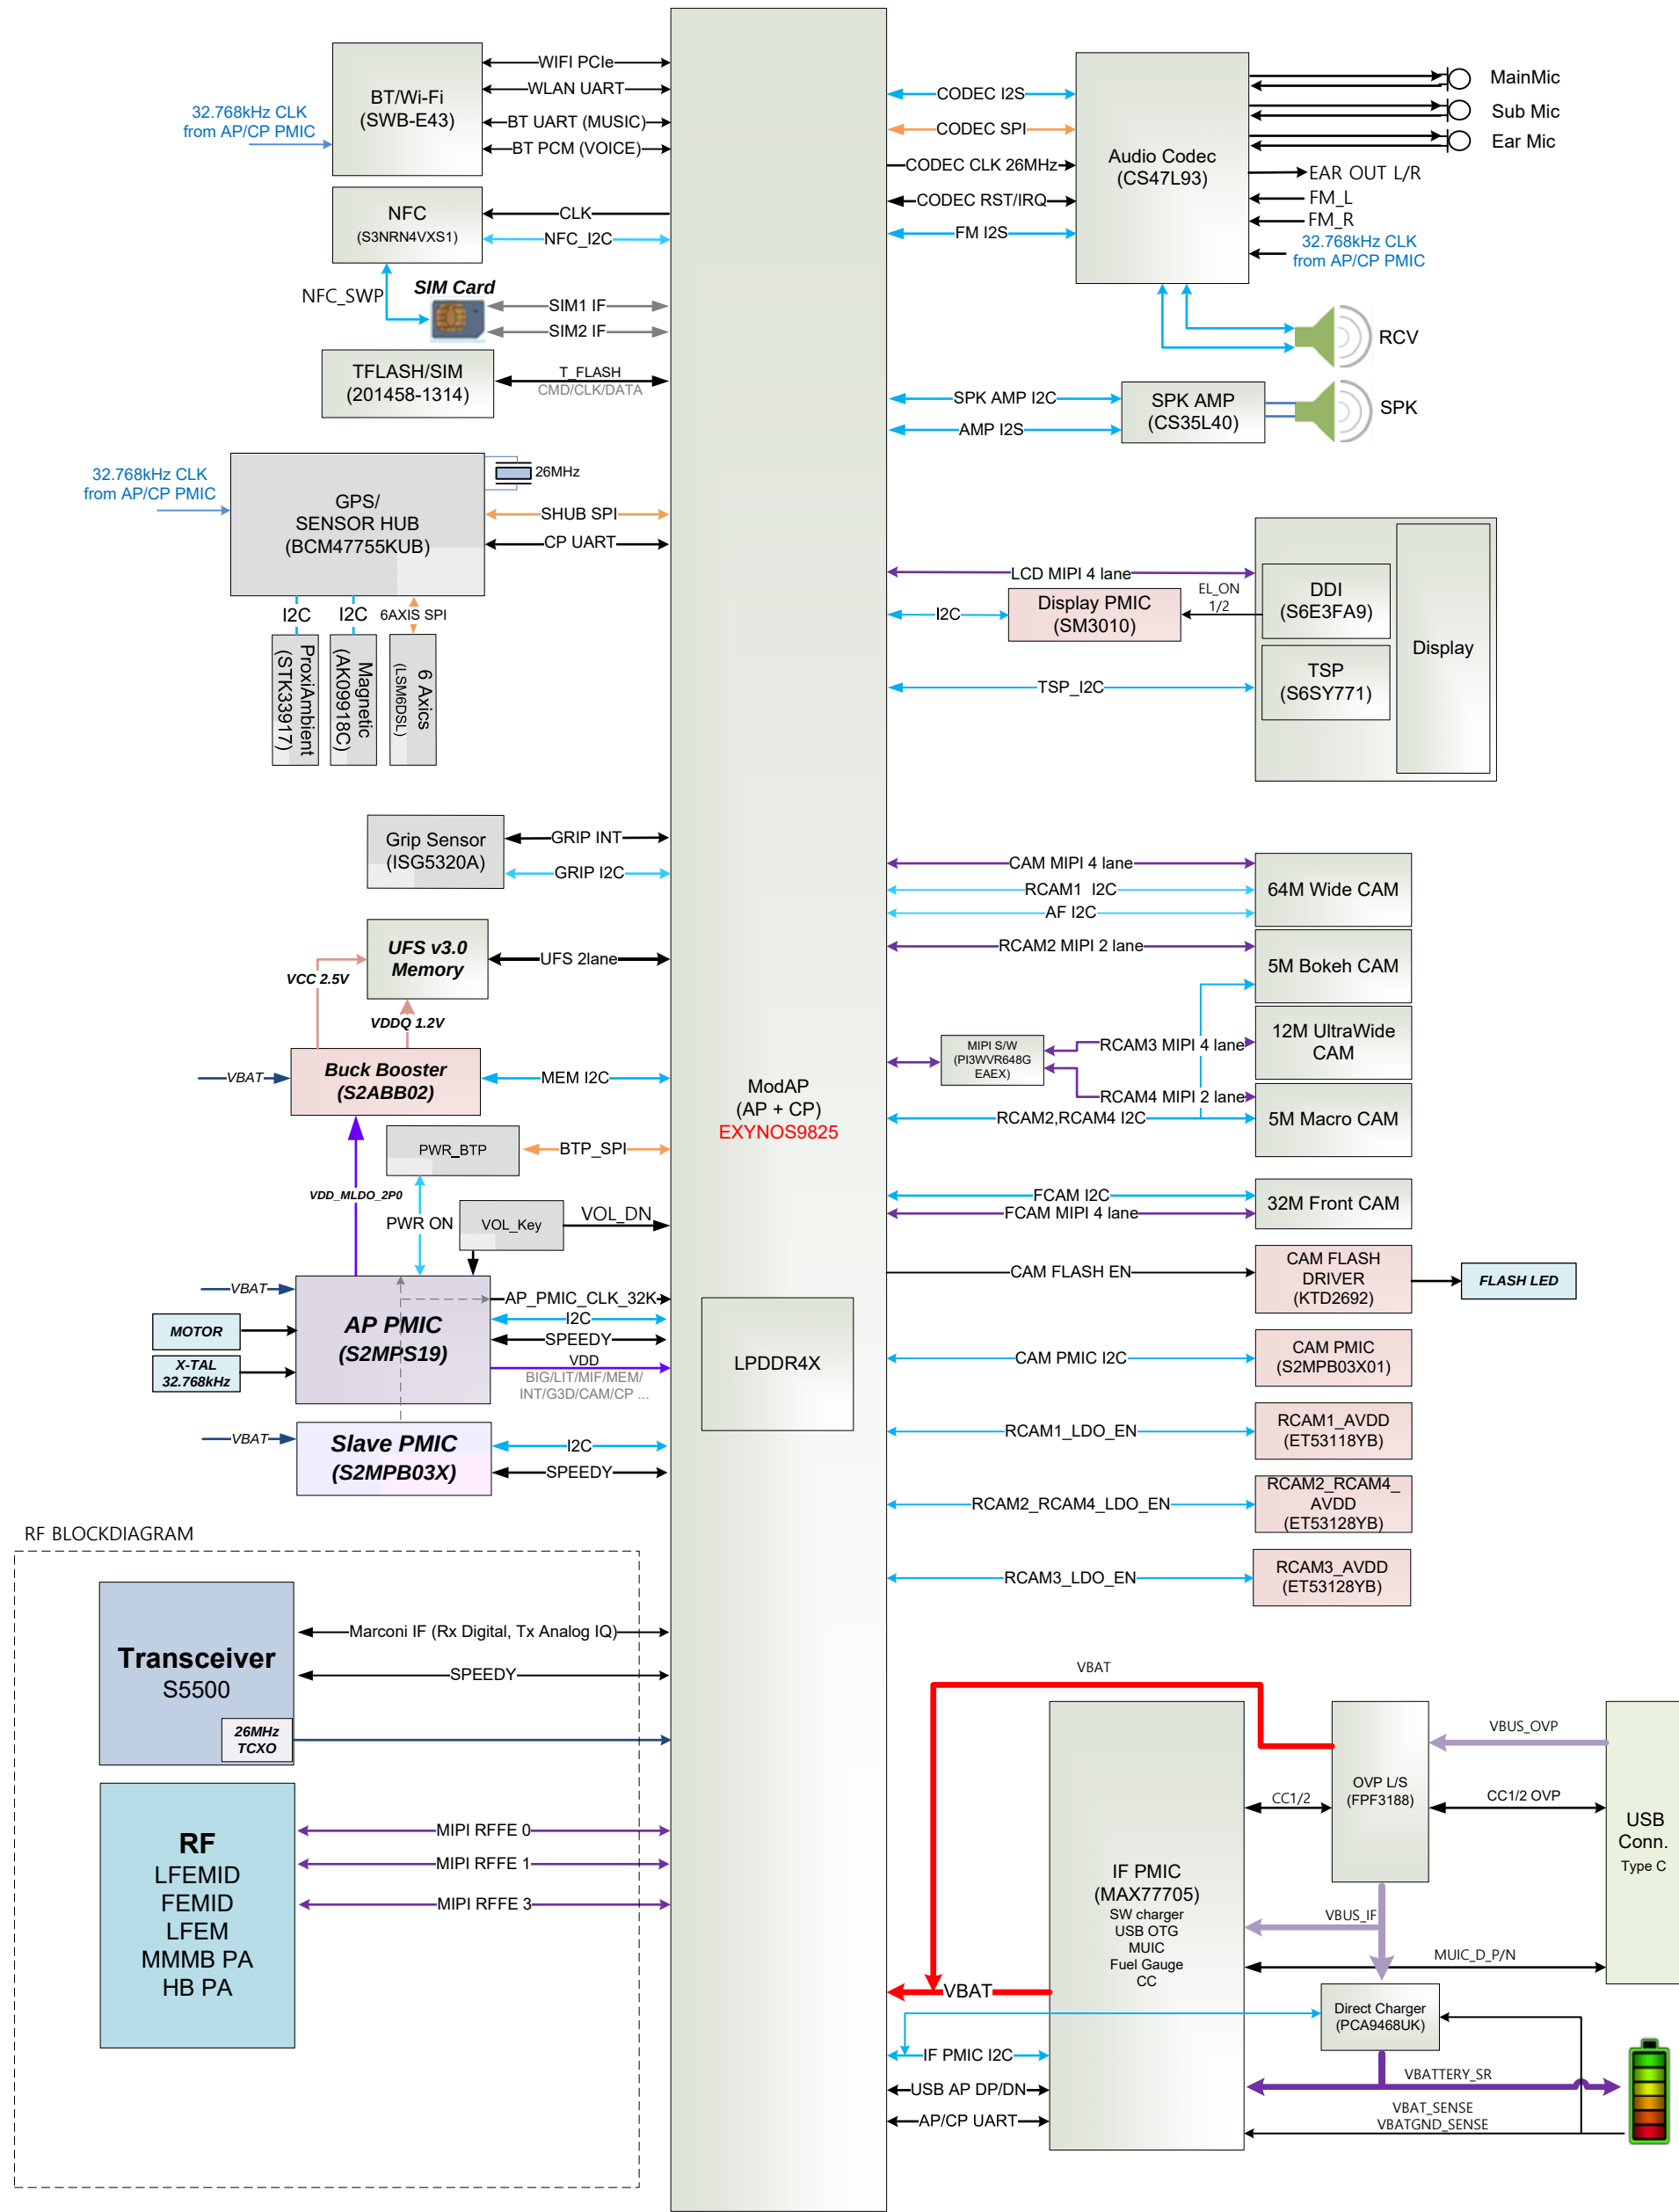

SM-E625F/M625F
Common

SIM7000

SC9007

UCP4000

UME5000

SC9008

SOC8002

SOC8004

U3008

U2006

CON4001

U7000

U6002

U6004

L6004

PM77000

PM77000

PM77002

U3008

PM77003

PM77006

PM77004

PM77002

PM77004

PM77003

PM77003


PM77003

PM77003

PM77003

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

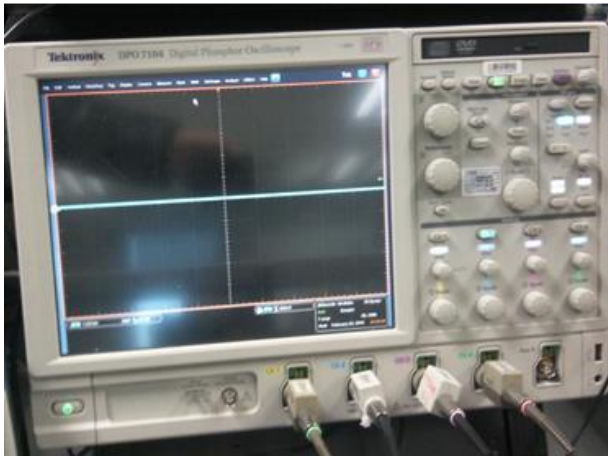

Oscilloscope




Digital Multimeter



Power Supply



+ driver, ESD Safe Tweezer

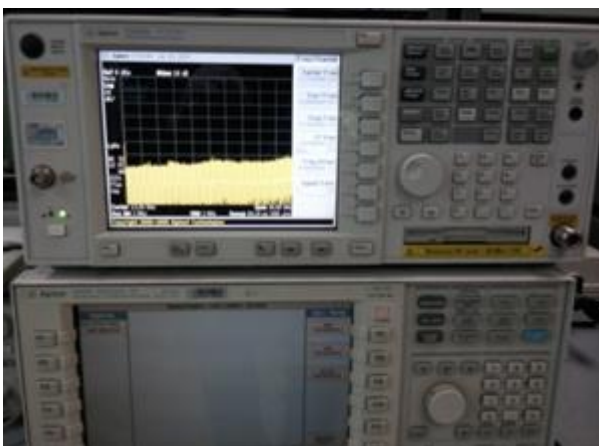


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Power On

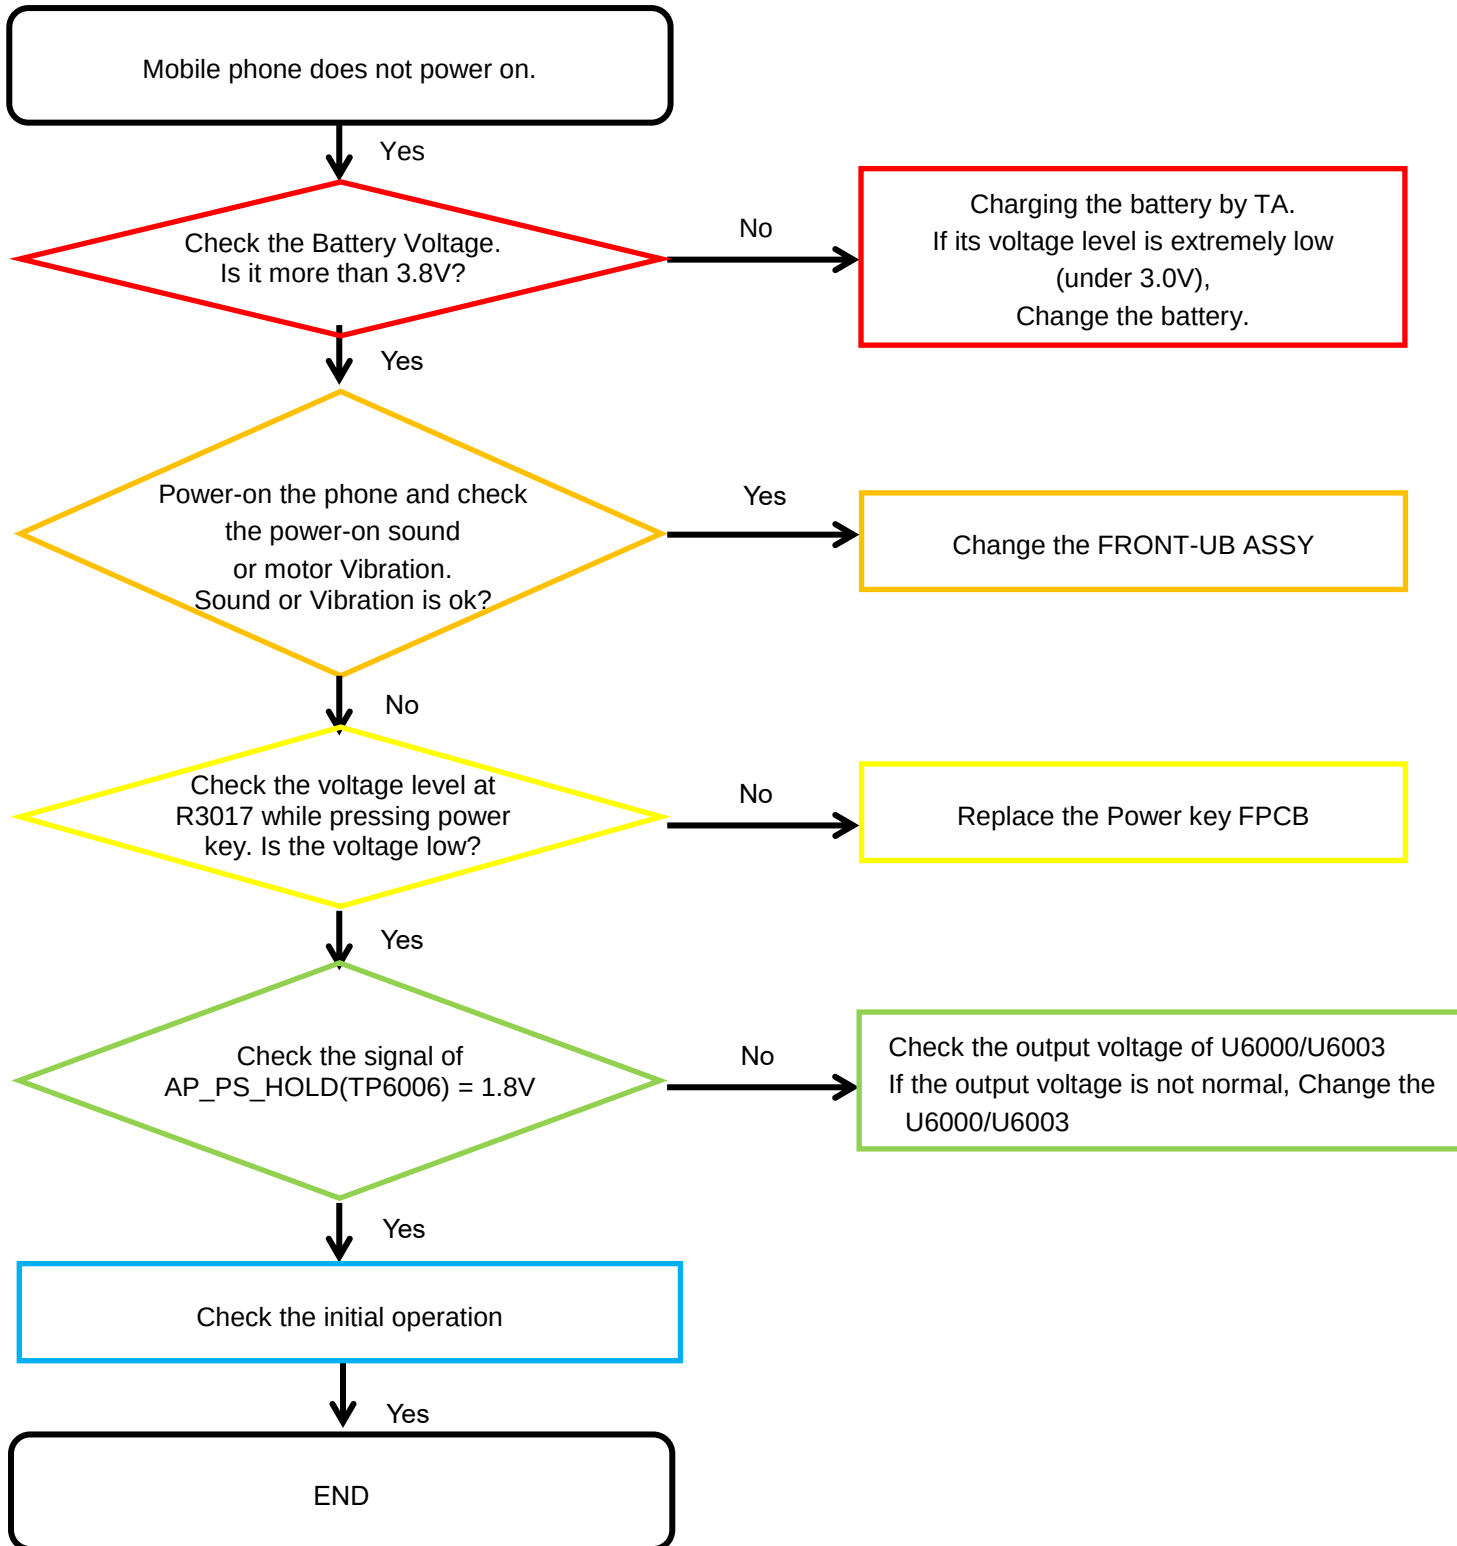


8. Level 3 Repair

8-4-2. Initial

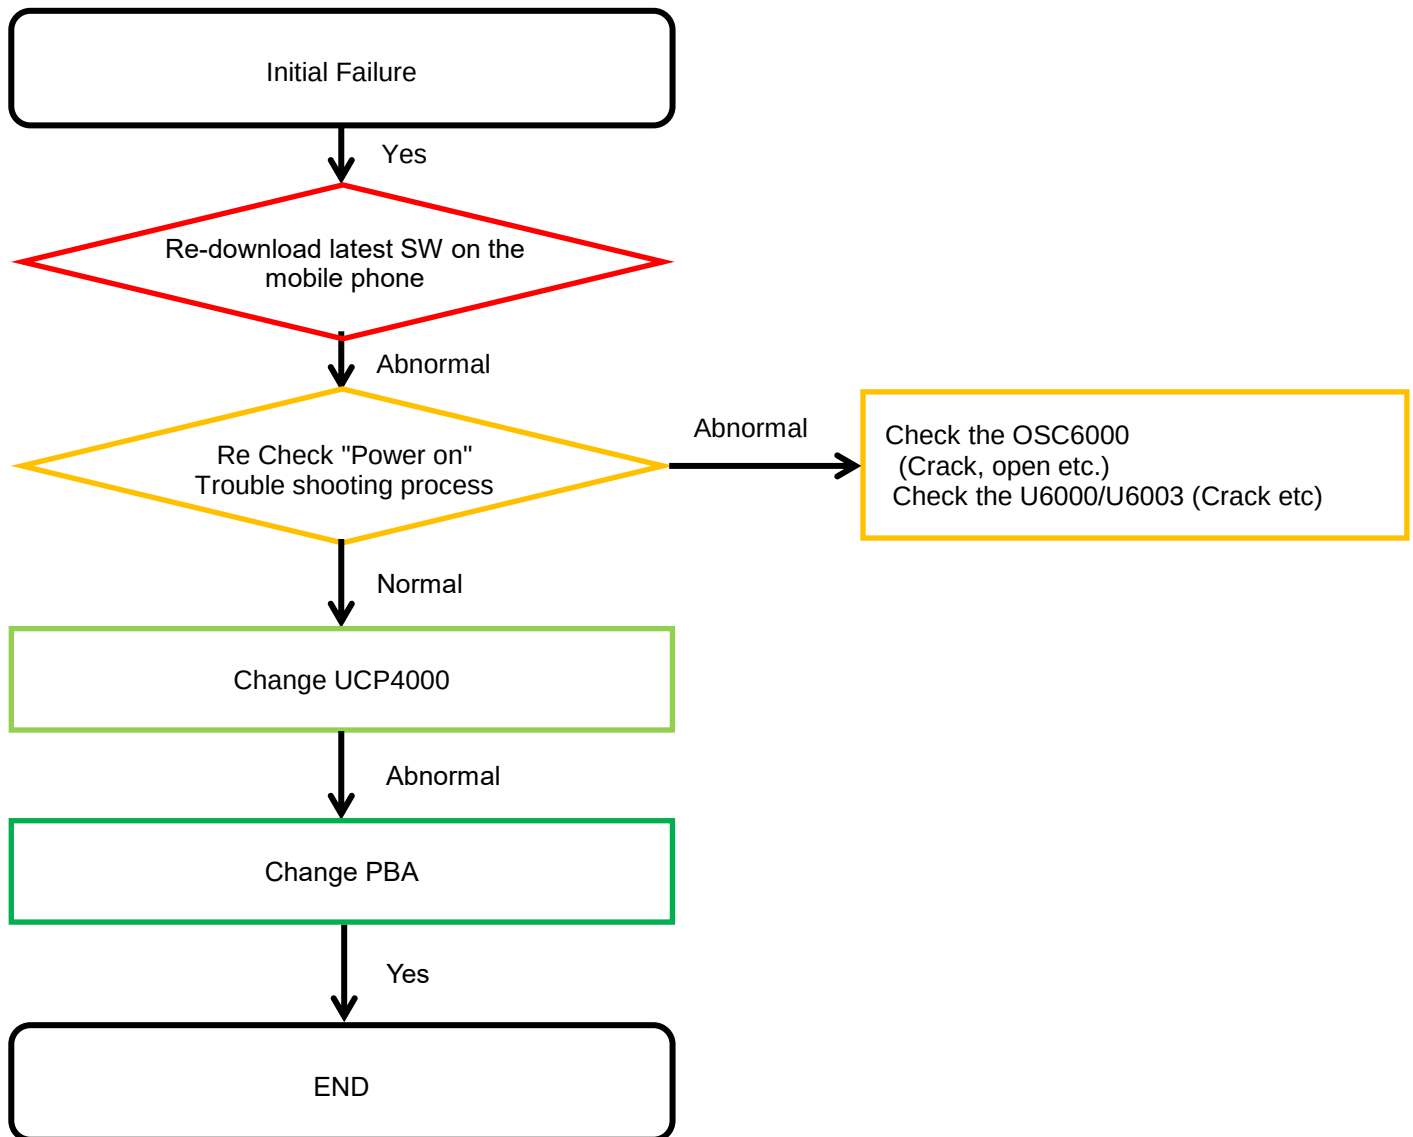


8. Level 3 Repair

8-4-3. No Service

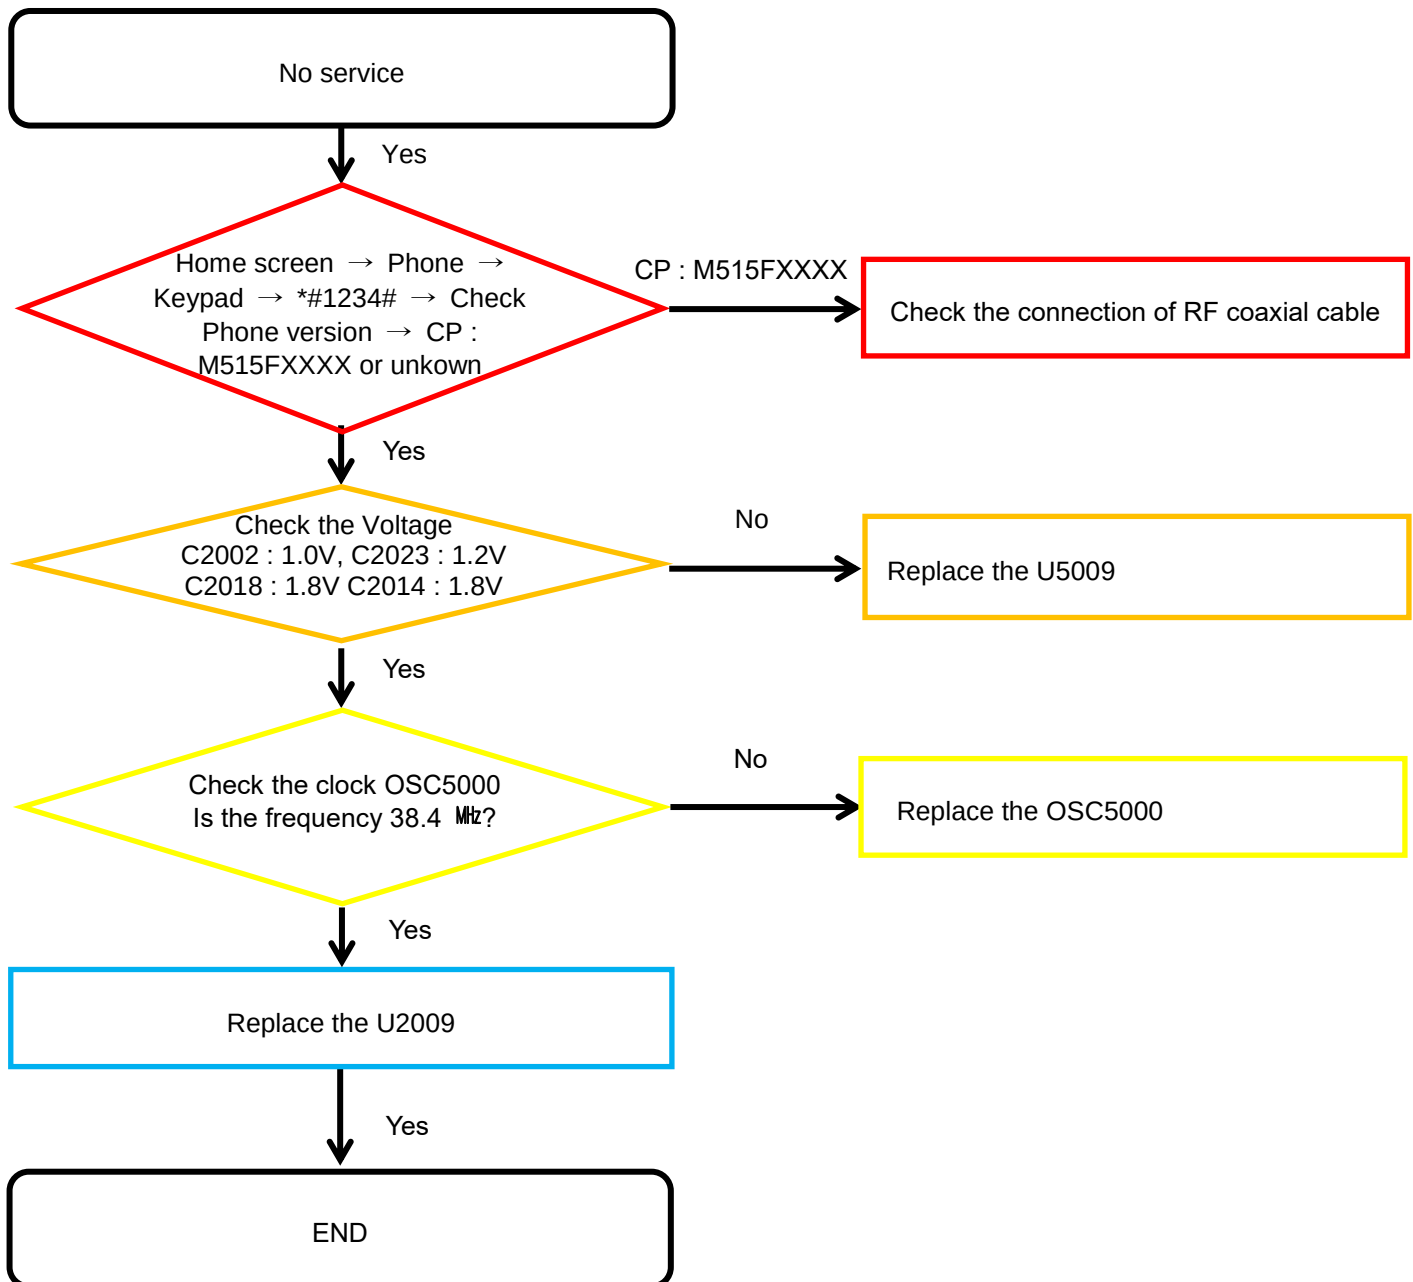


8. Level 3 Repair

8-4-4. SIM Part

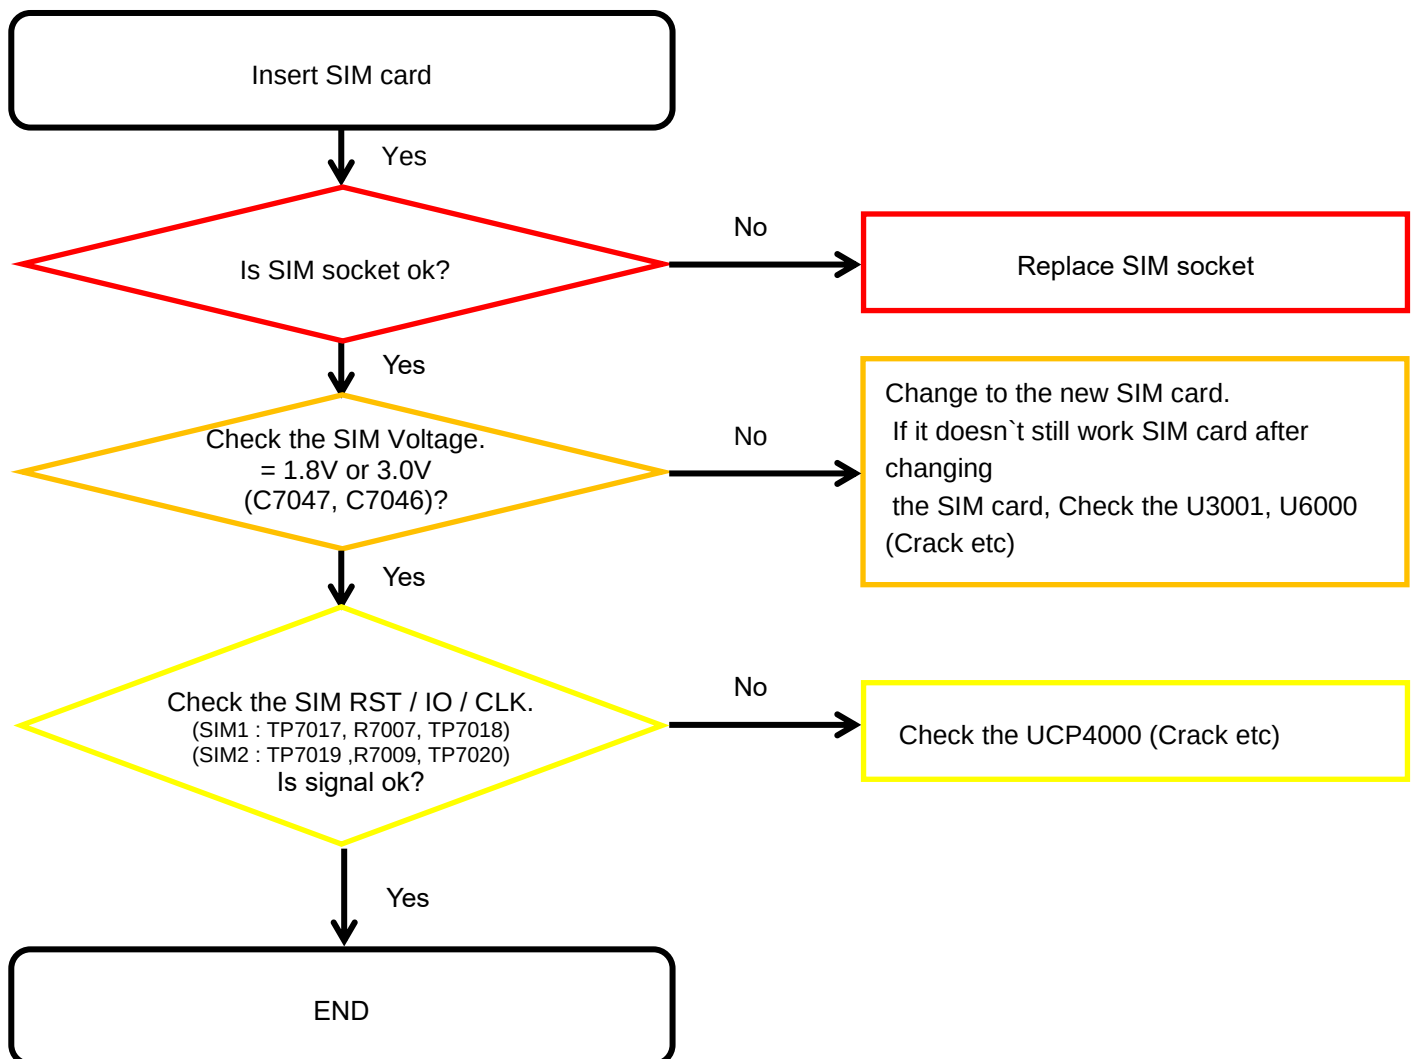


8. Level 3 Repair

8-4-5. T-Flash Part

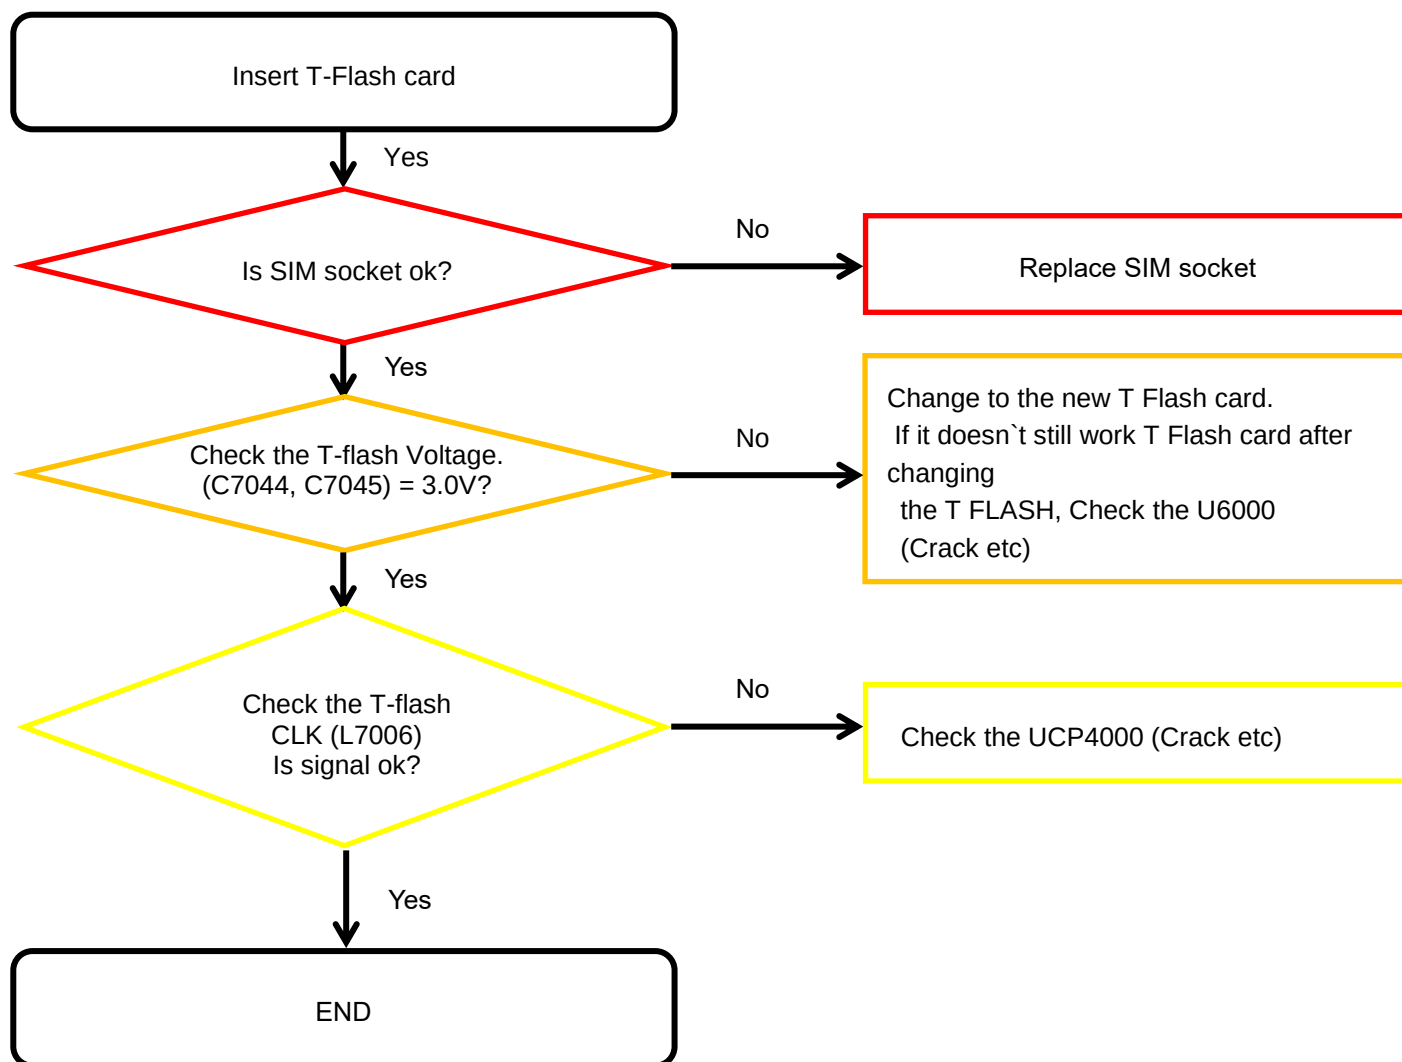


8. Level 3 Repair

8-4-6. Cable Charging Part

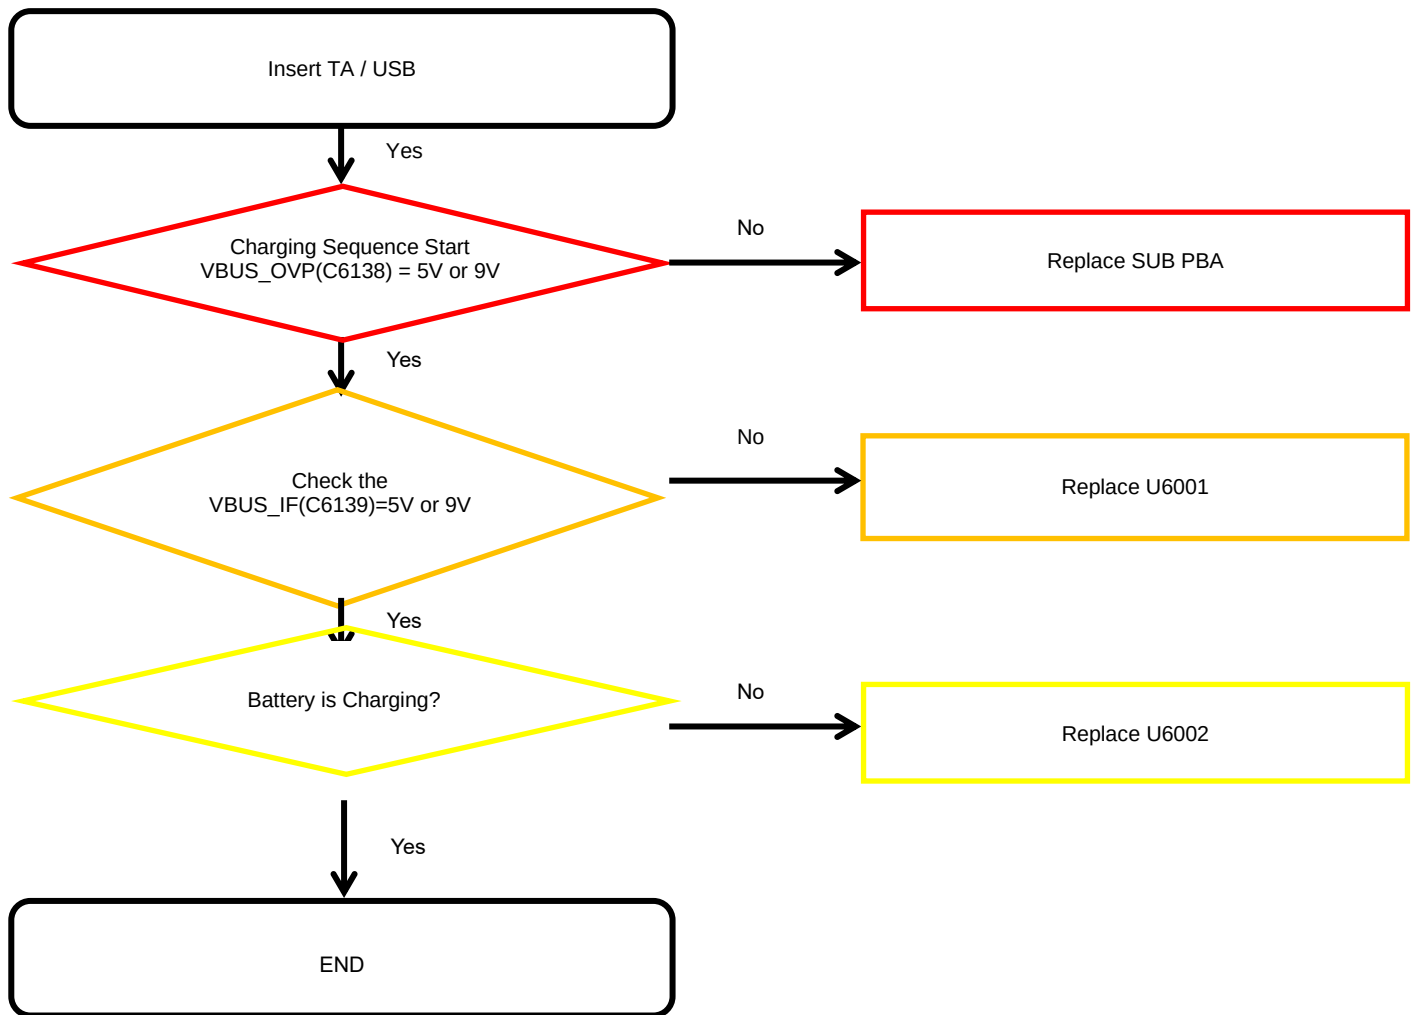


8. Level 3 Repair

8-4-7. OTG

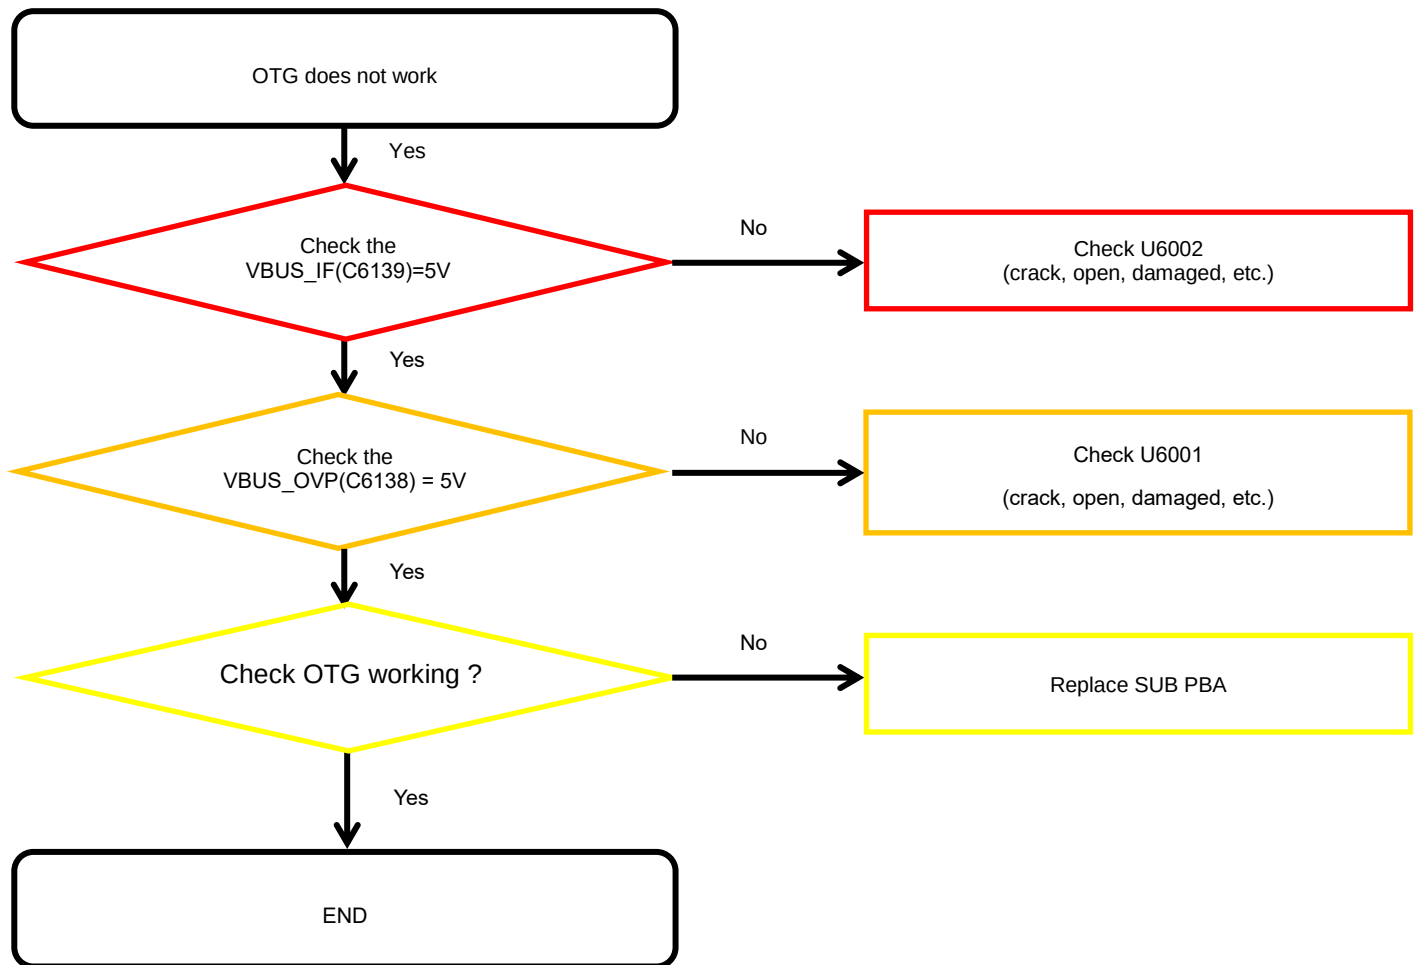


8. Level 3 Repair

8-4-8-1. Magnetic Sensor

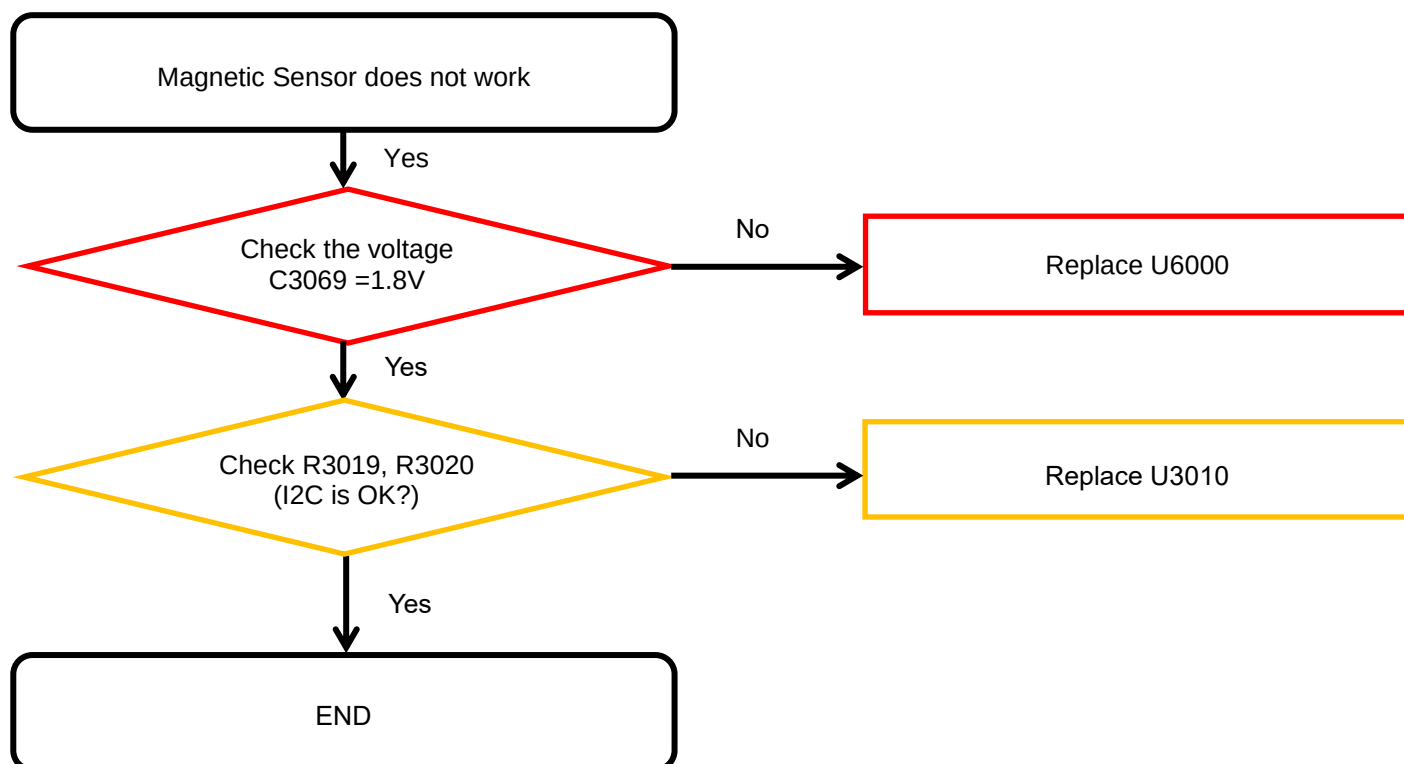


8. Level 3 Repair

8-4-8-2. 6Axis Sensor

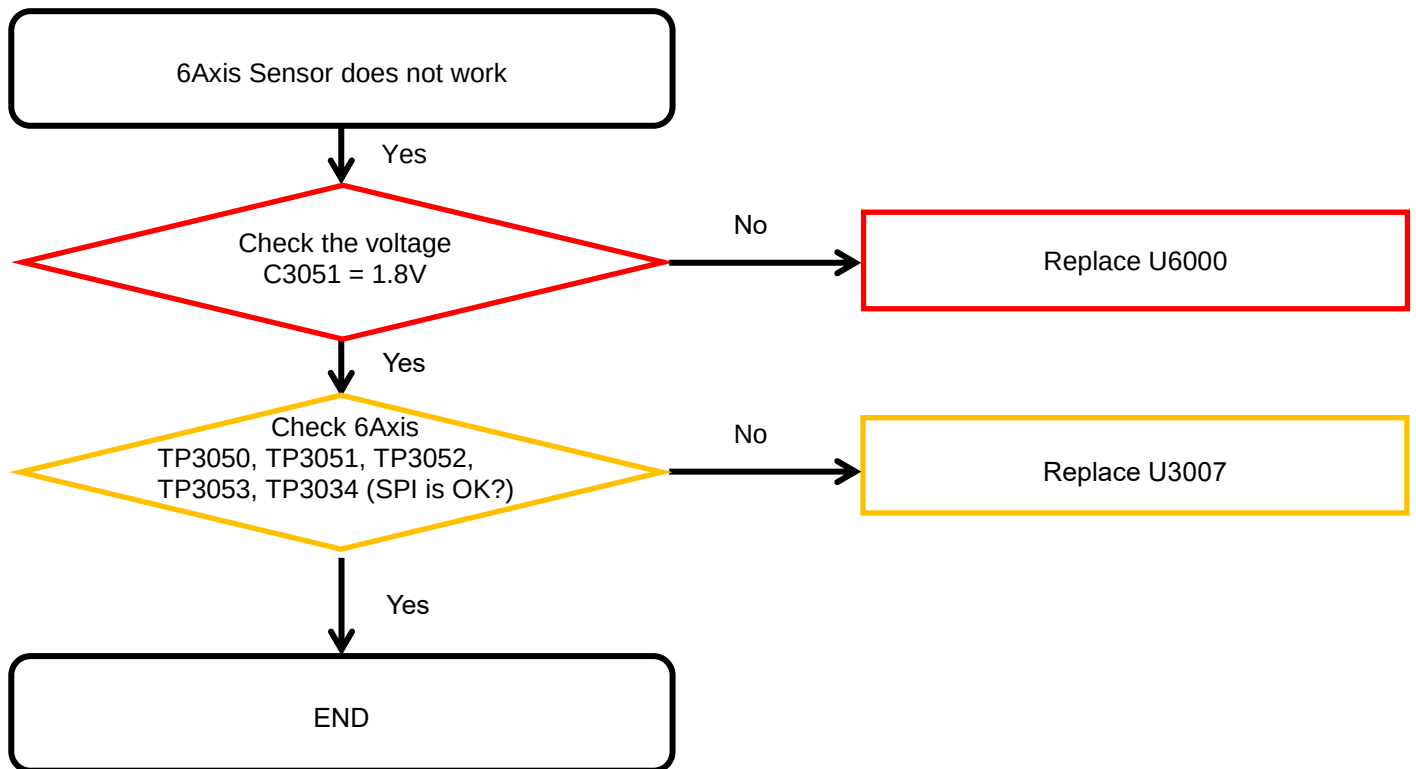


8. Level 3 Repair

8-4-8-3. Fingerprint Sensor

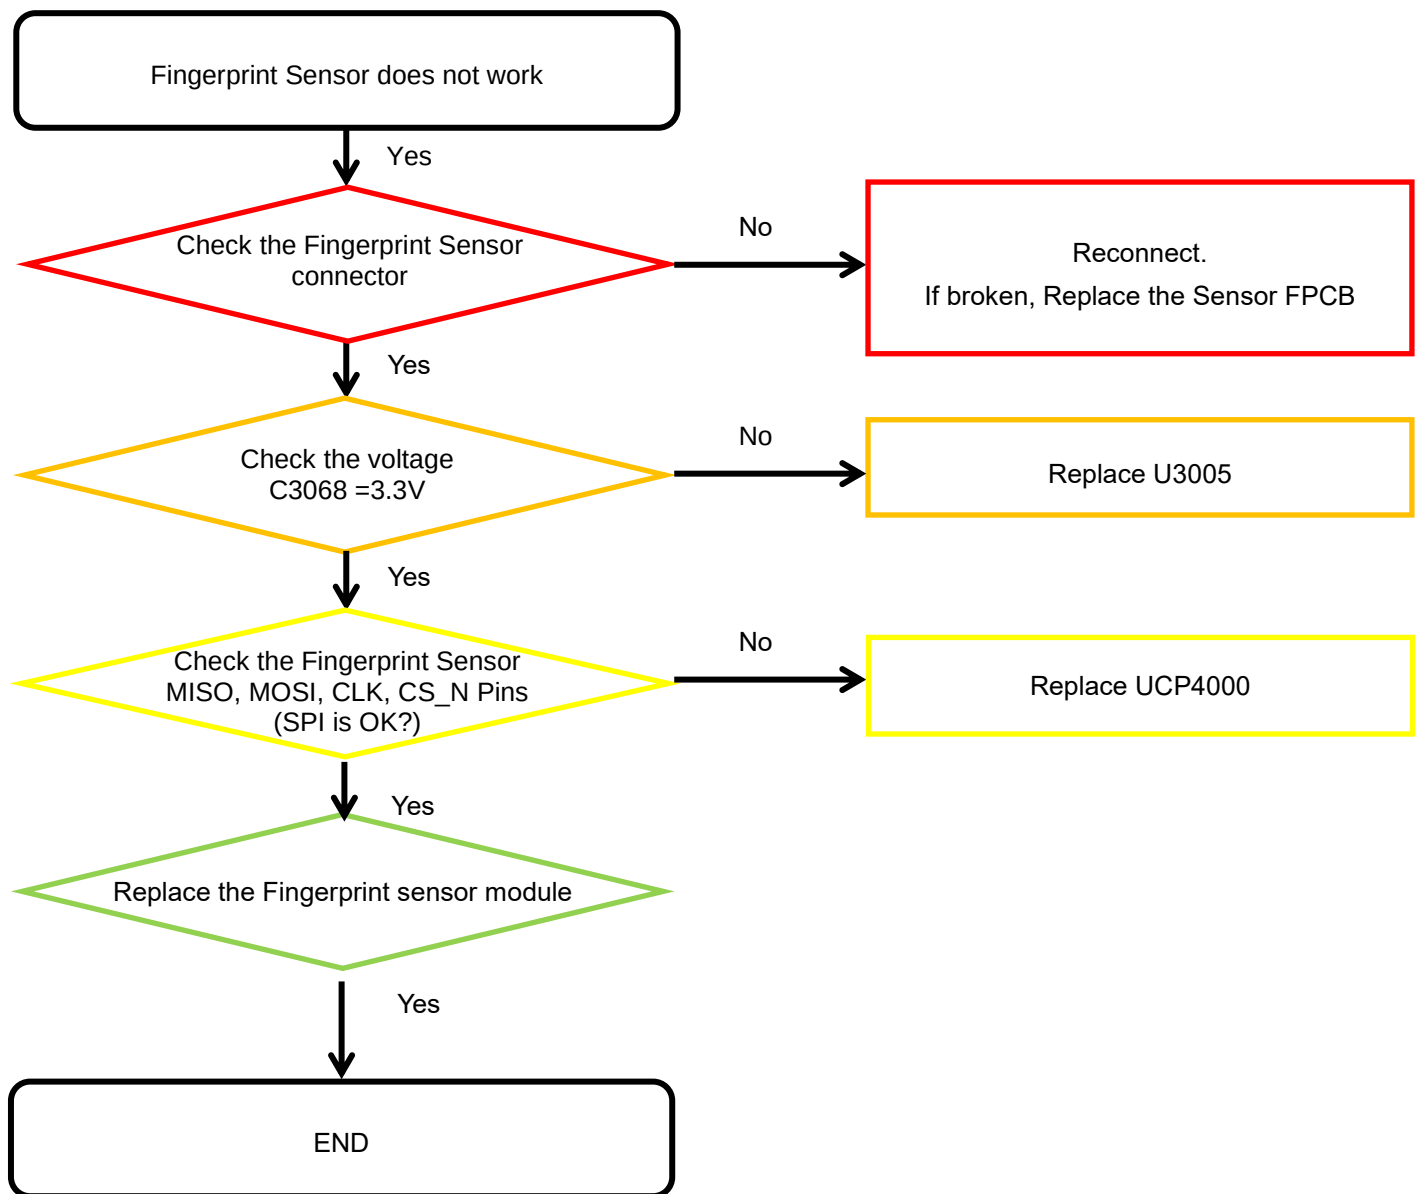


8. Level 3 Repair

8-4-8-4. Proximity / Light Sensor

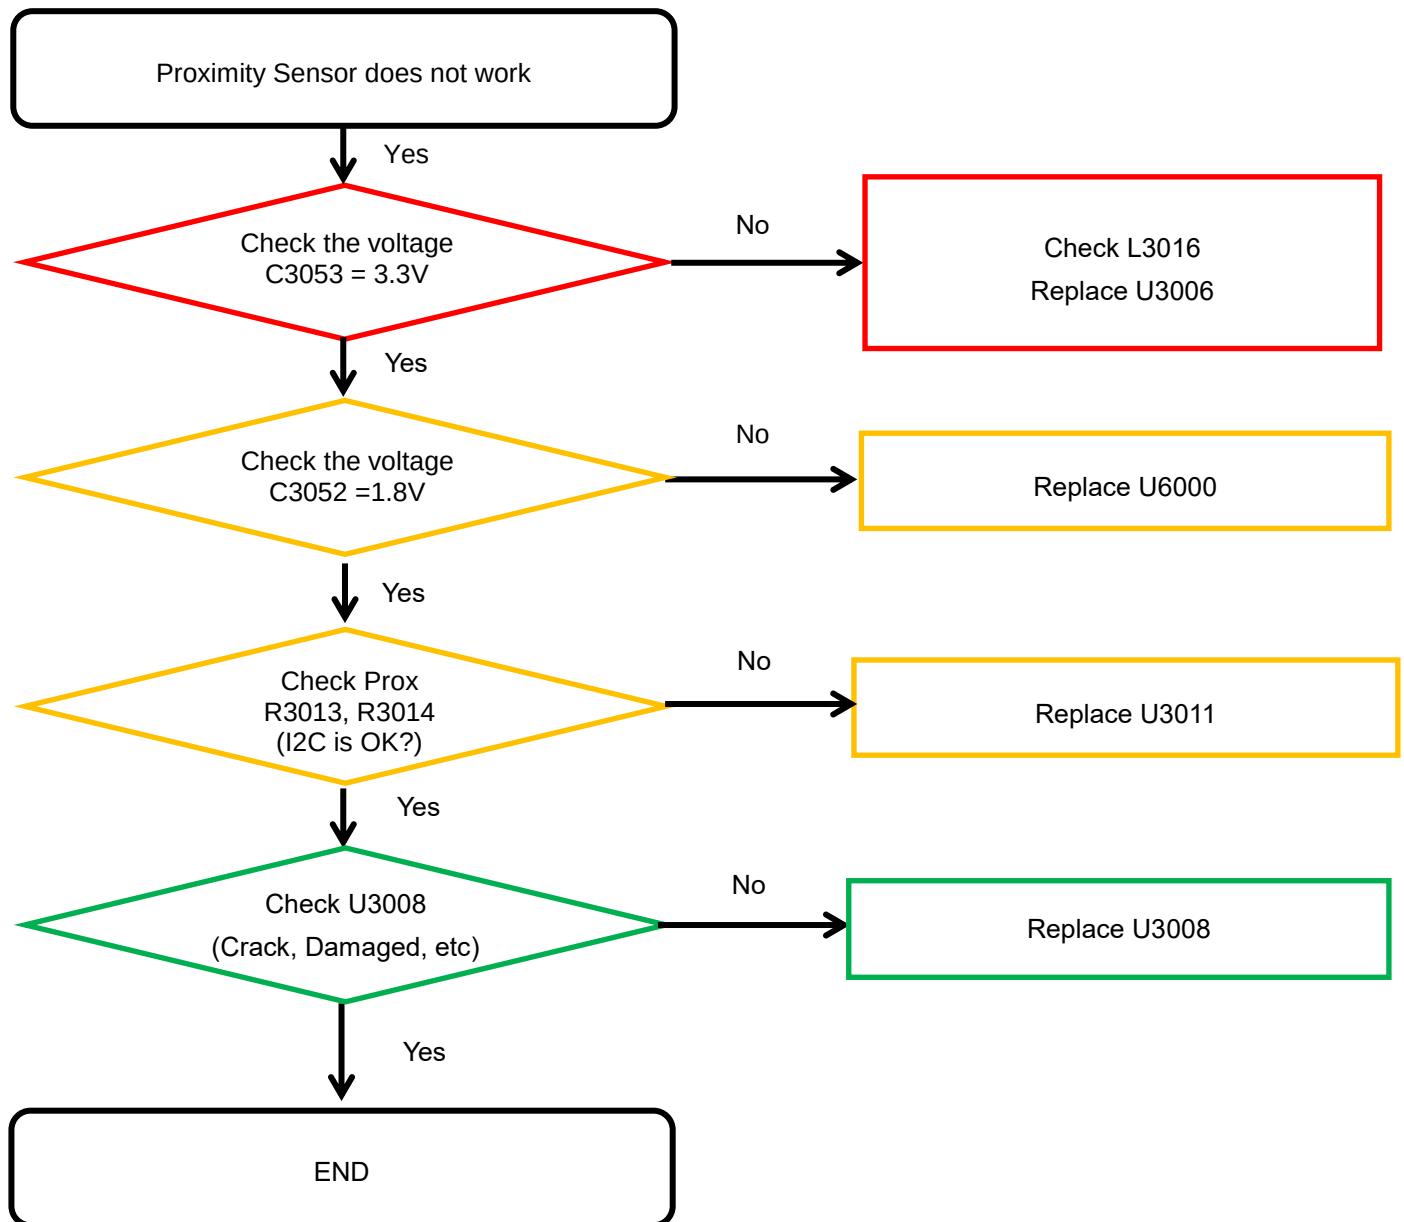


8. Level 3 Repair

8-4-9-1. Microphone Part - Main MIC

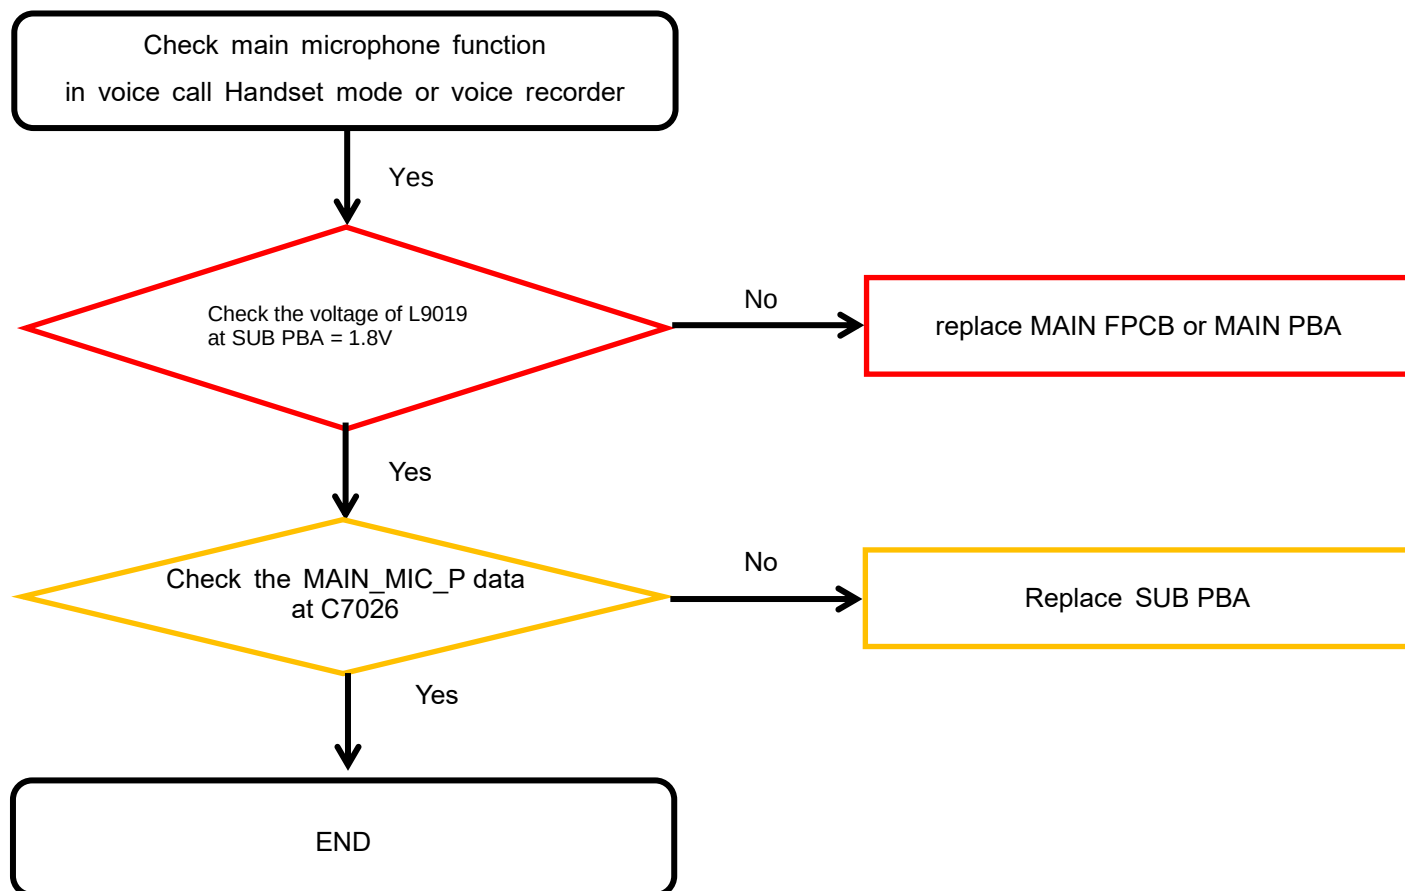


8. Level 3 Repair

8-4-9-2. Microphone Part - Sub(2nd) MIC

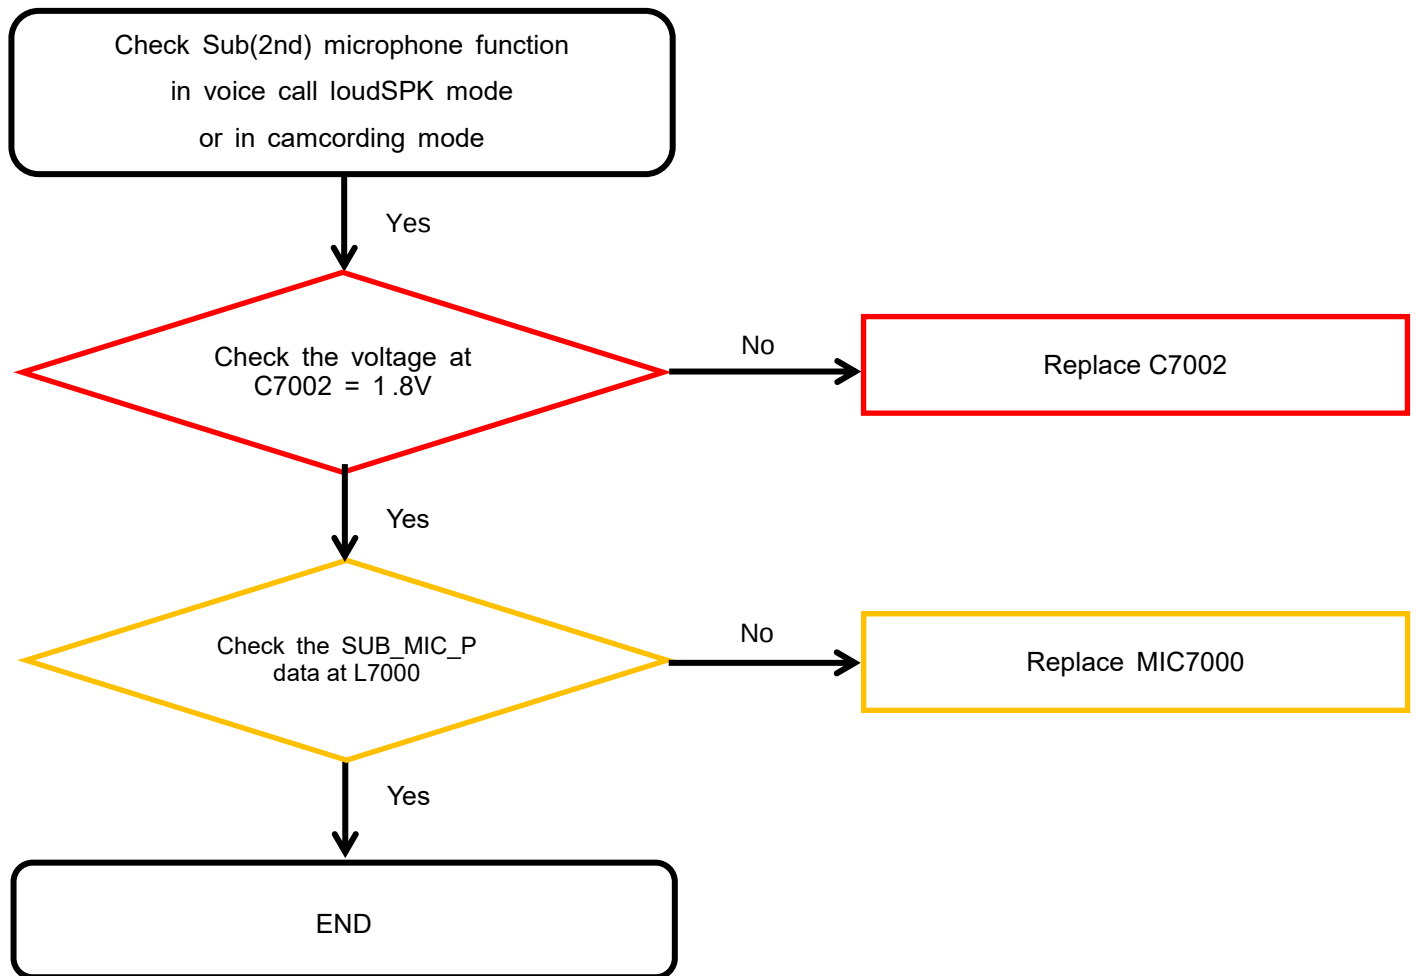


8. Level 3 Repair

8-4-10. Speaker Part

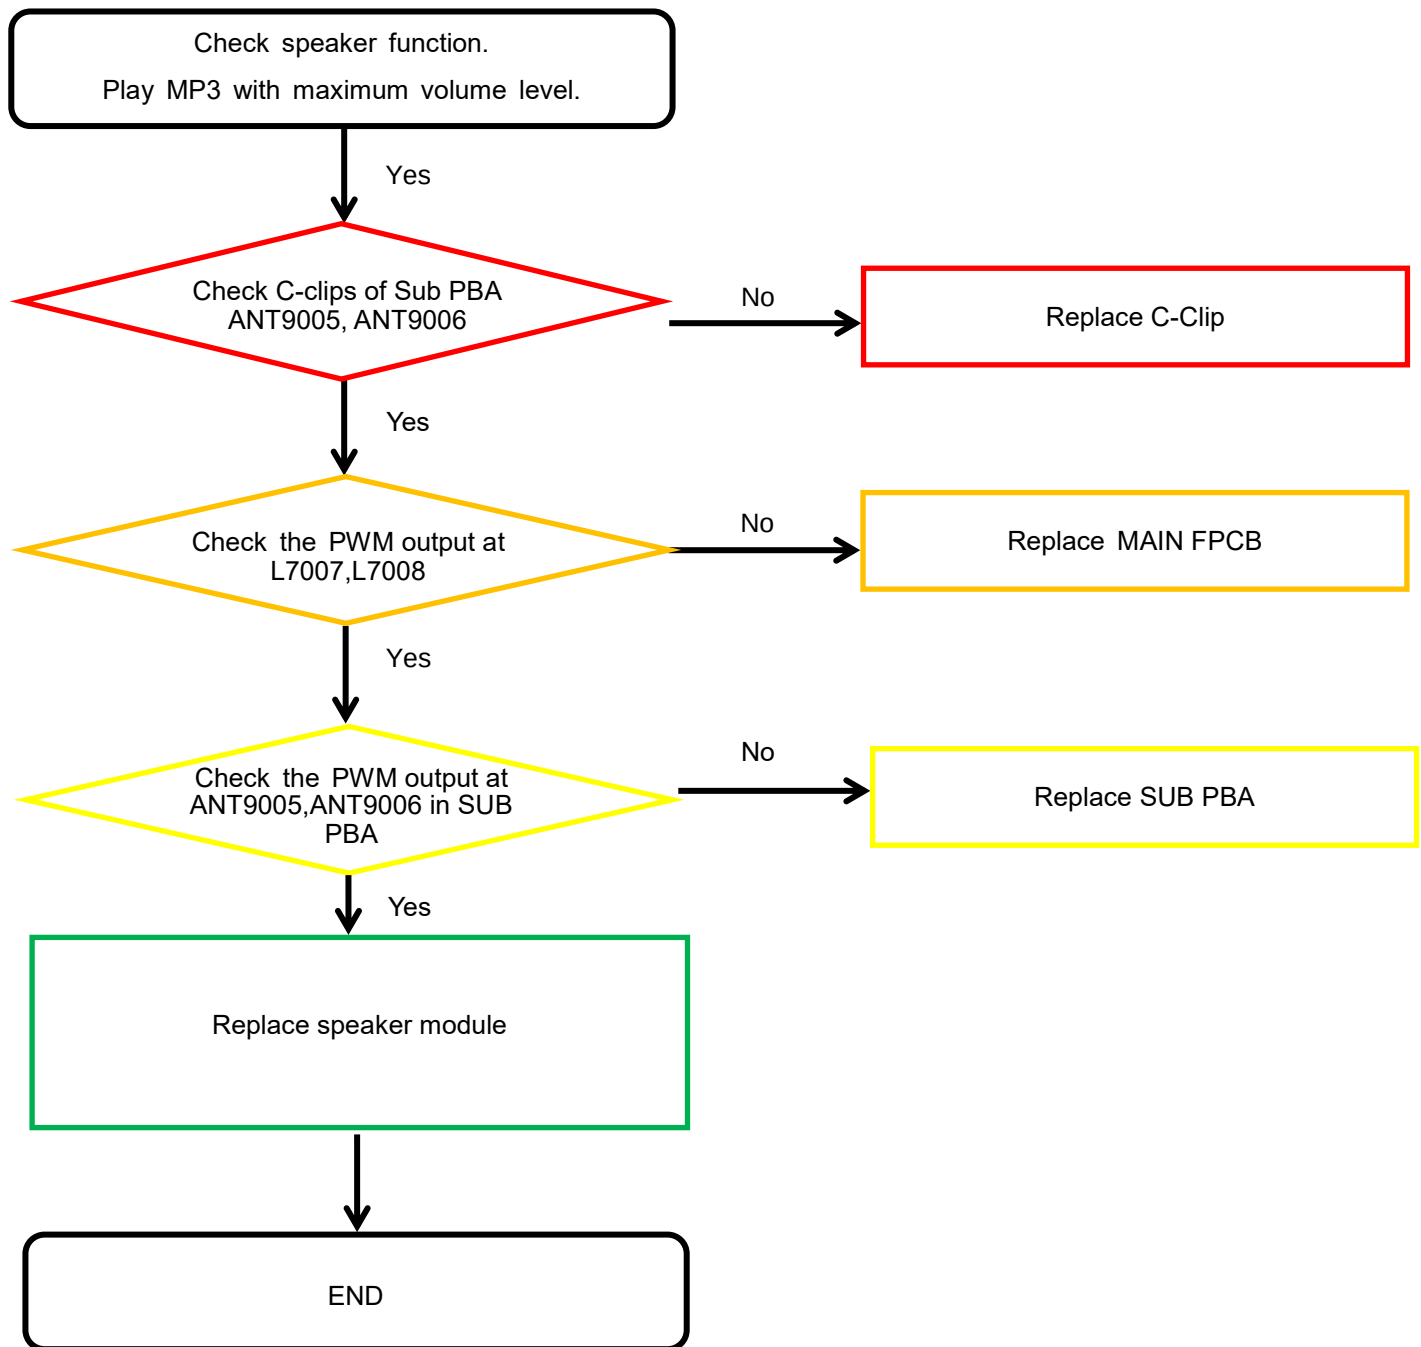


8. Level 3 Repair

8-4-11. Receiver Part

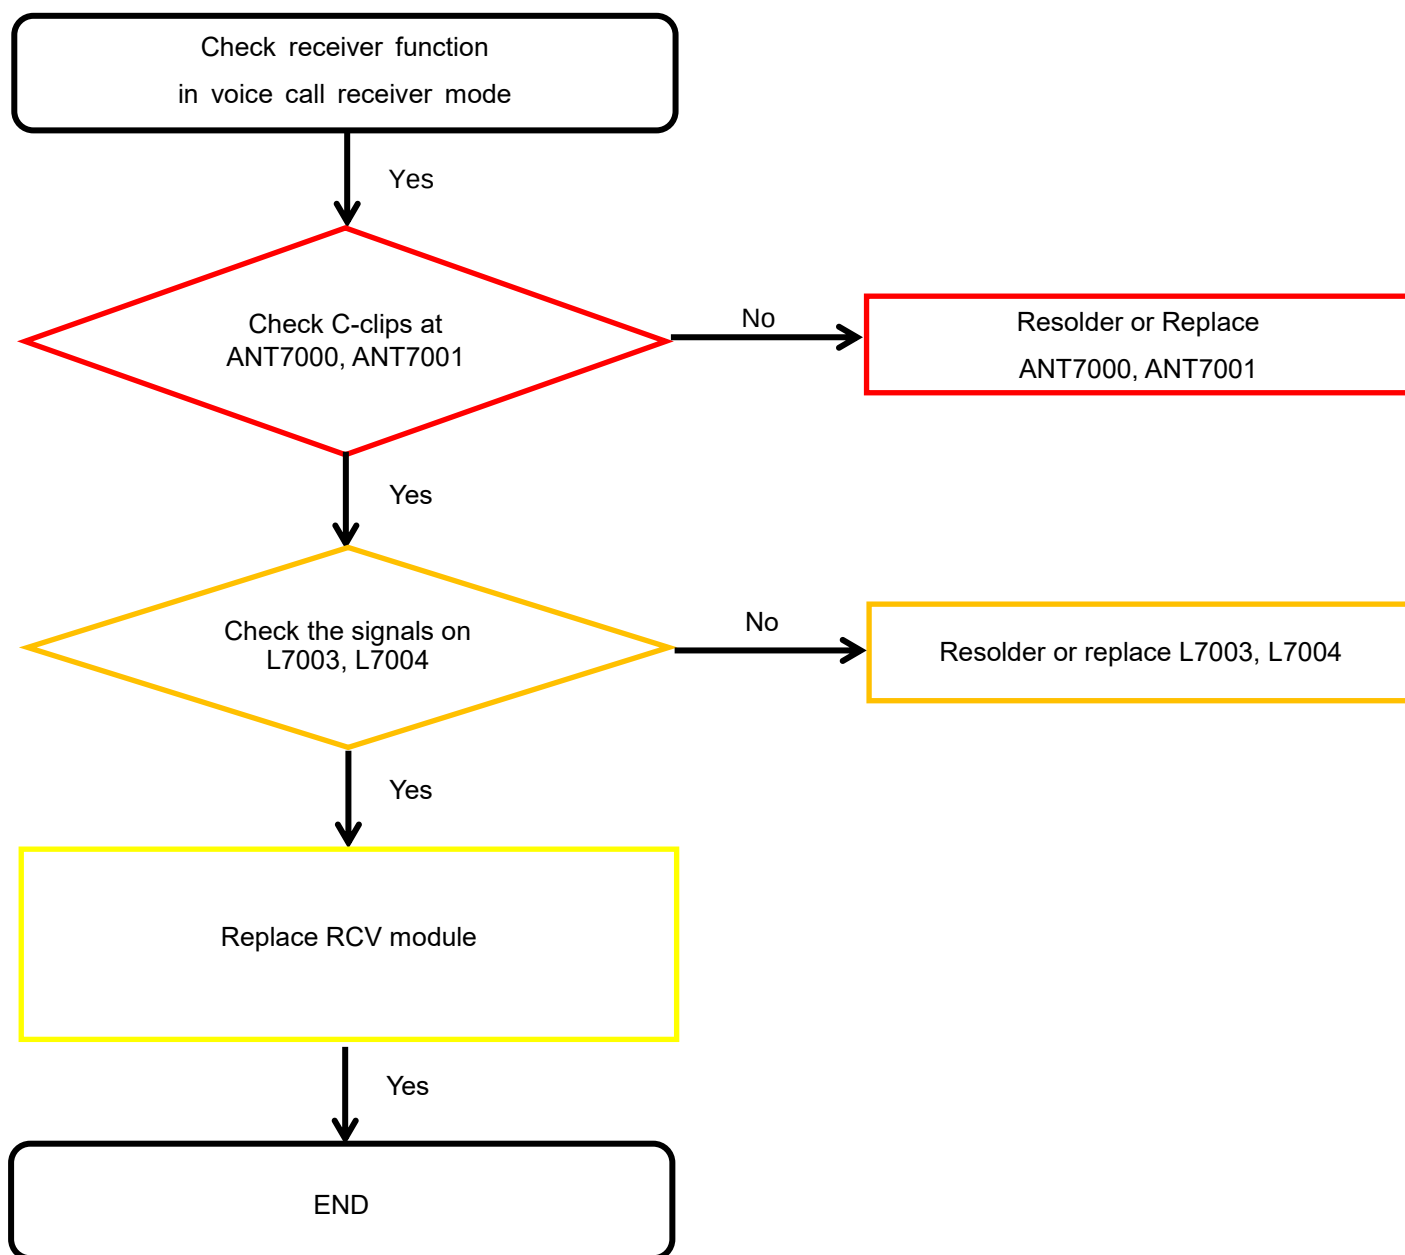


8. Level 3 Repair

8-4-12. BT/WIFI

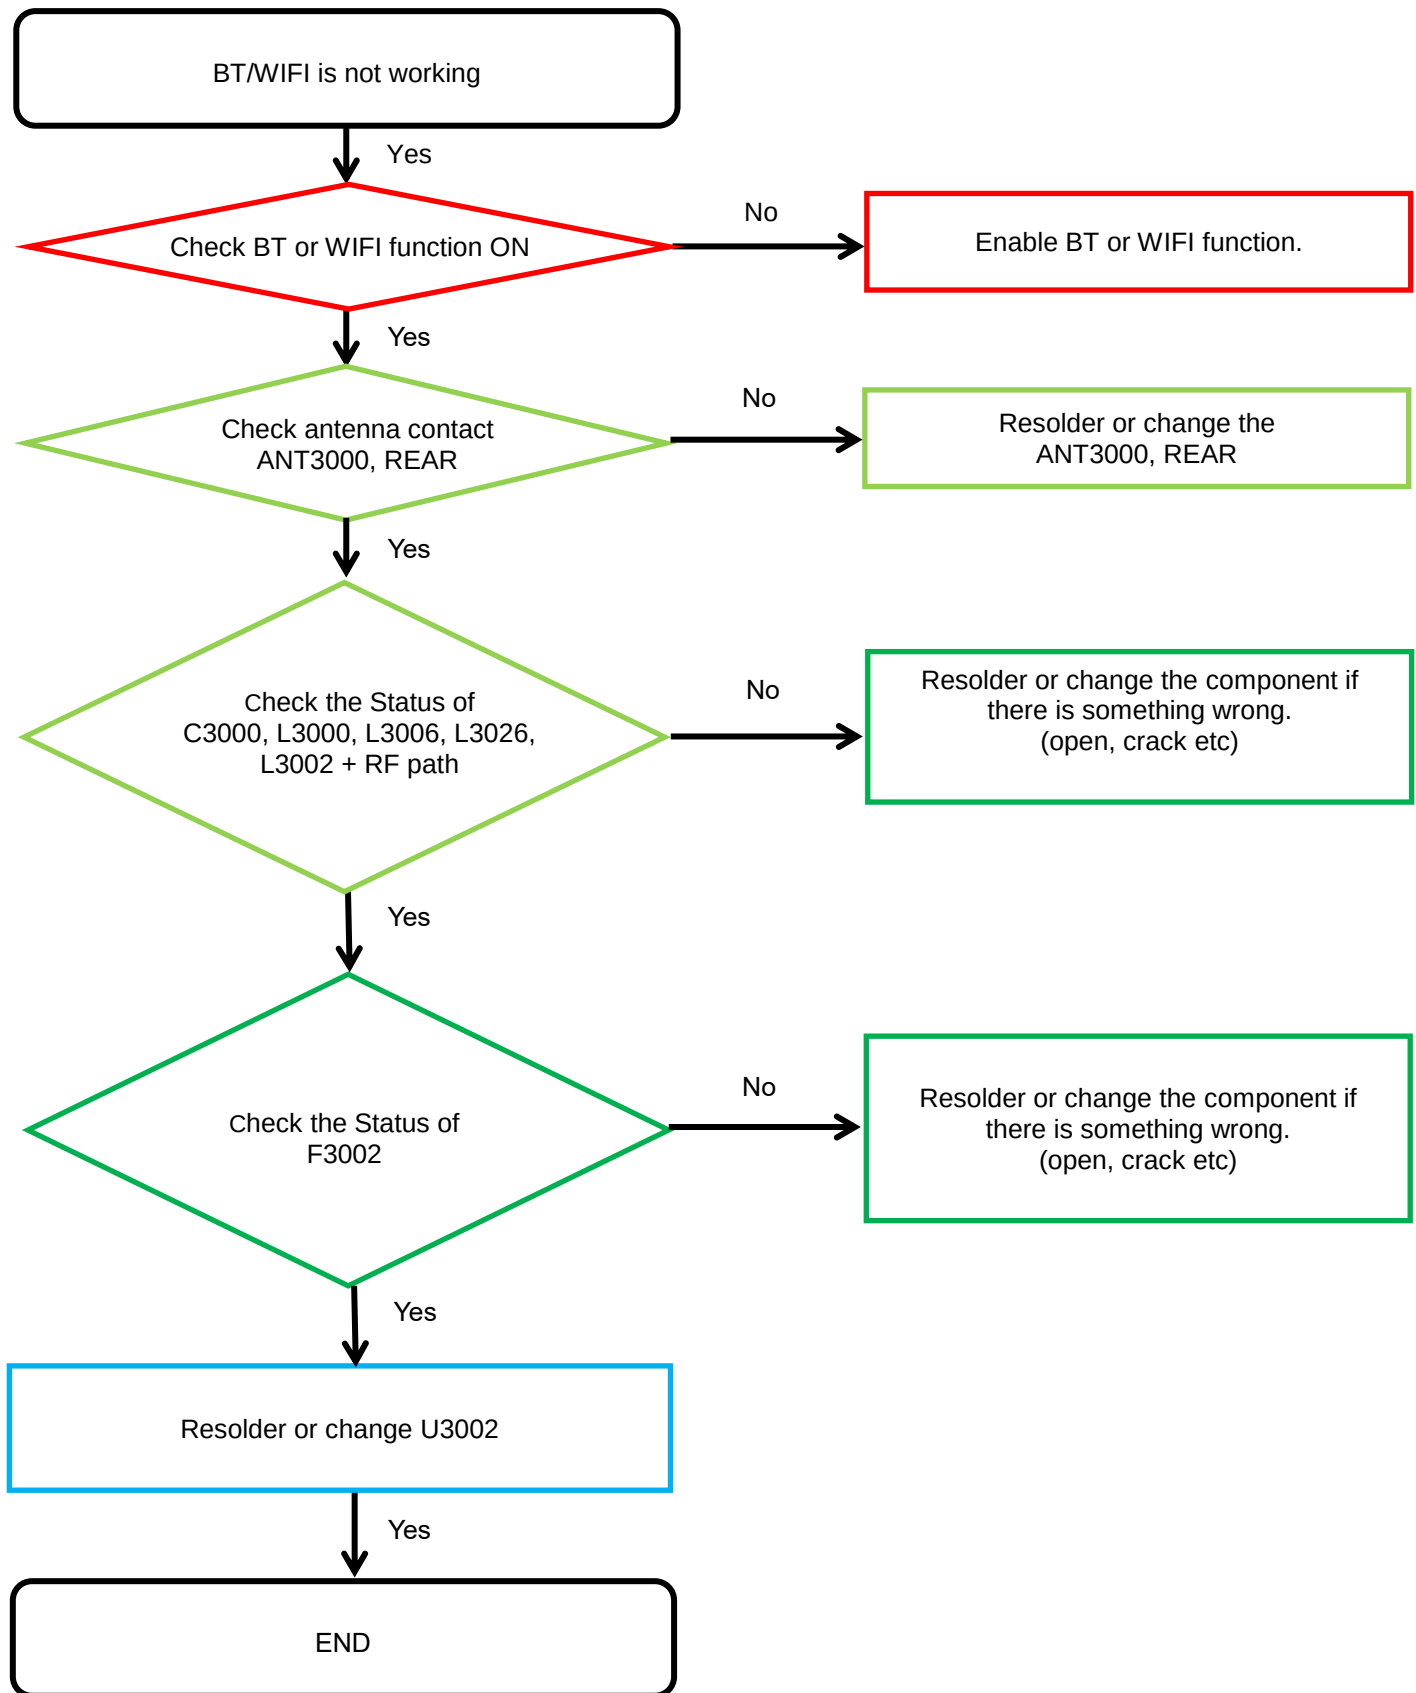


8. Level 3 Repair

8-4-13. GPS

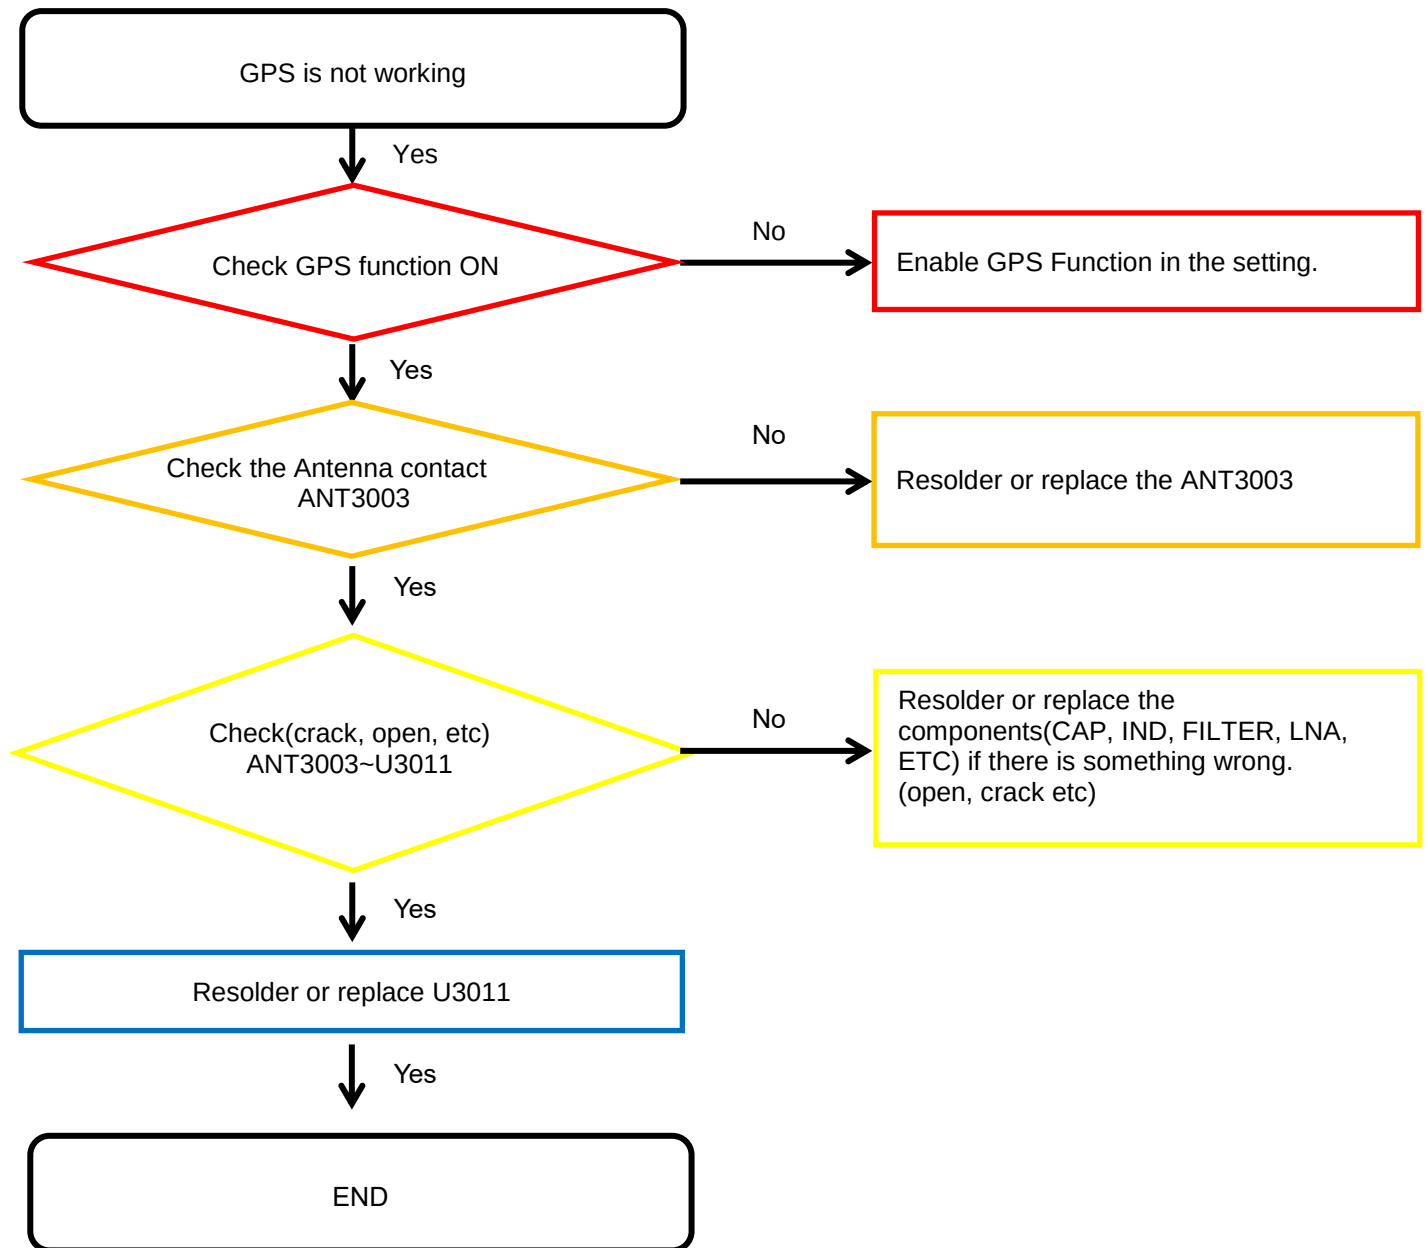


8. Level 3 Repair

8-4-14. NFC

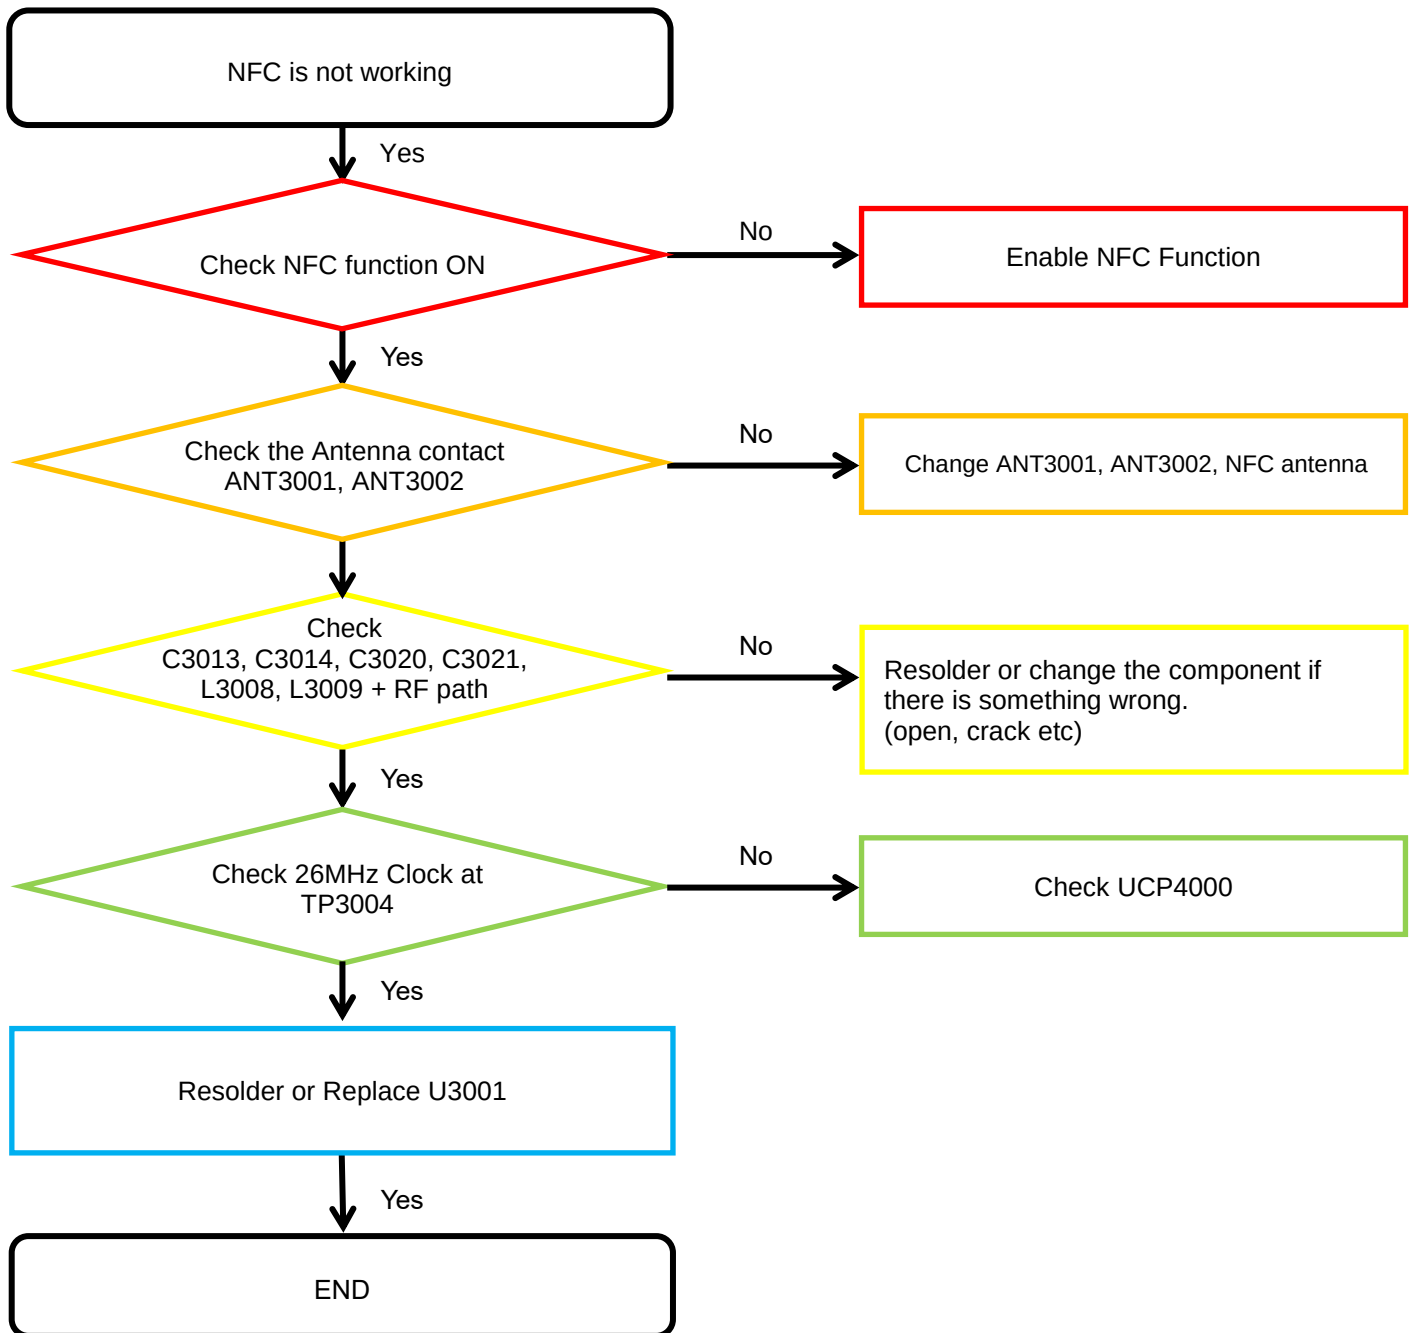


8. Level 3 Repair

8-4-15. FM radio part

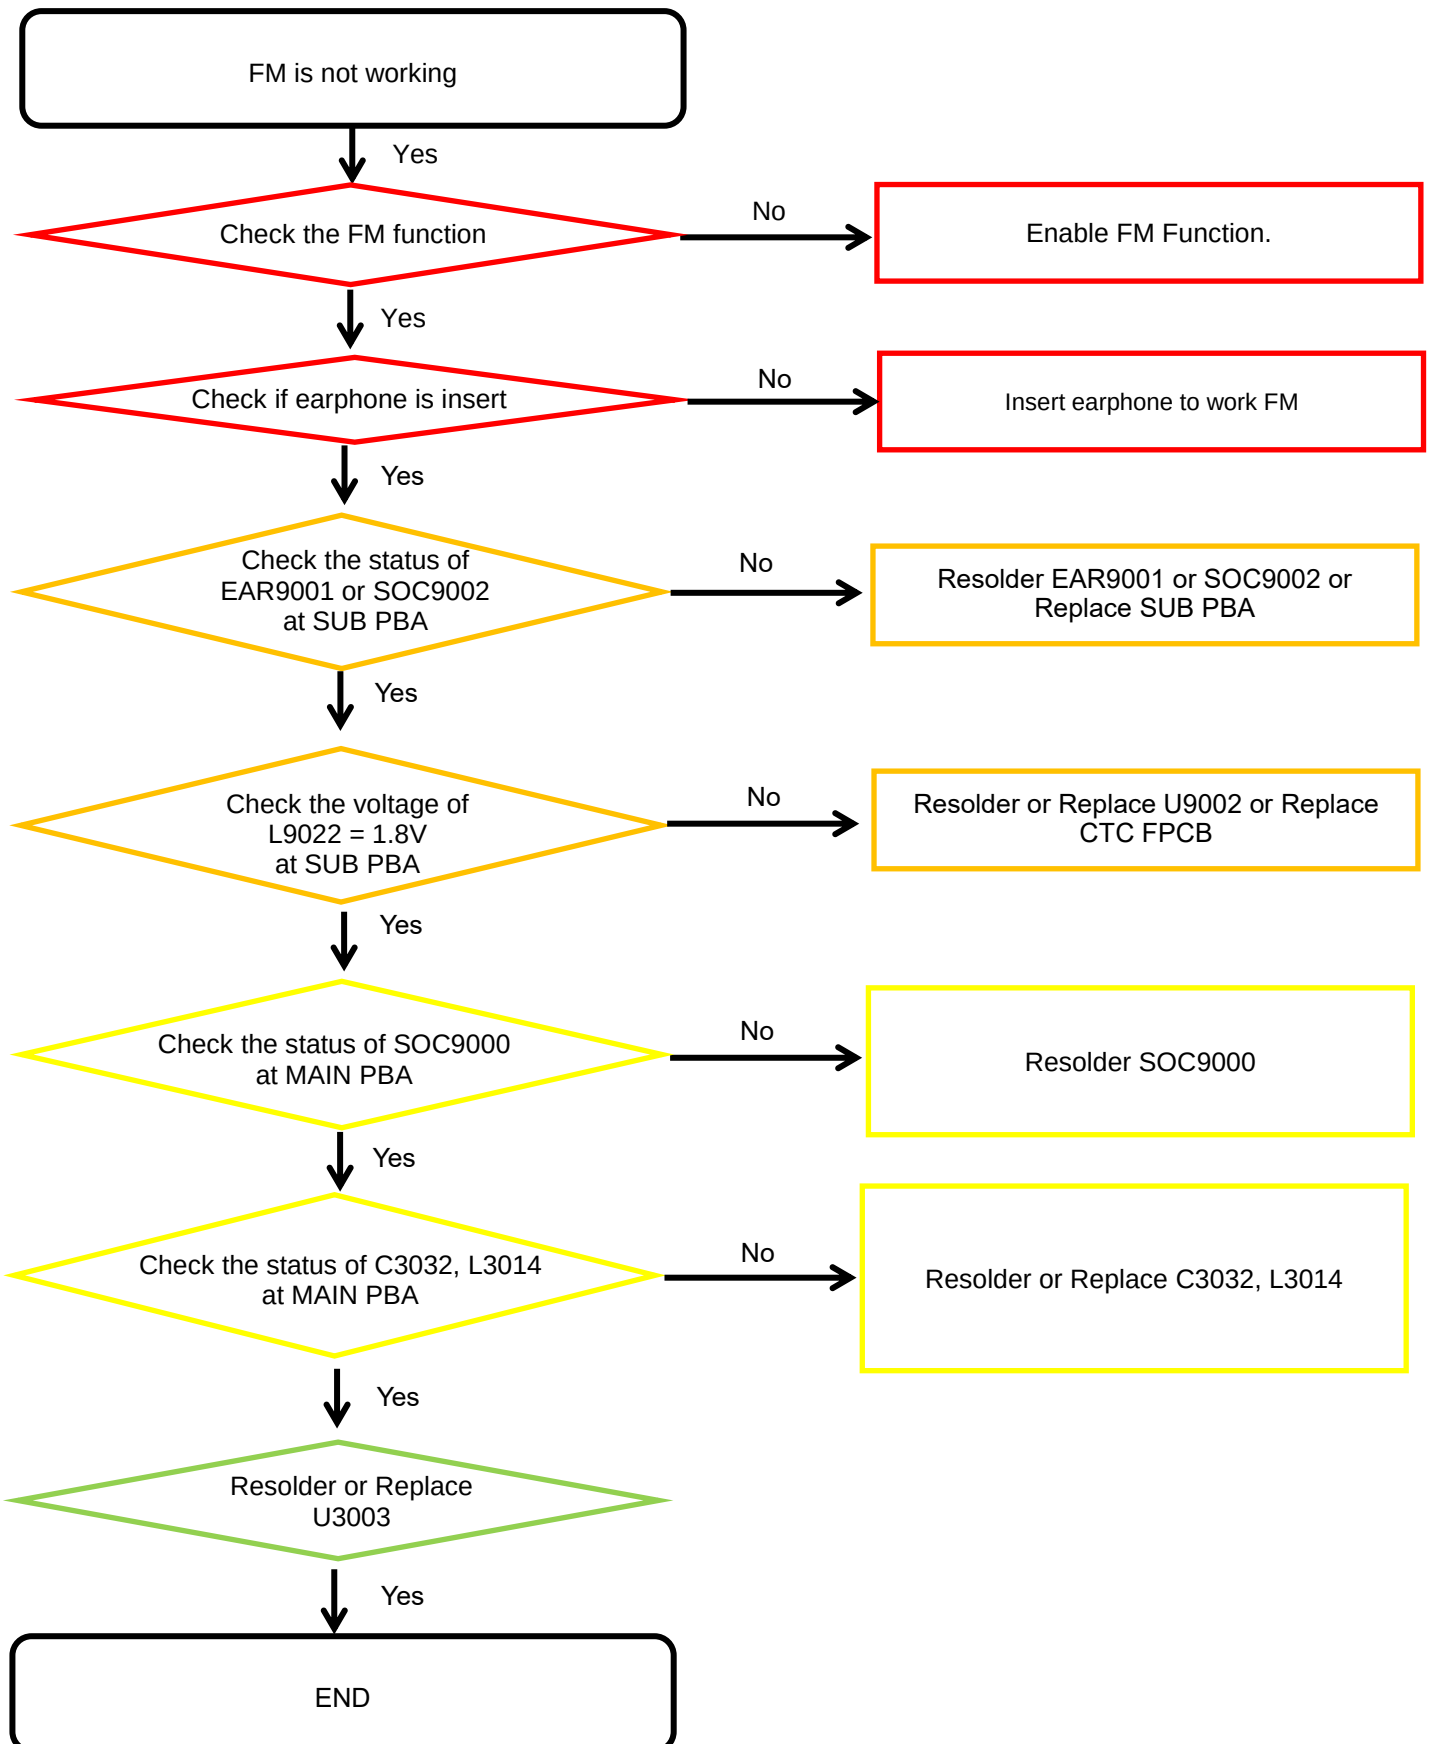


8. Level 3 Repair

8-4-16. Display

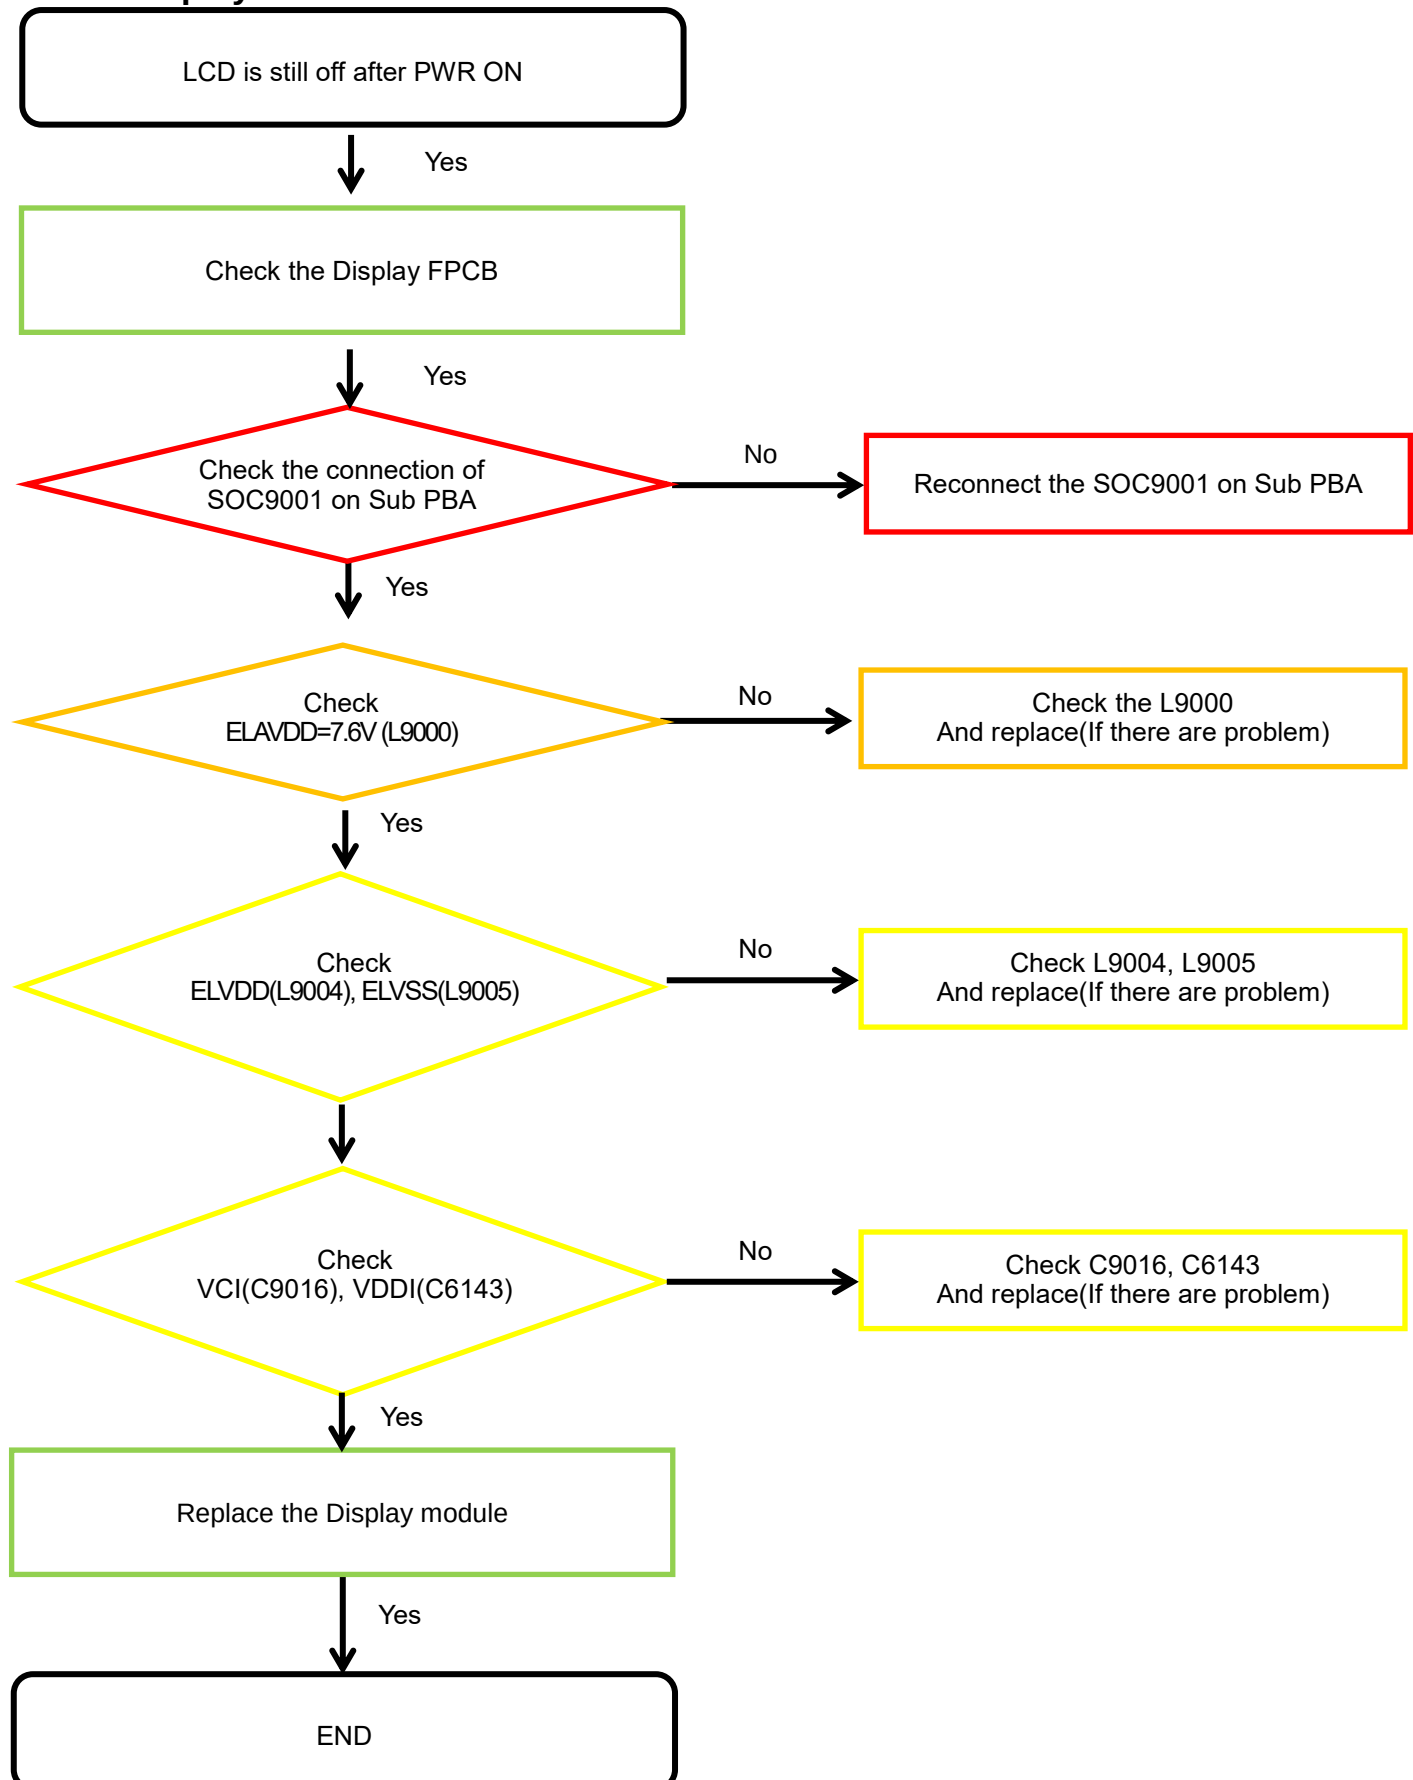


8. Level 3 Repair

8-4-17. Quad Camera

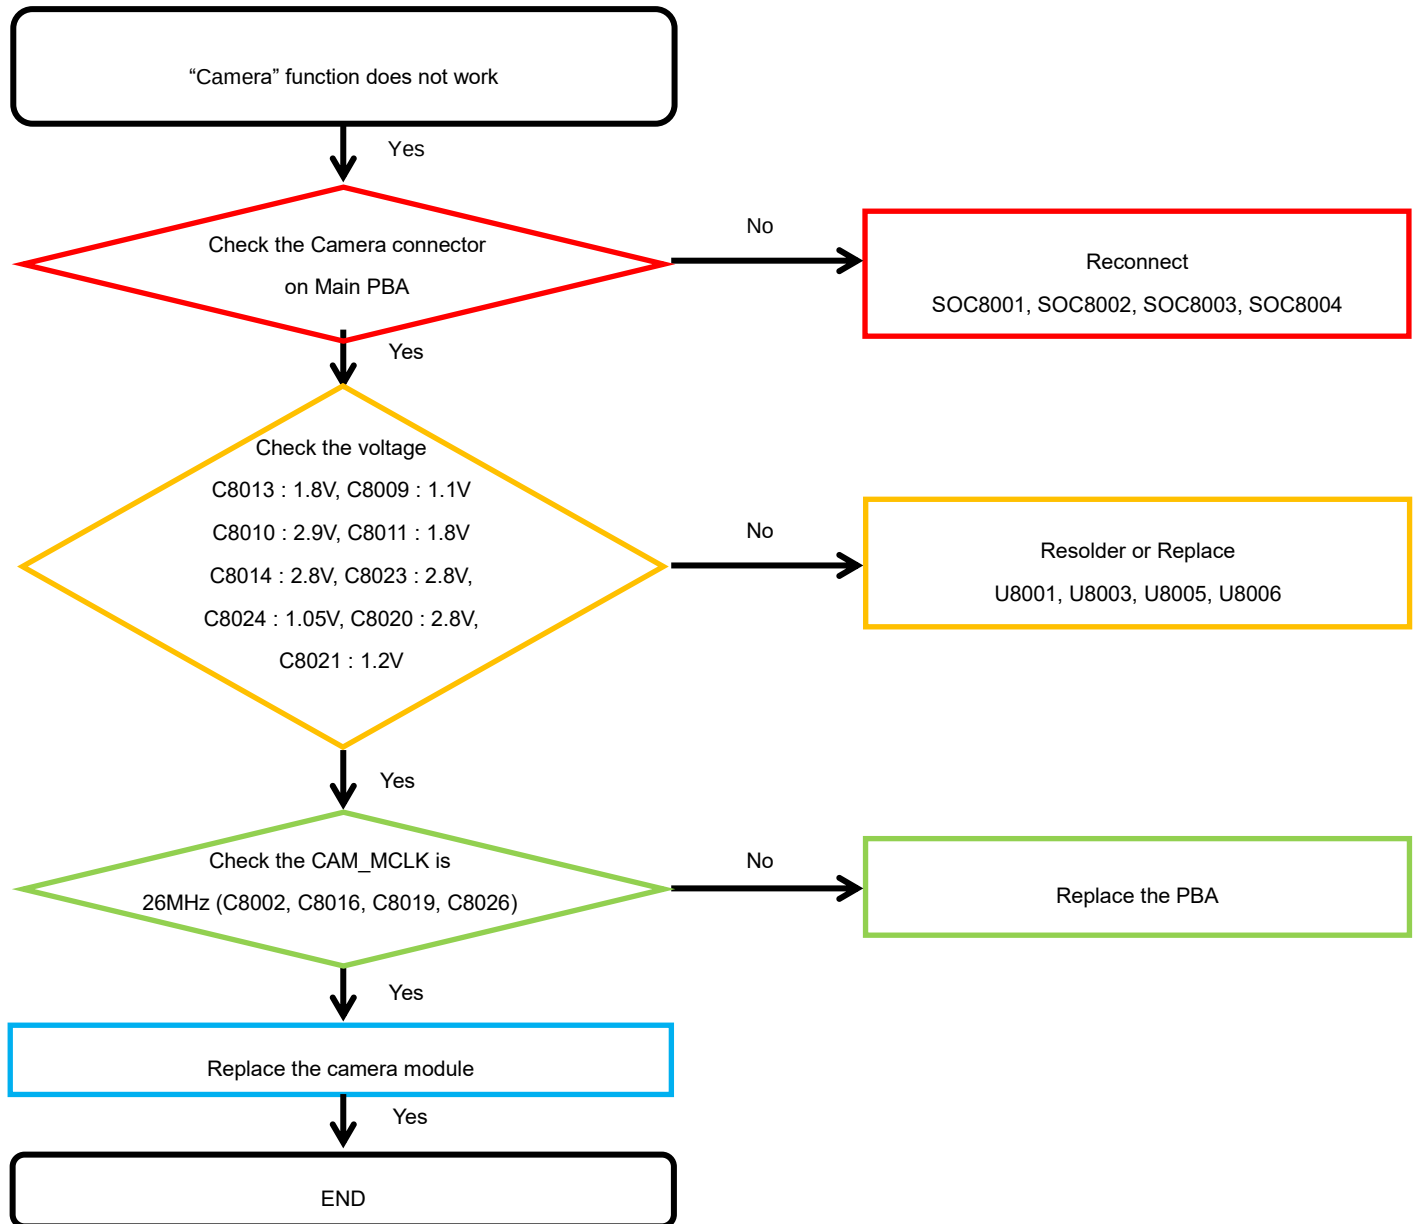


8. Level 3 Repair

8-4-18. VT CAMERA

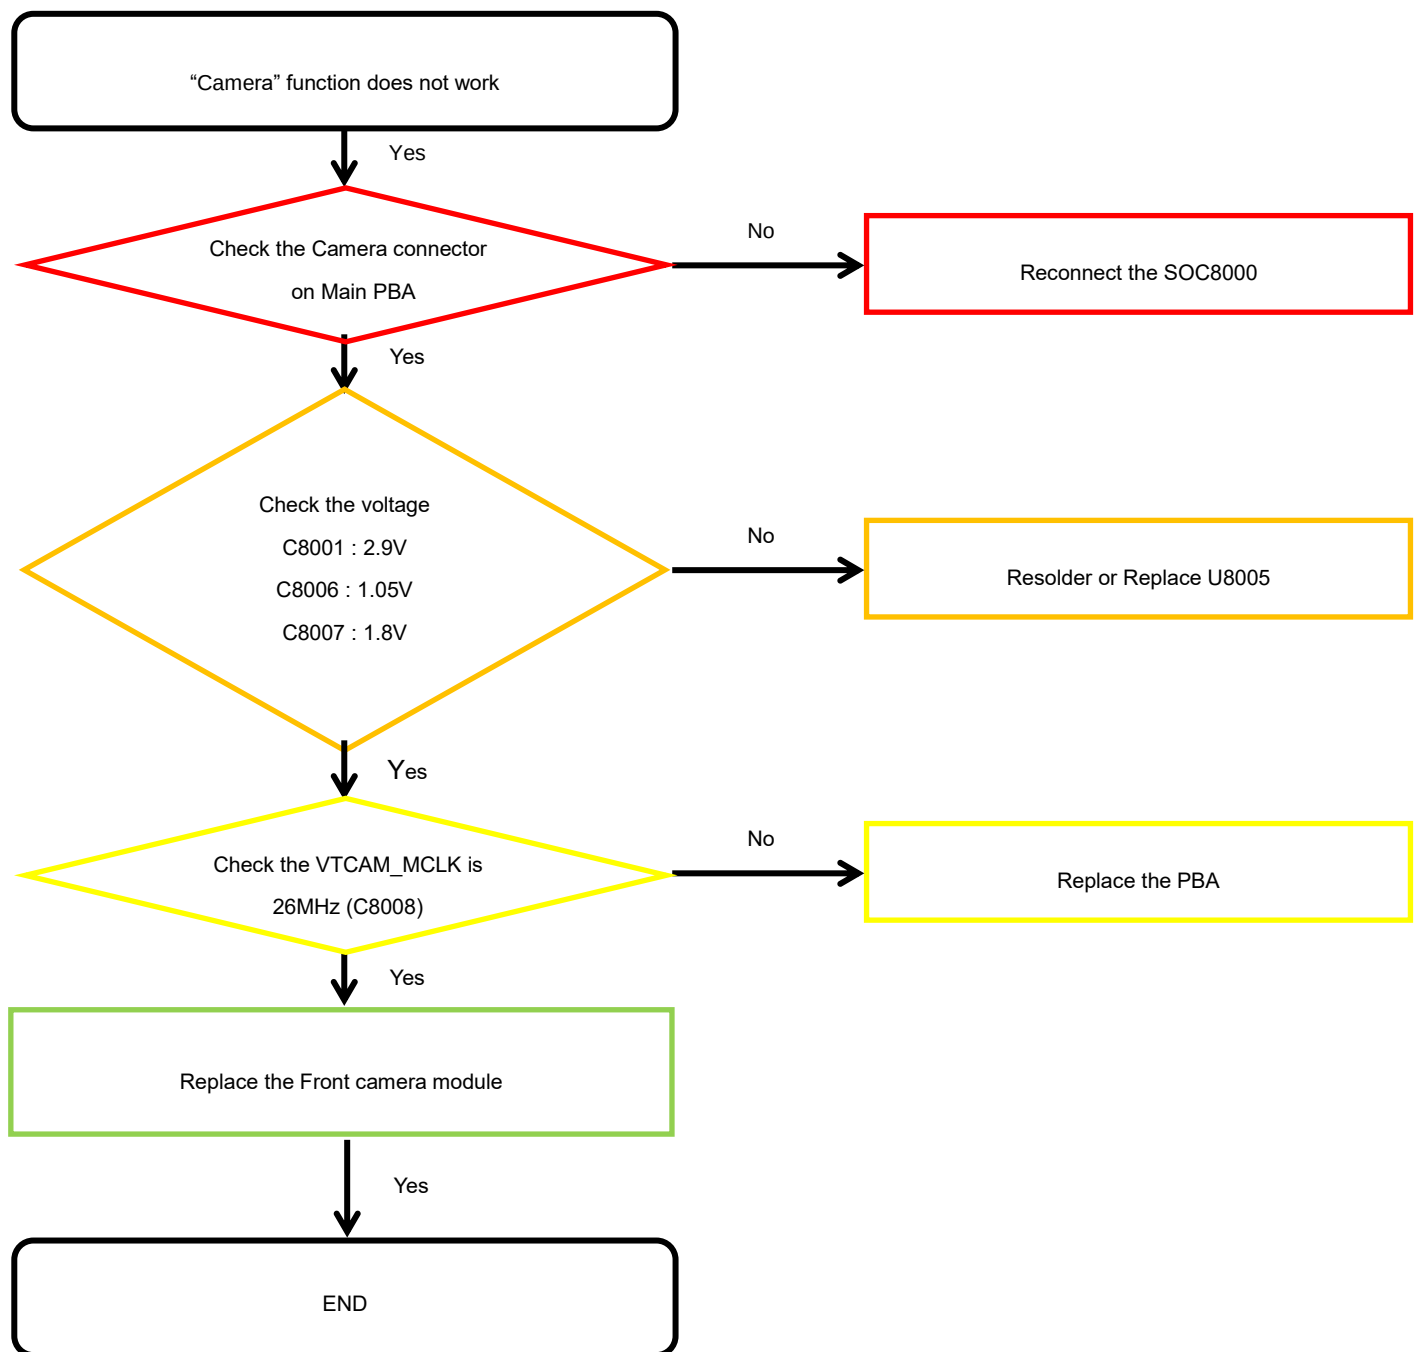


8. Level 3 Repair

8-4-19. Motor

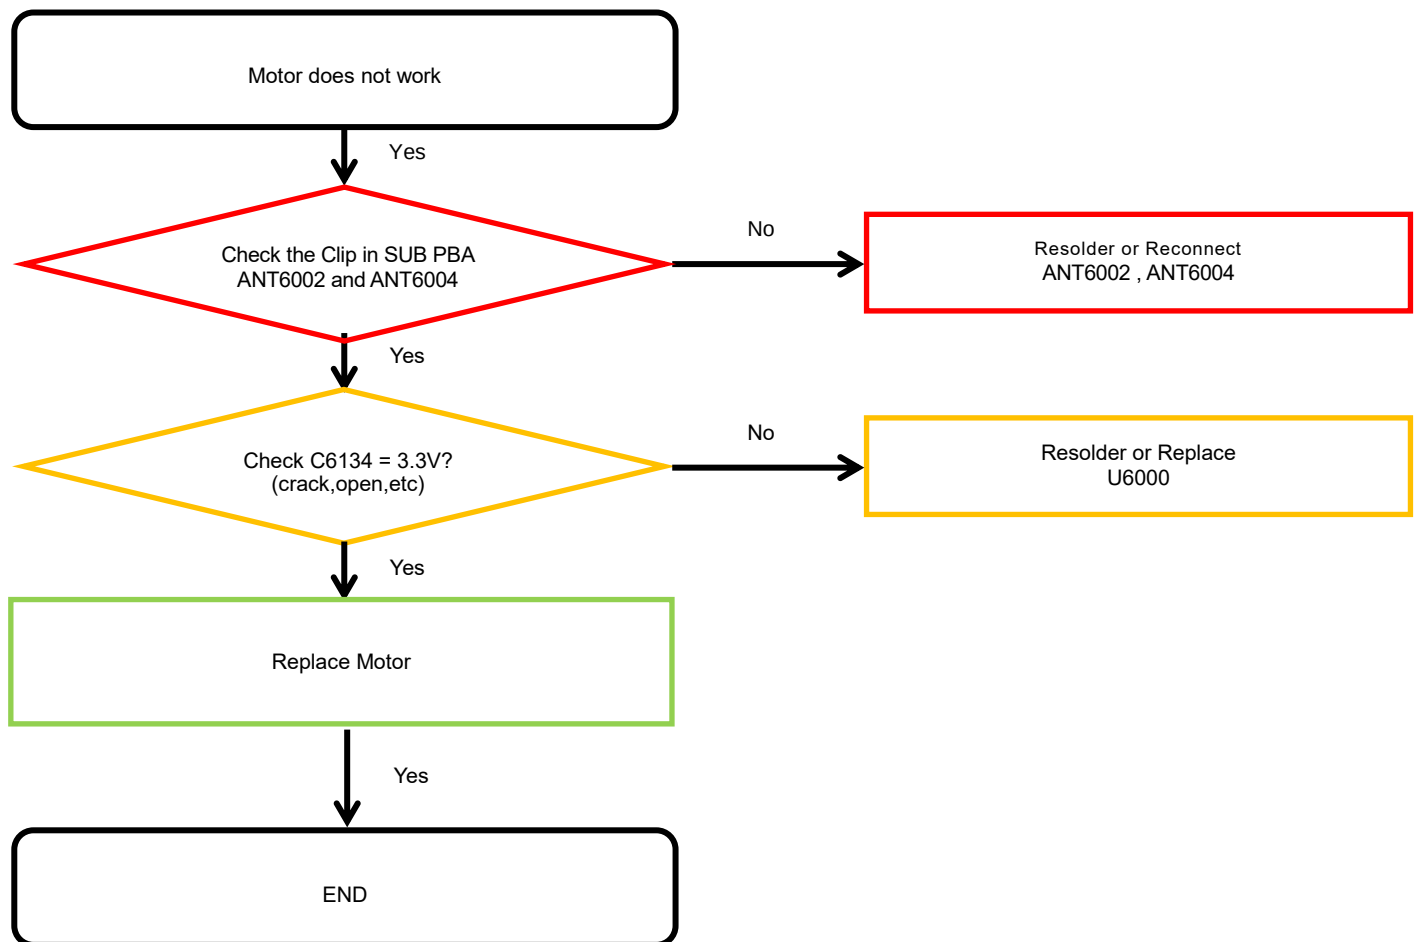


8. Level 3 Repair

8-4-20. GSM 850/900/1800/1900 WCDMA B1/2/4/5/8, LTE B1/2/3/4/5/8/12/17/20/26/28/66 PRx

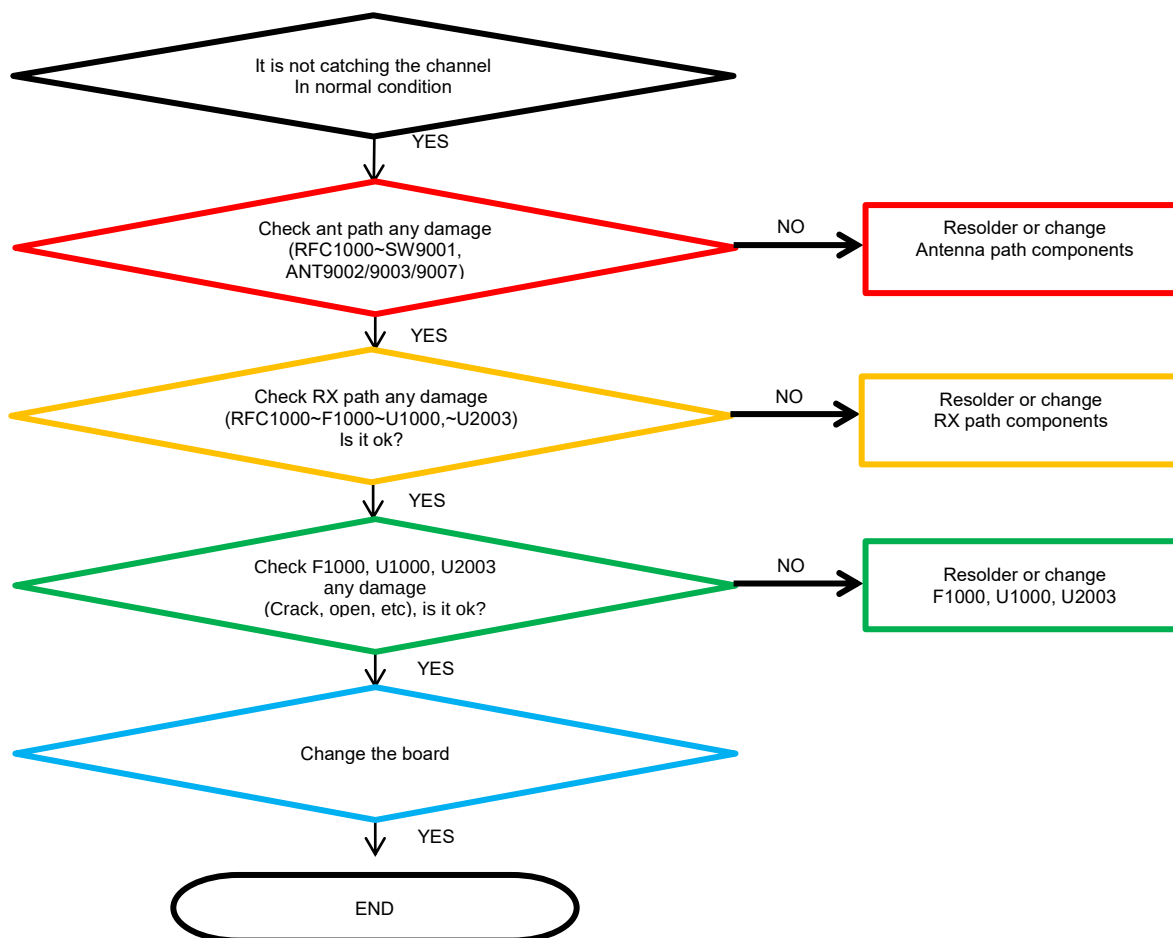


8. Level 3 Repair

8-4-21. LTE B7/ B38/B40/B41/ PRx

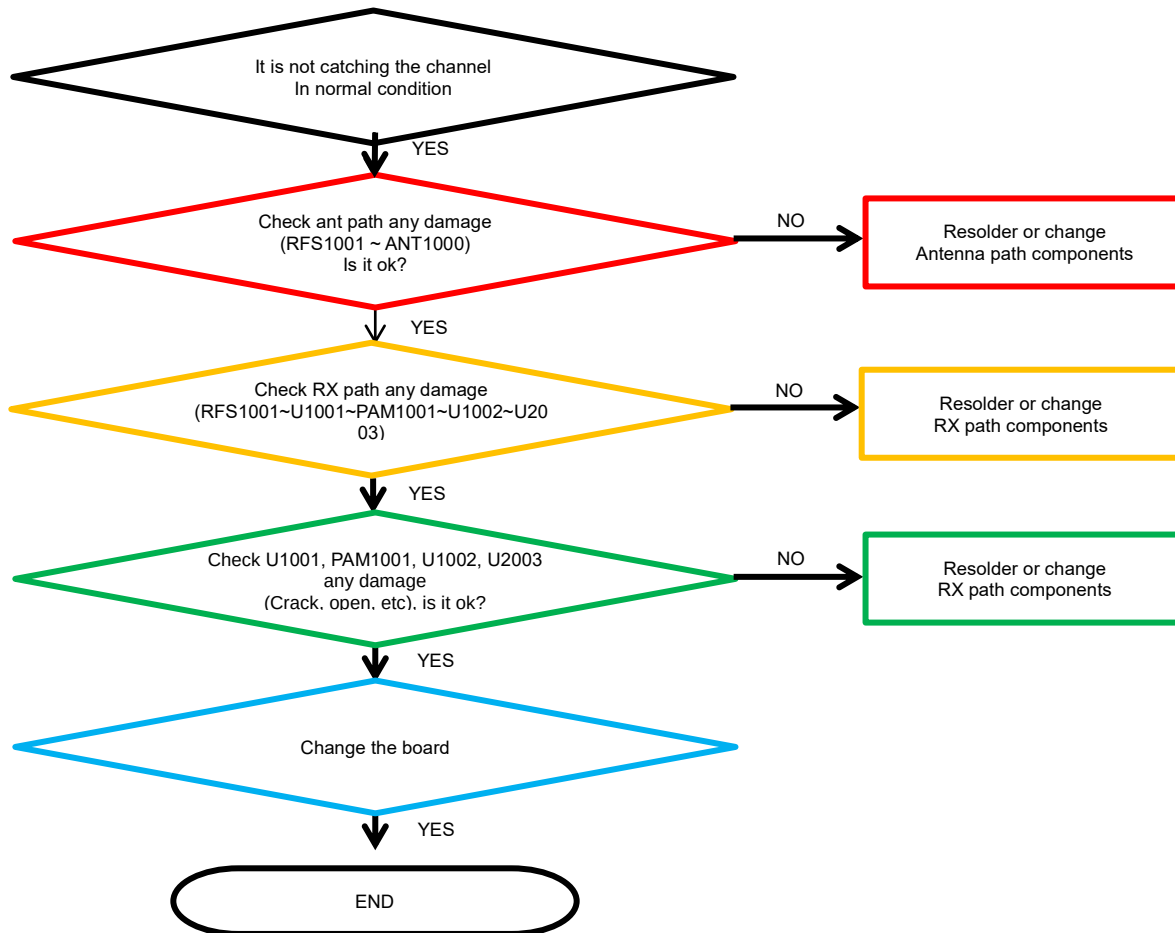


8. Level 3 Repair

8-4-22. GSM 850/900/1800/1900 WCDMA B1/2/4/5/8, LTE B1/B2/B3/B4/B5/B7/B8 /B12/B17/B20/B26/B28/B38/B40/B41/B66 DRX

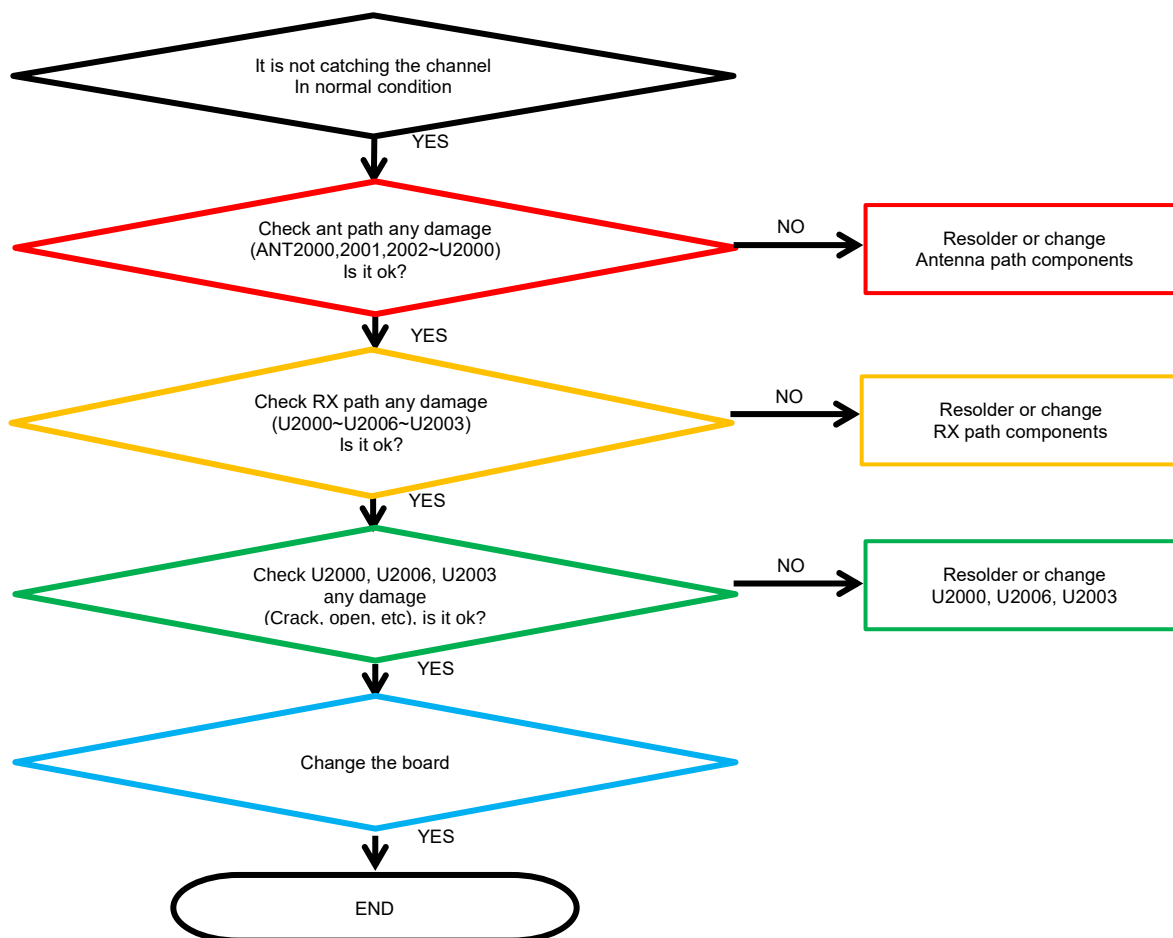

8. Level 3 Repair

8-4-23. GSM 850/900/1800/1900, WCDMA B1/2/4/5/8, LTE B1/B2/B3/B4/B5/B8/B12 /B17/B20/B26/B28/B66 Tx

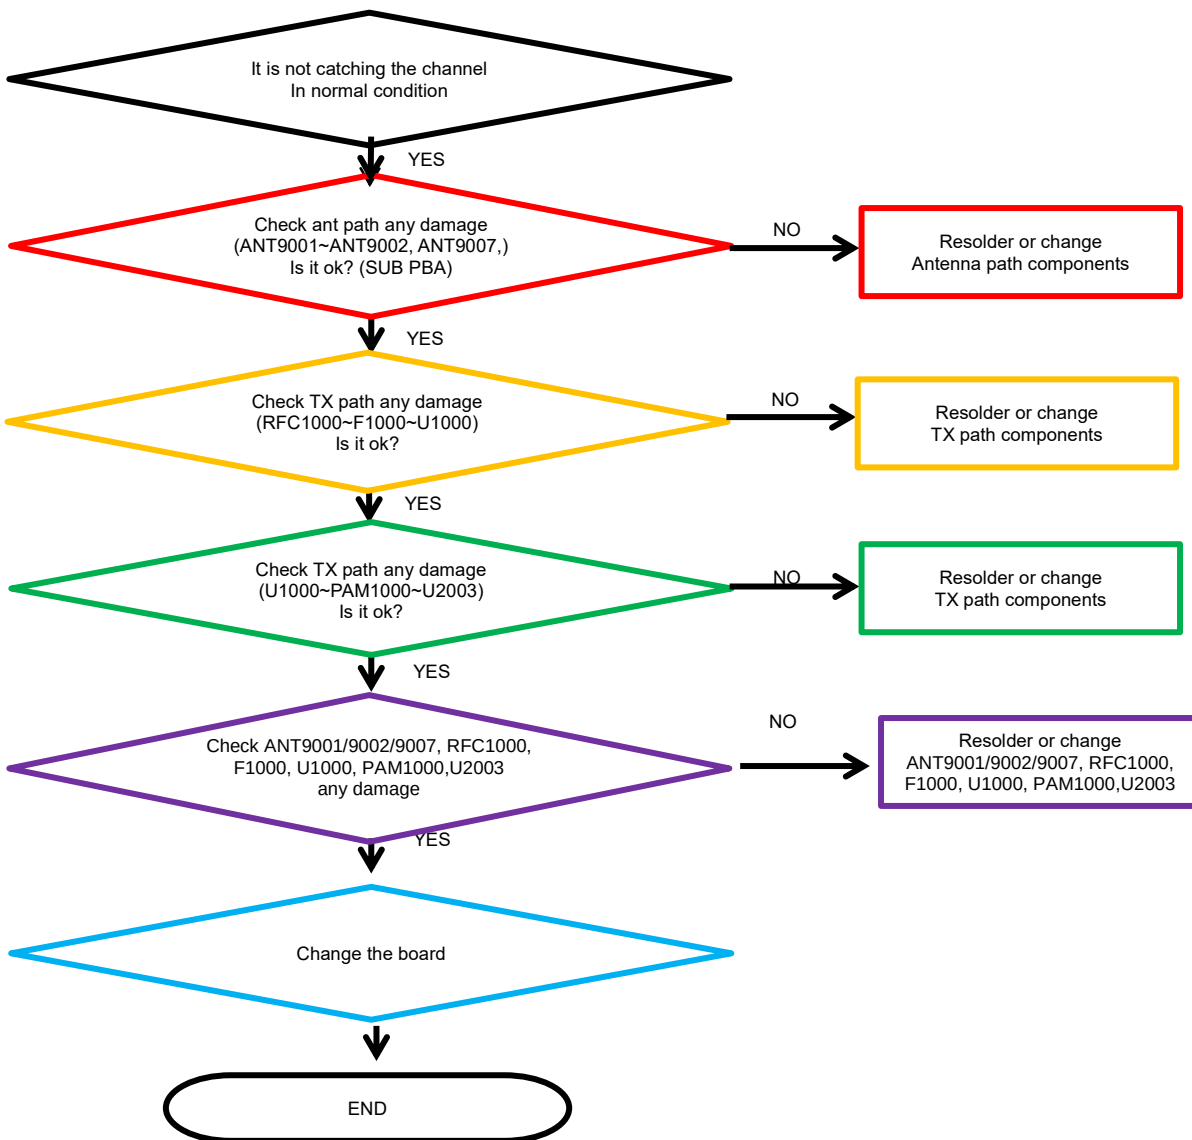

8. Level 3 Repair

8-4-24. LTE B7/38/40/41Tx

